
Malibu - Single Bedside

Assembly Instructions - Please keep for future reference

719/0487
719/0494
305/0208
305/0215
305/0239
305/0222
305/0246

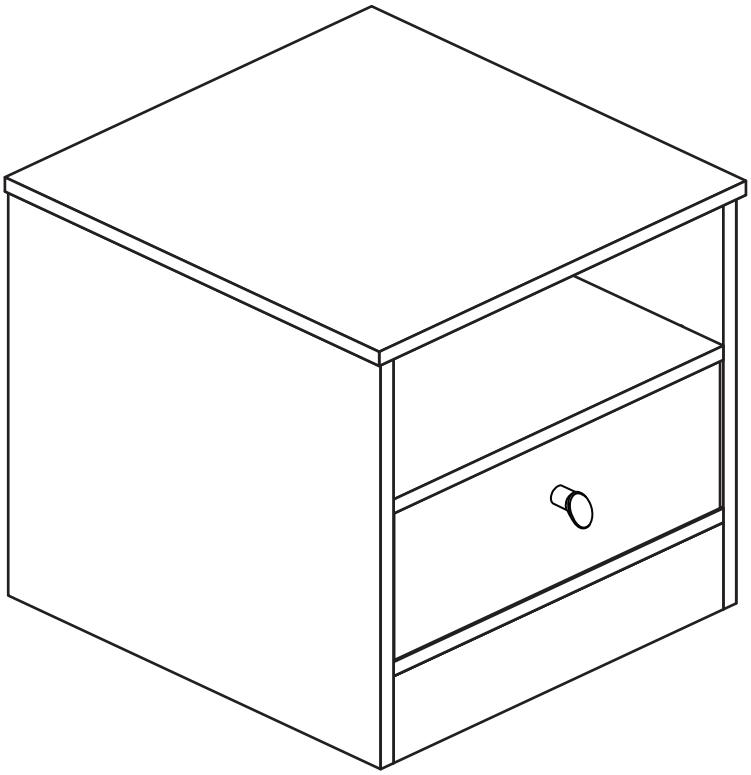

Dimensions
Width - 39cm
Depth - 40cm
Height - 45cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 5 - 04/09/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 13kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

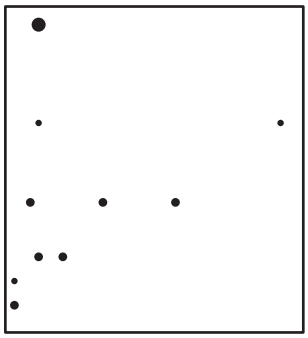


1 Left Side *(D0248A)*
(431 x 394mm)

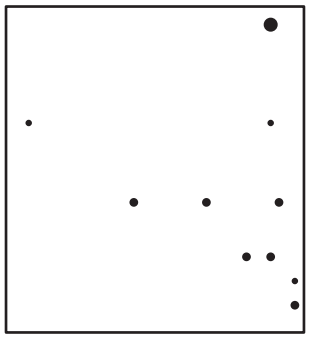


2 Right Side *(D0249A)*
(431 x 394mm)

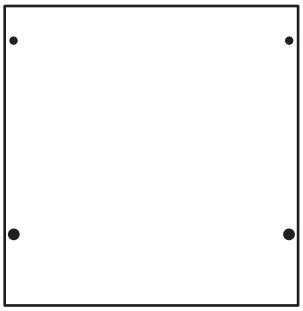


3 Top *(D0110A)*
(388 x 396mm)




4 Left Drawer Side *(W410LH)*
(300 x 95mm)




5 Right Drawer Side *(W410RH)*
(300 x 95mm)



6 Drawer Back *(W410BCK)*
(319 x 95mm)

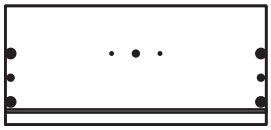


7 Drawer Front *(D0111A)*
(345 x 157mm)




8 Drawer Base *(T410)*
(297 x 330mm)



9 Plinth *(D0112A)*
(349 x 92mm)



10 Rail *(D0113A)*
(349 x 88mm)



11 Shelf *(D0250A)*
(349 x 392mm)



12 Back *(X724)*
(376 x 174mm)




Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 8

B




Metal dowel *(F901)* x 4

C



Nail holder *(F149)* x 1

D



Nail *(F51)* x 12

E



Large locking nut *(F900)* x 2

F



Small locking nut *(F3)* x 2

G



40mm Screw *(F910)* x 6

H




25mm Screw *(F50)* x 1

I



45mm Screw *(F65)* x 4

J

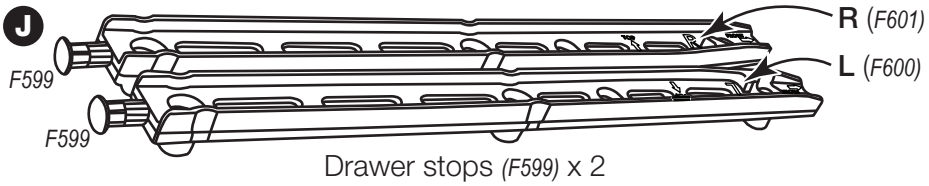


Drawer stops *(F599)* x 2
Runners *(F600)* x 1 *and (F601)* x 1

K



Handle *(F631)* x 1

Tools required

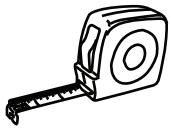


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

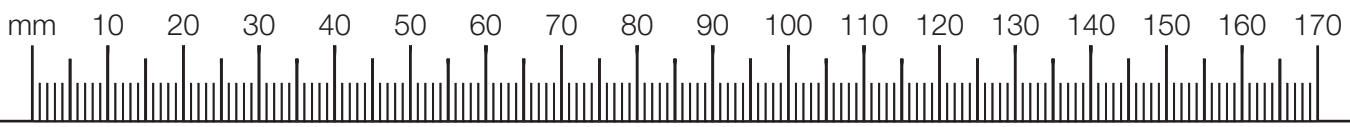

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 7.

Note: Tighten metal dowels up fully against the panels.

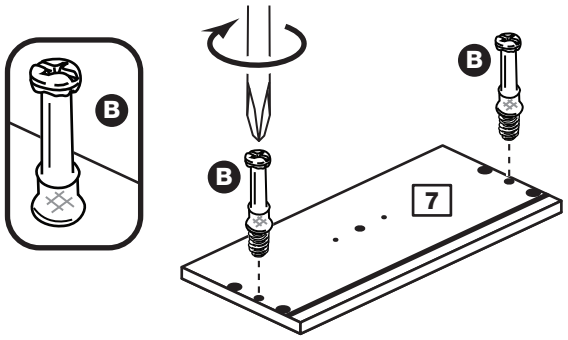


Step 2

Prepare drawer sides and back

Insert a small locking nut F into the hole shown on the left drawer side 4 and right drawer side 5.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

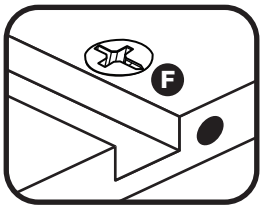




Step 3

Assemble drawer sides and back

Fit the left drawer side 4 and right drawer side 5 to the drawer back 6 using 4 screws I.


Note: Line up the small grooves on the inside of the drawer assembly.

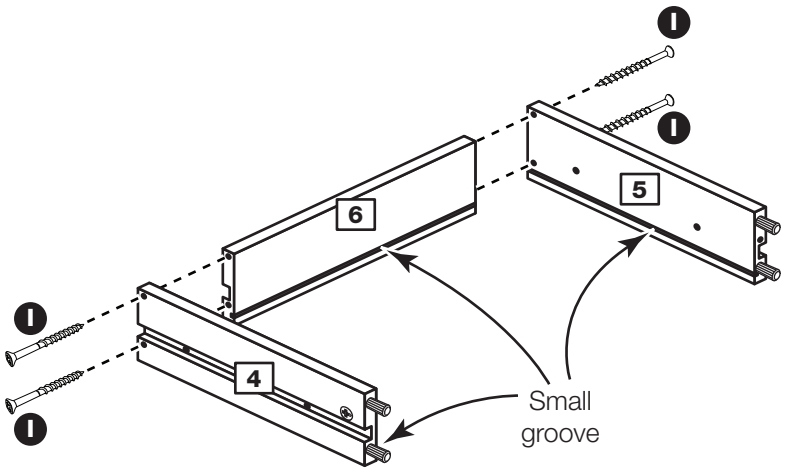

Step 4

Fit drawer base

Slide the drawer base 8 along the small groove of the drawer sides 4 and 5 into the small groove of the drawer back 6.

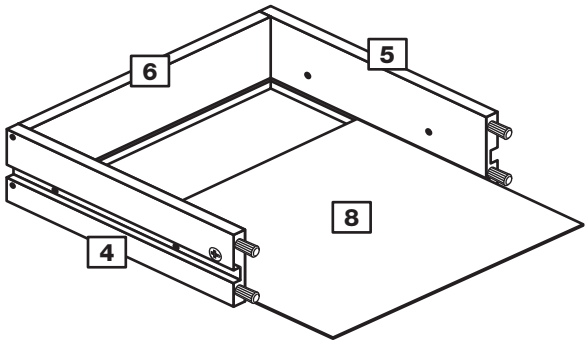


Assembly Instructions

Step 5

Attach drawer front

Turn the drawer assembly over and push onto the back of the drawer front [7].

Note: Turn locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

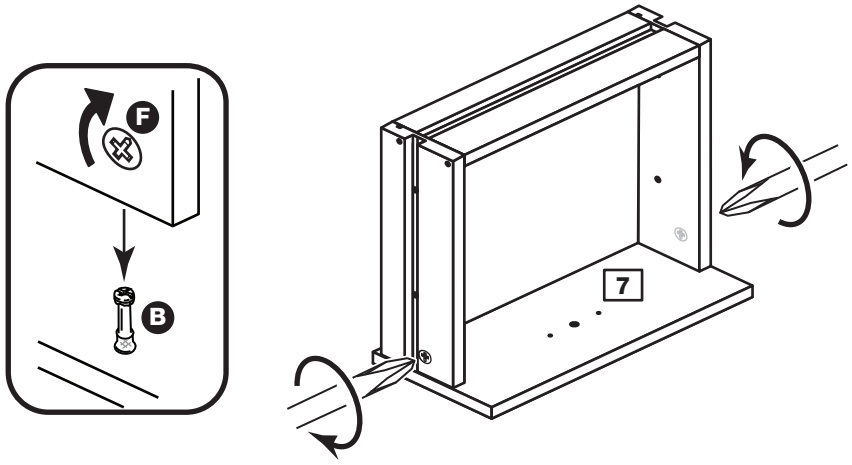


Step 6

Attach drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners (J).

Push the drawer stops fully through the drawer sides [4] and [5] from the inside.

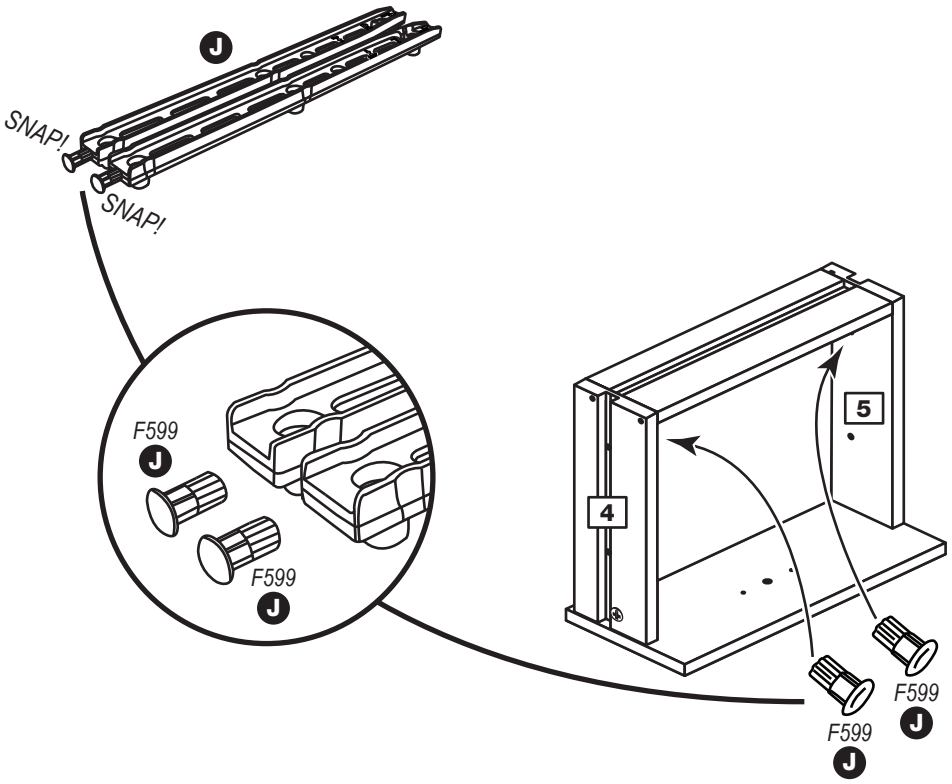


Step 7

Attach handle

Attach handle (K) to the drawer front using screw (H).

Note: Do not overtighten the screw.

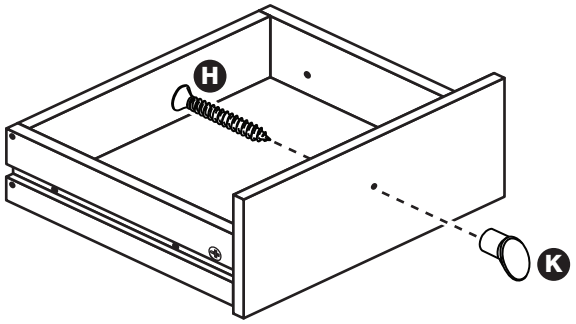

Assembly Instructions

Step 8

Prepare left and right side

Separate runners **J**.

a: Push fit the left runner **J** marked '**L**' into the holes shown on left side **1**.

Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.

Insert large locking nut **E** as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.


Tap in wooden dowel **A** as shown.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.


b: Push fit the right runner **J** marked '**R**' into the holes shown on left side **2**.


Insert large locking nut **E** as shown.


Tap in wooden dowel **A** as shown.

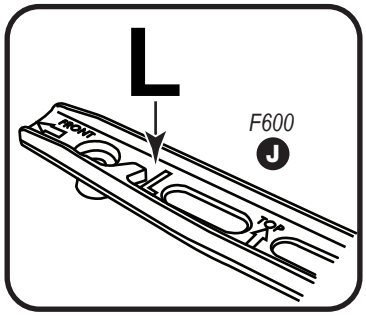

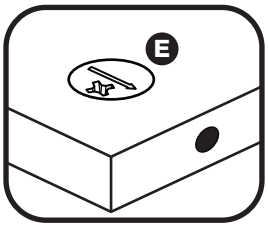

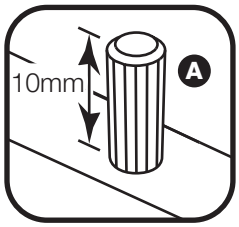

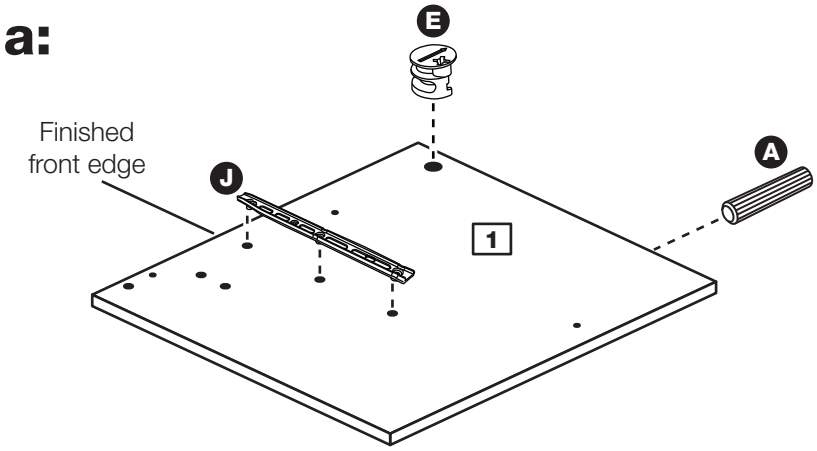

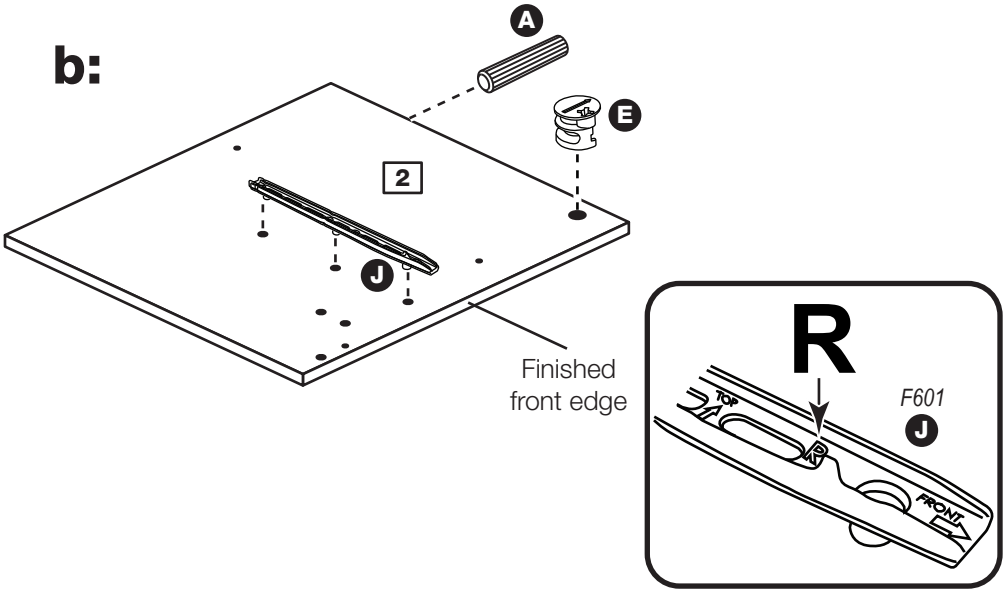


Step 9

Prepare rail and plinth

a: Tap 2 x wooden dowels (A) into the ends of the plinth [9].

b: Tap 4 x wooden dowels (A) into the ends of the rail [10].

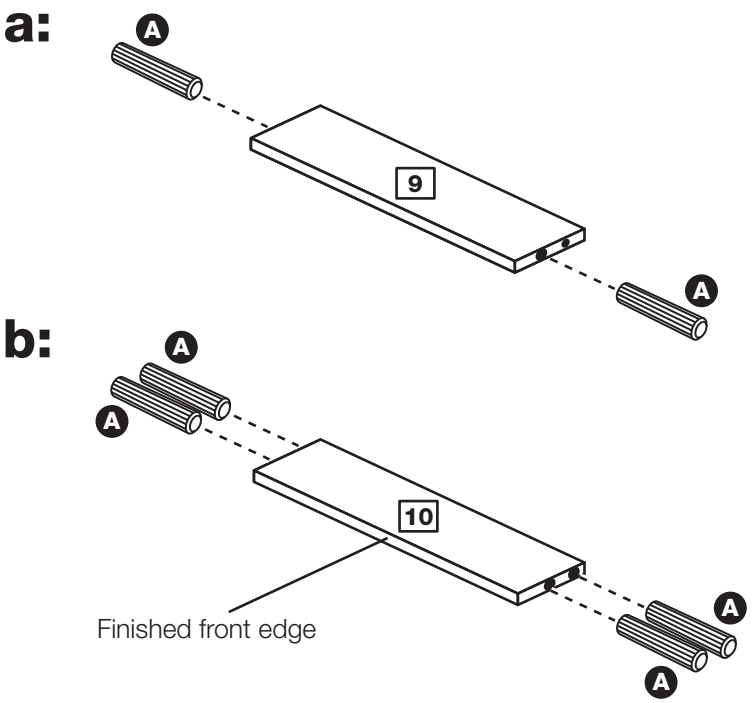


Step 10

Fit rail and plinth to the right side

Attach plinth [9] to the right side [2] using the dowel already fitted and secure with screw (G).


Attach rail [10] to the right side [2] using the dowels already fitted.

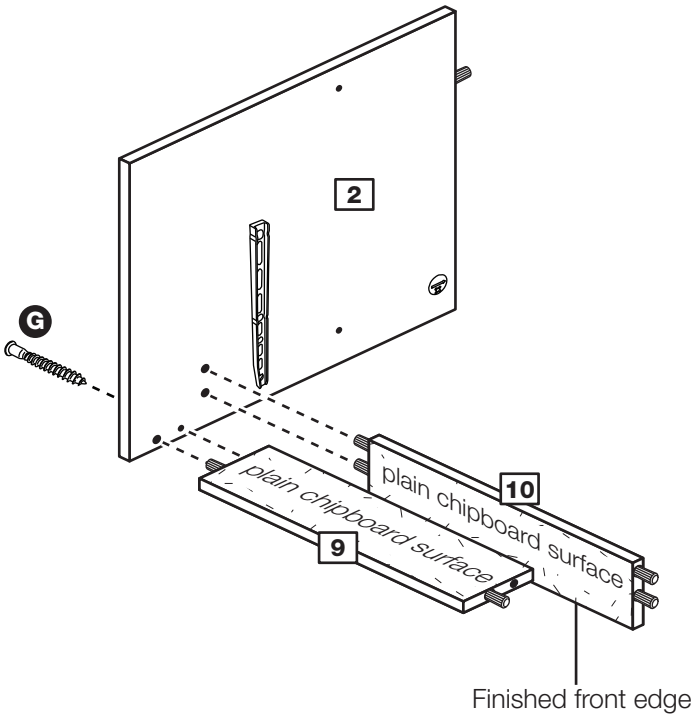

Step 11

Fit shelf to the right side

Attach shelf 11 to the right side 2 using 2 screws G.

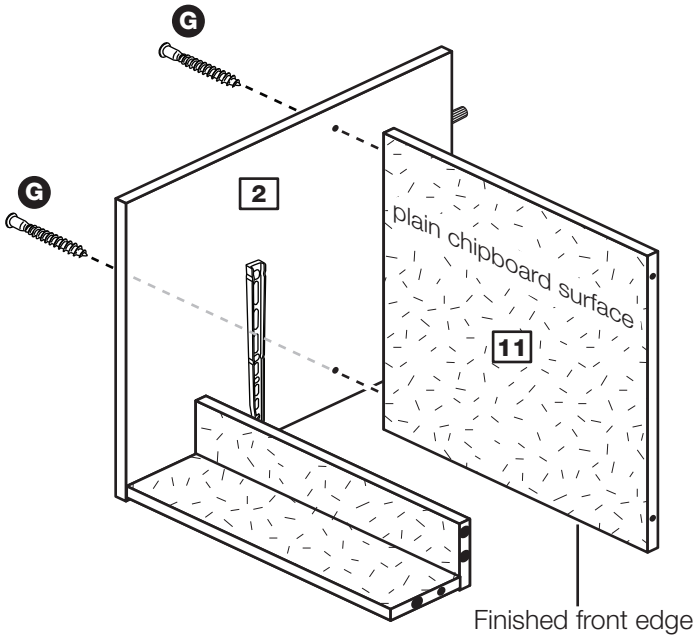


Step 12

Finish left side

Push the left side 1 onto the dowels fitted to the plinth and rail.


Secure the left side with 3 screws G.

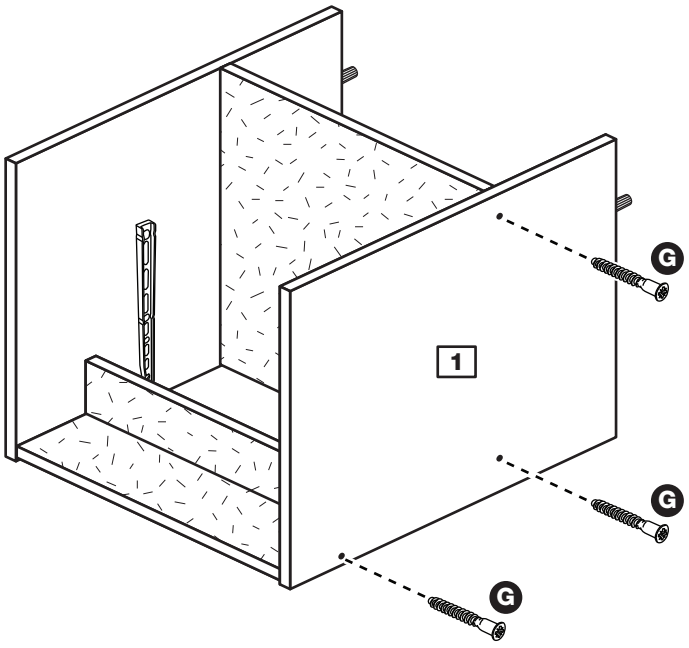

Step 13

Prepare Top

Screw 2 metal dowels B into holes shown on the underside of the top 3.

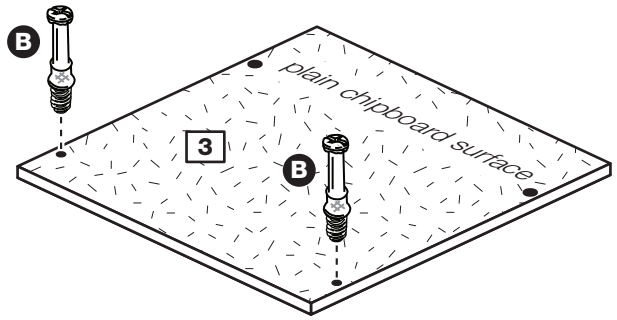


Step 14


Attach top

Push the top 3 onto the side panels.

Use a screwdriver to tighten the large locking nut E fitted to each side.

Note: Turn the large locking nut as far as it will go - more than 1/2 a turn.

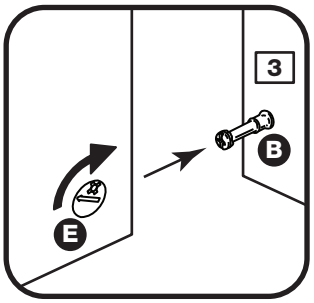

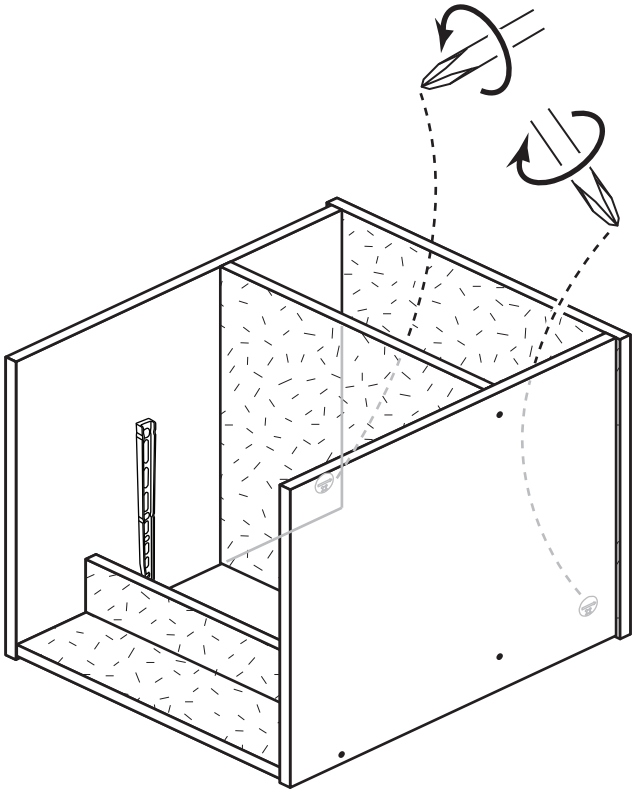

Step 15

Fit back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 12 down onto the unit, as shown.

Use the nail guide C to hold the nails D vertical and at the correct distance whilst you nail around the top and sides of the back 12.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next stage.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

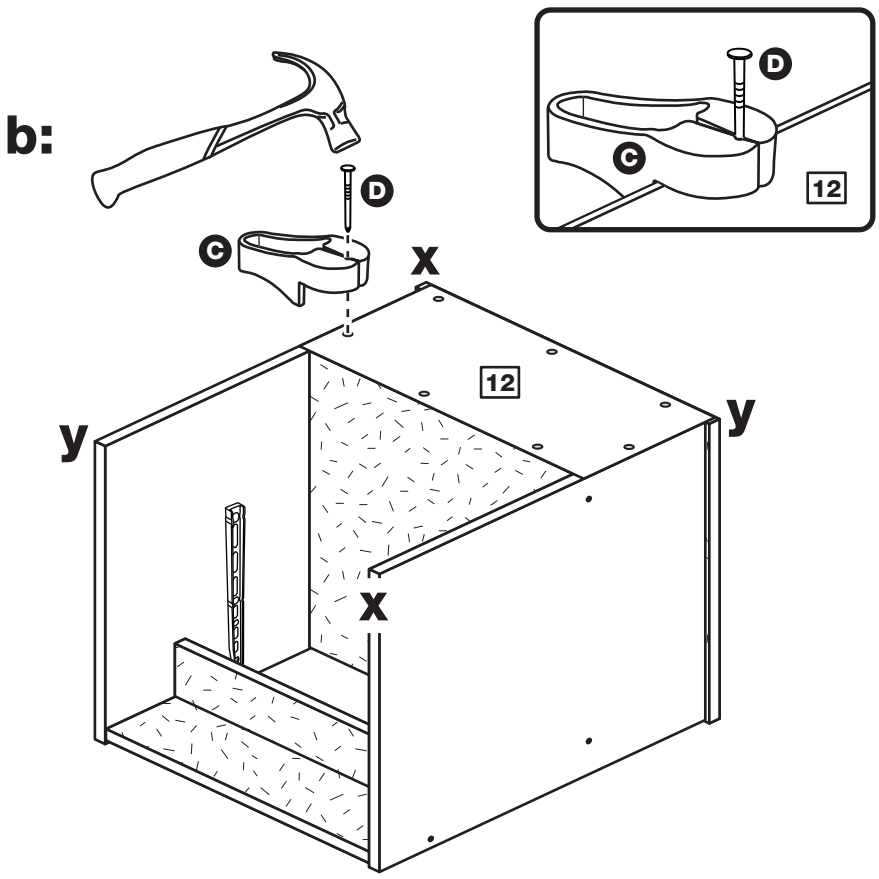


Step 16

Insert drawer

Lift front of drawer whilst inserting to overcome the ‘stop’ system.

Note: To ensure that your drawer runs smoothly, spray a small amount of furniture polish into the grooves.


Assembly is complete

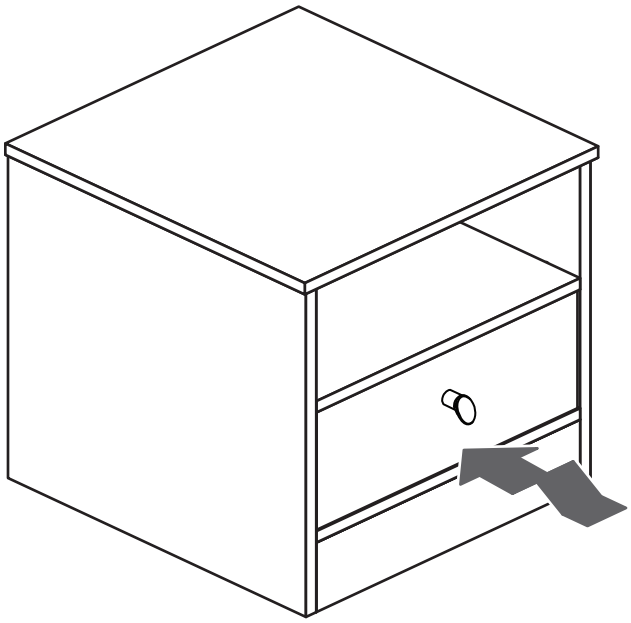

Malibu - Single Bedside

Assembly Instructions - Please keep for future reference

719/0487
719/0494
305/0208
305/0215
305/0239
305/0222
305/0246

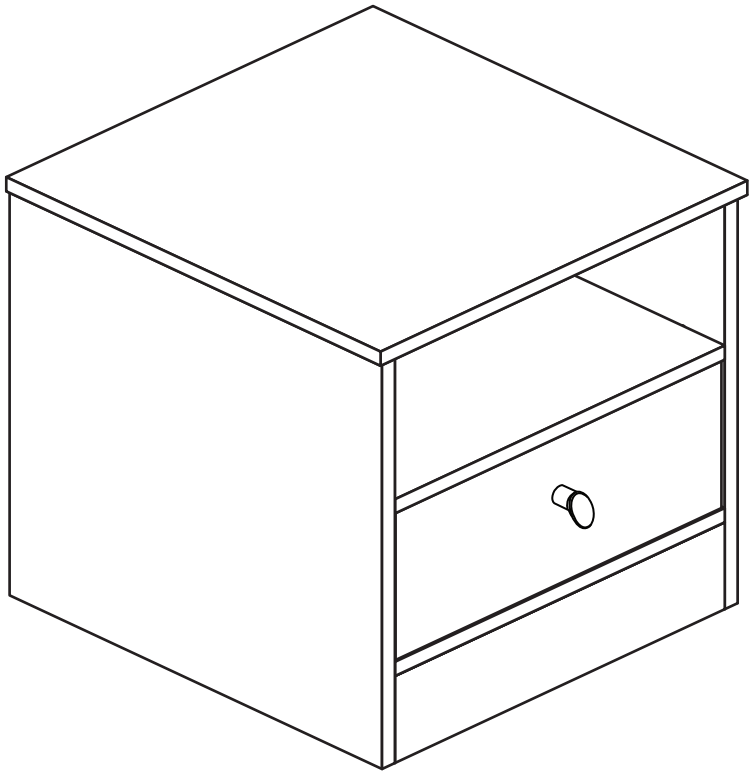

Dimensions
Width - 39cm
Depth - 40cm
Height - 45cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 6 - 23/01/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 13kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

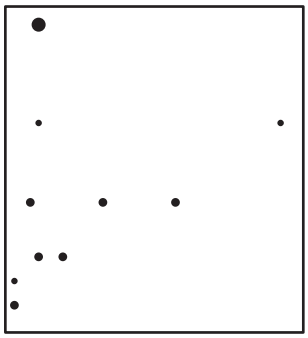


1 Left Side *(D0248A)*
(431 x 394mm)

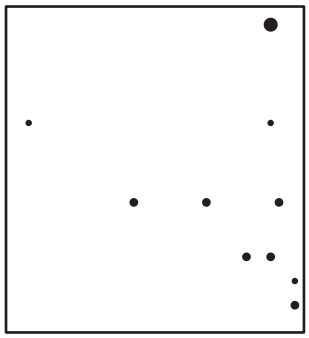


2 Right Side *(D0249A)*
(431 x 394mm)

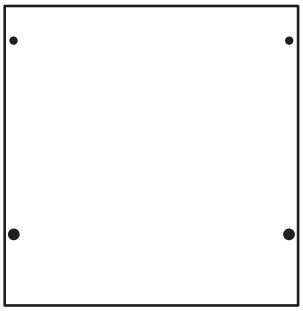


3 Top *(D0110A)*
(388 x 396mm)




4 Left Drawer Side *(W410LHD)*
(300 x 95mm)




5 Right Drawer Side *(W410RHD)*
(300 x 95mm)



6 Drawer Back *(W410BCKB)*
(319 x 95mm)

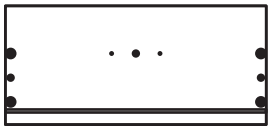


7 Drawer Front *(D0111A)*
(345 x 157mm)




8 Drawer Base *(T410)*
(297 x 330mm)



9 Plinth *(D0112A)*
(349 x 92mm)



10 Rail *(D0113A)*
(349 x 88mm)



11 Shelf *(D0250A)*
(349 x 392mm)



12 Back *(X724)*
(376 x 174mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 8

B




Metal dowel *(F901)* x 4

C



Nail holder *(F149)* x 1

D



Nail *(F51)* x 12

E



Large locking nut *(F900)* x 2

F



Small locking nut *(F3)* x 2

G



40mm Screw *(F910)* x 6

H




25mm Screw *(F50)* x 1

I



Knock-in Peg *(F171WH)* x 4

J

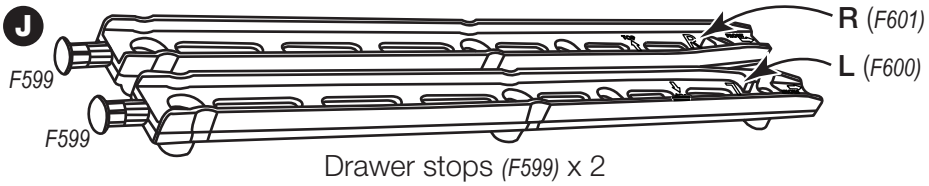


Drawer stops *(F599)* x 2
Runners *(F600)* x 1 *and (F601)* x 1

K



Handle *(F631)* x 1

Tools required

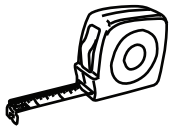


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

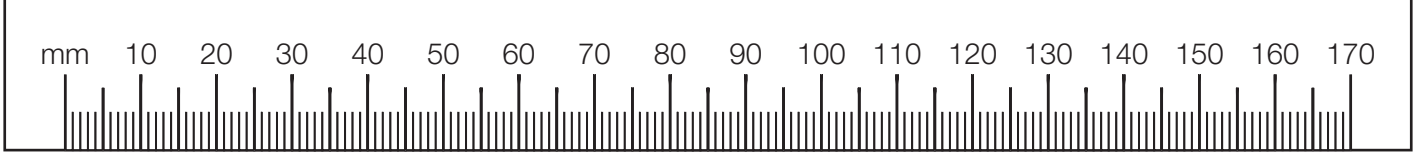

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 7.

Note: Tighten metal dowels up fully against the panels.

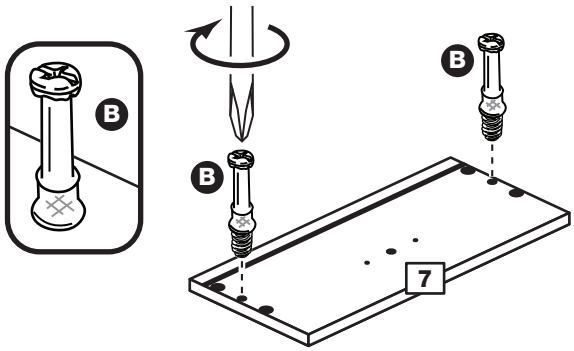


Step 2

Prepare drawer sides and back

Insert a small locking nut F into the hole shown on the left drawer side 4 and right drawer side 5.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

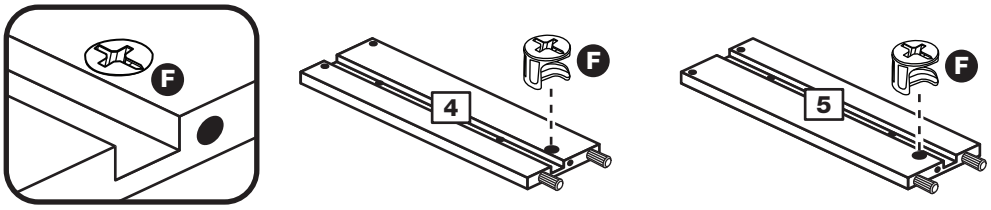


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side 4 and right drawer side 5 onto the back of the drawer front 7.

Turn the small locking nuts F on the left drawer side 4 and right drawer side 5.

Note: Turn the locking nuts F clockwise to secure panels - more than 1/2 a turn.

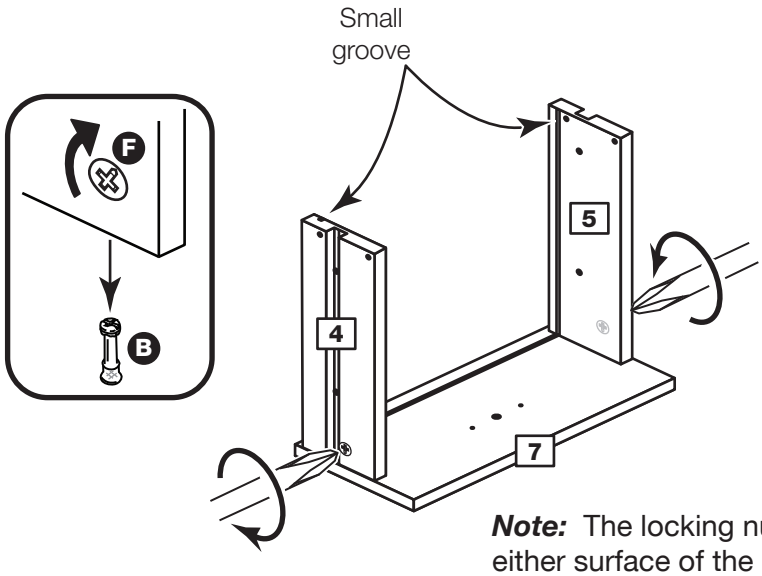


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 8 down the grooves in the drawer sides 4 and 5 and down into the groove in the drawer front 7.

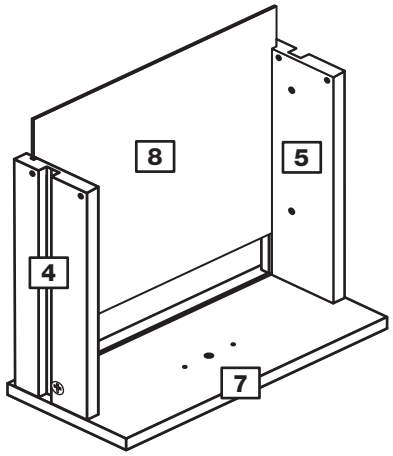


Step 5

Fit the drawer back

Fit the drawer back 6 between the drawer sides 4 and 5.

Make sure that the drawer base 8 fits into the groove in the drawer back 6.

Hold the drawer back 6 in position and tap the knock-in pegs I through the holes in the drawer sides 4 and 5.

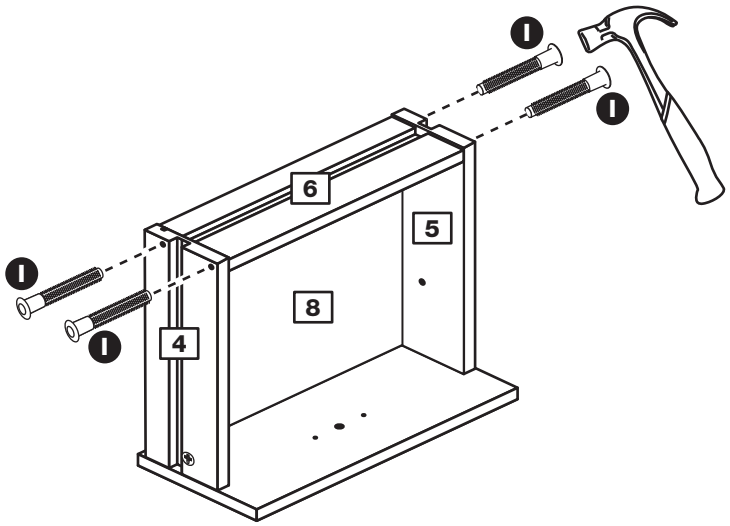


Step 6

Attach drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners J.

Push the drawer stops fully through the drawer sides 4 and 5 from the inside.

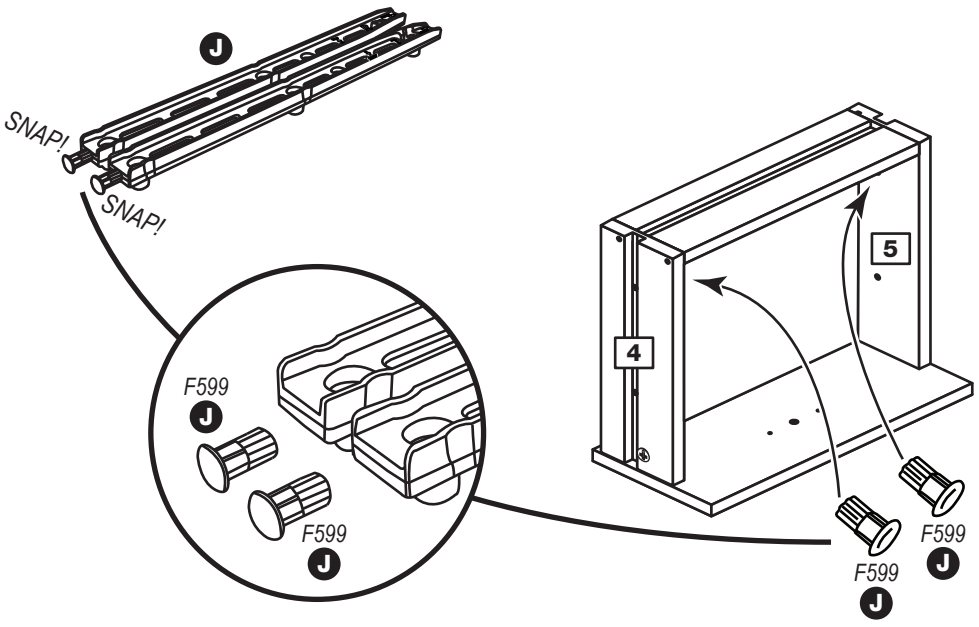


Assembly Instructions

Step 7

Attach the handle

Attach the handle K to the drawer front 7 using screw H.

Note: Do not overtighten the screw.

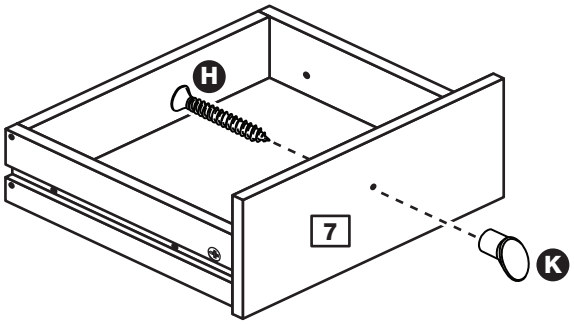

Step 8

Prepare left side

Separate the runners J.

Push fit the left runner J marked '**L**' into the holes shown on the left side 1.


Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.

Insert a large locking nut E into the left side 1.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap a wooden dowel A into the left side 1.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

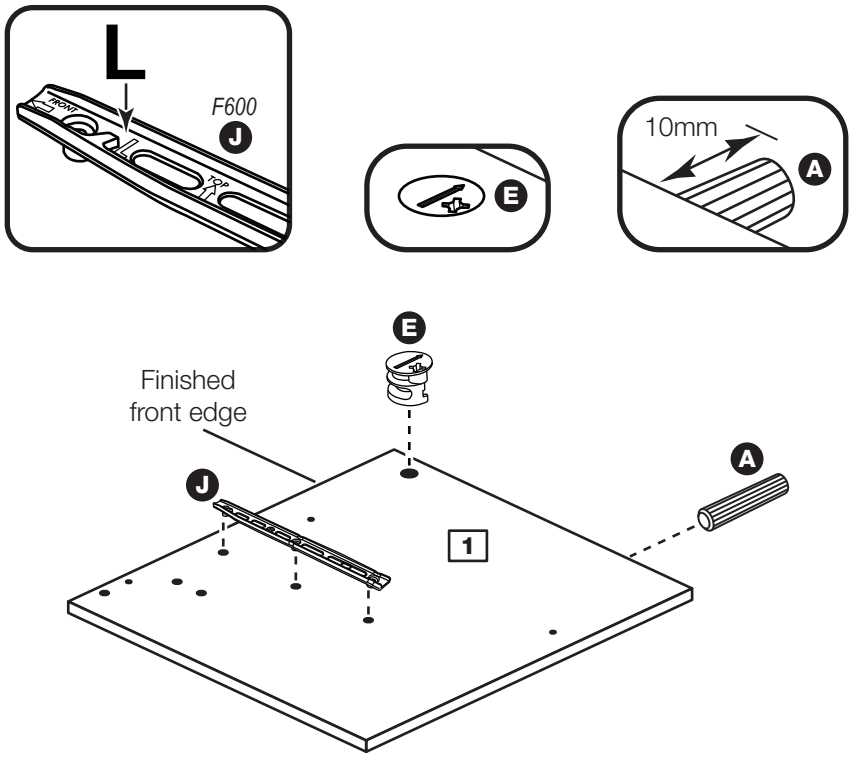


Step 9


Prepare the right side

Push fit the right runner J marked '**R**' into the holes shown on right side 2.

Insert a large locking nut E into the right side 2.

Tap a wooden dowel A into the right side 2.

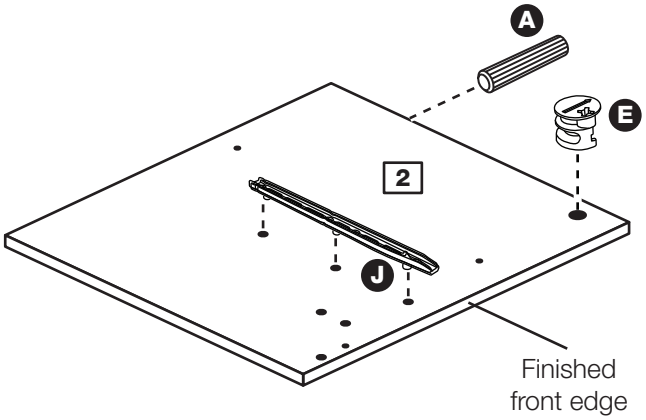

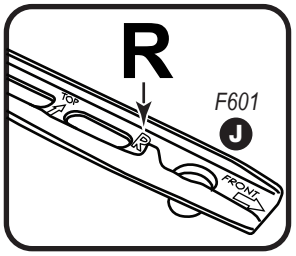


Step 10

Prepare rail and plinth

a: Tap 2 x wooden dowels A into the ends of the plinth 9.

b: Tap 4 x wooden dowels A into the ends of the rail 10.

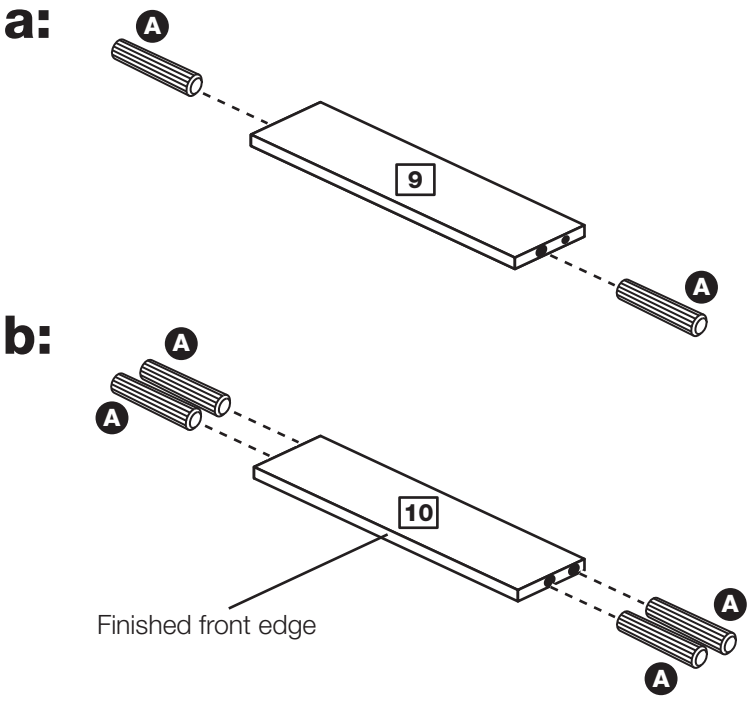


Step 11

Fit rail and plinth to the right side

Attach plinth [9] to the right side [2] using the dowel already fitted and secure with screw G.


Attach rail [10] to the right side [2] using the dowels already fitted.

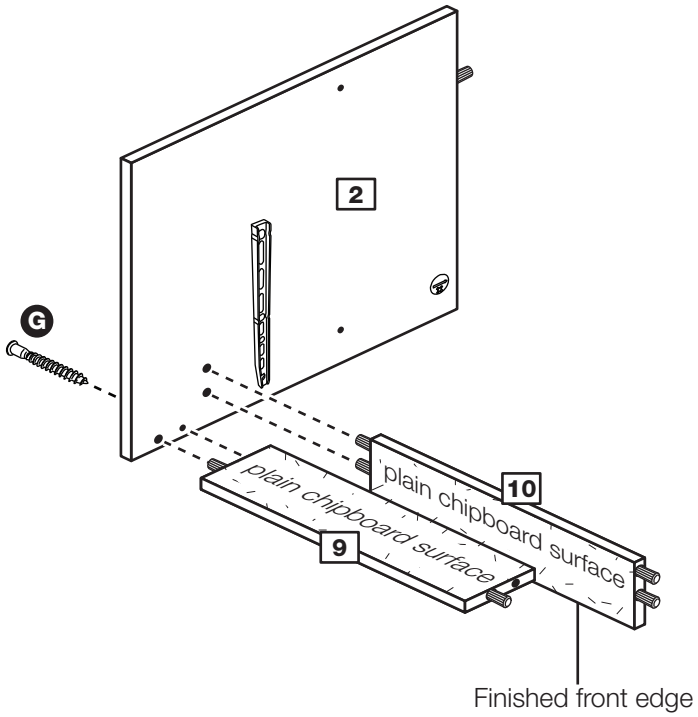

Step 12

Fit the shelf to the right side

Attach shelf [11] to the right side [2] using 2 screws G.

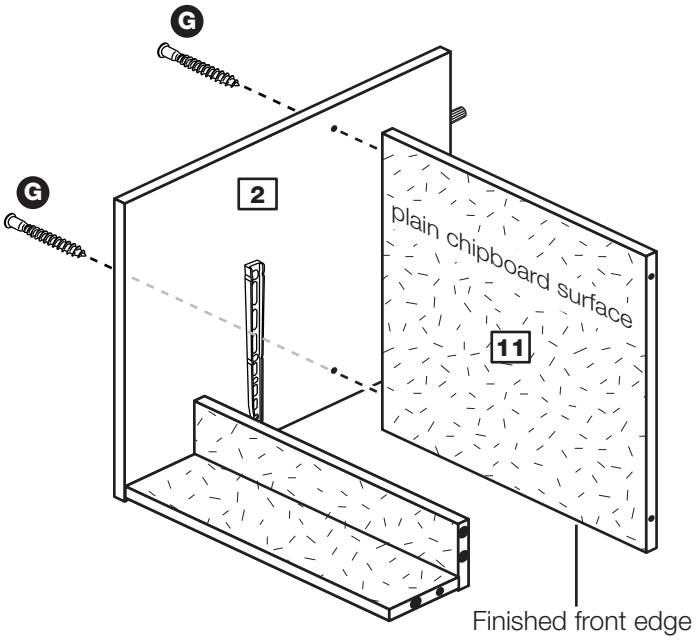


Step 13

Fit the left side

Push the left side 1 onto the dowels fitted to the plinth and rail.


Secure the left side with 3 screws G.

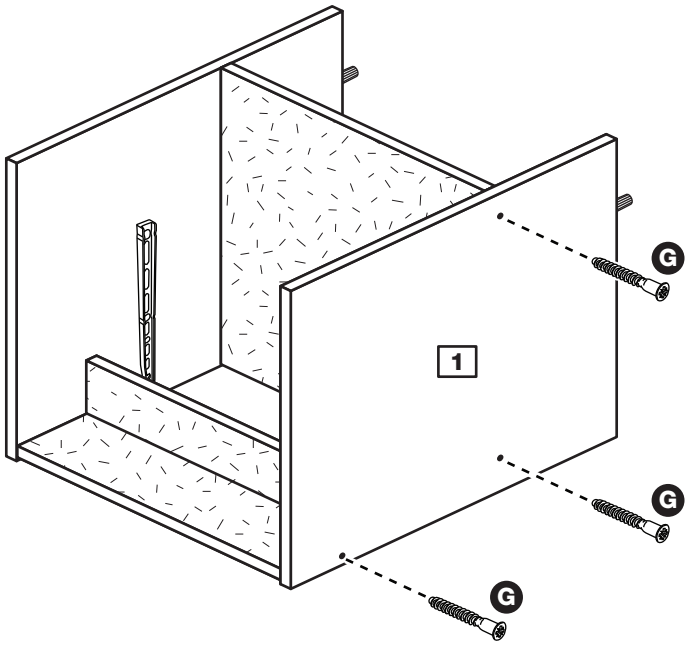

Step 14

Prepare the top

Screw 2 metal dowels B into holes shown on the underside of the top 3.

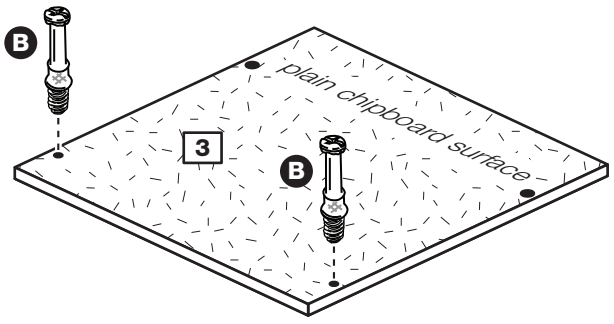


Step 15

Attach top

Push the top 3 onto the side panels.

Use a screwdriver to tighten the large locking nut E fitted to each side.

Note: Turn the large locking nut as far as it will go - more than 1/2 a turn.

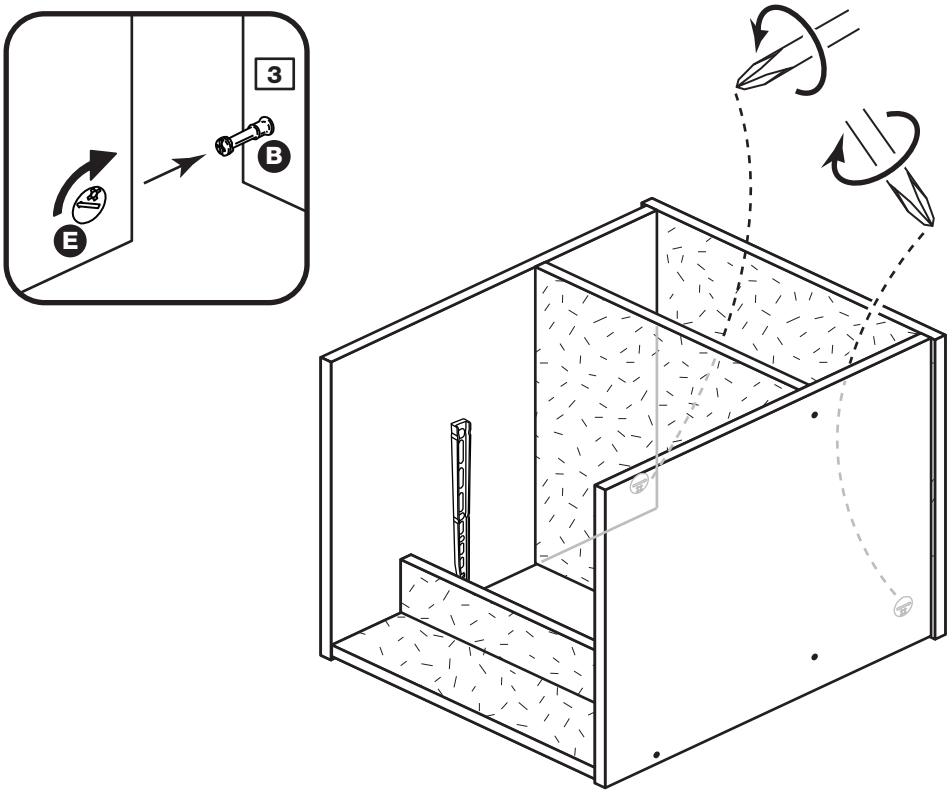

Step 16

Fit back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 12 down onto the unit, as shown.

Use the nail guide C to hold the nails D vertical and at the correct distance whilst you nail around the top and sides of the back 12.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next stage.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

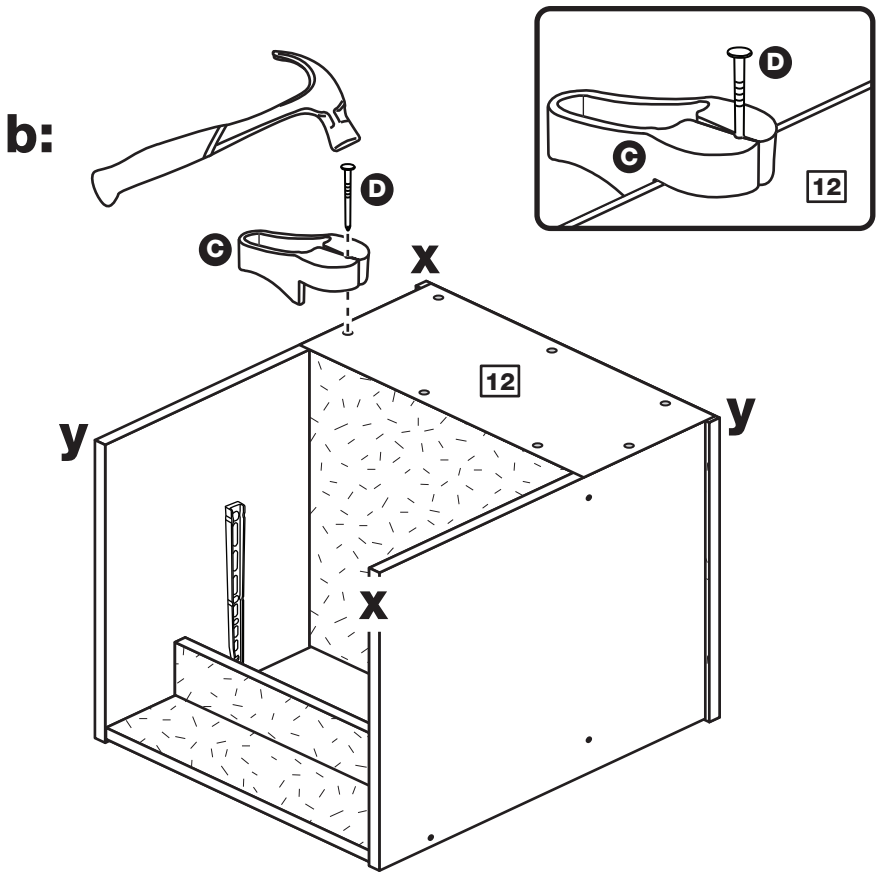

Step 17

Insert the drawer

Lift front of drawer whilst inserting to overcome the ‘stop’ system.

Note: To ensure that your drawer runs smoothly, spray a small amount of furniture polish into the grooves.

Assembly is complete

