
Malibu - 5 Drawer Chest

Assembly Instructions - Please keep for future reference

305/1764
305/1733
305/1757
305/1740
305/1771

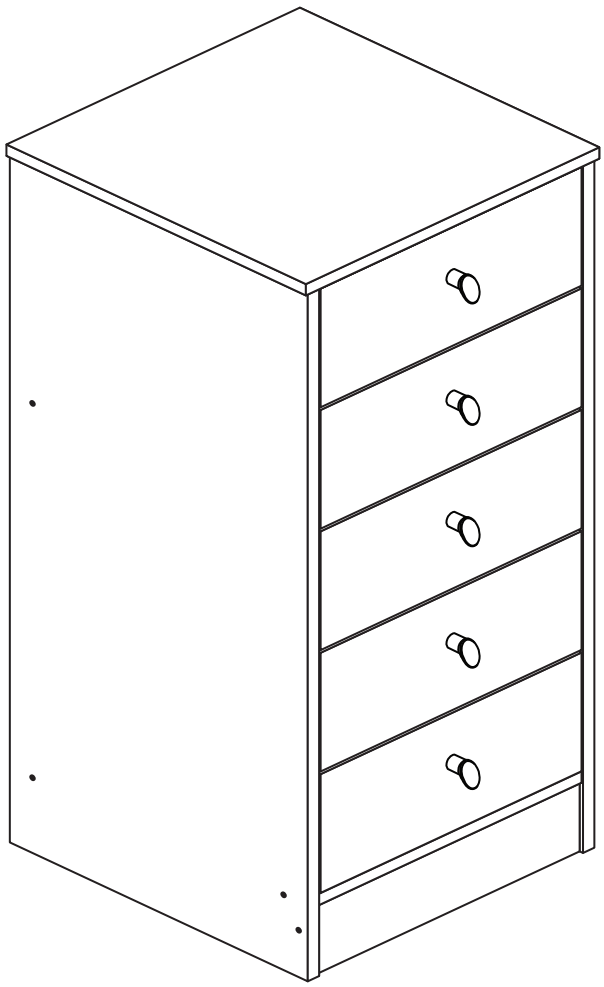

Dimensions
Width - 39cm
Depth - 40cm
Height - 92.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 30/09/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 16.5kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

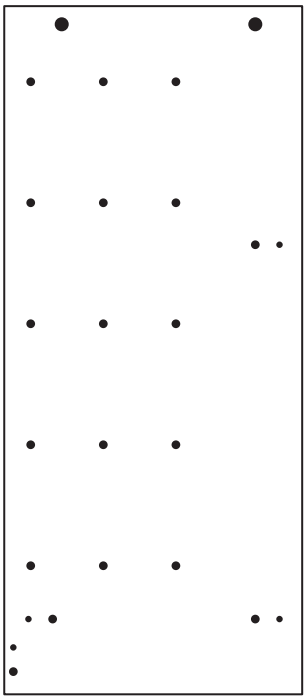

1 Left Side *(D2030A)*
(910 x 394mm)

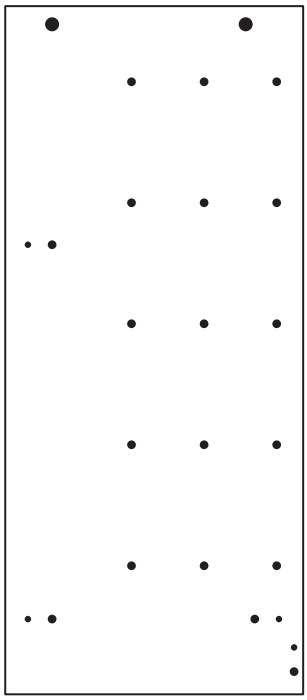

2 Right Side *(D2031A)*
(910 x 394mm)

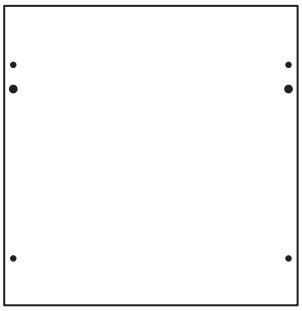


3 Top *(D2029A)*
(388 x 396mm)




4 Rail *(D2032A)*
(349 x 92mm) x 2




5 Cross Rail *(D2033A)*
(349 x 88mm) x 2

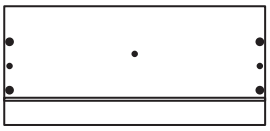


6 Drawer Front *(D2034A)*
(345 x 157mm) x 5



7 Drawer Wrap *(W161)*
(943 x 95mm) x 5



8 Drawer Base *(T161)*
(299 x 330mm) x 5



9 Back *(X954)*
(333 x 373mm)




Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A




Wooden dowel *(F22)* x 10

B




Metal dowel *(F901)* x 14

C

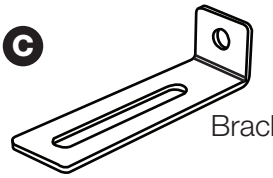

Bracket (*F327)* x 1

D



Nail *(F51)* x 10

E



Large locking nut *(F900)* x 4

F



Small locking nut *(F3)* x 10

G



40mm Screw *(F910)* x 8

H



25mm Screw (*F50)* x 5

I




Handle *(F631)* x 5

J




13mm Screw *(F79)* x 1

K

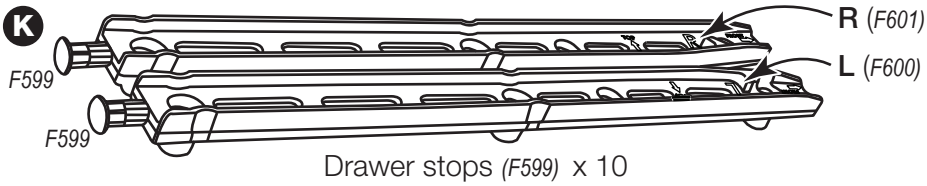

Drawer stops *(F599)* x 10
Runners *(F600)* x 5 *and (F601)* x 5

Tools required

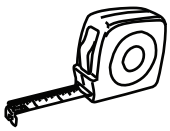

Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (only use when drilling into walls)

Ruler - Use this ruler to help correctly identify the screws

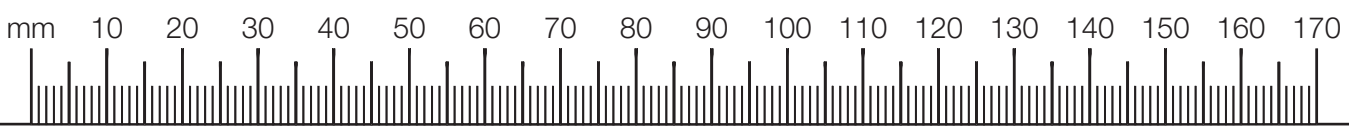

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Prepare the drawer fronts and wraps


a: Screw 2 metal dowels (B) into the holes shown on the back of the 5 drawer fronts [6].

Note: Tighten metal dowels up fully against the panel.

b: Insert 2 small locking nuts (F) into the holes shown on the 5 drawer wraps [7].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

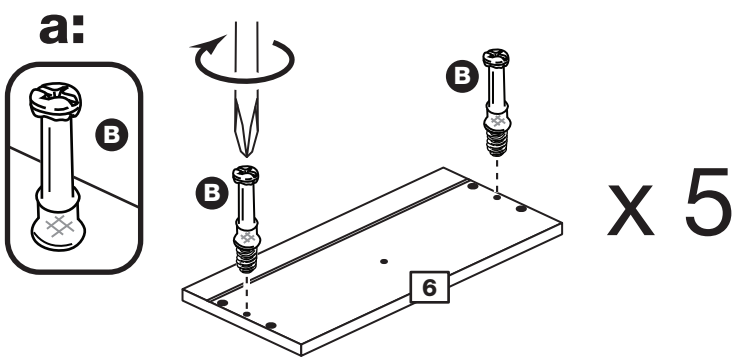

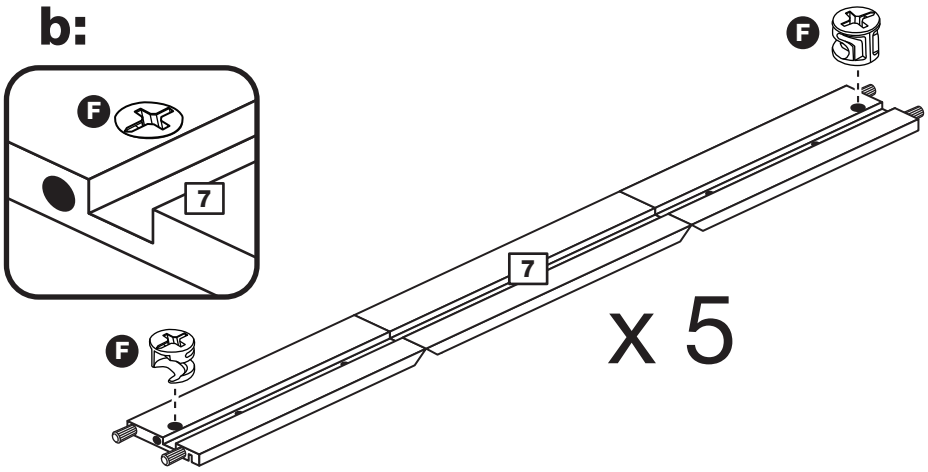


Step 2


Assemble the drawers

a: Place drawer base [8] into the narrow slot on the drawer wrap [7]. Fold wrap around the base.

b: Turn drawer wrap assembly over and push onto the back of the drawer front [6].

Note: Turn locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

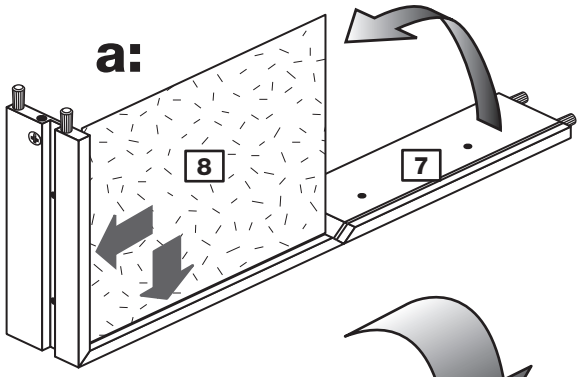

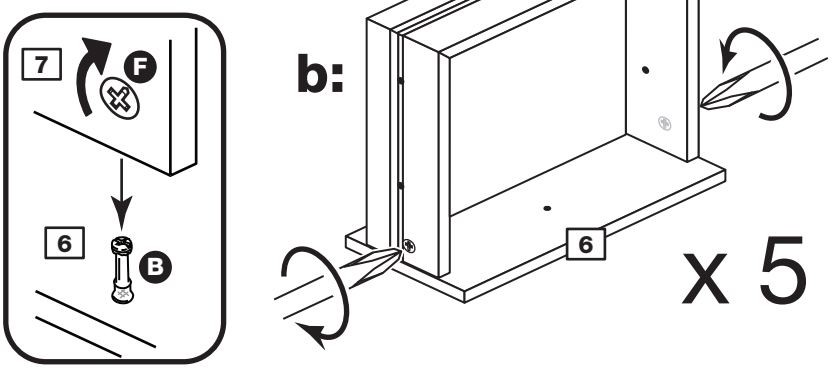


Step 3

Attach the drawer stops

Carefully break off 2 drawer stops *(F599)* from a set of drawer runners **K**.

Push the drawer stops fully through the drawer wrap [7] from the inside.

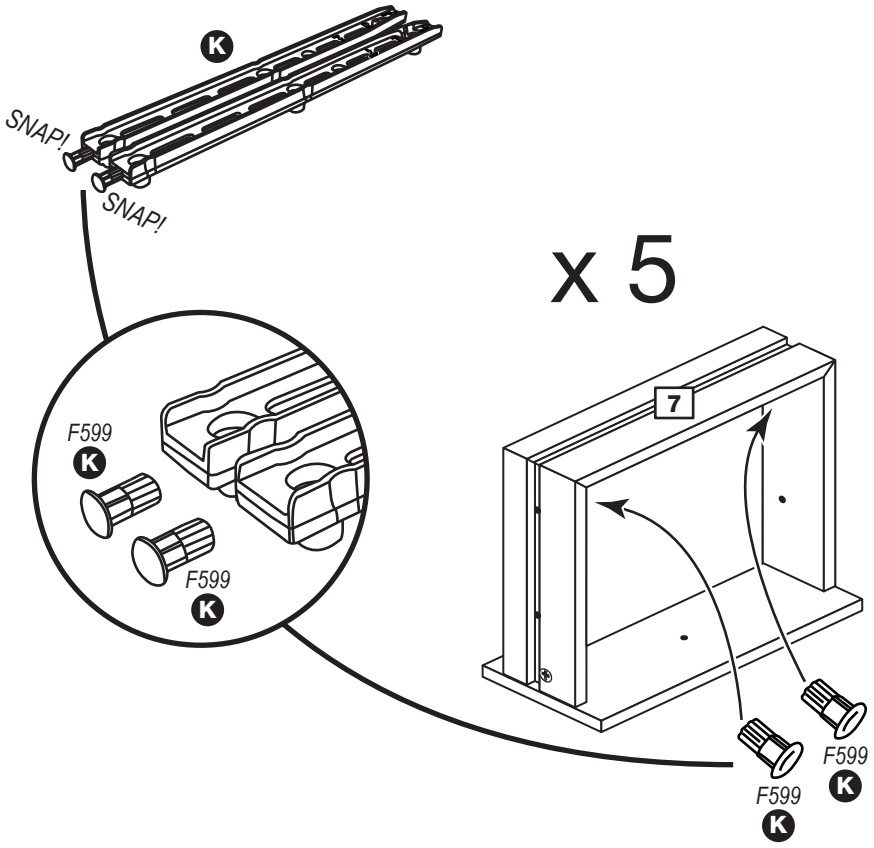


Step 4

Attach the handles

Attach a handle **I** to each of the 5 drawer fronts [6] using screw **H**.

Note: Do not overtighten the screws.

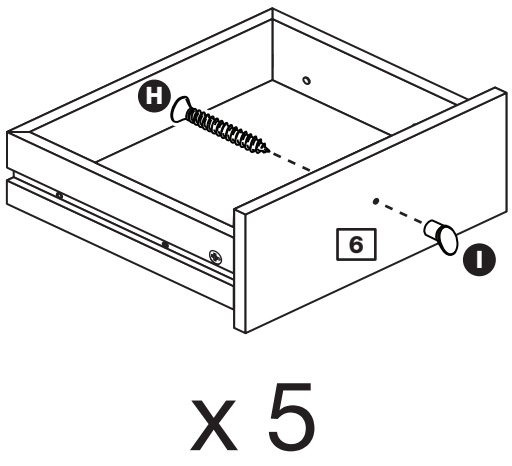

Assembly Instructions

Step 5

Prepare the left side

Separate the runners (K).

Push fit the left runners (K) marked '**L**' into the left side [1].


Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.


Insert 2 large locking nuts (E) into the left side [1].


Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Tap a wooden dowel (A) into the left side [1].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

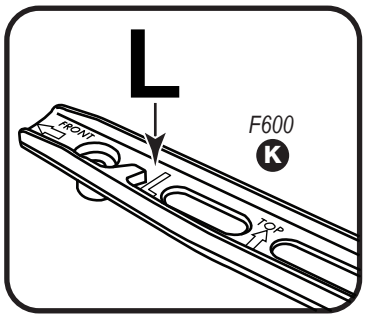

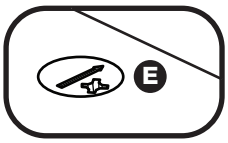

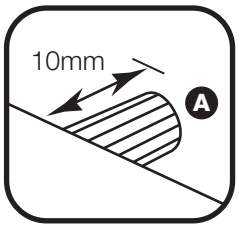

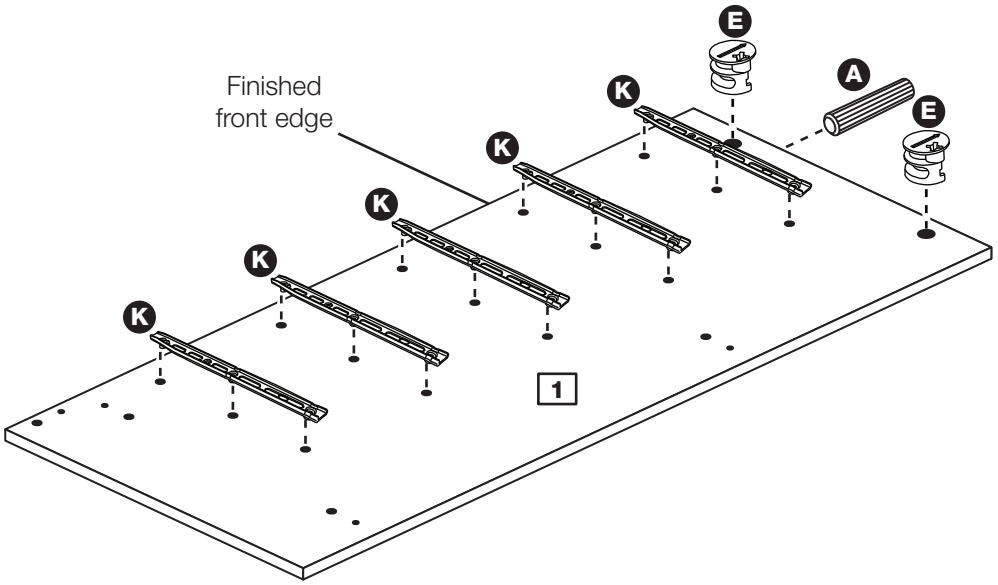


Step 6


Prepare the right side

Push fit the right runners (K) marked '**R**' into the right side [2].

Insert 2 large locking nuts (E) into the right side [2].

Tap a wooden dowel (A) into the right side [2].

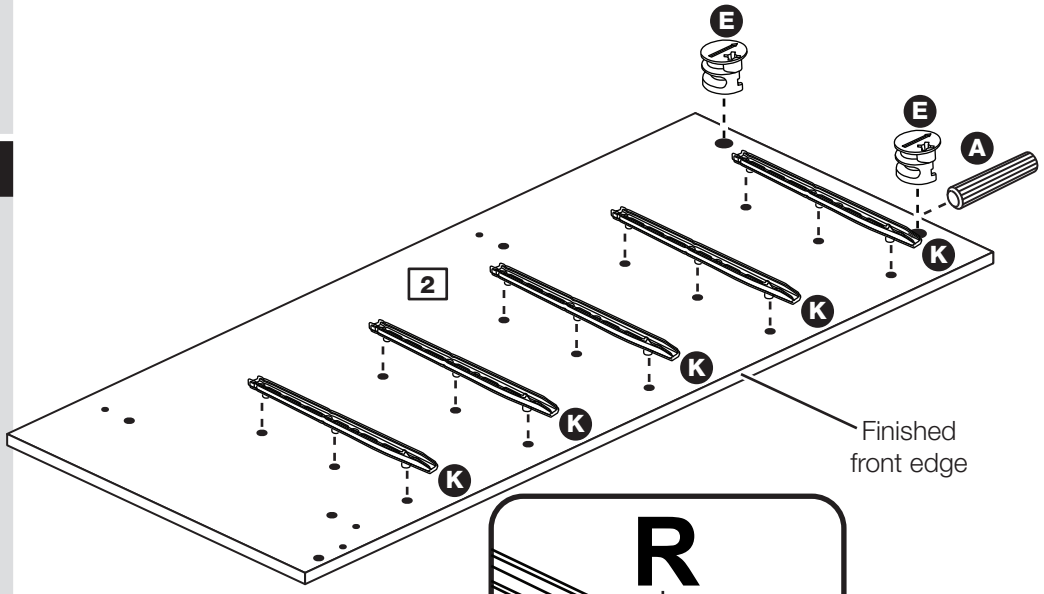

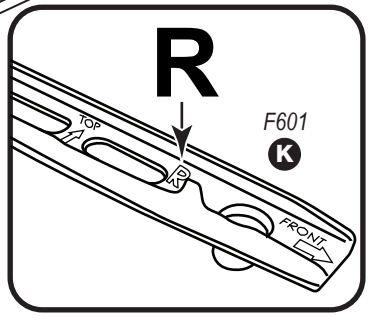


Assembly Instructions

Step 7

Prepare the rails


Tap 2 wooden dowels (A) into each of the rails [4].

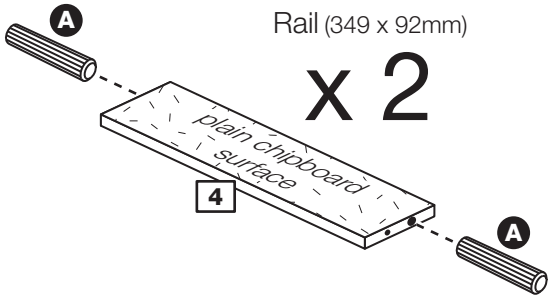

Step 8

Fit the rails to the right side


Push the rails [4] onto the right side [2] and secure them with 2 screws (G).

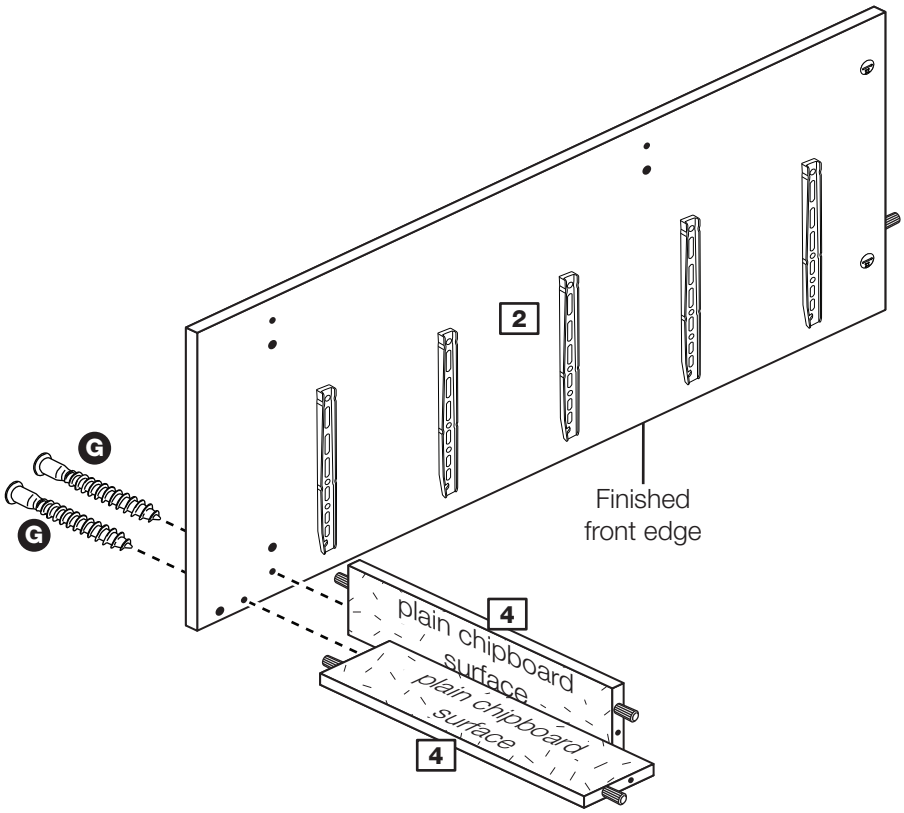

Step 9

Prepare the cross rails


Tap 2 wooden dowels (A) into each of the the cross rails [5].

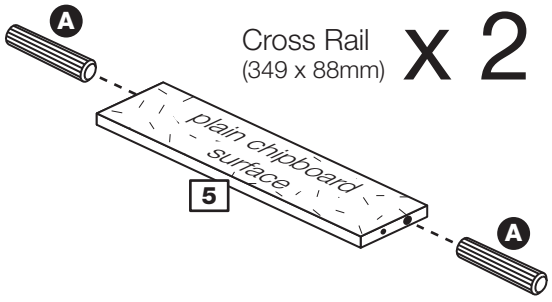

Step 10

Fit the cross rails


Push the cross rails 5 onto the right side 2 and secure them with 2 screws G.

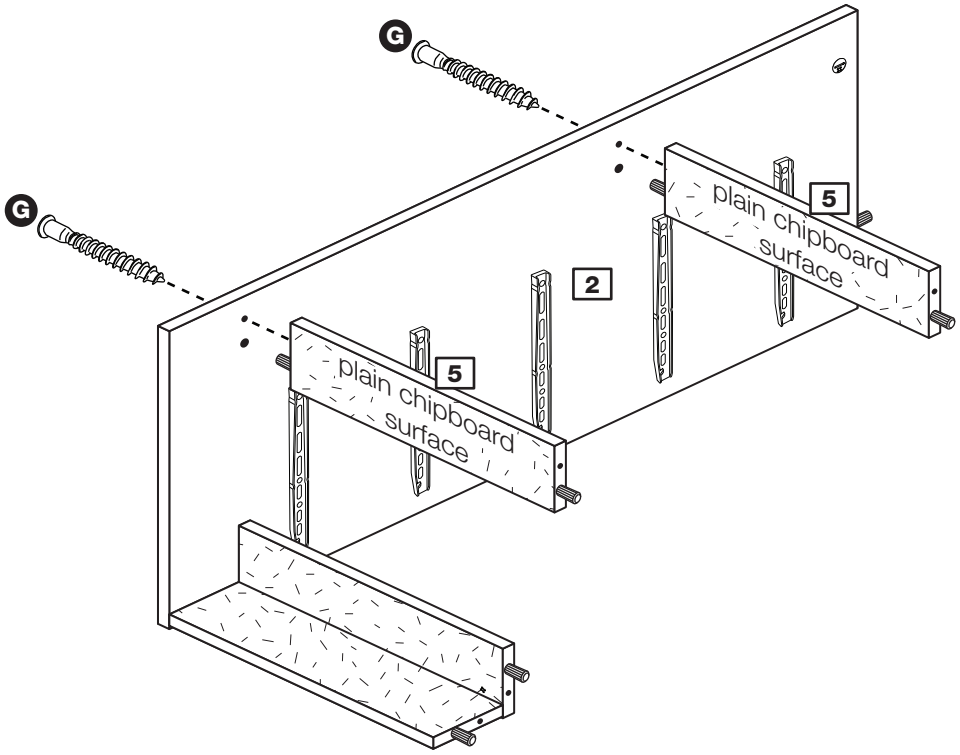

Step 11

Fit the left side

Push the left side 1 onto the assembly and secure it with 4 screws G.

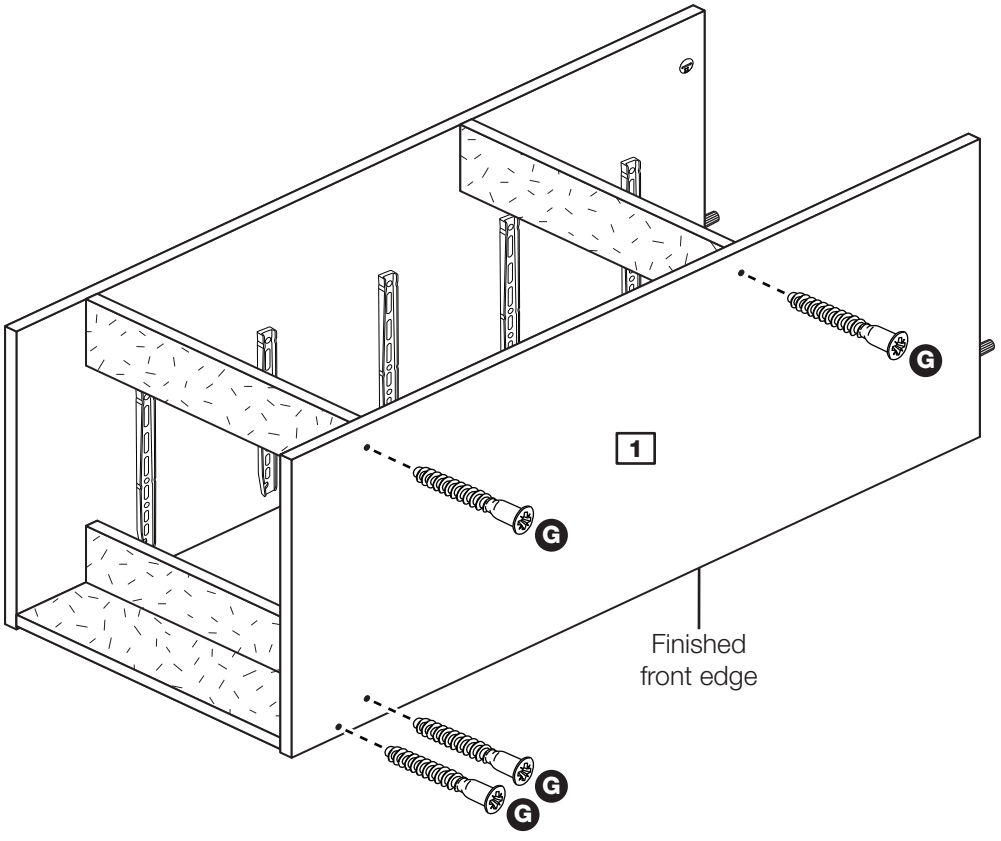


Step 12

Prepare the top

Screw 4 metal dowels B into the top 3.

Fix the bracket C in the middle of the top 3, flush to the back edge, using screw J.

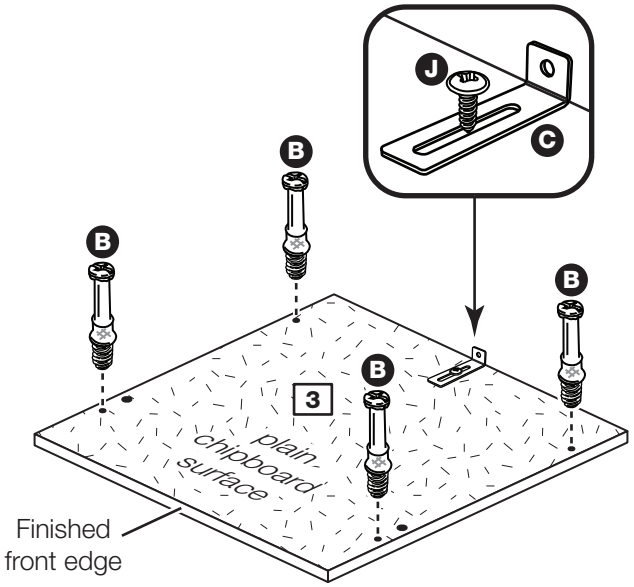


Step 13

Fit the top

Push the top 3 onto the side panels 1 and 2.

Use a screewdriver to tighten the 4 large locking nuts E fitted to the side panels 1 and 2.

Note: Turn the large locking nuts E as far as they will go - more than 1/2 a turn.

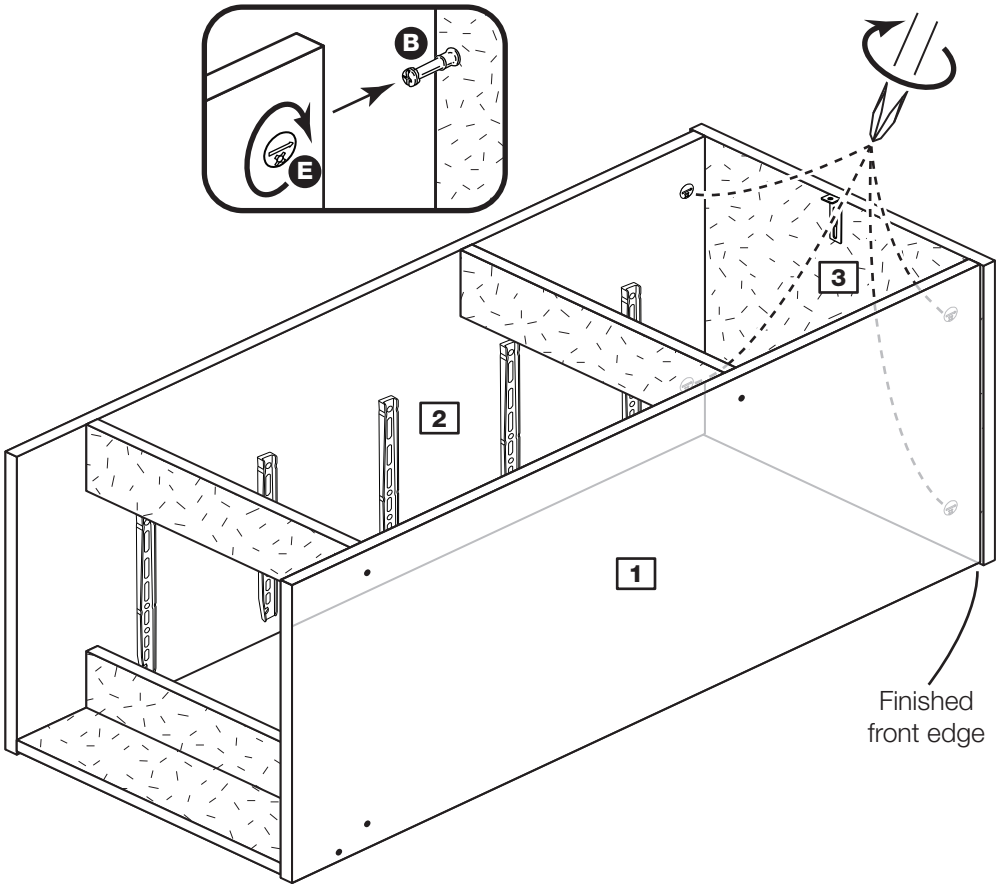

Step 14

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back [9] onto the unit.

Nail (D) around the outside edges of the back [9].

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

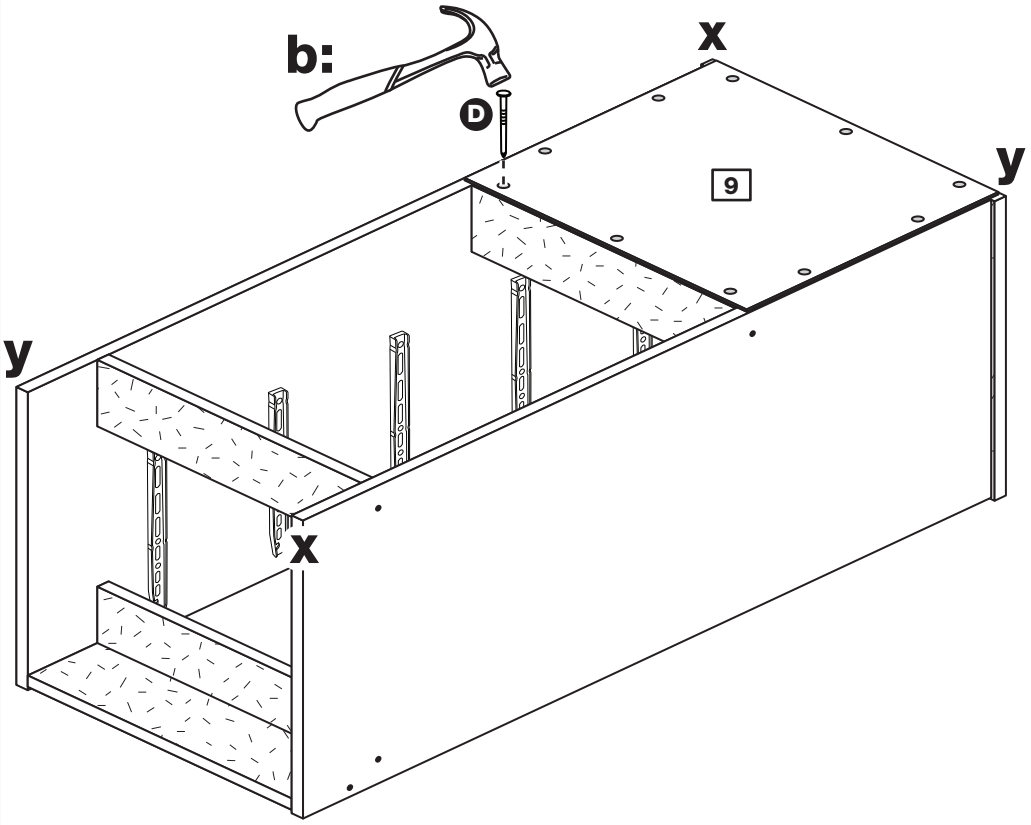


Step 15

Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket (C) fitted under the top [3] of the unit.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the unit to the wall.

Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

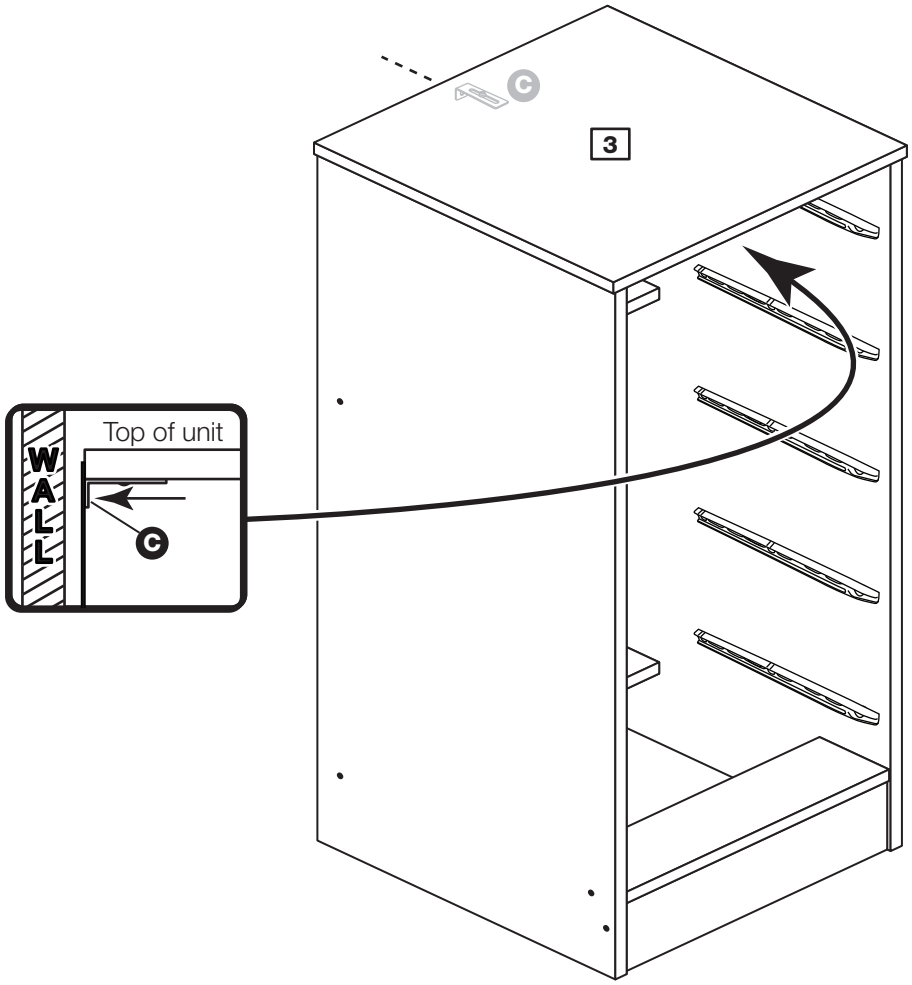

Step 16

Insert the drawers

Lift the front of the drawers whilst inserting to overcome the ‘stop’ system.

Note: To ensure that your drawers runs smoothly, spray a small amount of furniture polish into the grooves.

Assembly is complete

Warning: The unit is heavy. Lift with care.

