
Malibu - 3 Drawer 2+2 Door Robe

Assembly Instructions - Please keep for future reference

305/1805
305/1812
305/1795
305/1829
305/1788

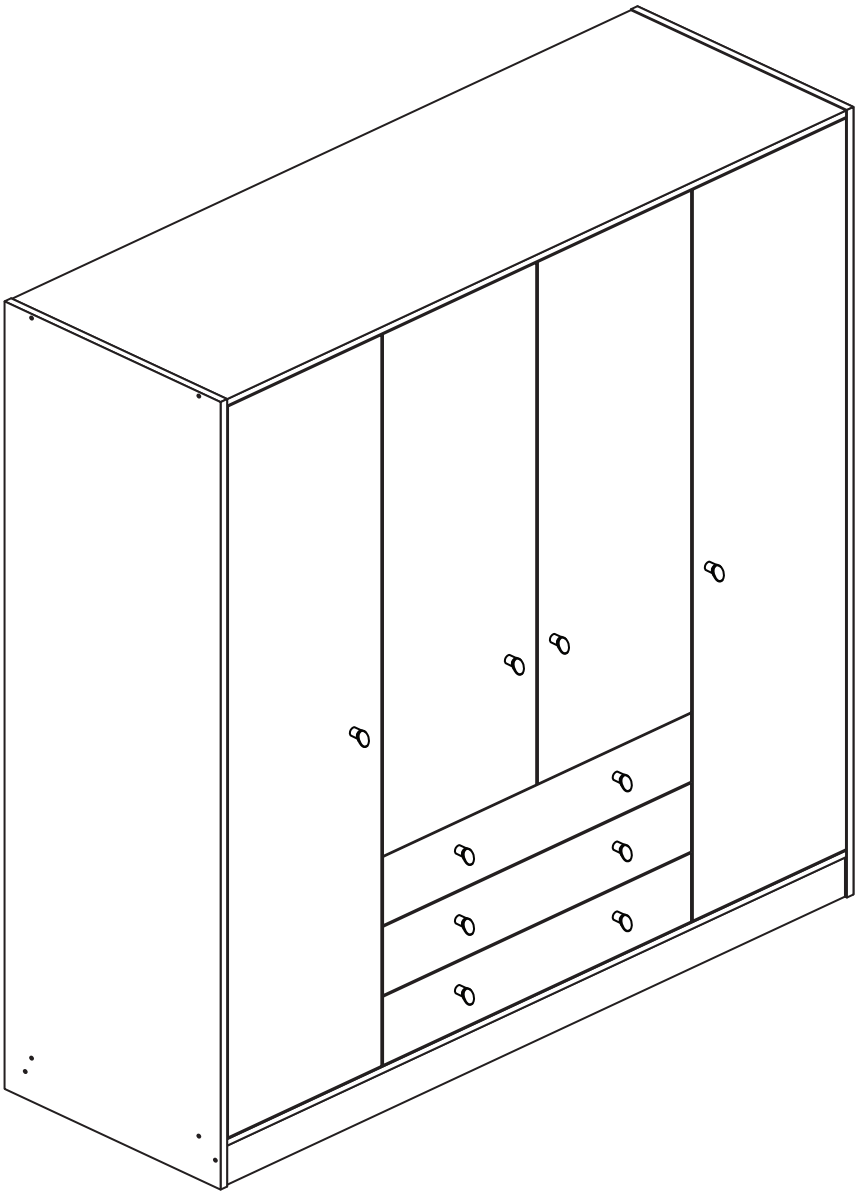

Dimensions

Width - 145.5cm

Depth - 50cm

Height - 181cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 3 - 03/09/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 91kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below



1 Drawer Front *(D2044A)*
(707 x 157mm) x 3



2 Drawer Wrap *(W162)*
(1308 x 95mm) x 3



3 Drawer Base *(T162)*
(299 x 695mm) x 3



4 Top *(D2035A)*
(1423 x 494mm)




5 Base *(D2040A)*
(1423 x 494mm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

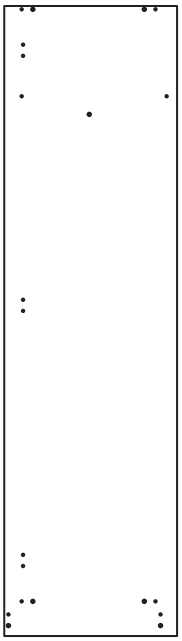


6 Left End *(D2036A)*
(1808 x 496mm)

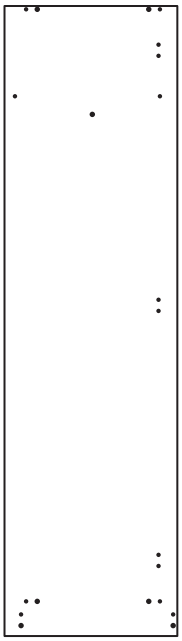

7 Right End *(D2037A)*
(1808 x 496mm)

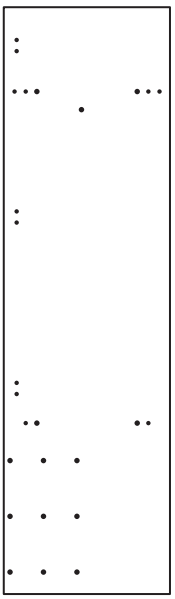

8 Left Divider *(D2038A)*
(1684 x 477mm)

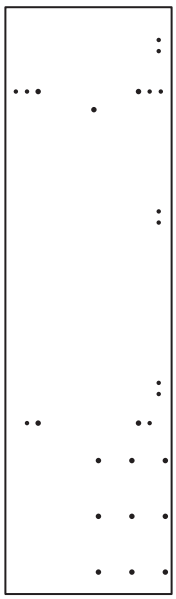


9 Right Divider *(D2039A)*
(1684 x 477mm)



10 Plinth Rail *(D2046A)*
(1423 x 92mm) x 2




11 Fixed Shelf *(D2041A)*
(714 x 476mm) x 2

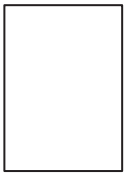


12 Loose Shelf *(D2045A)*
(338 x 476mm) x 2

13 Long Hanging Rail *(FHR704)*
(704mm long)


14 Short Hanging Rail *(FHR330)*
(330mm long) x 2

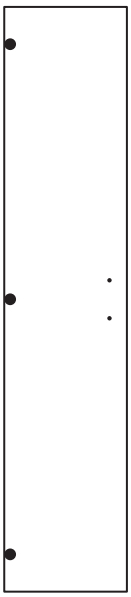


15 Large Door *(D2042A)*
(1678 x 352mm) x 2

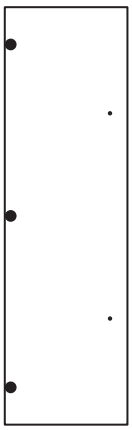

16 Small Door *(D2043A)*
(1198 x 352mm) x 2

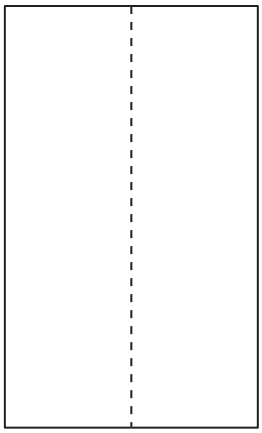

17 Short Back *(X953)*
(1210 x 726mm)




18 Long Back *(X952)*
(1710 x 362mm) x 2

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 28

B 

Metal dowel *(F901)* x 6

C 

Small locking nut *(F3)* x 6

D 

40mm Screw *(F910)* x 28

E 


25mm Screw (*F50)* x 10

F 


13mm Screw *(F79)* x 1

G 


13mm Screw *(F63)* x 30

H 


Nail *(F51)* x 44

I 

Shelf stud *(F110)* x 8

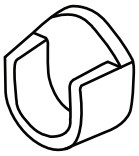J 


Rail holder *(F1014)* x 6

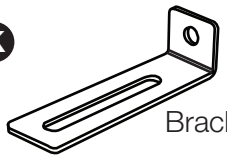K 


Bracket (*F327* x 1)

L 

Hinge plate (*F523)* x 12

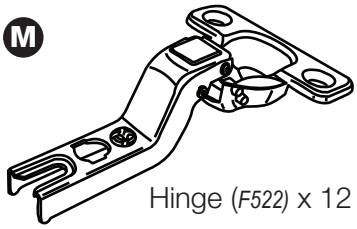M 


Hinge (*F522)* x 12

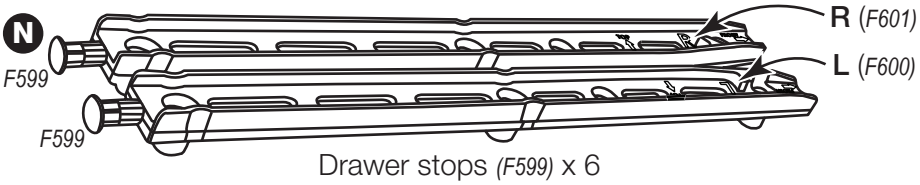N 

Drawer stops *(F599)* x 6
Runners *(F600)* x 3 *and (F601)* x 3

O 

Handle *(F631)* x 10

P 

Back holder *(F276)* x 8

Q 

Nail screw *(F277)* x 8

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

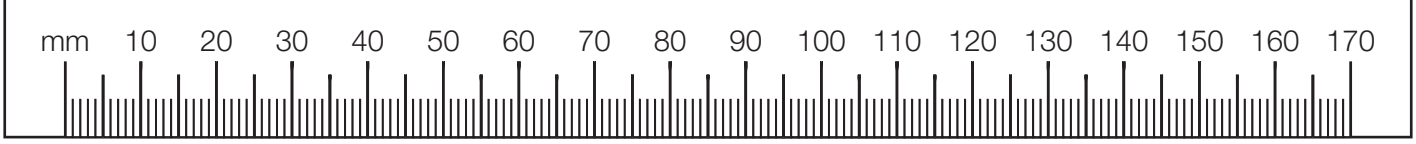

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Prepare the 3 drawer fronts and 3 drawer wraps

a: Screw 2 metal dowels (B) into the holes on the back of the drawer fronts [1].

Note: Tighten the metal dowels up fully against the panels.

b: Insert 2 small locking nuts (C) into the holes shown on the drawer wrap [2].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

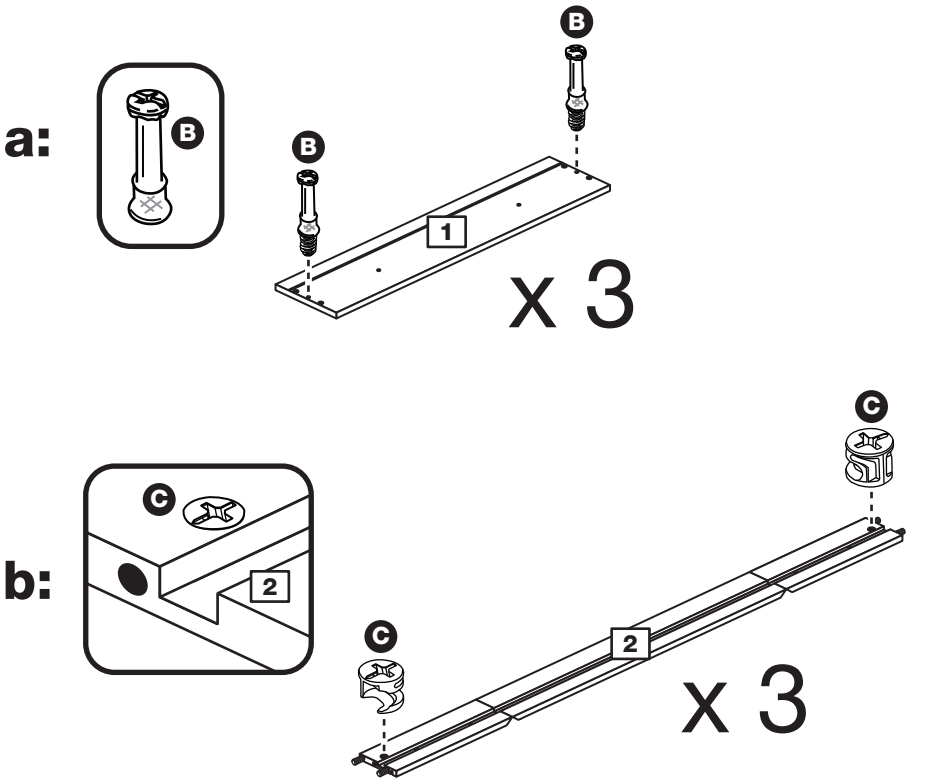


Step 2

Assemble the drawers

a: Place the drawer base [3] into the narrow slot on the drawer wrap [2]. Fold the wrap around the base.

b: Turn each of the drawer wrap assemblies over and push them onto the back of the drawer fronts [1].

Note: Turn the locking nuts (C) clockwise to secure the panels - more than 1/2 a turn.

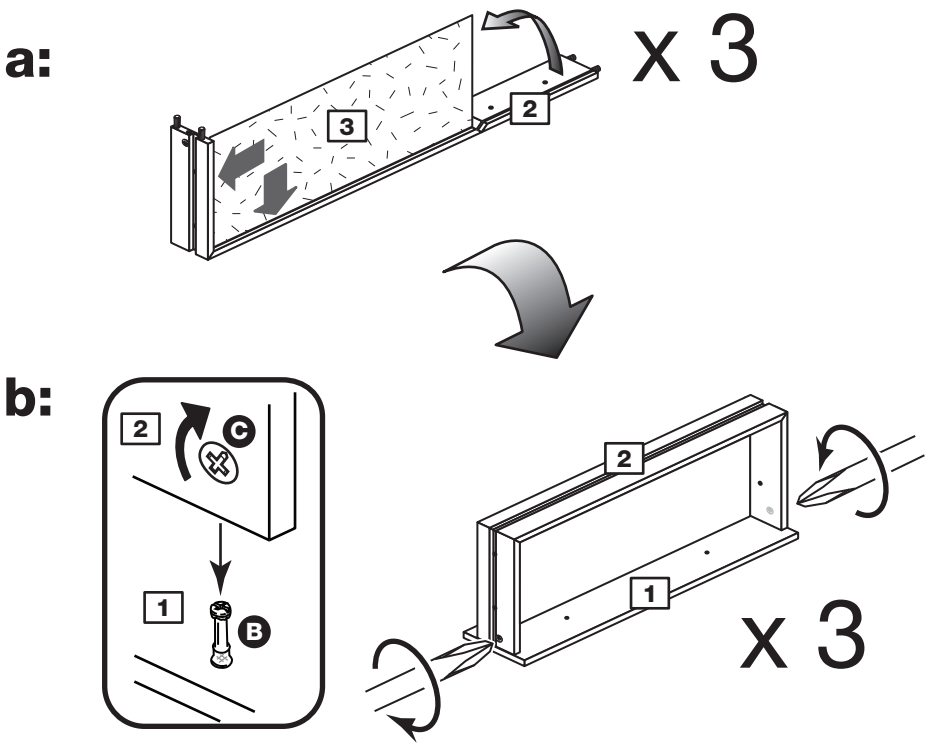


Step 3

Push the drawer stops into the drawer wraps

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners N.

Push the drawer stops fully through the large drawer wraps 2 from the inside.

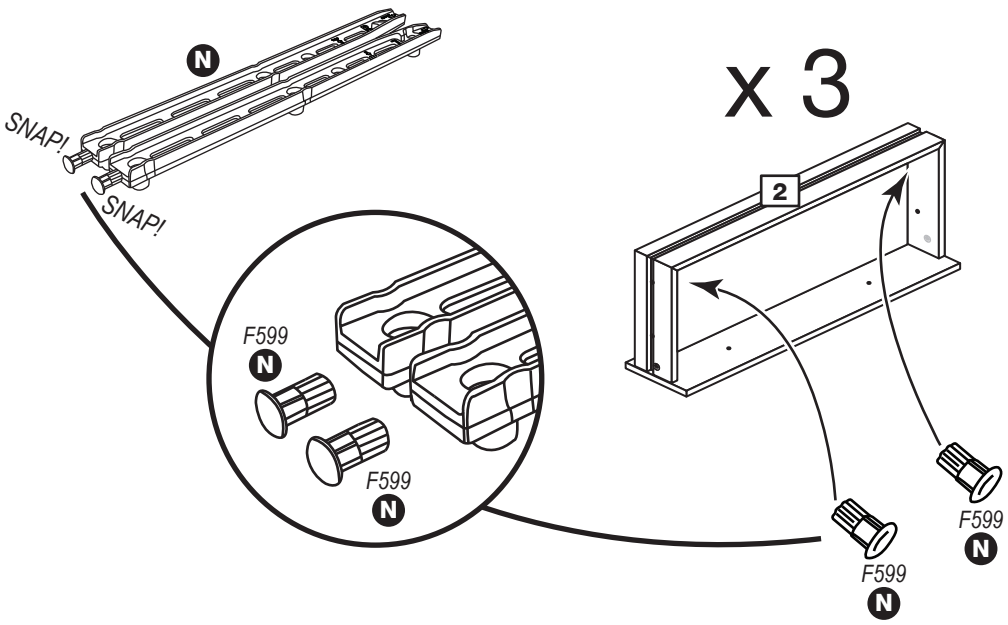


Step 4

Attach the handles

Attach 2 handles O to each drawer front 1 using screws E.

Note: Do not overtighten the screws.

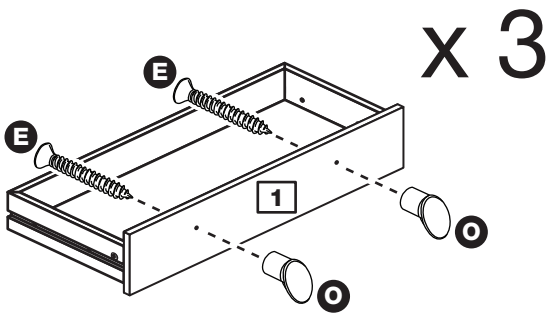


Step 5

Prepare the 2 fixed shelves

Tap 4 wooden dowels A into each of the 2 fixed shelves 11.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

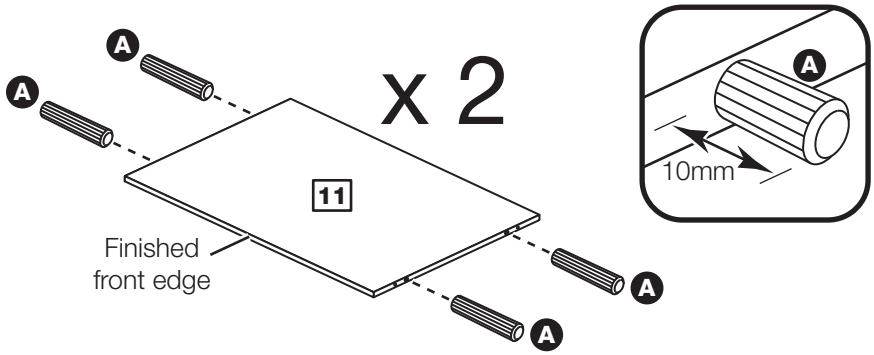

Step 6

Prepare the left divider

Separate runners N.

a: Push fit the 3 left runners N marked '**L**' into the holes shown on the left divider 8.

Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.


Push a rail holder J into the left divider 8. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.


Fit 3 hinge plates L onto the left divider 8, making sure that the slot is facing towards the finished front edge.


Turn the left divider over


b: Tap 4 wooden dowels A into the left divider 8.

Push a rail holder J into the left divider 8. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.

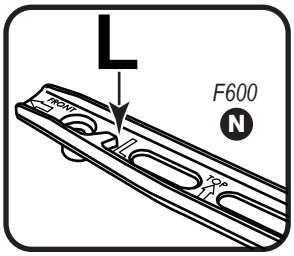

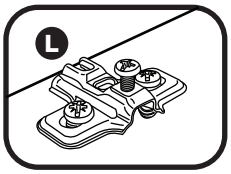

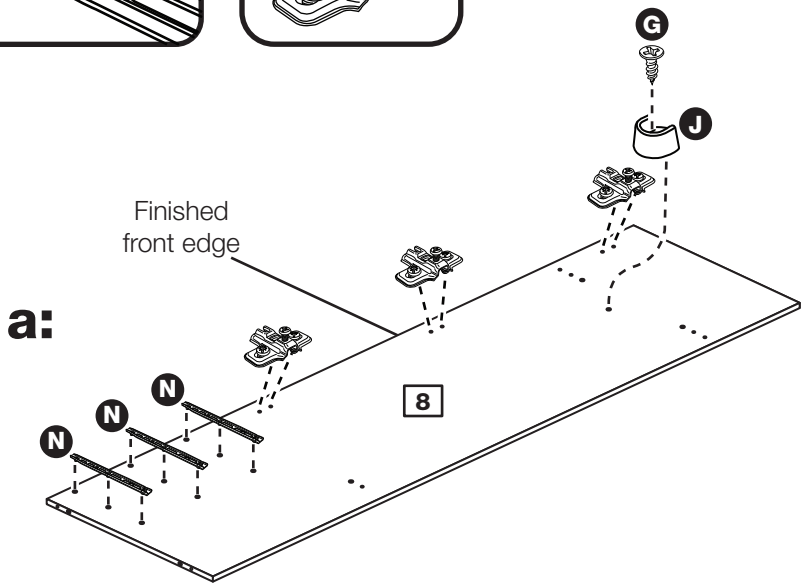

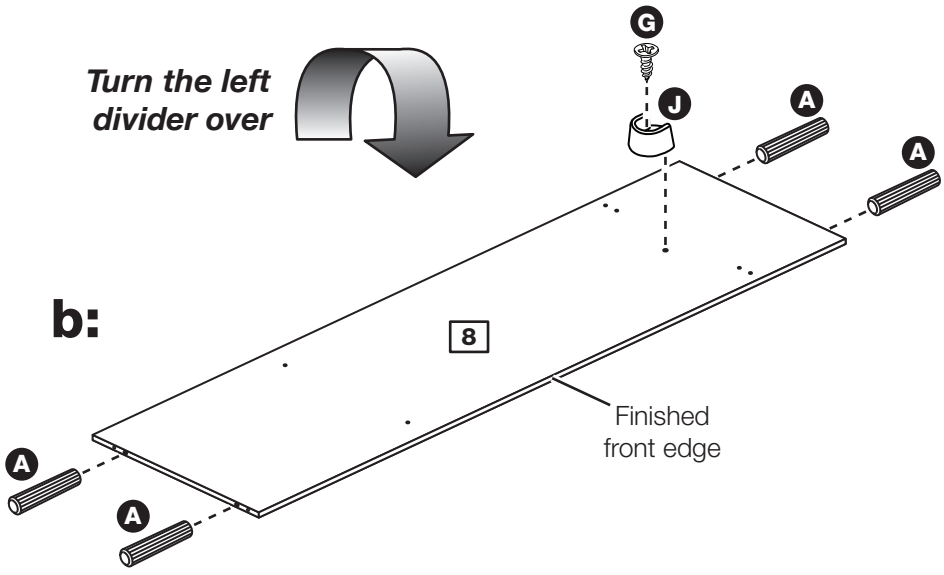

Step 7

Prepare the right divider

a: Push fit the 3 right runners (N) marked '**R**' into the holes shown on the right divider [9].


Push a rail holder (J) into the right divider [9]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).


Fit 3 hinge plates (L) onto the right divider [9], making sure that the slot is facing towards the finished front edge.


Turn the right divider over

b: Tap 4 wooden dowels (A) into the right divider [9].

Push a rail holder (J) into the right divider [9]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).

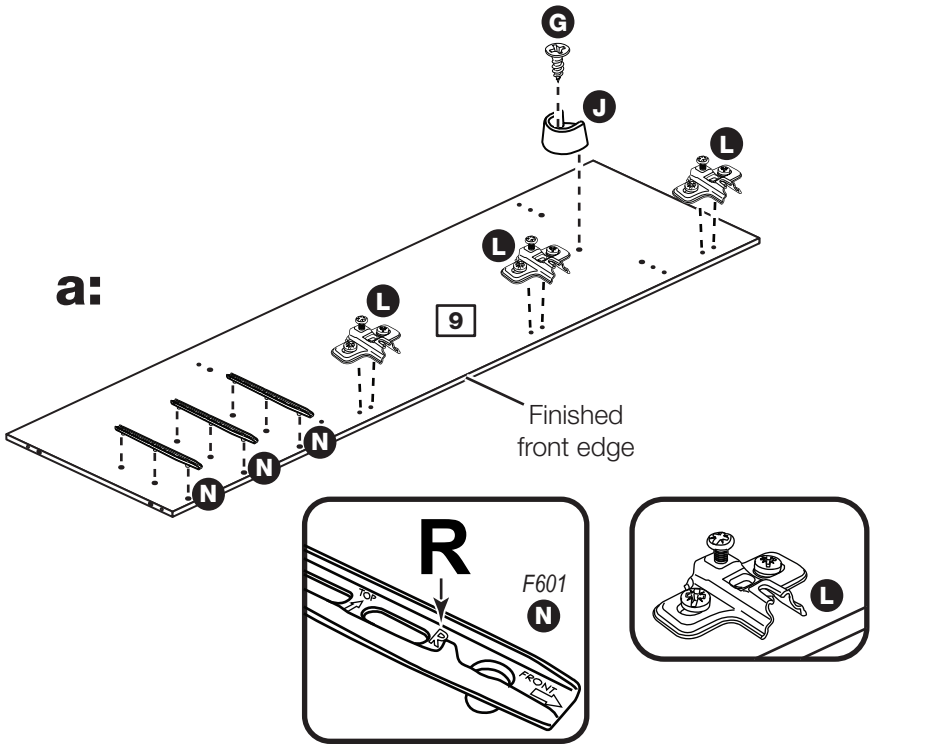

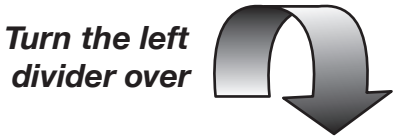


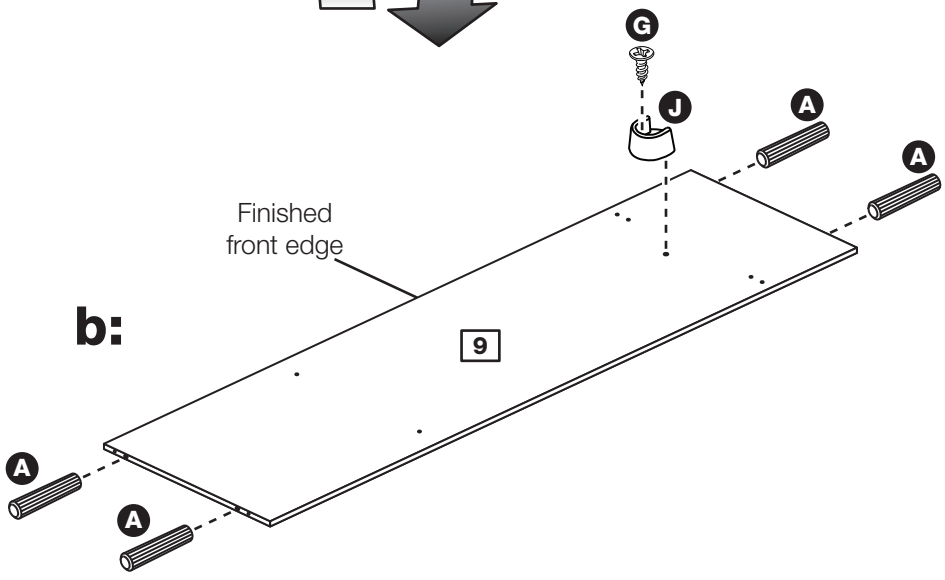

Step 8

Fit the fixed shelves to the left divider


Push the 2 fixed shelves 11 onto the left divider 8 and secure with 4 screws D.

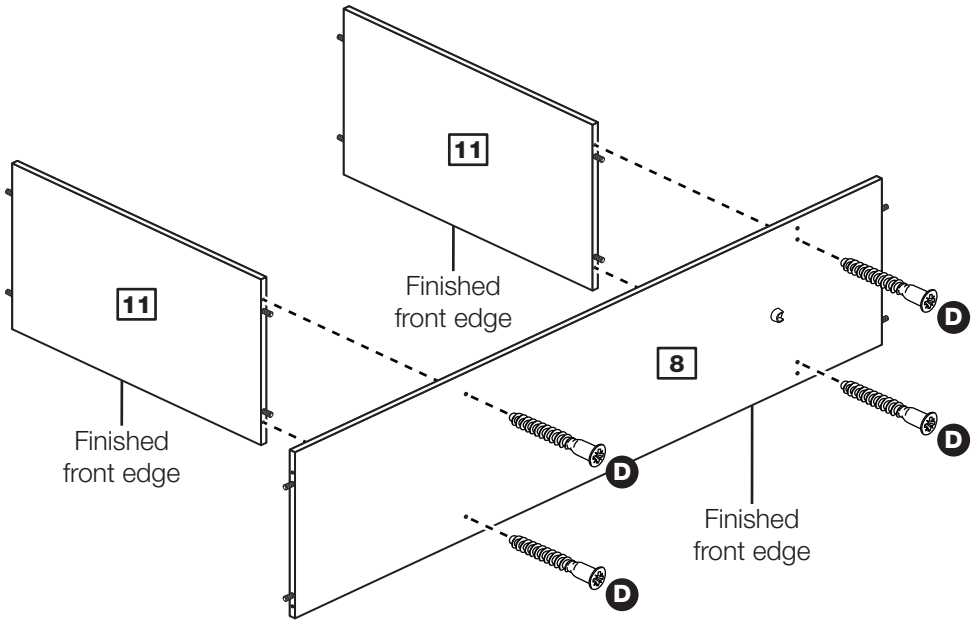

Step 9

Fit the right divider

Push the right divider 9 onto the 2 fixed shelves 11 and secure with 4 screws D.

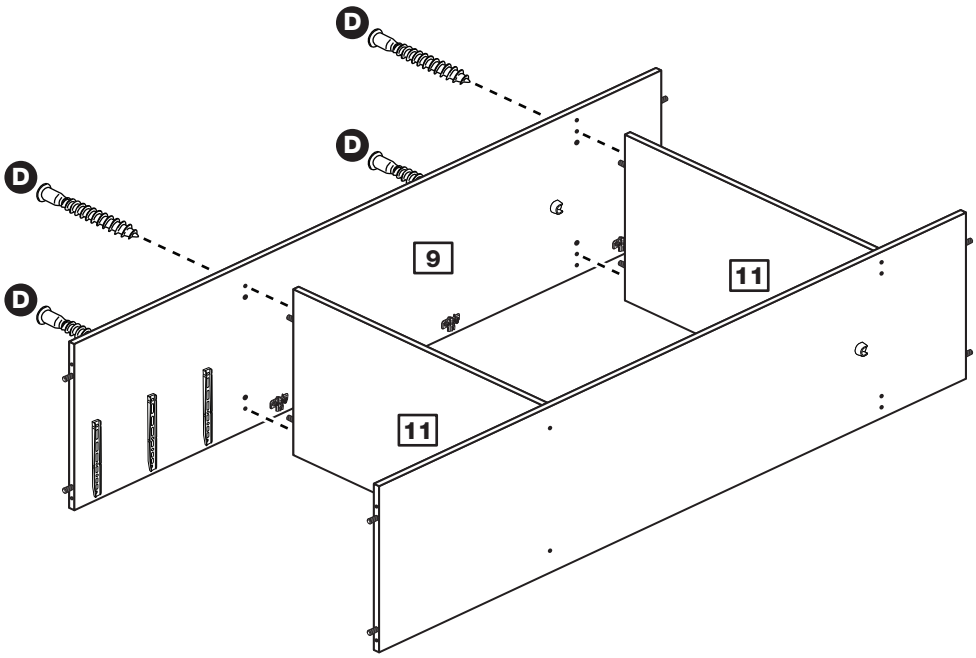


Step 10

Prepare the top and base

Tap 4 wooden dowels A into the top 4.


Tap 4 wooden dowels A into the base 5.

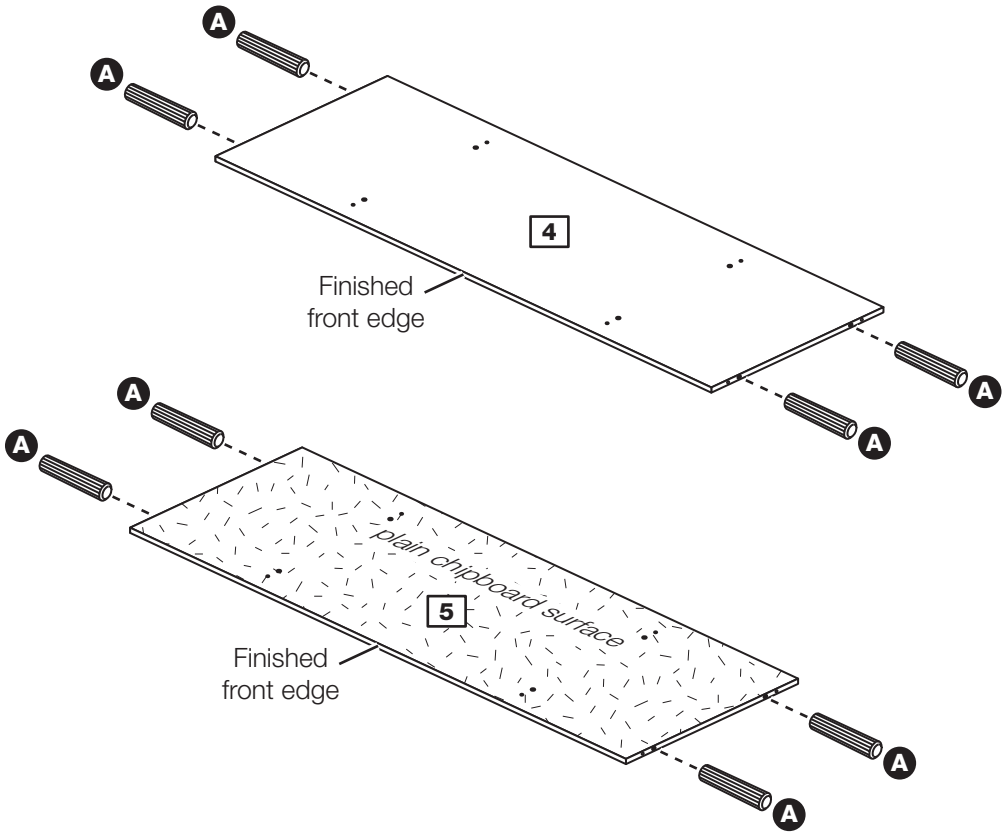

Step 11

Fit the top and base

Push the top 4 and base 5 onto the 2 dividers 8 and 9 and secure with 8 screws D.

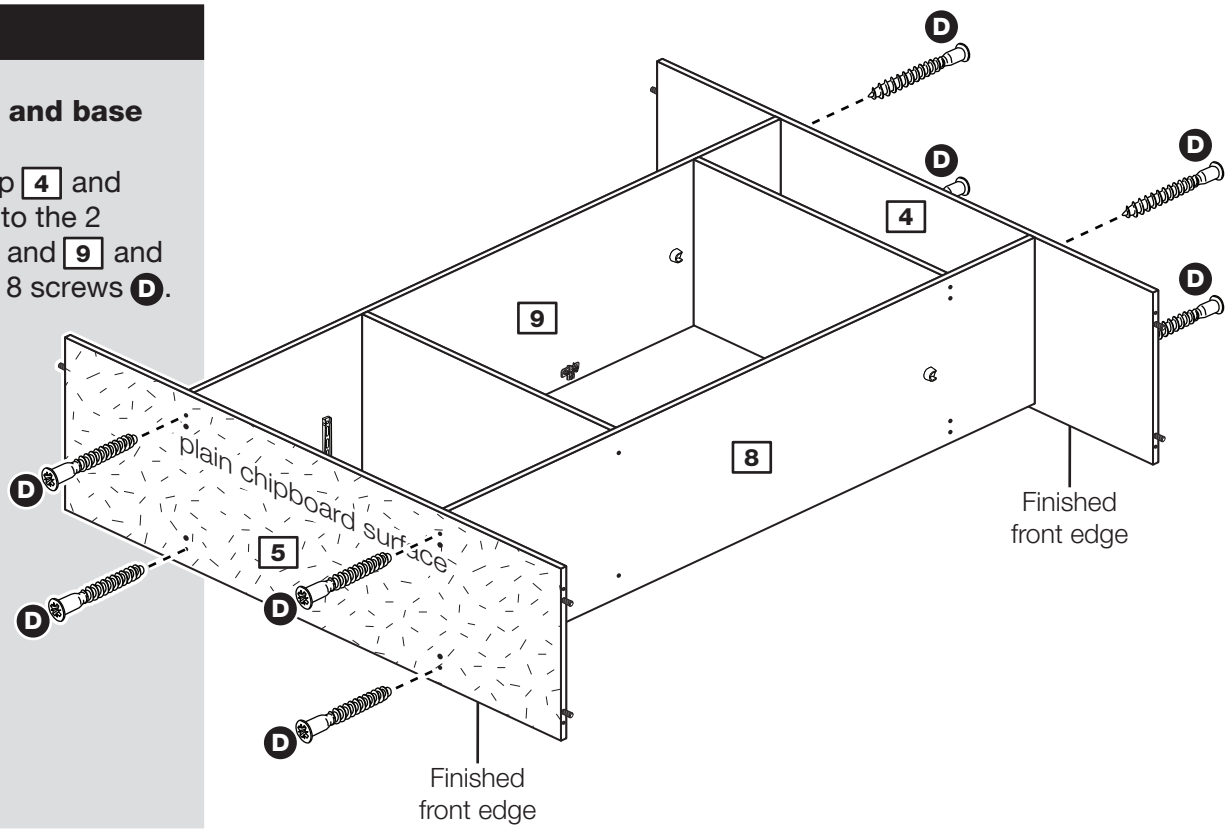


Step 12

Prepare the left end

Push a rail holder J into the left end 6. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.

Fit 3 hinge plates L onto the left end 6, making sure that the slot is facing towards the finished front edge.

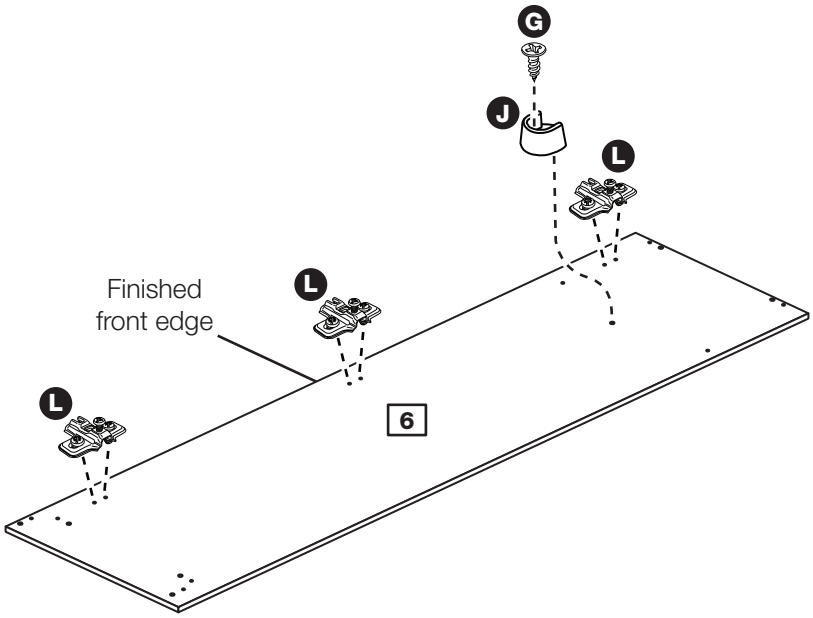


Step 13

Prepare the right end

Push a rail holder J into the right end 7. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.


Fit 3 hinge plates L onto the right end 7, making sure that the slot is facing towards the finished front edge.

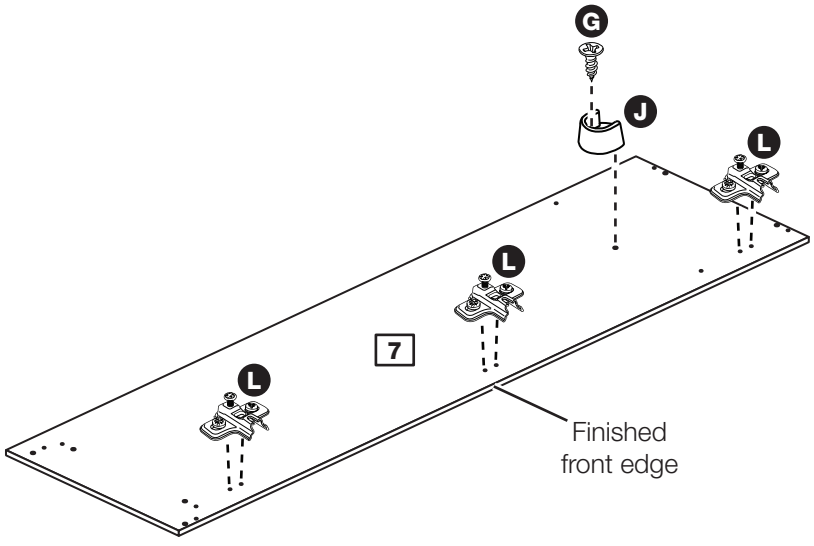

Step 14

Fit the right end


Push the right end 7 onto the top 4 and base 5 and secure with 4 screws D.

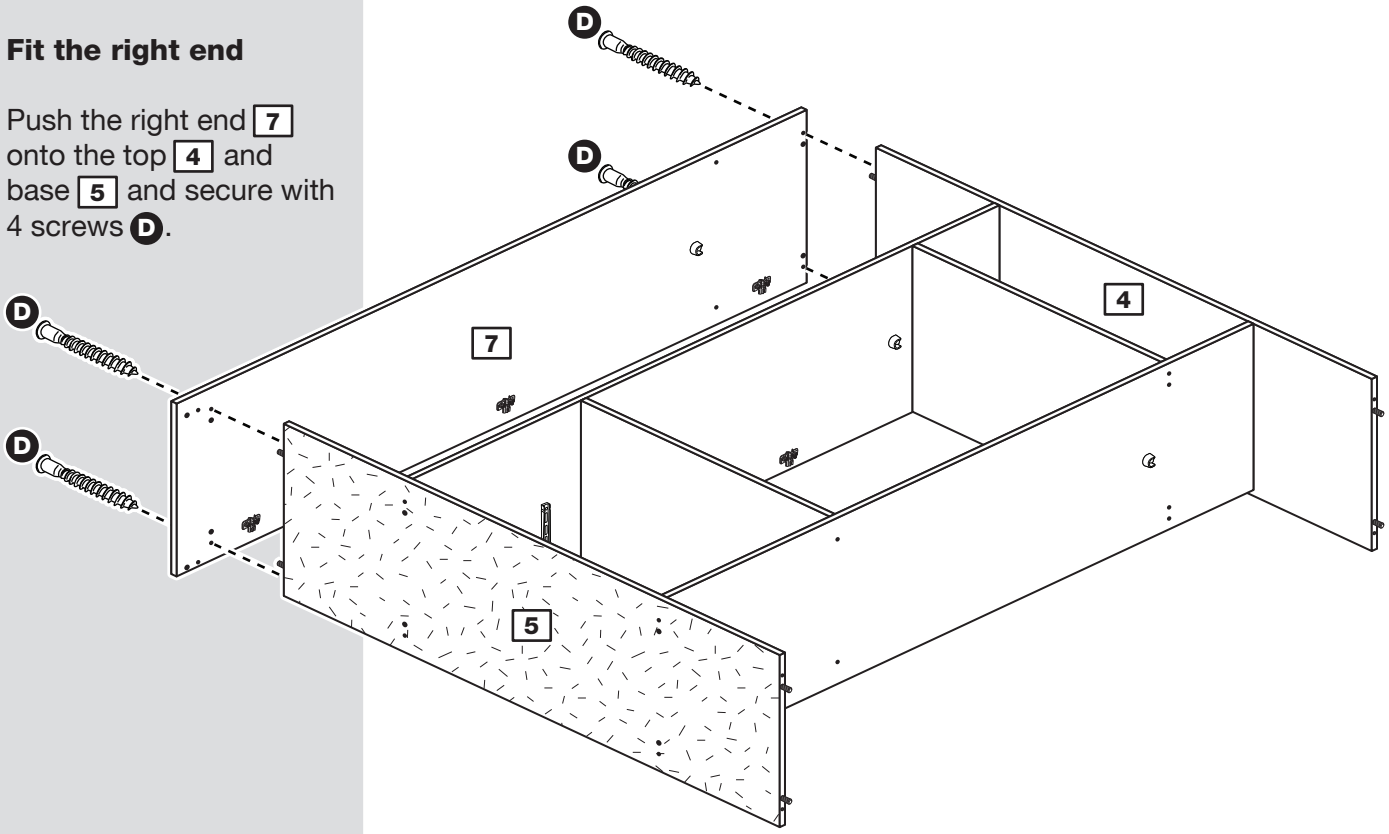

Step 15

Prepare the 2 rails

Tap 2 wooden dowels A into each of the 2 rails 10.

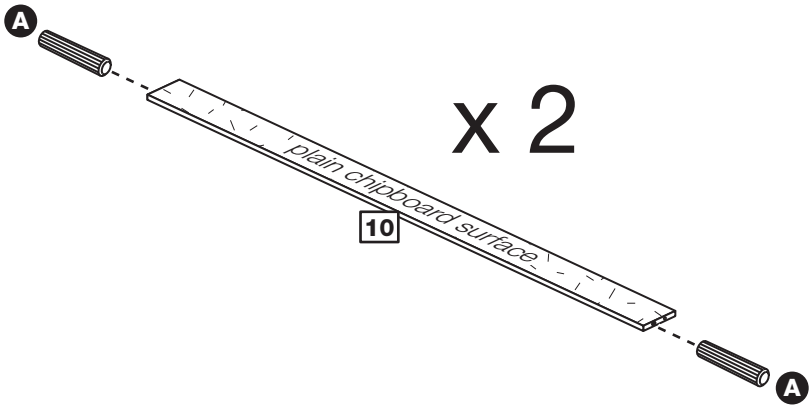


Step 16

Fit the 2 rails

2 people are needed here

Push the 2 rails 10 onto the right end 7 and secure with 2 screws D.

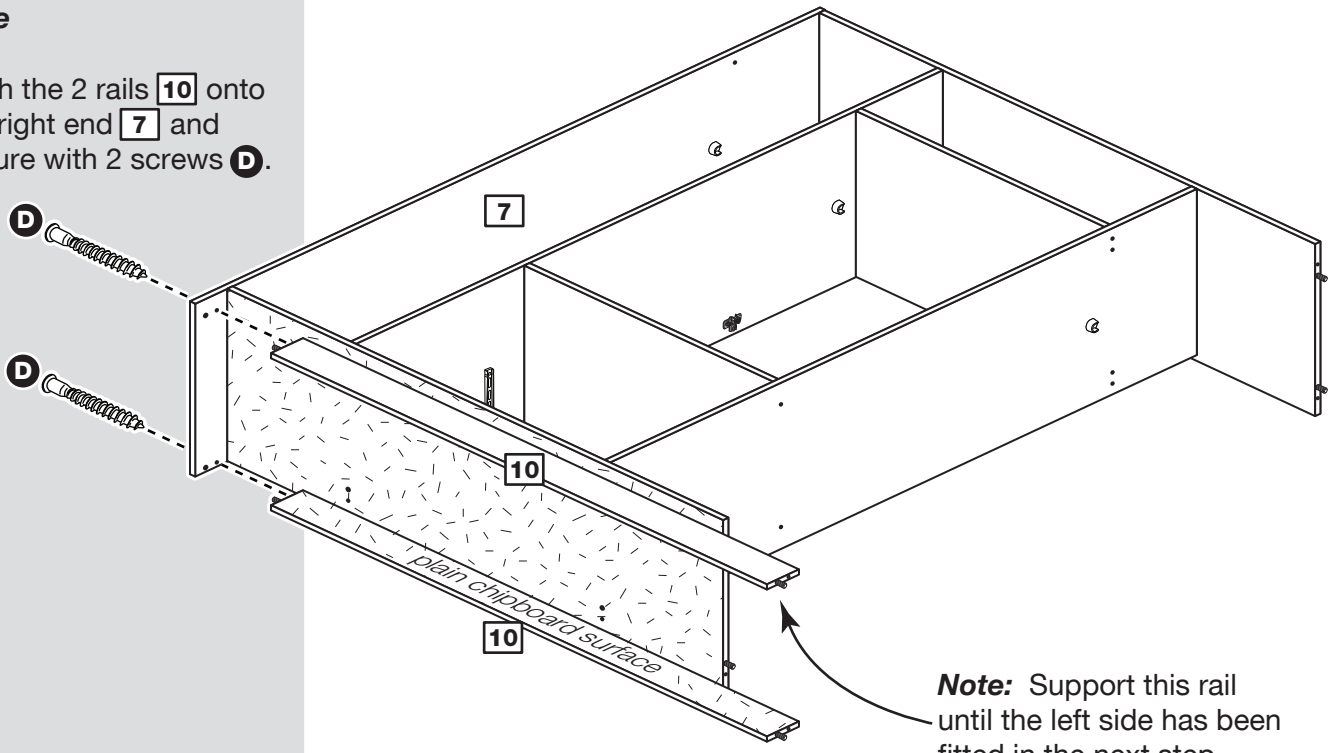


Note: Support this rail until the left side has been fitted in the next step.

Step 17

Fit the left end

Push the left end 6 onto the top 4, the base 5 and the 2 rails 10 and secure with 6 screws D.

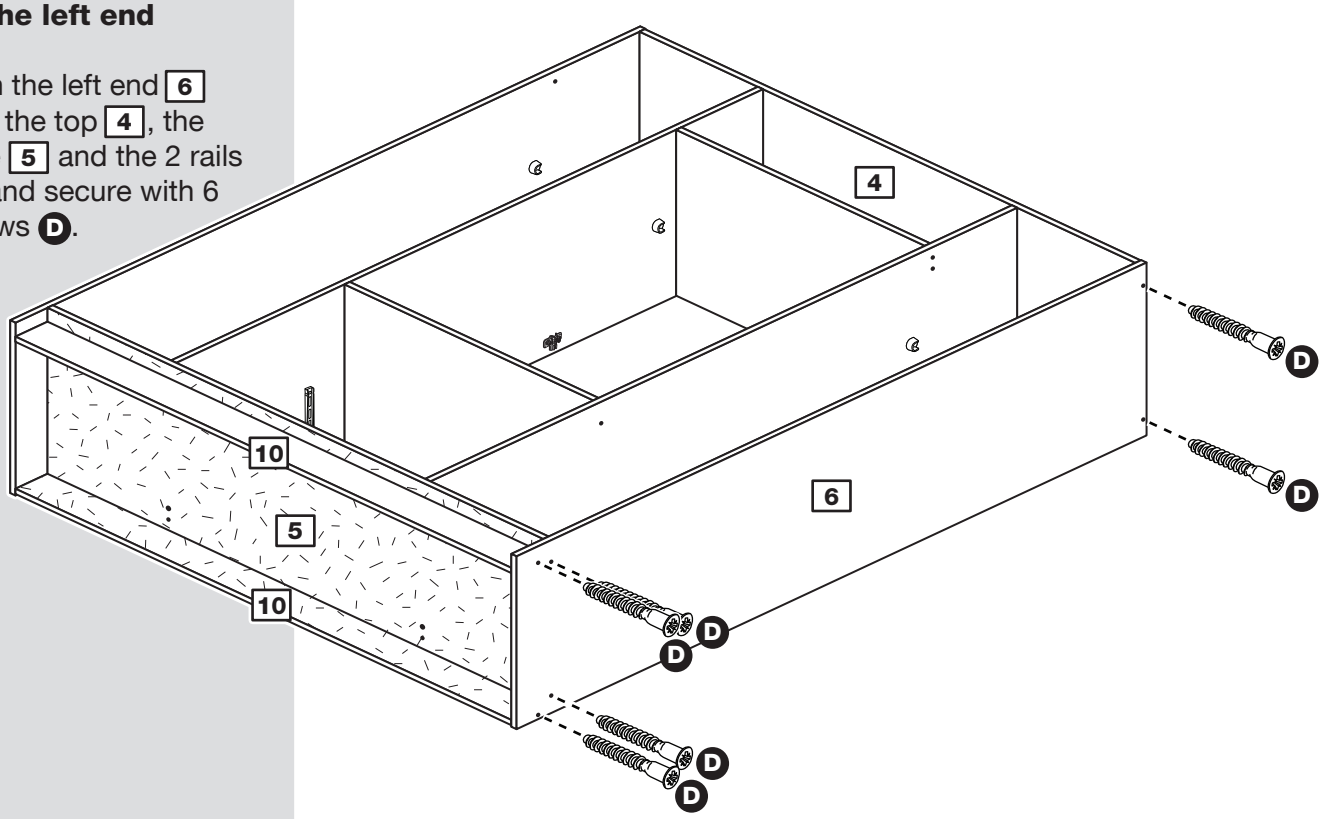

Assembly Instructions

Step 18

Fit the back panels

a: Square up the unit by making sure that measurement **x:x equals y:y.**


Place the short back 17 and the 2 long backs 18 down onto the unit as shown.


Make sure that the 3 backs are pushed up tight against each other and that they meet over the back edges of the dividers.

b: Nail H around the outside edges of the 3 backs.

Note: Do not nail where the backs meet. Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

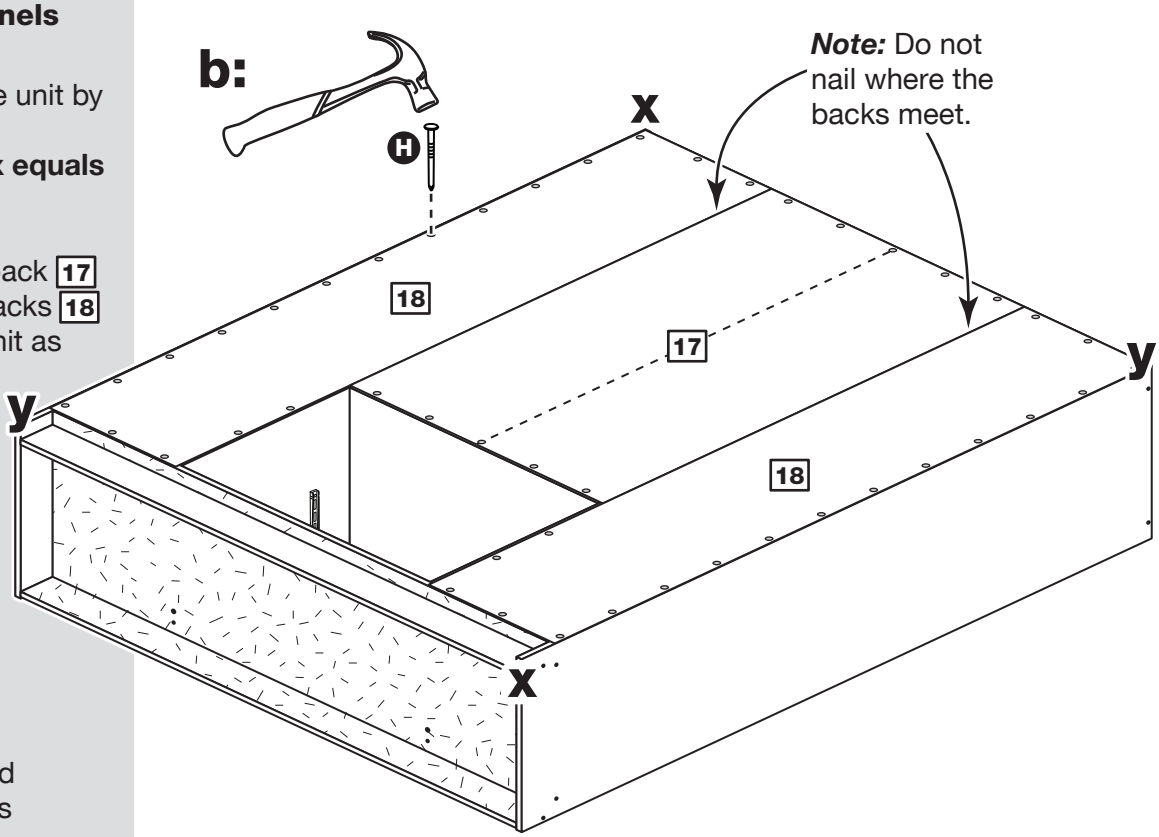

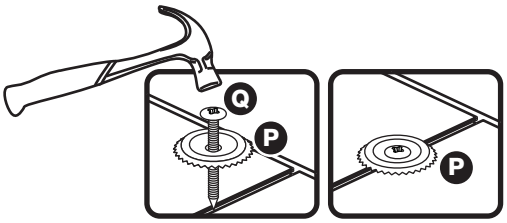


Step 19

Secure the backs

Tap the nail screws Q through the back holders P and down between the backs 17 and 18 into the back edge of the divider.

Keep tapping the nail screws Q in until the back holders P dig into the small and large back.

Stand the unit up for the next step.

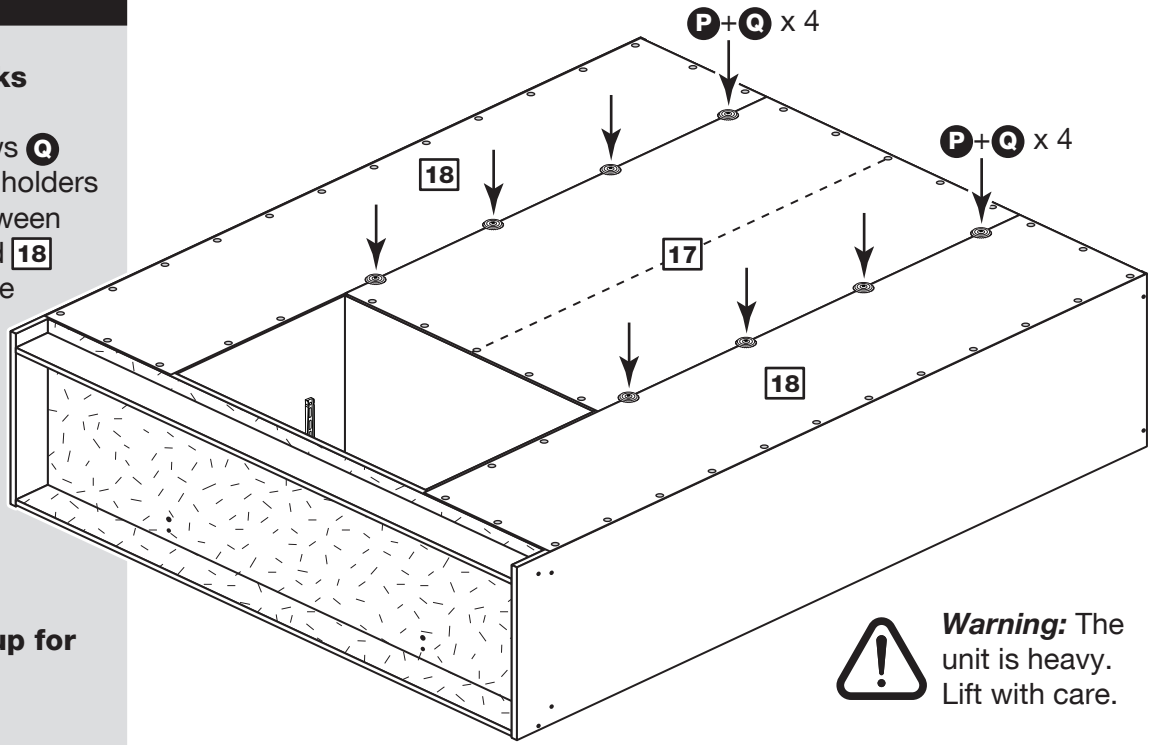

Warning: The unit is heavy. Lift with care.


Step 20


Fit the hanging rails and drawers

Push the large hanging rail 13 and 2 small hanging rails 14 into the rail holders J.

Lift front of drawer whilst inserting to overcome the 'stop' system.

Note: To ensure that your drawer runs smoothly, spray a small amount of furniture polish into the grooves.

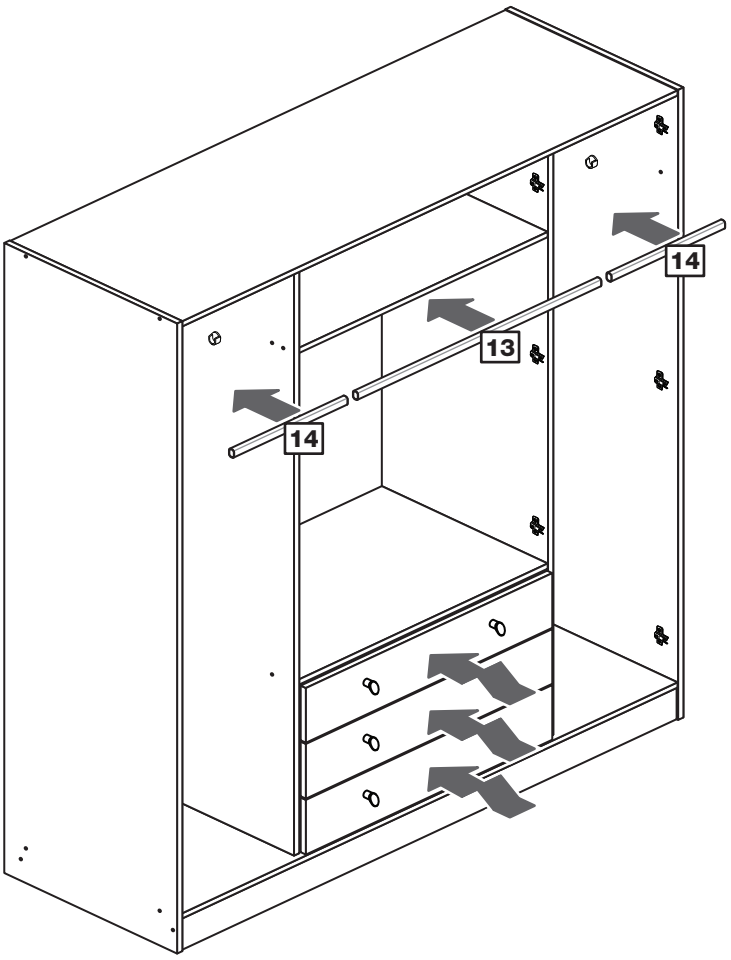


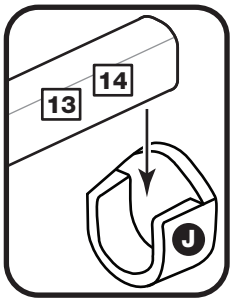

Step 21

Fit the shelf studs


For each of the 2 loose shelves 12, insert 4 shelf studs I.

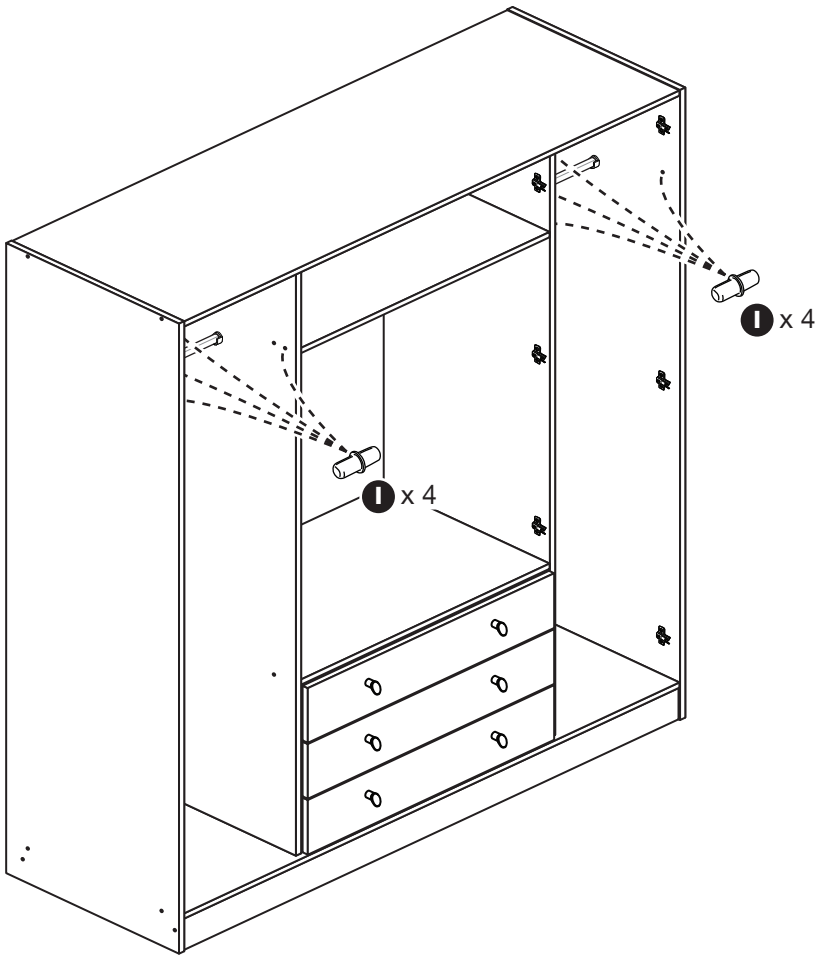

Step 22

Fit the loose shelves

Lower the 2 loose shelves 12 down onto the shelf studs I.

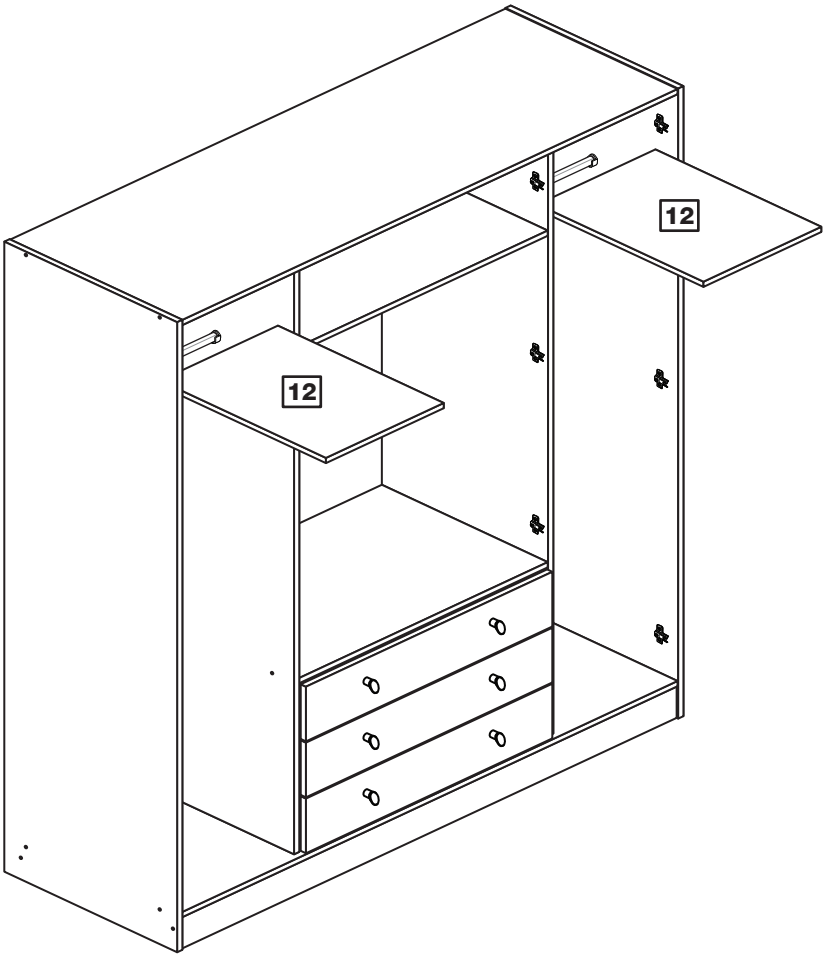


Step 23


Prepare the 4 doors

Push fit 3 hinges M into each large door 15 and small door 16.

Secure each hinge with 2 screws G.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

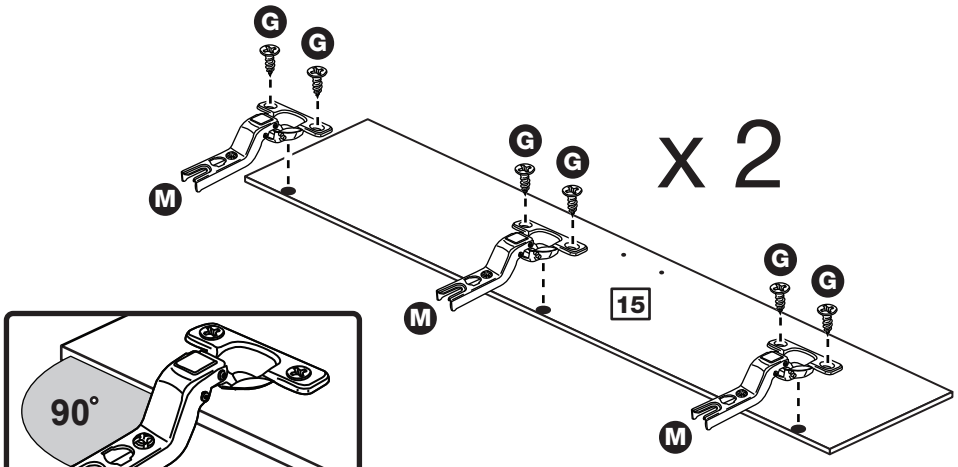

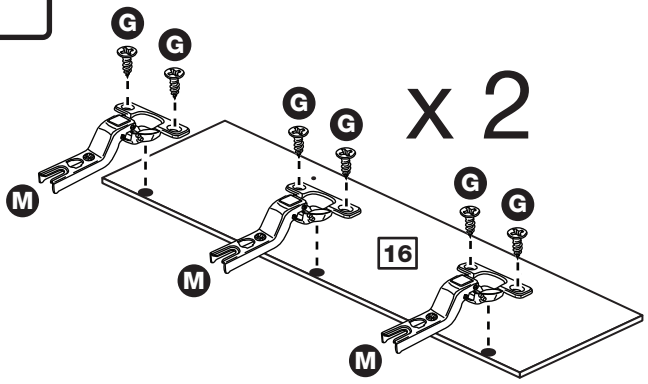

Step 24

Drill a handle hole in each large door

Important: Please follow these instructions carefully.

Lay the 2 large doors 15 down onto a smooth surface.


Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

IMPORTANT
Carefully choose which hole you need to drill in each door

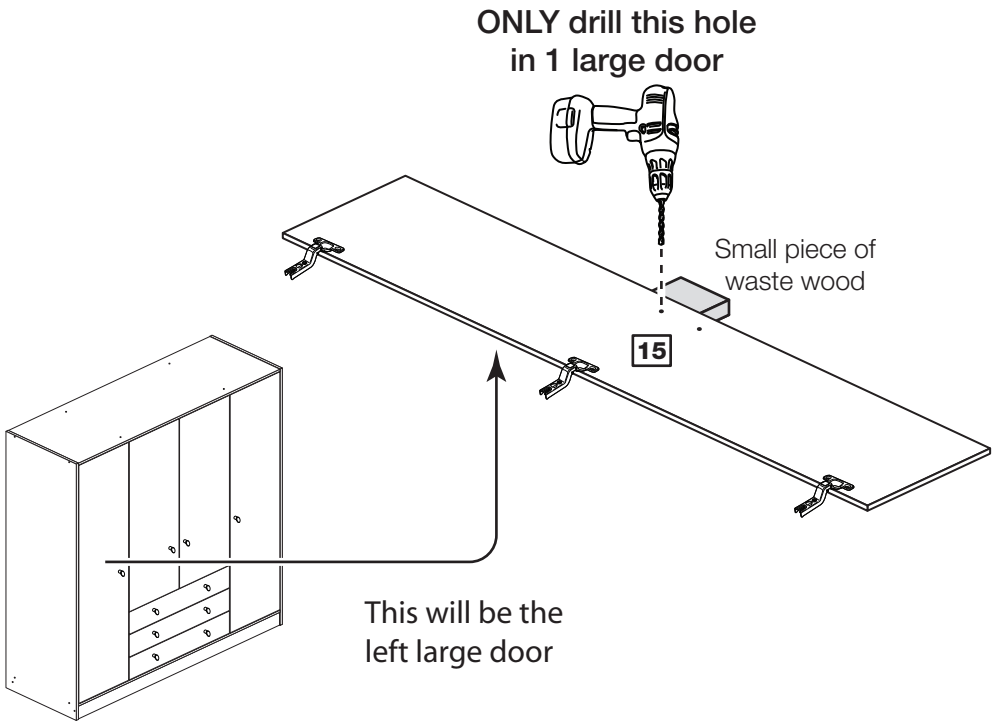

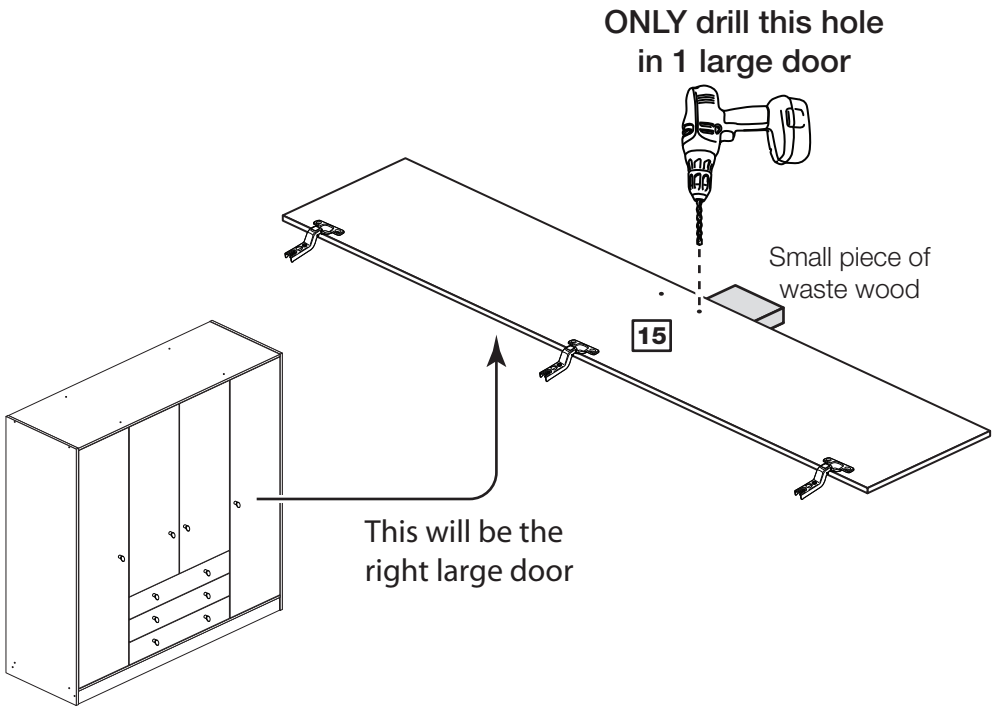

Step 25

Drill a handle hole in each small door

Important: Please follow these instructions carefully.

Lay the 2 small doors **16** down onto a smooth surface.


Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

IMPORTANT
Carefully choose which hole you need to drill in each door

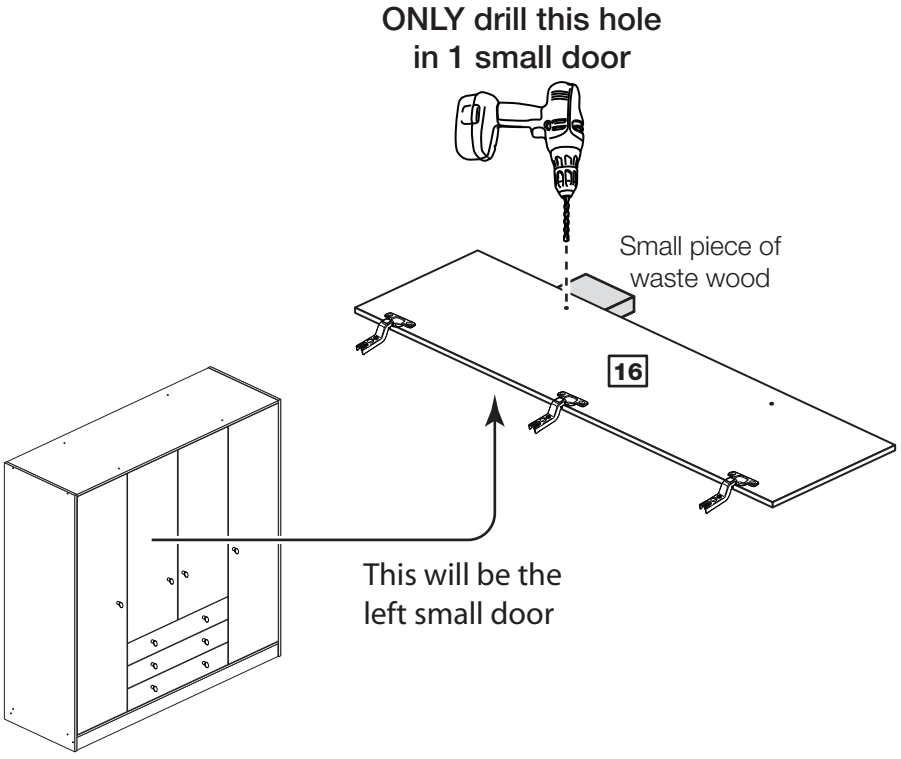

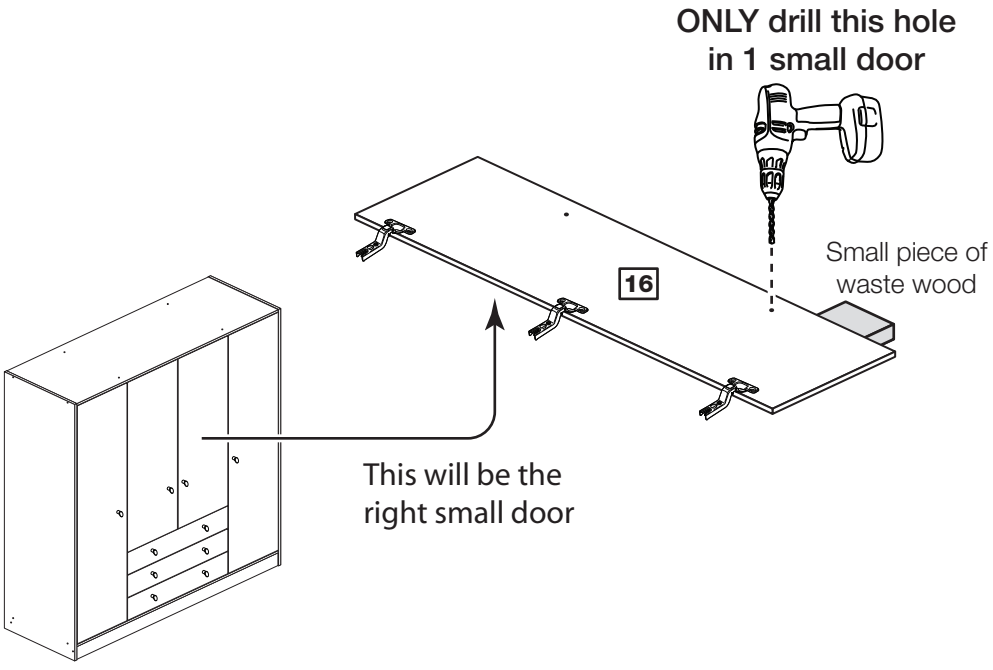

Step 26

Fit doors and handles

Note: The easiest way to attach each door 15 and 16 is to fit the top hinge first, then align and fit the other hinges.


a: Push the hinge M onto the front part of the hinge plate L.
The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge M FLAT against the hinge plate L as you slide it across as far as it will go. Tighten screw A.


c: The hinge M must be flat against the hinge plate L prior to any adjustment.

d: The hinge M must NOT be AT AN ANGLE to the hinge plate L when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure.
Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle O to each door 15 and 16 using screws E.

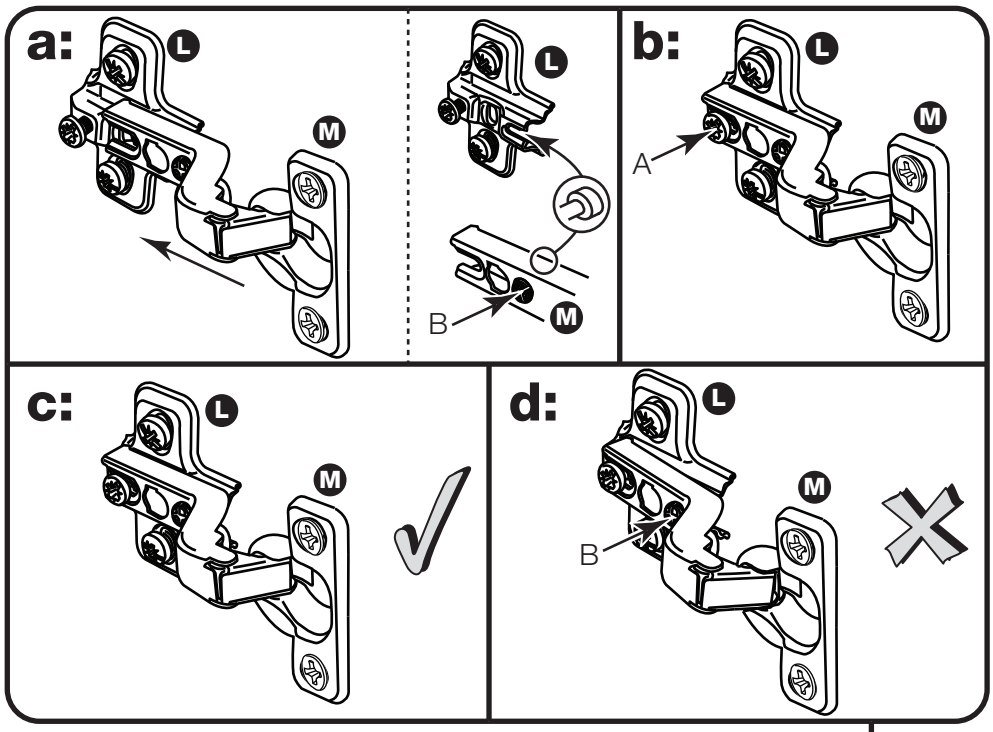

Note: When fitting the doors, make sure that the handle hole you had to drill is nearest to the bottom of the door.

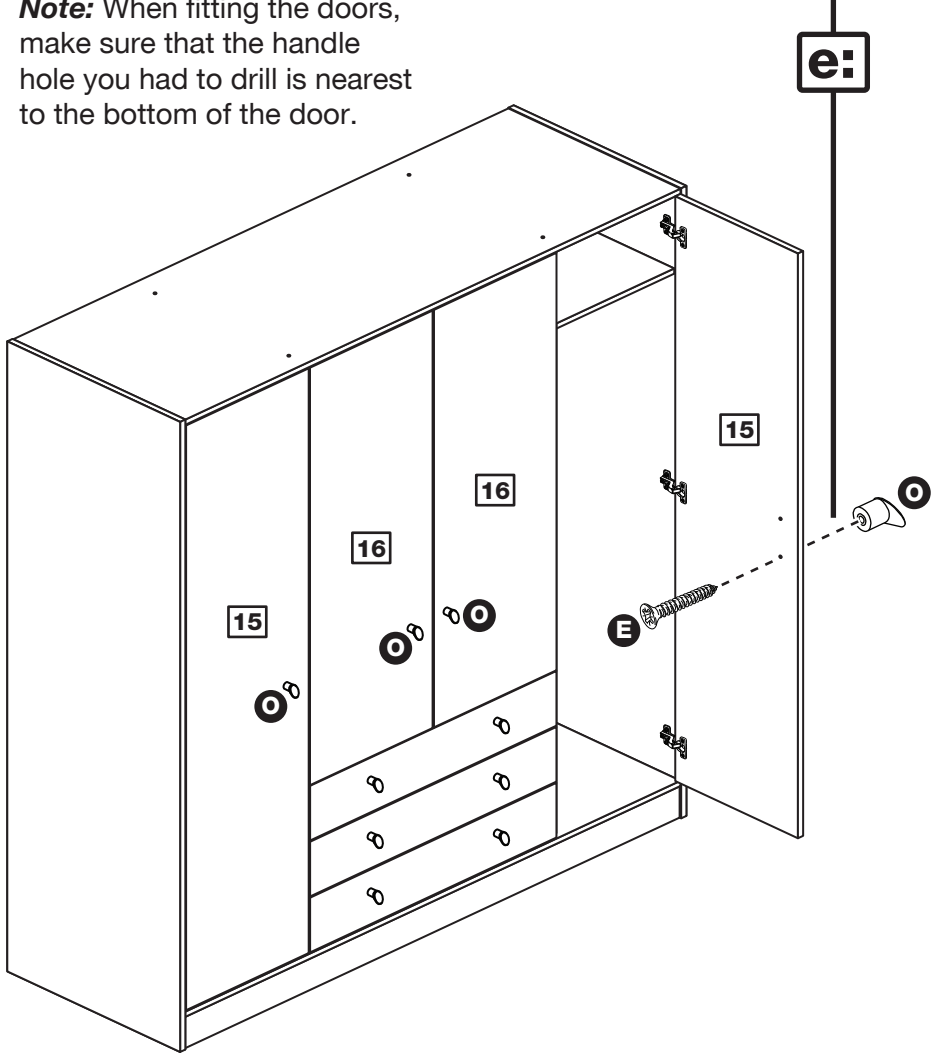

Step 27


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

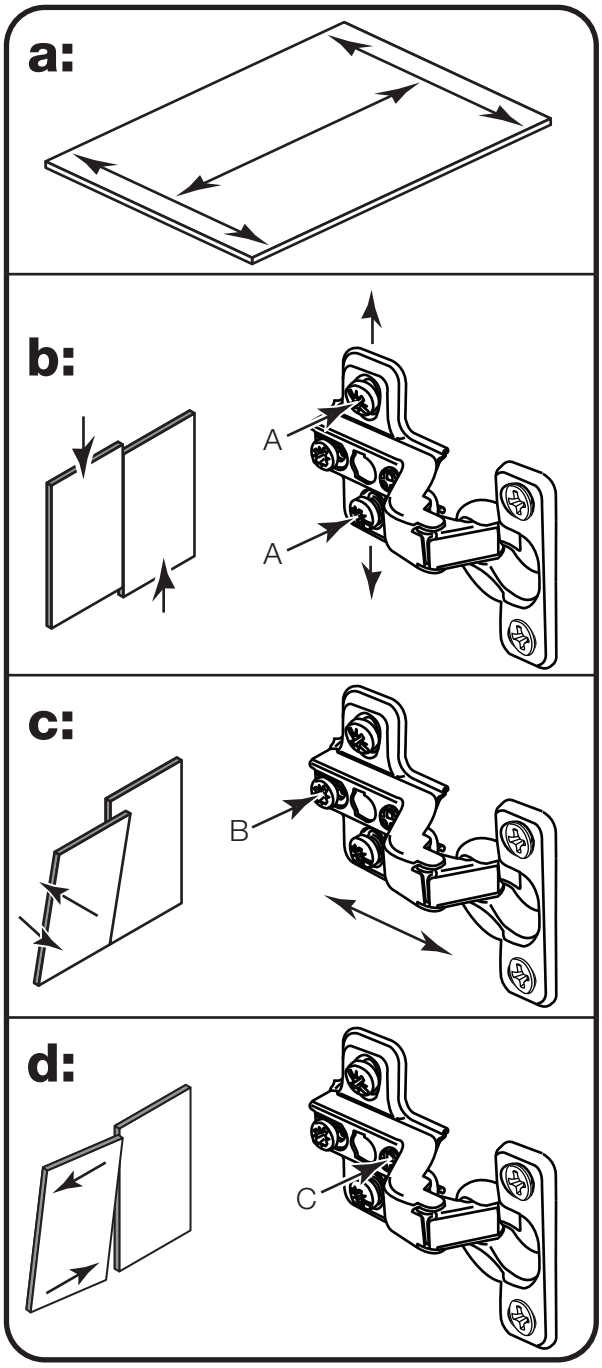

Step 28

Attach bracket to top

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket K fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket K loosely onto the top of the unit using screw F and mark the wall for the wall fixing.


Swivel the bracket K away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket K back and fix the bracket to the wall, then tighten screw F.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete


Warning: The unit is heavy. Lift with care.

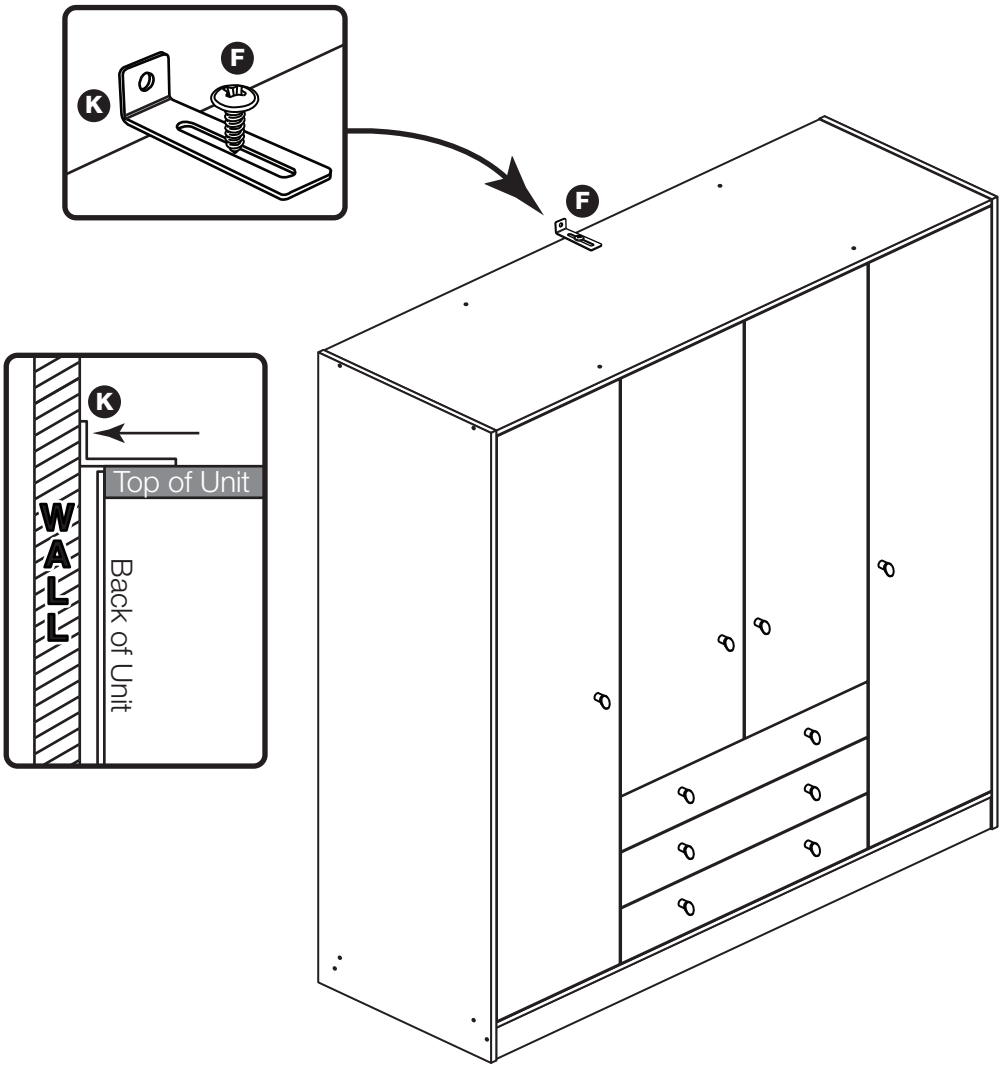

Malibu - 3 Drawer 2+2 Door Robe

Assembly Instructions - Please keep for future reference

305/1805
305/1812
305/1795
305/1829
305/1788

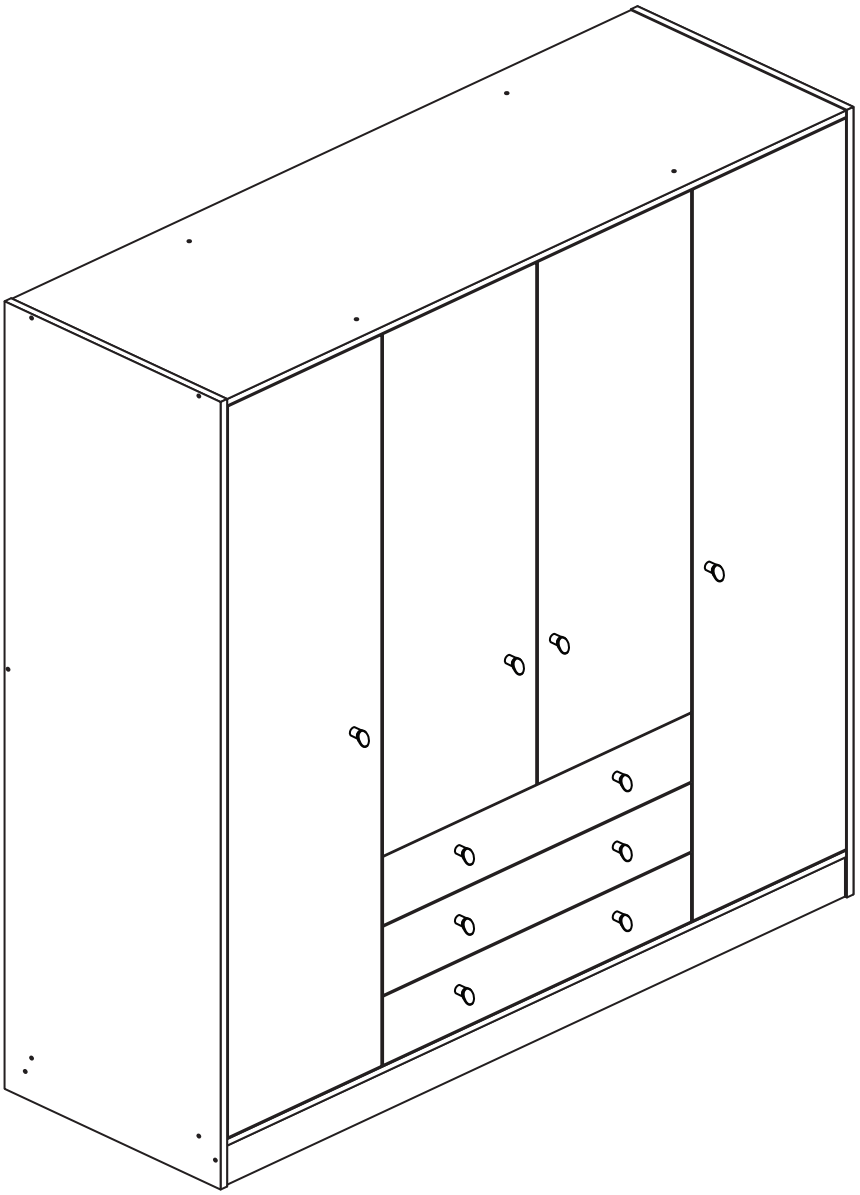

Dimensions
Width - 145.5cm
Depth - 50cm
Height - 181cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 4 - 19/09/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 91kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below



1 Drawer Front *(D2044A)*
(707 x 157mm) x 3



2 Drawer Wrap *(W162)*
(1308 x 95mm) x 3



3 Drawer Base *(T162)*
(299 x 695mm) x 3



4 Top *(D2035A)*
(1423 x 494mm)




5 Base *(D2040A)*
(1423 x 494mm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

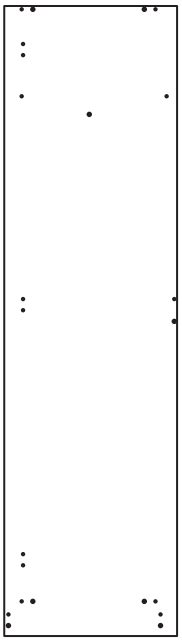


6 Left End *(D2036B)*
(1808 x 496mm)

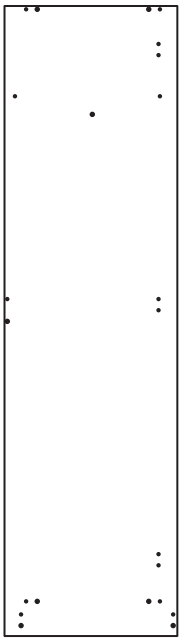

7 Right End *(D2037B)*
(1808 x 496mm)

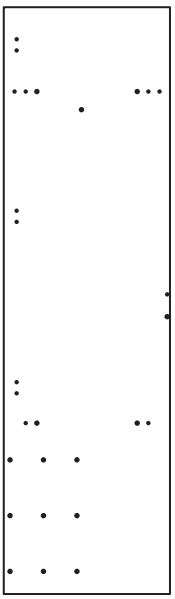

8 Left Divider *(D2038B)*
(1684 x 477mm)

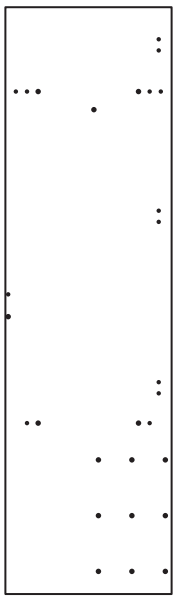


9 Right Divider *(D2039B)*
(1684 x 477mm)



10 Plinth *(D2046A)*
(1423 x 92mm) x 2



11 Fixed Shelf *(D2041A)*
(714 x 476mm) x 2

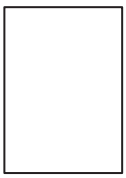


12 Loose Shelf *(D2045A)*
(338 x 476mm) x 2

13 Long Hanging Rail *(FHR704)*
(704mm long)


14 Short Hanging Rail *(FHR330)*
(330mm long) x 2




15 Rail *(D2471A)*
(339.5 x 125mm) x 2

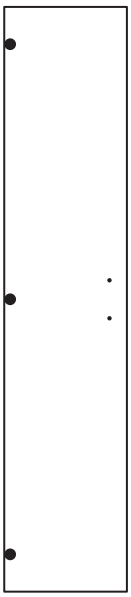


16 Large Door *(D2042B)*
(1676 x 352mm) x 2

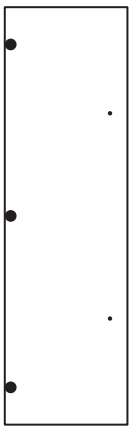

17 Small Door *(D2043B)*
(1196 x 352mm) x 2

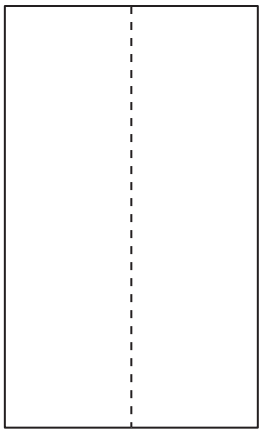

18 Short Back *(X953)*
(1210 x 726mm)



19 Long Back *(X952)*
(1710 x 358mm) x 2




Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 32

B 

Metal dowel *(F901)* x 6

C 

Small locking nut *(F3)* x 6

D 

40mm Screw *(F910)* x 32

E 


25mm Screw (*F50*) x 10

F 


13mm Screw *(F79)* x 1

G 


13mm Screw *(F63)* x 30

H 


Nail *(F51)* x 44

I 

Shelf stud *(F110)* x 8

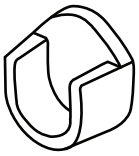J 


Rail holder *(F1014)* x 6

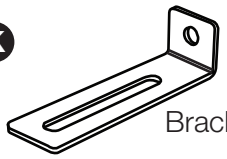K 


Bracket (*F327* x 1)

L 

Hinge plate (*F523*) x 12

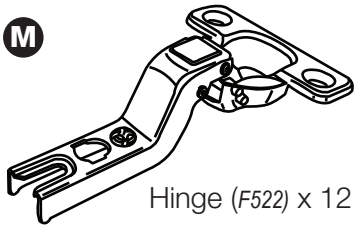M 


Hinge (*F522*) x 12

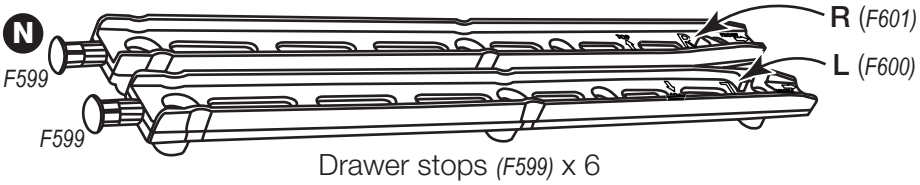N 

Drawer stops *(F599)* x 6
Runners *(F600)* x 3 *and (F601)* x 3

O 

Handle *(F631)* x 10

P 

Back holder *(F276)* x 8

Q 

Nail screw *(F277)* x 8

Tools required



Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

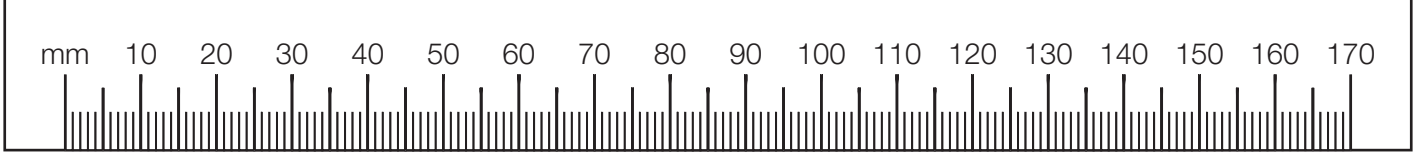

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Prepare the 3 drawer fronts and 3 drawer wraps

a: Screw 2 metal dowels (B) into the holes on the back of the drawer fronts [1].

Note: Tighten the metal dowels up fully against the panels.

b: Insert 2 small locking nuts (C) into the holes shown on the drawer wrap [2].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

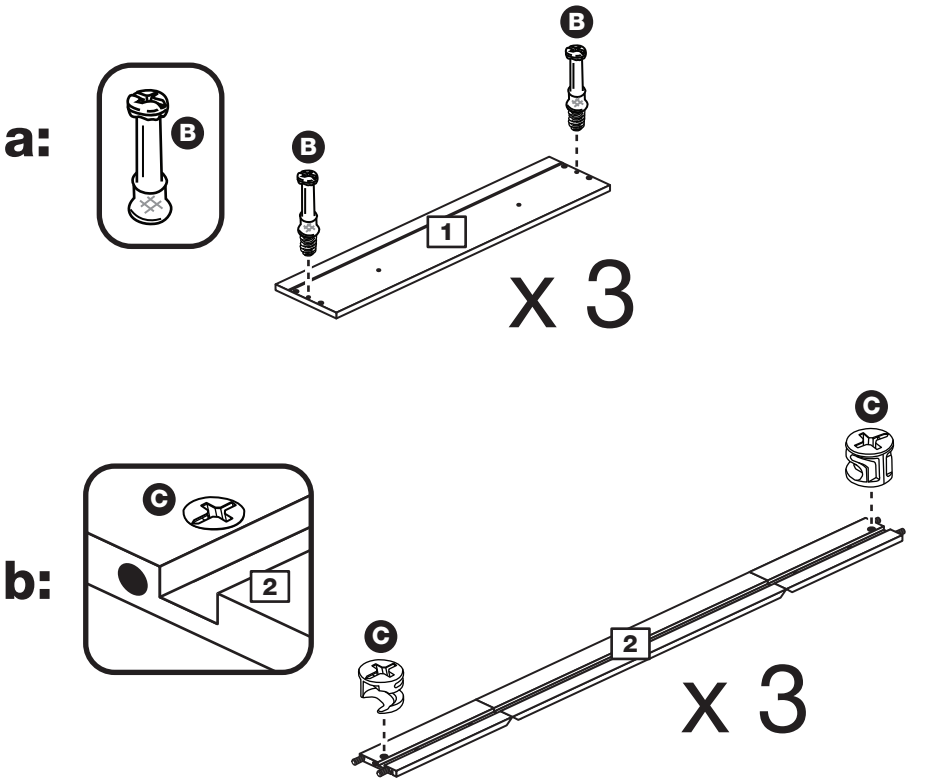


Step 2

Assemble the drawers

a: Place the drawer base [3] into the narrow slot on the drawer wrap [2]. Fold the wrap around the base.

b: Turn each of the drawer wrap assemblies over and push them onto the back of the drawer fronts [1].

Note: Turn the locking nuts (C) clockwise to secure the panels - more than 1/2 a turn.

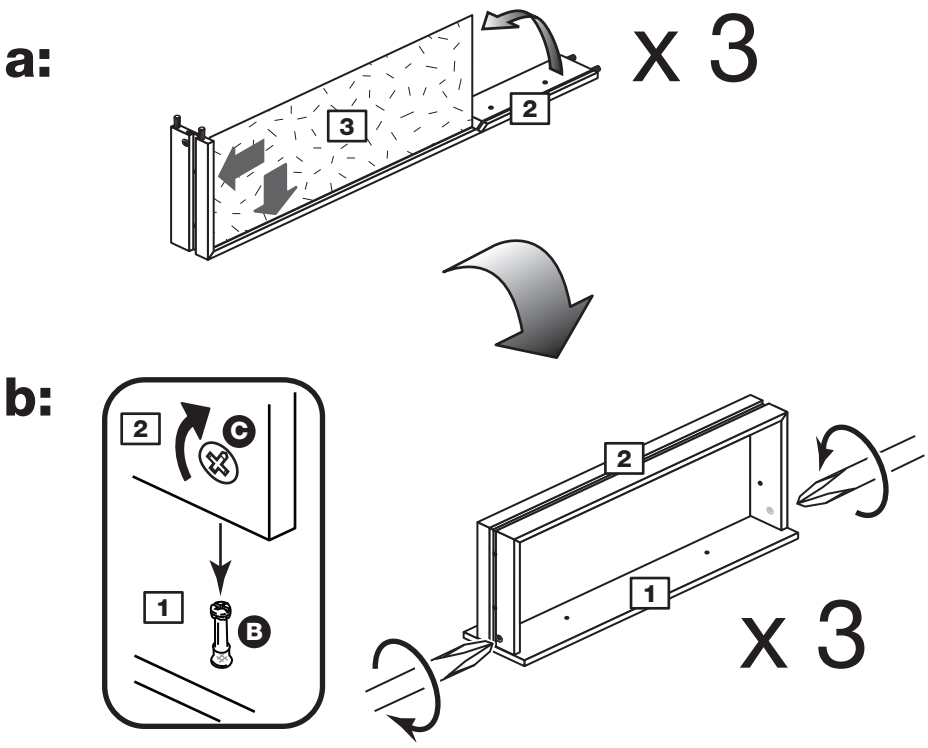


Step 3

Push the drawer stops into the drawer wraps

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners N.

Push the drawer stops fully through the large drawer wraps 2 from the inside.

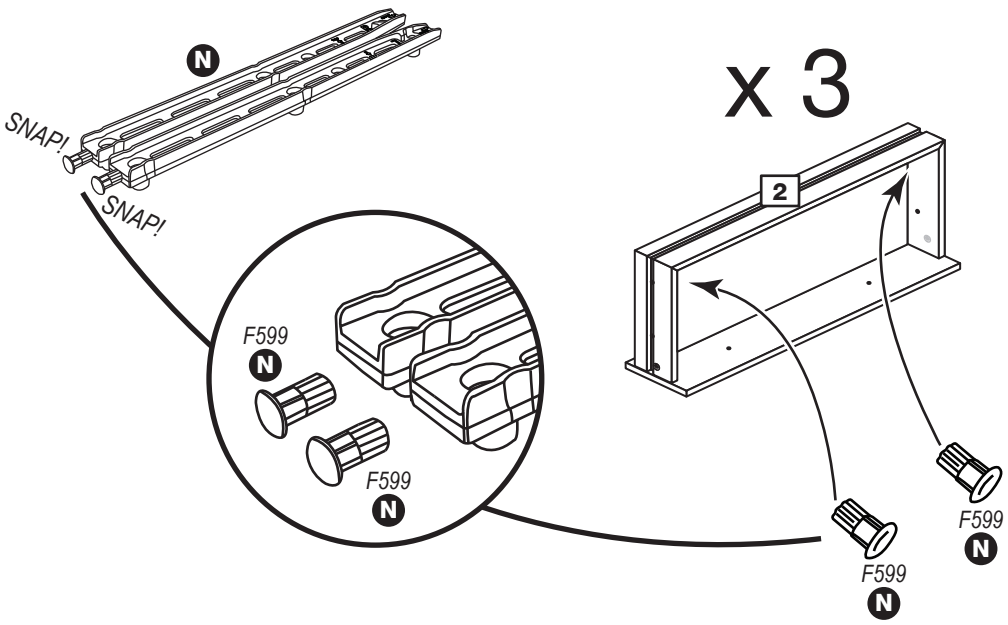


Step 4

Attach the handles

Attach 2 handles O to each drawer front 1 using screws E.

Note: Do not overtighten the screws.

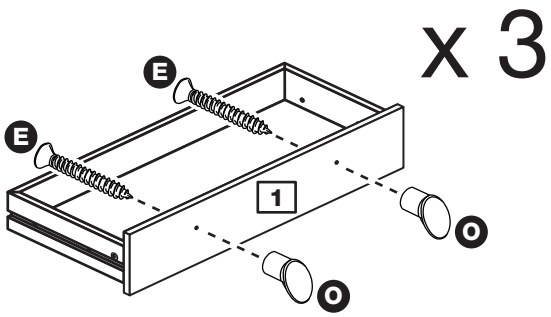


Step 5

Prepare the 2 fixed shelves

Tap 4 wooden dowels A into each of the 2 fixed shelves 11.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

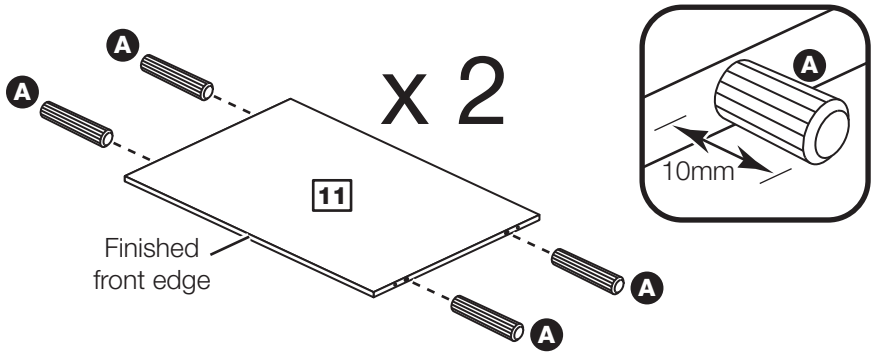

Step 6

Prepare the left divider

Separate runners (N).

a: Push fit the 3 left runners (N) marked '**L**' into the holes shown on the left divider [8].

Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.


Push a rail holder (J) into the left divider [8]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).


Fit 3 hinge plates (L) onto the left divider [8], making sure that the slot is facing towards the finished front edge.


Turn the left divider over


b: Tap 4 wooden dowels (A) into the left divider [8].

Push a rail holder (J) into the left divider [8]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).

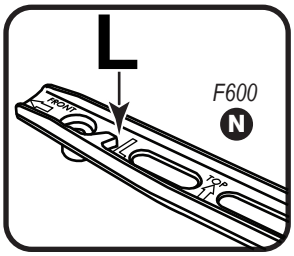

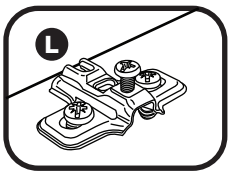

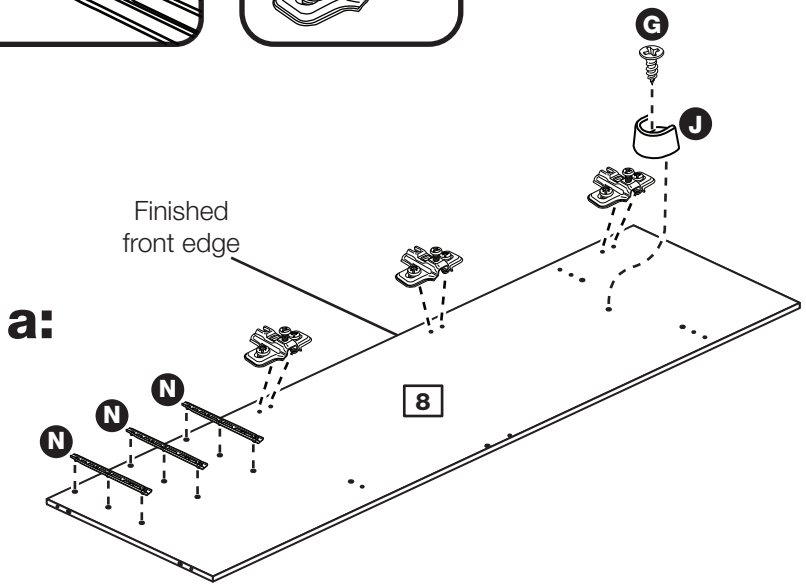

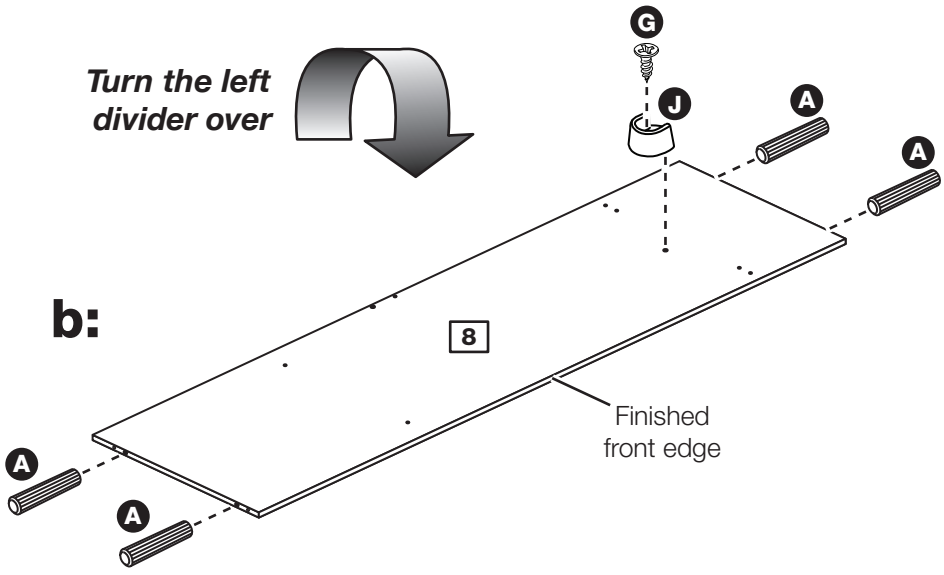

Step 7

Prepare the right divider

a: Push fit the 3 right runners (N) marked '**R**' into the holes shown on the right divider [9].


Push a rail holder (J) into the right divider [9]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).


Fit 3 hinge plates (L) onto the right divider [9], making sure that the slot is facing towards the finished front edge.


Turn the right divider over

b: Tap 4 wooden dowels (A) into the right divider [9].

Push a rail holder (J) into the right divider [9]. Make sure that it is fitted straight, in line with the panel edges and then secure with screw (G).

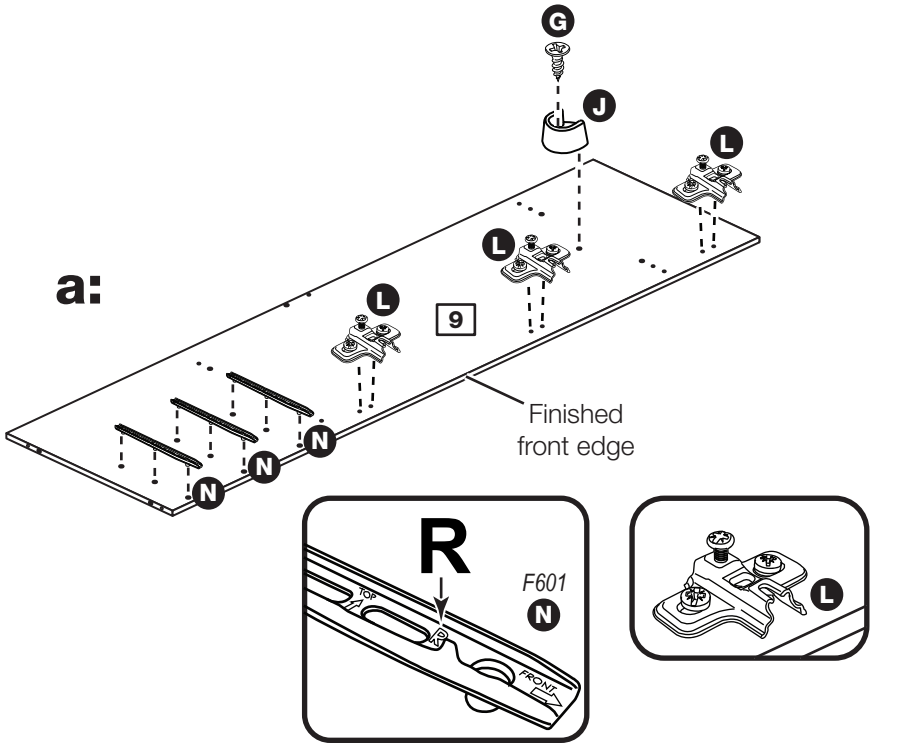

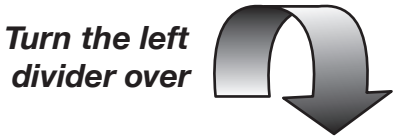


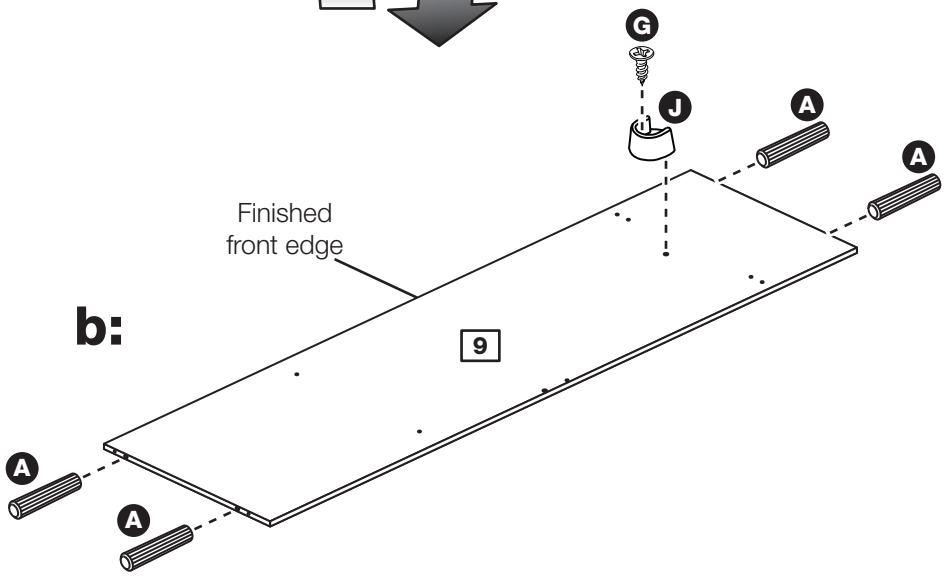

Step 8

Fit the fixed shelves to the left divider


Push the 2 fixed shelves 11 onto the left divider 8 and secure with 4 screws D.

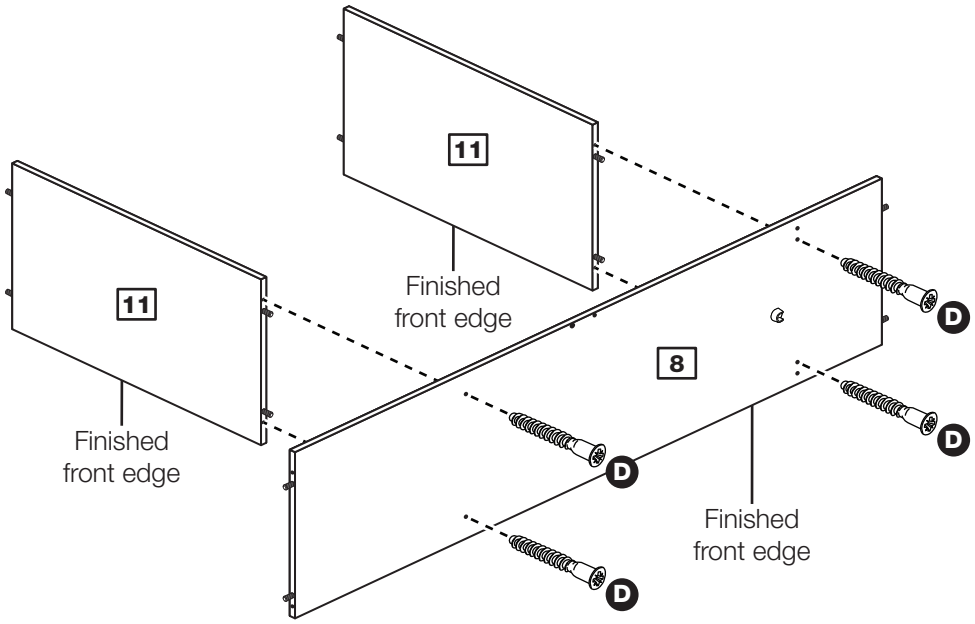

Step 9

Fit the right divider

Push the right divider 9 onto the 2 fixed shelves 11 and secure with 4 screws D.

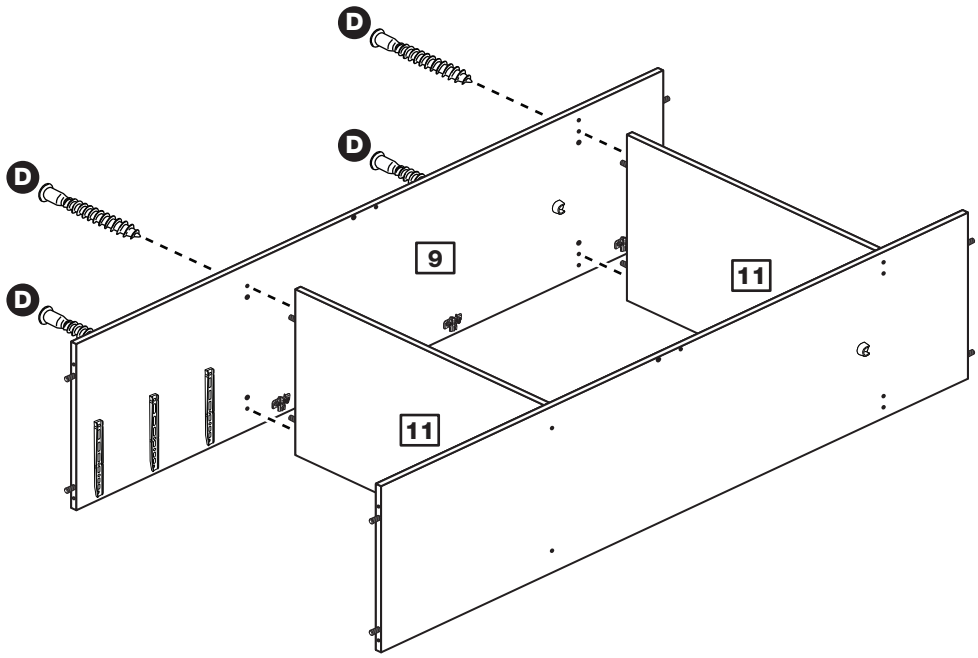


Step 10

Prepare the top, base and 2 rails

Tap 4 wooden dowels A into the top 4.

Tap 4 wooden dowels A into the base 5.


Tap 2 wooden dowels A into each rail 15.

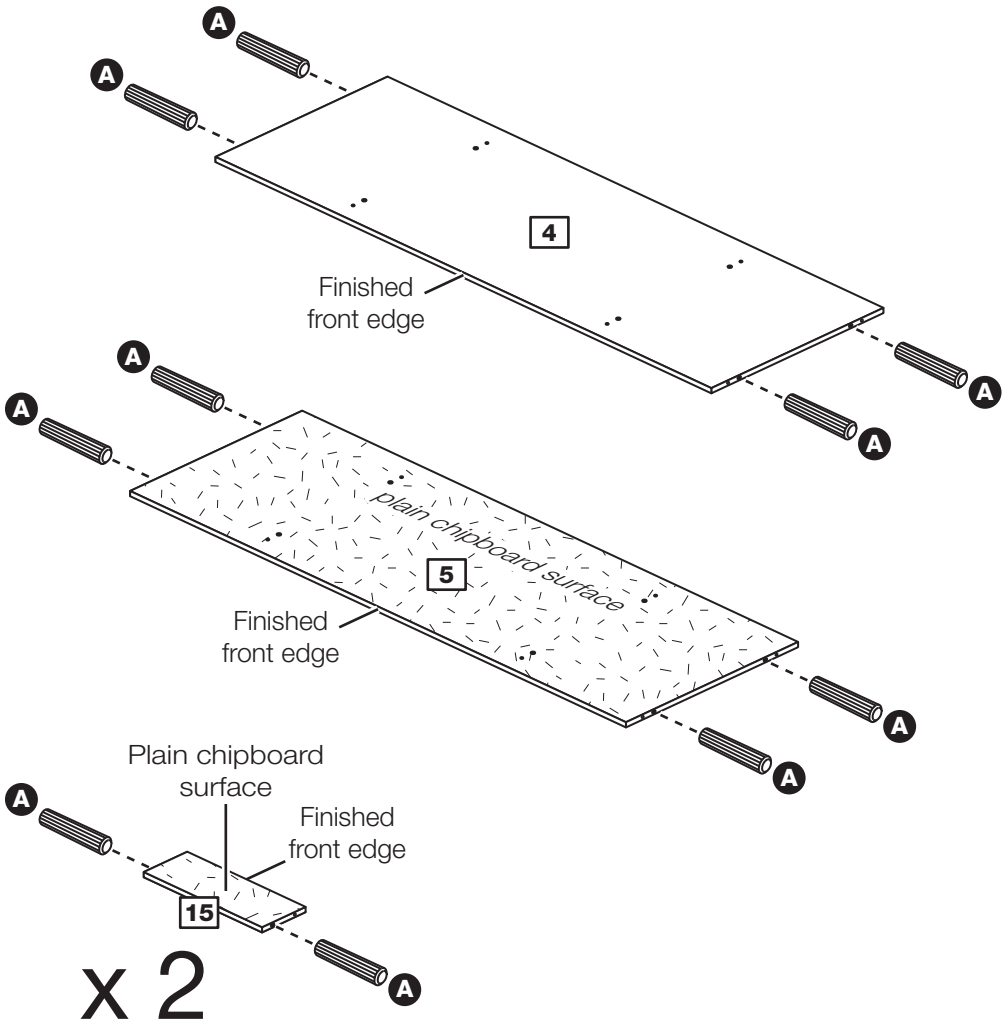

Step 11

Fit the top, base and rails

Push the top 4 ,base 5 and the 2 rails 15 onto the 2 dividers 8 and 9 and secure with 10 screws D.

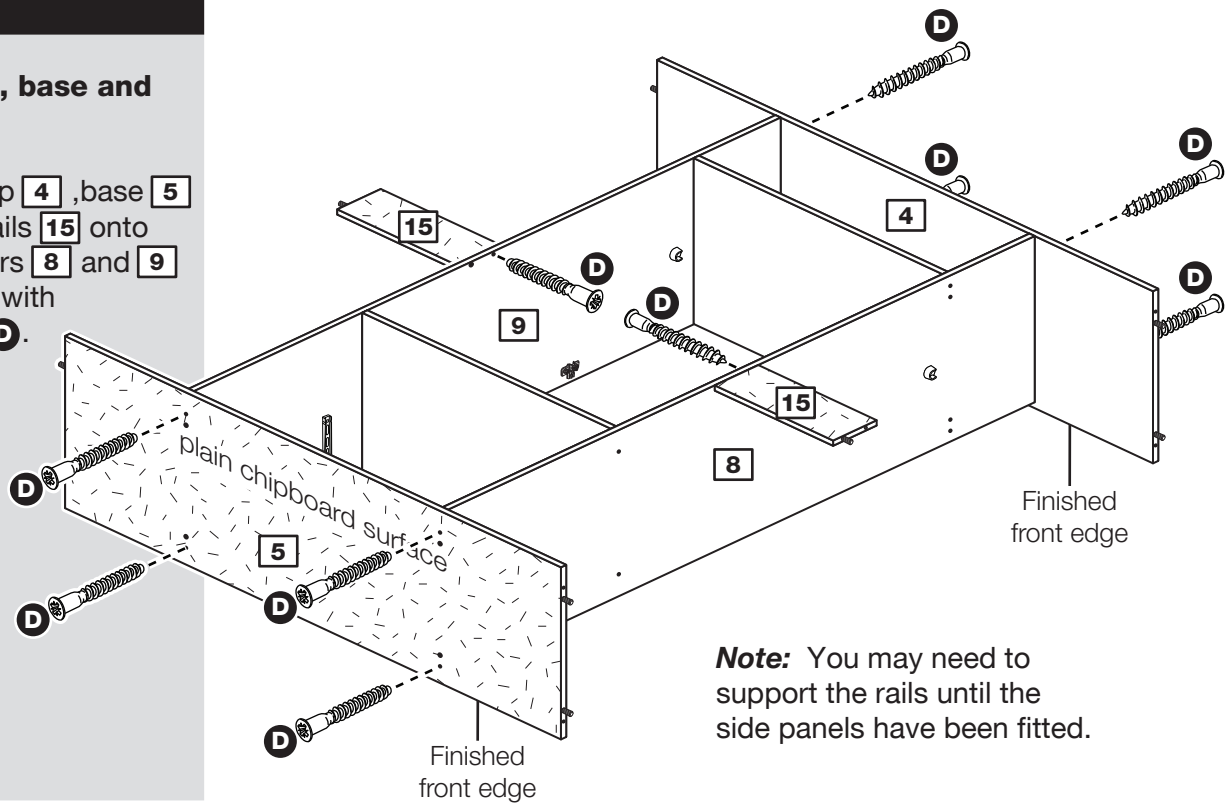


Note: You may need to support the rails until the side panels have been fitted.

Step 12

Prepare the left end

Push a rail holder J into the left end 6. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.

Fit 3 hinge plates L onto the left end 6, making sure that the slot is facing towards the finished front edge.

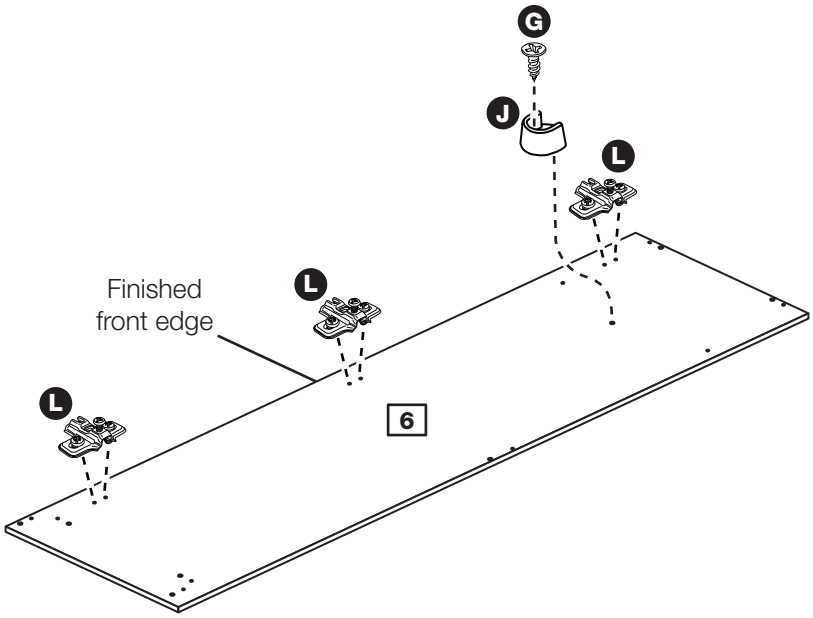


Step 13

Prepare the right end

Push a rail holder J into the right end 7. Make sure that it is fitted straight, in line with the panel edges and then secure with screw G.


Fit 3 hinge plates L onto the right end 7, making sure that the slot is facing towards the finished front edge.

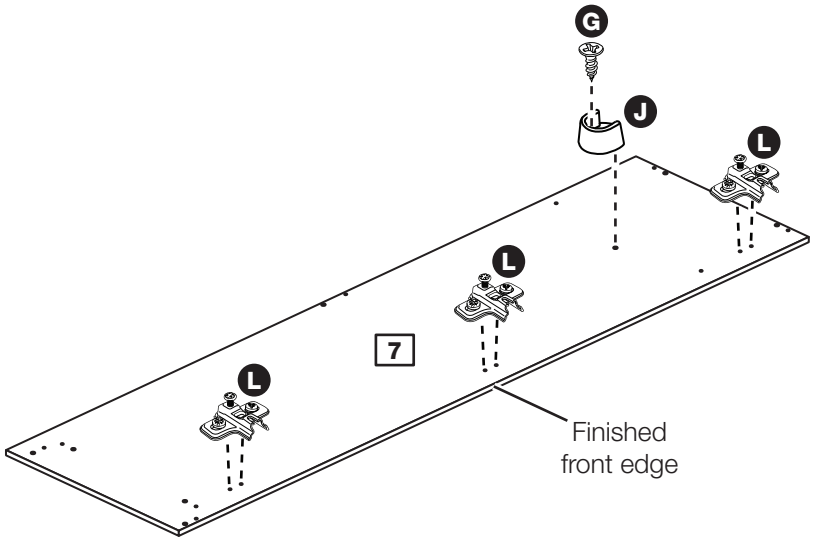

Step 14

Fit the right end


Push the right end 7 onto the top 4, base 5 and rail 15 and secure with 5 screws D.

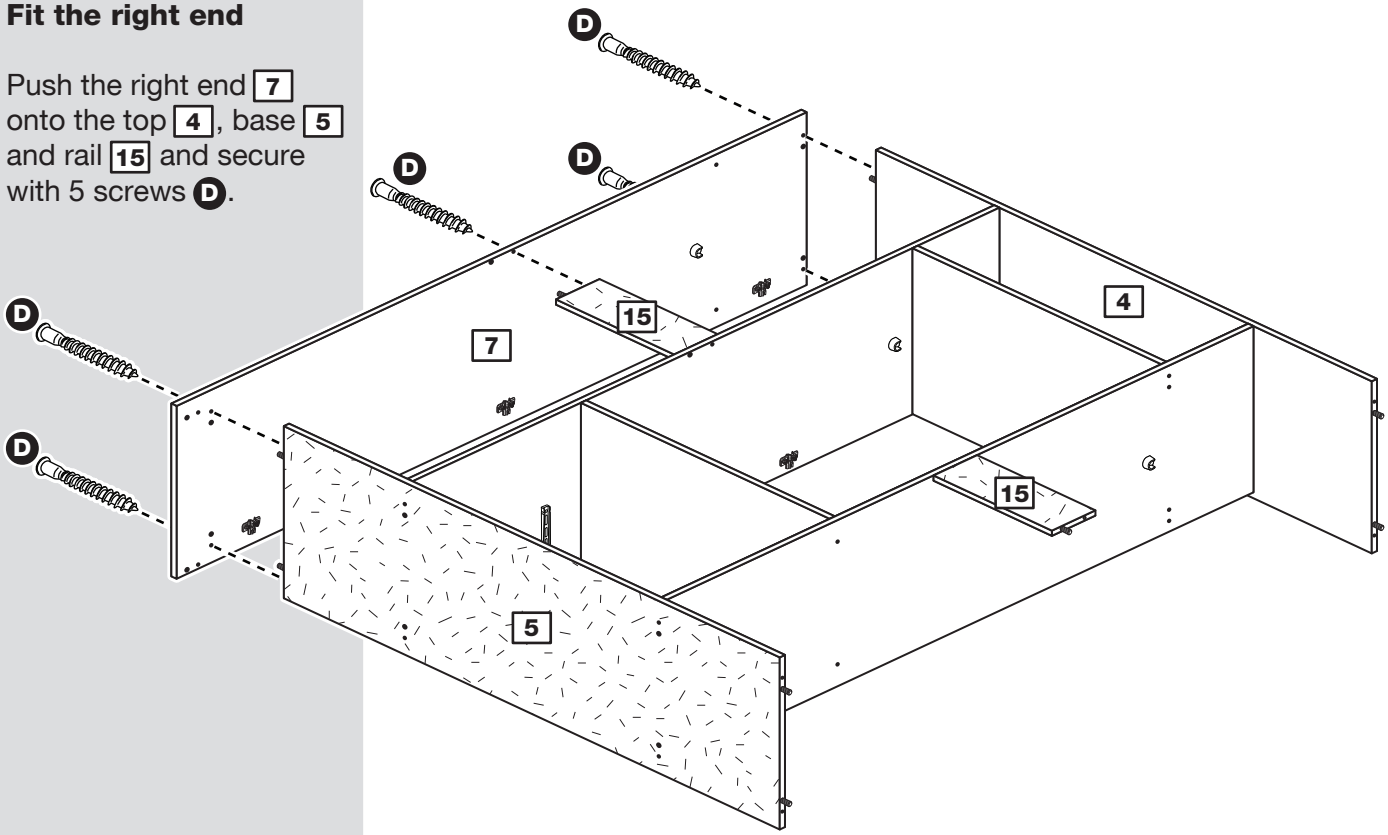

Step 15

Prepare the 2 plinths

Tap 2 wooden dowels A into each of the 2 plinths 10.

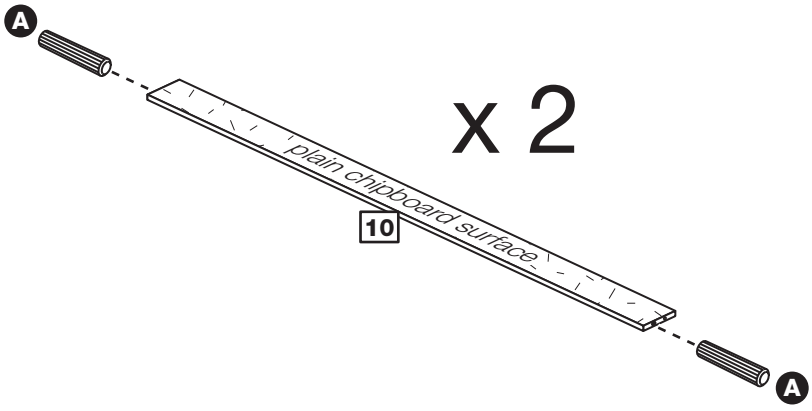


Step 16

Fit the 2 plinths

2 people are needed here

Push the plinths 10 onto the right end 7 and secure with 2 screws D.

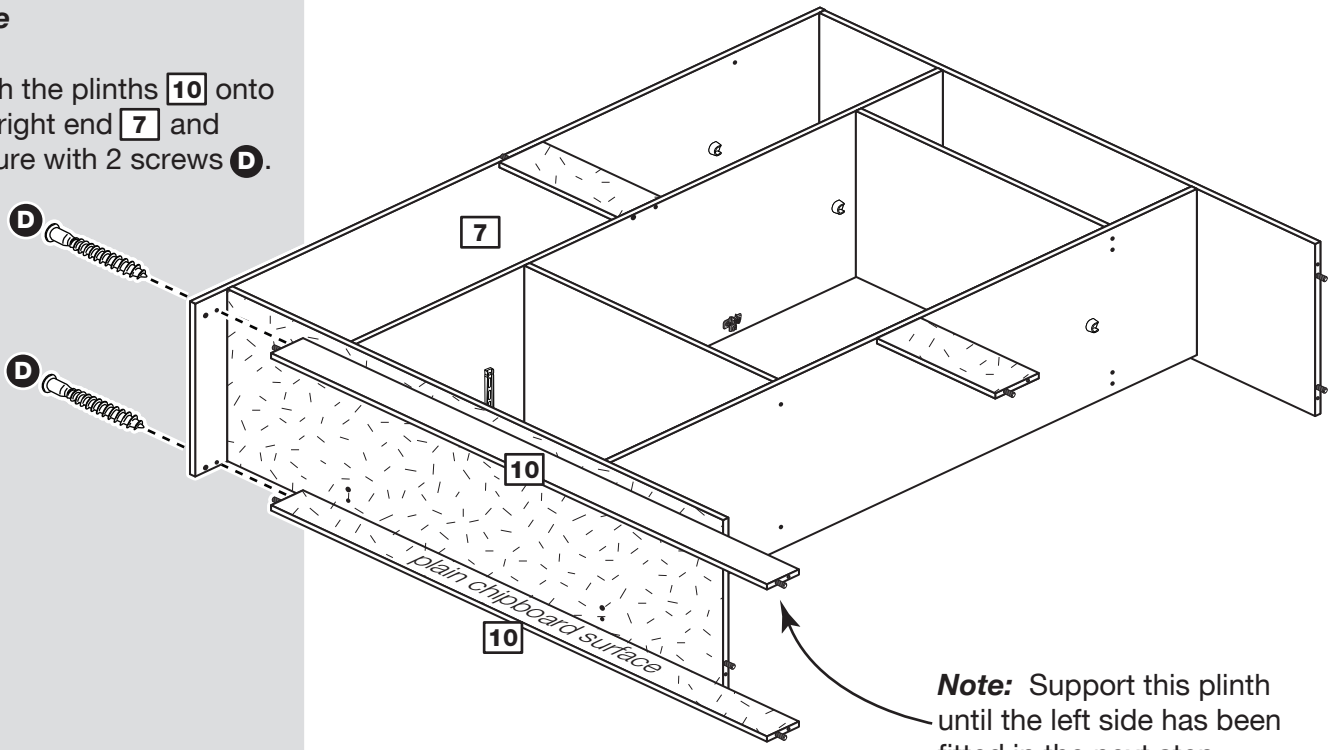


Note: Support this plinth until the left side has been fitted in the next step.

Step 17

Fit the left end

Push the left end 6 onto the top 4, the base 5, the plinths 10 and the rail 15 and secure with 7 screws D.

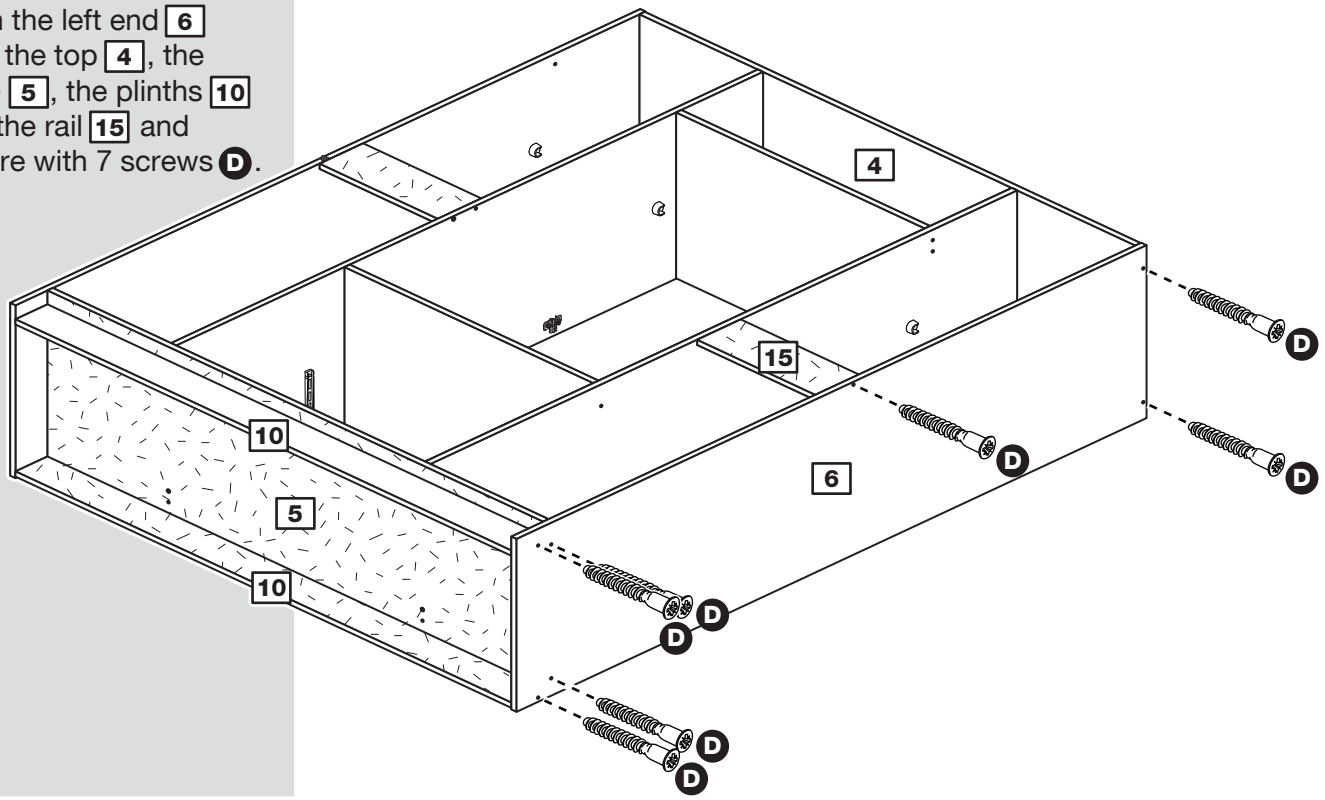

Step 18

Fit the back panels

a: Square up the unit by making sure that measurement **x:x equals y:y.**


Place the short back 18 and the 2 long backs 19 down onto the unit as shown.


Make sure that the 3 backs are pushed up tight against each other and that they meet over the back edges of the dividers.

b: Nail H around the outside edges of the 3 backs.

Note: Do not nail where the backs meet. Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

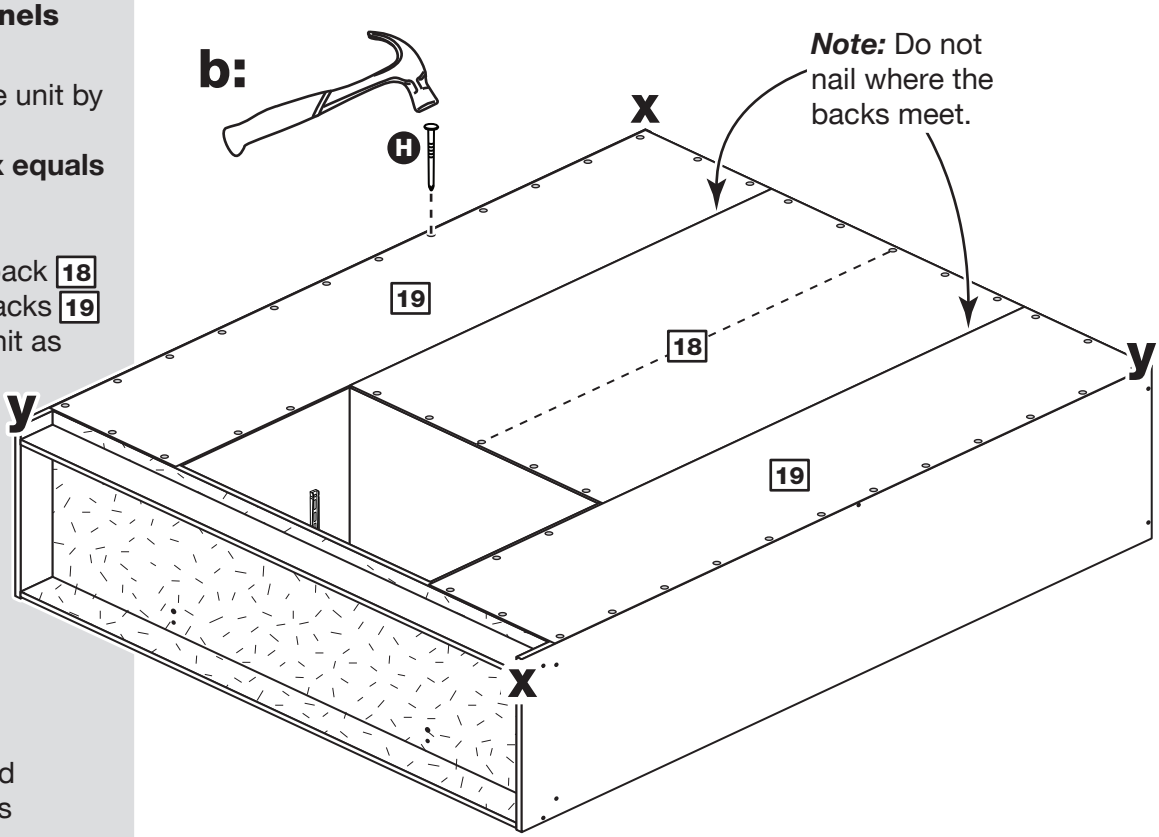

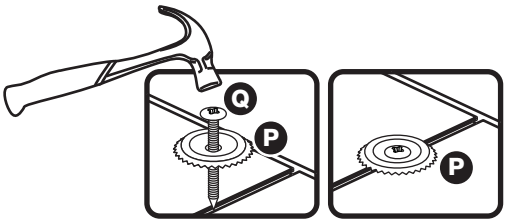


Step 19

Secure the backs

Tap the nail screws Q through the back holders P and down between the backs 18 and 19 into the back edge of the divider.

Keep tapping the nail screws Q in until the back holders P dig into the small and large back.

Stand the unit up for the next step.

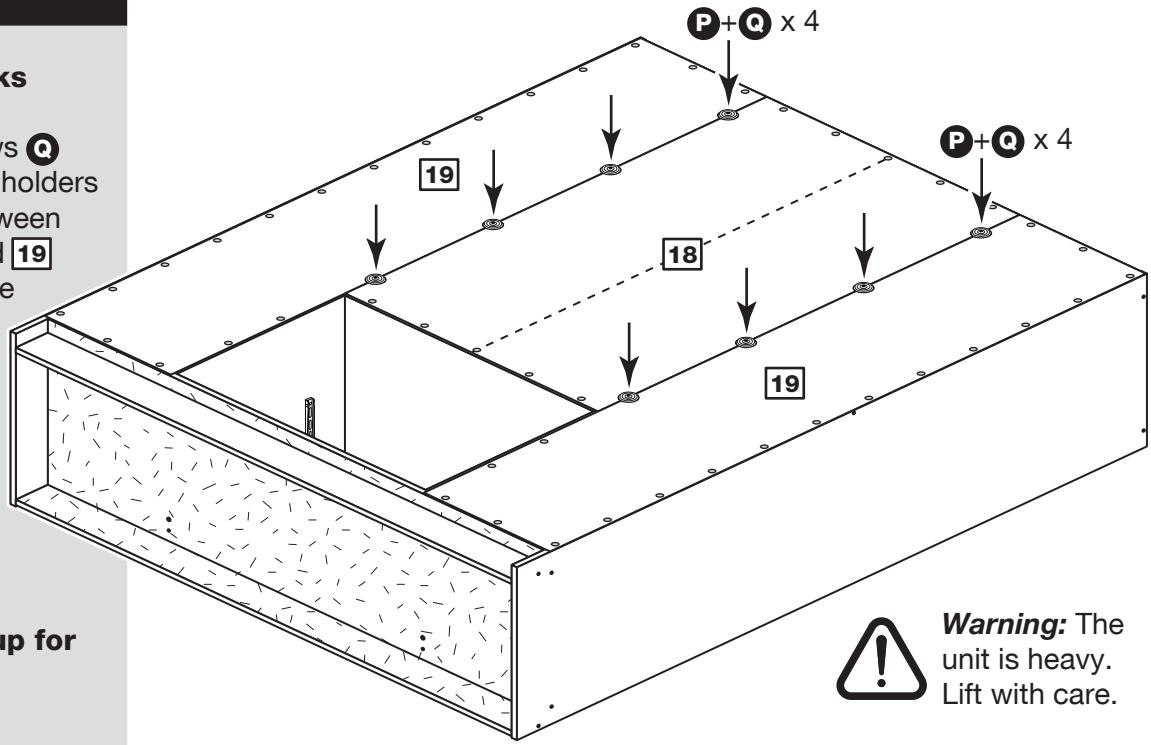

Warning: The unit is heavy. Lift with care.


Step 20


Fit the hanging rails and drawers

Push the large hanging rail 13 and 2 small hanging rails 14 into the rail holders J.

Lift front of drawer whilst inserting to overcome the 'stop' system.

Note: To ensure that your drawer runs smoothly, spray a small amount of furniture polish into the grooves.

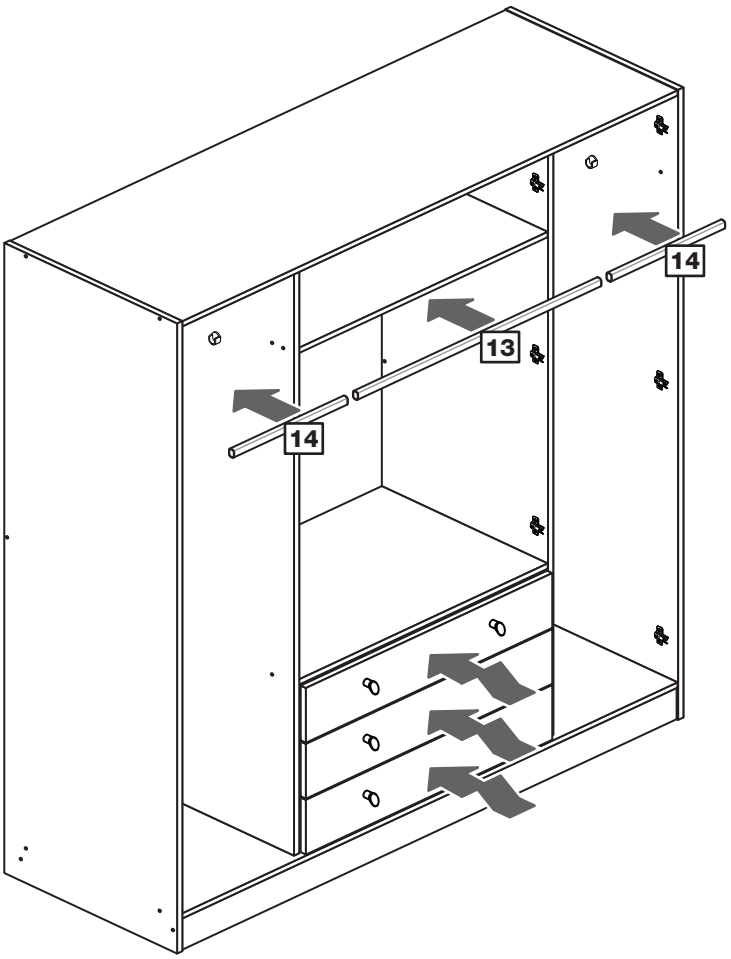


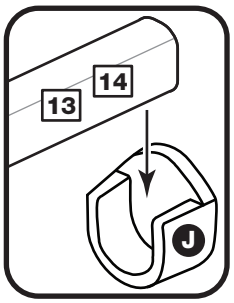

Step 21

Fit the shelf studs


For each of the 2 loose shelves 12, insert 4 shelf studs I.

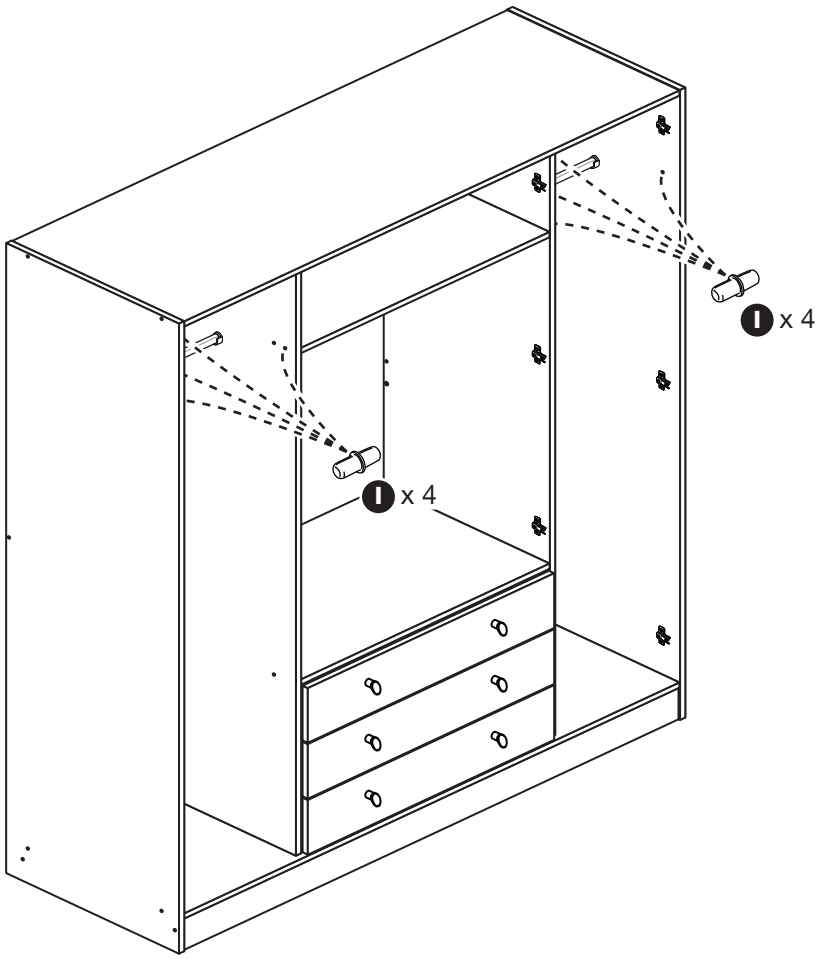

Step 22

Fit the loose shelves

Lower the 2 loose shelves 12 down onto the shelf studs I.

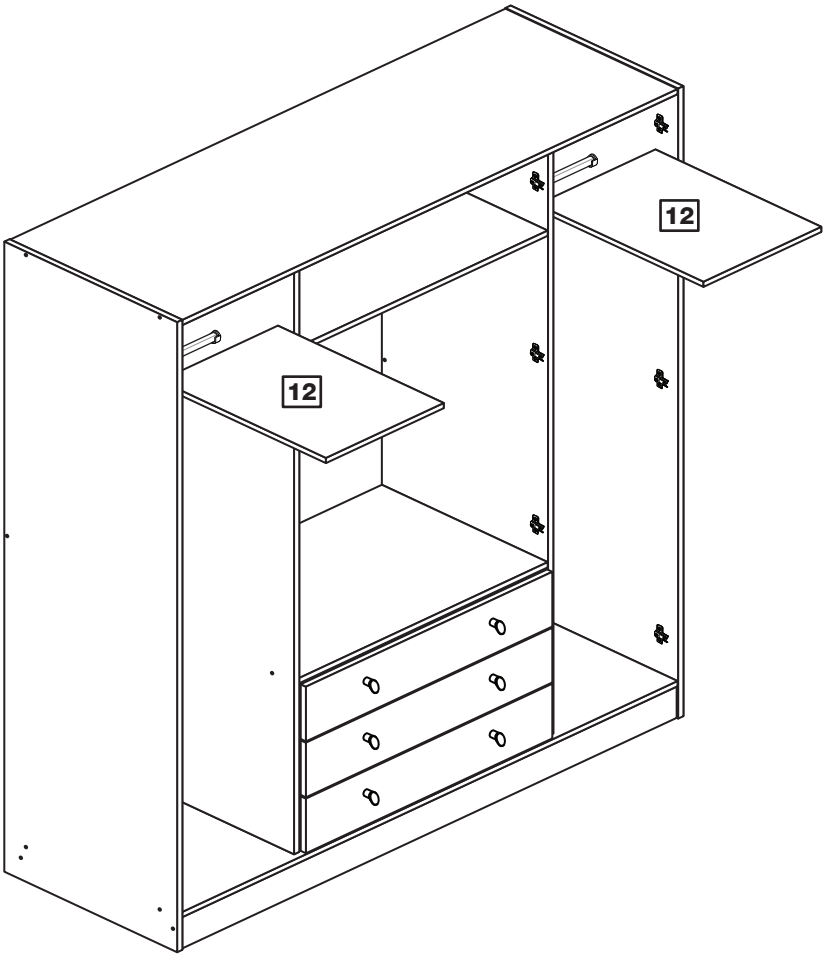


Step 23


Prepare the 4 doors

Push fit 3 hinges M into each large door 16 and small door 17.

Secure each hinge with 2 screws G.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

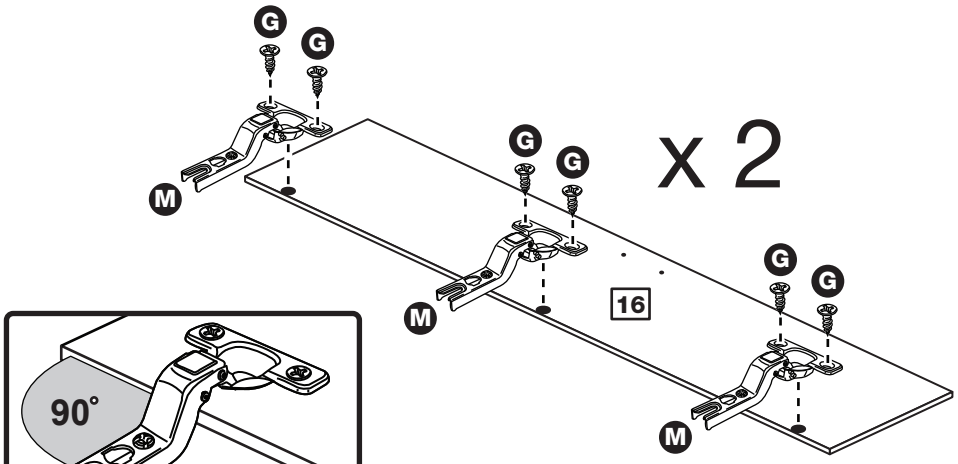

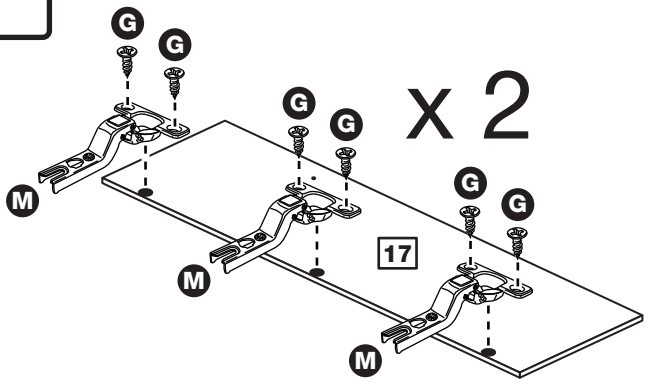

Step 24

Drill a handle hole in each large door

Important: Please follow these instructions carefully.

Lay the 2 large doors 16 down onto a smooth surface.


Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

IMPORTANT
Carefully choose which hole you need to drill in each door

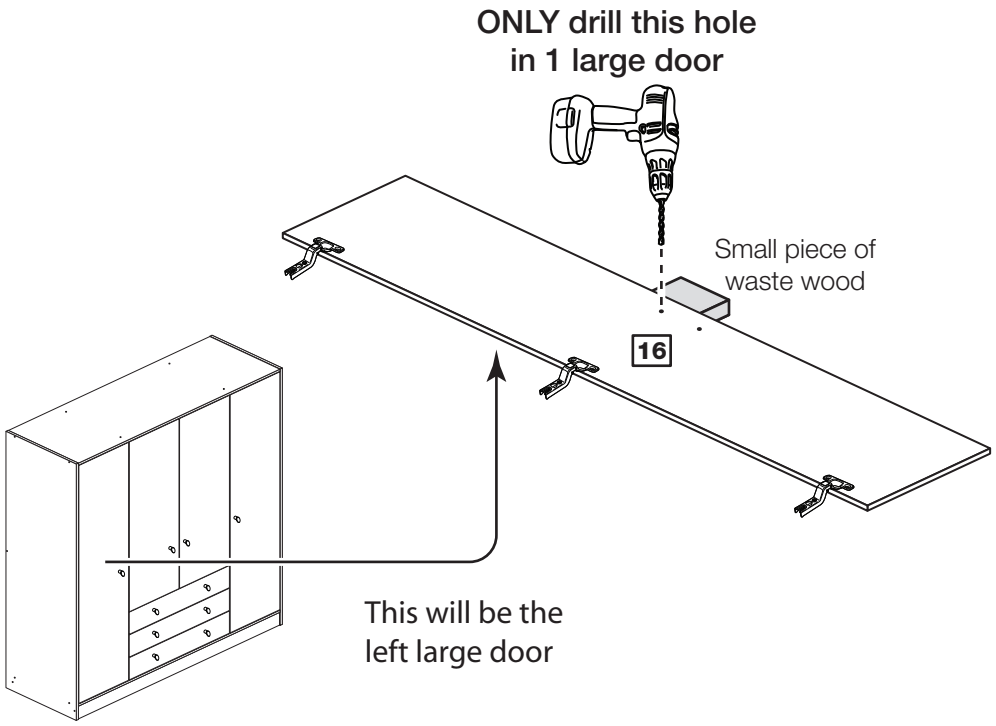

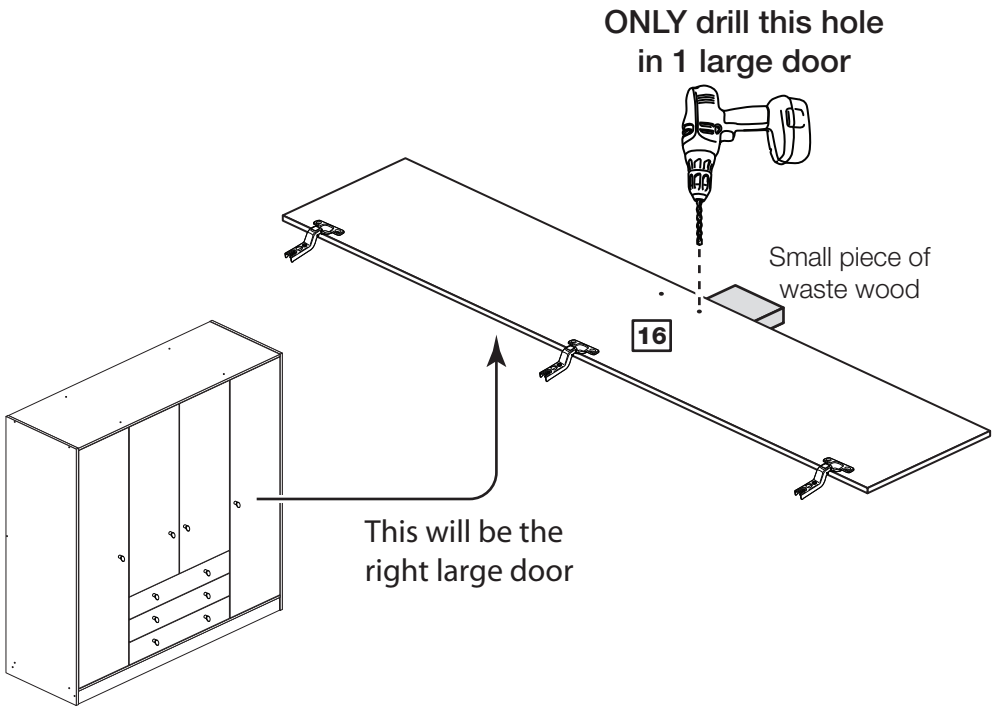

Step 25

Drill a handle hole in each small door

Important: Please follow these instructions carefully.

Lay the 2 small doors 17 down onto a smooth surface.


Check that the hinges and holes are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

Using the pilot hole in the rear face of the door, drill through the hole indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm hole that you have just drilled by drilling back through it with a 5mm drill.

IMPORTANT
Carefully choose which hole you need to drill in each door

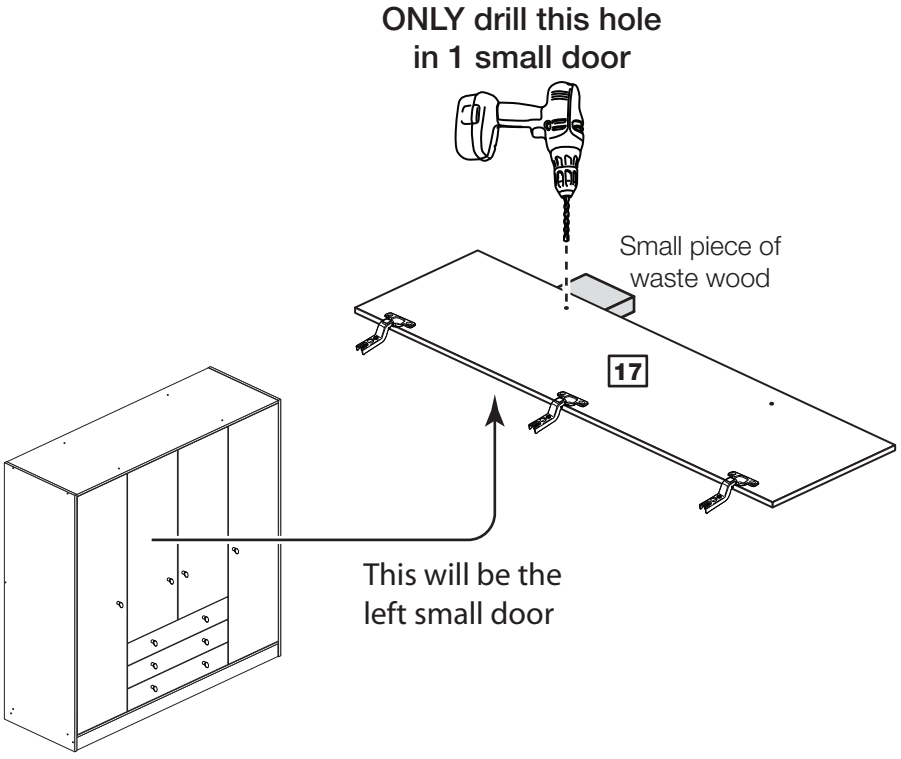

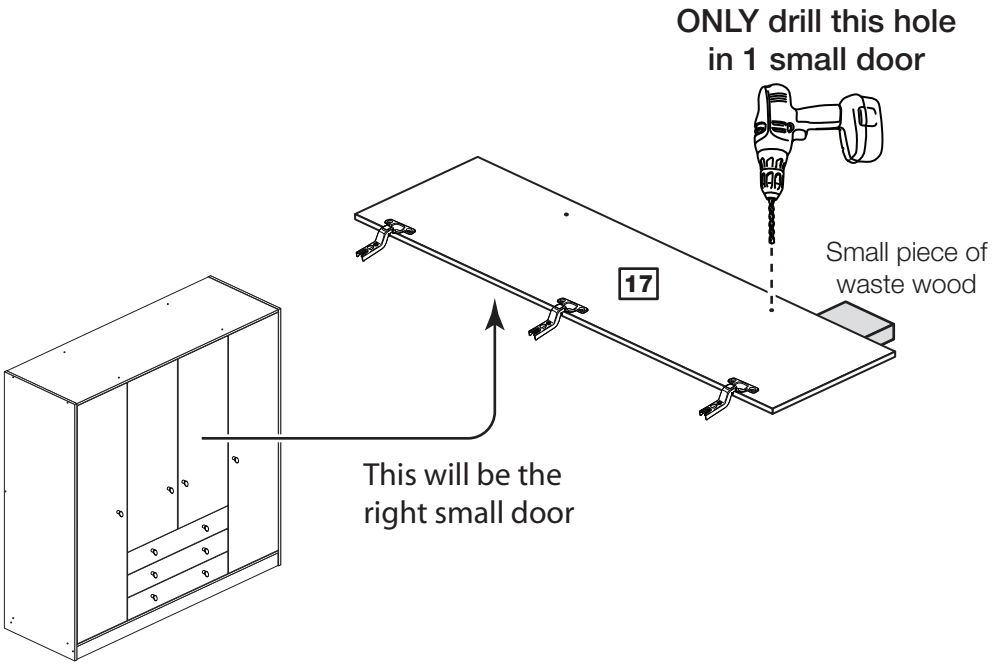

Step 26

Fit doors and handles

Note: The easiest way to attach each door 16 and 17 is to fit the top hinge first, then align and fit the other hinges.


a: Push the hinge M onto the front part of the hinge plate L.
The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge M FLAT against the hinge plate L as you slide it across as far as it will go. Tighten screw A.


c: The hinge M must be flat against the hinge plate L prior to any adjustment.

d: The hinge M must NOT be AT AN ANGLE to the hinge plate L when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle O to each door 16 and 17 using screws E.

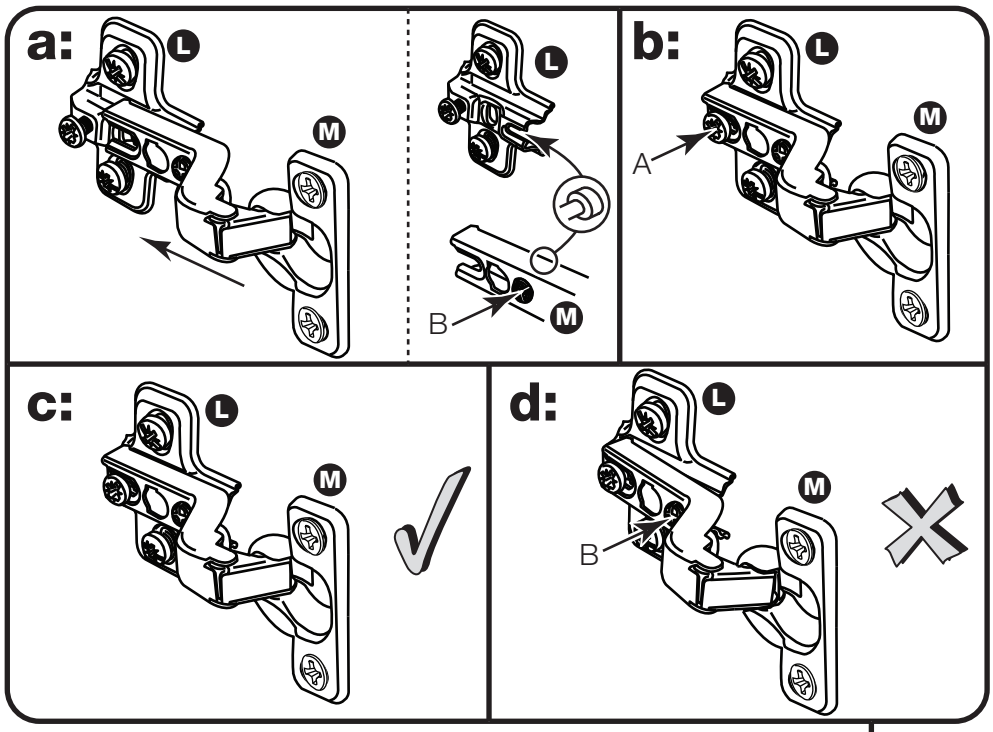

Note: When fitting the doors, make sure that the handle hole you had to drill is nearest to the bottom of the door.

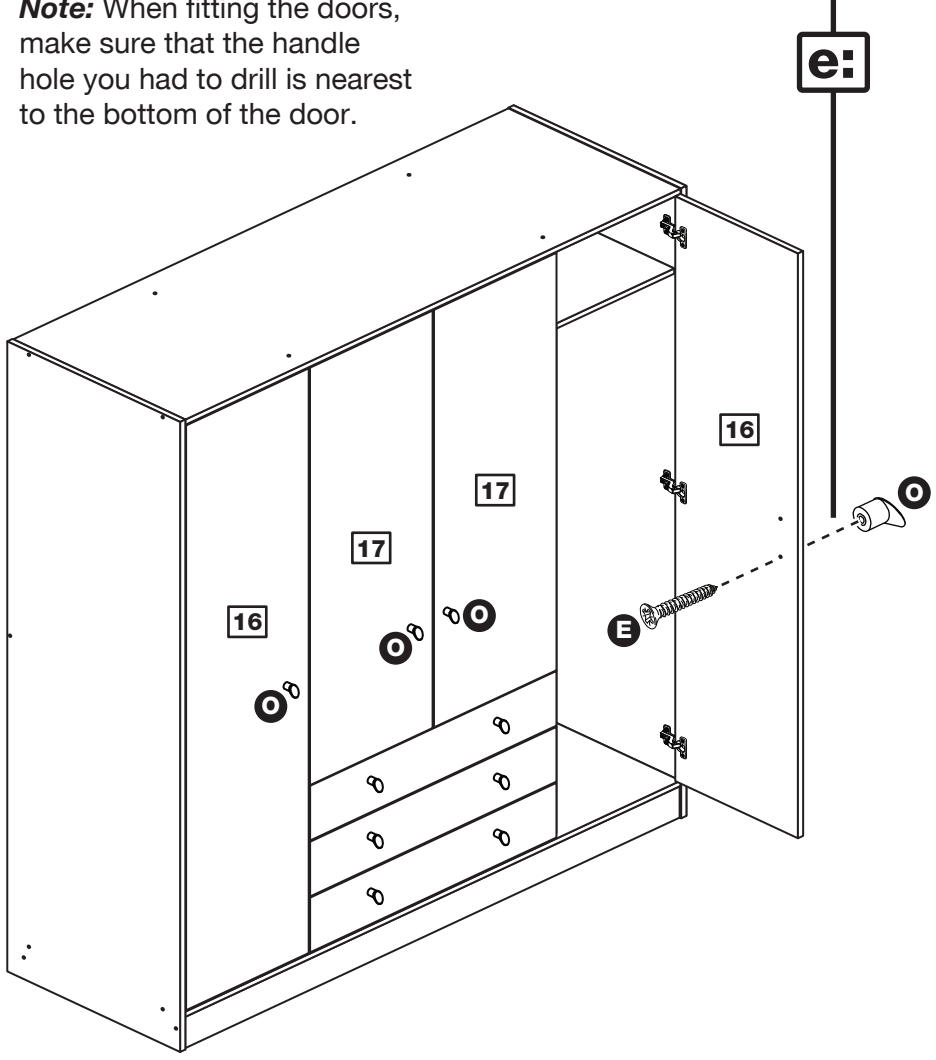

Step 27


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

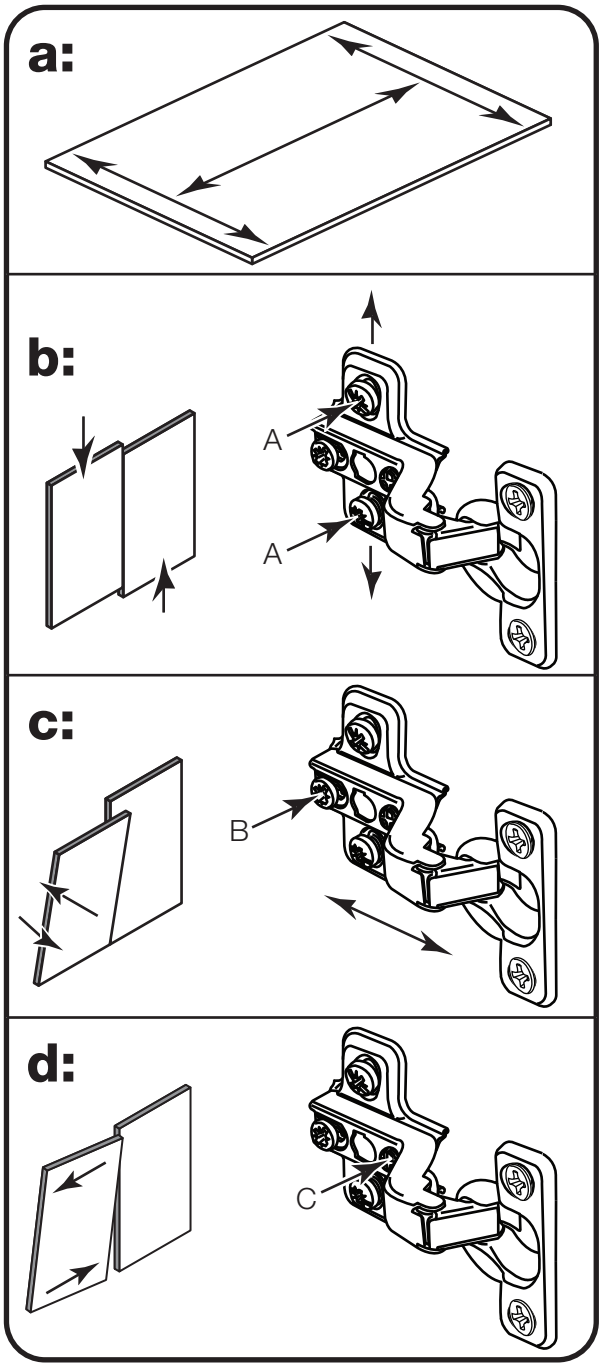

Step 28

Attach bracket to top

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket K fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket K loosely onto the top of the unit using screw F and mark the wall for the wall fixing.


Swivel the bracket K away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket K back and fix the bracket to the wall, then tighten screw F.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete

Warning: The unit is heavy. Lift with care.

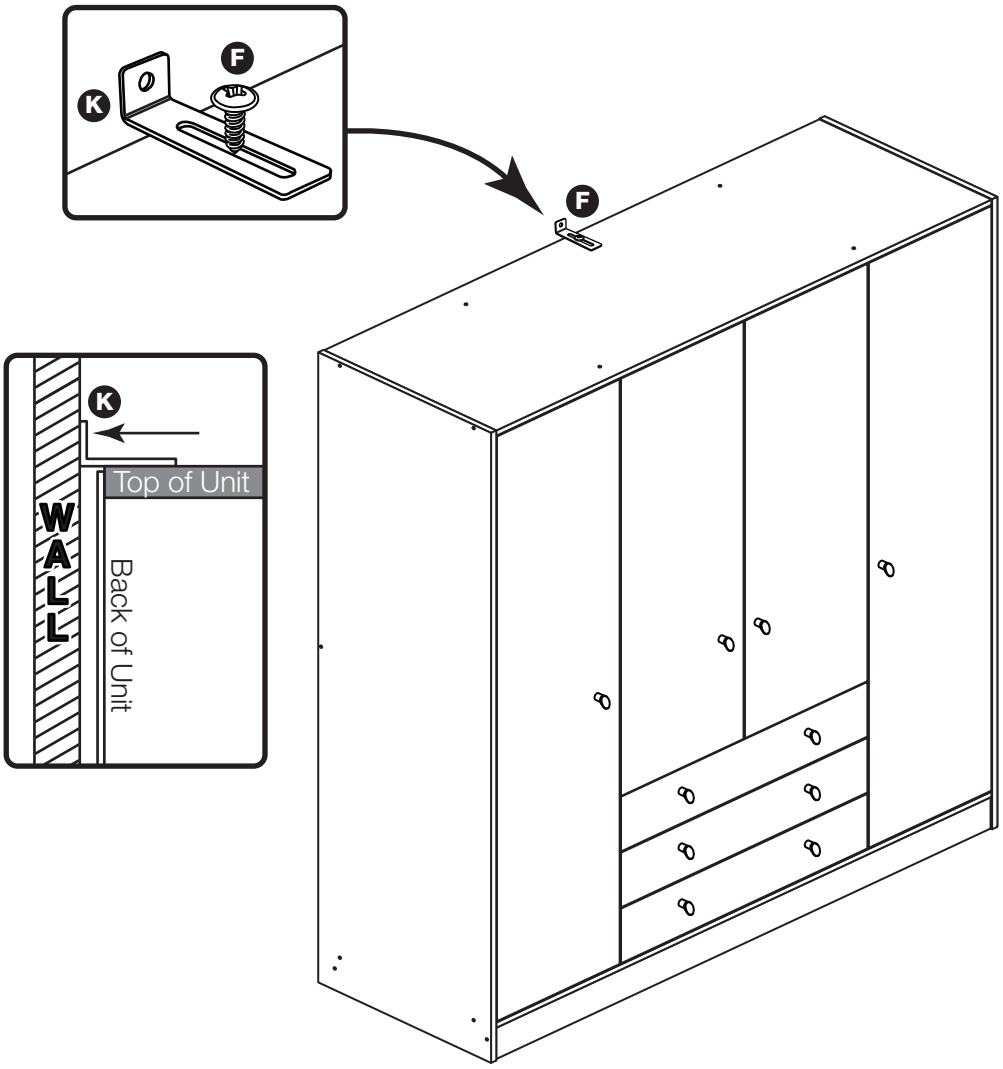

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW