
Romana - Bedside Chest

Assembly Instructions - Please keep for future reference

305/1836

305/1843

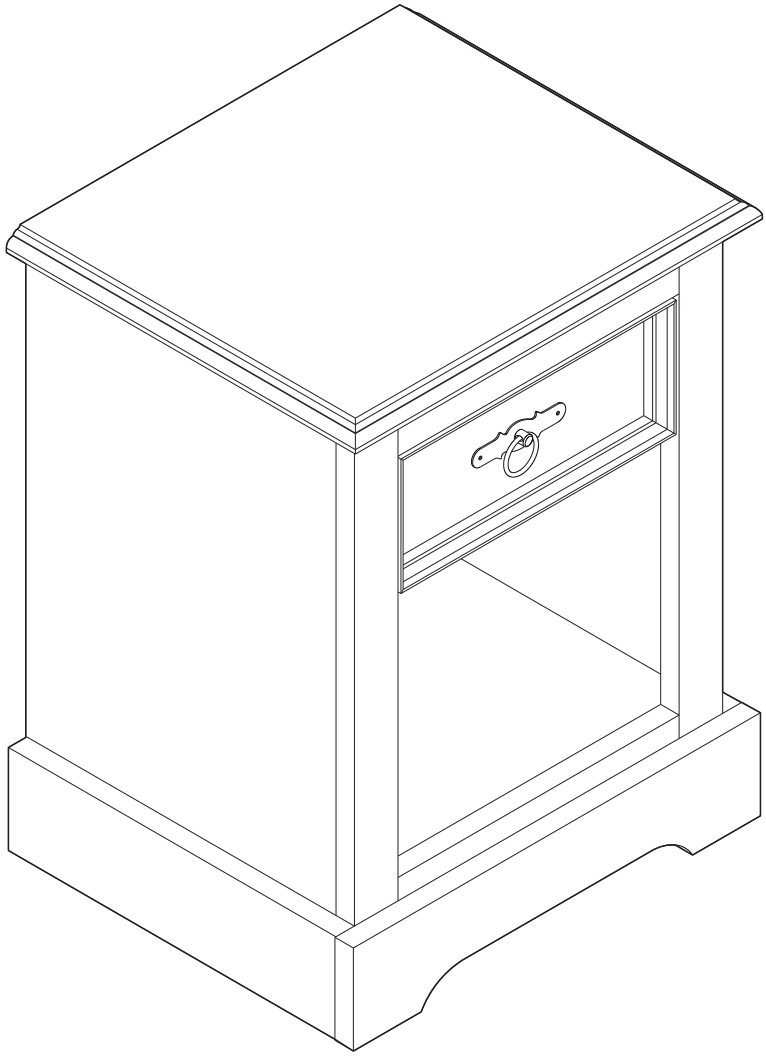

Dimensions

Width - 42cm
Depth - 36cm
Height - 55cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 25/04/13

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

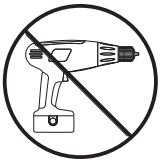

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

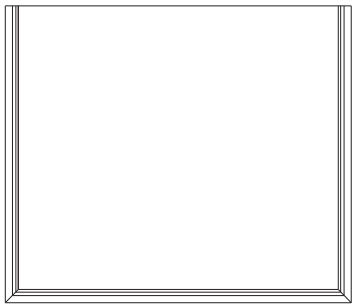


1 Top panel
(42 x 36cm)

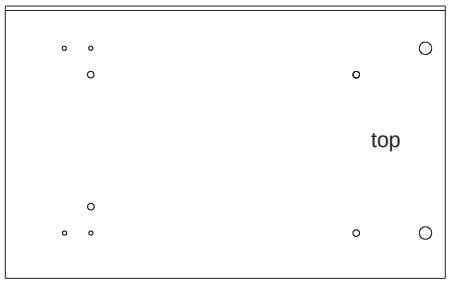


2 Right side panel
(53.4 x 33cm)

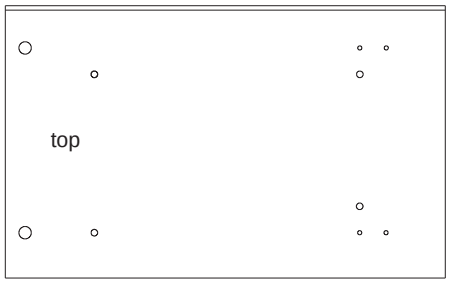


3 Left side panel
(53.4 x 33cm)




4 Back panel
(45 x 36.2cm)




5 Right front frame
(53.4 x 4.5cm)




6 Left front frame
(53.4 x 4.5cm)

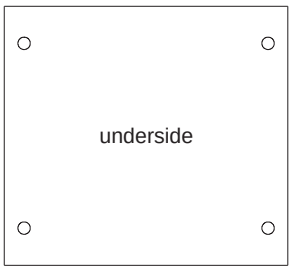


7 Base panel
(34.4 x 31.4cm)



8 Drawer bottom
(28.6 x 27cm)



9 Drawer front
(28.4 x 12cm)




10 Drawer side x 2
(30 x 12cm)



11 Drawer back
(26 x 12cm)




12 Side drawer runner x 2
(26.6 x 3.5cm)




13 Front plinth
(42 x 9.2cm)



14 Side plinth x 2
(33.8 x 9.2cm)



15 Top front frame
(33 x 4.5cm)



16 Bottom front frame
(33 x 4.5cm)






17 Block x 4
(6.6 x 2cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

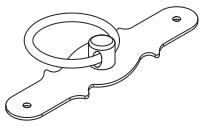A  Wooden dowel x 14	**B**  14mm Screw x 2	**C**  30mm Screw x 14
D  35mm Screw x 20	**E**  19mm Bolt x 1	**F**  Metal dowel x 8
G Locking nut x 8 	**H** Drawer handle x 1 	**I**  Nail x 14


Tools required




Phillips screwdriver (small & medium)

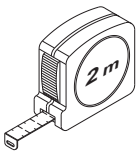

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fixing right front frame to the right side panel (Two people required for an easier assembly)**.**

a: Insert right side panel 2 into right front frame 5 through joints.

Note:
Before fixing the blocks 17 into place it is important to ensure that the slot and groove of parts 2 and 5 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks 17 in the positions shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 17 using screws D.

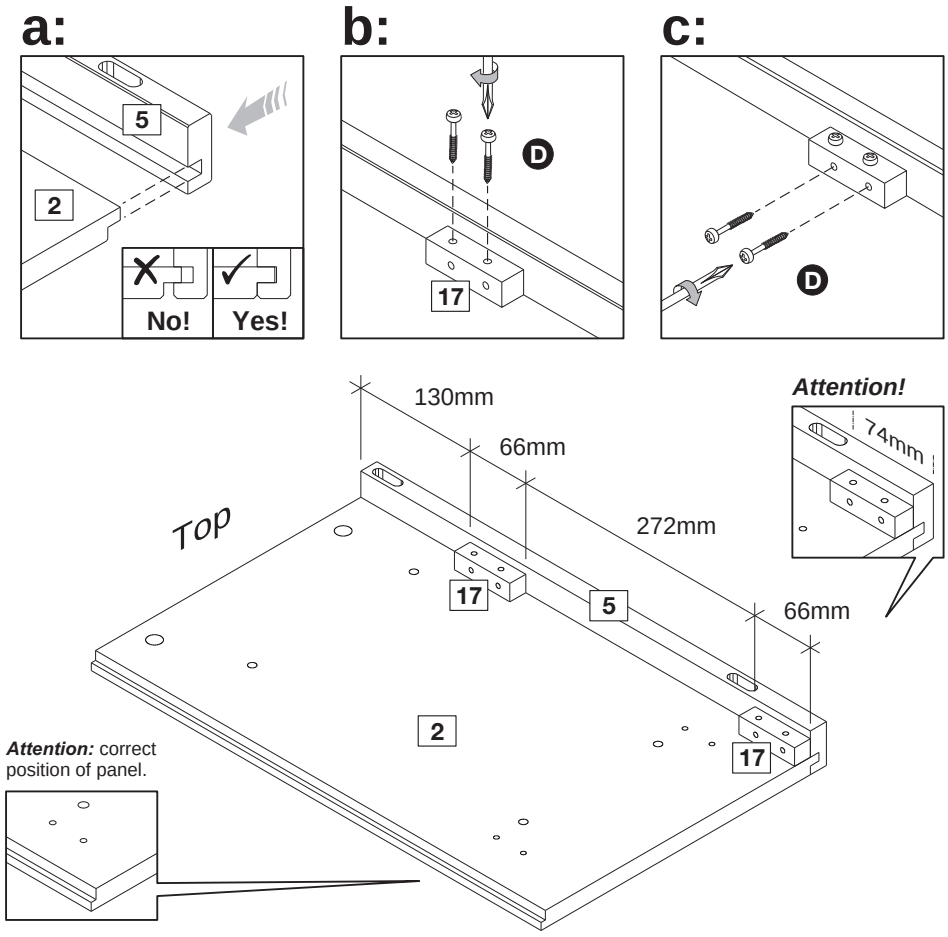

Step 2


Fixing left front frame to the left side panel (Two people required for an easier assembly)**.**

a: Insert left side panel 3 into left front frame 6 through joints.

Note:
Before fixing the blocks 17 into place it is important to ensure that the slot and groove of parts 3 and 6 are fully pushed together and lined up correctly at the top and bottom.


b: Place blocks 17 in the positions shown. First fix to the side panel using screws D.

c: Fix front frame through blocks 17 using screws D.

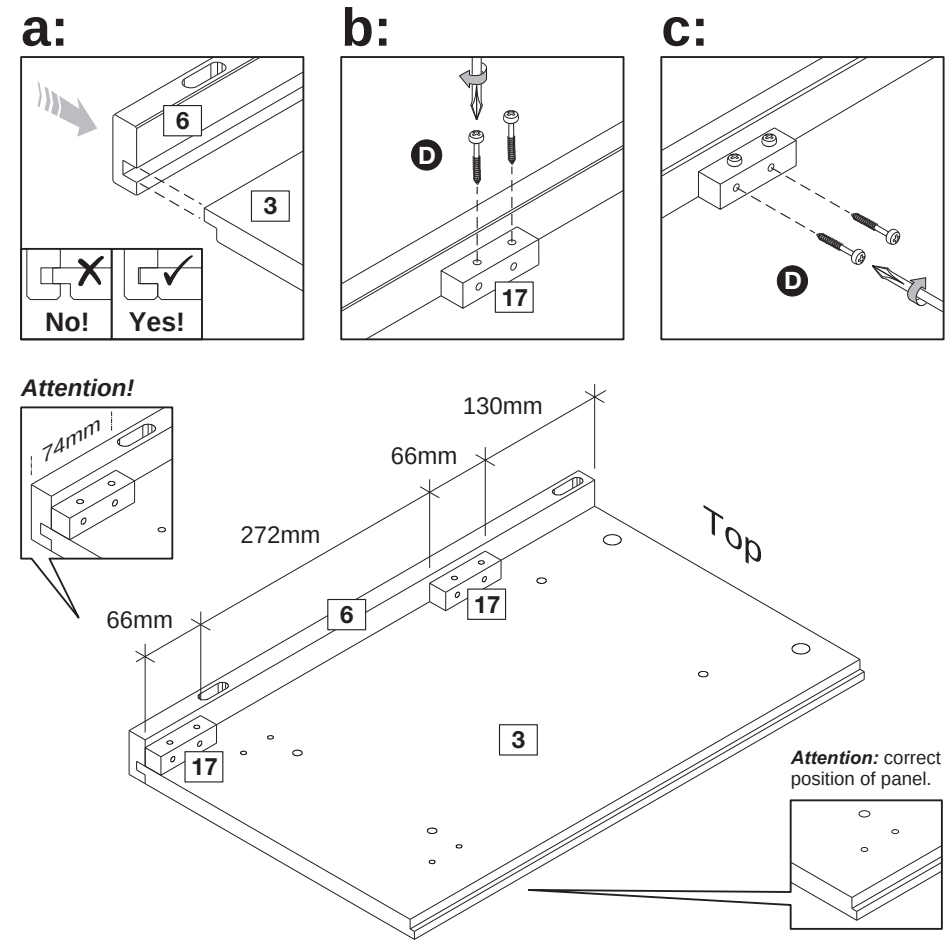

Step 3

Insert dowels A into the indicated parts.

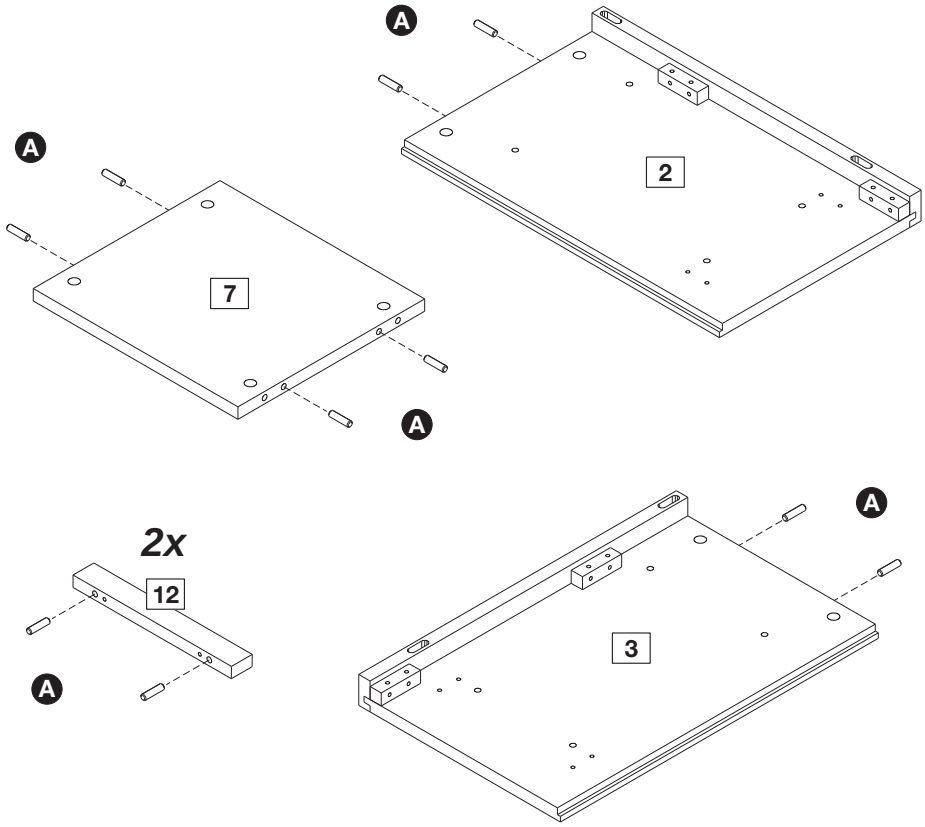


Step 4

Fitting Metal dowels.

Screw metal dowels F into top panel 1 and side panels 2 and 3.

Note: Insert metal dowels as far as shown.

Do not over tighten.

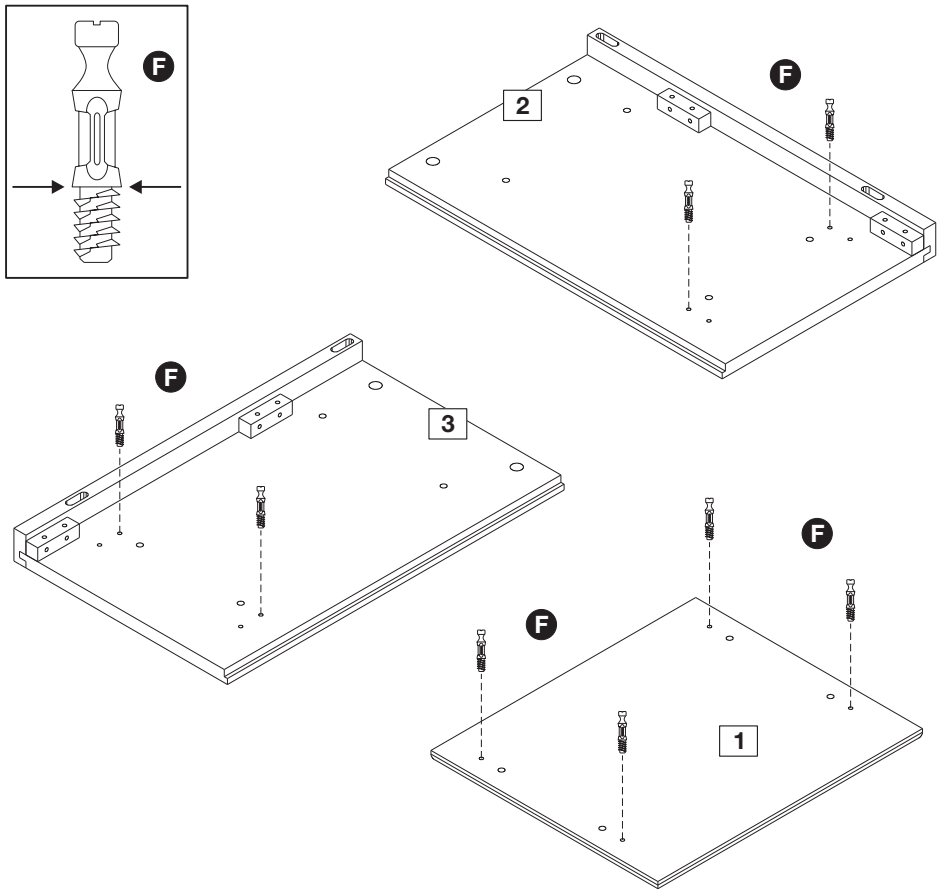


Assembly Instructions

Step **5**

Fixing side drawer runner.

Fit side drawer runner 12 to the right side panel 2 then fix it using screws D as shown.

Repeat step 5 for the left side panel and side drawer runner.

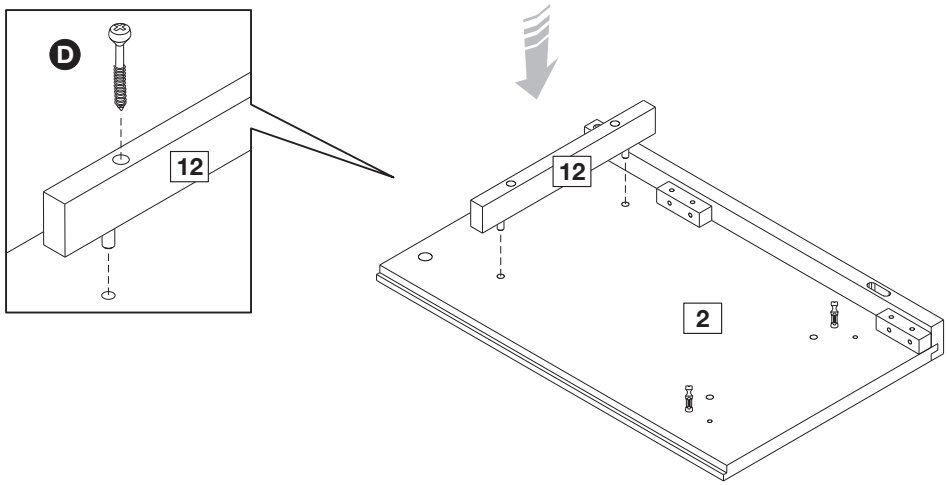


Step **6**


Assembling the cabinet.

Insert top front frame 15 and bottom front frame 16 into holes on left side panel 3 .

Attention!
The holes position on bottom front frame 16 .

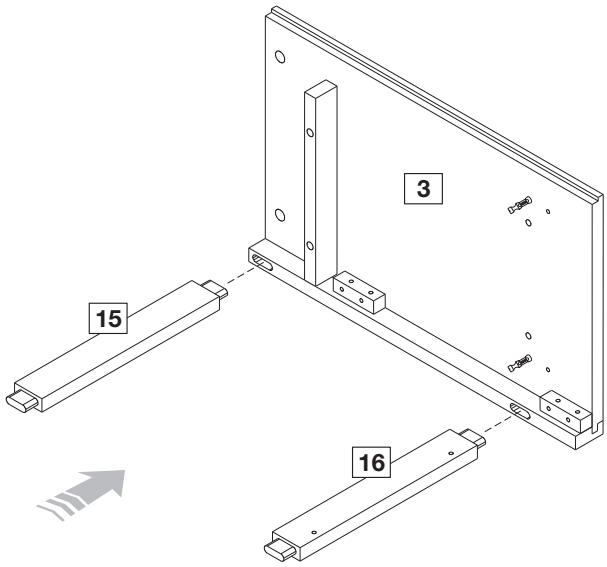

Attention!

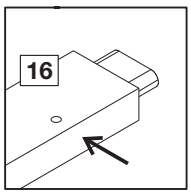

Step **7**


Assembling the cabinet.

With help, fit base panel 7 to the right side panel. Make sure rounded edge is facing front.

Insert 2 locking nuts G into base panel where shown.

Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

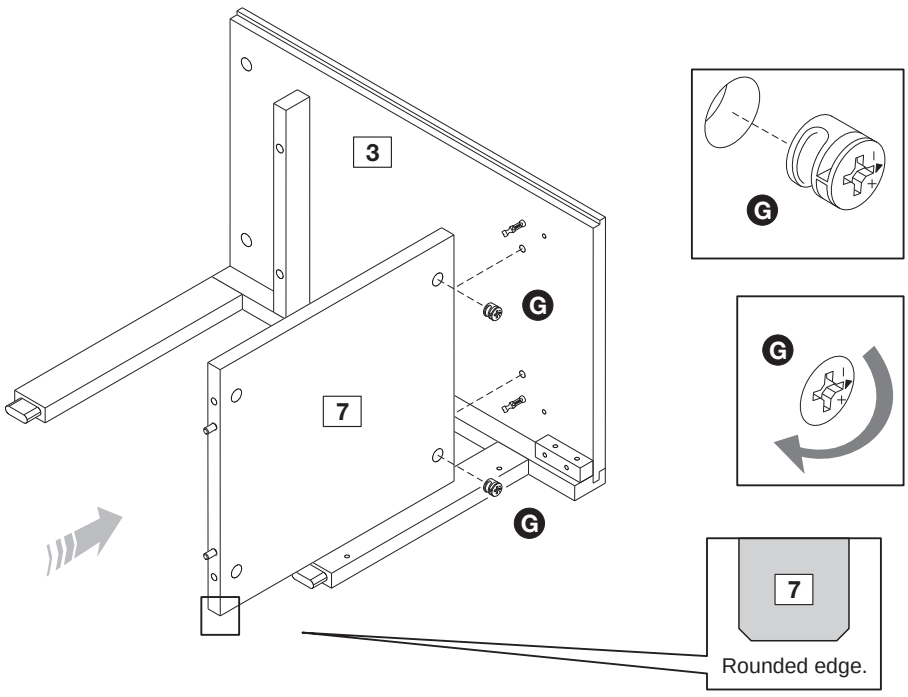

Step 8

Assembling the cabinet.


With help, fit left side panel 2 to the base panel 7 and front frames as shown.


Insert 2 locking nuts G into base panel where shown.


Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

Important: After attaching side panel, With help, carefully stand product upright.

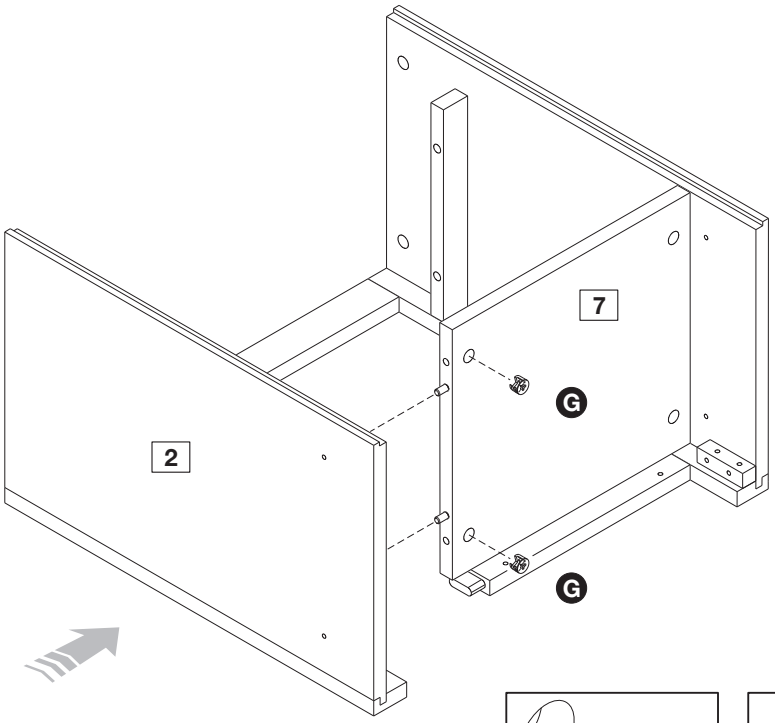

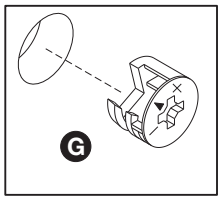

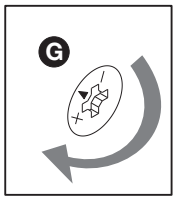

Step 9

Fixing top panel.


With help, fit top panel 1 to the cabinet.


Insert 4 locking nuts G into side panels where shown.


Use a screwdriver to turn locking nuts G clockwise to lock.

Do not over tighten.

Important: After attaching the top panel, With help, carefully lay down the product.

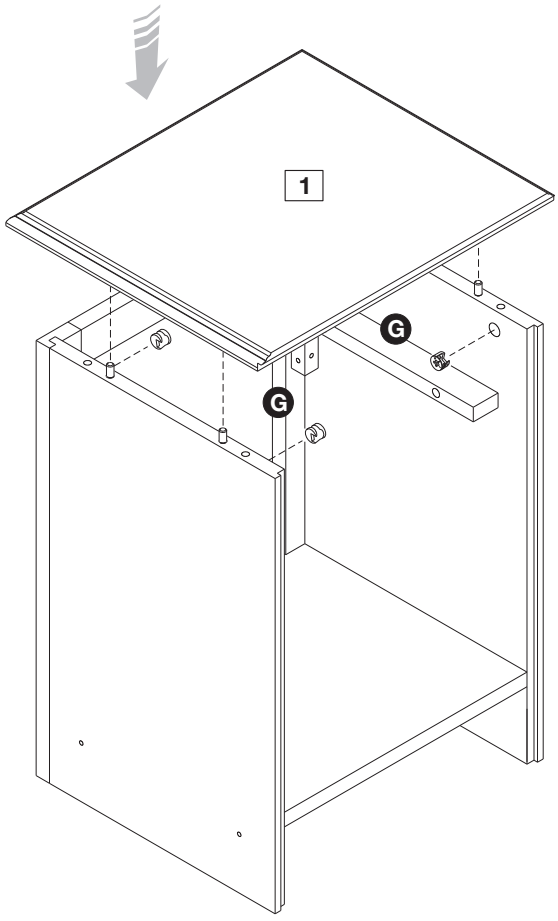

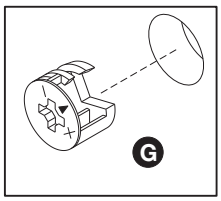

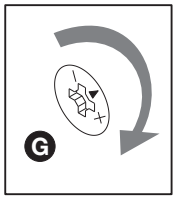


Step **10**

a: Fix side plinths 14 to the side panels using screws C.

Note:
Make sure side plinths 14 are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 13 to the bottom front frame using screws C .

Note:
Make sure front plinth 13 is aligned to the bottom edge of the side panels and in line to the side plinths.

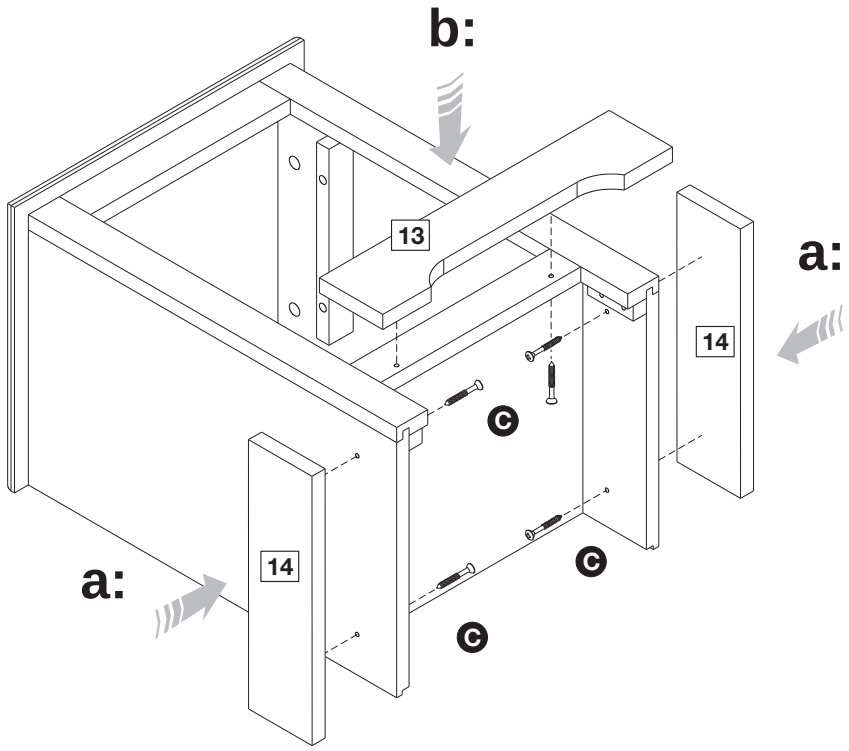


Step **11**


Fixing back panel.

With help, carefully stand the product upright.

Important:
Cabinet **MUST** be 'square' when back panel is attached.

Attach back panel 4 using nails I.

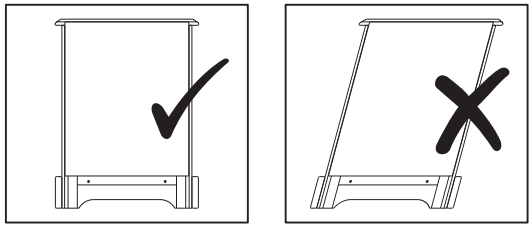

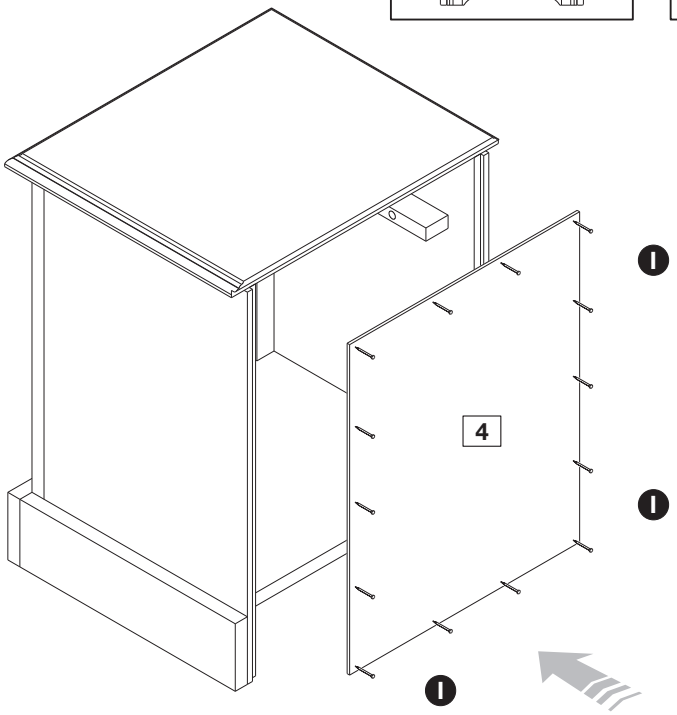

Assembly Instructions

Step **12**

Drawer assembly.


a: Attach drawer sides 10 to the drawer front 9 using screws C.

b: Slide drawer bottom 8 into slots on drawer sides and position drawer back 11 in place.


c: Carefully lay down the drawer holding drawer back 11, press the drawer sides and fix them using screws C.

Attach handle H to the drawer using bolt E, then fix handle plate to the drawer using screws B. Make sure handle plate is aligned before fixing.


a:

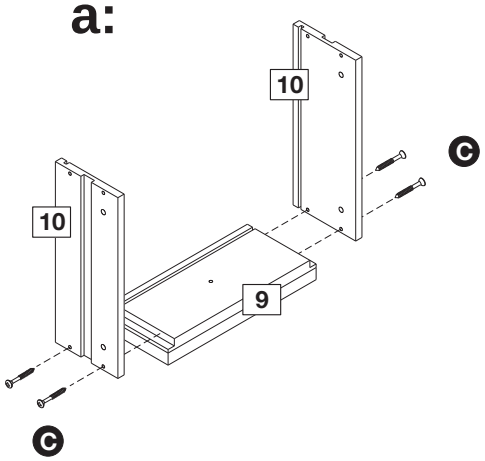

b:

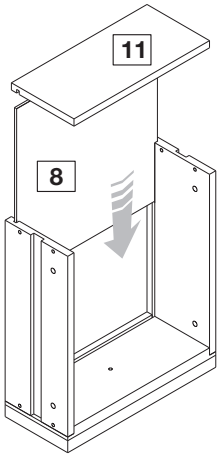


c:

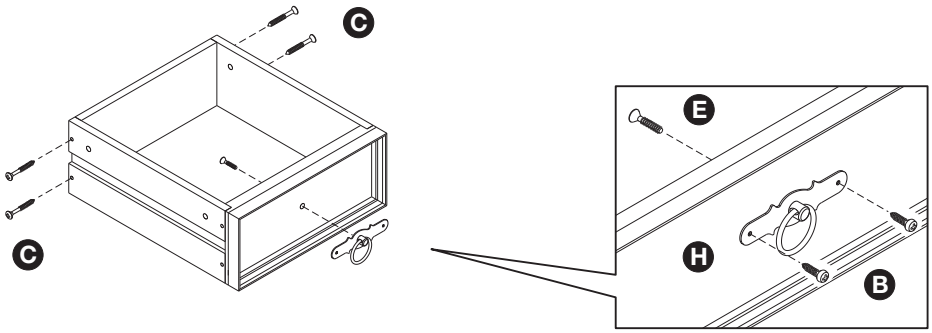


Step **13**

Insert drawer into unit. With the back of the drawer past the front frames, use a hammer to tap dowels A in flush to drawer sides. This is a safety catch to stop drawer falling out.

Assembly is complete..

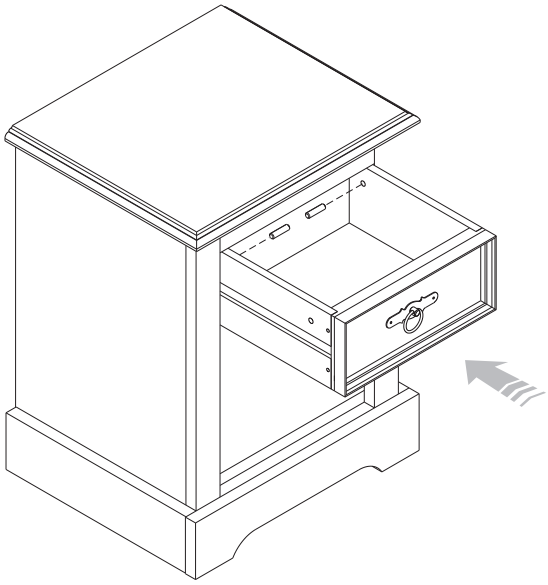

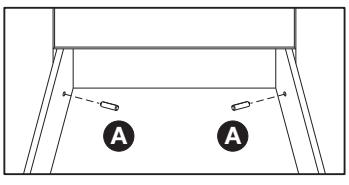

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**