
Capella - 4 + 4 Drawer Chest

Assembly Instructions - Please keep for future reference

615/8602
615/8592
615/8585
615/5571

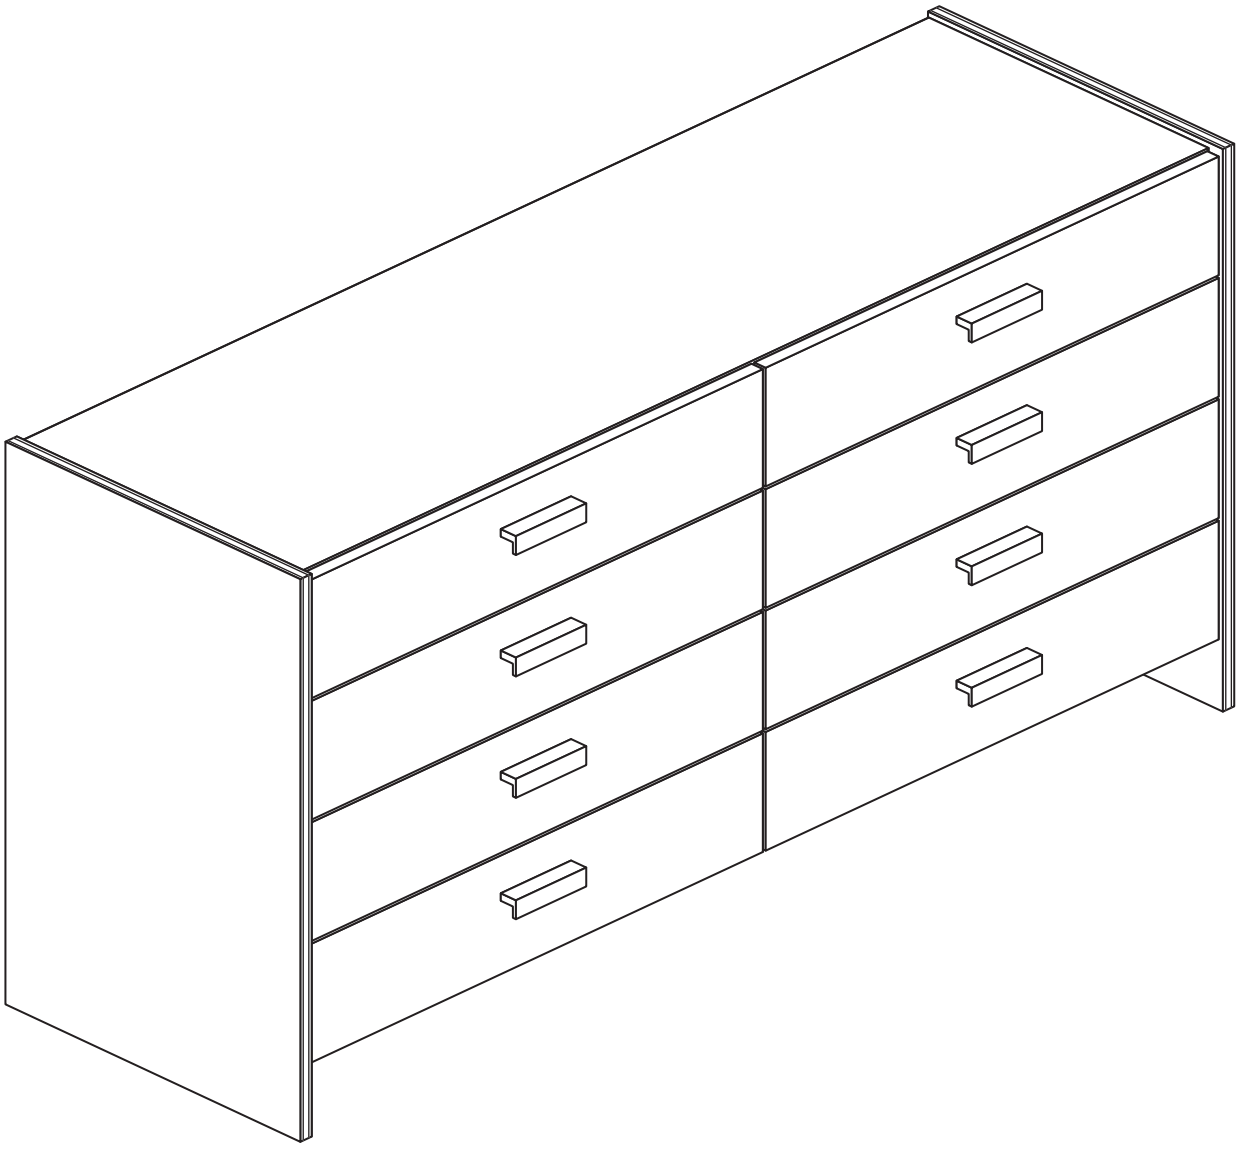

Dimensions

Width -123.5cm

Depth - 39cm

Height - 74.4cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 5 - 16/05/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 38kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

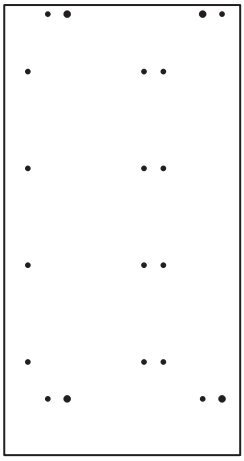


1 Left Side *(D1039A)*
(744 x 390mm)

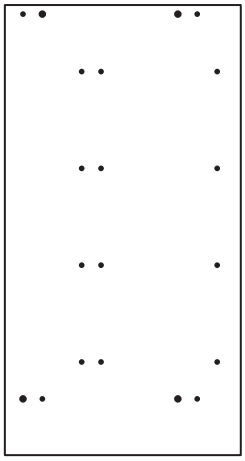


2 Right Side *(D1040A)*
(744 x 390mm)

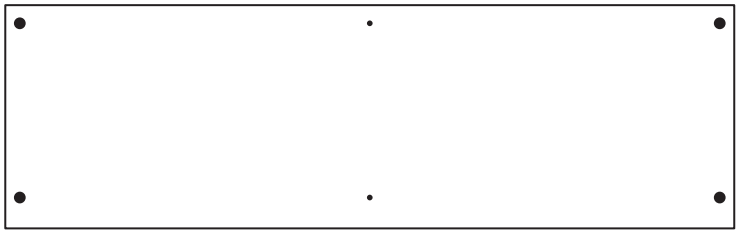


3 Top *(D1042A)*
(1205 x 369mm)

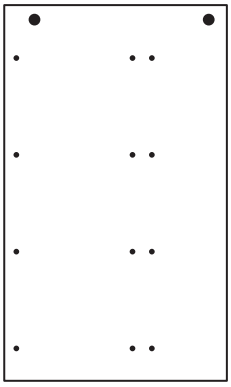


4 Upright *(D1041A)*
(621 x 368mm)




5 Rail *(D1043A)*
(1205 x 103mm) x 2




6 Left Hand Drawer Front *(D1044A)*
(599 x 157mm) x 4




7 Right Hand Drawer Front *(D1045A)*
(599 x 157mm) x 4



8 Drawer Back *(W440BBK)*
(564 x 95mm) x 8




9 Left Drawer Side *(W516BLH)*
(320 x 95mm) x 8




10 Right Drawer Side *(W516BRH)*
(320 x 95mm) x 8



11 Drawer Base *(T440)*
(317 x 575mm) x 8



12 Support *(D1046A)*
(300 x 85mm)

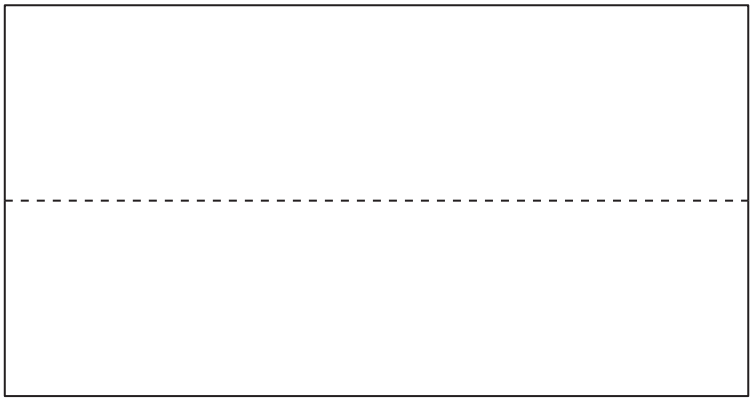


13 Back *(X832A)*
(1229 x 646mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 8

B 

Metal dowel *(F901)* x 26

C 

Nail *(F51)* x 22

D 

Large locking nut *(F900)* x 10

E 

Small locking nut *(F3)* x 16

F 

45mm Screw *(F65)* x 3

G 

25mm Screw (*F50)* x 16

H 


9mm Screw *(F74)* x 16

I 

9mm Screw (*F73)* x 32

J 

Drawer runner *(F1004)* x 16

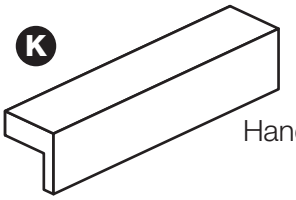
K 

Handle *(F930)* x 8

L 

Knock-in Peg *(F171)* x 32

Tools required

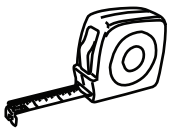

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

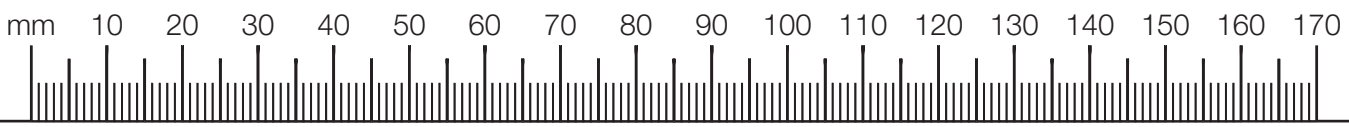

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the 4 left hand drawer fronts and 4 right hand drawer fronts

Screw 2 metal dowels (B) into the holes shown on the back of each drawer front [6] and [7].

Note: Tighten the metal dowels up fully against the panels.

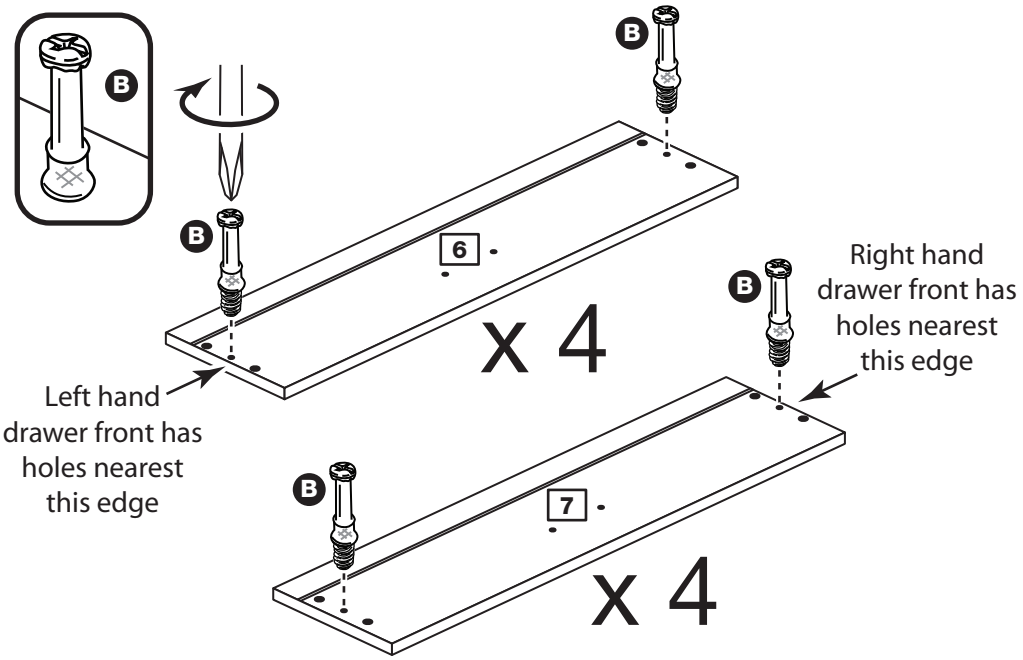


Step 2


Prepare the drawer sides

Insert a small locking nut (E) into the hole shown on the left drawer side [9] and right drawer side [10].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

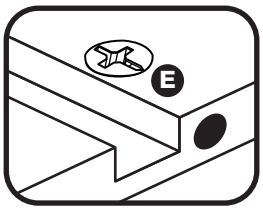


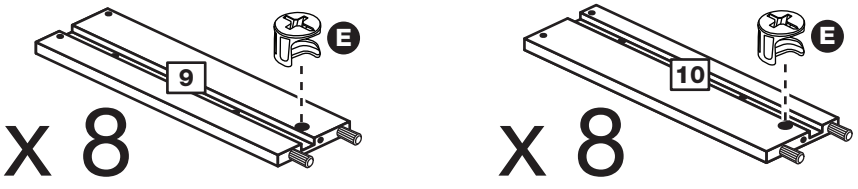

Step 3

Assemble the drawer sides and back

Fit the left drawer side [9] and right drawer side [10] to the drawer back [8] by tapping in 4 knock-in pegs (L).

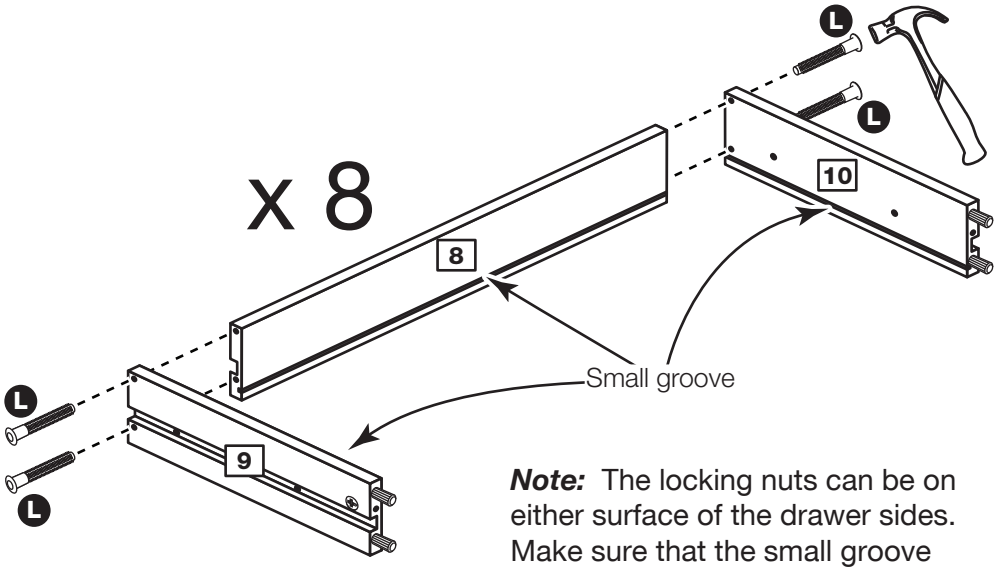


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 11 along the grooves of the drawer sides 9 and 10 into the groove of the drawer back 8.

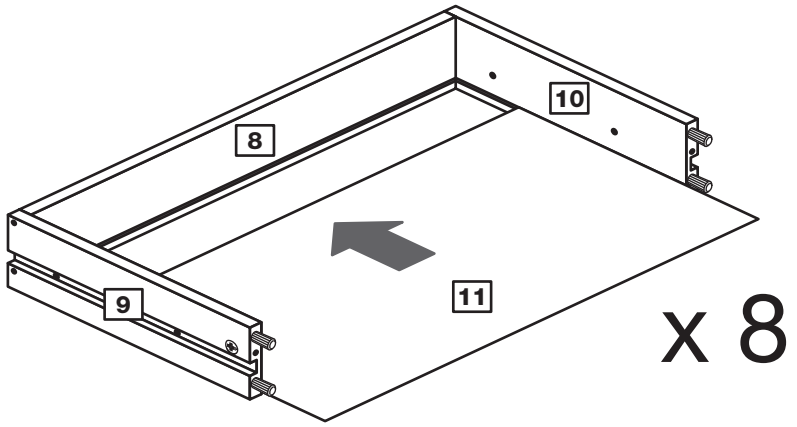


Step 5


Attach the drawer front

Turn the drawer assembly over and push onto the back of the drawer front 6 and 7.

Note: Turn locking nuts E clockwise to secure panels - more than 1/2 a turn.

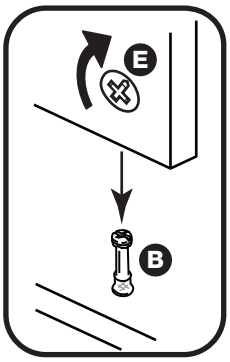


Note: The locking nuts can be on either surface of the drawer sides.

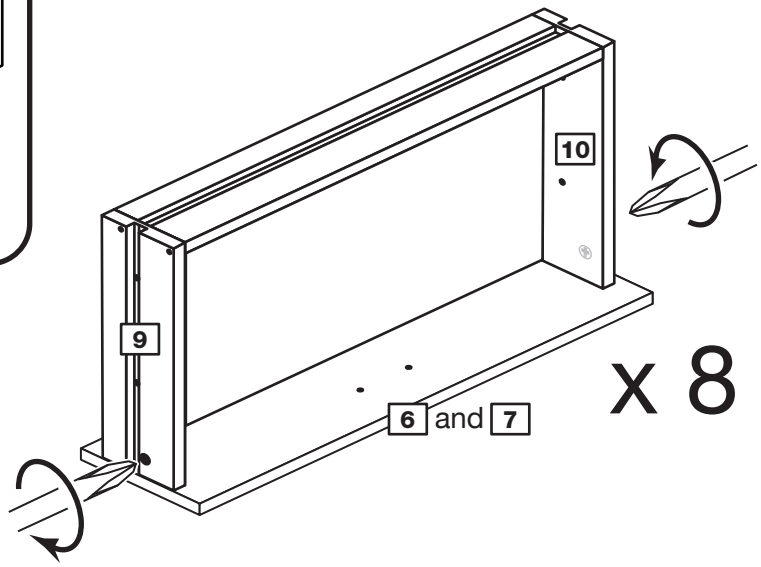

Step 6

Attach the handle


Attach a handle K to each drawer front 6 and 7 using 2 screws G.

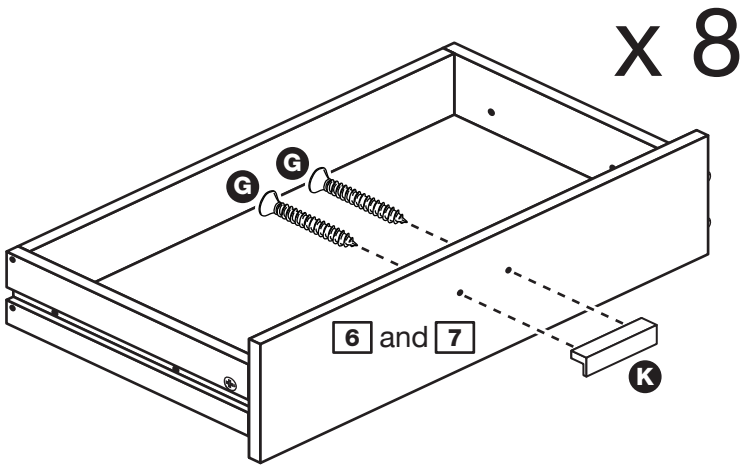


Step 7

Prepare the left side

a: Place 4 runners J on the left side 1 . Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

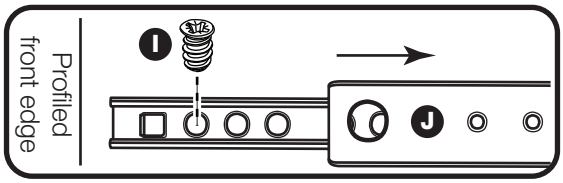


a:

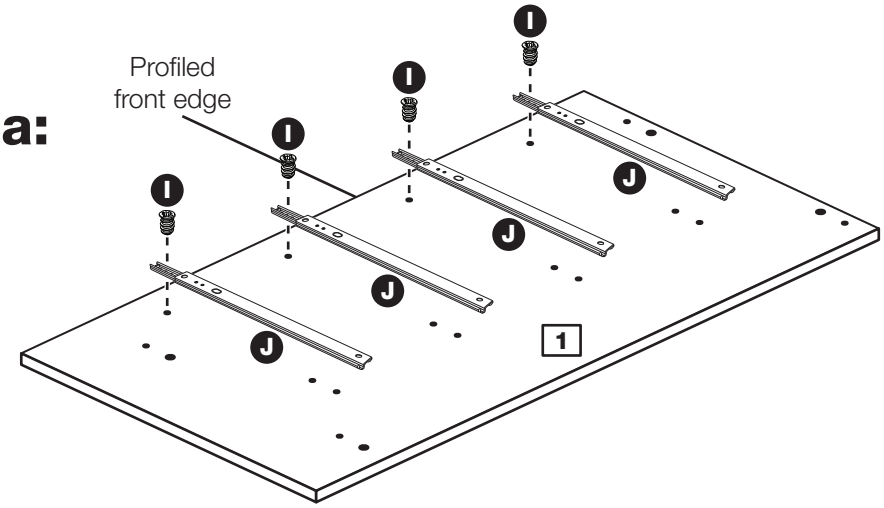


b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

b:

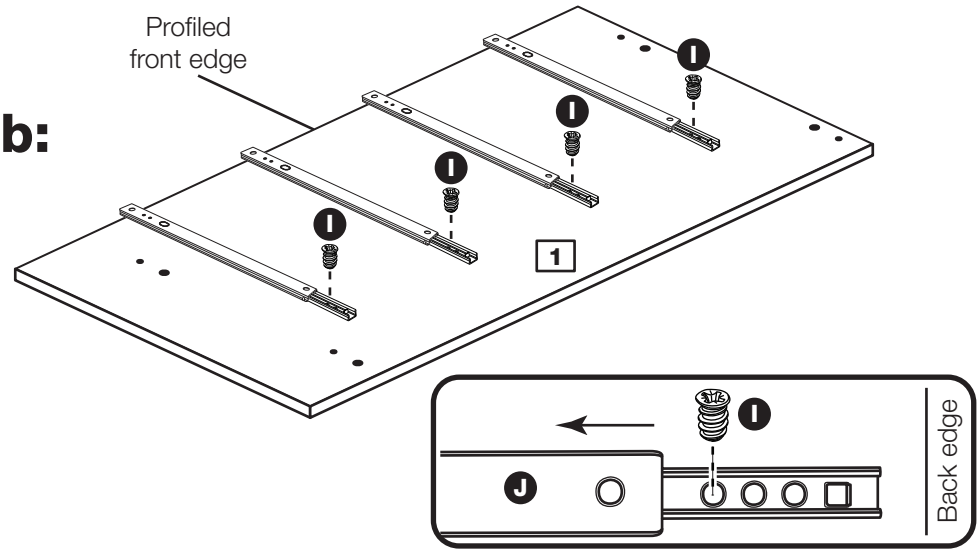

c: Screw 4 metal dowels B into the left side 1.


c:

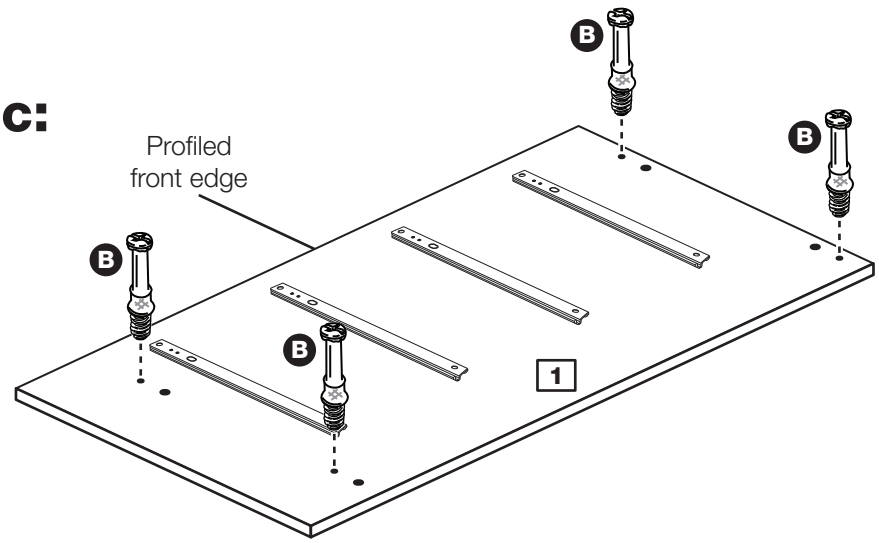


Step 8

Prepare the right side


a: Place 4 runners J on the right side 2. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

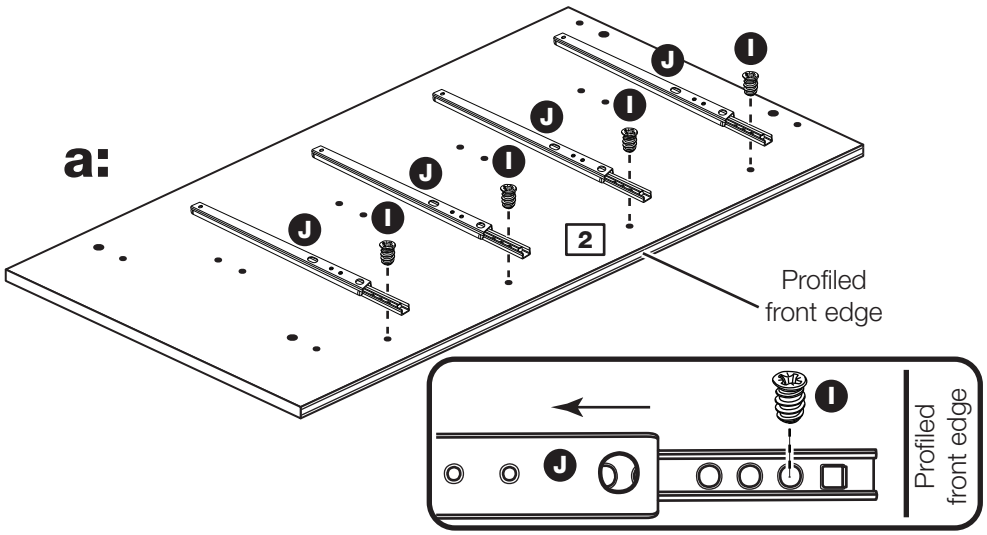

b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

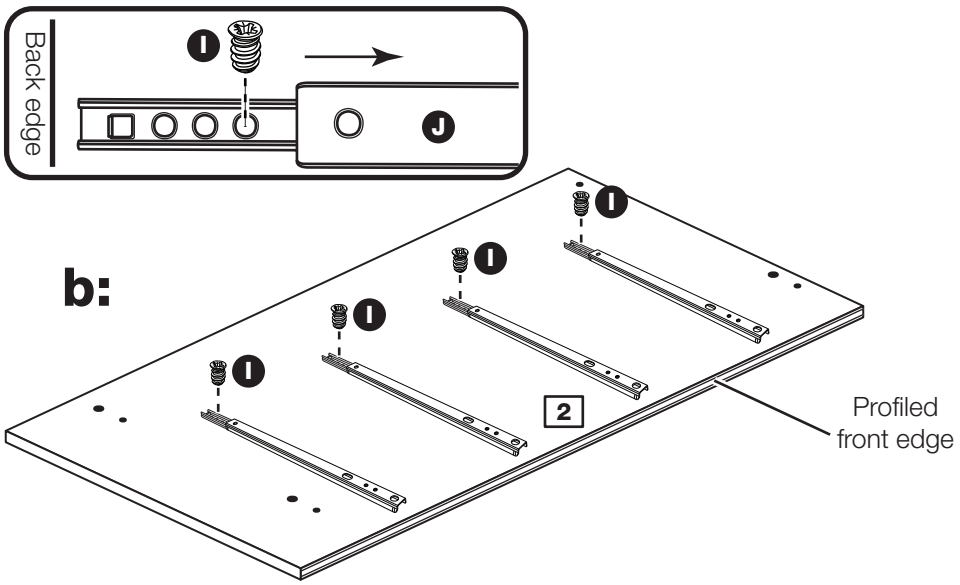

c: Screw 4 metal dowels B into the right side 2.

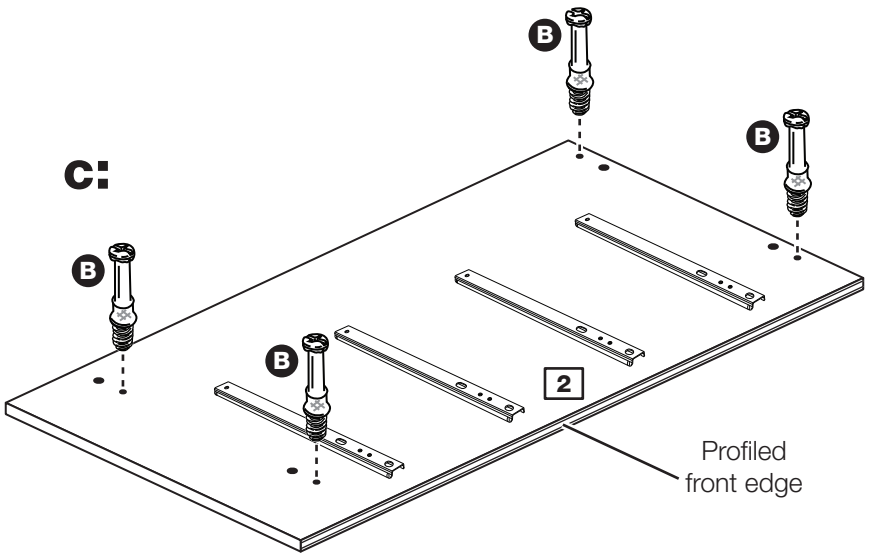


Assembly Instructions

Step 9

Prepare the upright


a: Place 4 runners J on the upright 4. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

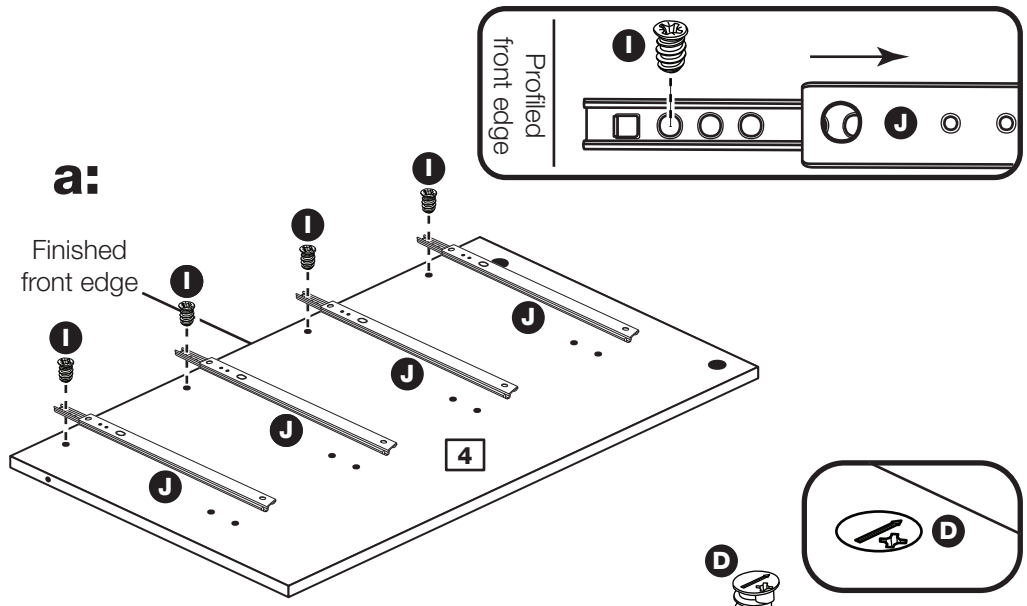

b: Slide the runner back the other way and fit the 2nd screw I into the corresponding hole in the upright 4.

Insert 2 large locking nuts D as shown.


Note: Arrow on locking nut **must** point towards hole in edge of panel.

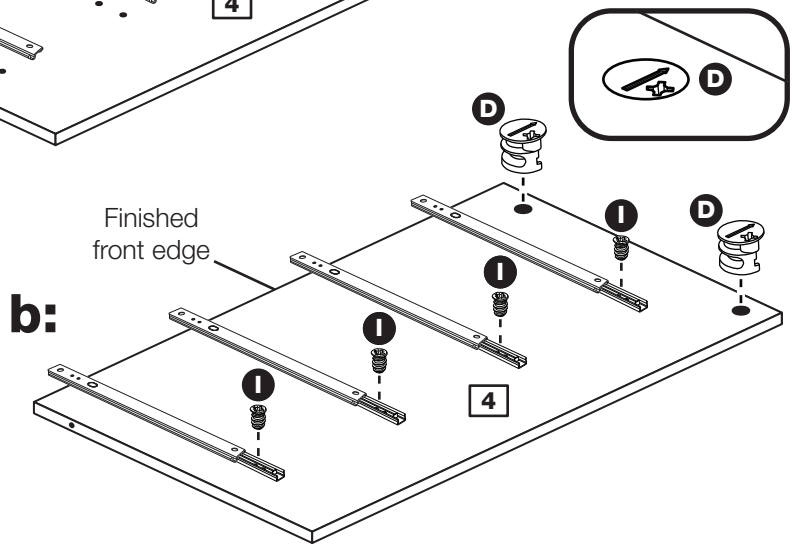

Turn the upright over.



c: Repeat the instructions above to fit 4 runners J onto the other side of the upright 13 using screws I.

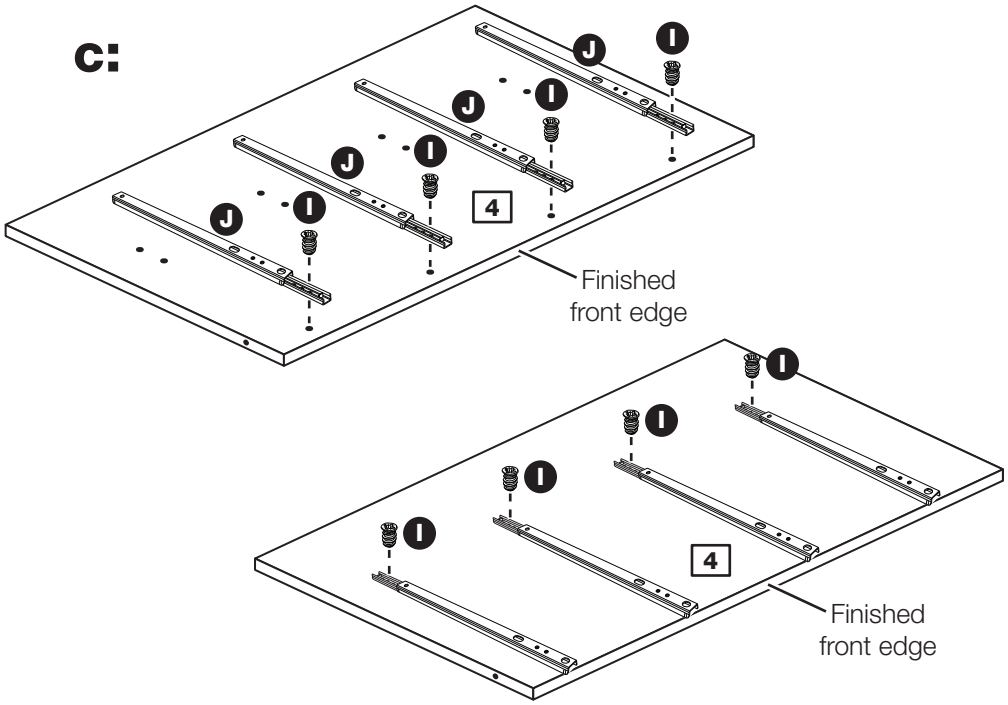

Step 10

Prepare the top


Tap 4 wooden dowels A into the top 3 as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts D into the top 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Screw 2 metal dowels B into the top 3.

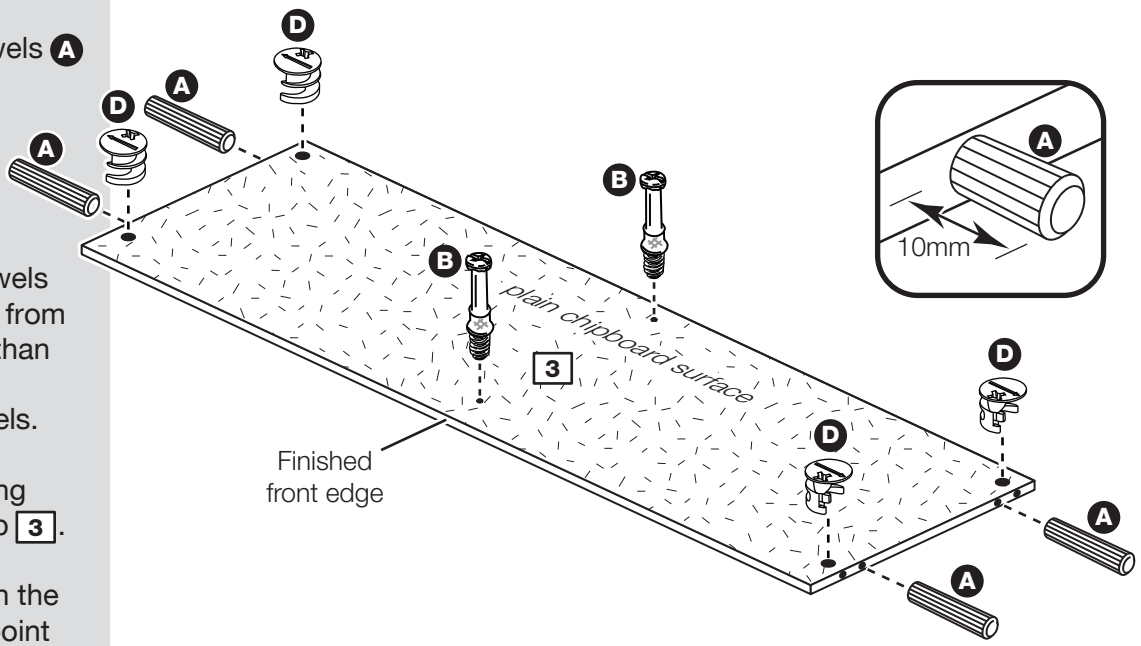


Step 11

Join the upright and top

Push the top 3 onto the upright 4 as shown.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the upright 4.


Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

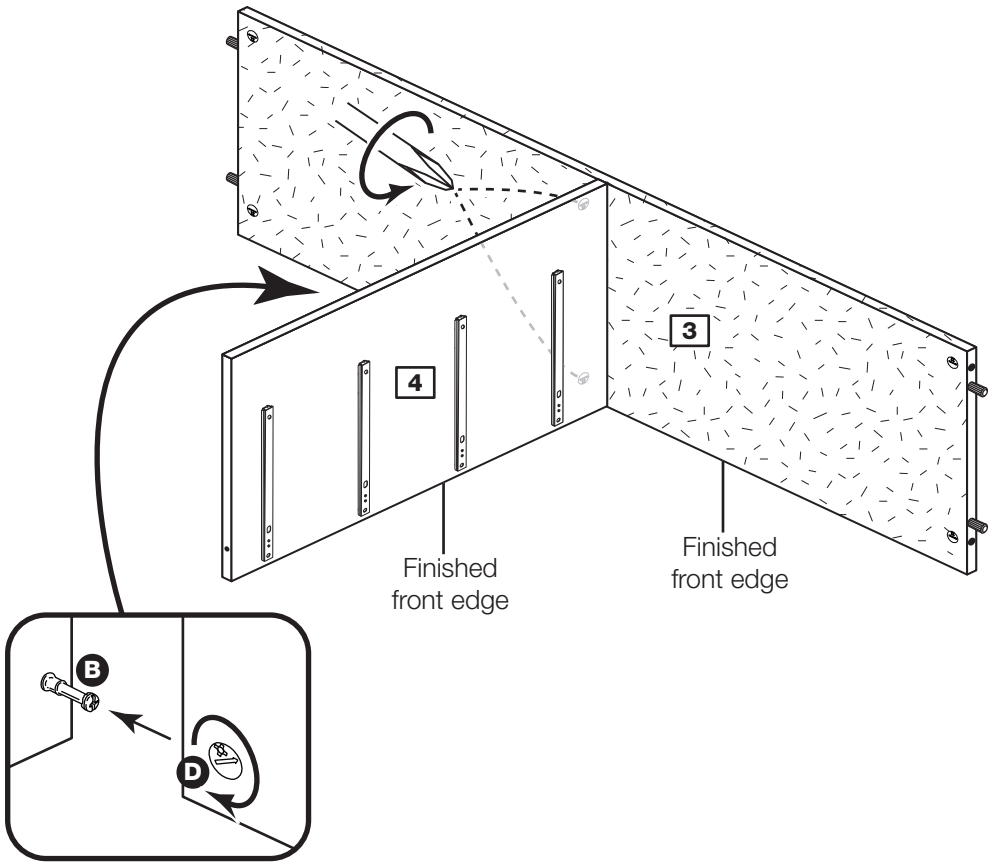

Step 12

Join the right side and top

Push the top [3] onto the right side [2] as shown.

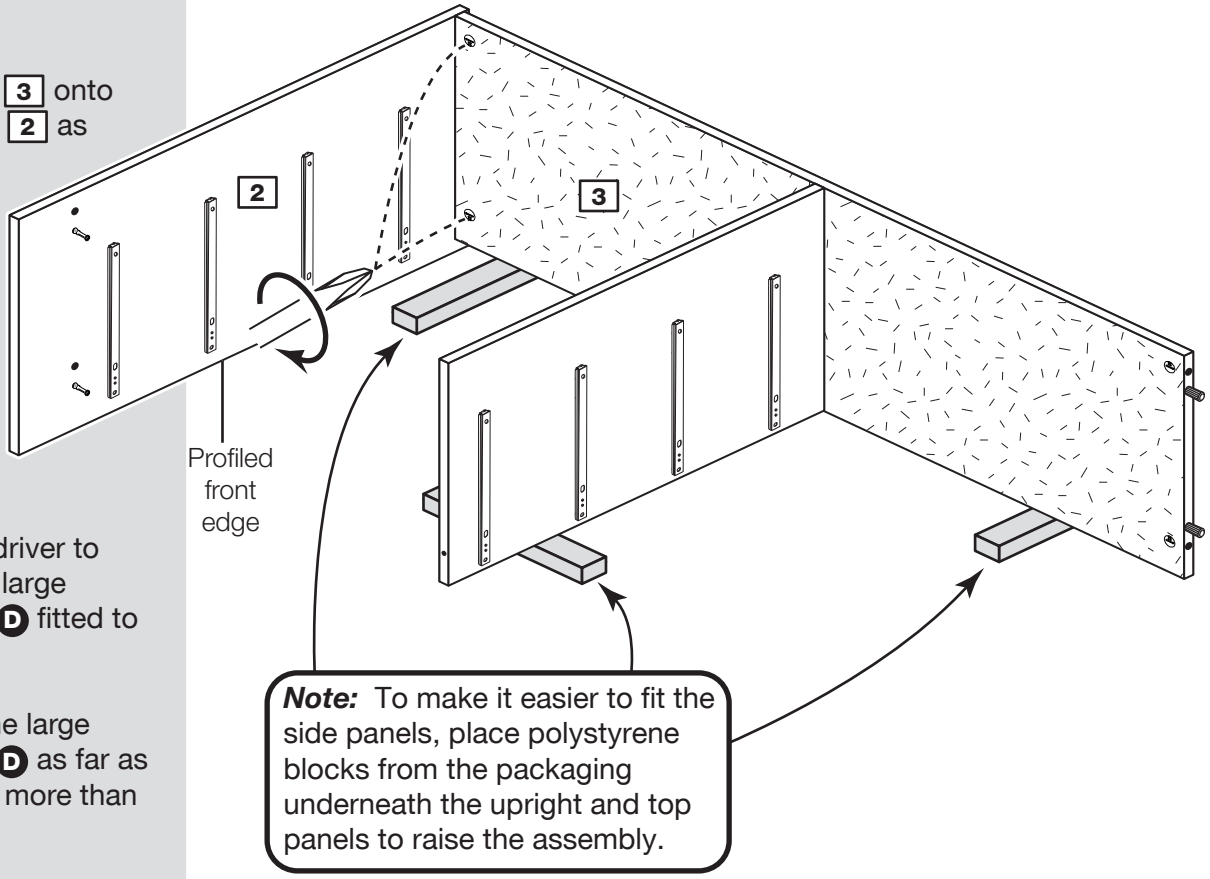

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.


Note: To make it easier to fit the side panels, place polystyrene blocks from the packaging underneath the upright and top panels to raise the assembly.

Step 13

Prepare the 2 rails

Tap 2 wooden dowels (A) into each rail [5].


Insert 2 large locking nuts (D) into each rail [5].

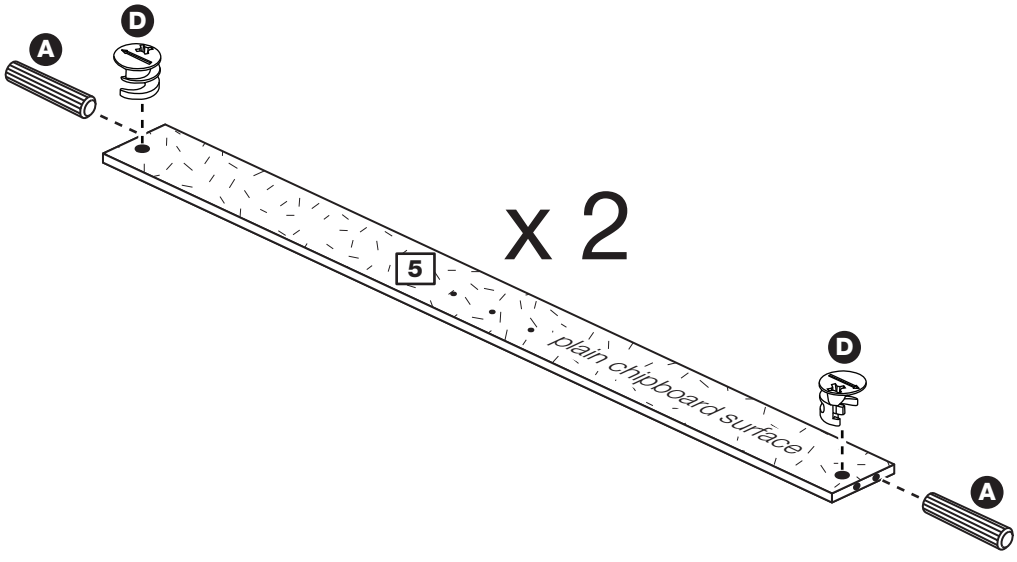

Step 14

Fit a rail

Push one of the rails [5] onto the right side [2].

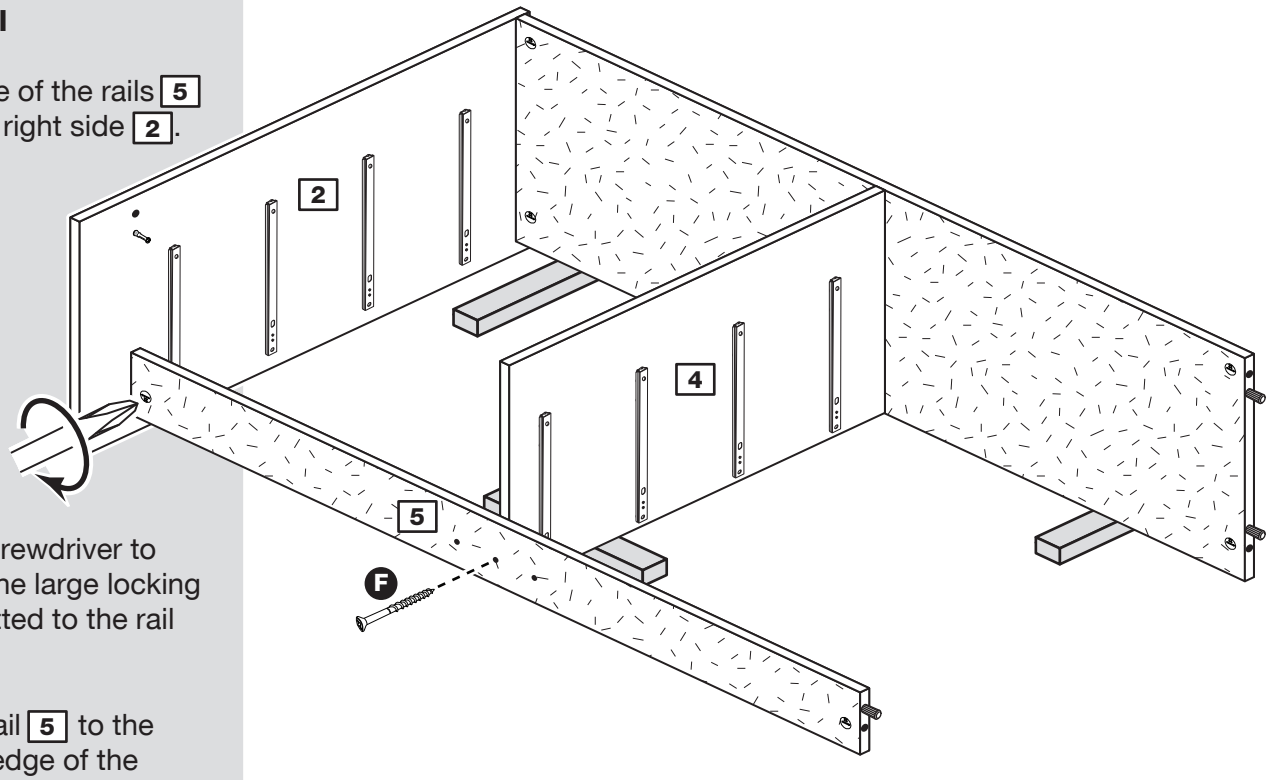


Use a screwdriver to tighten the large locking nut (D) fitted to the rail [5].

Fix the rail [5] to the bottom edge of the upright [4] using screw (F).

Step 15

Fit the other rail

Push the other rail [5] onto the right side [2].

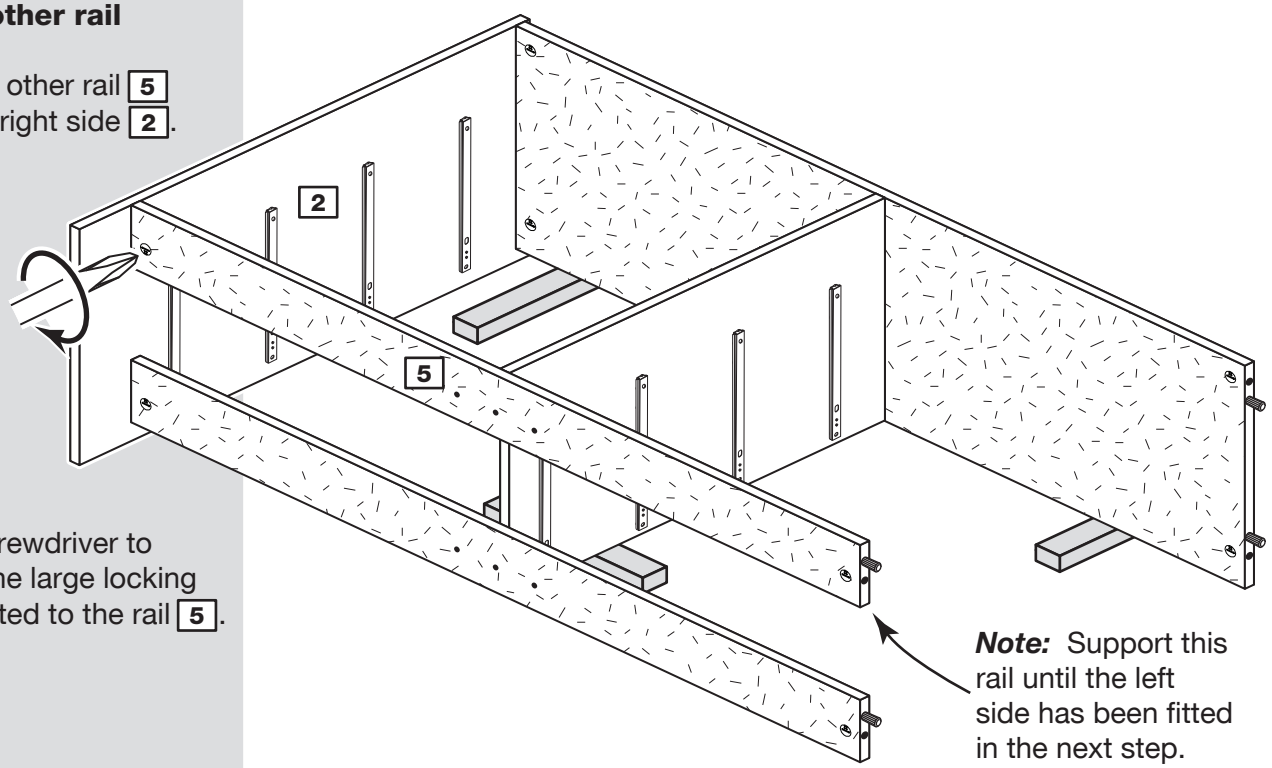


Use a screwdriver to tighten the large locking nut (D) fitted to the rail [5].

Note: Support this rail until the left side has been fitted in the next step.

Step 16

Fit the left side

Push the left side [1] onto the assembly.

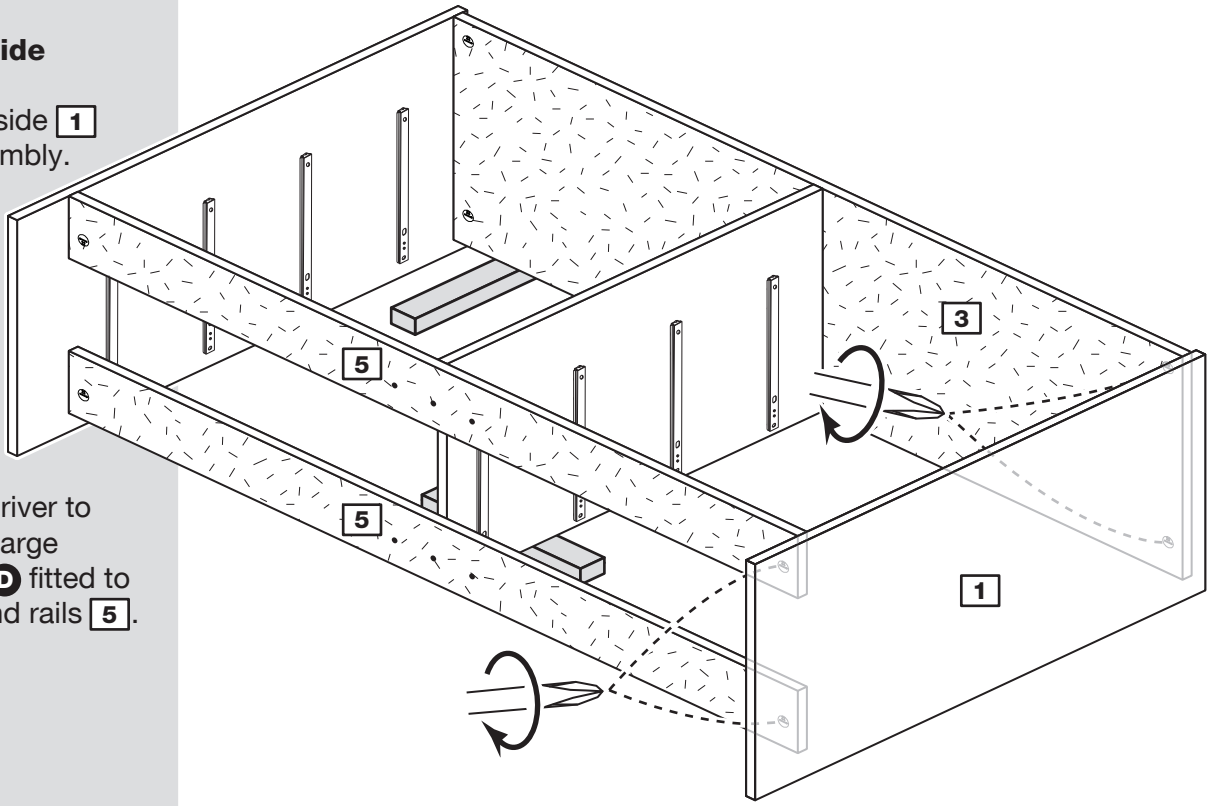


Use a screwdriver to tighten the 4 large locking nuts (D) fitted to the top [3] and rails [5].

Step 17

Fit the support

Fit the support [12] to the rail [5] at the back of the unit using 2 screws (F).

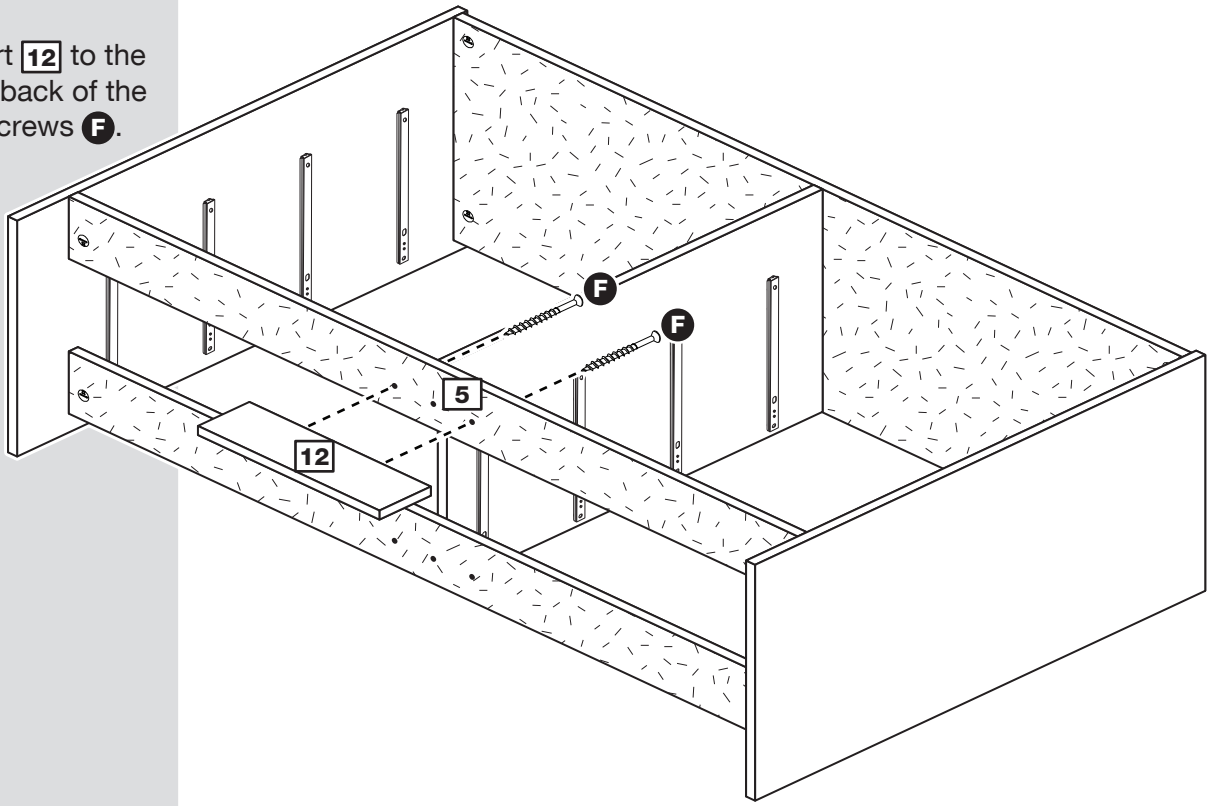


Step 18

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

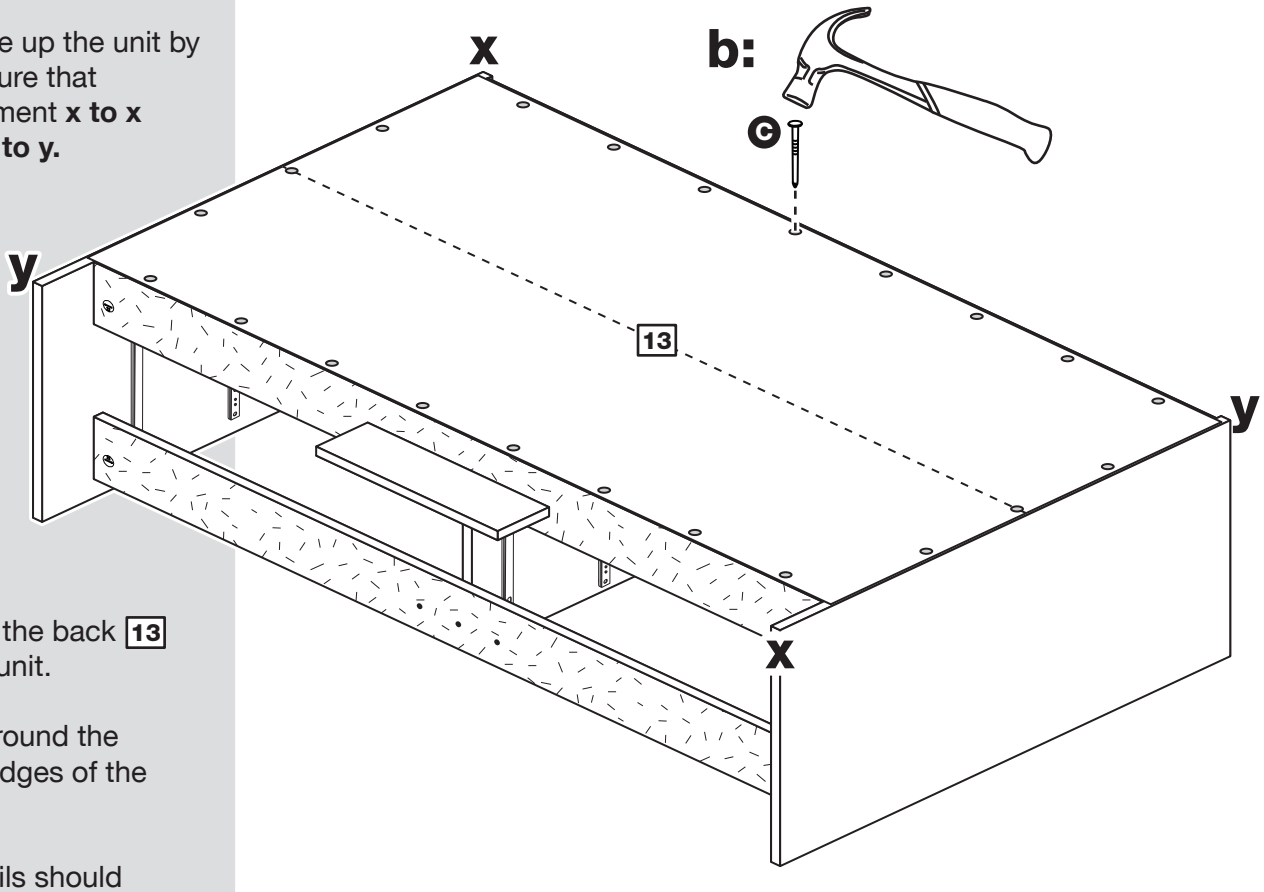

b: Place the back 13 onto the unit.

Nail c around the outside edges of the back 13.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

Step 19

Fit the drawers


Starting with the bottom drawer, slide both the runners J forward and locate the drawer sides 9 and 10 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.


Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Warning: The unit is heavy. Lift with care.

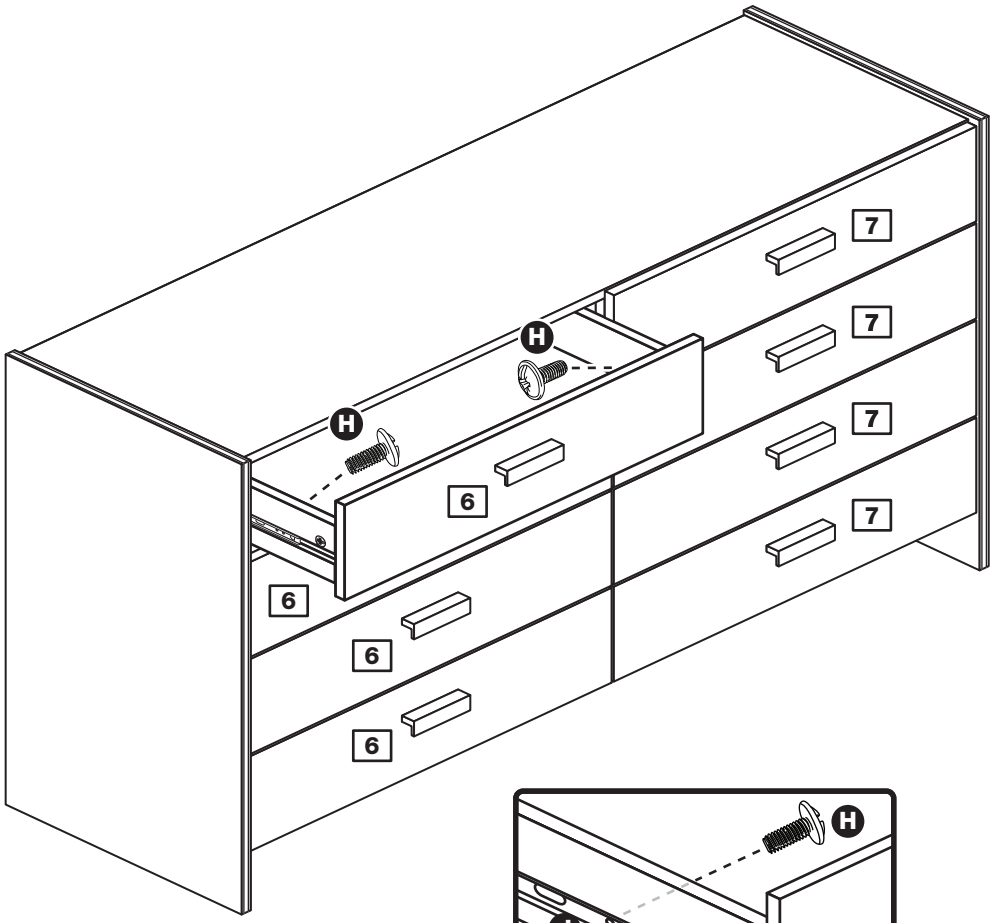

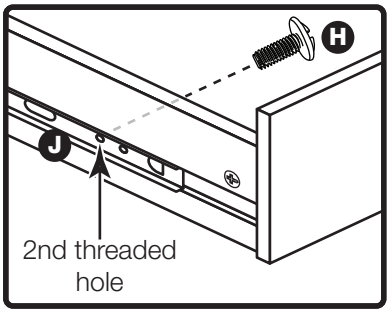


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Capella - Dressing Table

Assembly Instructions - Please keep for future reference

615/7823
615/7847
615/7830
615/5588

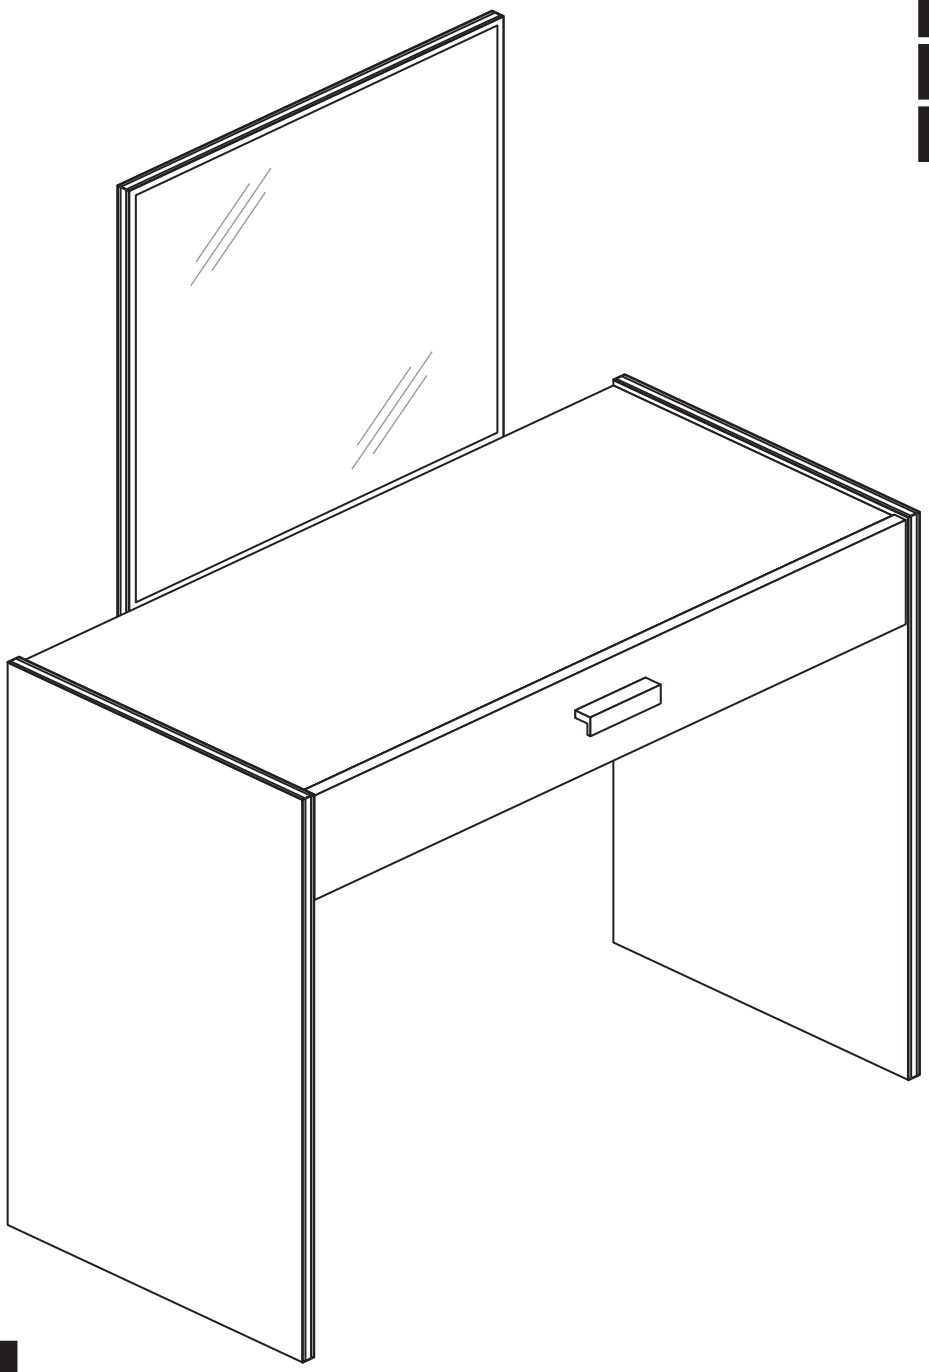

Dimensions

Width - 81.6cm

Depth - 39cm

Height - 129.3cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 3 - 16/05/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 23kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

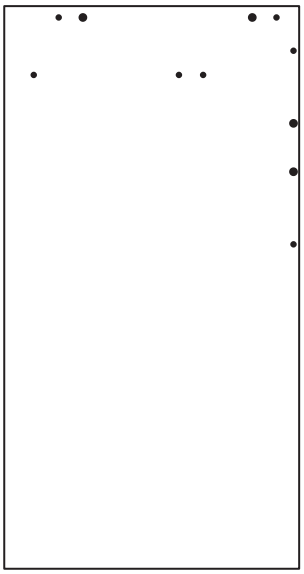


1 Left Side *(D1033A)*
(744 x 390mm)

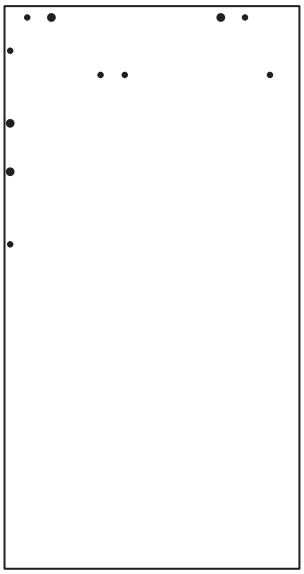


2 Right Side *(D1034A)*
(744 x 390mm)

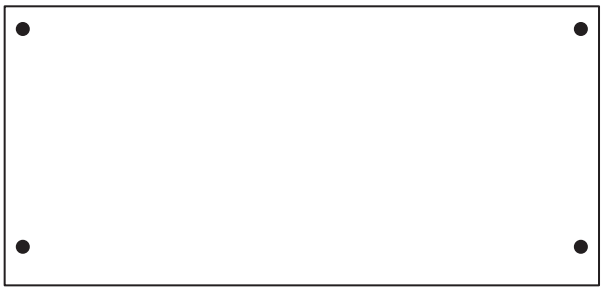


3 Top *(D1035A)*
(786 x 369mm)

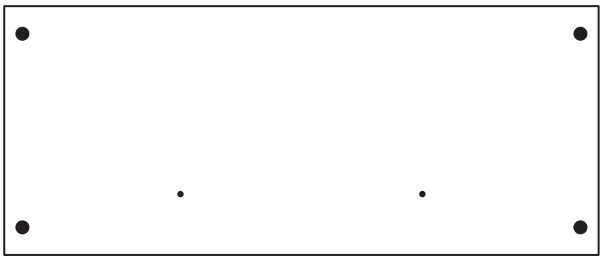


4 Modesty *(D1037A)*
(786 x 329mm)




5 Drawer Front *(D1038A)*
(782 x 138mm)




6 Left Drawer Side *(W516BLH)*
(320 x 95mm)




7 Right Drawer Side *(W516BRH)*
(320 x 95mm)



8 Drawer Back *(W441BBK)*
(756 x 95mm)



9 Drawer Base *(T441)*
(767 x 317mm)

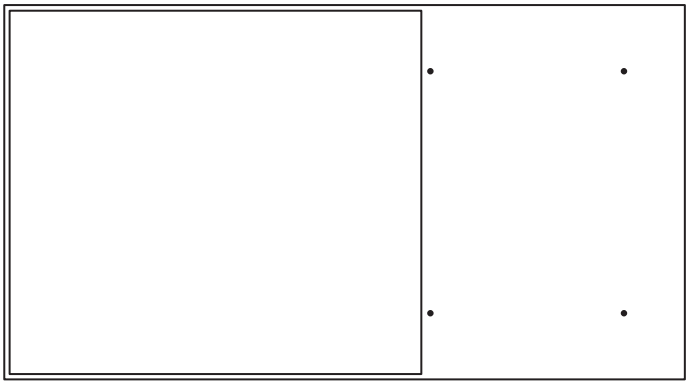

10 Mirror Back *(D1036A)*
(900 x 495mm)


(Mirror SG12
484 x 548mm
4mm Safety Back SAR)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 8

B 

Metal dowel *(F901)* x 10

C 

25mm Connecting sleeve *(F432)* x 2

D 

Large locking nut *(F900)* x 8

E 

Small locking nut *(F3)* x 2

F 

45mm Screw *(F65)* x 2

G 

25mm Screw *(F50)* x 2

H 


9mm Screw *(F74)* x 4

I 

9mm Screw *(F73)* x 4

J 

Drawer runner *(F1004)* x 2

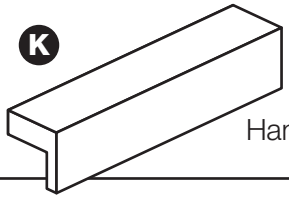
K 

Handle *(F930)* x 1

L 

Knock-in Peg *(F171)* x 4

Tools required

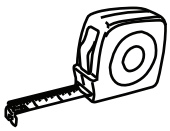

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

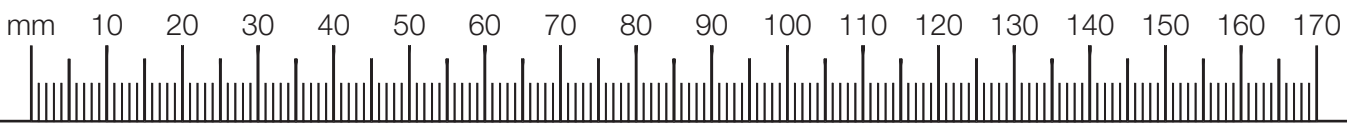

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 5.

Note: Tighten the metal dowels up fully against the panels.

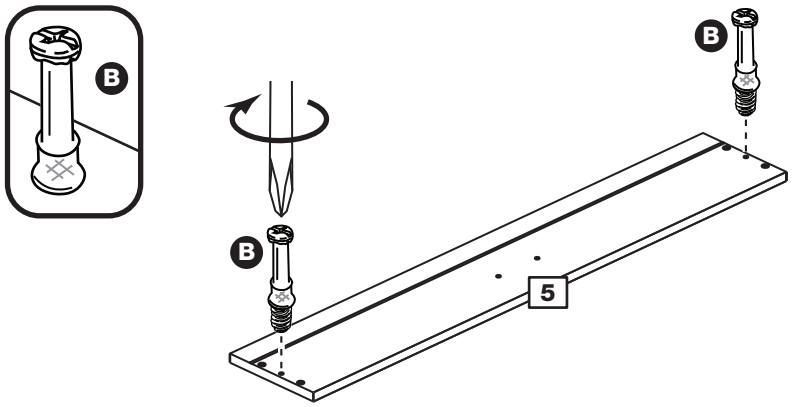


Step 2

Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 6 and right drawer side 7.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

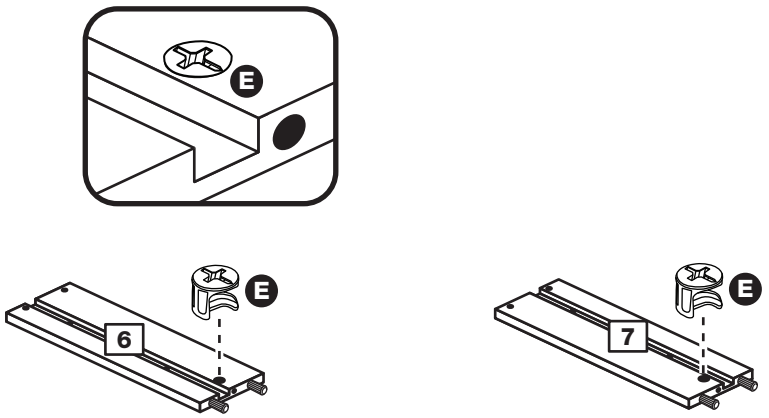

Step 3

Assemble the drawer sides and back

Fit the left drawer side 6 and right drawer side 7 to the drawer back 8 by tapping in 4 knock-in pegs L.

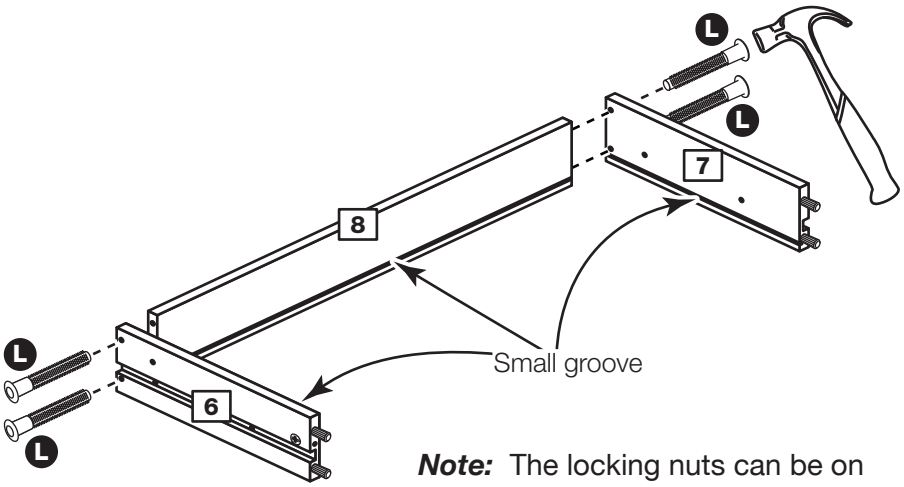


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Step 4

Fit the drawer base

Slide the drawer base [9] along the grooves of the drawer sides [6] and [7] into the groove of the drawer back [8].

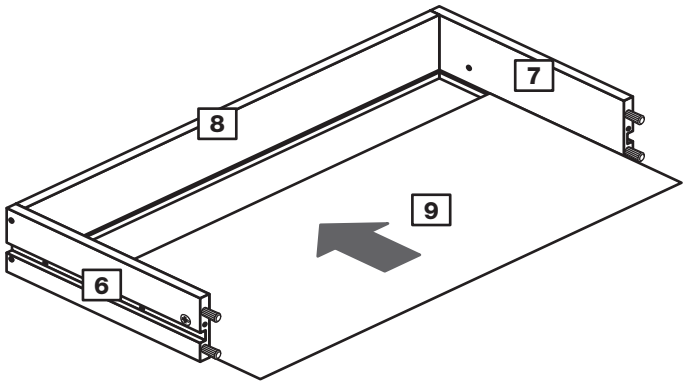


Step 5


Attach the drawer front

Turn the drawer assembly over and push onto the back of the drawer front [5].

Note: Turn locking nuts (E) clockwise to secure panels - more than 1/2 a turn.

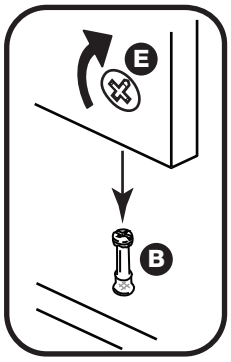


Note: The locking nuts can be on either surface of the drawer sides.

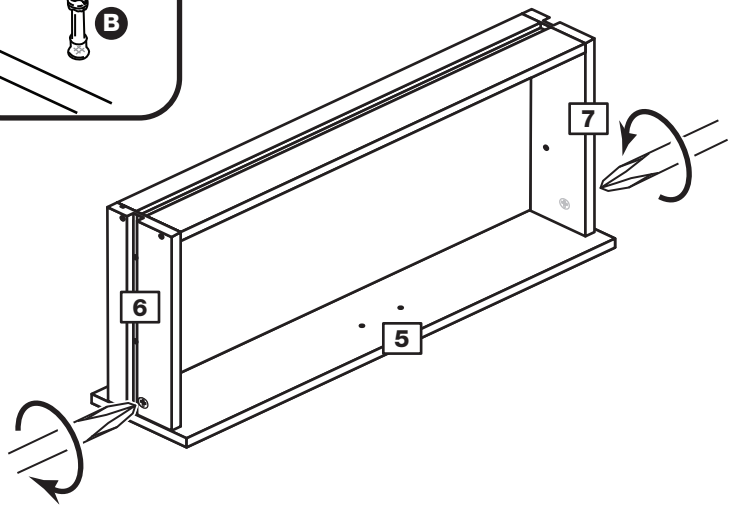

Step 6

Attach the handle


Attach a handle (K) to the drawer front [5] using 2 screws (G).

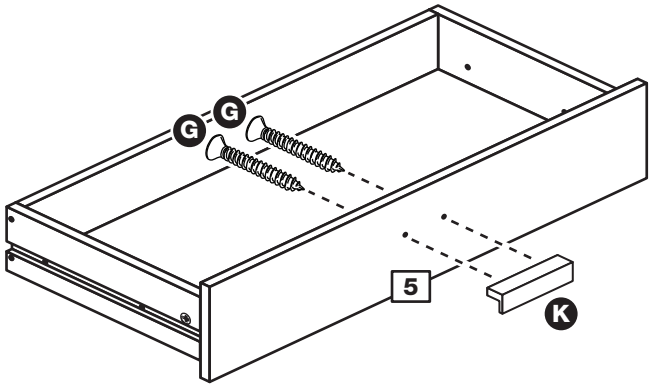


Step 7

Prepare the left side

a: Place 1 runner J on the left side 1 . Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

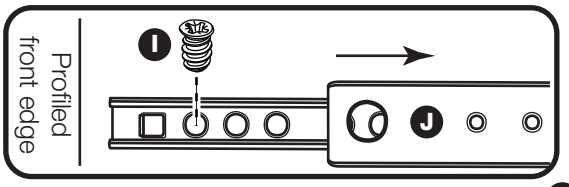


a:

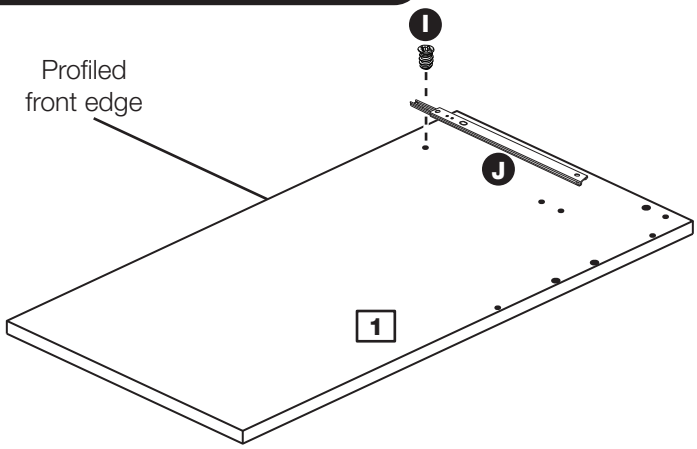


b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

b:

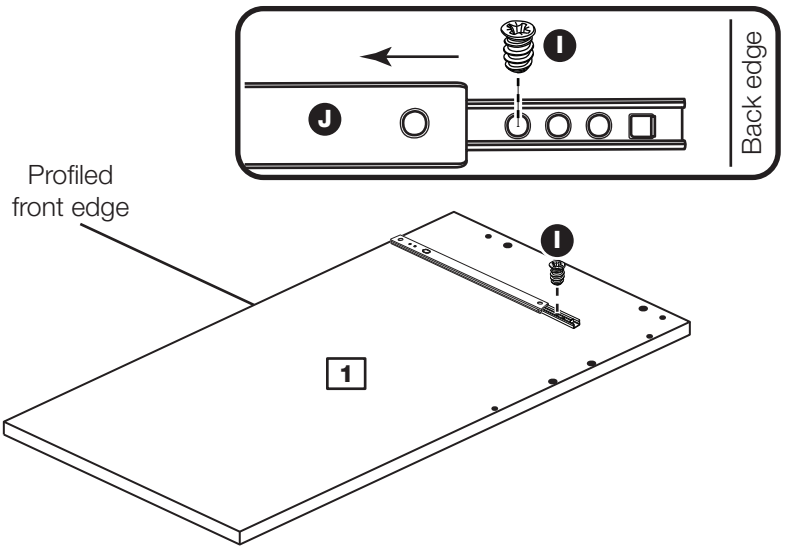

c: Screw 4 metal dowels B into the left side 1.

c:

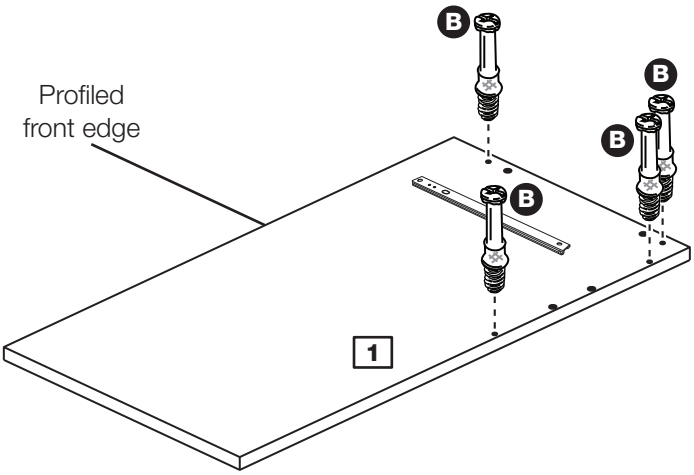



Step 8

Prepare the right side


a: Place 1 runner J on the right side 2. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.


a:

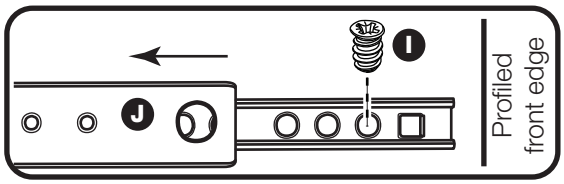

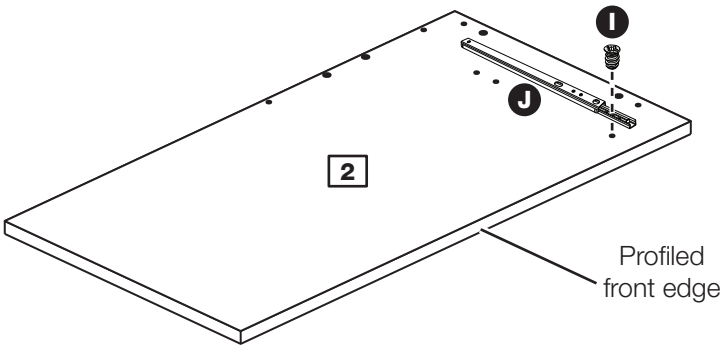


b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

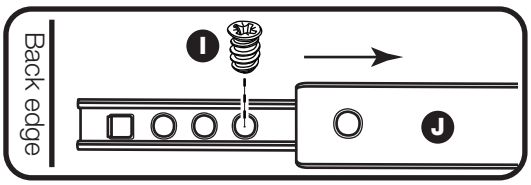

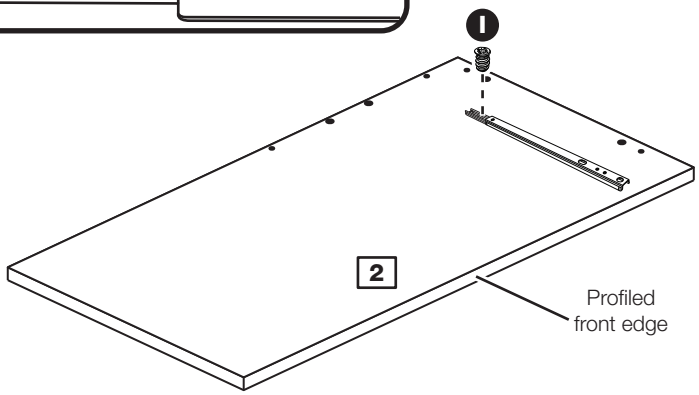

c: Screw 4 metal dowels B into the right side 2.

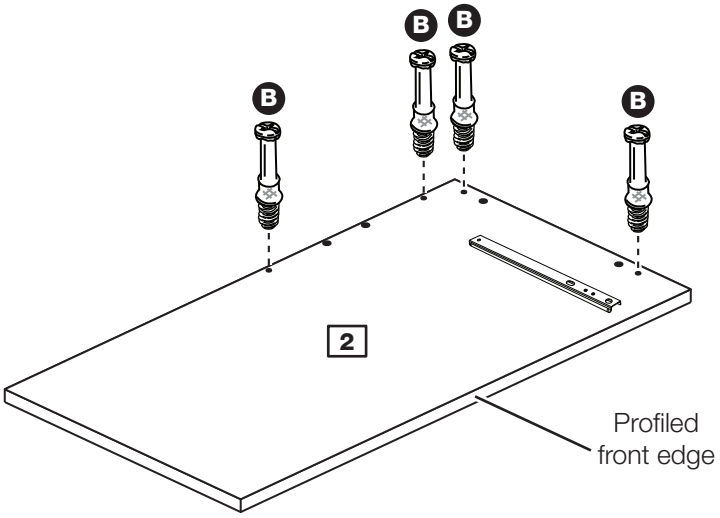

Step 9


Prepare the top

Tap 4 wooden dowels (A) into the top [3] as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts (D) into the top [3] as shown.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

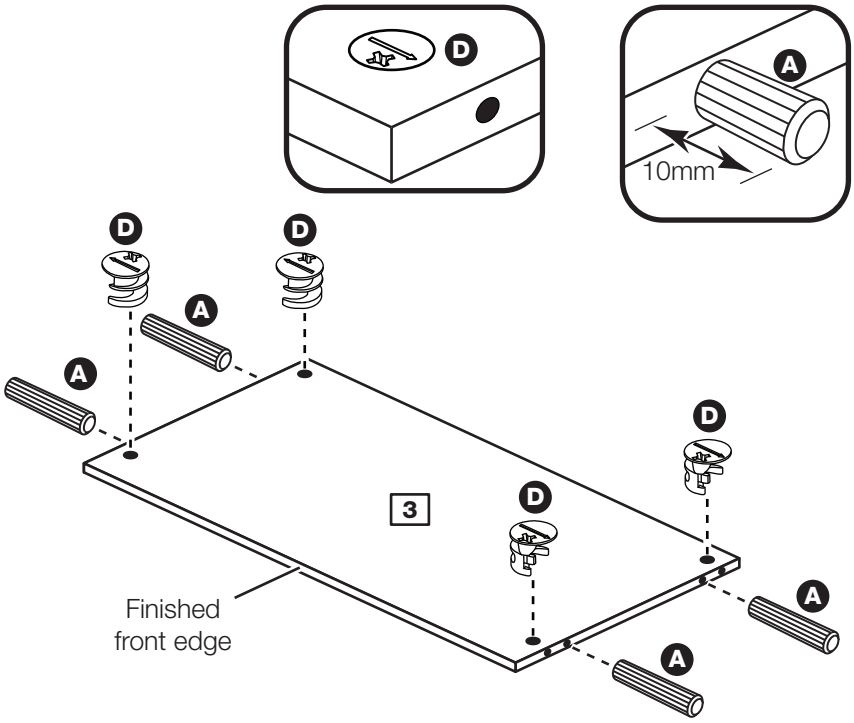


Step 10

Join the right side and top

Push the top [3] onto the right side [2] as shown.

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

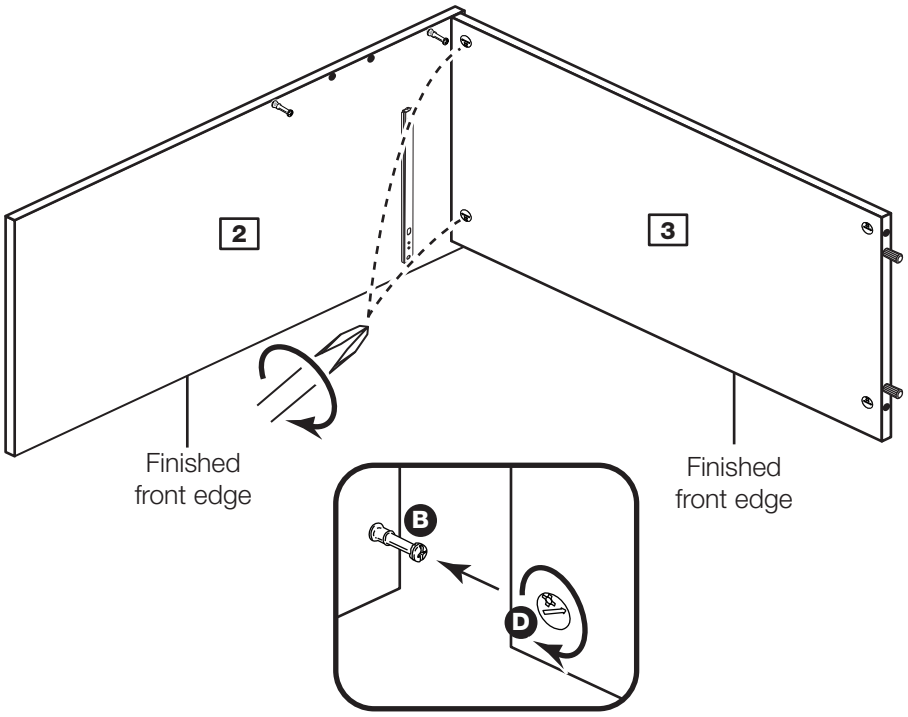


Step 11

Prepare the modesty

Tap 4 wooden dowels (A) into the modesty [4].

Insert 4 large locking nuts (D) into the modesty [4].

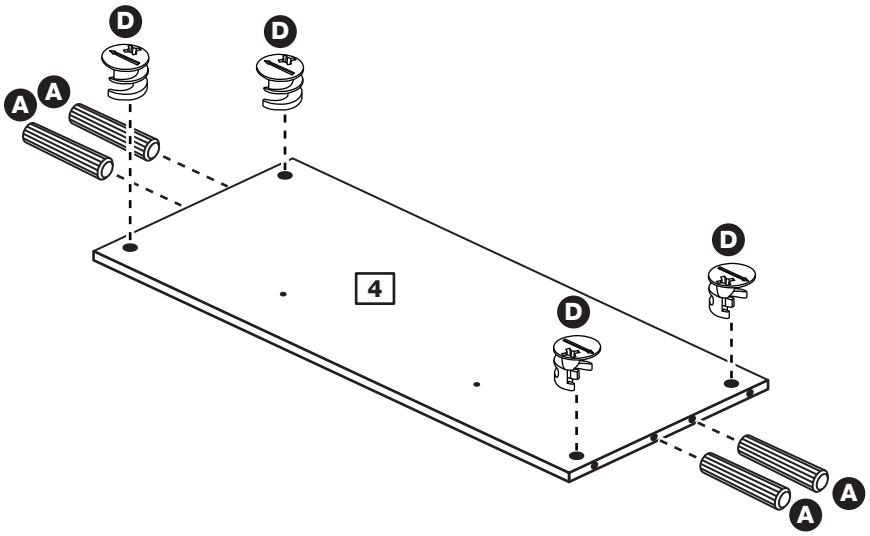

Step 12


Fit the modesty

2 people are needed here

Attach the modesty [4] to the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the modesty [4].

Support the modesty until the left side has been fitted in the next step.

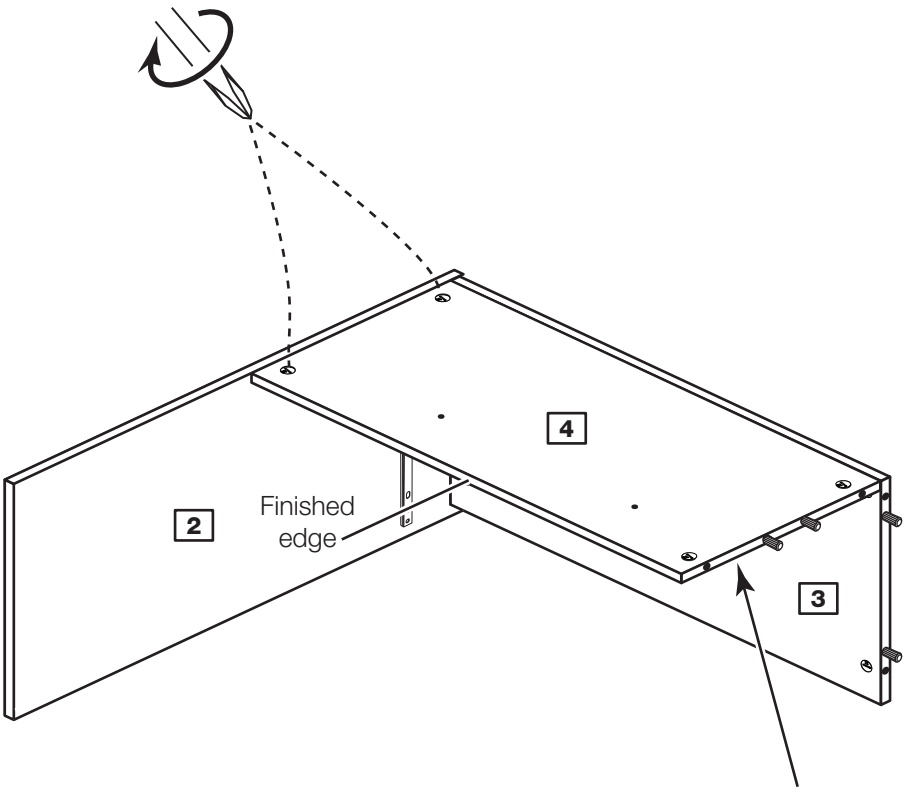


Note: Support this end of modesty until the left side has been fitted in the next step.

Step 13

Fit the left side

Push the left side [1] onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts (D) fitted to the top [3] and the modesty [4].

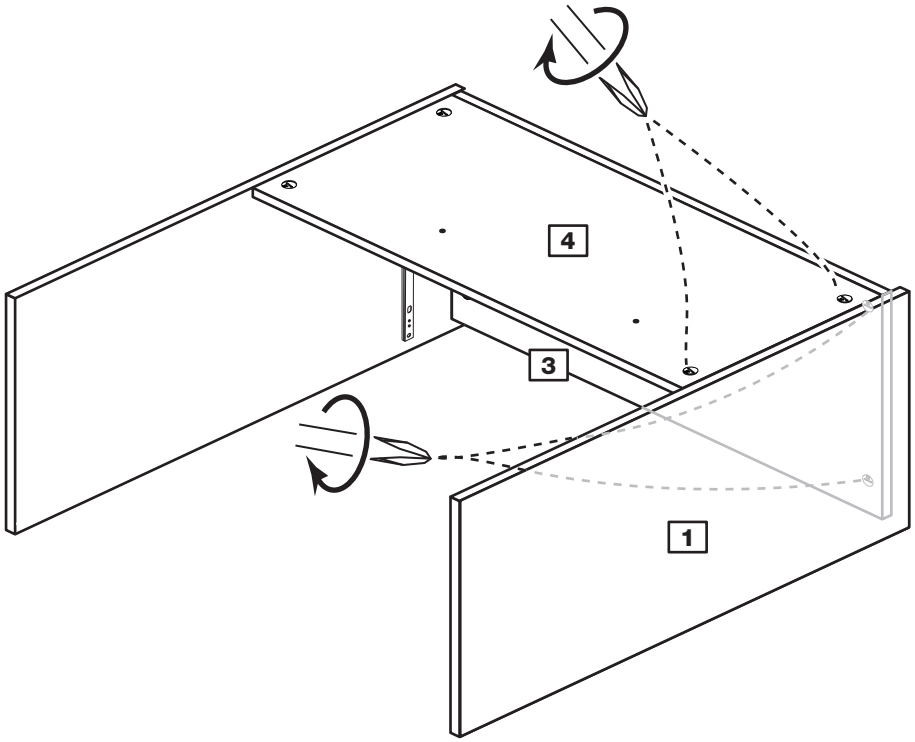

Step 14

Fit the mirror back


2 people will be needed for this stage**.**

Hold the mirror back [10] in place and fit the 2 connecting sleeves (C) up through the holes in the modesty [4] and into the bottom holes on the mirror back [10].
Fix using 2 screws (H) through the holes in the mirror back [10] into the connecting sleeves (C).

Fit 2 screws (F) through the top holes on the mirror back [10] into the edge of the top [3].

Stand the unit up for the next step.

Note: Support the mirror back until it has been fully secured.

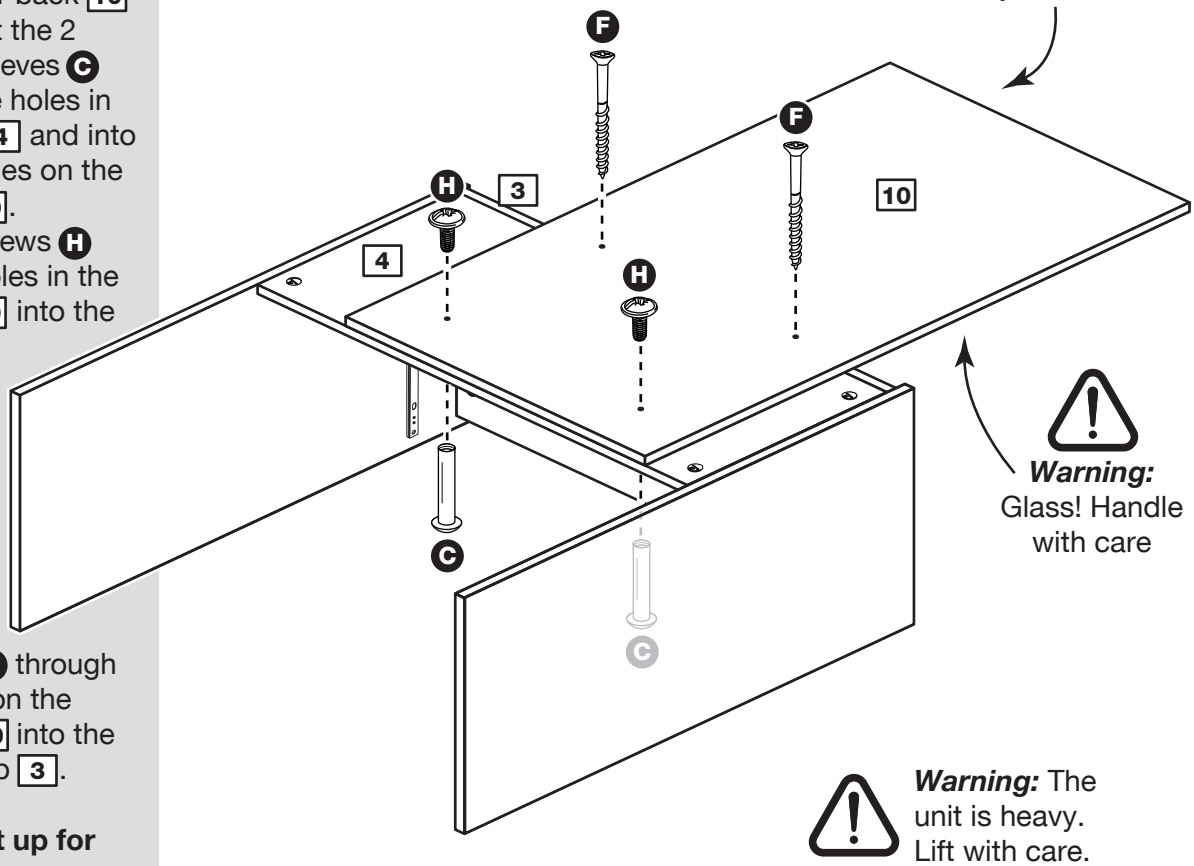

Warning: Glass! Handle with care

Warning: The unit is heavy. Lift with care.

Step 15

Fit the drawer


Slide both the runners J forward and locate the drawer sides 6 and 7 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Warning: The unit is heavy. Lift with care.

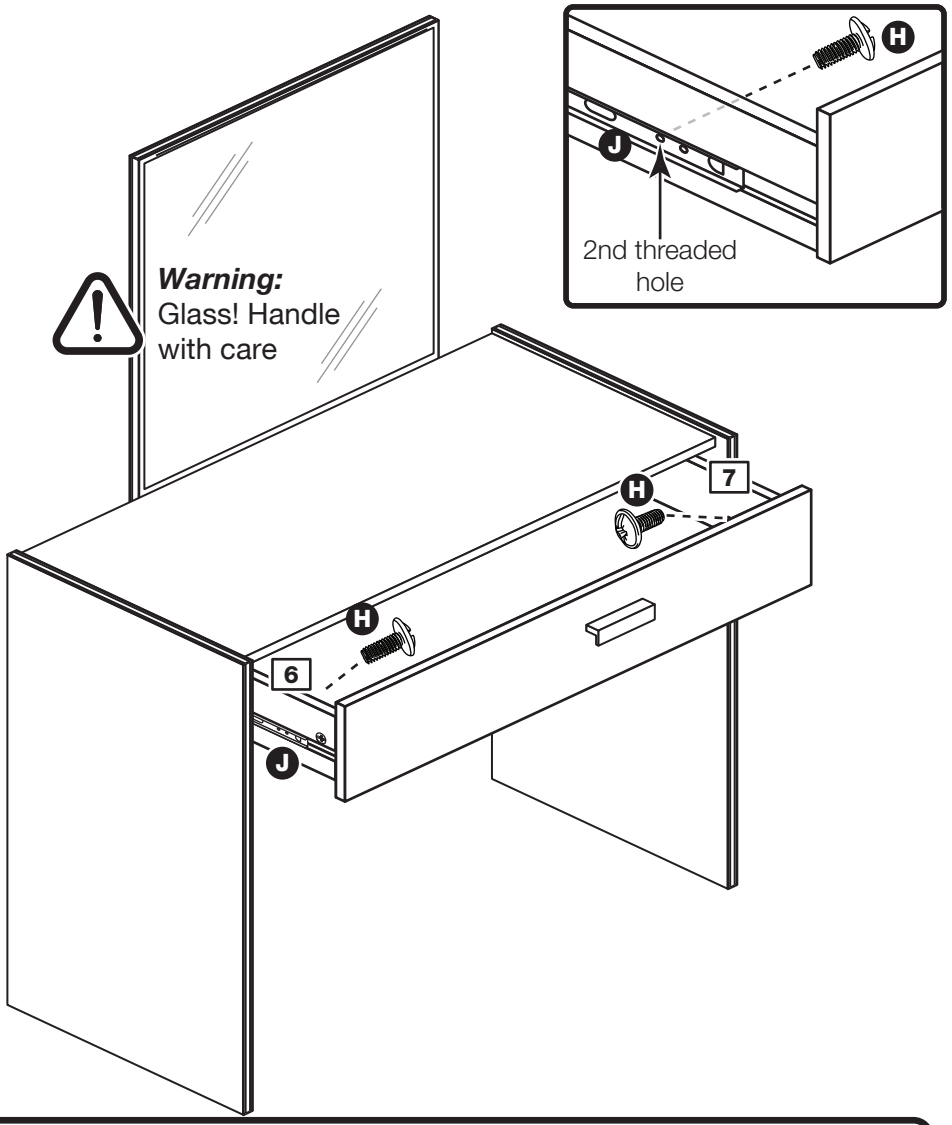

IMPORTANT INFORMATION ABOUT THIS PRODUCT

This product complies with the requirements of BS 7449:1991 and has been manufactured by DECORATIVE PANELS FURNITURE LTD, TEESSIDE INDUSTRIAL ESTATE, THORNABY-ON-TEES, CLEVELAND, TS17 9LT.

The product code for this unit and the item code(s) for the glass components are listed in the Assembly Instructions along with a description of the type of glass used. All clear/tinted glass complies with the requirements of BS 6206 Class A. All mirrors comply with the requirements of BS 6206 Class C. If the glass component contained in this unit is chipped or broken consult the furniture manufacturer, retailer, or agent with regard to obtaining a manufacturing specification and shape for replacement glass quoting the unit description and batch number or date of manufacture.

Do not place very hot or very cold items against or in close proximity to glass surface(s) unless adequately thick insulating material is used to prevent such items coming in contact with the glass.

Do not strike the glass with hard or pointed items.

Do not sit or stand upon horizontal glass surfaces.

When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary - do not use washing powders or any other substance containing abrasives since these substances scratch glass.

If stated in the instruction leaflet, it is essential that this unit is fixed to a wall.

KEEP THESE INSTRUCTIONS FOR FUTURE USE

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW


Capella - Dresser Stool

Assembly Instructions - Please keep for future reference

615/7823

615/7847

615/7830

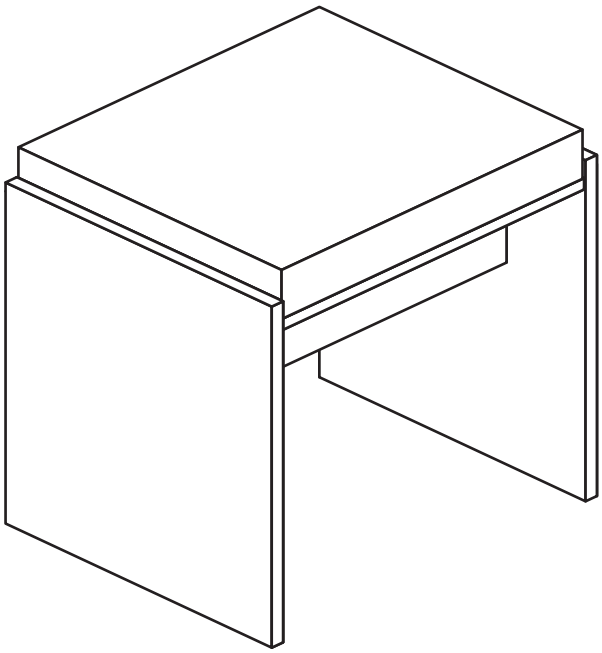

Dimensions
Width - 43cm
Depth - 35.5cm
Height - 48cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 04/12/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 8kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

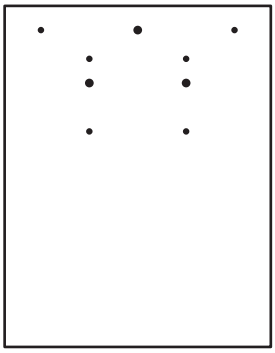

1 Stool Side *(D0996A)*
(451 x 352mm) x 2

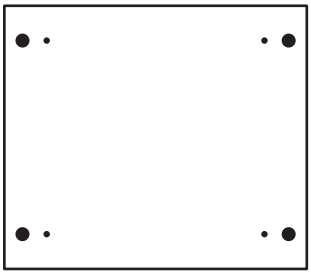

2 Stool Base *(D0997A)*
(400 x 348mm)



3 Rail *(D0998A)*
(400 x 144mm) x 2





4 Seat Pad *(FMANPAD)*
(398 x 348mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel *(F22)* x 6	**B**  Metal dowel *(F901)* x 12
C  Large locking nut *(F900)* x 12	**D**  25mm Screw (*F50)* x 4

Tools required

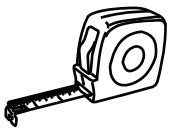
Rule



Cross-head screwdriver


Scissors


Hammer


Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

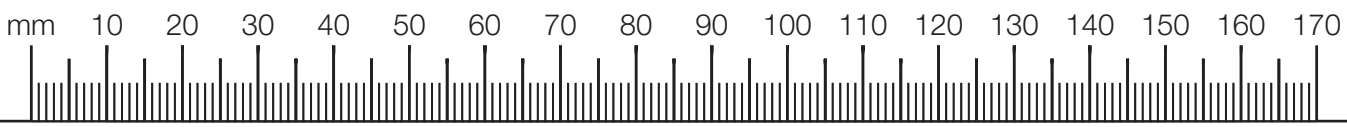


Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the 2 stool sides

Screw 6 metal dowels **B** into each of the 2 stool sides **1**, as shown.

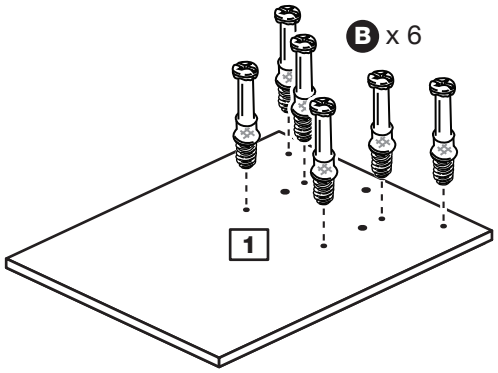


x 2

Step 2

Prepare the stool base

Insert 4 large locking nuts **C** into the holes in the stool base **2**.

Tap 2 wooden dowels **A** into the ends of the stool base **2**.

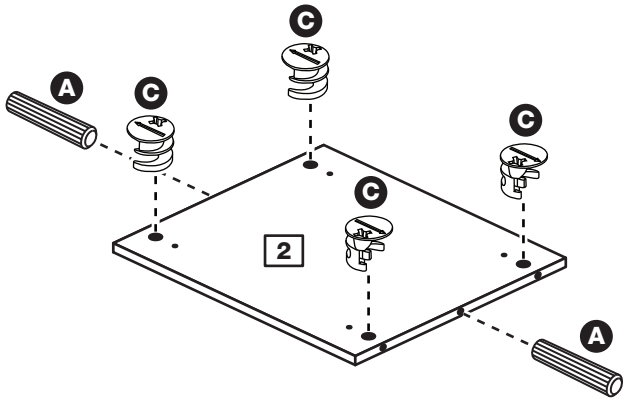


Step 3

Fit a stool side to the stool base

Fit one of the stool sides **1** to the stool base **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the stool base **2**.

Note: Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

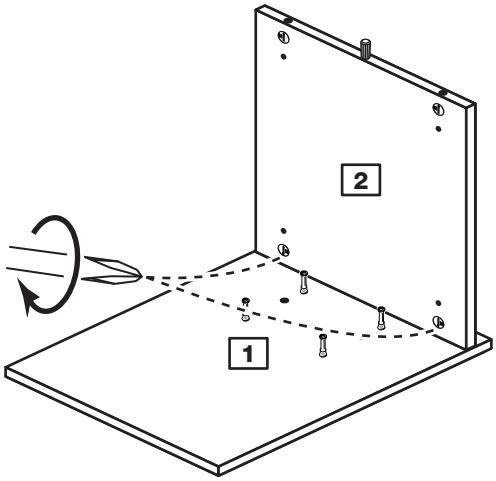


Step 4

Prepare the 2 rails

Insert 4 large locking nuts **C** into each of the 2 rails **3**.

Tap 2 wooden dowels **A** into each rail **3**.

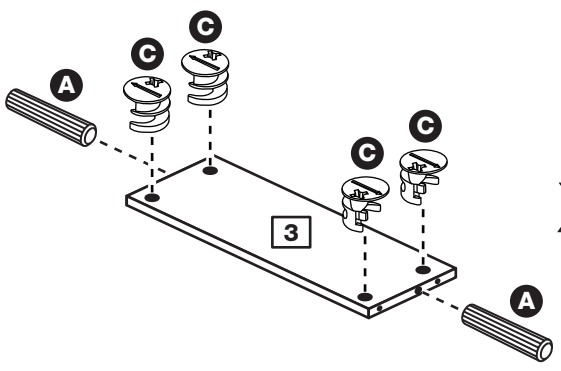


x 2

Step 5

Fit the rails

Push the 2 rails [3] down onto the stool side [1], as shown.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to each rail [3].

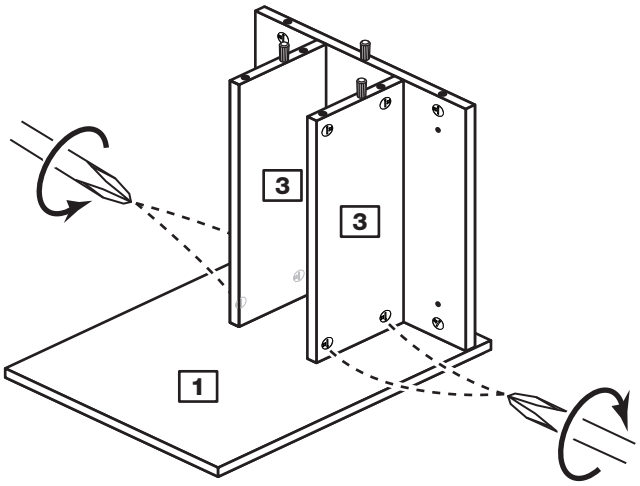


Step 6

Fit the other stool side

a: Push the other stool side [1] down onto the assembly, as shown.


Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the stool base [2].

a:

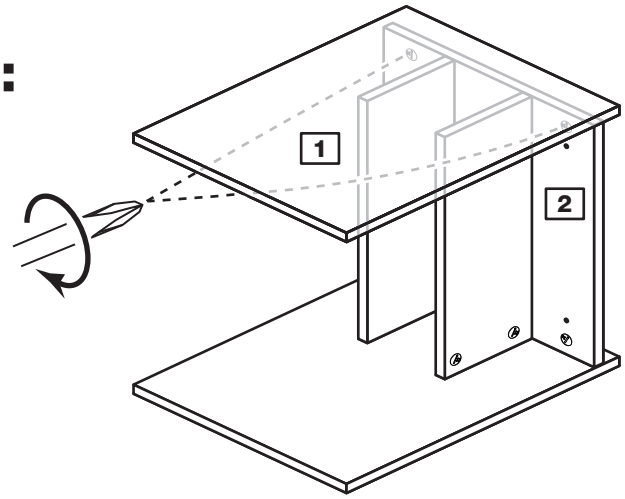

b: Use a screwdriver to tighten the 2 large locking nuts **C** fitted to each of the rails [3].

b:

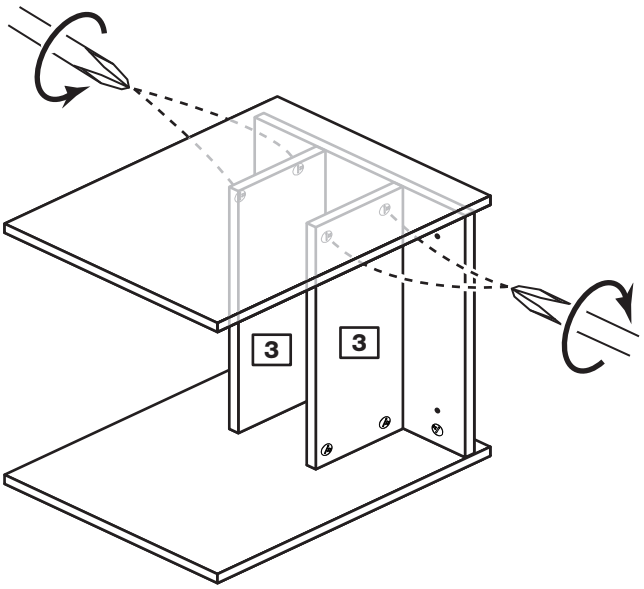

Assembly Instructions


Step 7

Fit the seat pad

Position the seat pad [4] onto the assembly and make sure that its 4 edges line up with the stool base [2].


Hold the seat pad [4] in position and screw up through the 4 holes in the stool base [2] using screws (D).

Note: Make sure that you screw into the hard surface of the seat pad.

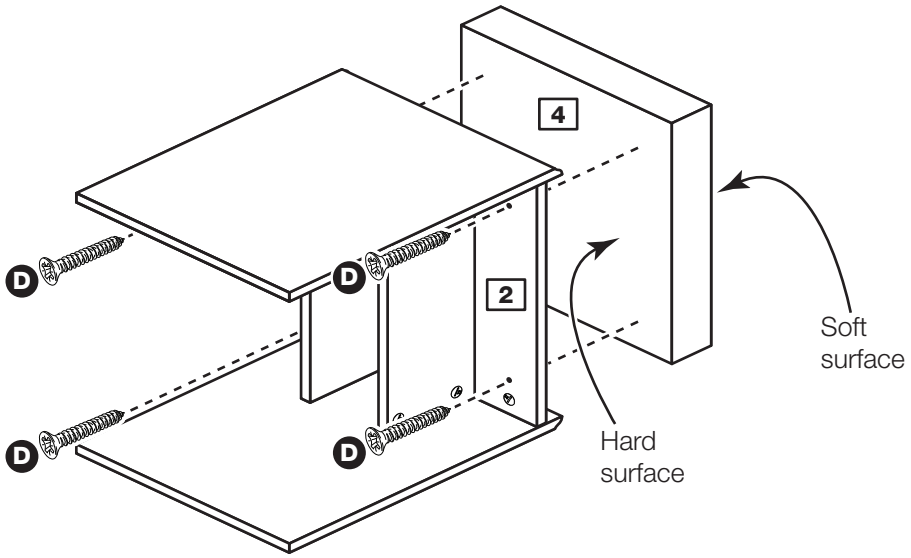

Step 8

Assembly is complete

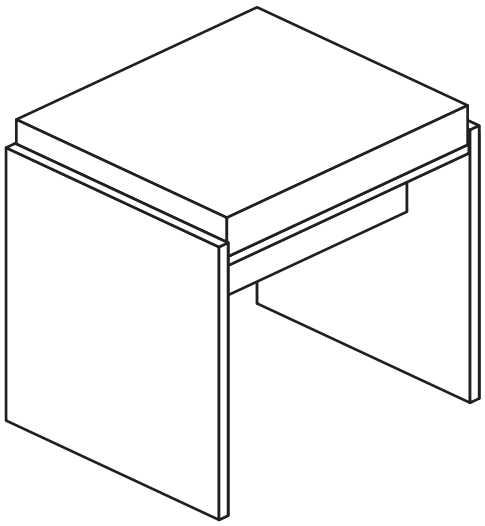

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW