
# Hygena Under Basin Cabinet

Assembly Instructions - please keep for future reference

314/5041

### hygena

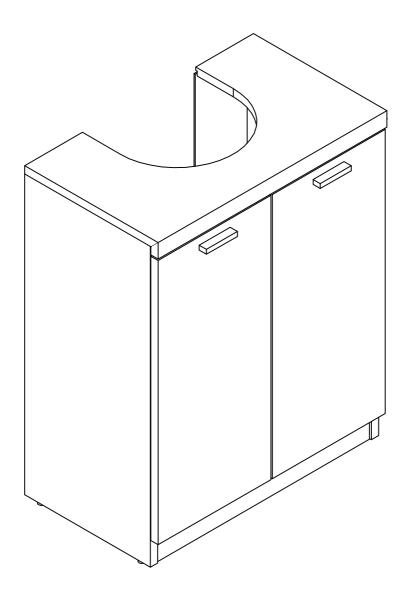

#### Dimensions

Width - 48cm

Depth - 28cm

Height - 60cm

#### Important - please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400800

# ▲ Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 1 and 2.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position(in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

•Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

#### Glue safety - Take care when using glue, please follow the advice below

 Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

- Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.
- If swallowed: Seek medical advice immediately.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent,do not use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


#### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

# **Components - Panels**

If you have damaged or missing components, call the Customer Helpline: 0845 6400800

### Please check you have all the panels listed below

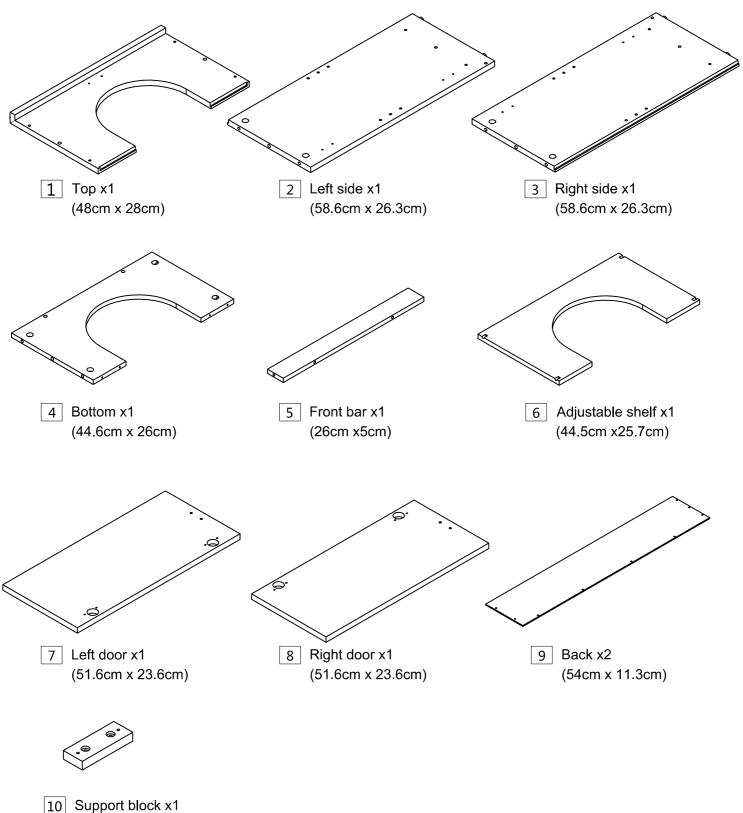


<sup>(8</sup>cm x 3cm)

# **Components - Fittings**

If you have damaged or missing components, call the Customer Helpline: 0845 6400800

### Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

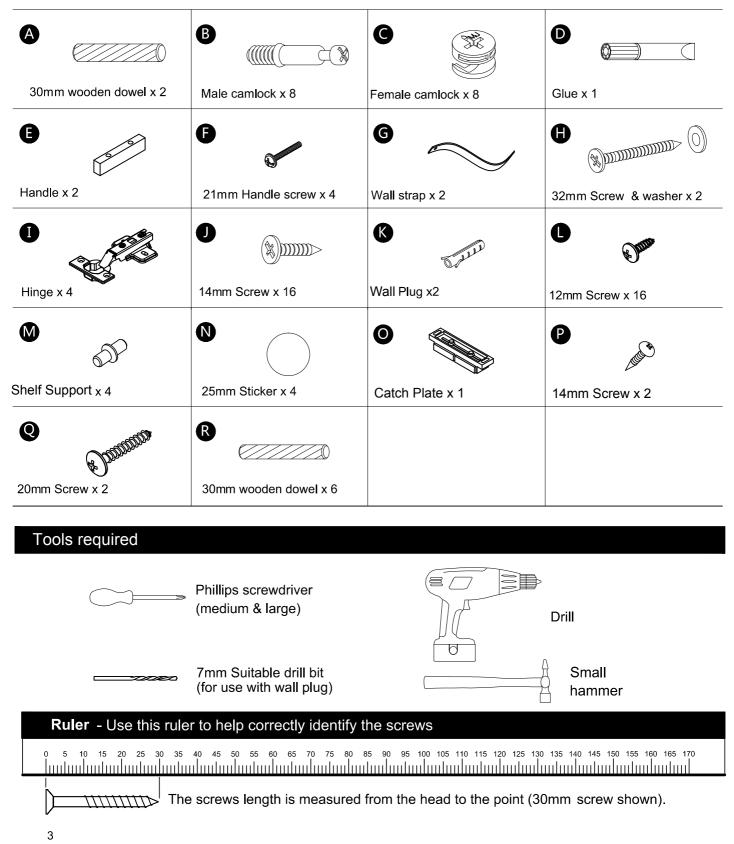


# **Components - Fittings**

#### Ruler - Use this ruler to help correctly identify the screws

# **Using Camlocks**

### Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

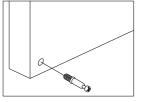

### Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

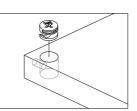

#### Step 3

Push the male camlock into the entry hole.

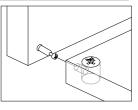


#### Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

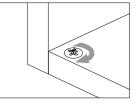

### Step 1

Fitting Male camlock

#### 1.Insert 8 x male camlocks **B** in to the top **1**,left side **2** and right side **3**.

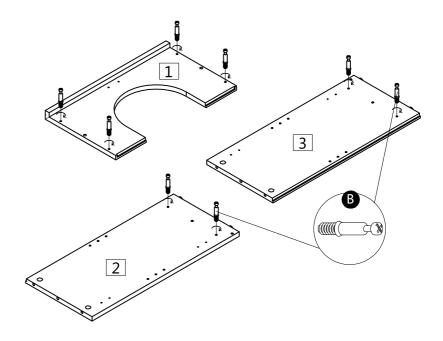



### Step 2


Fitting dowels

1.Glue and insert 2 x wooden dowels A into left side 2 and right side 3

2. Glue and insert 16 x wooden dowels R into bottom 4 & Front bar 5

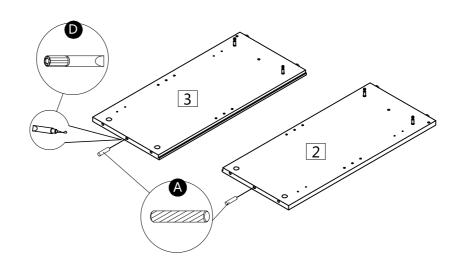

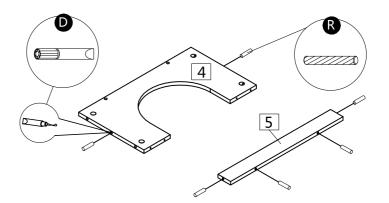


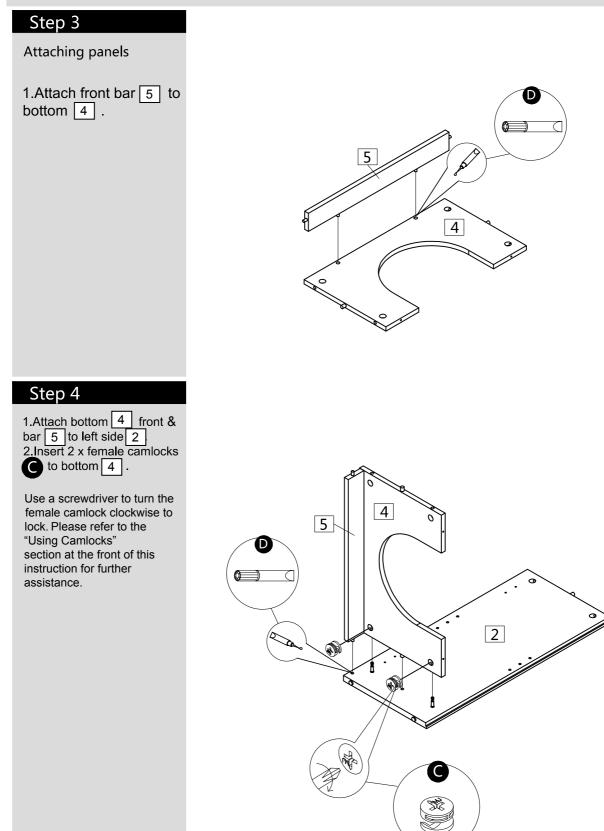

### Step 5

1.Attach right side 3 to bottom 4 & front bar 5. 2.Insert 2 x female camlocks to bottom 4.


Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

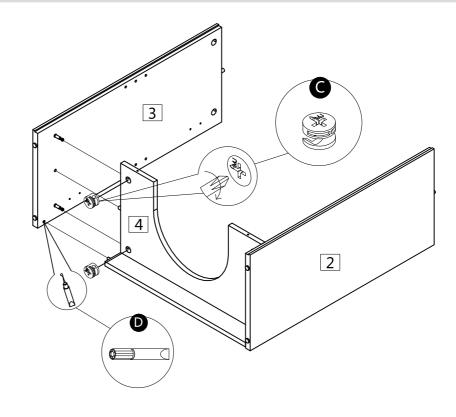


### Step 6

1.Attach support block 10 to top 1 with 2 x screw Q


2.Attach 1 x Catch plate O to support block 10 with 2 x screw P as shown

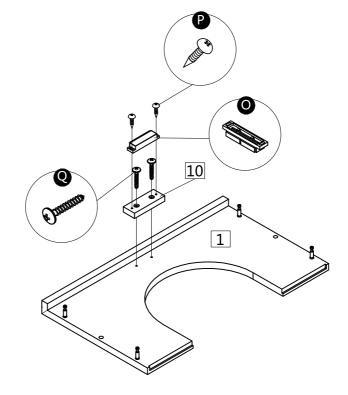

### Step 7

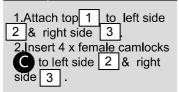



Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

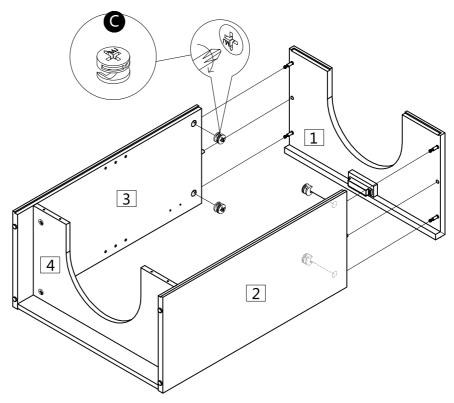

### Step 8


1.Attach left back 9 & right back 10 to the reverse of the unit with 16 x screw in position shown.Use a Phillips Screwdriver to tighten

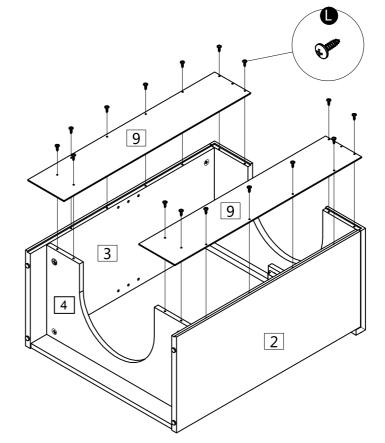

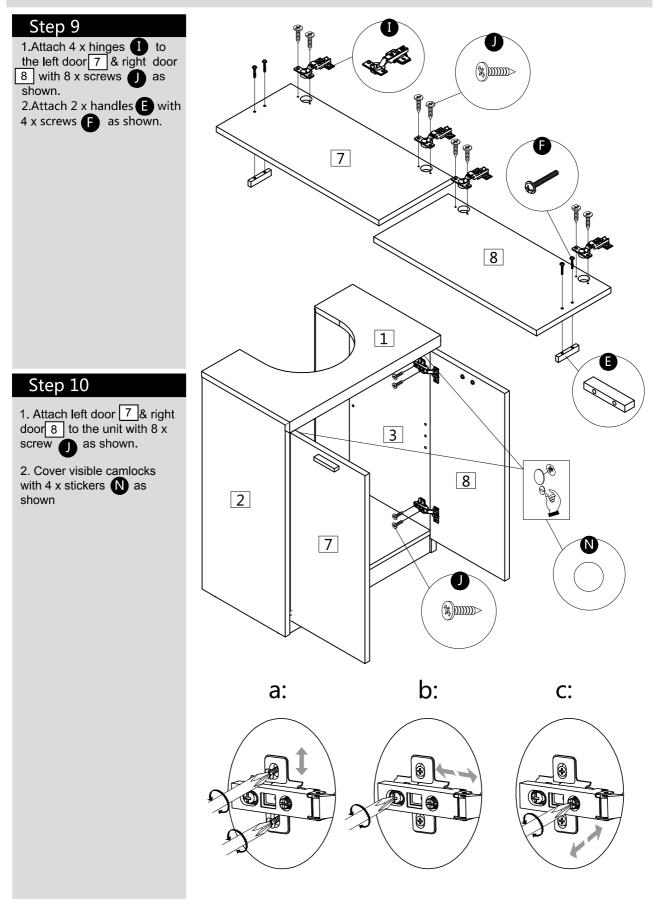


Step 11 1.Insert shelf supports M into the holes inside the unit in the desired position


2.Place adjustable shelf 6 on the shelf supports.

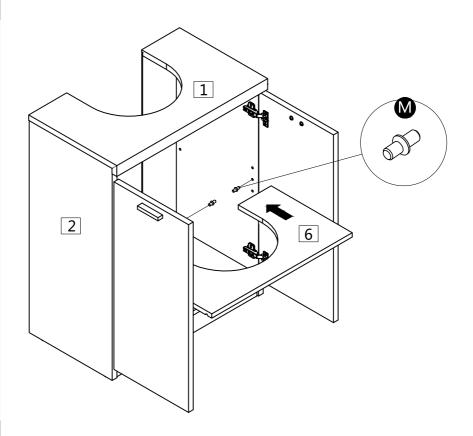

### Step 12


1. Using 2 x screw & washer secure 2 x wall straps to the back of left back 9 & right back 10

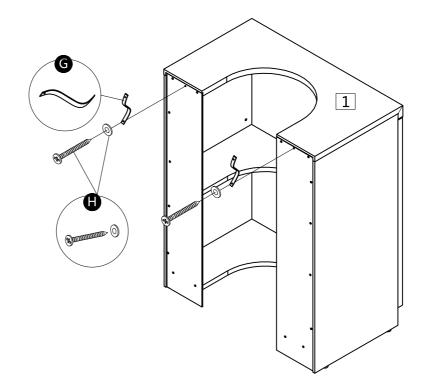

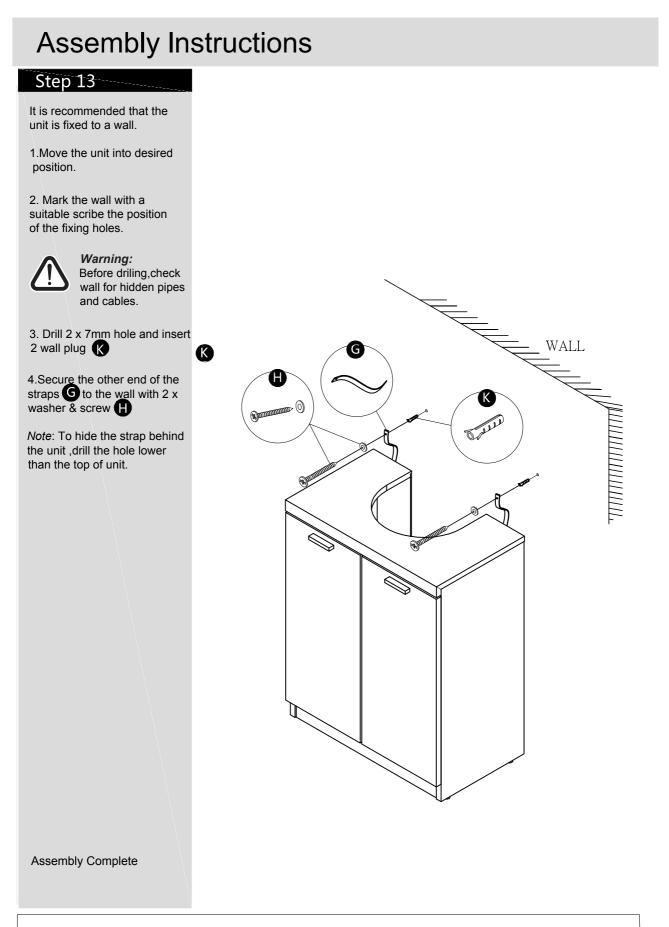

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400800

# A Guide to Wall Mounting & Fixings

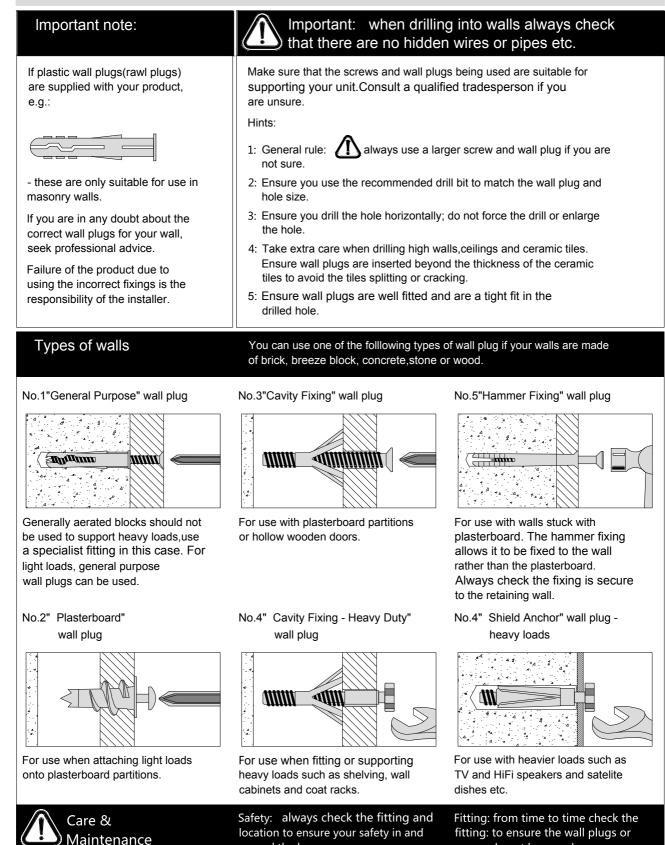

If you need help or have damaged or missing parts, call the

around the home.

Customer Helpline: 0845 6400800

screws do not become loose.