
Dover Open Storage Unit with 3 Baskets

Assembly Instructions - please keep for future reference | 319/6801

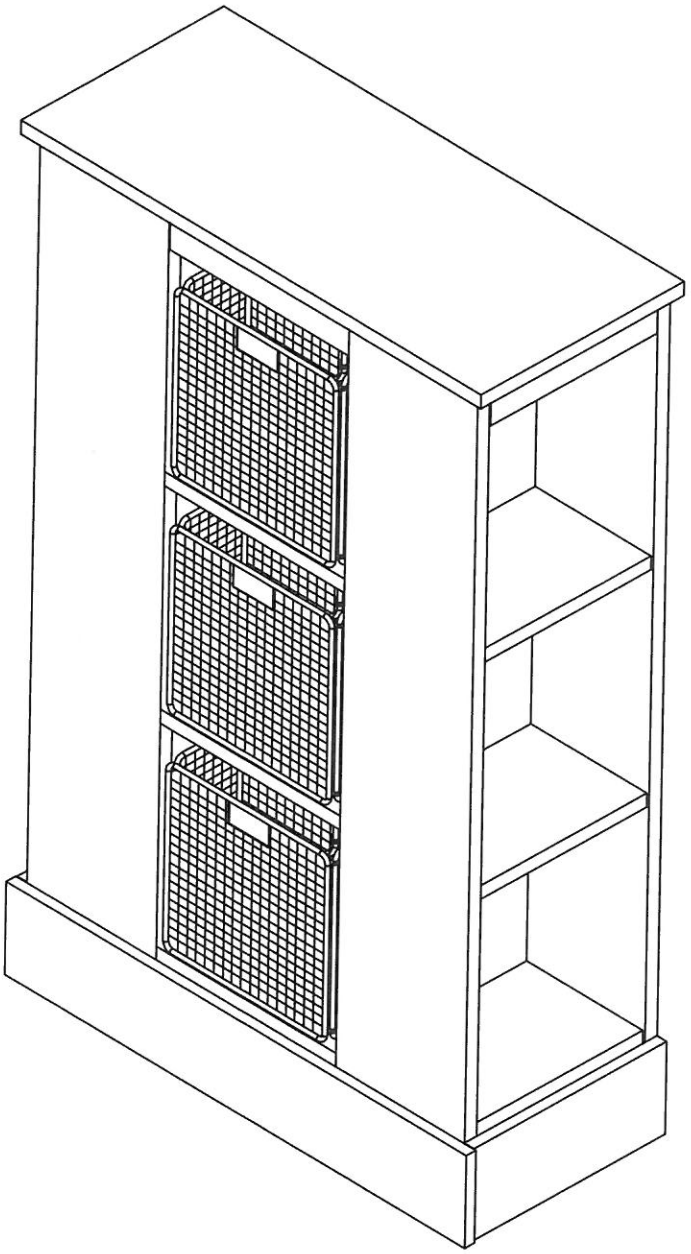

Dimensions

Width - 58cm
Depth - 25cm
Height - 92.5cm

Important - please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**

Issue 1-18/10/14

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

- Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.
- Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.
- If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent,do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing components, call the Customer Helpline: 0845 6400800


Please check you have all the panels listed below

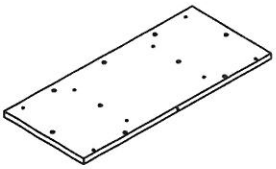


1 Top
(58cm x 25cm)

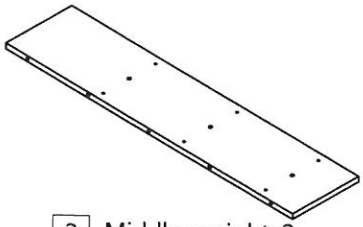


2 Middle uprightx2
(20.5cm x 90.4cm)

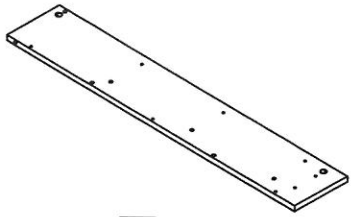


3 Left front x1
(16.4cm x 90.4cm)

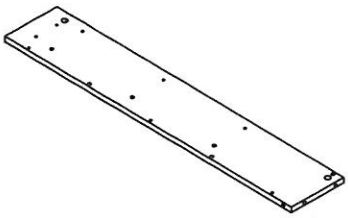


4 Right frontx1
(16.4cm x 90.4cm)

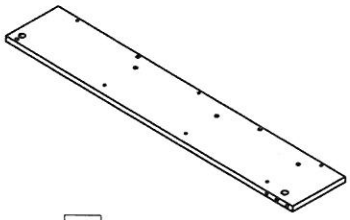


5 Left backx1
(16.4cm x 90.4cm)

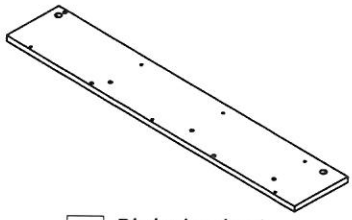

6 Right back x1
(16.4cm x 90.4cm)



7 Shelf x6
(20.5cm x 14.8cm)




8 Middle Shelfx3
(23.5cm x 22.7cm)




9 Top Left/Right bar x2
(20.5cm x 4cm)



10 Top front bar x1
(22.7cm x 4cm)

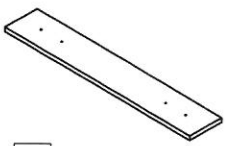

11 Front support block x1
(9.8cm x 58cm)



12 Left/Right support block x2
(9.8cm x 23.7cm)




13 Baskets x3
(20cm x 20cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: 0845 6400800


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly.In some cases more fittings may be supplied than are required.

A  30mm wooden dowel x 41	B  30mm wooden dowel x 8	C  Glue x 3	D  Male camlock x 48
E  Female camlock x 48	F  Wall strap x 1	G  10mm Washer x 1	H  Wall Plug x 1
I  32mm Screw x 2	J  24mm Screw x 4	K  25mm Sticker x 12	L  18mm Washer x 1

Tools required



Phillips screwdriver (medium & large)

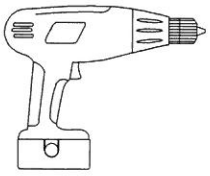

Drill


Small hammer

7mm Suitable drill bit (for use with wall plug)


Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Components - Fittings


Ruler - Use this ruler to help correctly identify the screws



Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

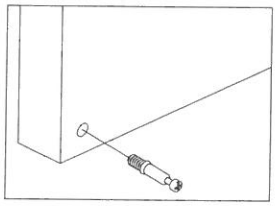

Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

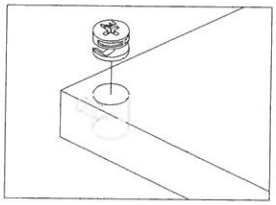

Step 3

Push the male camlock into the entry hole.

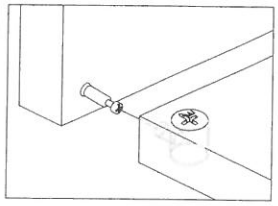


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

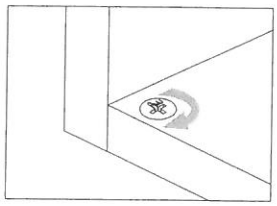


Assembly Instructions

Step 1

Fitting Male camlock

1.Insert 48x male camlocks Ⓓ into top [1], 2 xMiddle upright [2], Left front [3] Right front [4], left back [5], right back [6] and 2 x support block [12] as shown, using a Phillips Screwdriver

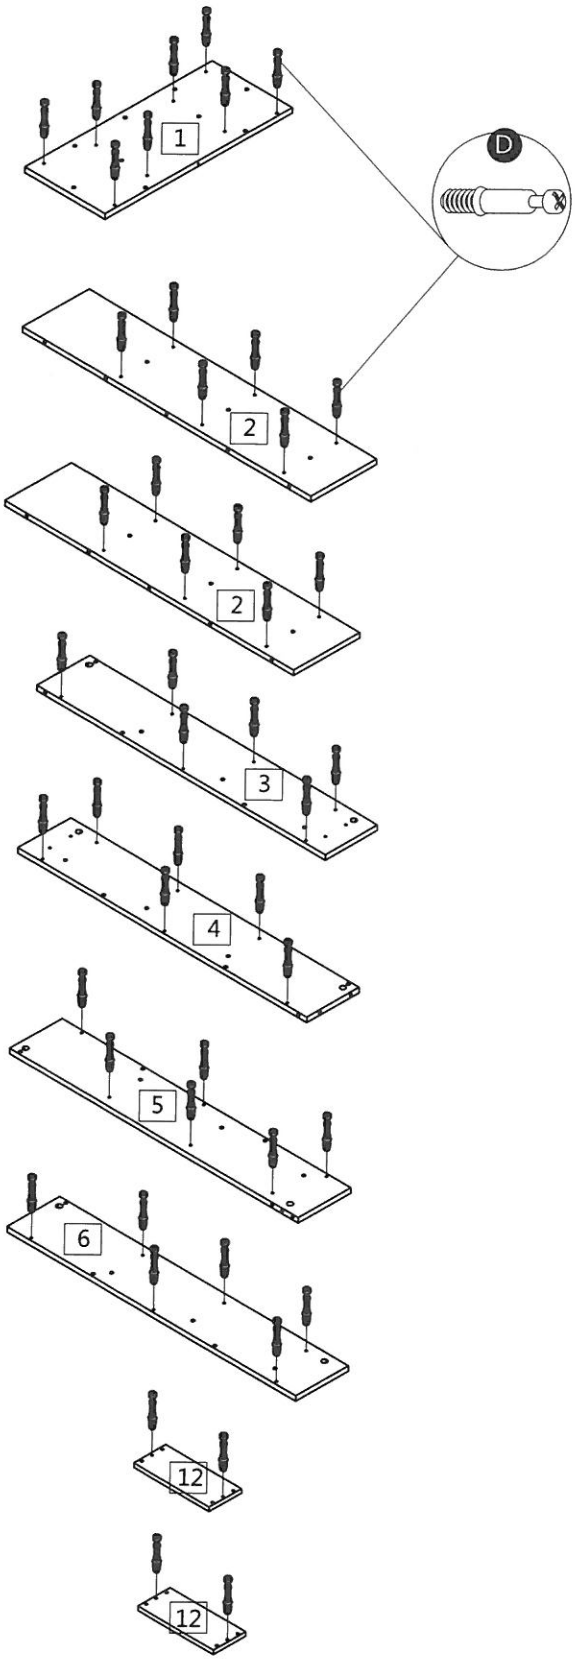


Assembly Instructions


Step 2

Fitting dowels

1.Glue and insert 41 x wooden dowels (A) to 2 x Middle upright [2] , Left front [3] , right front [4] , left back [5] ,right back [6] ,6 x shelves [7] ,3 x Middle shelf [8] , 2 x Top Left/Right bar [9] & Top front bar [10]

2.Glue and insert 8 x wooden dowels (B) to Left front [3] , Right front [4] , Left back [5] & Right back [6] .

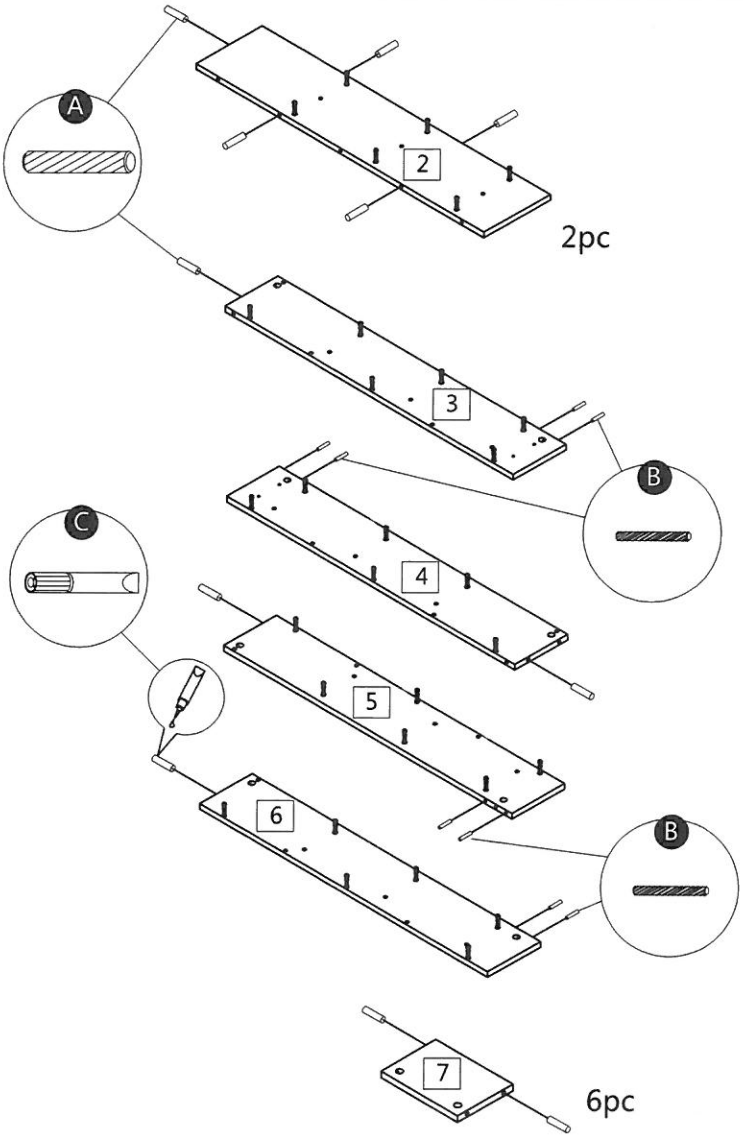

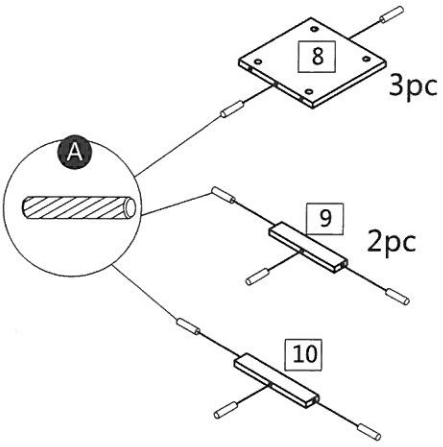


Assembly Instructions

Step 3

To assemble the Left hand shelving section

1.Glue and Attach Left back [5] to Middle upright [2] and 3 x shelves [7] ,Top Left/Right bar [9] .
2.Insert 6 x female camlocks (E) to 3 x shelves [7] and middle upright [2]

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

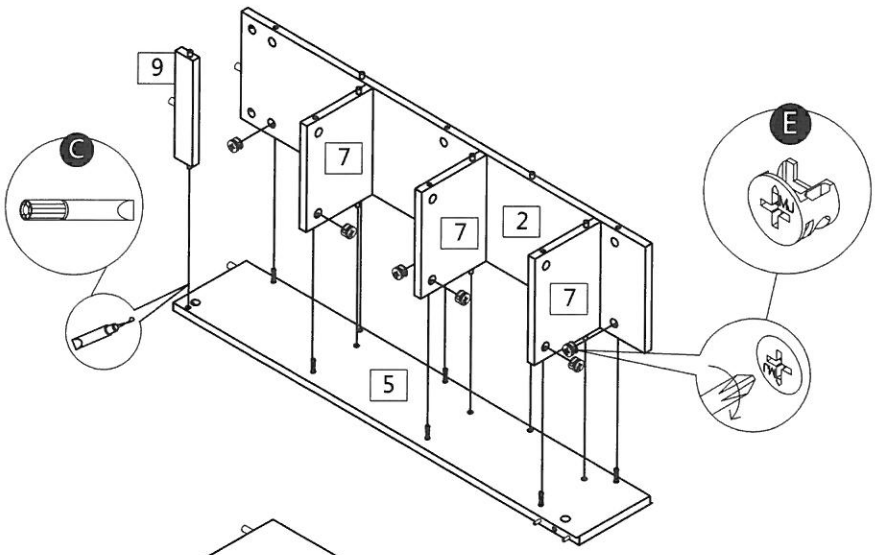


Step 4

To assemble the Left hand shelving section

1.Glue and Attach Left front [3] to Left hand unit as shown
2.Insert 6 x female camlocks (E) into 3 x shelves [7] and middle upright [2]

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

.

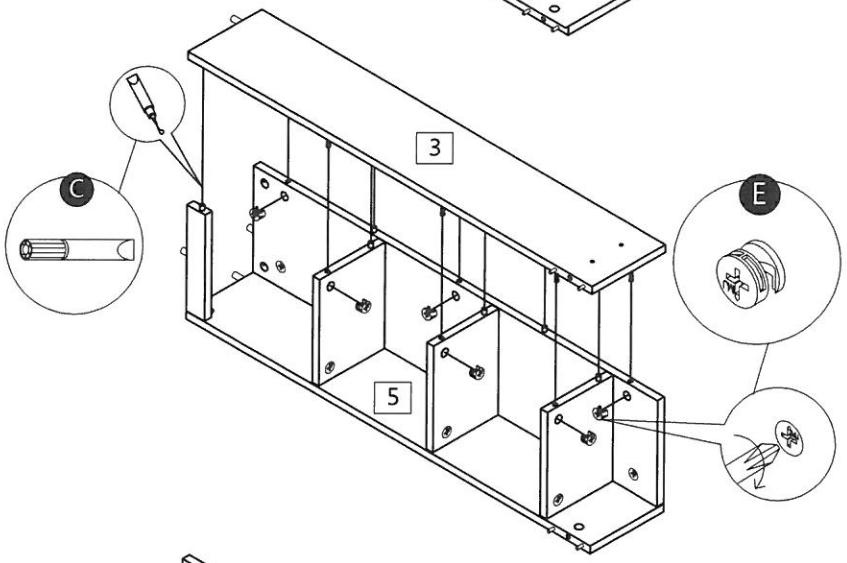


Step 5

To assemble the Right hand shelving section

1.Glue and Attach Right back [6] to Middle upright [2] ,3 x shelves [7] & Top Left/Right bar [9] .
2.Insert 6 x female camlocks (E) into 3 x shelves [7] and middle upright [2]

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance

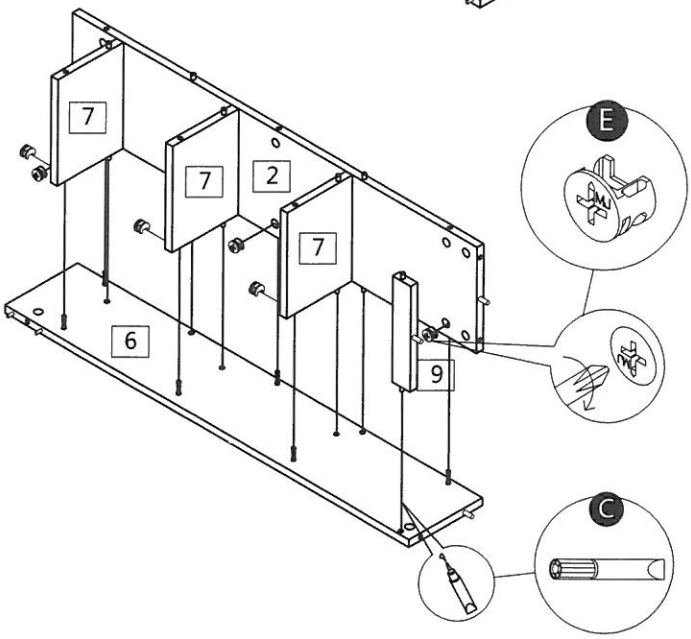

Assembly Instructions


Step 6

To assemble the Right hand shelving section

1.Glue and Attach Right front [4] to right hand unit as shown

2.Insert 6 x female camlocks (E) into 3 x shelves [7] and middle upright [2]

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

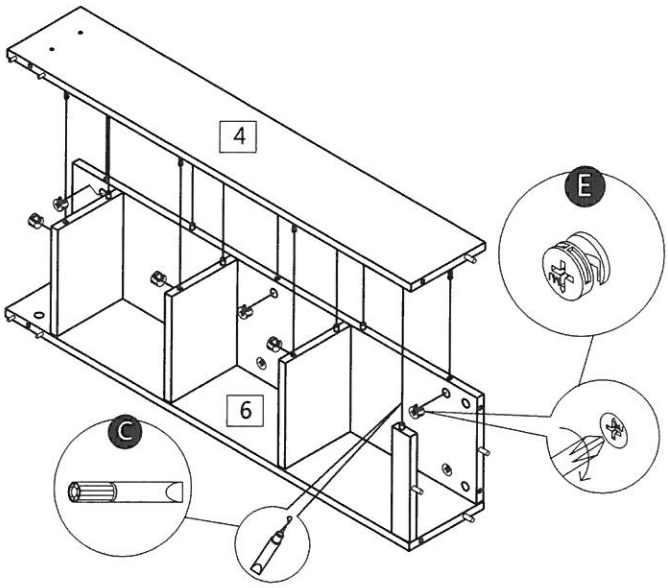


Step 7

1.Glue and Attach 2 x Left/Right support block [12] to assembled left and right units as shown.

2.Insert 4x female camlocks (E) to assembled left and right units as shown.

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

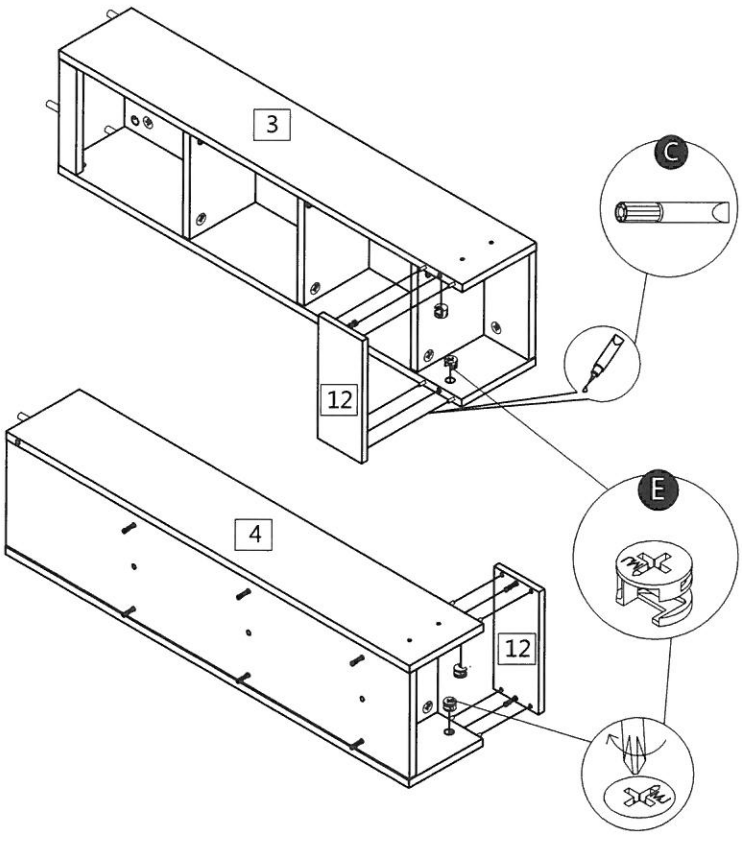


Assembly Instructions

Step 8

1.Glue and Attach 3 x Middle shelves [8] and Top front bar [10] to assembled Left and right units as shown


2.Insert 12 x female camlocks (E) to 3 x Middle shelves [8]

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

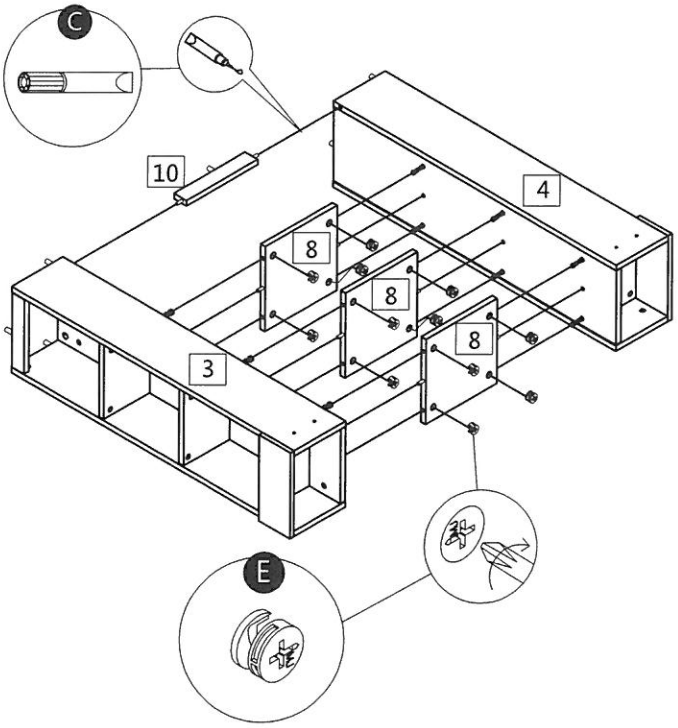

Step 9

1.Attach front support block [11] to left front [3] & right front [4] with 4 x screws (J) as shown.

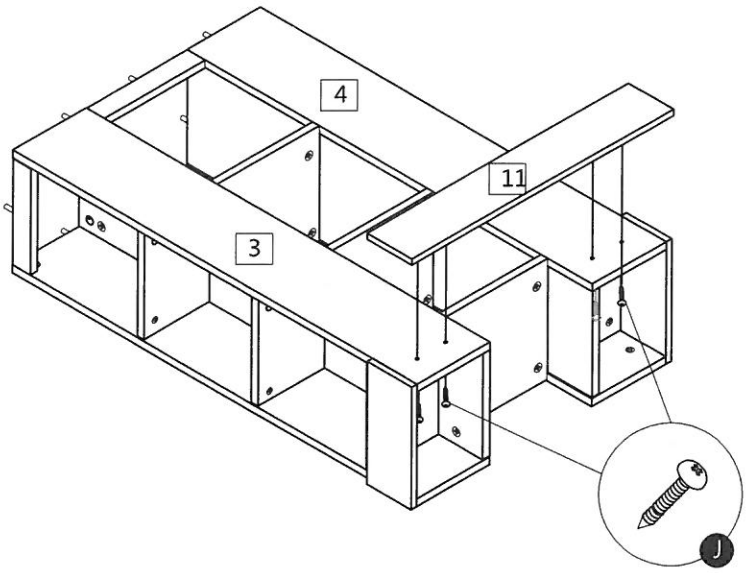


Assembly Instructions

Step 10


1.Glue and Attach Top [1] to assembled left and right units as shown
2.Insert 8 x female camlocks (E) assembled left and right units as shown

Use a screwdriver to turn the female camlock clockwise to lock. please refer to the " Using camlocks" section at the front of this instruction for further assistance.

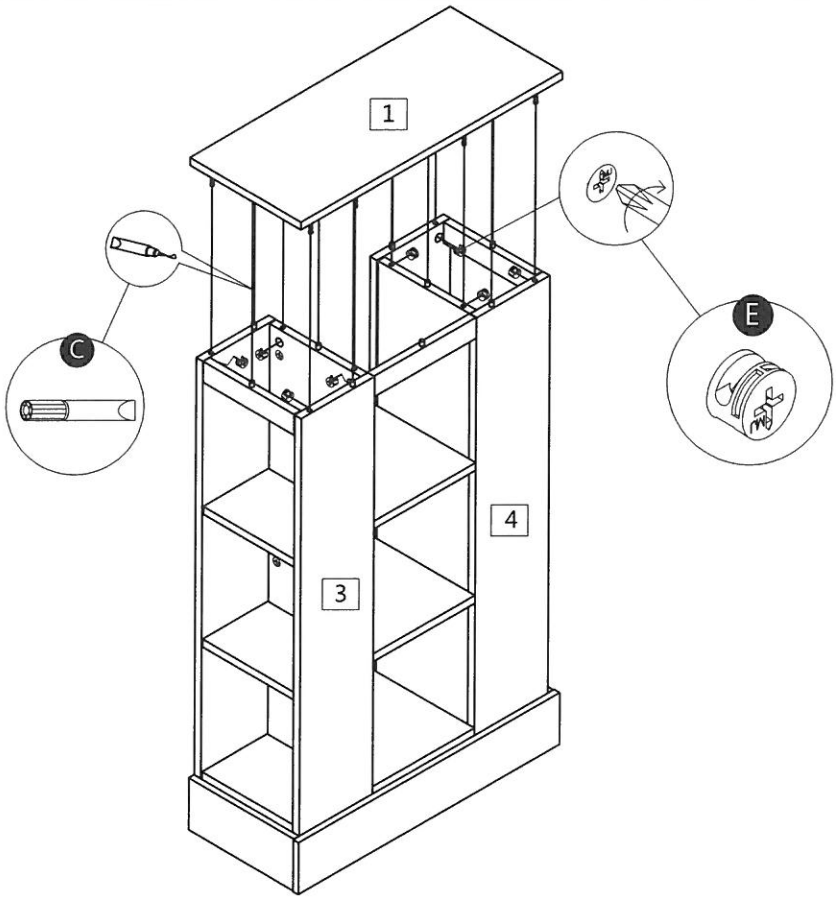

Step 11


1.Use stickers (K) to cover camlocks hole on 2 x Middle upright [2]

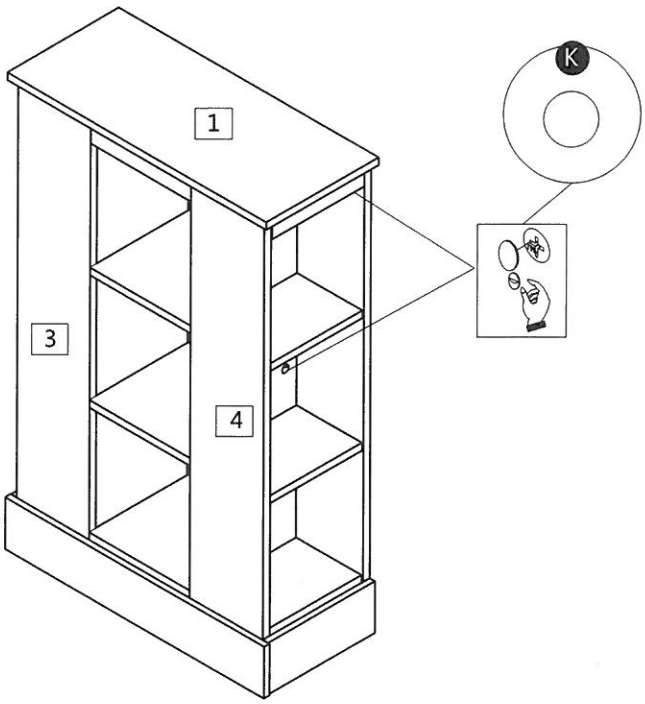

Assembly Instructions

Step 12

1.Using screw (I) & washer (G) secure the 1 x wall strap (F) to the back of top panel [1]

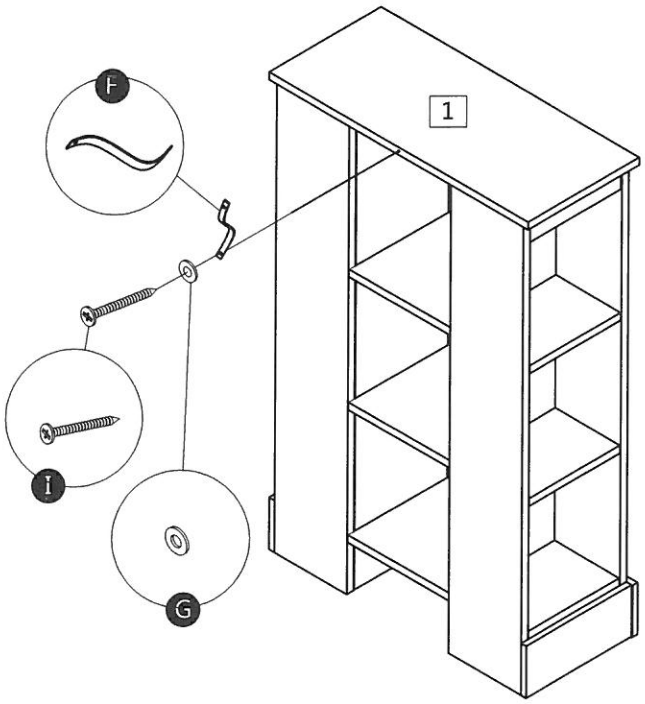

Step 13

Two people are needed here. It is recommended that the unit is fixed to a wall.

1.Move the unit into desired position.

Warning:
The unit is heavy.
Lift with care.


2. Mark the wall with a suitable scribe the position of the fixing hole.

Warning:
Before driling,check wall for hidden pipes and cables.

3. Drill 7mm hole and insert wall plug (H).

4.Move unit back into desired position


5. Secure the other end of the straps (F) to the wall with washer (L) & screw (I)

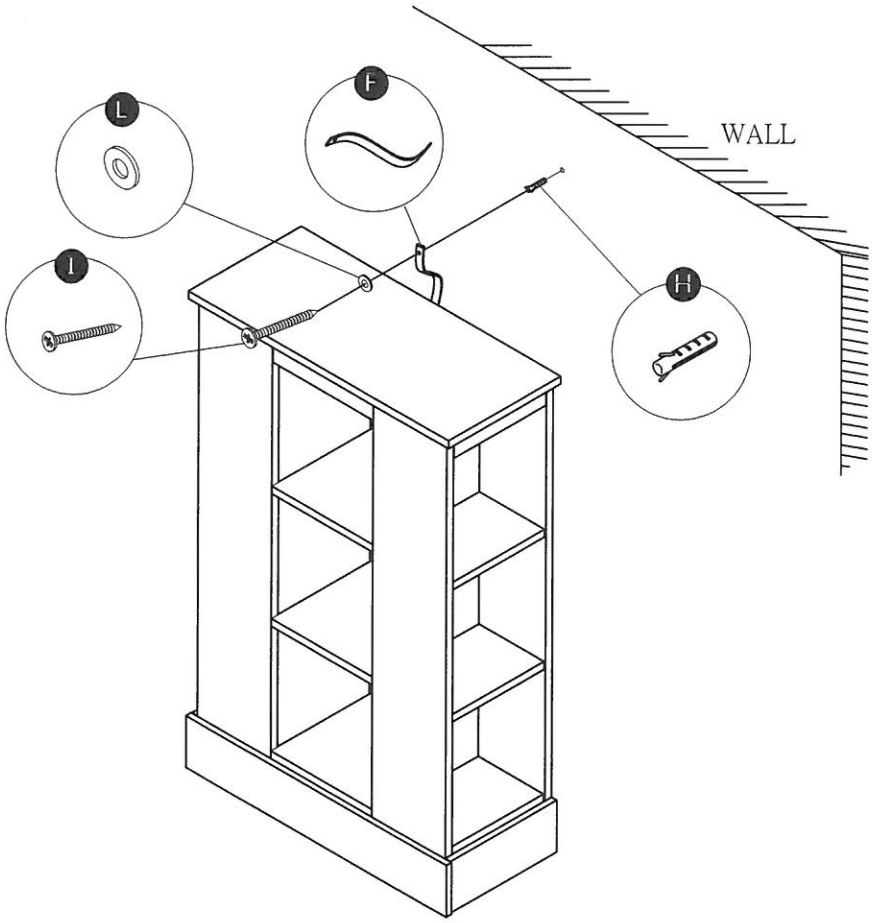

Assembly Instructions


Step 14

1.Put 3 x Baskets [13] in the unit as shown.

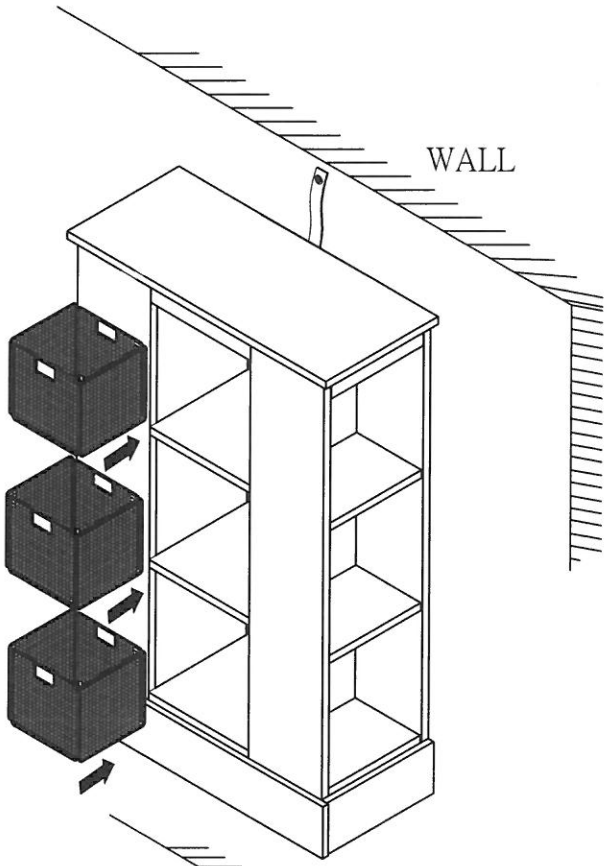

Step 15

1.Assembly is completed.

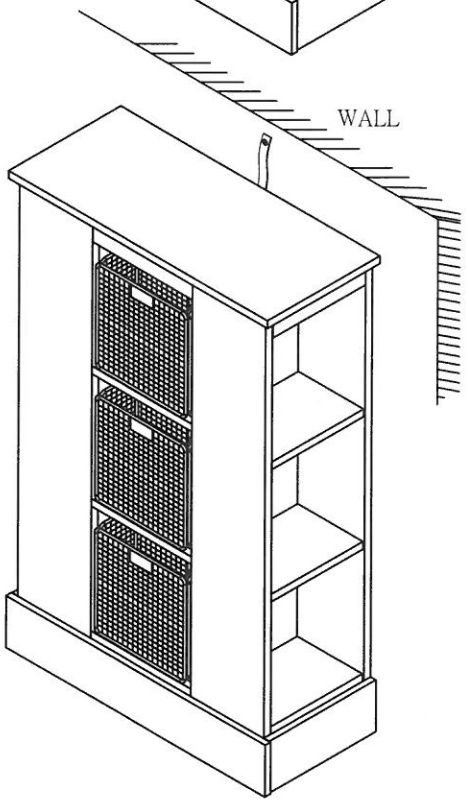


If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs(rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit.Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls,ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the folllowing types of wall plug if your walls are made of brick, breeze block, concrete,stone or wood.

No.1"General Purpose" wall plug

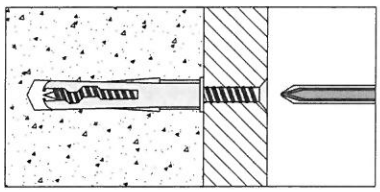


Generally aerated blocks should not be used to support heavy loads,use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3"Cavity Fixing" wall plug

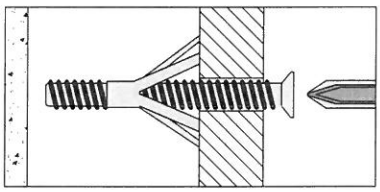


For use with plasterboard partitions or hollow wooden doors.

No.5"Hammer Fixing" wall plug

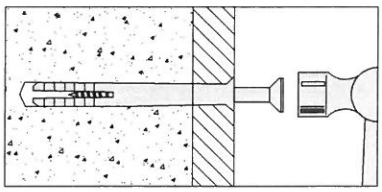


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2" Plasterboard" wall plug

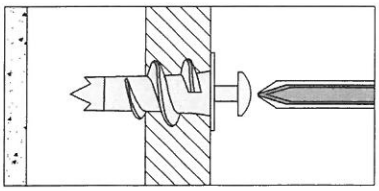


For use when attaching light loads onto plasterboard partitions.

No.4" Cavity Fixing - Heavy Duty" wall plug

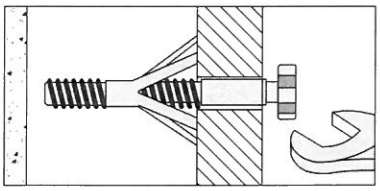

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.4" Shield Anchor" wall plug - heavy loads

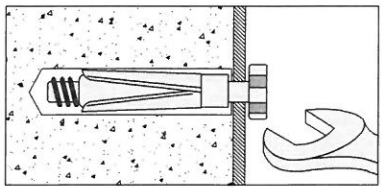

For use with heavier loads such as TV and HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting: to ensure the wall plugs or screws do not become loose.

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 6400800