
Mendoza - 2 Door 1 Drawer Robe

Assembly Instructions - Please keep for future reference

330/9430

346/6744

355/4041

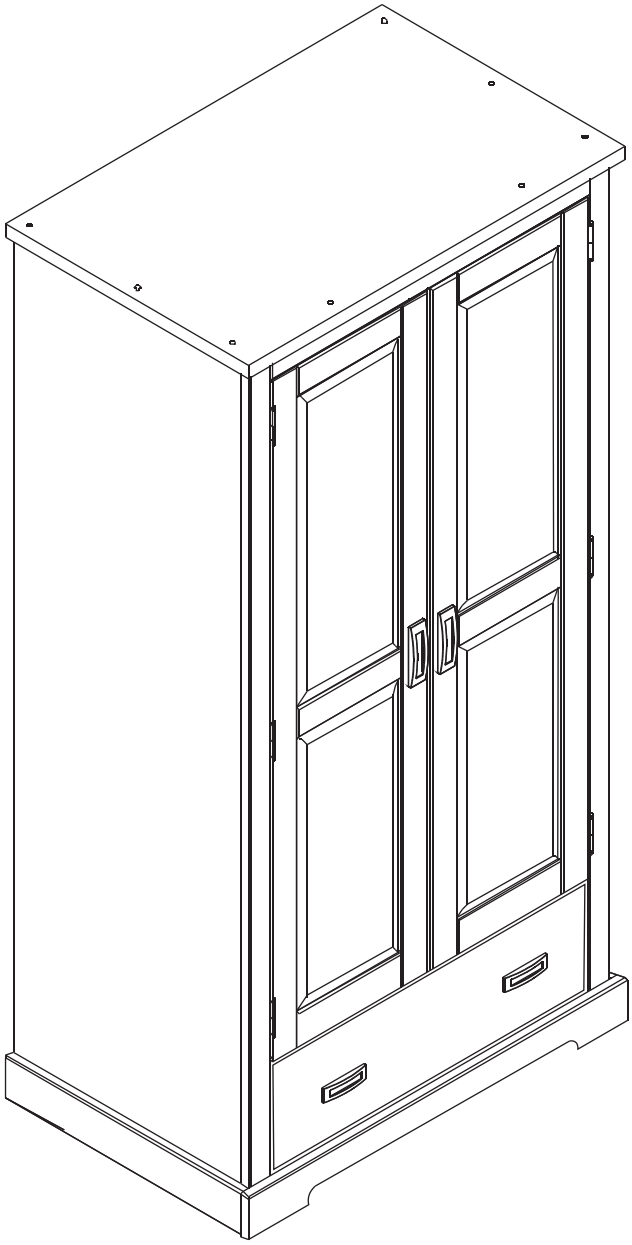

Dimensions

Width - 90cm
Depth - 53cm
Height - 180cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

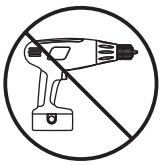

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels

Please check you have all the panels listed below




1 Top panel (90 x 53cm)




2 Base (82.3 x 49.1cm)




5 Fixed shelf (82.3 x 48cm)



3 Left side panel (177.5 x 49.6cm)



4 Right side panel (177.5 x 49.6cm)



6 Back panel x 2 (170.5 x 41.5cm)




7 Side plinth x 2
(51.4 x 8.8cm)




8 Front plinth (88.8 x 9cm)

9 Hanging rail (81.5 x 3cm)


10 H profile
(28.8 x 2.8cm)




11 Left front frame (177.5 x 5cm)




12 Right front frame (177.5 x 5cm)




13 Bottom rail (76.2 x 5cm)



14 Top rail (76.2 x 5cm)

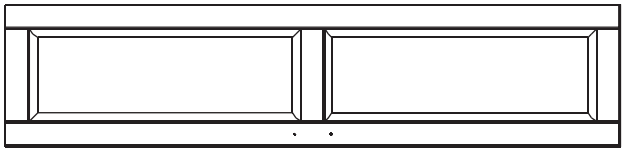


15 Left door (140.3 x 37.8cm)

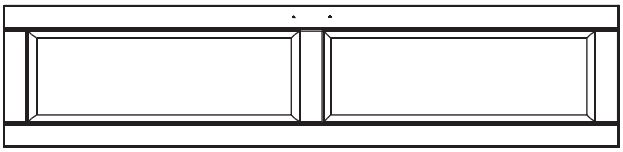

16 Right door (140.3 x 37.8cm)

17 Door knocker (139.3 x 31cm)



26 Drawer runner x 2
(45 x 5cm)




27 Small H profile
(20.8 x 2.8cm)




20 Drawer front
(75.5 x 21.7cm)


18 Blocks x 8 (6.4 x 1.9cm)



19 Large H profile
(114 x 2.8cm)

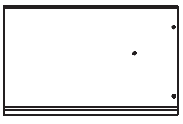

21 Drawer left side
(45 x 19.2cm)

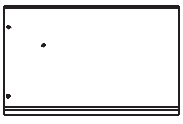


22 Drawer right side
(45 x 19.2cm)



23 Drawer back
(70.5 x 18.7cm)



24 Drawer bottom
(81.8 x 45.1cm)
















25 Back rail (82.4 x 5cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

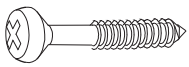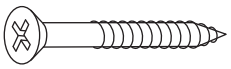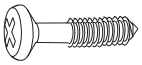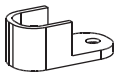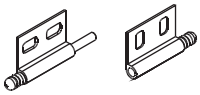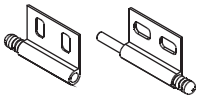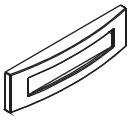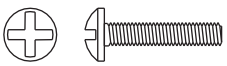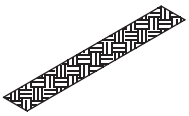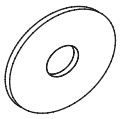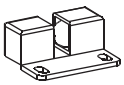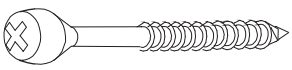A  30mm Screw x 46	**B**  Ø8x25mm Wooden dowel x 48	**C**  45mm Screw x 08
D  16mm Screw x 48	**E**  25mm Screw x 09	**F**  Ø8x35mm Large wooden dowel x 02
G  Hanging rail support x 2	**H**  Nails x 50	**I**  Metal door knocker x 01
J  Right door hinge x 3	**K**  Left door hinge x 3	**L**  Door clip x 02
M  Handle x 04	**N**  22mm Bolt x 08	**O**  Wall strap x 1
P  Washer x 2	**Q**  Straight metal door knocker x 01	**R**  Door clip x 02
S  50mm Screw x 6		


Tools required




Phillips screwdriver (medium & large)

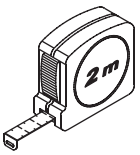

Ruler/tape measure

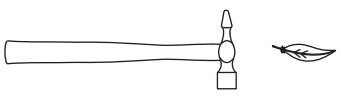


Small hammer

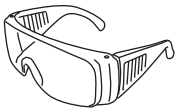

Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws

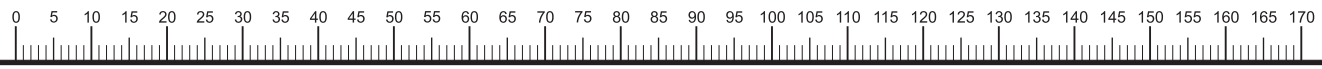


Assembly Instructions


Step 1


Fitting wooden dowels:

a: Insert dowels (B) into holes in the indicated parts.

b: Fix hanging rail support (G) in the pre marked holes on the left side panel [3] and right side panel [4] using screws (D).

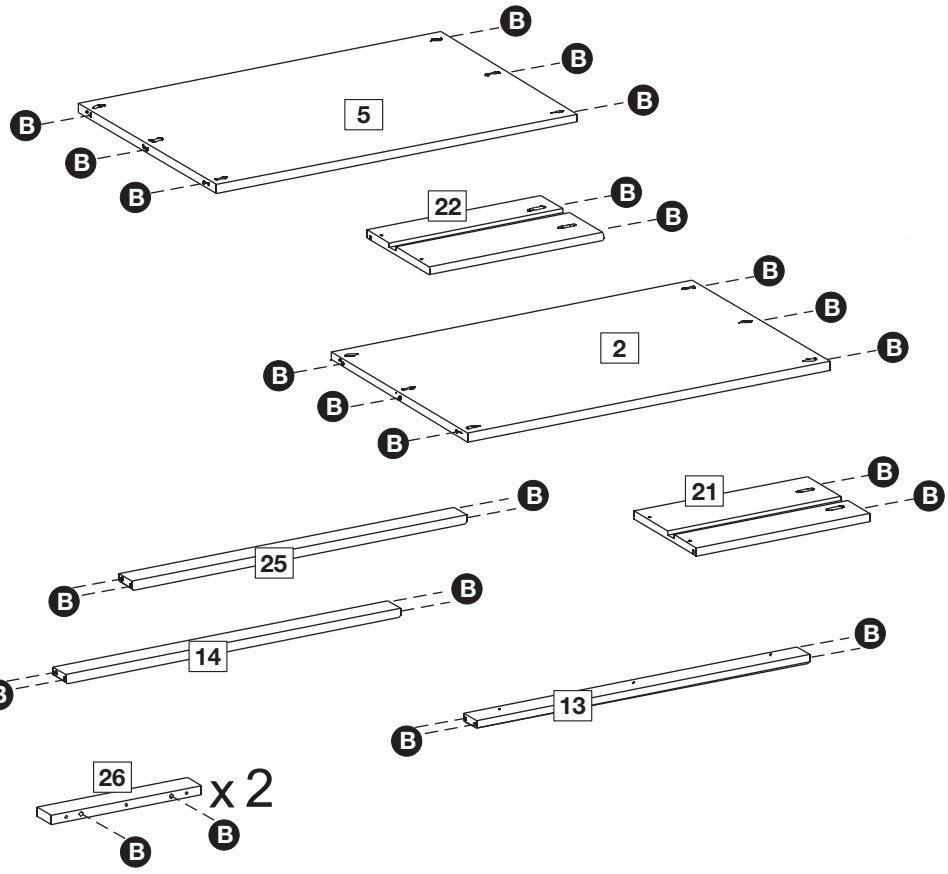

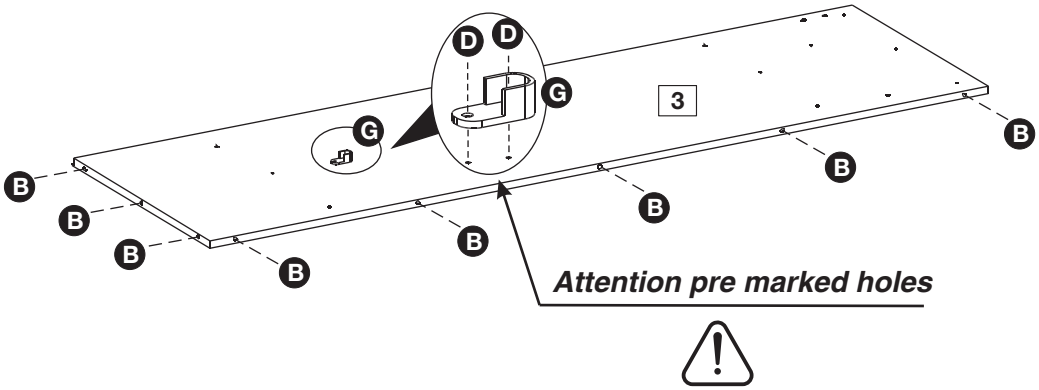

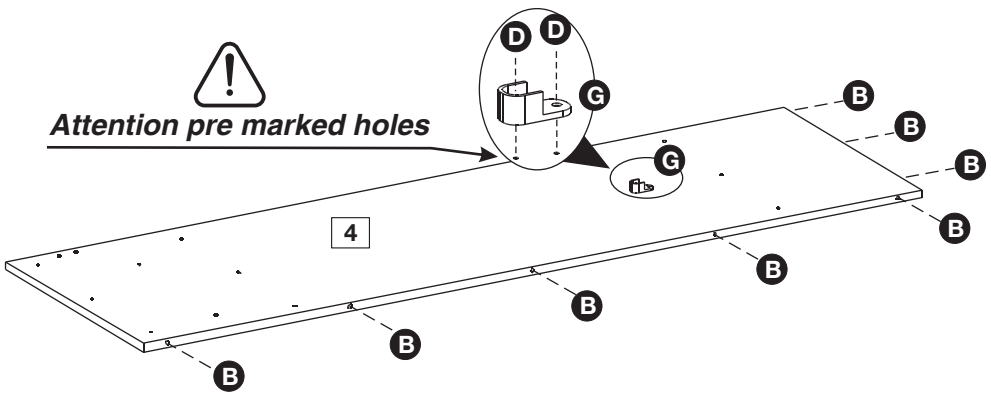


Step 2

Fixing door clip and knocker:

a: Fix door clip Ⓡ in the pre marked holes on top rail 14 using screws Ⓓ as shown.

b: Fix straight door knocker Ⓠ in the pre marked holes on top rail 14 using screws Ⓓ as shown.

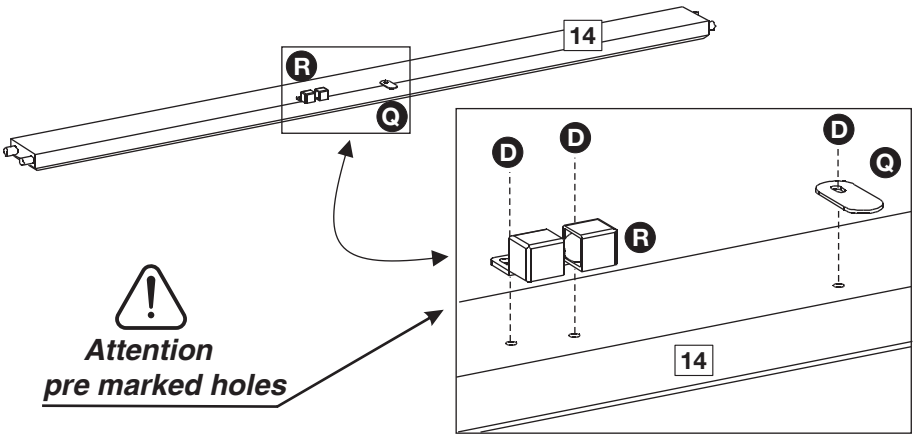



Step 3

Fixing front frames:
(Two people required for an easier assembly)

a: Fix blocks 18 in pre marked holes on right side panel 4 and left side panel 3 using screws Ⓐ as shown.

Important: Make sure blocks 18 are flush to the edge on side panels before fixing.

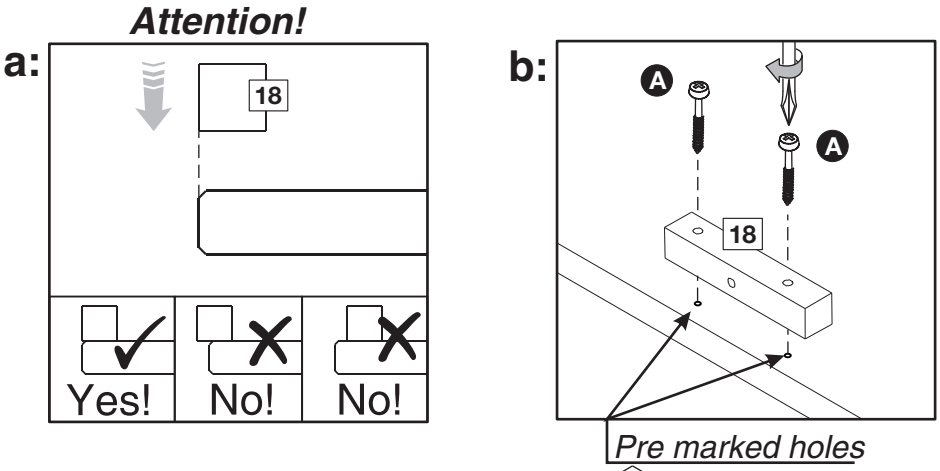

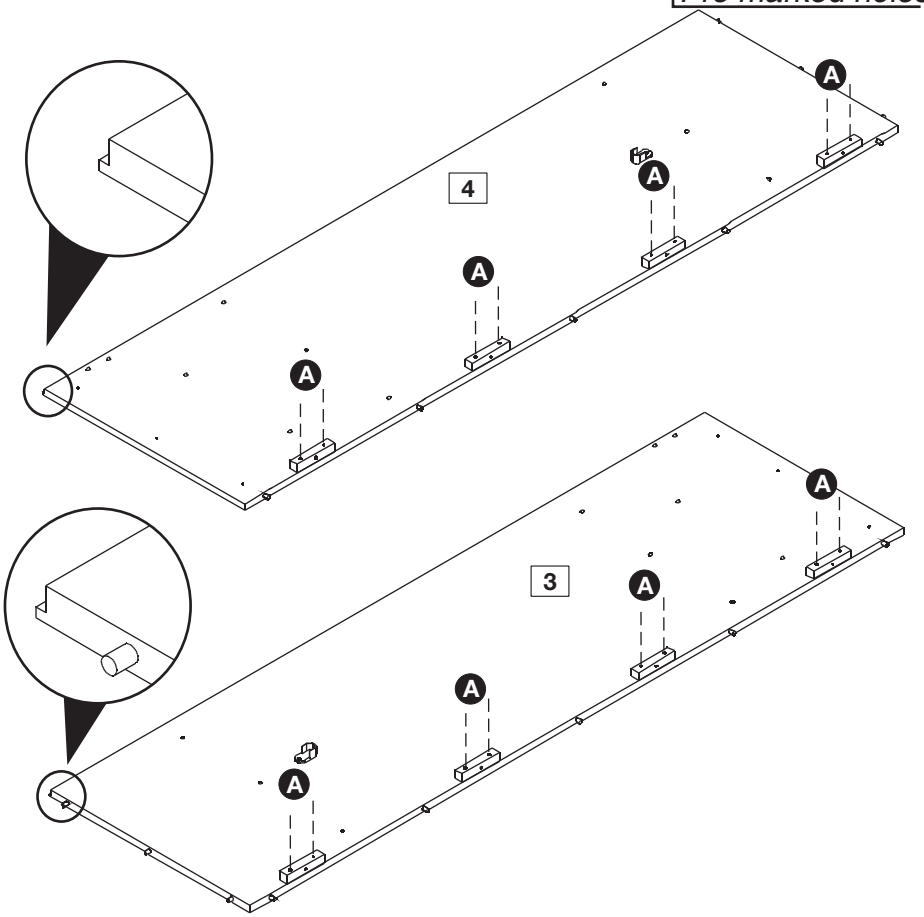


Step 4

Fixing front frames:

Fix right front frame 12 to the right side panel 4 through blocks 18 using screws A as shown.

Attention: Note correct position of parts before fixing.

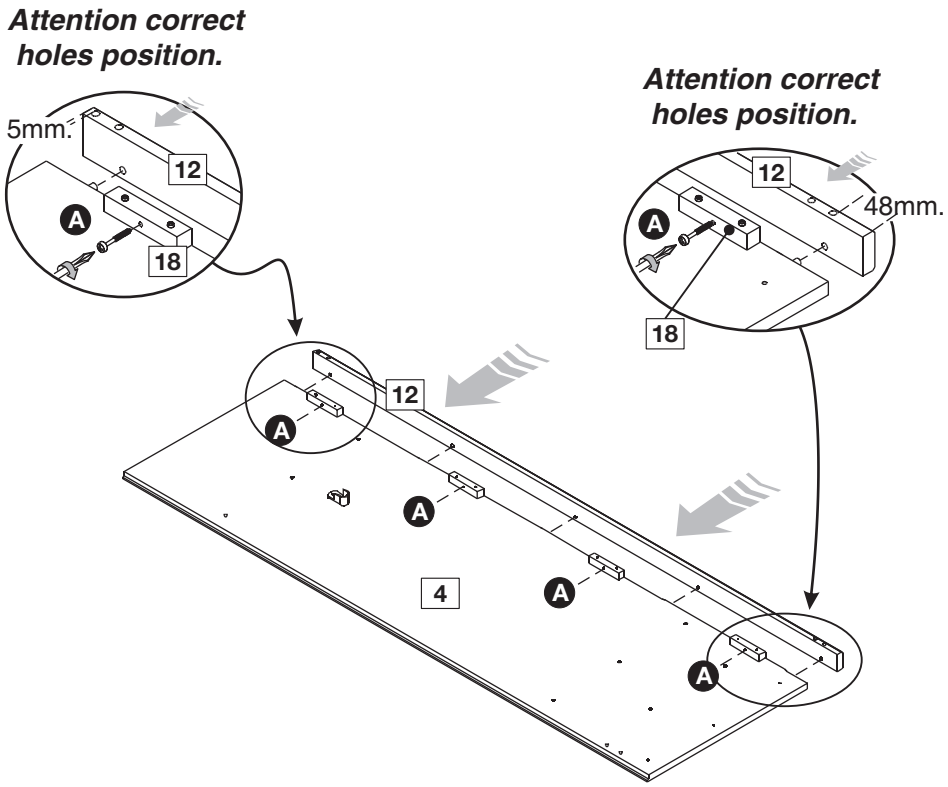


Step 5

Fixing front frames:

Fix left front frame 11 to the left side panel 3 through blocks 18 using screws A as shown.

Attention: Note correct position of parts before fixing.

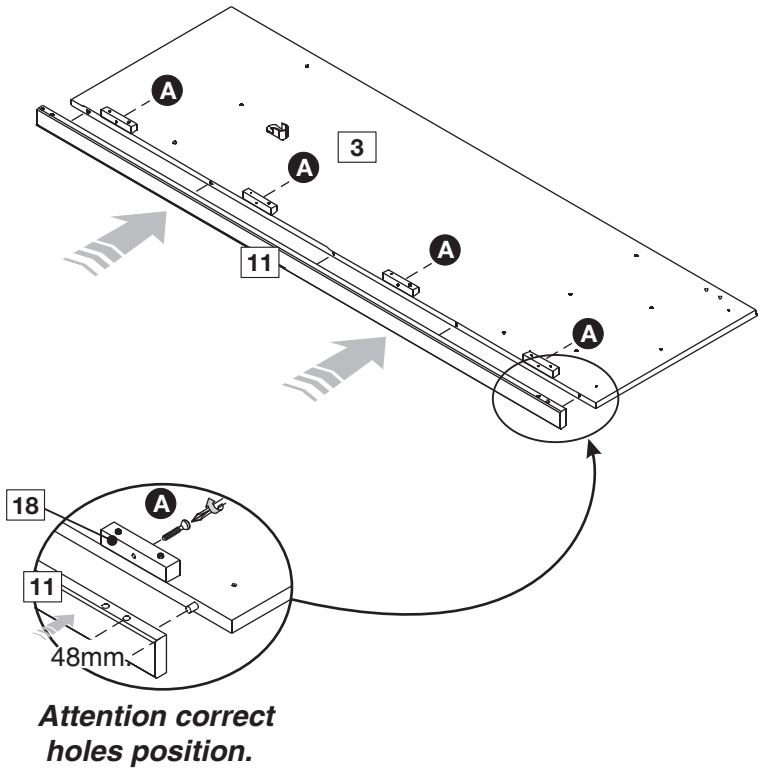

Step 6

Assembling the cabinet:
(Two people required for an easier assembly)


With help, fit base panel 2 , fixed shelf 5 , top rail 14 , bottom rail 13 and back rail 25 to the left side panel 3 and right side panel 4 .

Fix base panel 2 and fixed shelf 5 using screws A .

Note correct position of parts before fixing.

Note: Make sure rounded edges are facing up and holes are facing down on bottom rail 13 .


Door clip to be facing down.

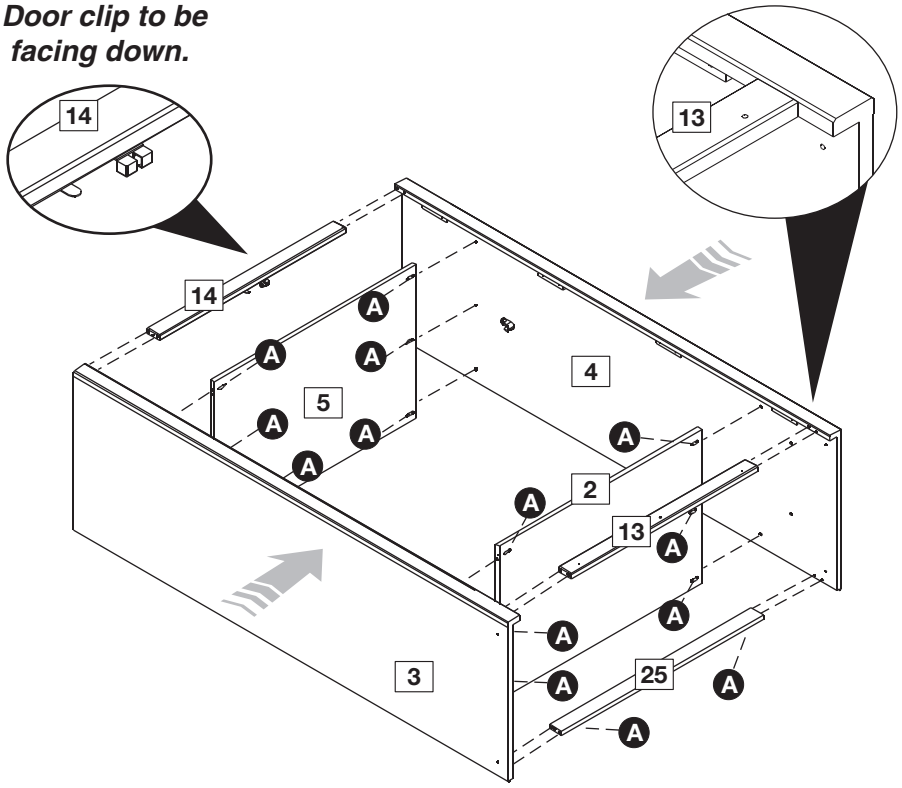

Step 7

Fixing top panel:

Fix top panel 1 to the assembled cabinet using screws C as shown.

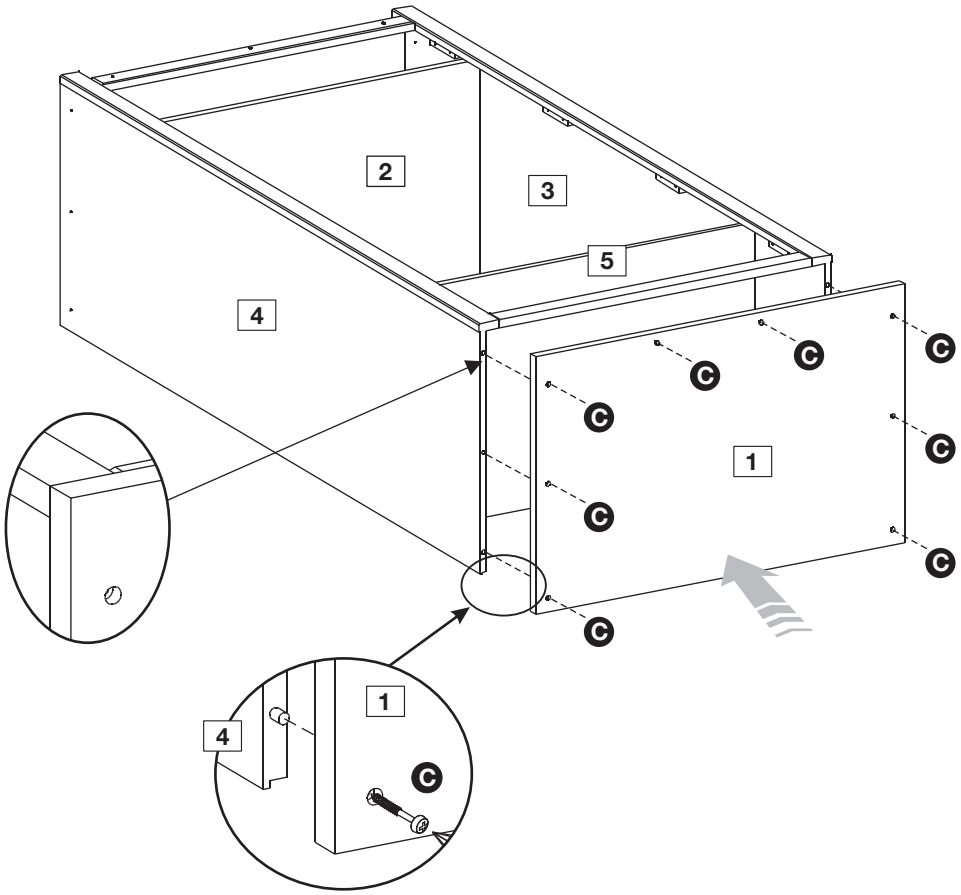

Step 8


Assembling the cabinet:

a: Fix side plinths 7 to the side panels using screws E.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 8 to the bottom frame 13 using screws E.


Note: Make sure front plihth 8 is aligned to the bottom edge of the side panels and in line to the side plinths.

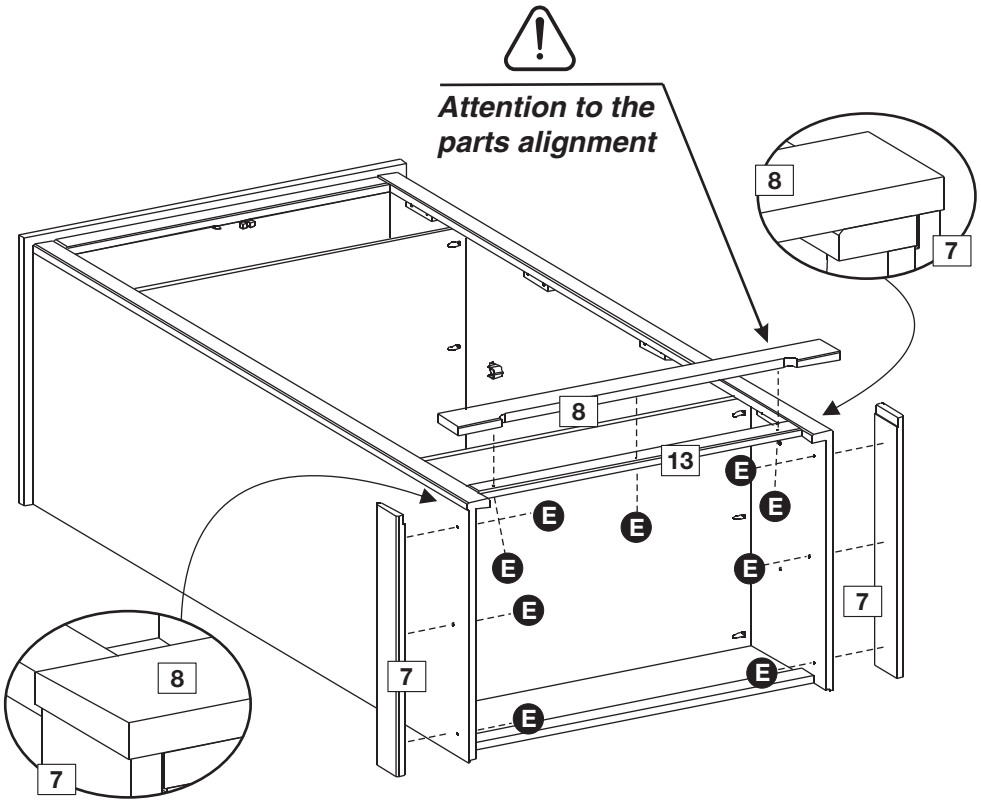

Step 9

Fixing drawer runners:

Fix drawer runners 26 to the sides using screws S as shown.

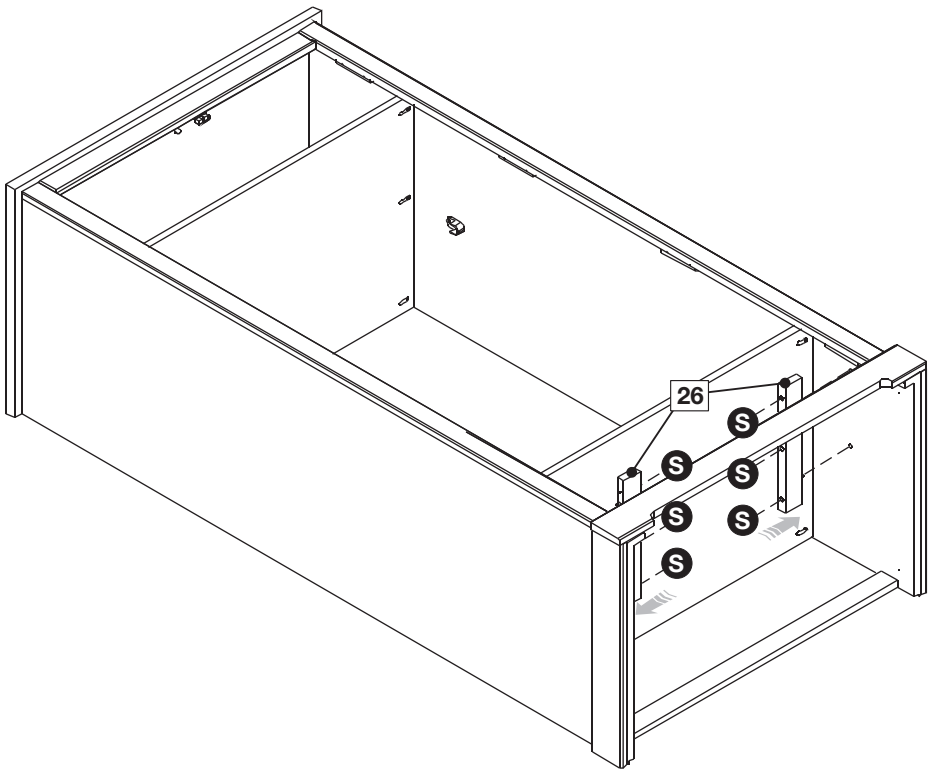

Step **10**

Fixing back panels:


Carefully turn the product upright.


Important: Cabinet MUST be "square" when back panels ate attached.


a: Attach the right back panel 6 first using nails H.

b: Position profile 10, large profile 19 and small profile 27 to the attached back panel.

c: Carefully slot the second back panel 6 into profiles and fix it to the cabinet using nails H.

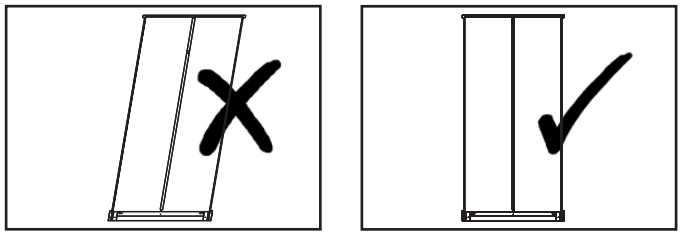

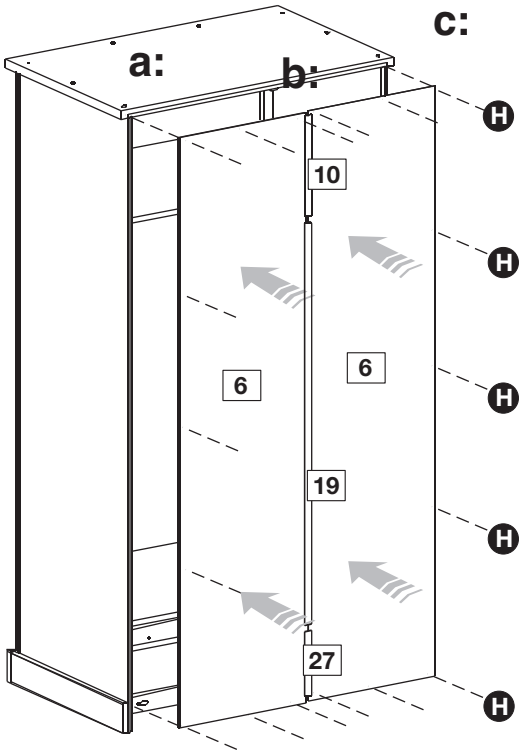


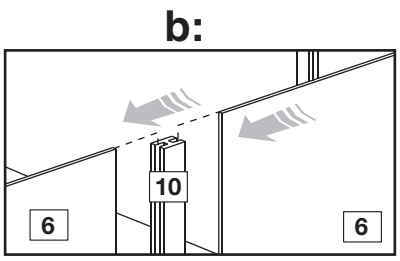

Step **11**

Place hanging rail 9 into the supports within the cabinet as shown.

Fix the door clip R and door knocker I to the pre marked holes on base panel using screws D as shown.

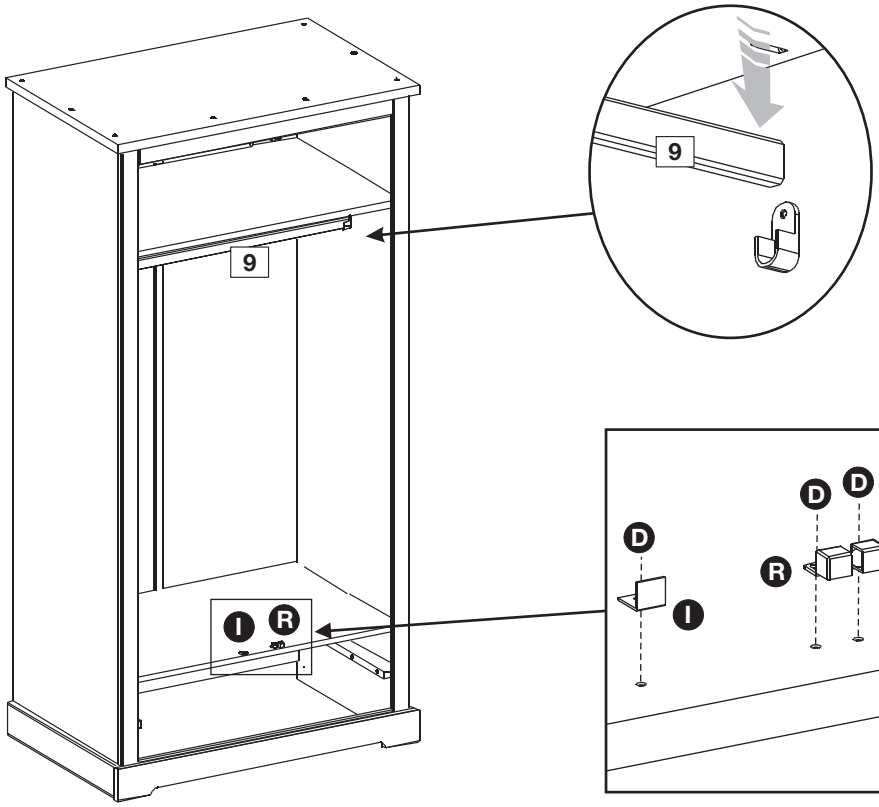

Step **12**


Preparing the doors:

Right door:

a: Fix door clips (L) to the pre marked holes on right door 16 using screws (D) as shown.

b: Attach right hinge (J) to the pre marked holes on right door 16 using screws (D).

Note: Make sure hinges are positioned as shown in the diagram.

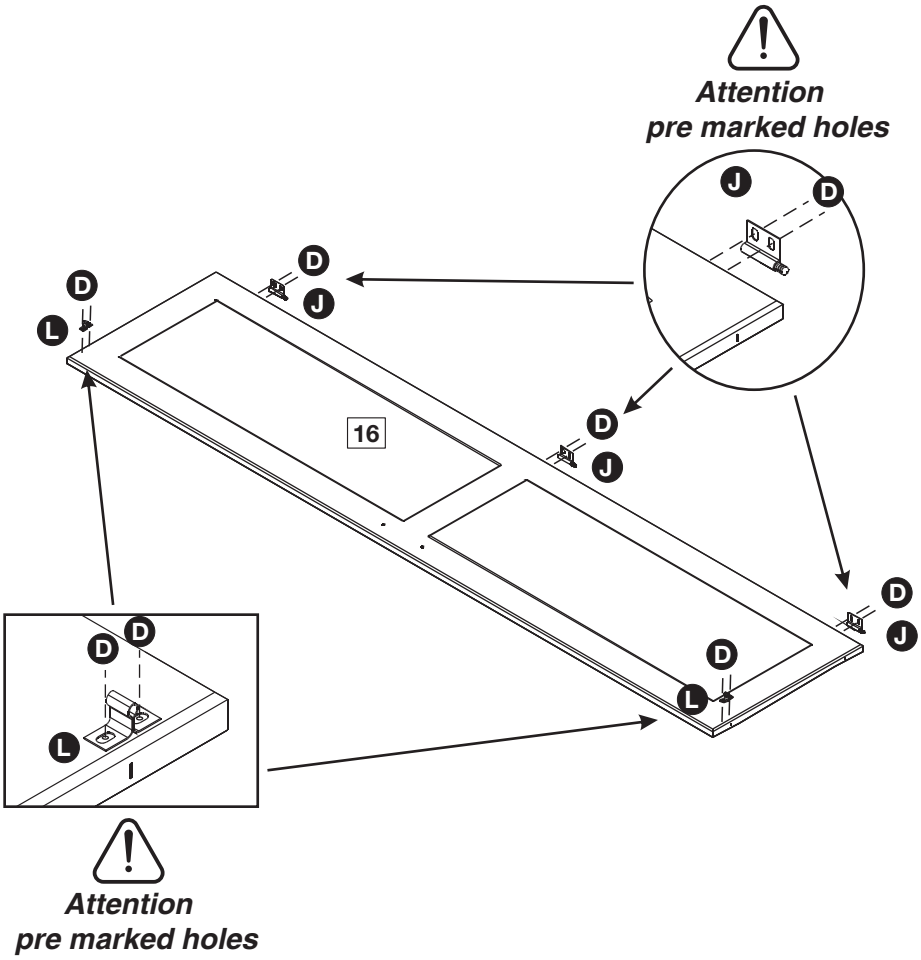


Left door:

a: Fix door knocker 17 to the pre marked holes on the left door 15 using screws (D) as shown.

b: Attach left hinge (K) to the pre marked holes on left door 15 using screws (D).


Note: Make sure hinges are positioned as shown in the diagram.

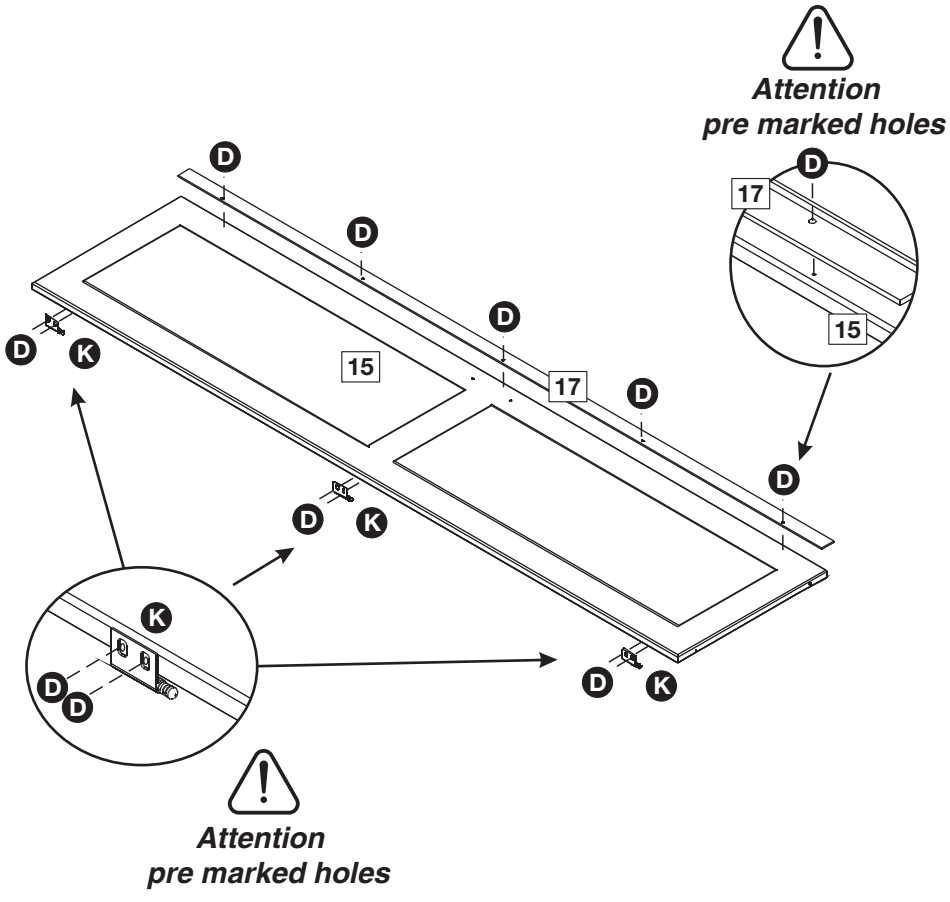

Step **13**

Carefully turn the doors with their front facing up.

Fix handles Ⓜ to the doors using bolts Ⓝ.

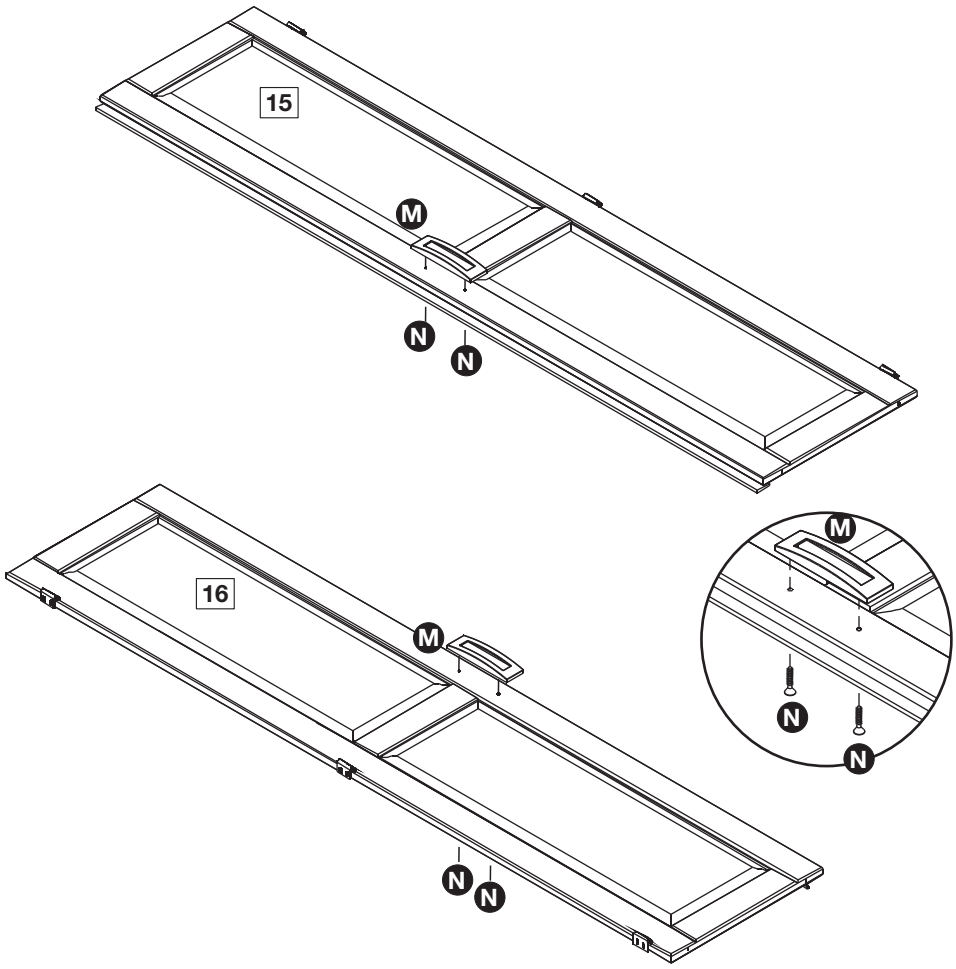

Step **14**


Fixing hinges:

a: Fix left door hinges Ⓚ to the pre marked holes on the left front frame as shown.

Note correct position of the hinge prior to fixing.

b: Fix right door hinges Ⓙ to the pre marked holes on the right front frame as shown.

Note correct position of the hinge prior to fixing.

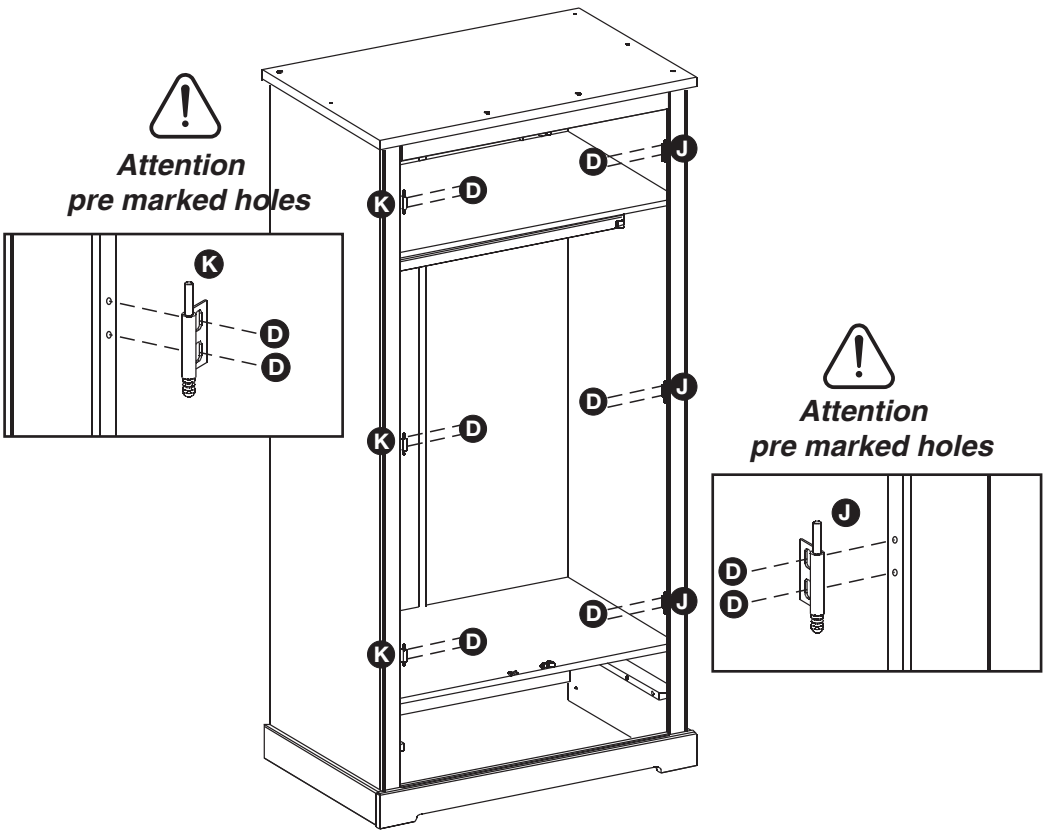

Step **15**


Assembling the drawers:

a: Attach drawer sides 21 and 22 to the drawer front 20 using screws A.

b: Slide drawer bottom 24 into slots on drawer sides.

c: Holding the drawer back 23 in place and flush to the edge of drawer side, fix them to the drawer back using screws A.


d: Using bolt N attach the drawer handles M to the drawer front.

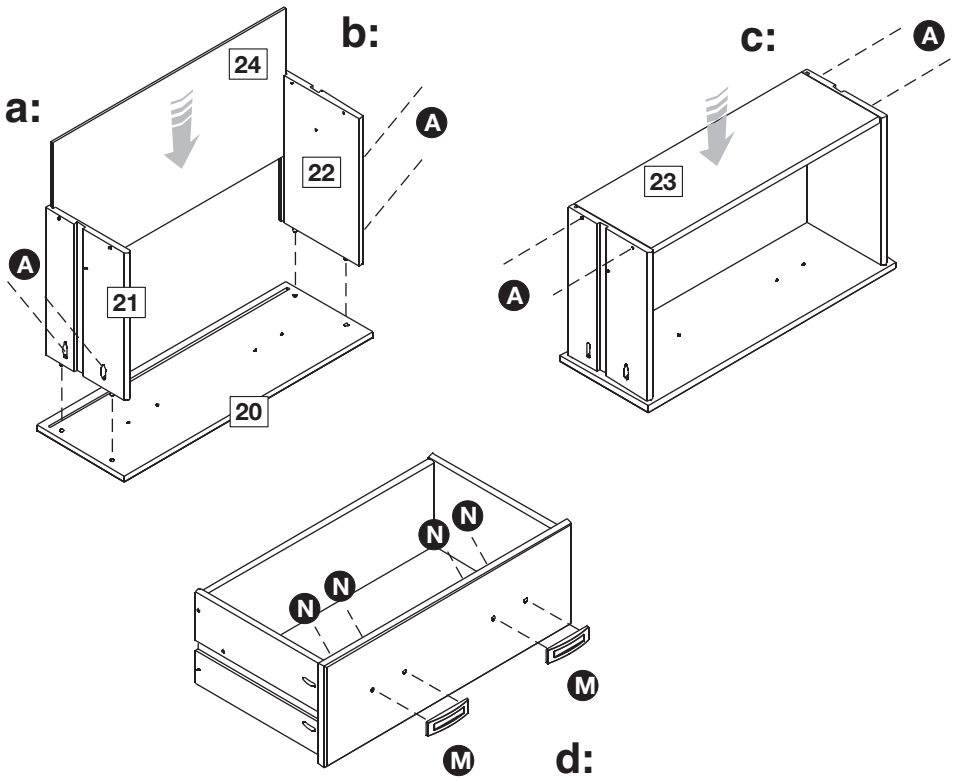

Step **16**


Fitting doors:

With help fit door hinges together as shown in the diagram.

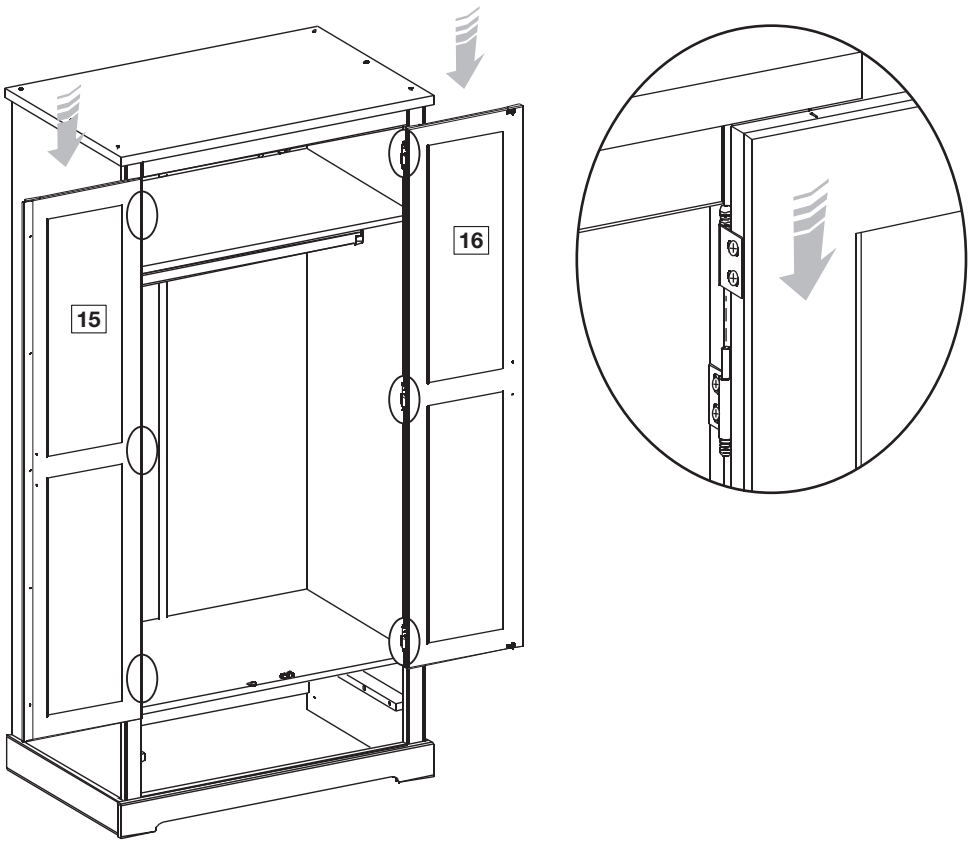

Step **17**

Insert drawer into unit. With the back of the drawers past the front frames, use a hammer to tap the dowels **F** in flush to the drawer sides. This is a safety catch to stop drawers falling out.

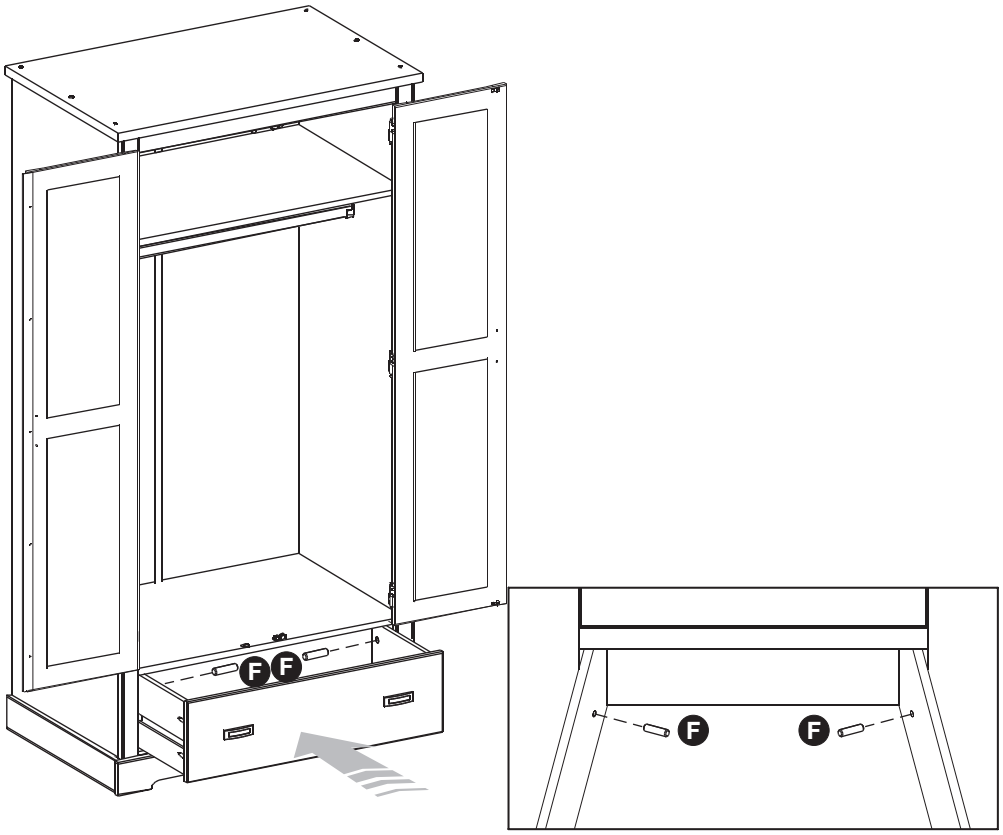


Step **18**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **O** to top of furniture using washer **P** and screw **D**. With help, move furniture into position.

Assembly is complete.

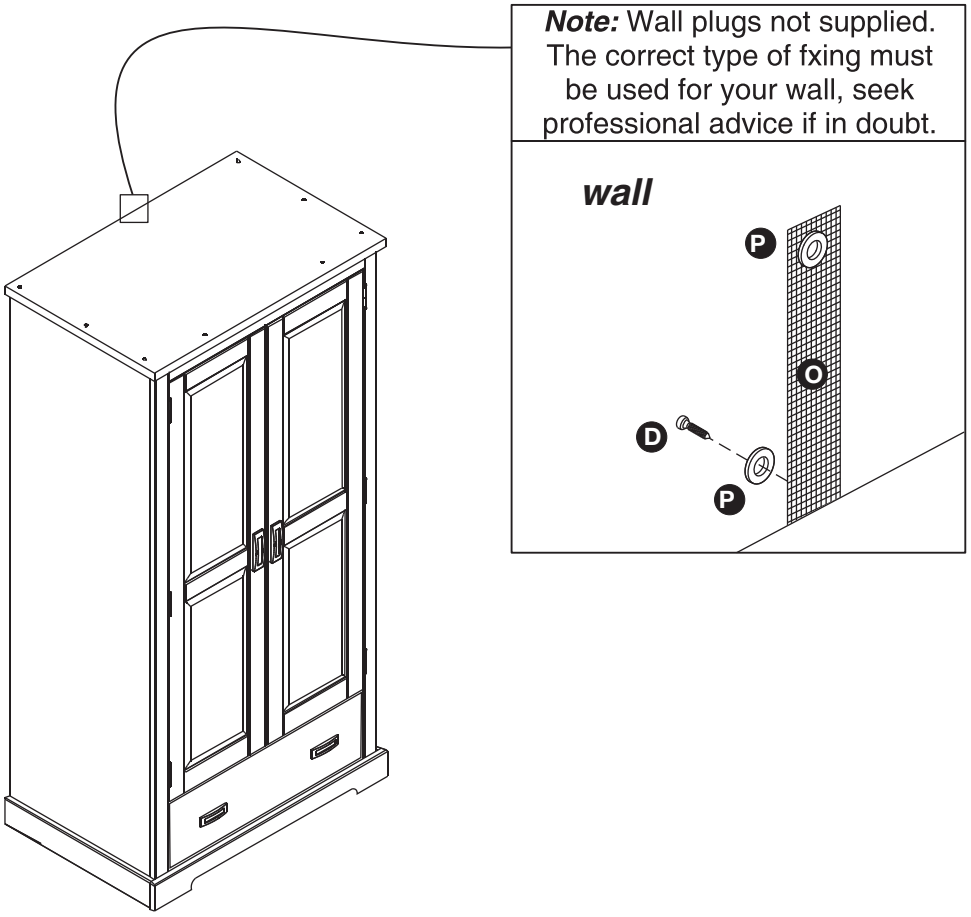


If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:

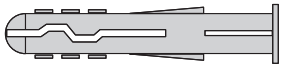

- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

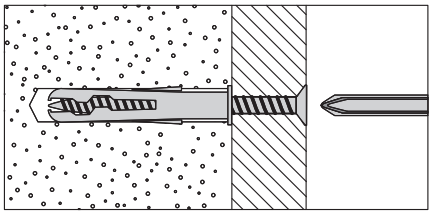


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

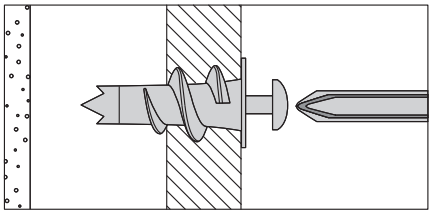


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

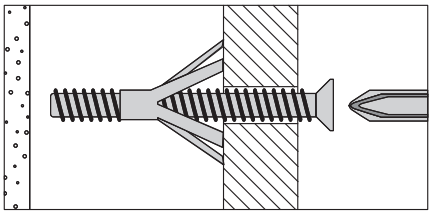


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

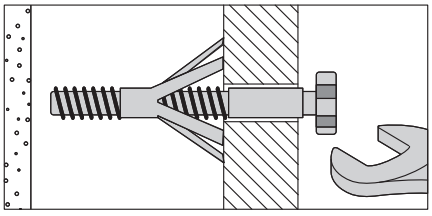


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

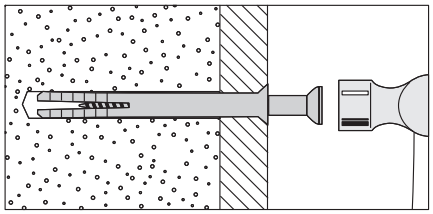

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

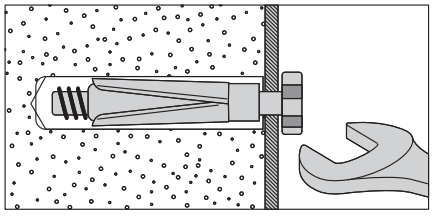

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.