
Daybed - White

Assembly Instructions - Please keep for future reference

3464227

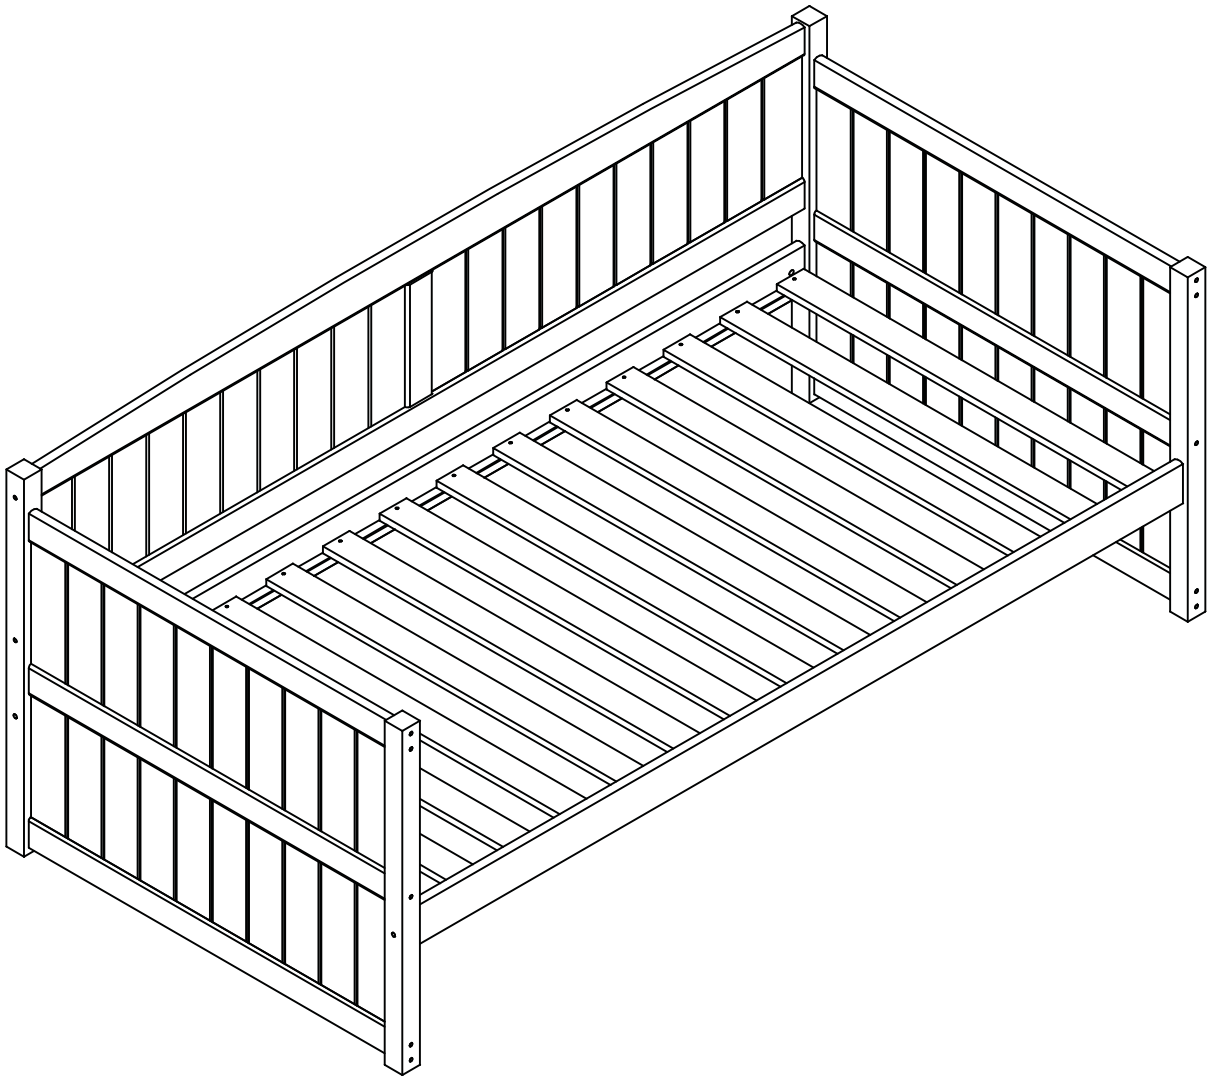

Dimensions

Length - 195cm
Depth - 96cm
Height - 81,5cm
Weight - 29kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**

0045 7668 8055 or e-mail: order@flexa.dk Produced in Estonia for FLEXA4DREAMS A/S.

Issue 1 - 28/01/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

80-10106-20 Daybed

IMPORTANT! KEEP FOR FUTURE REFERENCE

PLEASE DISPOSE OF PACKAGING MATERIAL.
PLASTIC BAGS CAN BE DANGEROUS TO YOUNG CHILDREN

WARNING! Not suitable for children under 4 years.

WARNING! Do not place this child's bed near heat sources, windows and other furniture.
WARNING! Do not use this child's bed if any of the parts are broken, torn or missing.
WARNING! Once assembled, this bed must not be disassembled. Screws must not be removed once inserted.

This child's bed is to be used with a 1900mm x 900mm mattress.
Suitable for over 4 years old to adults.
All assembly fixings should be checked periodically and re-tightened where necessary.
Children are likely to play, bounce, jump and climb on beds, therefore the child's bed should not be placed too close to other furniture or windows, blind cords, curtain pulls or other strings or cords, and should be placed either tight to any wall or have a gap of 300mm between the wall and the side of the bed.
Always place the side of the bed with the safety rail against a wall.

Any additional or replacement parts should only be obtained from the manufacturer or distributor.
This product complies to standard BS8509: 2008+A1:2011

WARNING

YOUR CHILDREN'S SAFETY IS YOUR RESPONSIBILITY

CARE AND MAINTENANCE

To clean use a damp cloth, avoiding the use of strong detergents or abrasives.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

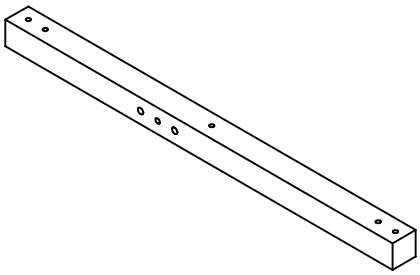


1 Leg x2 (72.5x4.3x4.3cm)
No. 12-04307251-20

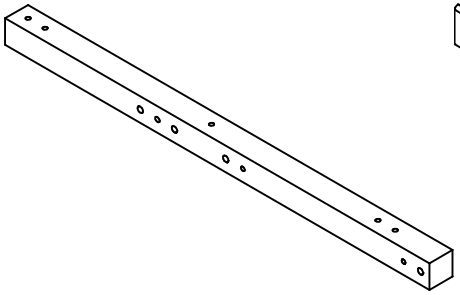


2 Leg x2 (79.4.7x4.3x4.3cm)
No. 12-04307941-20

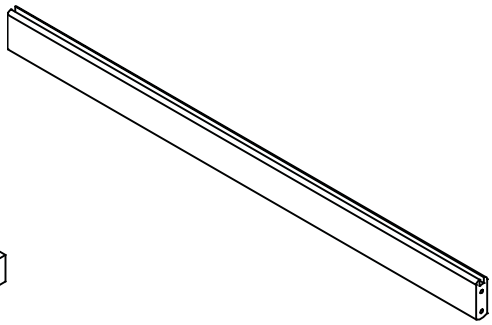


3 Endrail x4
(87.7x6.5x2.0cm)
No. 12-02008772-20

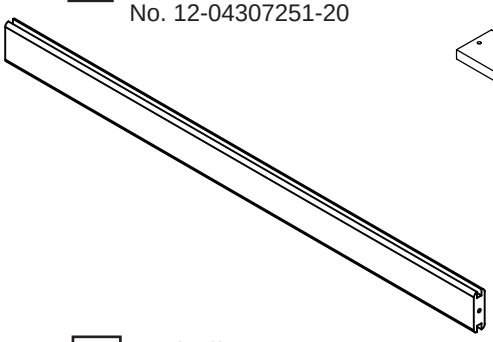


4 Endrail x2 (87.7x6.5x2.0cm)
No. 12-020087724-20

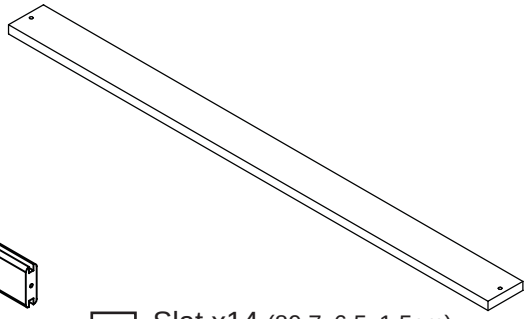


5 Slat x14 (89.7x6.5x1.5cm)
No. 12-01508971

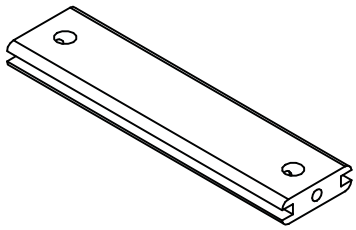


6 Distance piece x1
(25.7x6.5x2.0cm)
No. 12-02002581-20

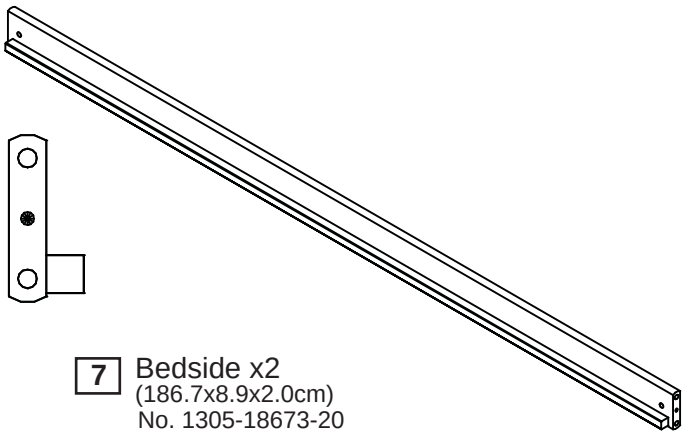


7 Bedside x2
(186.7x8.9x2.0cm)
No. 1305-18673-20

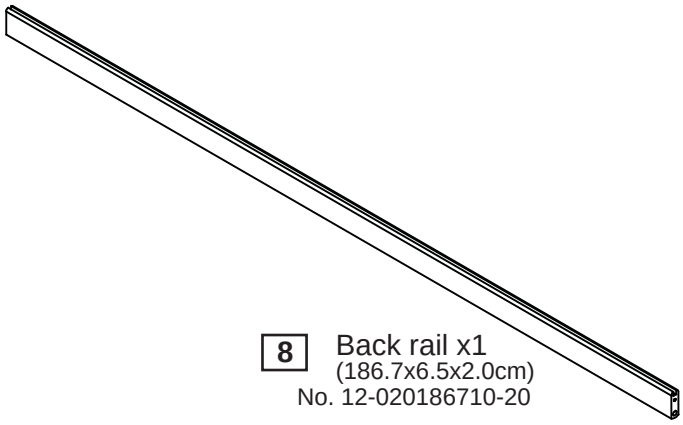


8 Back rail x1
(186.7x6.5x2.0cm)
No. 12-020186710-20

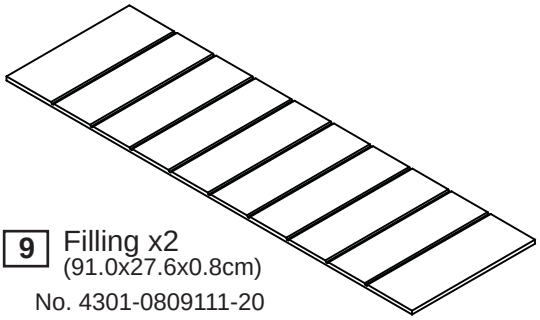

9 Filling x2
(91.0x27.6x0.8cm)
No. 4301-0809111-20

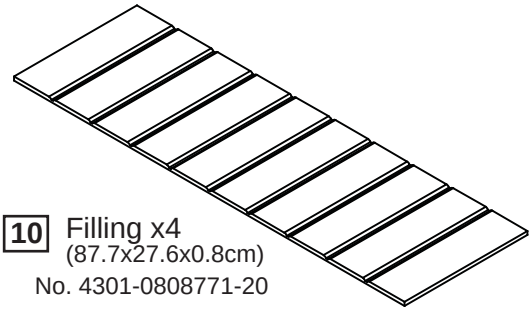

10 Filling x4
(87.7x27.6x0.8cm)
No. 4301-0808771-20





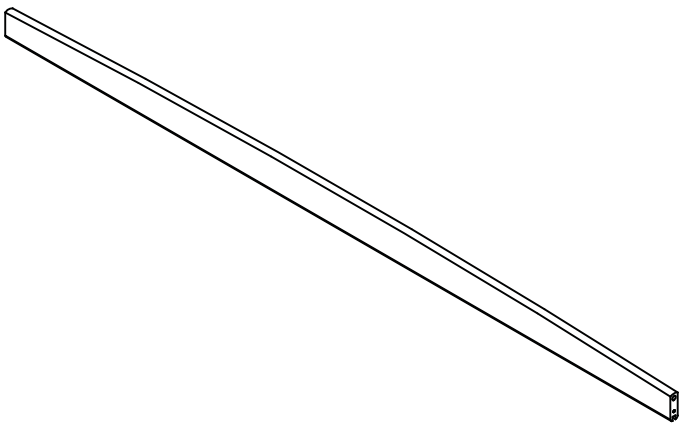


11 Back rail x1
(186.7x6.5x2.0cm)
No. 12-020186711-20

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


No. 3913-06090 **A**  M6x90mm Connecting bolt x4	No. 3922-06014 **B**  M6 ø10x14mm Barrel nut x4	No. 3901-40030 **C**  4,0x30mm Chipboard screw x28
No. 3930-10045 **D**  10x45mm Dowel x12	No. 3909-63090 **E**  6,3x90mm Assembly screw x24	No. 3933-14016 **F**  ø14x15,5mm Threaded bush x2
No. 3917-08010 **G**  M8x10mm Grub screw x2	No. 3920-04040 **H**  M4/ ø4,0x40mm dowel screw x2	No. 4020-001 **I**  ø8x38mm Connecting bolt x2


Tools required

Phillips screwdriver (medium)


Flatblade screwdriver (medium)

Allen key 4mm incl.
No. 4033-004

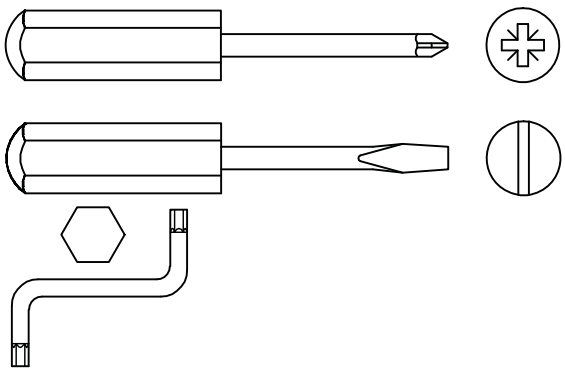


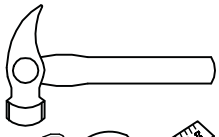

Small hammer

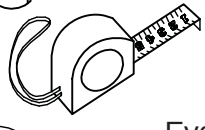

Ruler/tape measure

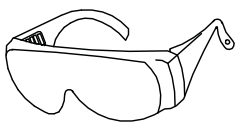


Eye protection (when using a hammer or glue)

Assembly Instructions

Step 1

Attach the dowels (D) to bedsides [7], back rail [8] and back rail [11].


It may be necessary to tap the dowels in very gently with a small hammer.

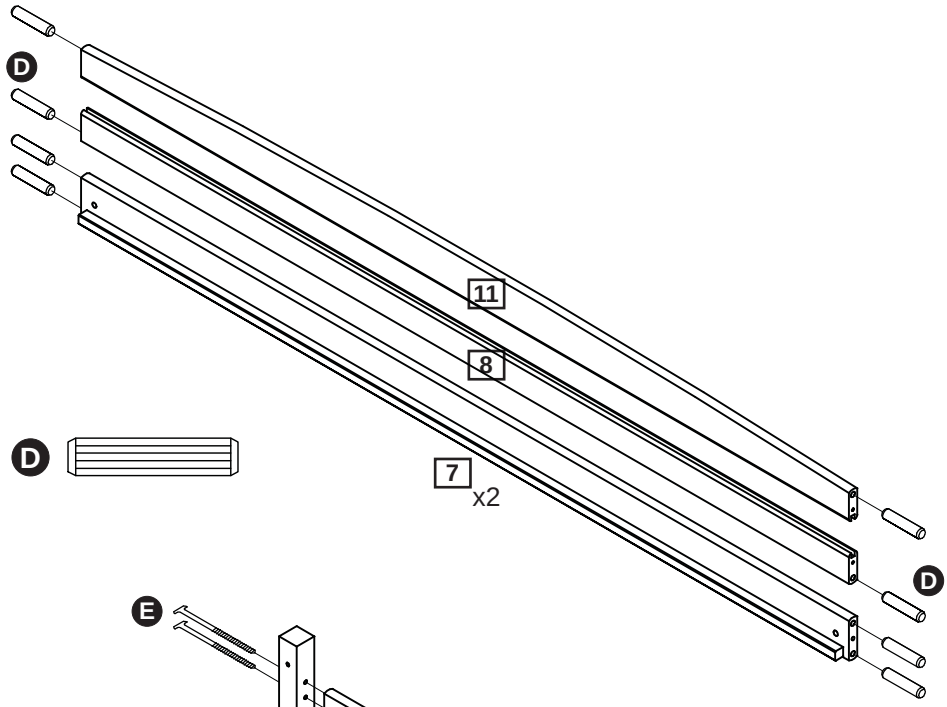

Step 2

Attach endrails [3] and [4] to leg [2] with screws (E) using the allen key. Note the position of the grooves.

Repeat same procedure for second headboard.

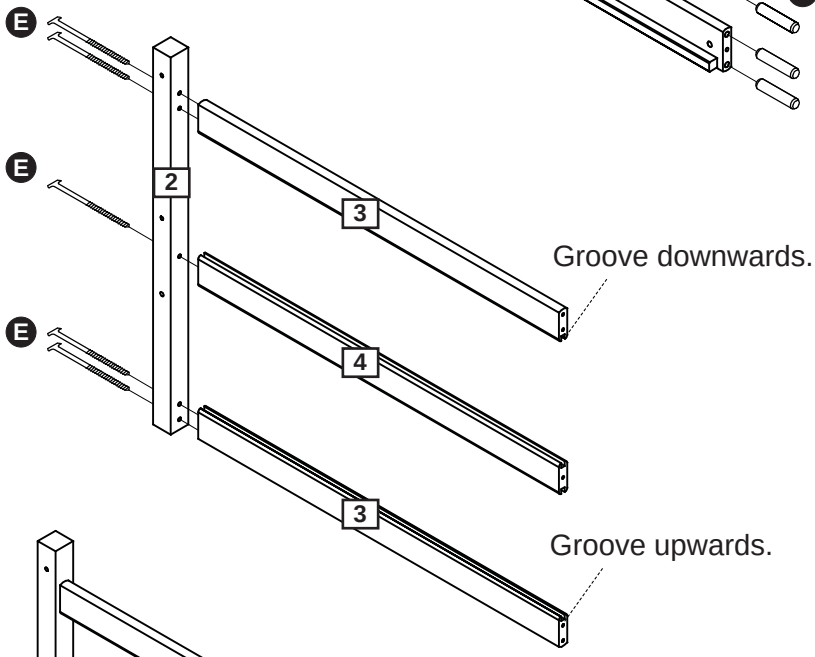


Step 3

Slide MDF panels [10] between endrails [3] and [4].

Attach leg [1] to endrails [4] and [3] with screws (E) using the allen key.

Repeat same procedure for second headboard.

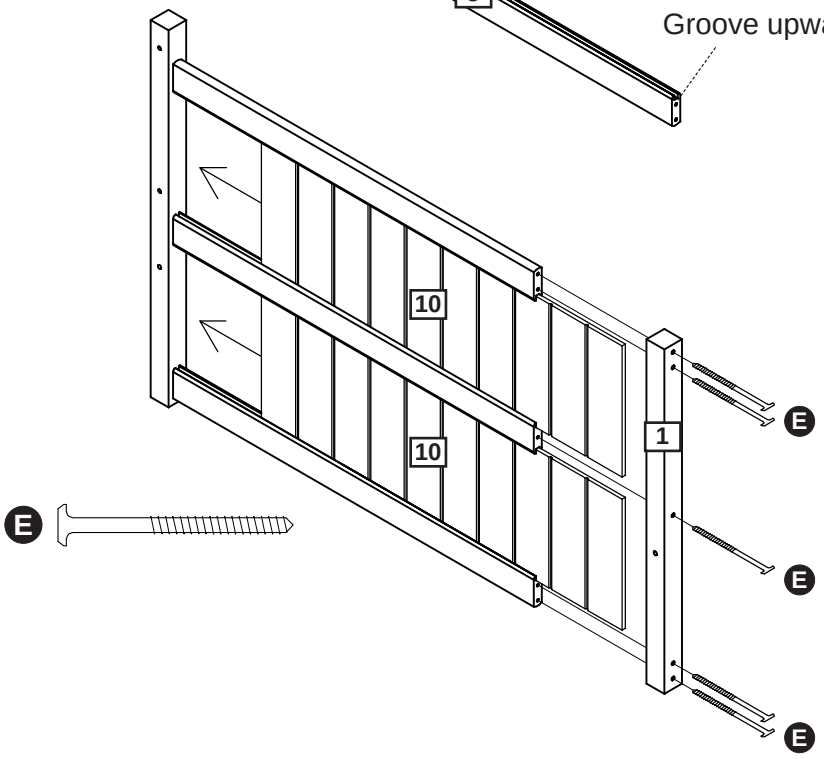


Assembly Instructions

Step 4


Attach connecting bolts Ⓘ to dowel screws Ⓗ. Insert the dowel screws Ⓗ into the holes in back rails [11] and [8] . Fasten with a flatblade screwdriver.

Note that the hole in connecting bolt Ⓘ should be facing horizontal with back rails [11] and [8].

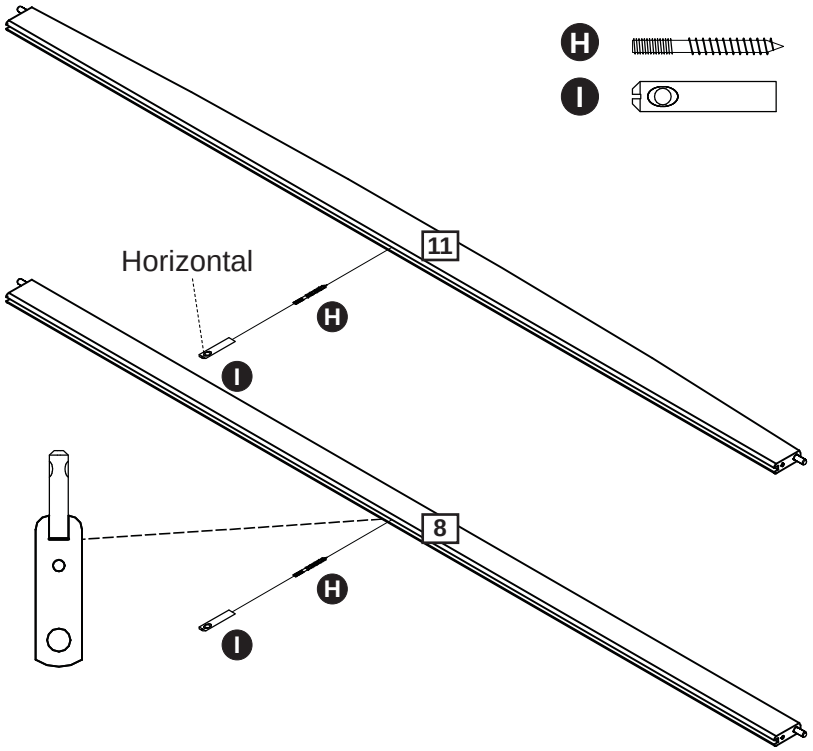


Step 5

Insert threaded bushes Ⓕ into the distance piece [6] . Line up the holes in bush Ⓕ with the holes in the end of the distance piece [6]. Place the distance piece between the two back rails [11] and [8]. Insert grub screws Ⓖ into the threaded bushes Ⓕ and secure the distance piece [6] into place.

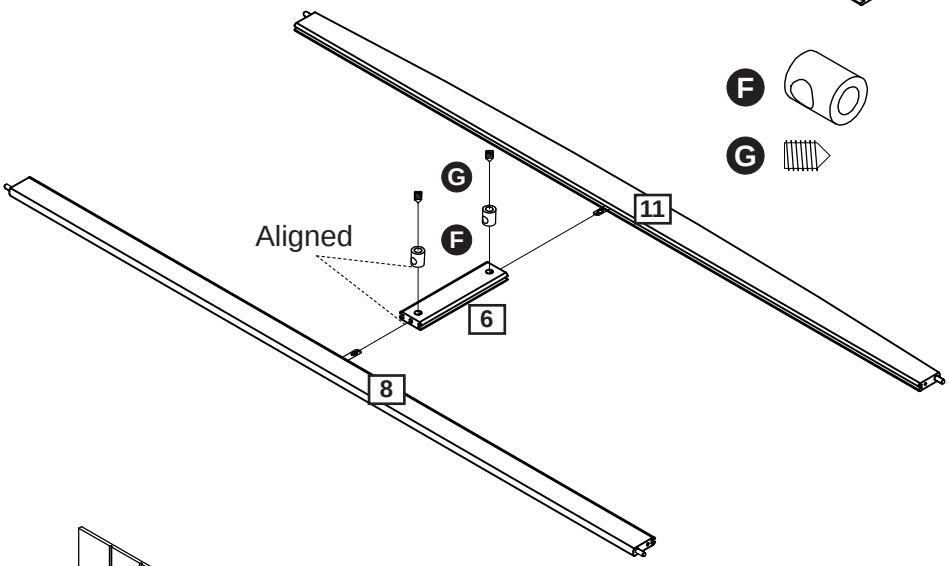

Step 6

Slide MDF panels [9] into the grooves between back rails [8] and [11].

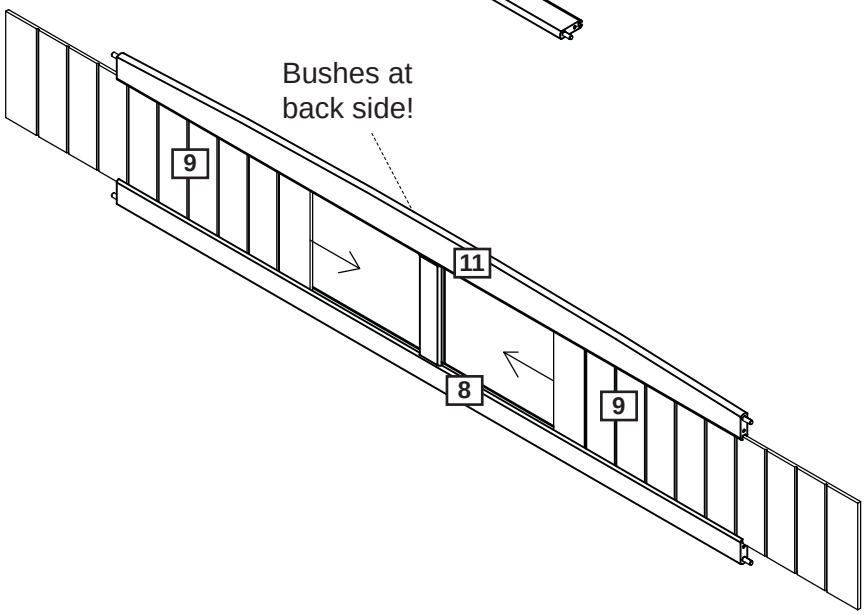


Assembly Instructions

Step 7

Attach the assembled backrail panel and bedside 7 to the assembled headboards by placing the dowels into the holes in legs 2.

Push barrel nuts B into the 2 small holes in in bedside 7. Push 1 connecting bolt A through legs 2 to meet the barrel nuts B and the fasten with the allen key.


Push 4 assembly screws E through legs 2 to meet back rails 11 and 8. Fasten with the allen key.

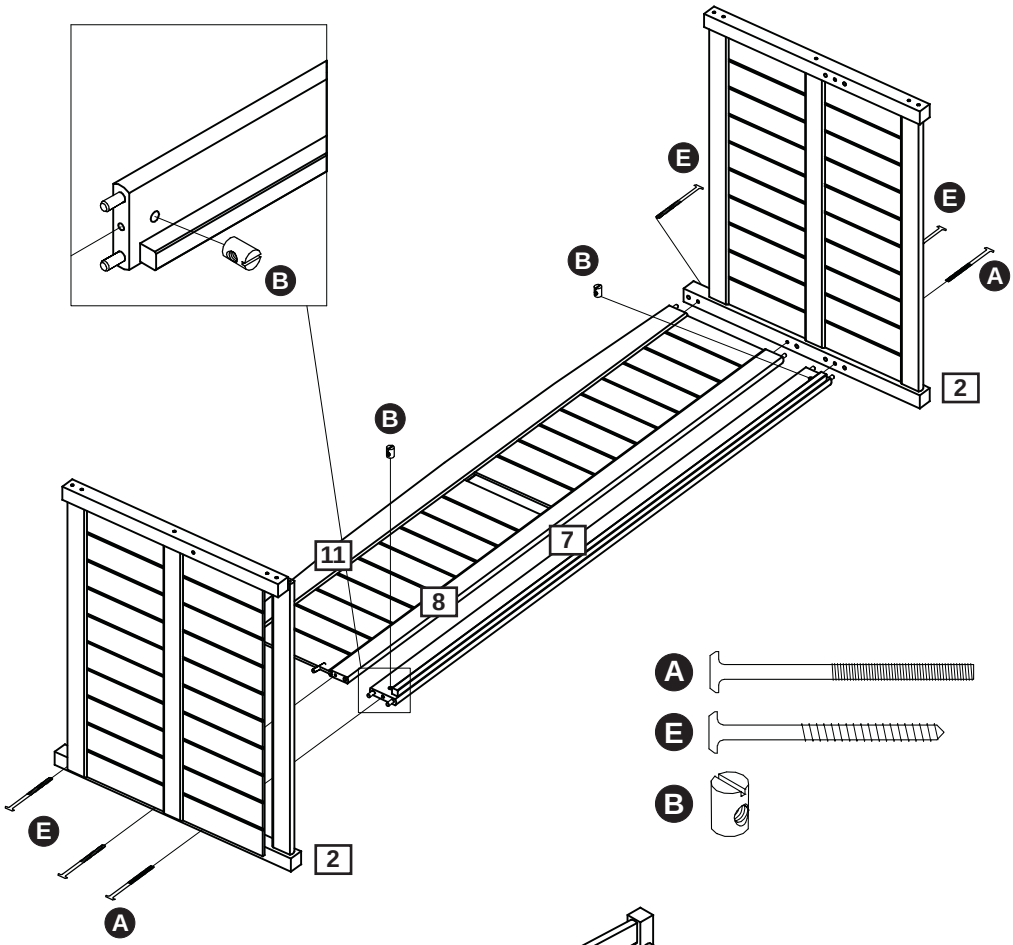

Step 8

Attach bedside 7 to the bed by placing the dowels into the holes in legs 1.

Push 2 barrel nuts B into the small holes in bedside 7. Push 1 connecting bolt A through each leg 1 to meet the barrel nuts B and fasten with the allen key.

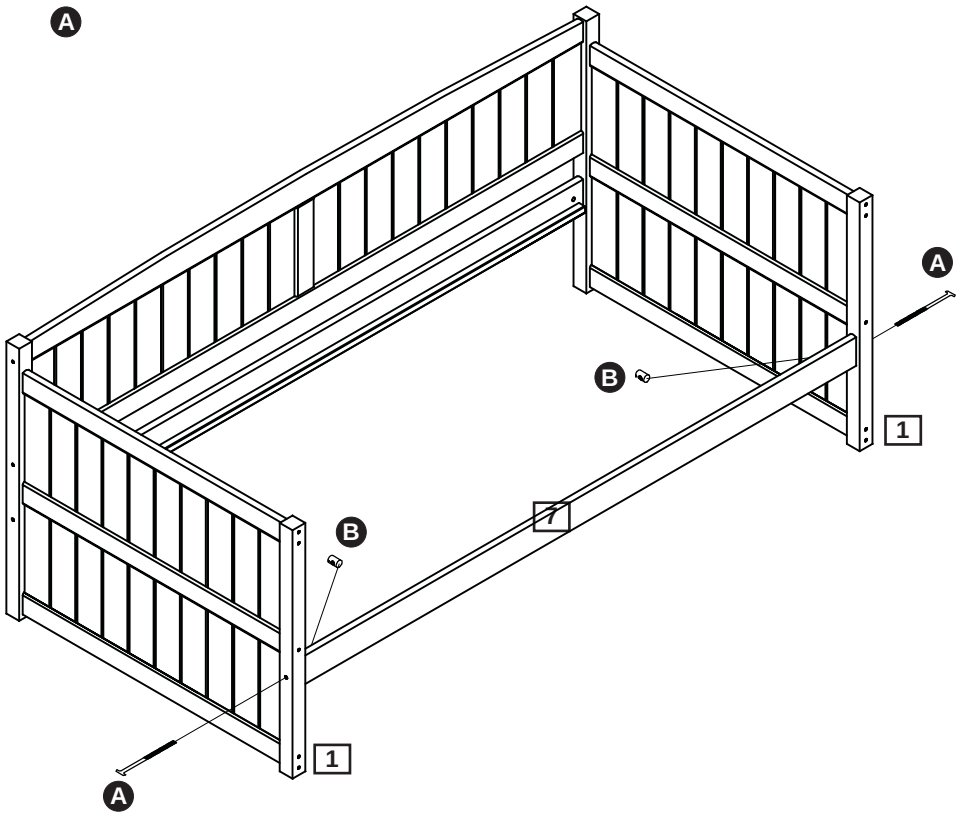


Assembly Instructions

Step 9

Place one slat [5] in the centre of the bed. Follow the measurement .

Place two slats [5] in the ends of the bed. Follow the measurement .

Push the bedsides [7] together whilst attaching middle slat [5] to the bed with two chipboard screws C .

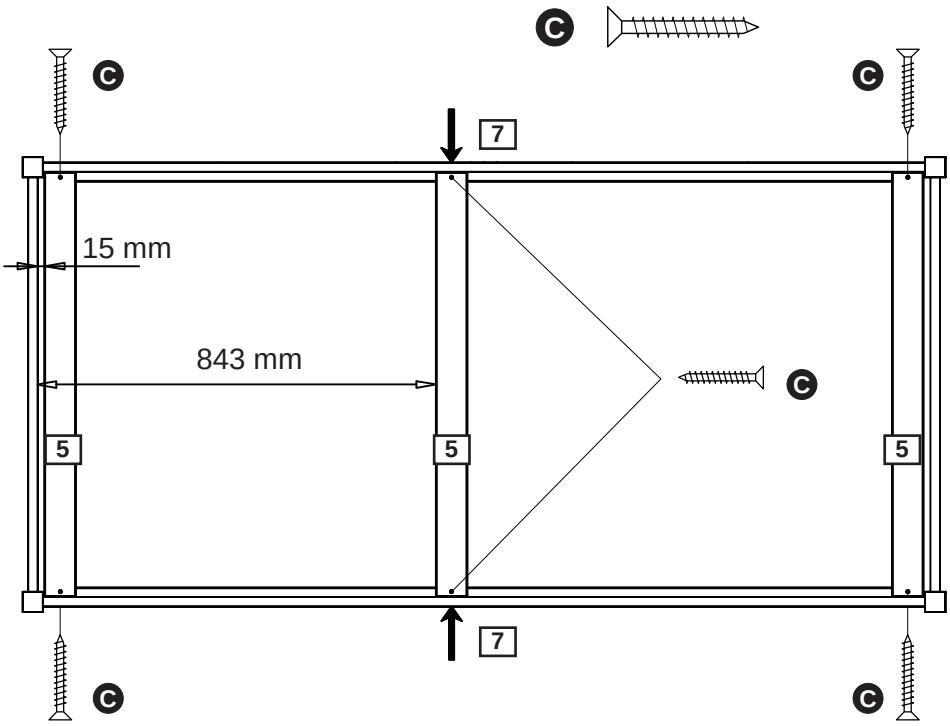


Step 10

Position the remaining eleven slats [5] in the bed with a distance of 73 mm between each.

Fasten each slat with two screws C

Assembly is complete.

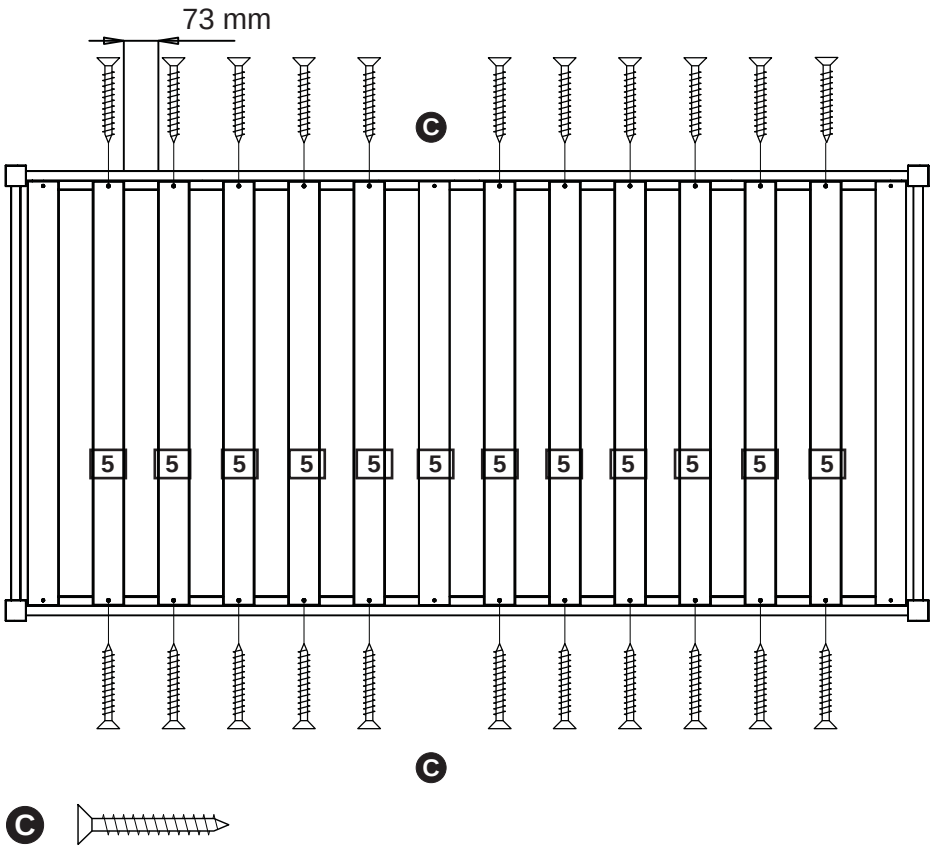

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk