
Filby - 4FT 6 Bed

Assembly Instructions - Please keep for future reference

3326750
3457117

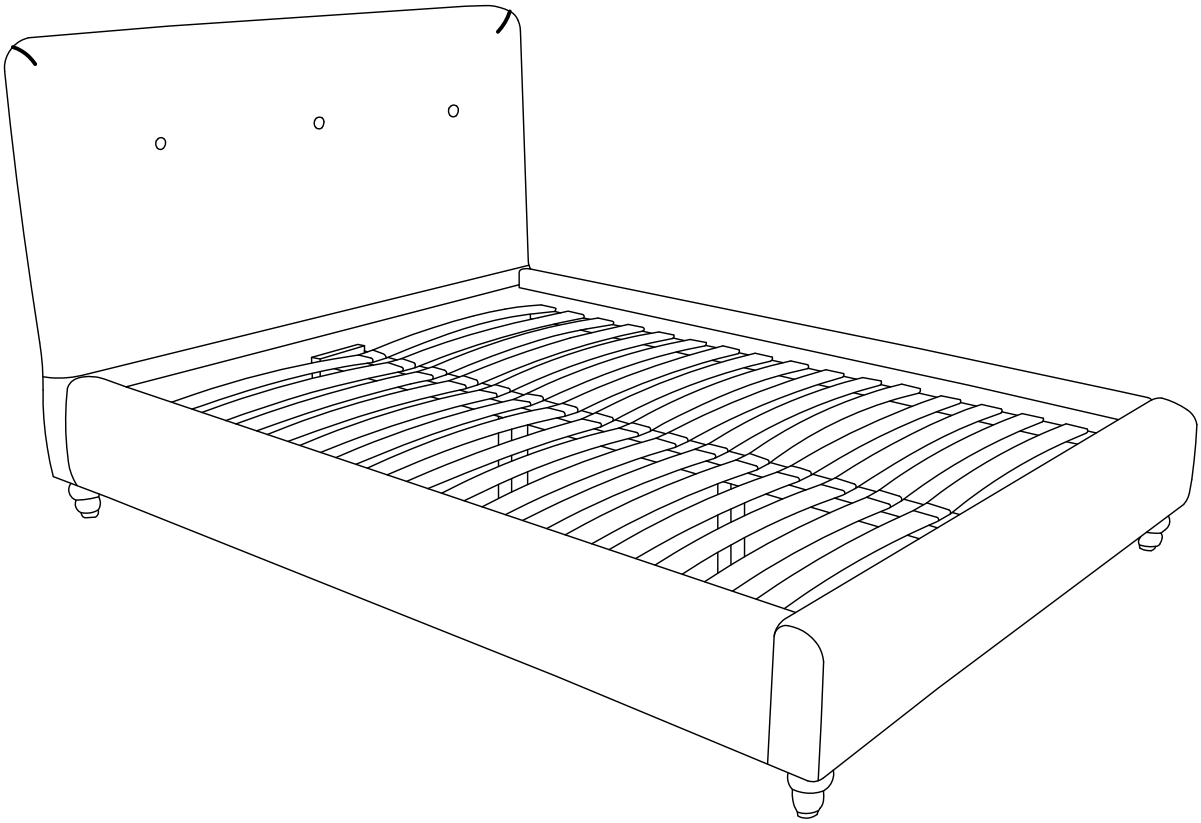

Dimensions

Width - 153cm
Depth - 213cm
Height - 110cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** 03456 400800

Issue 1 - 11/10/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- Improper use of electrical tools will crack the components.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:** 03456 400800


Please check you have all the panels listed below

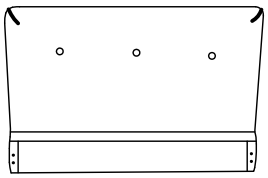


1 Headboard x1(153x100cm)

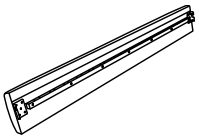


2 Bed side x2(192.5x25cm)




3 Footboard x1(153x25cm)



4 "U" Block x2(15x6.5cm)



5 Mid bar x1(192x8x3.5cm)

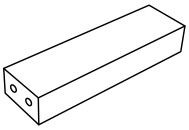

6 Mid leg X2(21.5X6cm)



7 leg x4(Ø8.1x10cm)








8 Bed slats x32(68.5x5.5cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

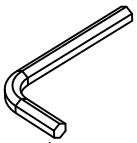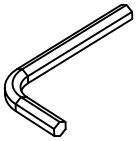A  Bolt x8(M8x50mm)	B  Bolt x8($\frac{1}{4}$"x50mm)	C  Washer x8(Ø22xØ8.2x1.5mm)
D  Screw x4(Ø5*50mm)	E  Allen key (4mm)	F  Allen key (5mm)
G  Plastic midd caps x16	H  Plastic end caps x32	

Tools required




Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Attach "U" Block 4 onto the headboard 1 and footboard 3 with Bolts B using allen key E .

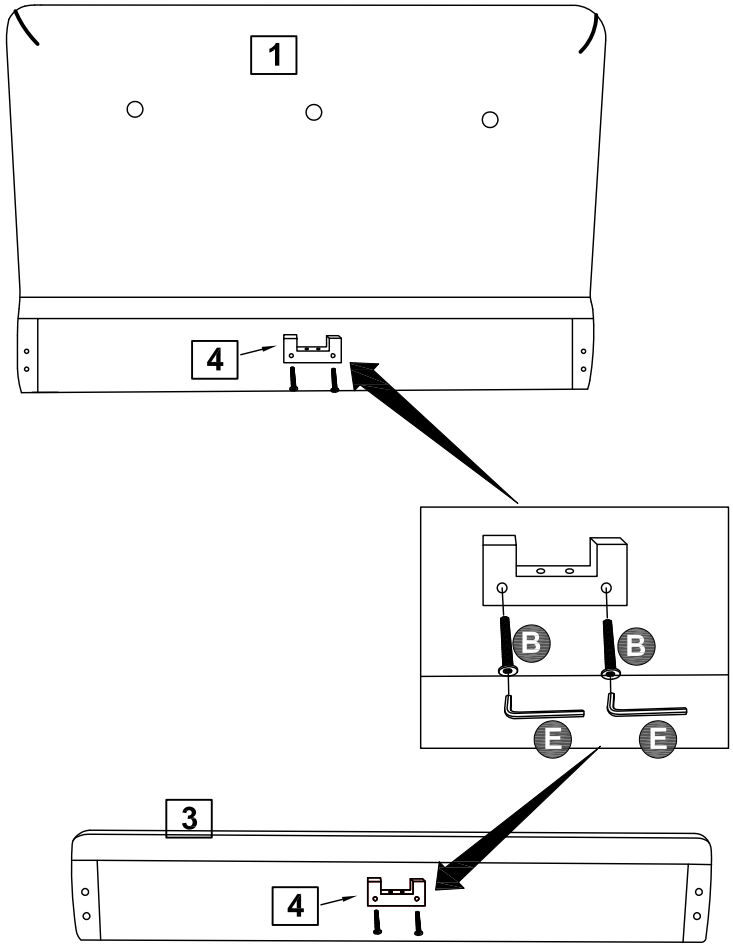

Step 2


Screw up the legs 7 on the bottom of headboard 1 and footboard 3 .

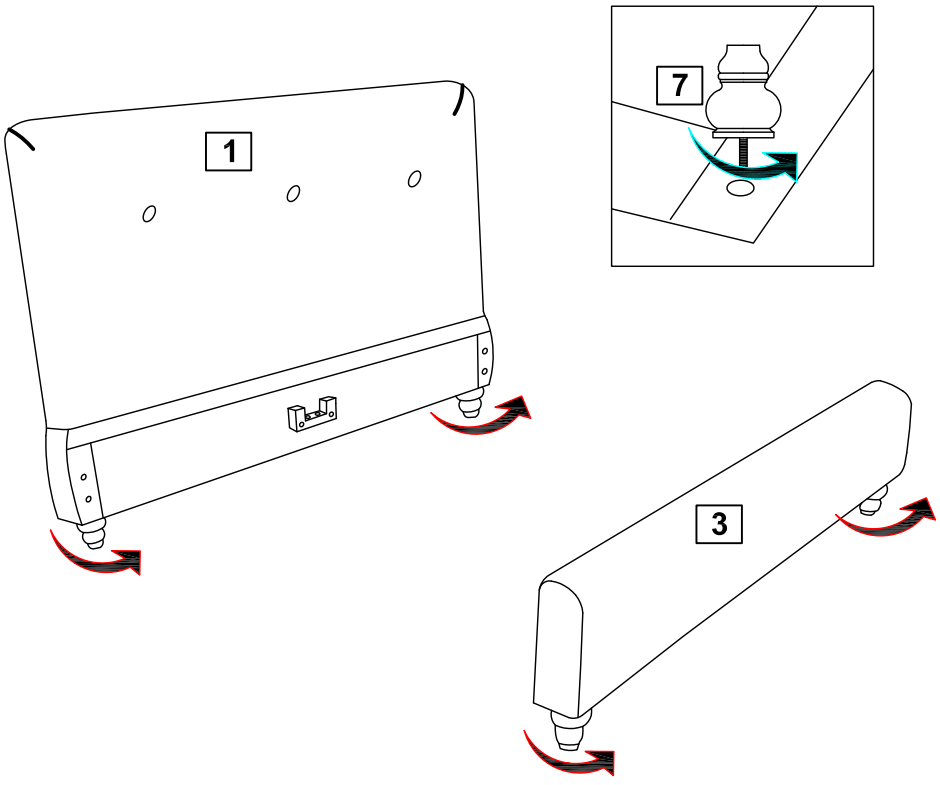

Assembly Instructions


Step 3

Screw Bolts A and washers C into the headboard 1 and footboard 3 as shown, please keep **8mm** outside.

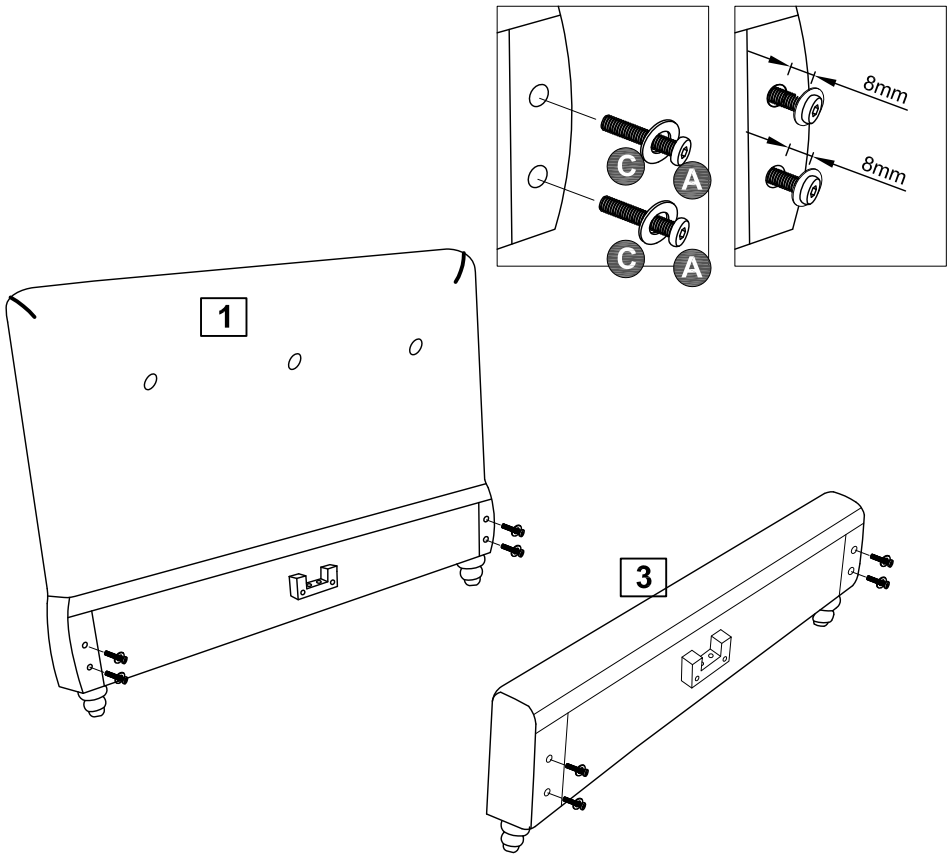

Step 4


Attach Bedside 2 onto headboard 1 and footboard 3 as shown, use allen key F to tighten the Bolts A.

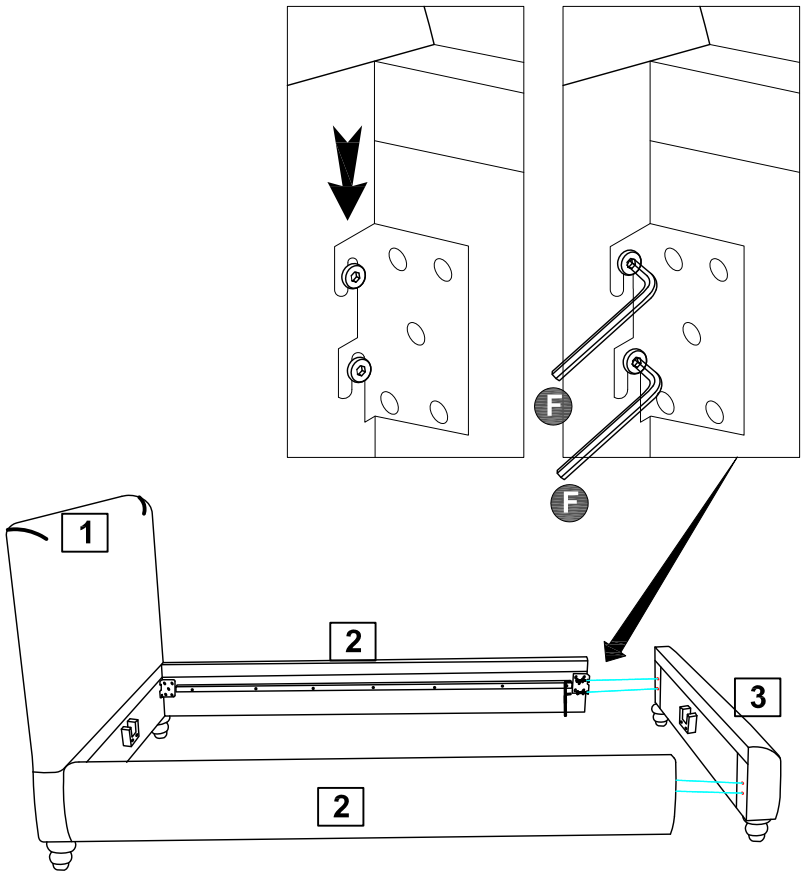

Assembly Instructions


Step 5

Attach mid bar 5 onto mid foot 6 with Bolts B using allen key E

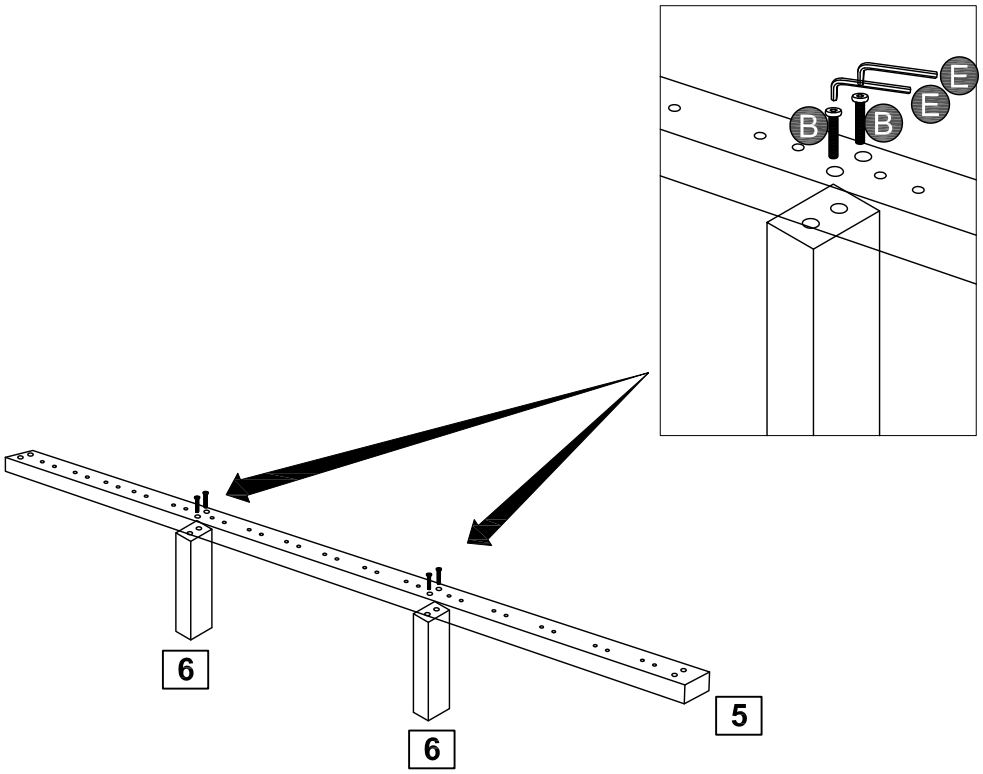

Step 6


Put mid bar on the "U" Block 4, use screws D to fix them.

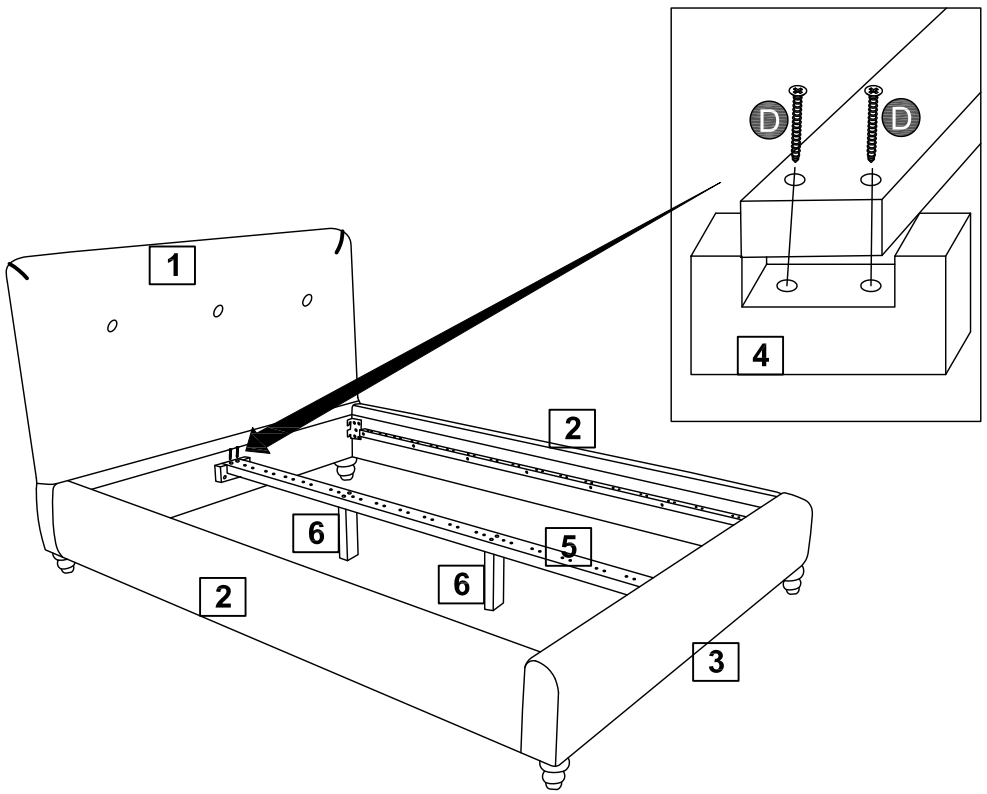

Assembly Instructions


Step 7

Place the plastic middle caps G and the plastic end caps H onto the slats 8 as shown.

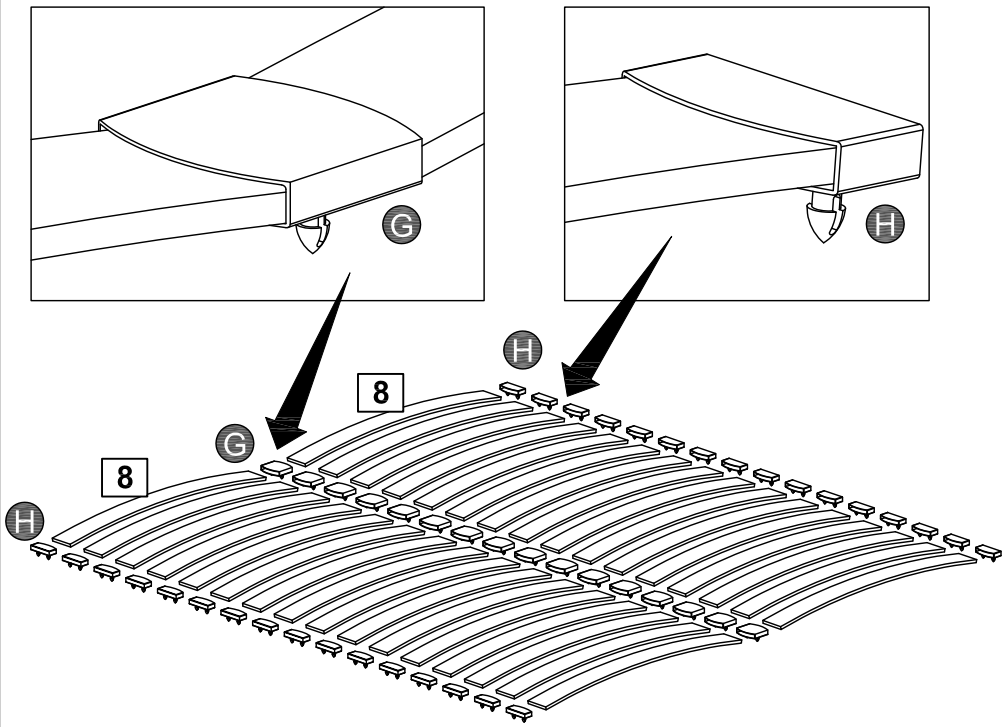

Step 8

Insert plastic middle caps G and plastic end caps H onto bedside 2 and middle bar 5 as shown.

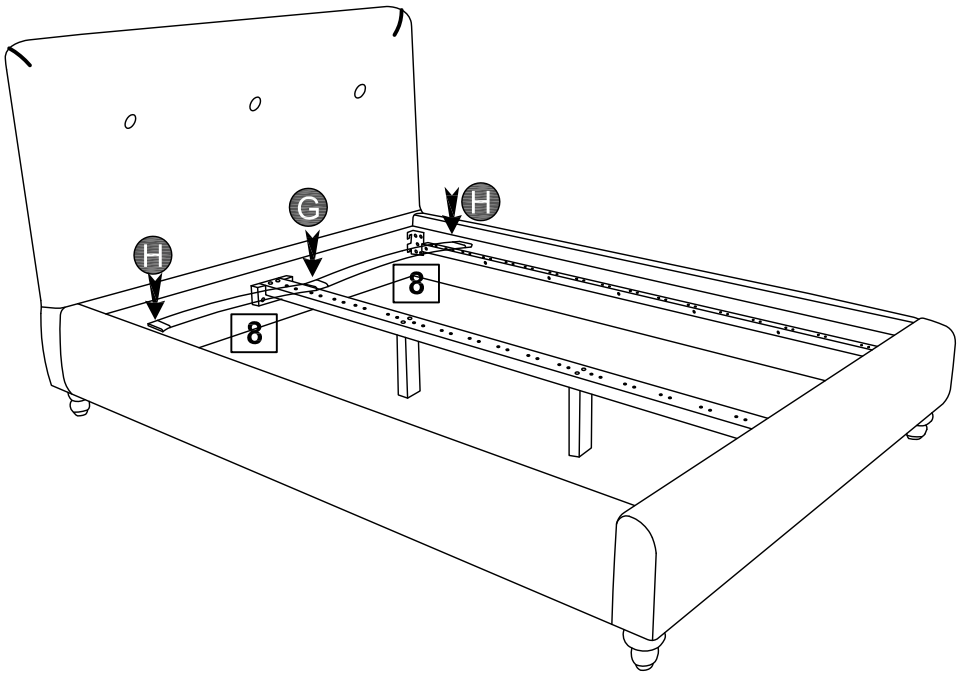

Assembly is complete !