
Dover Shoe Bench

Assembly Instructions - please keep for future reference

343/2462

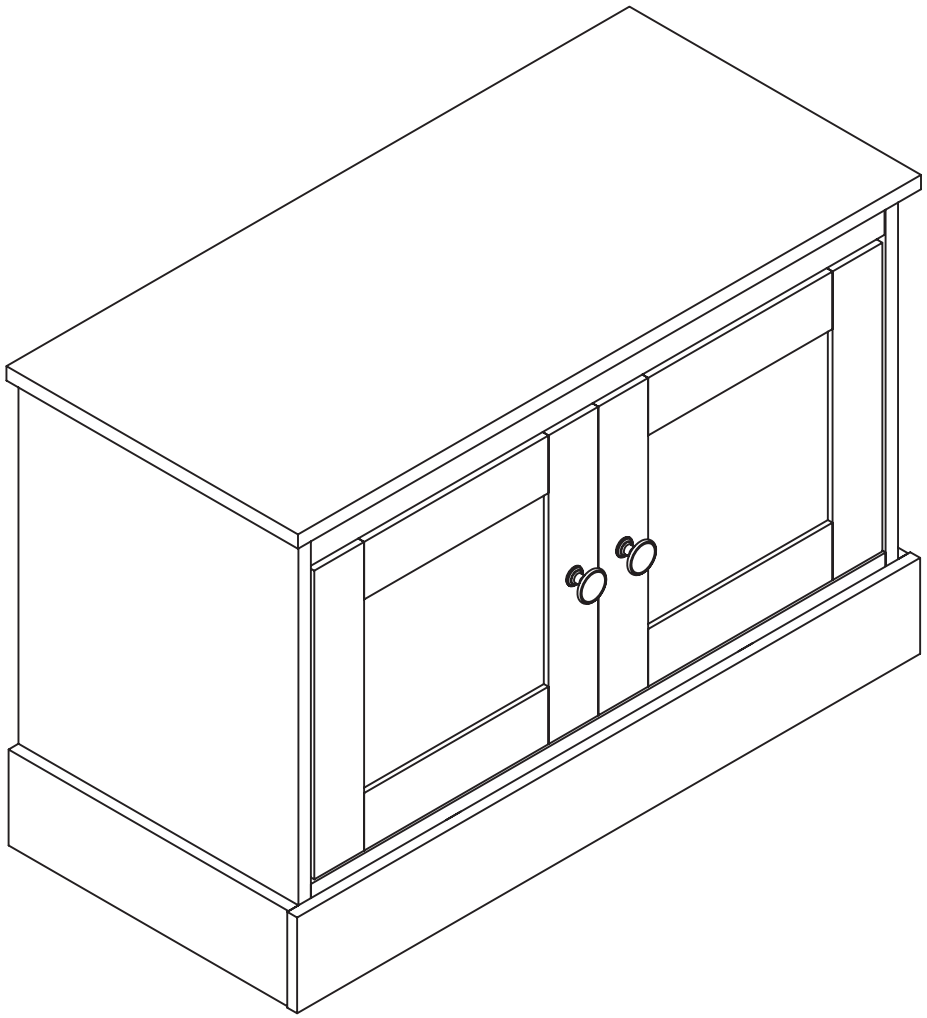

Dimensions

Width - 75cm
Depth - 35cm
Height - 50cm

Important - please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 6400800**

Issue 1-18/10/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 1 and 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

- Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.
- Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.
- If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent,do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing components, call the Customer Helpline: 0845 6400800


Please check you have all the panels listed below

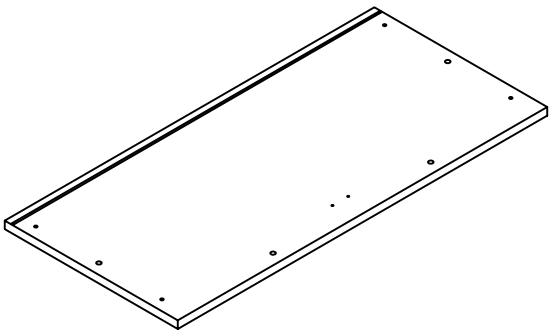


1 Top x1
(75cm x 35cm)

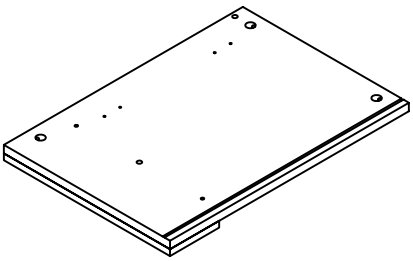


2 Left side x1
(48cm x 34cm)

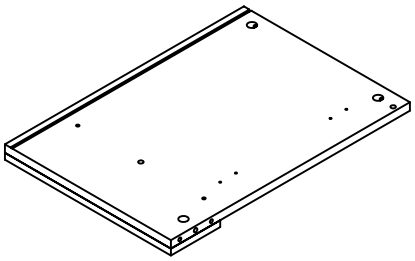


3 Right side x1
(48cm x 34cm)

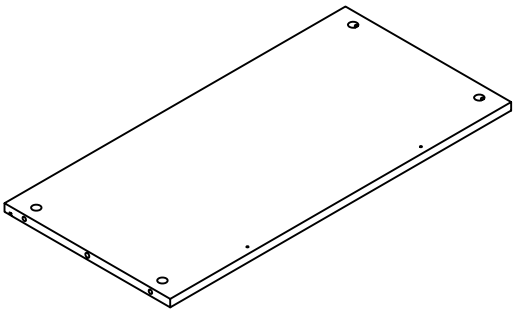


4 Bottom x1
(69cm x 34cm)

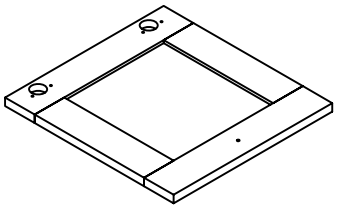


5 Door x2
(32cm x 34cm)

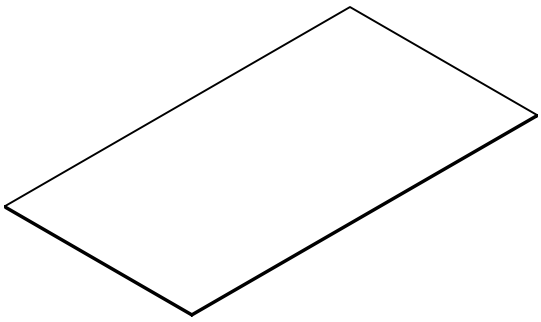

6 Back x1
(70cm x 38cm)

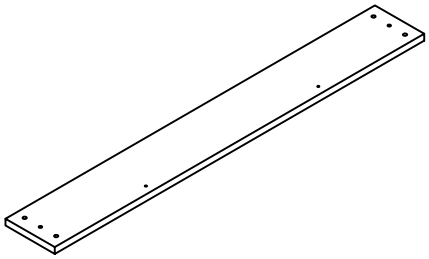

7 Front bar x1
(75cm x 10cm)

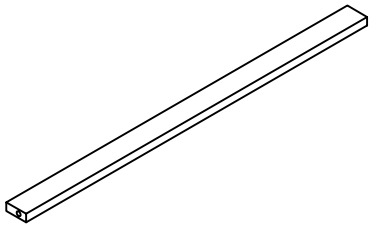

8 Upper trim x1
(69cm x 4cm)












9 Stiffening panel x1
(6cm x 3cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: 0845 6400800

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly.In some cases more fittings may be supplied than are required.

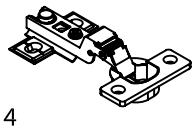A  30mm wooden dowel x 8	B  Male camlock x 10	C  Female camlock x 10	D  30mm wooden dowel x 4
E  Glue x 1	F  32mm Screw x 2	G  Plastic stopper x 1	H  14m/m Screw x 2
I  Hinge x 4	J  14mm Screw x 16	K  L bracket x 2	L  10mm Screw x 4
M  Handle x 2	N  22mm Handle Screw x 2	O  Panel Stiffeners x 4	

Tools required




Phillips screwdriver (medium & large)

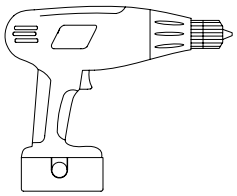


Drill


7mm Suitable drill bit (for use with wall plug)



Small hammer

Ruler - Use this ruler to help correctly identify the screws






The screws length is measured from the head to the point (30mm screw shown).

Components - Fittings


Ruler - Use this ruler to help correctly identify the screws



Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

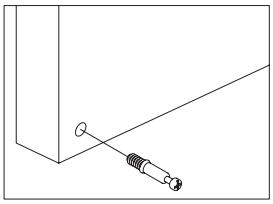

Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

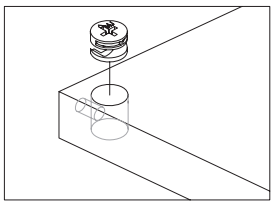

Step 3

Push the male camlock into the entry hole.

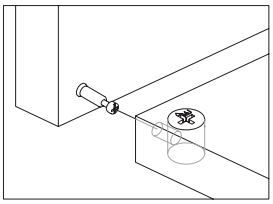


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

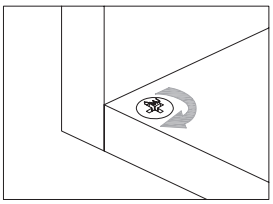


Assembly Instructions

Step 1

Fitting male comlocks

1.Insert 10 x male camlocks B into top 1 ,left side 2 ,right side 3 and front bar 7

2.Connect stiffening panel 9 to top 1 with 2 x screw F as shown

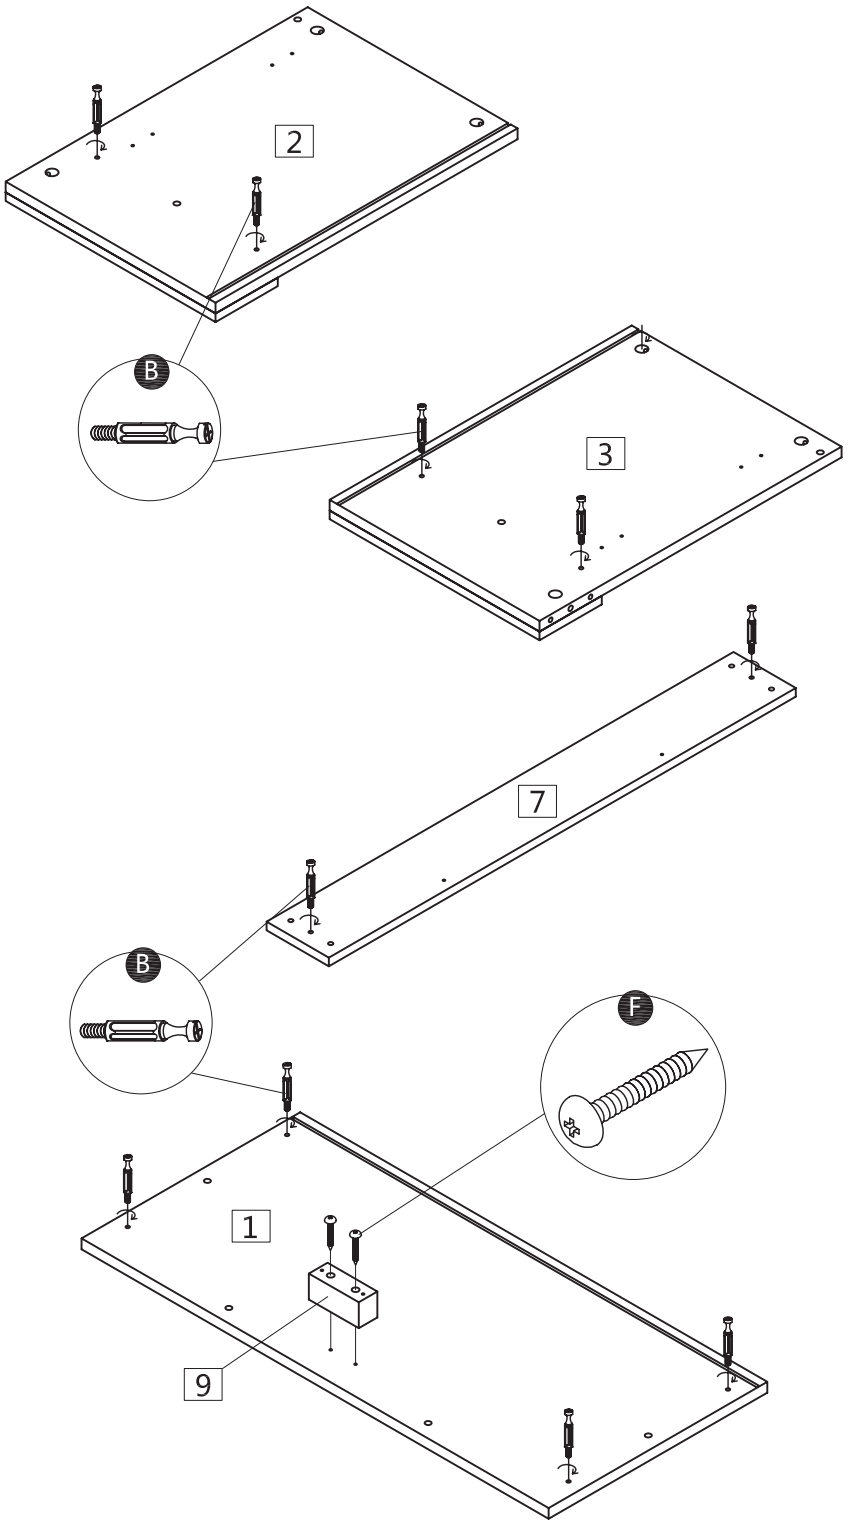


Assembly Instructions

Step 2

1.Glue and insert 8 x wooden dowels A into left side 2 , , right side 3 bottom 4 and upper trim 8 as shown.

2.Glue and insert 4 x wooden dowels D into left side 2 and right side 3 as shown.

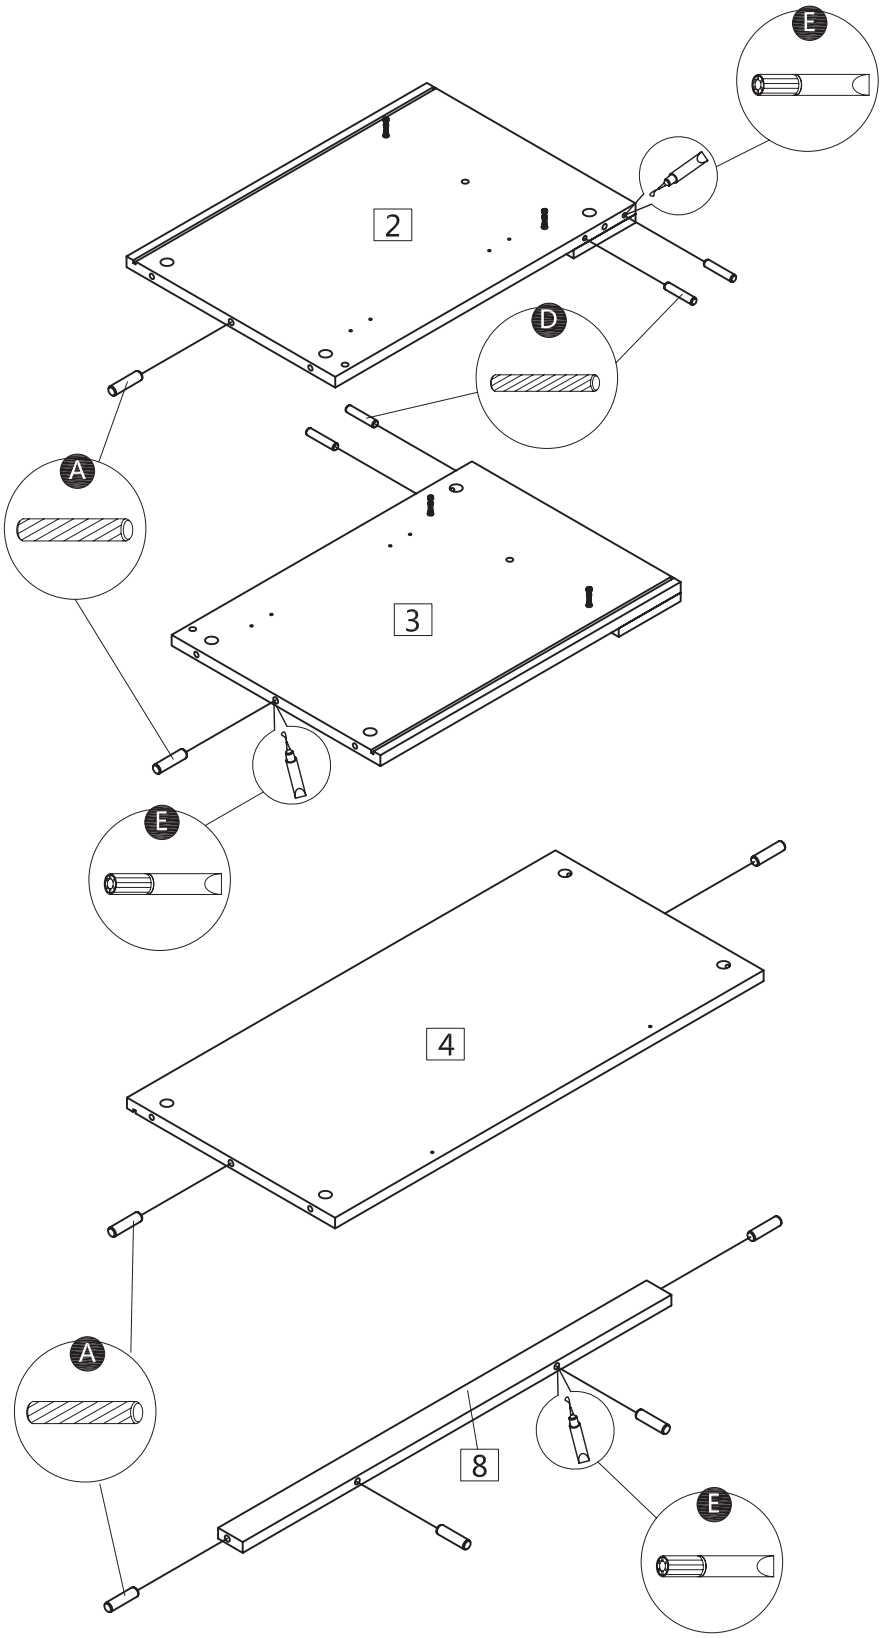

Assembly Instructions


Step 3

Attaching side panel

1.Glue holes in left side 2 , connect bottom 4 and upper trim 8 to left side 2 as shown.

2.Insert 2 x female camlocks C to attach left side 2 to bottom 4

Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

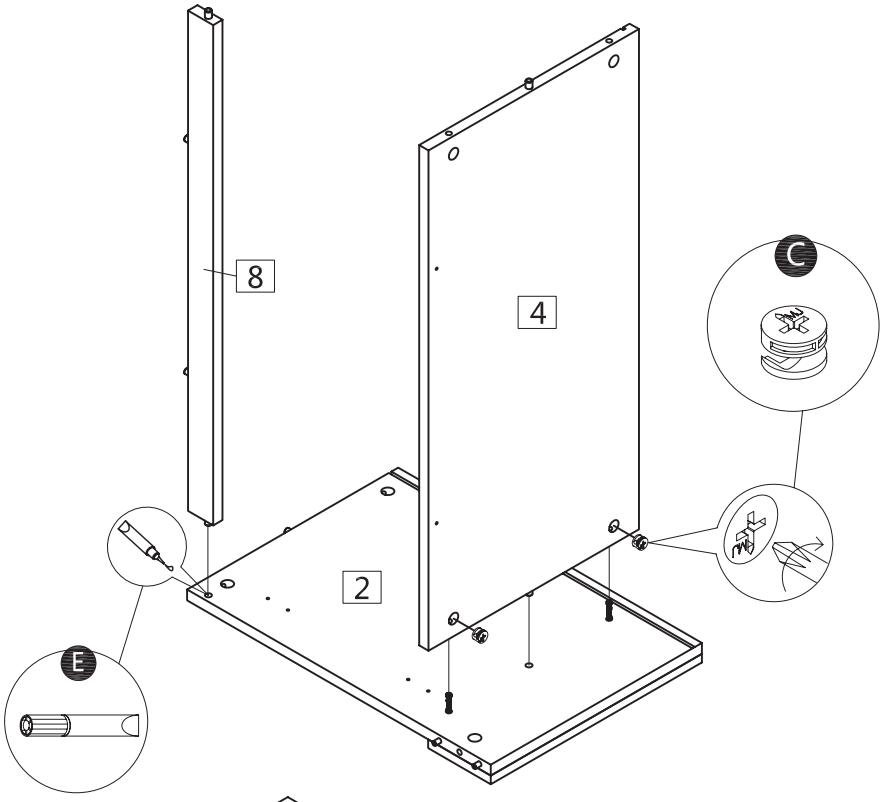


Step 4

1.Glue holes in right side 3 connect upper trim 8 and bottom 4 to right side 3

2.Insert 2 x female camlocks C to bottom 4

Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

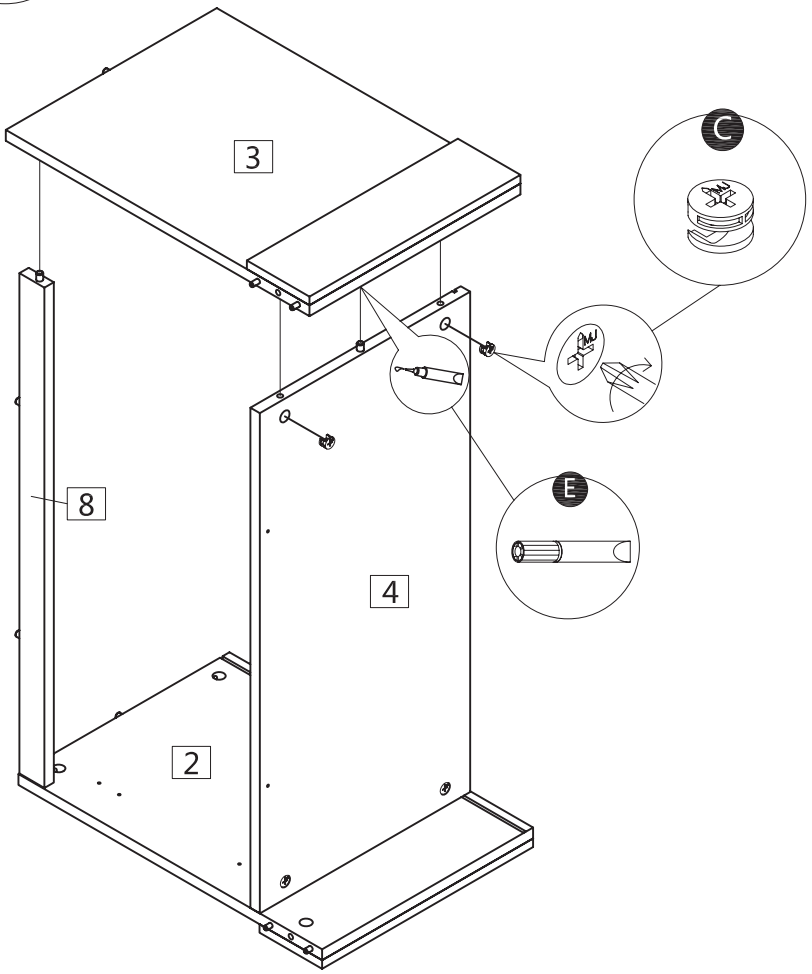


Assembly Instructions

Step 5

1.Glue holes in front bar [7] connect left side [2] and right side [3] to front bar [7] as shown.


2.Insert 2 x female camlocks (C) to left side [2] and right side [3]

Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

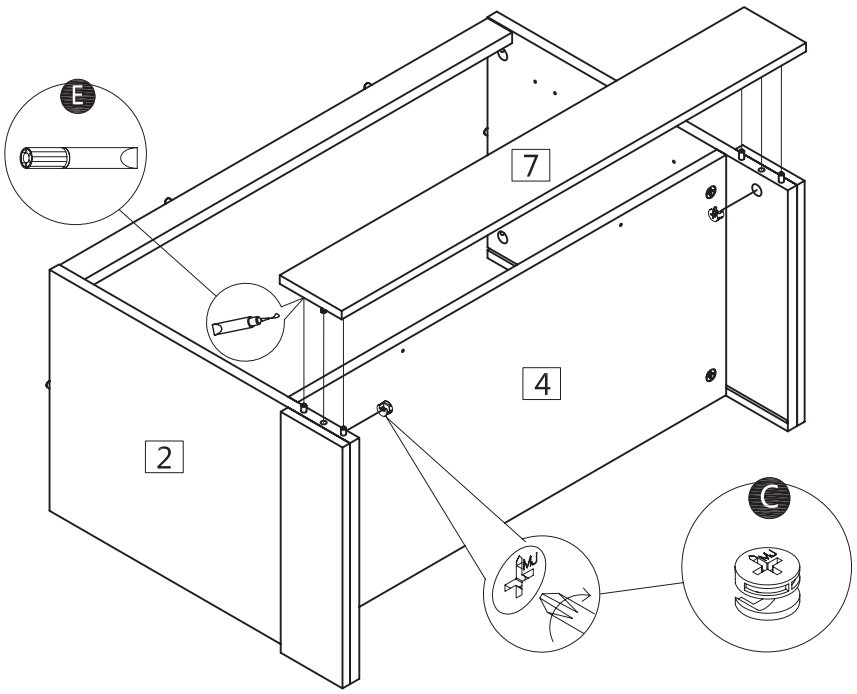

Step 6


1.Connect 2 x L bracket (K) to front bar [7] with 4 x screw (L) as shown

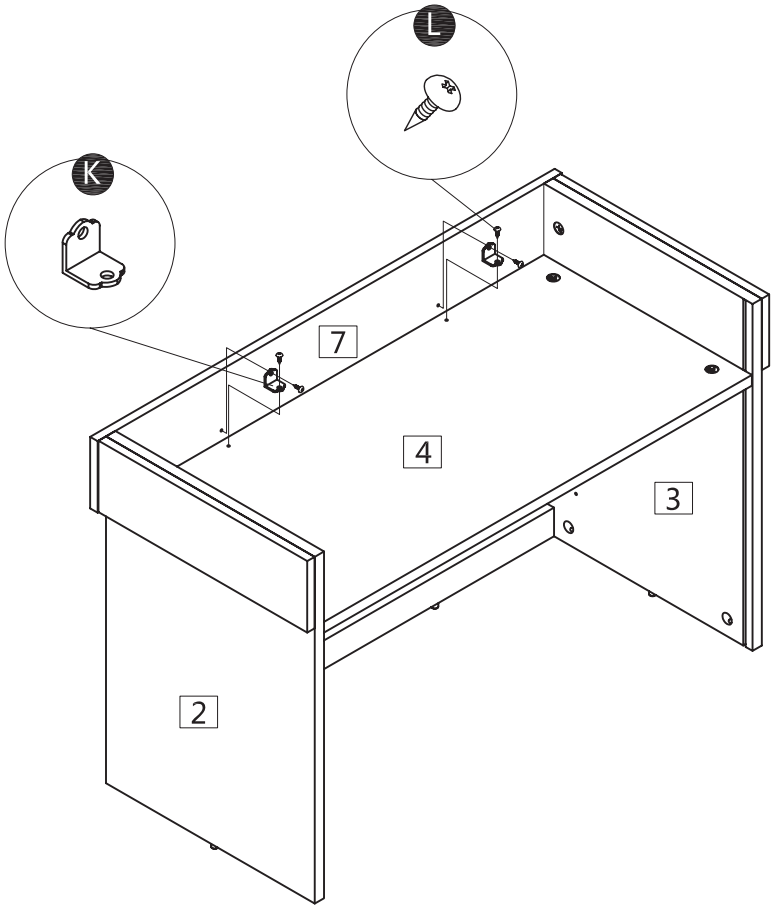

Assembly Instructions


Step 7

1.Slide back panel [6] along grooves in left side [2] and right side [3]

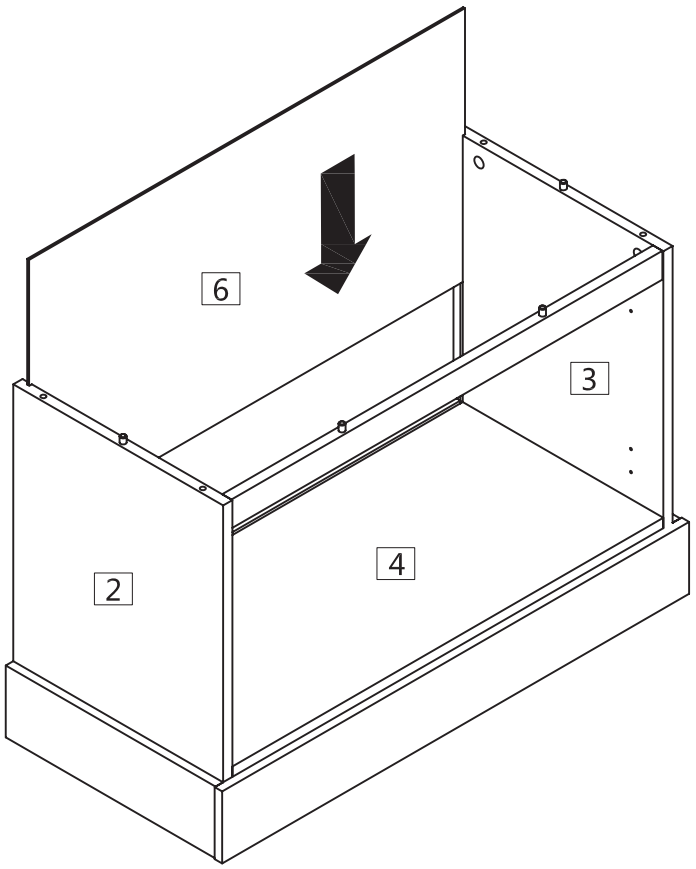

Step 8

1.Connect plastic stopper G to stiffening panel [9] with 2 x screw H as shown

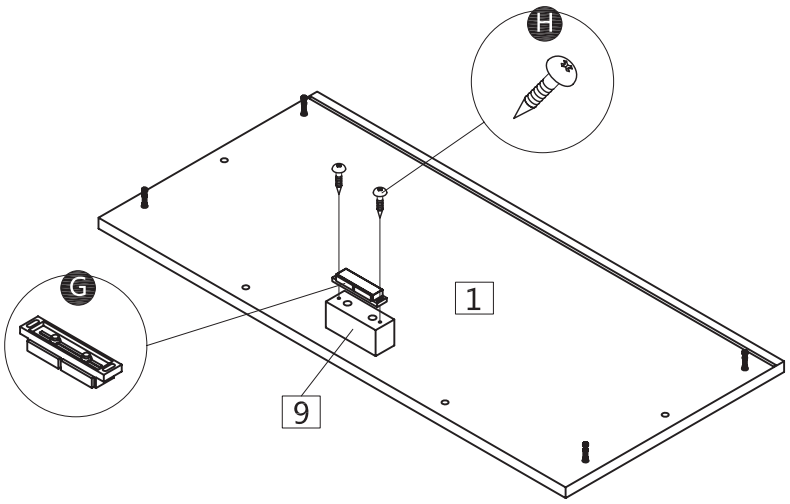


Assembly Instructions

Step 9

1.Glue holes in top panel 1
connect left side panel 2
and right side panel 3
to top panel 1

2.Insert 4 x female camlocks C to attach left side 2
and right side panel 3

Use a screwdriver to turn the female camlock clockwise to lock. Please refer to the "Using Camlocks" section at the front of this instruction for further assistance.

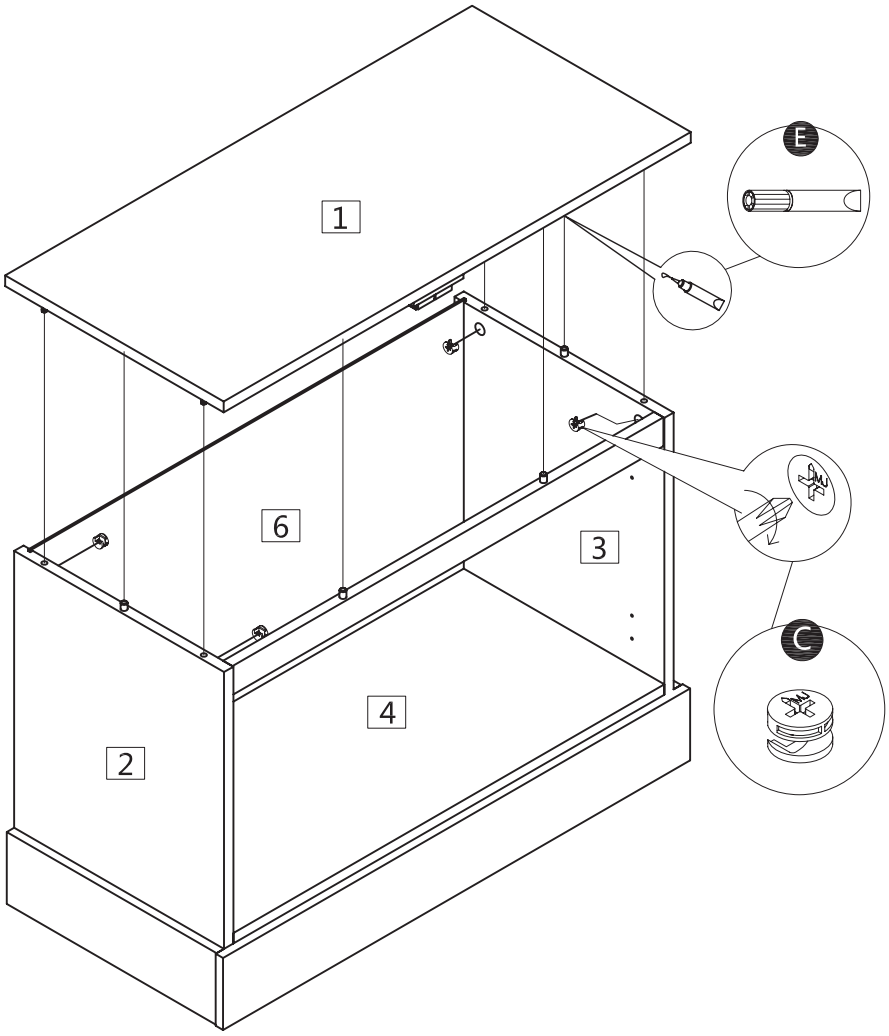


Step 10

Attach hinge

1.Connect 4 x hinge I to the 2 x door 5 with 8 x screws J as shown

2.Connect 2 x handle M with 2 x handle screws N as shown.

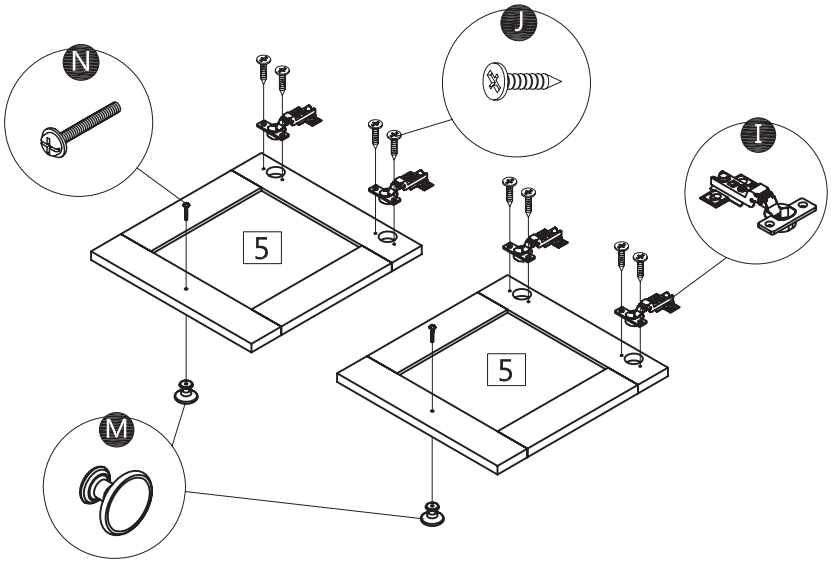


Assembly Instructions

Step 11

Attach panel

1.Connect door 5 to the unit with 8 x screw J as shown .

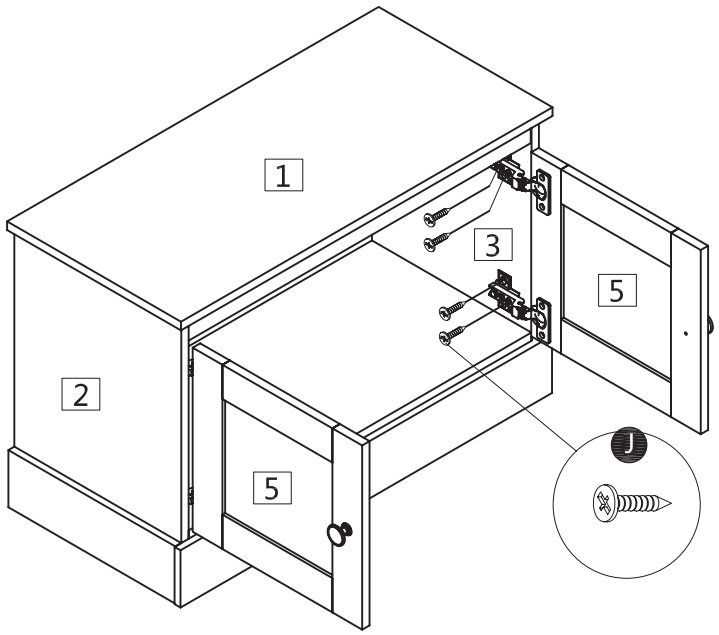


Hinge adjustment:

a: To move the doors up or down, loosen screws shown and move doors to suit

b: To move the doors in or out, loosen screws shown and move doors to suit.

Retighten screws


c: To move the doors left or right, adjust screws shown.

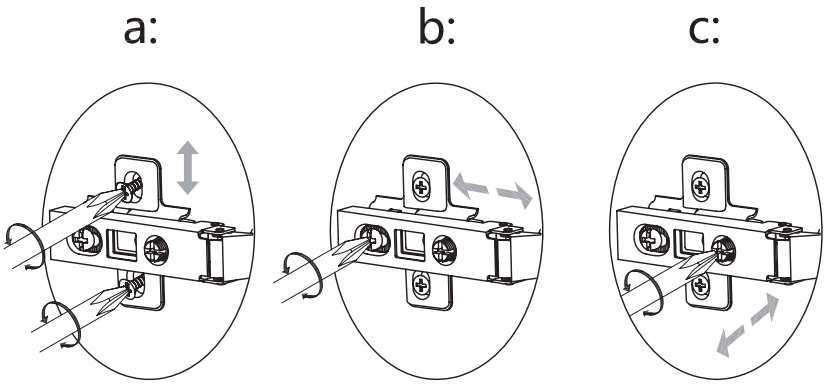

Assembly Instructions

Step 12

2.Insert 4 x panel stiffeners O into the back panel 6 grooves as shown .These add support and give the unit rigidity.

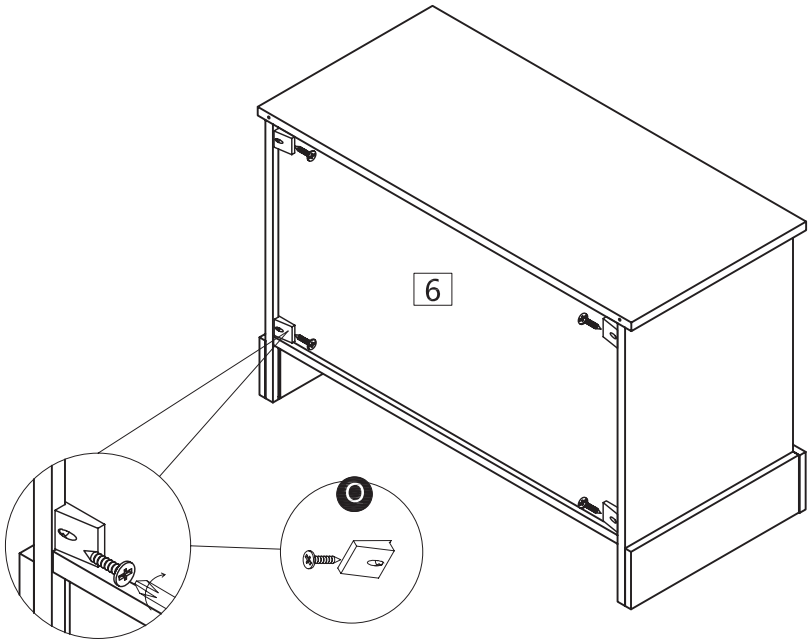

Assembly Complete