
Osaka 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

White 3456345

Black 3492718

Putty 3461213

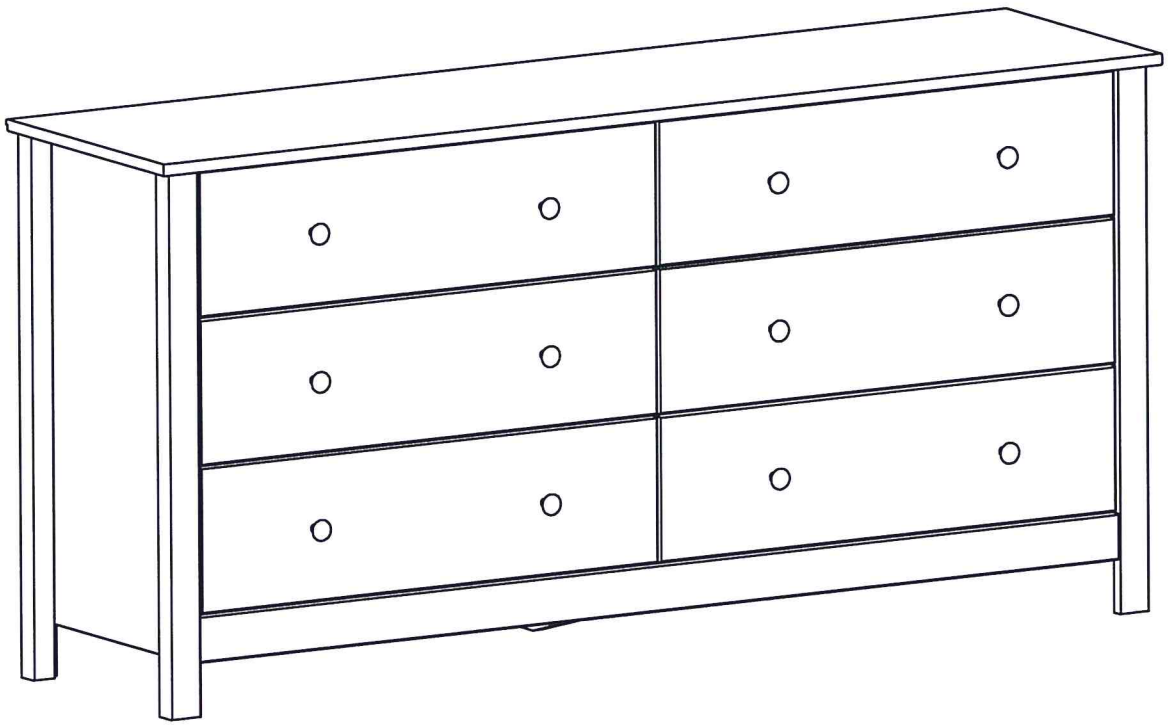

Dimensions

Width : 148.1 cm
Depth : 40.0 cm
Height: 72.4 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

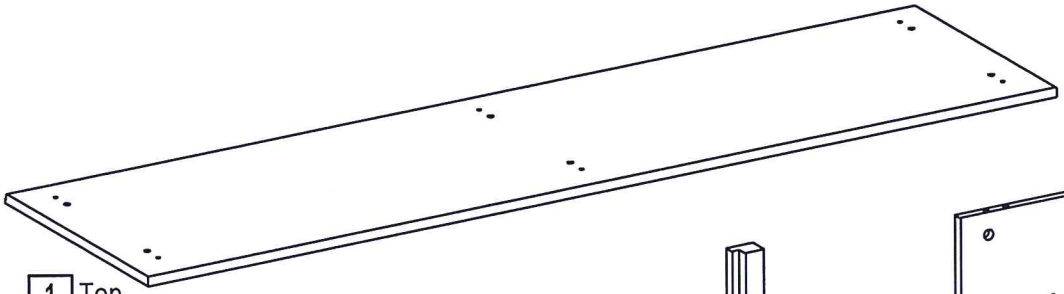

1 Top
(148,1 cm x 40 cm)

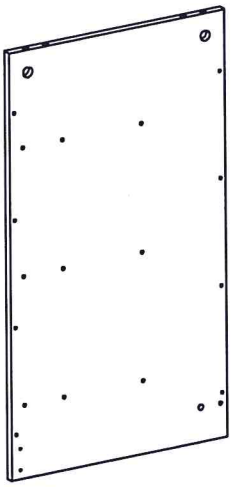


2 Side, left
(63,9 cm x 35 cm)

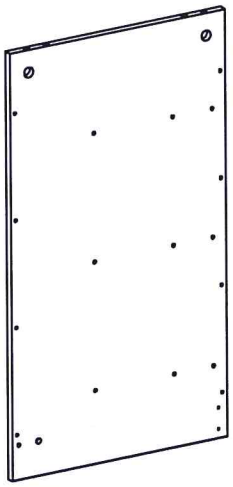


3 Side, right
(63,9 cm x 35 cm)



4 Post x 4
(70,9 cm x 4,4 cm)

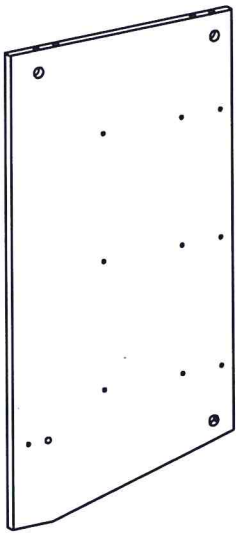


5 Divider
(70,9 cm x 36,5 cm)

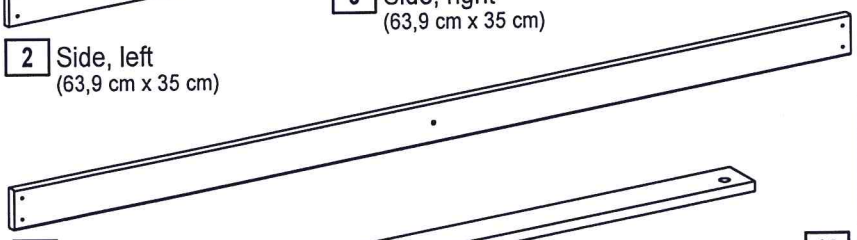


6 Front rail
(136,3 cm x 6 cm)


7 Back rail x 2
(67,4 cm x 7 cm)

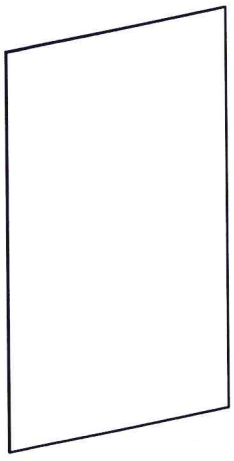


8 Back x 4
(60,0 cm x 35,5 cm)

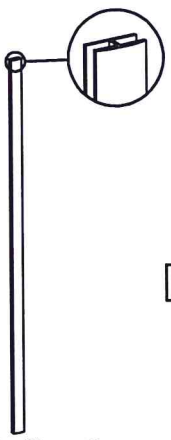


9 H-Profile x 2
(56,0 cm x 1,7 cm)

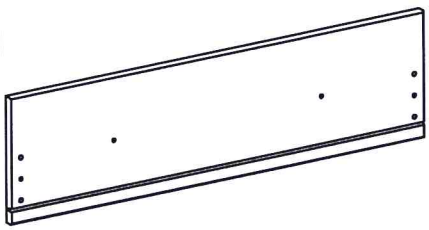

10 Drawer front x 6
(67,7 cm x 18,9 cm)

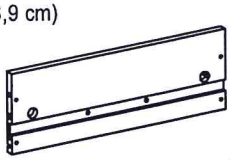

11 Drawer side, right/left x 12
(35 cm x 12 cm)

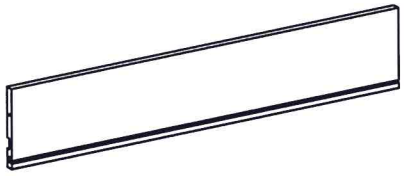

12 Drawer back x 6
(63,2 cm x 12 cm)








13 Drawer bottom x 6
(64,2 cm x 34,7 cm)

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

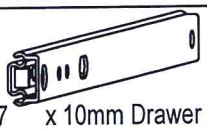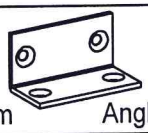Aa  ø7.8 x 40mm Wooden dowel x 10	Ab  ø6 x 30mm Wooden dowel x 24	Bp  ø3 x 35mm Screw x 24
By  ø3 x 15mm Screw x 3	Ca  ø15 x 10.5mm Cam x 23	Cb  ø5 x 8, cc34mm Bolt x 21
Cd  M4, cc34mm Bolt x 2	Cm  M4 / ø5 x 12mm Threaded tube x 1	Di 1.2 x 15mm Nail x 50
Fc  Back fitting - 14 x 19mm x 3	Fh  Wall strap and instruction x 1	Fi  Back fitting w. ø3.5 x 15mm Screw x 12
Ge  ø27 x 24mm Metal Knob x 12		Hd  M4 x 20mm Screw x 12
Hk  M4 x 9mm Screw x 12	Jb  ø4 x 25mm Screw x 16	Kb  ø5.8 x 8mm Screw x 18
Kf  ø5.8 x 19mm Screw x18	Ko  ø4,2 x 9,5mm Screw x 8	Nu  ø10 x 9mm Spacer x 18
Sk  245 x 17 x 10mm Drawer runner x 12	Vl  44 x 23 x 23mm Angle x 2	

Tools required


Phillips screwdriver (Medium & large)


Hammer


Flatblade screwdriver (Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Assembly of the chest.

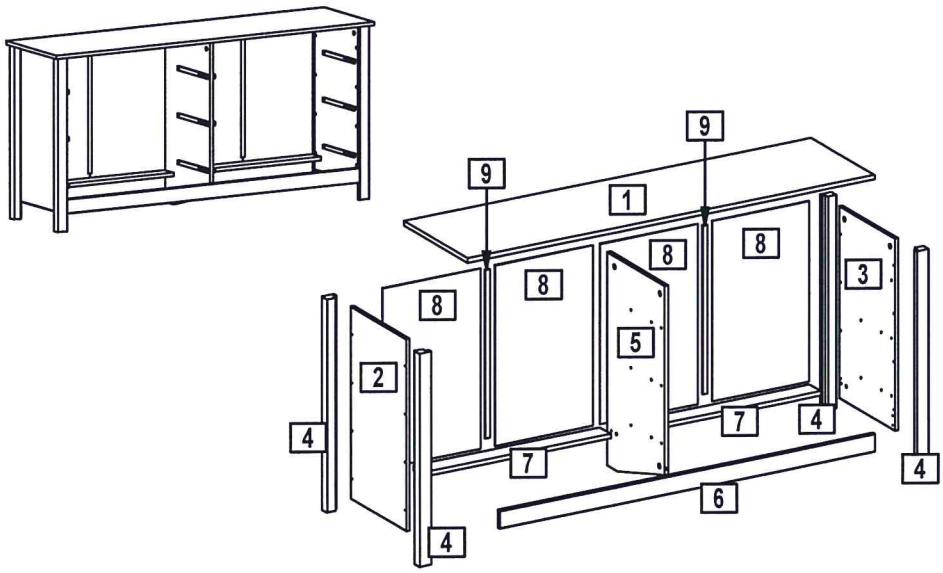


Step 1.1

Fix the posts [4] onto the sides [2] and [3] using screws (Jb) into the holes indicated.
The top of the posts [4] and the sides [2] and [3] must be flush.

Jb


ø4 x 25mm Screw x 16

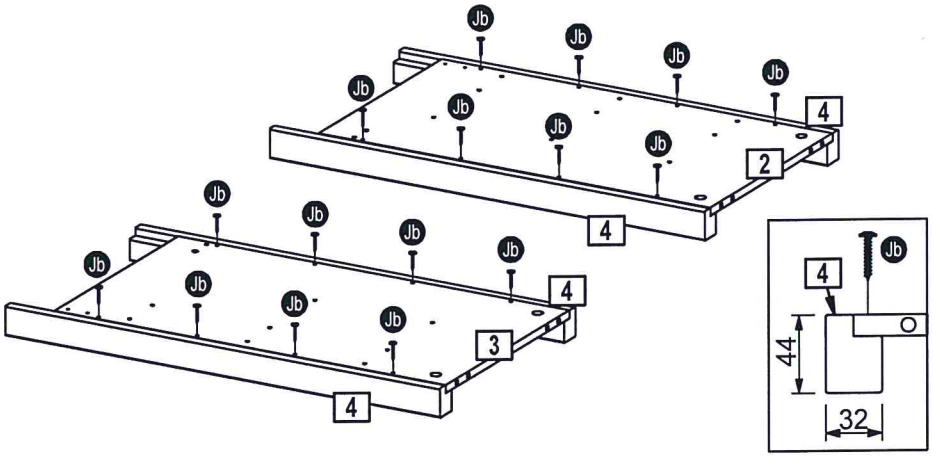


Step 1.2

Knock the dowels (Aa) into the holes indicated on the sides [2] and [3] using a small hammer.

Screw the bolts (Cb) into the holes indicated on the sides [2] and [3].

Aa	Cb
	
ø7.8 x 40mm Wooden dowel x 4	ø5 x 8, cc34mm Bolt x 2

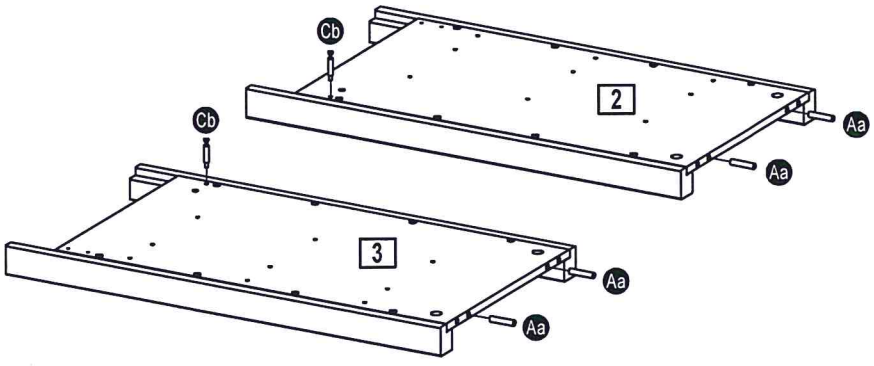


Assembly Instructions


Step 1.3


Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes. See details.

Place the Spacers Nu as shown, and fix the front end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes number 1 and 7 as indicated.

See details.

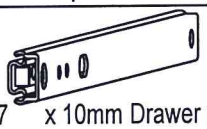Kf  ø5.8 x 19mm Screw x12	Nu  ø10 x 9mm Spacer x 12
	Sk  245 x 17 x 10mm Drawer runner x6

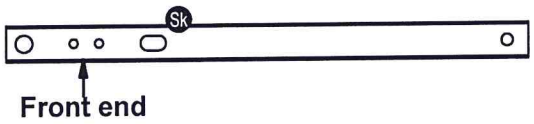

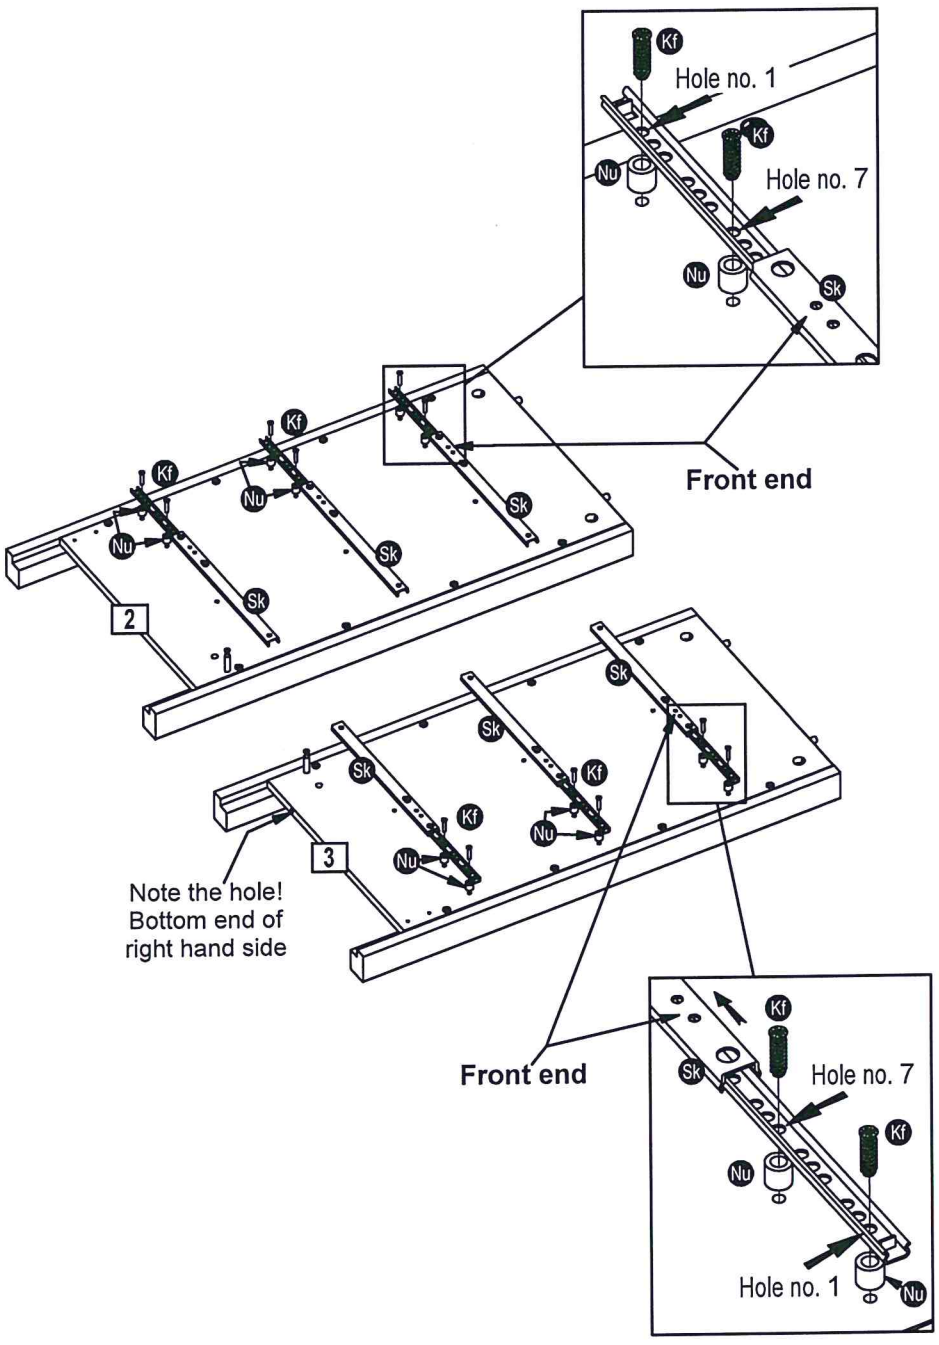

350312-06

Assembly Instructions


Step 1.4

Slide the top of the drawer runners Sk forwards.

Place the Spacers Nu as shown, and fix the back end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes indicated.

See details.

Kf	Nu
ø5.8 x 19mm Screw x6	ø10 x 9mm Spacer x 6

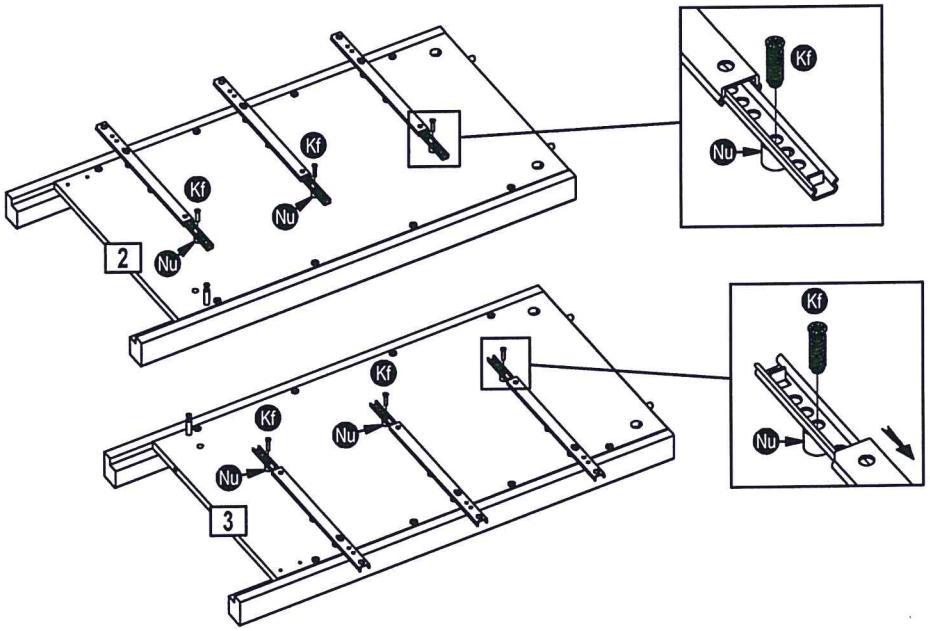


Step 1.5

Place the divider 5 as shown. Slide the top of the drawer runners Sk backwards.

Fix the front end of the drawer runners Sk to the divider 5 using screws Kb through the holes number 1 and 7 as indicated. See details.

Kb	Sk
ø5.8 x 8mm Screw x 6	245 x 17 x 10mm Drawer runner x 3

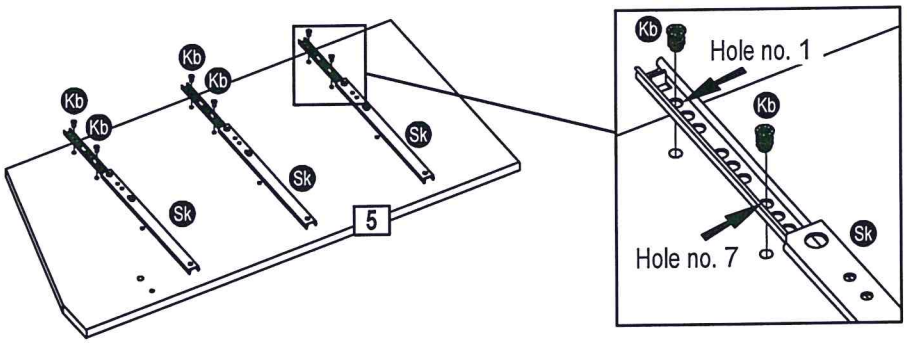


Step 1.6

Slide the top of the drawer runners Sk forwards.

Fix the back end of the drawer runners Sk to the divider 5 using screws Kb through the holes indicated.

See details.

Kb
ø5.8 x 8mm Screw x 3

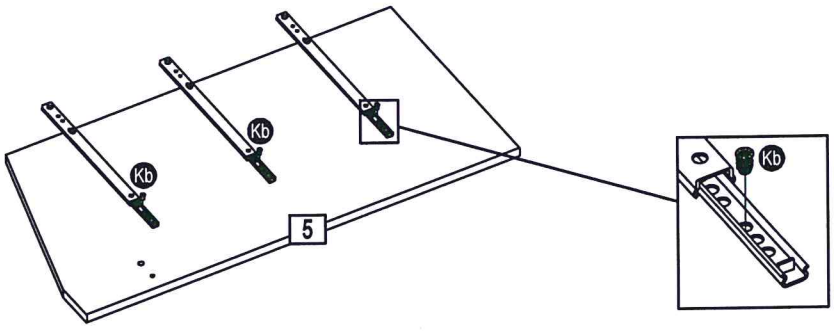

Assembly Instructions

Step 1.7

Turn around the divider [5]. Slide the top of the drawer runners Sk backwards.


Fix the front end of the drawer runners Sk to the divider [5] using screws Kb through the holes number 1 and 7 as indicated. See details.

Kb

ø5.8 x 8mm Screw x 6

Sk

245 x 17 x 10mm Drawer runner x 3

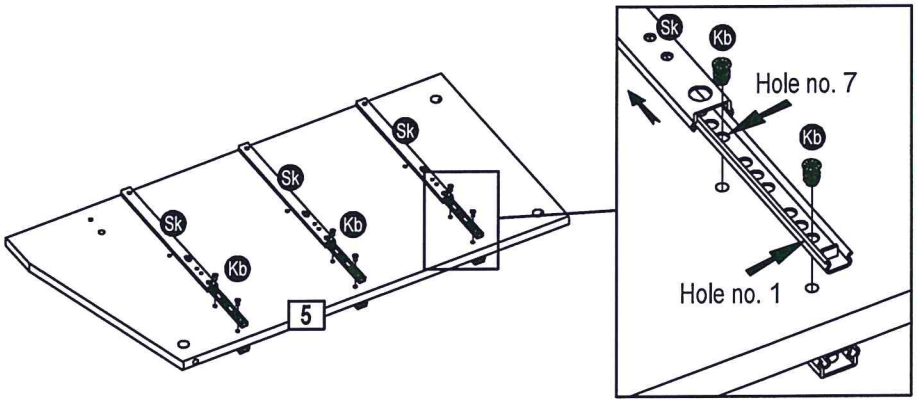

Step 1.8


Slide the top of the drawer runners Sk forwards.

Fix the back end of the drawer runners Sk to the divider [5] using screws Kb through the holes indicated.

See details.

Kb

ø5.8 x 8mm Screw x 3

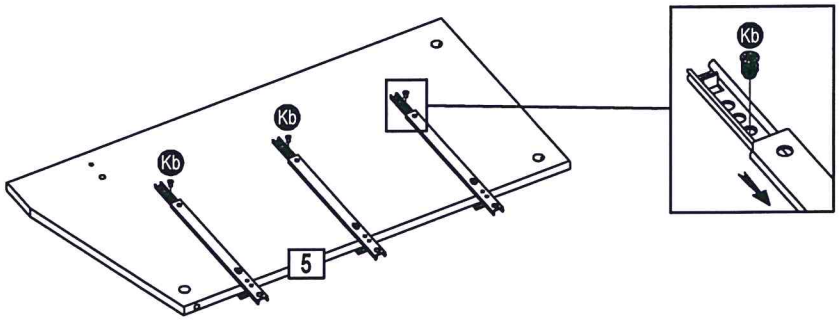

Step 1.9

Knock the dowels Aa into the holes indicated on the divider [5] using a small hammer.

Screw one of the bolts Cd into the threaded tube Cm.

Push the bolt Cd / the tube Cm into the hole indicated on the divider [5].

Screw the remaining bolt Cd into the threaded tube Cm from the opposite side of the divider [5].

Aa


ø7.8 x 40mm Wooden dowel x 2

Cd

M4, cc34mm Bolt x 2

Cm

M4 / ø5 x 12mm Threaded tube x 1

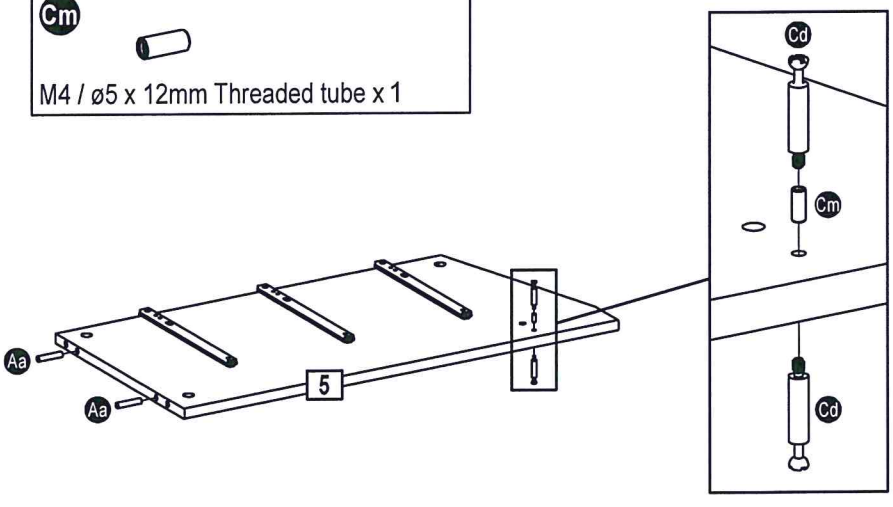


Assembly Instructions

Step 1.10

Fix the angles Vl using screws Ko into the holes indicated on the front rail 6.

Screw the bolt Cb into the hole indicated on the front rail 6.

Cb




ø5 x 8, cc34mm Bolt x 1

Ko



ø4,2 x 9,5mm Screw x 4

Vl

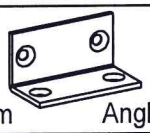

44 x 23 x 23mm Angle x 2


Step 1.11

Knock the dowels Aa into the holes indicated on the back rails 7 using a small hammer.

Aa




ø7.8 x 40mm Wooden dowel x 4

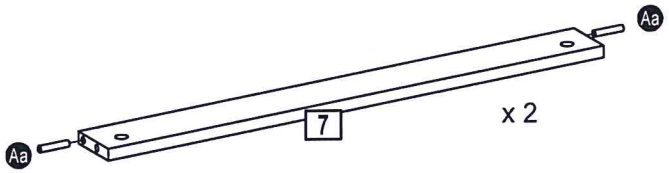


Step 1.12

Screw the bolts Cb into the holes indicated on the top 1.

Cb



ø5 x 8, cc34mm Bolt x 6

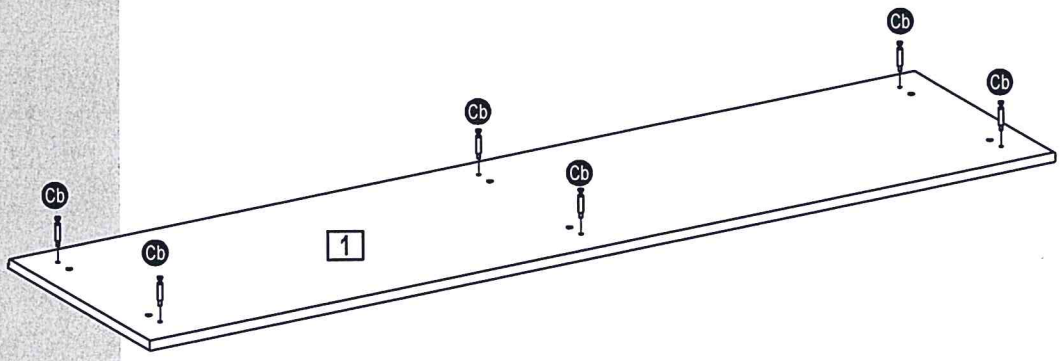

Assembly Instructions


Step 1.13

Place the back rails [7] onto the divider [5] as shown.

Push cams (Ca) into the holes indicated on the back rails [7].
Arrows pointing towards the divider [5].

Turn the cams (Ca) to the right to fix the back rails [7].

(Ca) ø15 x 10.5mm Cam x 2

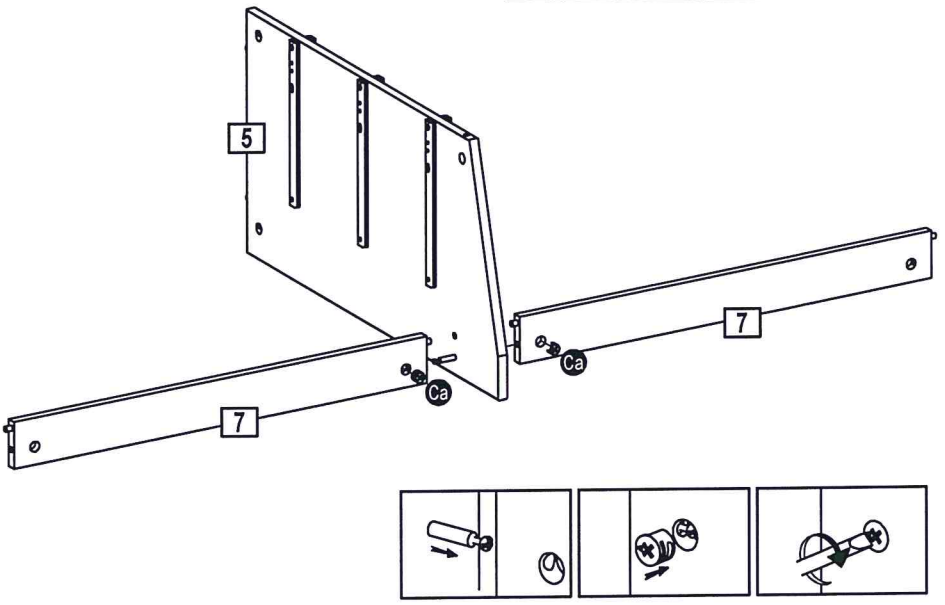


Step 1.14

Place the sides [2] and [3] onto the back rails [7].

Push cams (Ca) into the holes indicated on the back rails [7].

Arrows pointing towards the sides [2]/[3].

(Ca) ø15 x 10.5mm Cam x 2

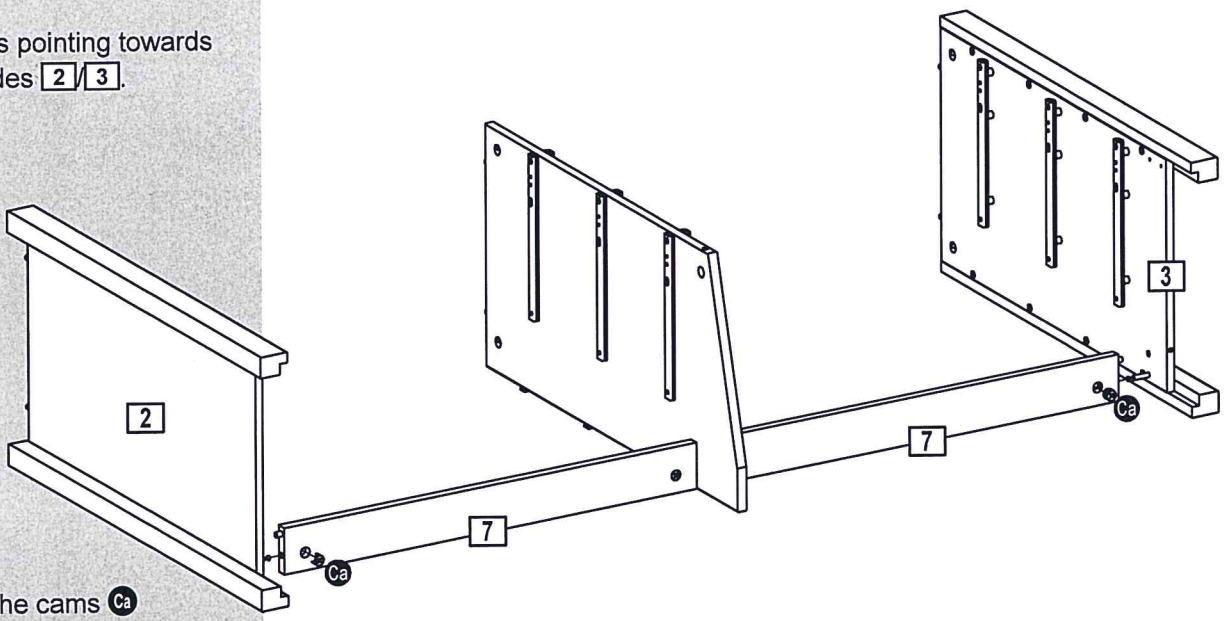


Turn the cams (Ca) to the right to fix the sides [2] and [3].

Assembly Instructions

Step 1.15

Place the top 1 onto the sides 2 / 3 and the divider 5.
Place the front rail 6 onto the divider 5.

Push cams Ca into the holes indicated on the sides 2 and 3 and the divider 5.

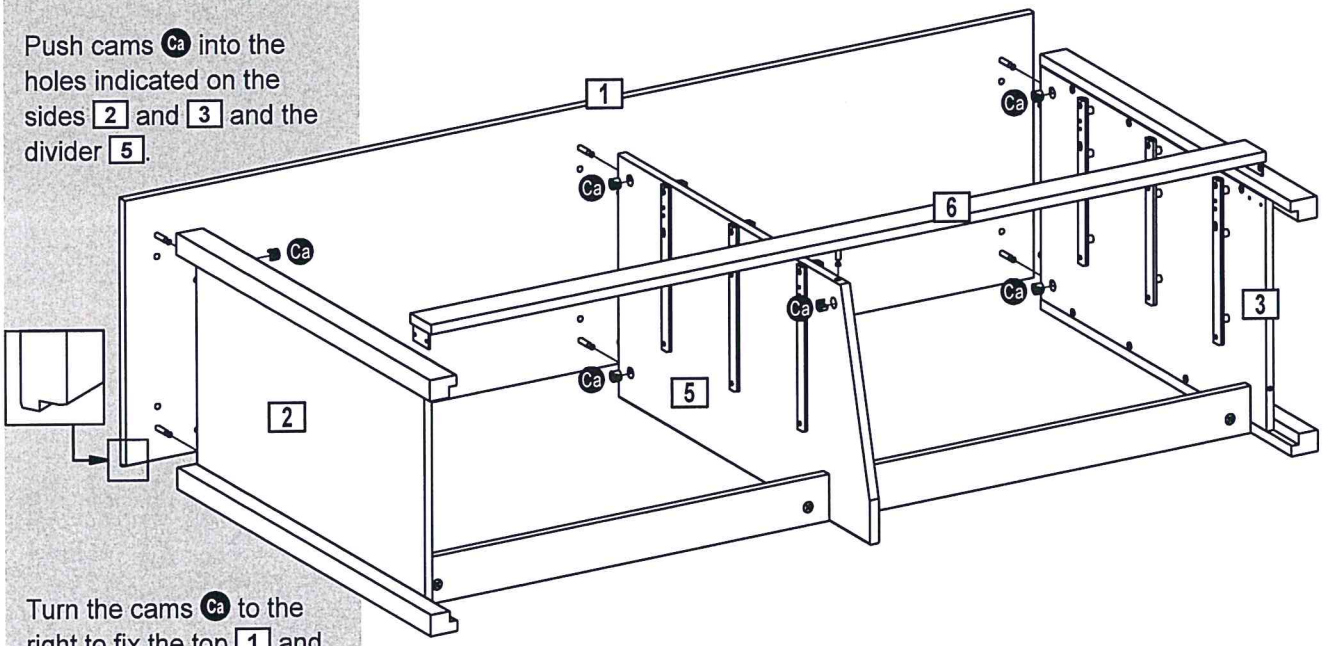

Turn the cams Ca to the right to fix the top 1 and the front rail 6.

Ca





ø15 x 10.5mm Cam x 4

Step 1.16

Fix the angles VI on the front rail 6 to the sides using screws Ko.

See detail.

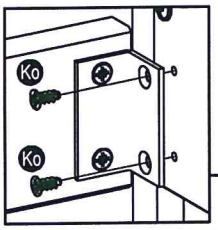

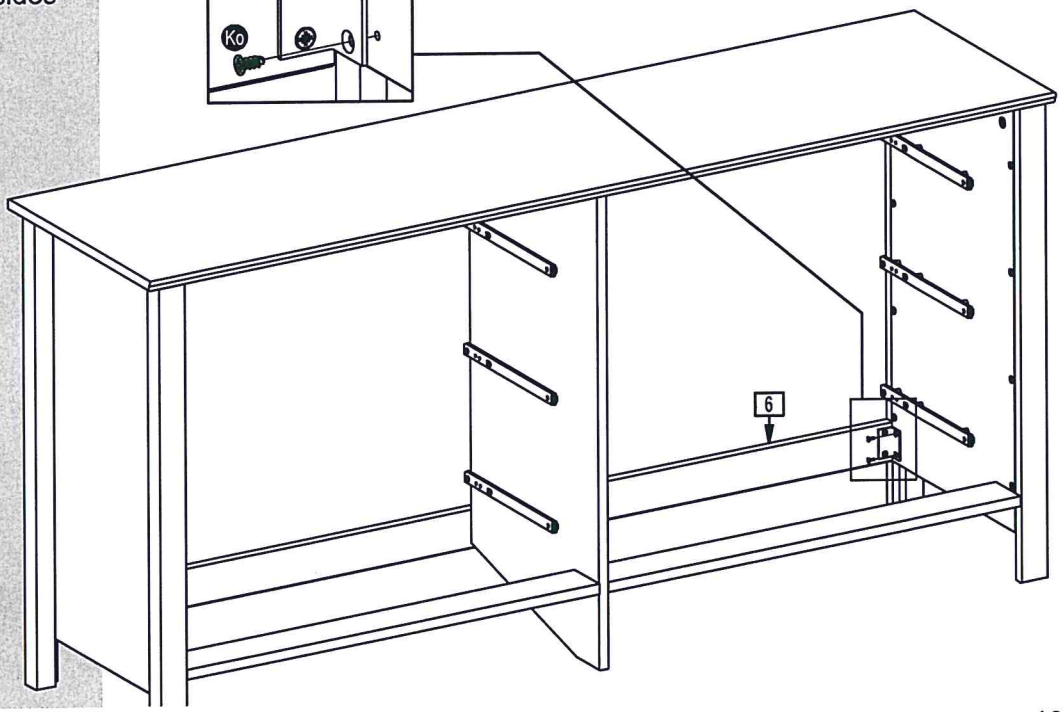

Ko



ø4,2 x 9,5mm Screw x 4

Assembly Instructions

Step 1.17

Place one of the backs [8] into the rabbet on the top [1] and onto the divider [5].

Important!
The back [8] must cover half of the back edge of the divider [5].


See details.

Fix the back [8] to the top [1] and the back rail [7] using nails Di.

Use a small hammer.

Di

1.2 x 15mm Nail x 8

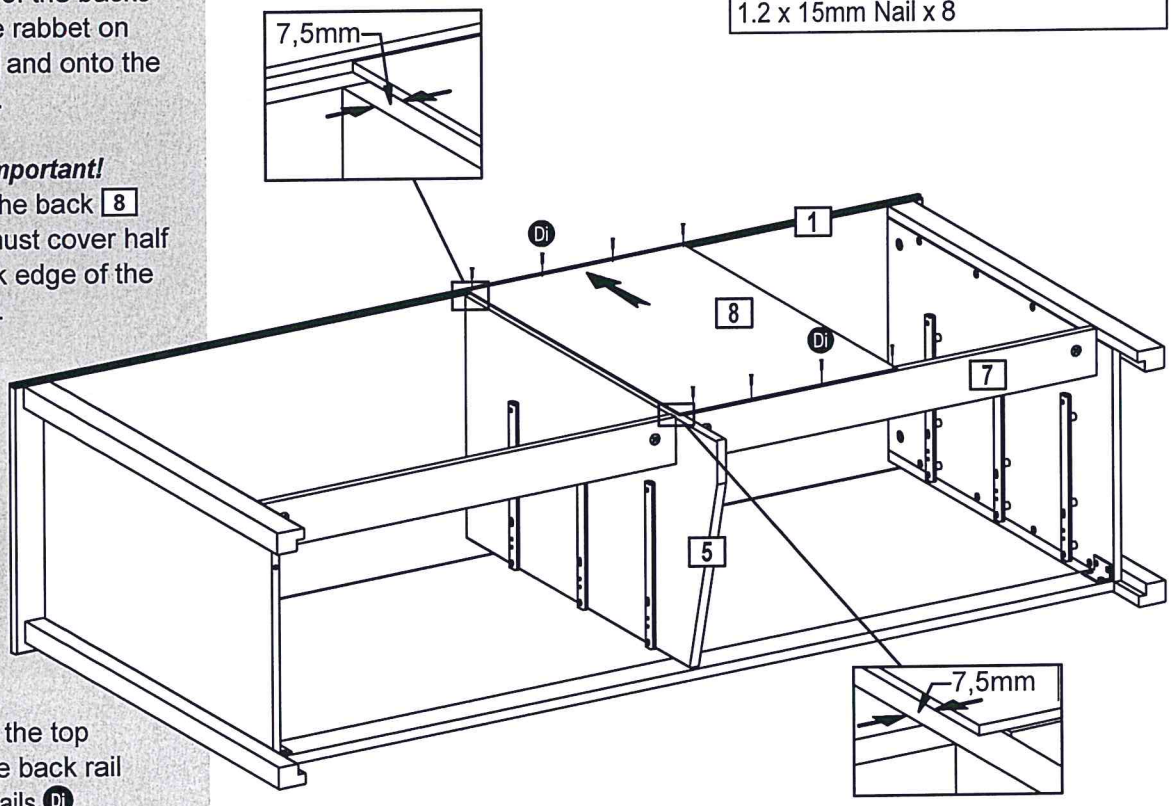

Step 1.18


Place the back [8] into the rabbet on the top [1] and onto the divider [5].

Fix the back [8] to the top [1] and the back rail [7] using nails Di.

Use a small hammer.

Di

1.2 x 15mm Nail x 8

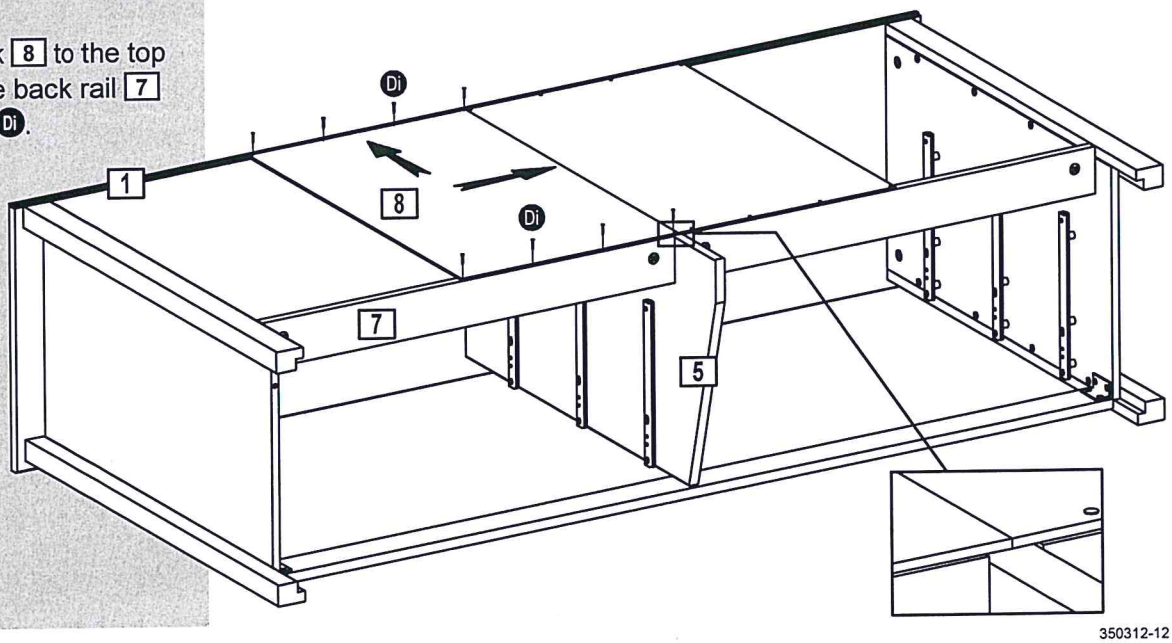

350312-12

Assembly Instructions

Step 1.19

Place the remaining backs [8] into the rabbet on the top [1], into the H-profiles [9] and onto the posts [4].

Important!
Make sure the angle between the top [1] and the posts [4] is 90° when the backs [8] is attached.

Fix the backs [8] to the top [1], the posts [4] and the back rails [7] using nails (Di).

Use a small hammer.


Finally fix the backs [8] to the divider [5] using screws (By) and the back fittings (Fc).


See detail.

(By) ø3 x 15mm Screw x 3


(Di) 1.2 x 15mm Nail x 24

(Fc) Back fitting - 14 x 19mm x 3

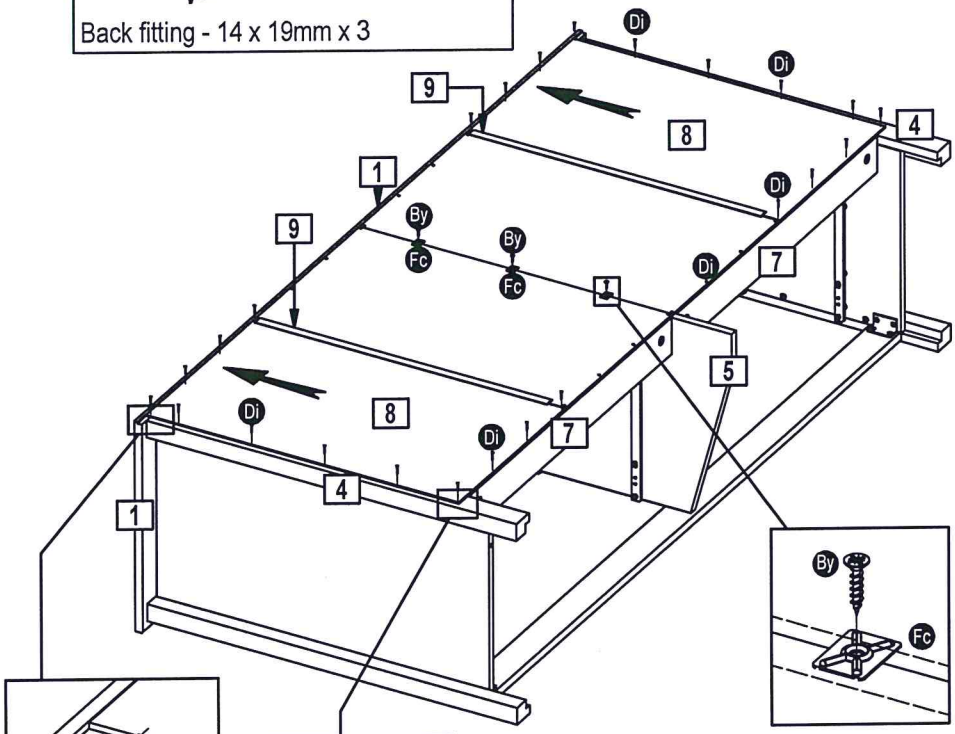

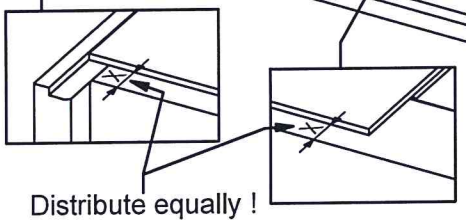

Distribute equally !

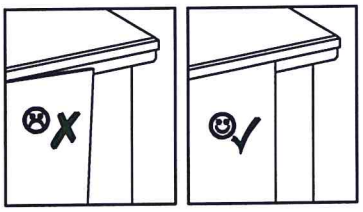


Step 1.20

Important!
The chest of drawers is heavy. Lift with care.

Its recommended that the chest is fixed to the wall.

Use the fittings (Fh). Follow the instructions included with the fittings.


(Fh) Wall strap and instruction x 1

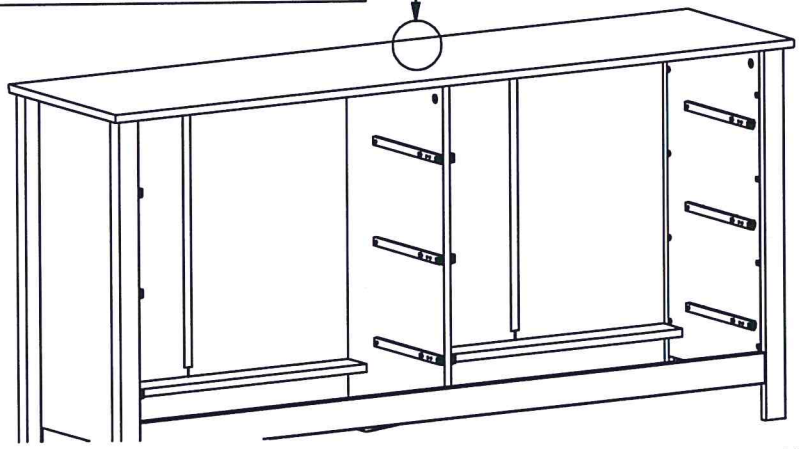


Assembly Instructions

Step 2

Assembly of the drawers.

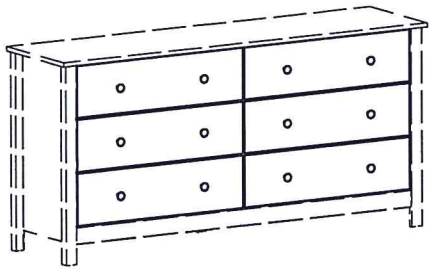

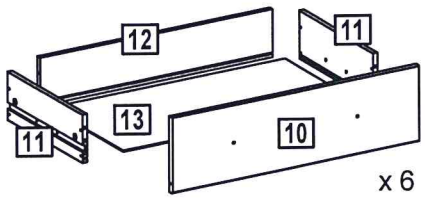

x 6


Step 2.1

Fix the drawer sides [11] to the drawer back [12] as shown, using screws (Bp).

(Bp)



ø3 x 35mm Screw x 24

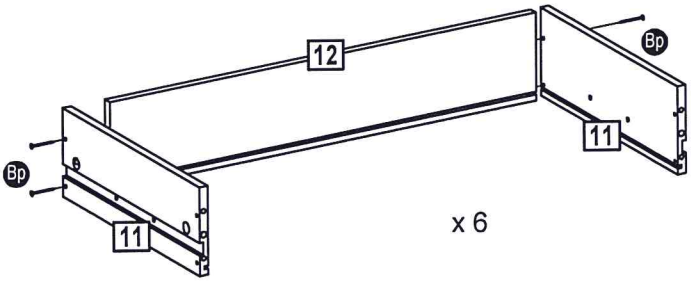

x 6


Step 2.2

Knock the dowels (Ab) into the holes indicated on the drawer sides [11] using a smal hammer.

(Ab)




ø6 x 30mm Wooden dowel x 24

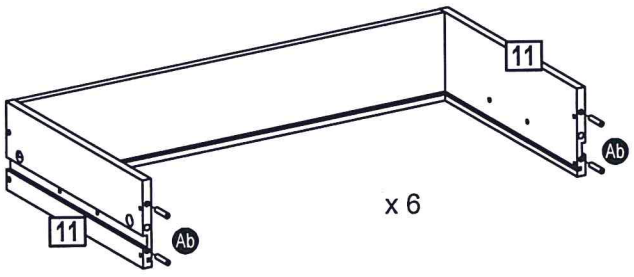

x 6

Step 2.3

Slide the drawer bottom [13] into the drawer sides [11].

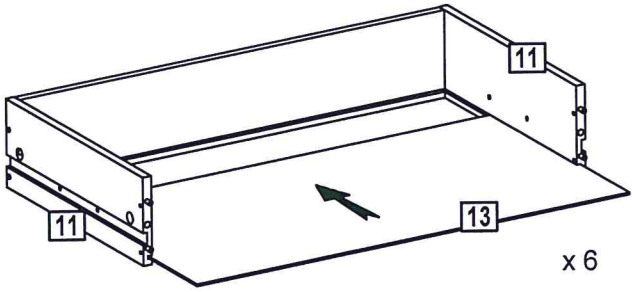

x 6

Assembly Instructions


Step 2.4

Screw the bolts Cb into the holes indicated on the drawer front 10.

Cb



ø5 x 8, cc34mm Bolt x 12

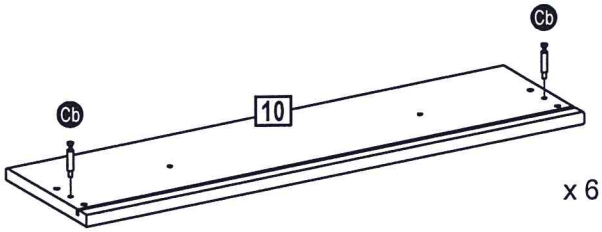

x 6

Step 2.5


Push the drawer front 10 onto the drawer sides 11.

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 12

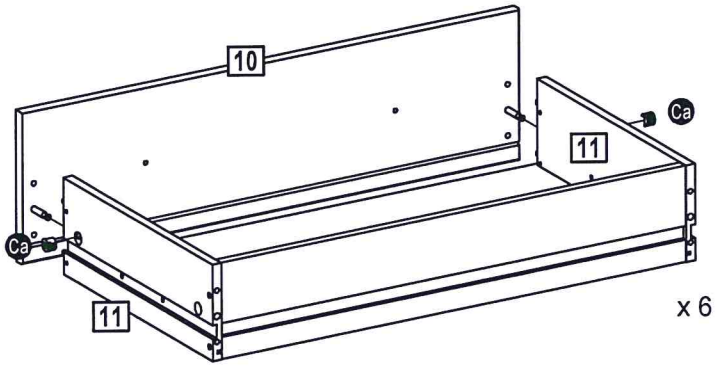

x 6

Step 2.6


Important!
Make sure the angle between the drawer front 10 and the drawer sides 11 is 90° before the drawer bottom 13 is fixed using Fi as shown.

To adjust the angle between the drawer sides and the fronts push the fitting Fi sidewards. See details.


Fi



Back fitting w. ø3.5 x 15mm Screw x 12

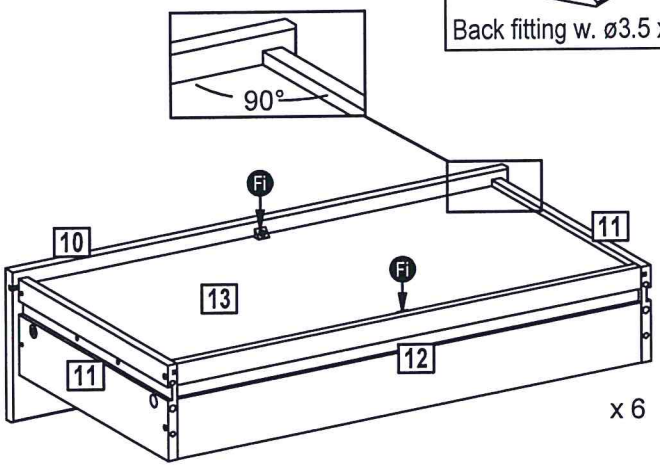

x 6

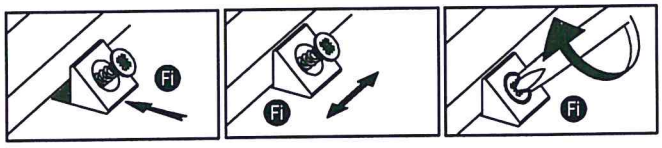


Assembly Instructions

Step 2.7

Fix the metal knobs (Ge) to the drawer front [10] using screws (Hd).

Ge	Hd
ø27 x 24mm Metal Knob x 12	M4 x 20mm Screw x 12

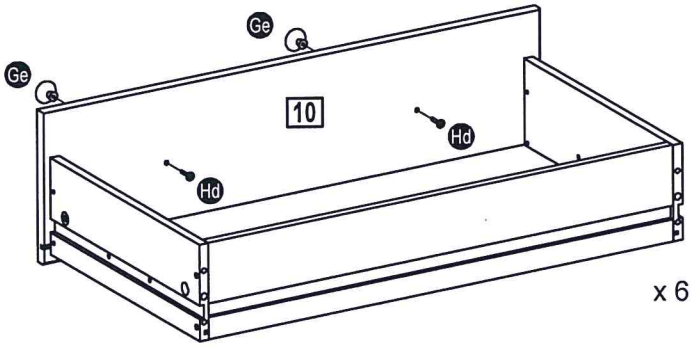

x 6


Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.


Fix drawers to the drawer runners using screws (Hk).

Hk
M4 x 9mm Screw x 12

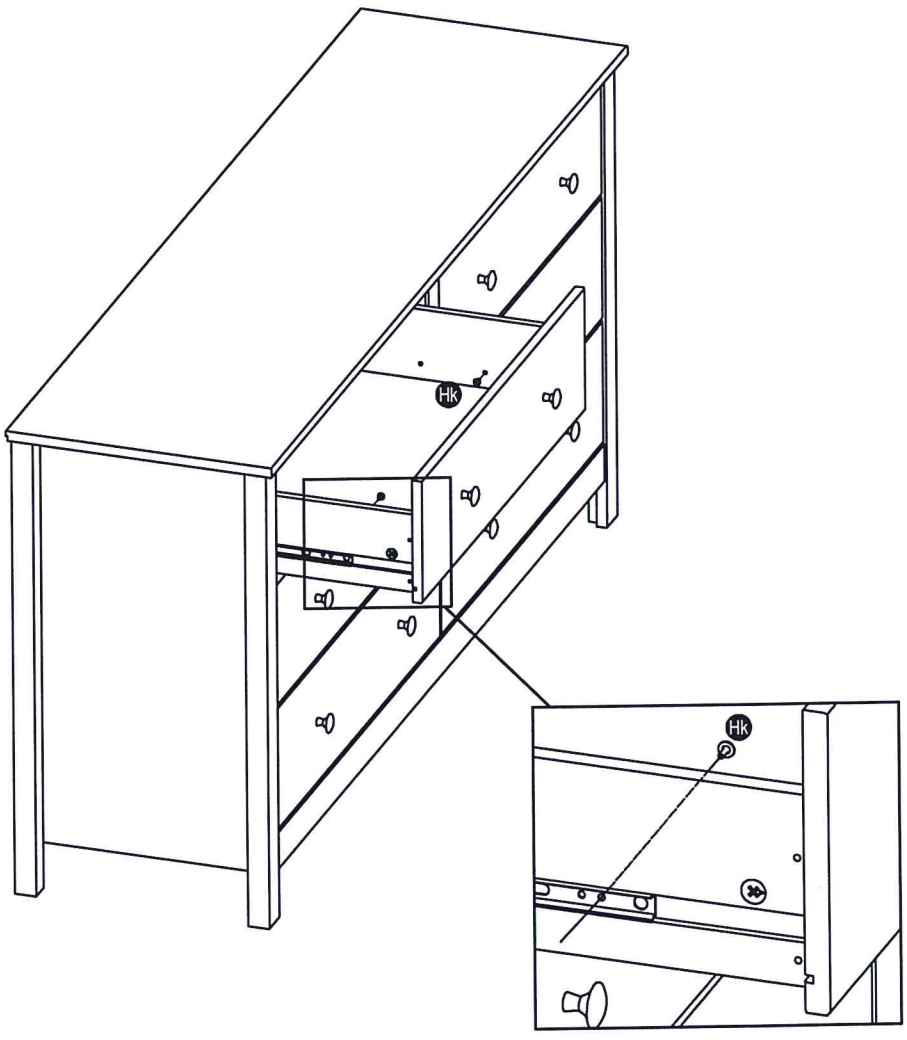

350312-16

A Guide to
Wall Mounting & Fixings

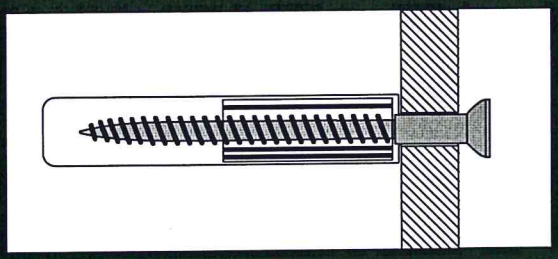

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

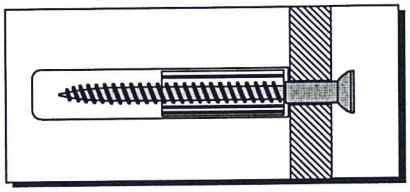


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

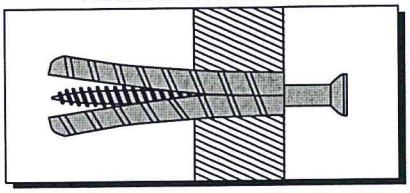


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

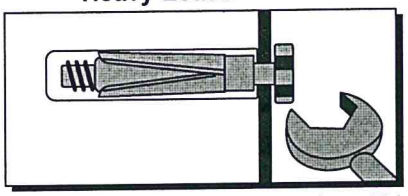


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

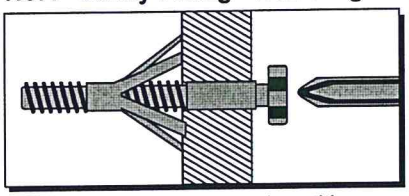


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

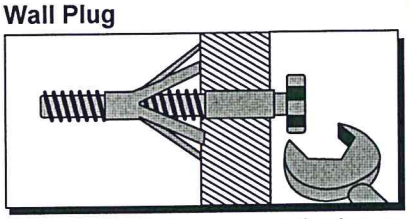

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

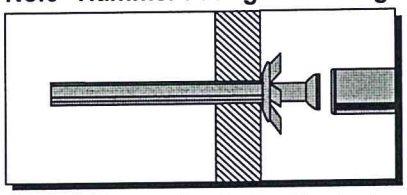

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.