
BOURNE CONTEMPORARY OAK 5FT FO

Assembly Instructions - Please keep for future reference

3576995

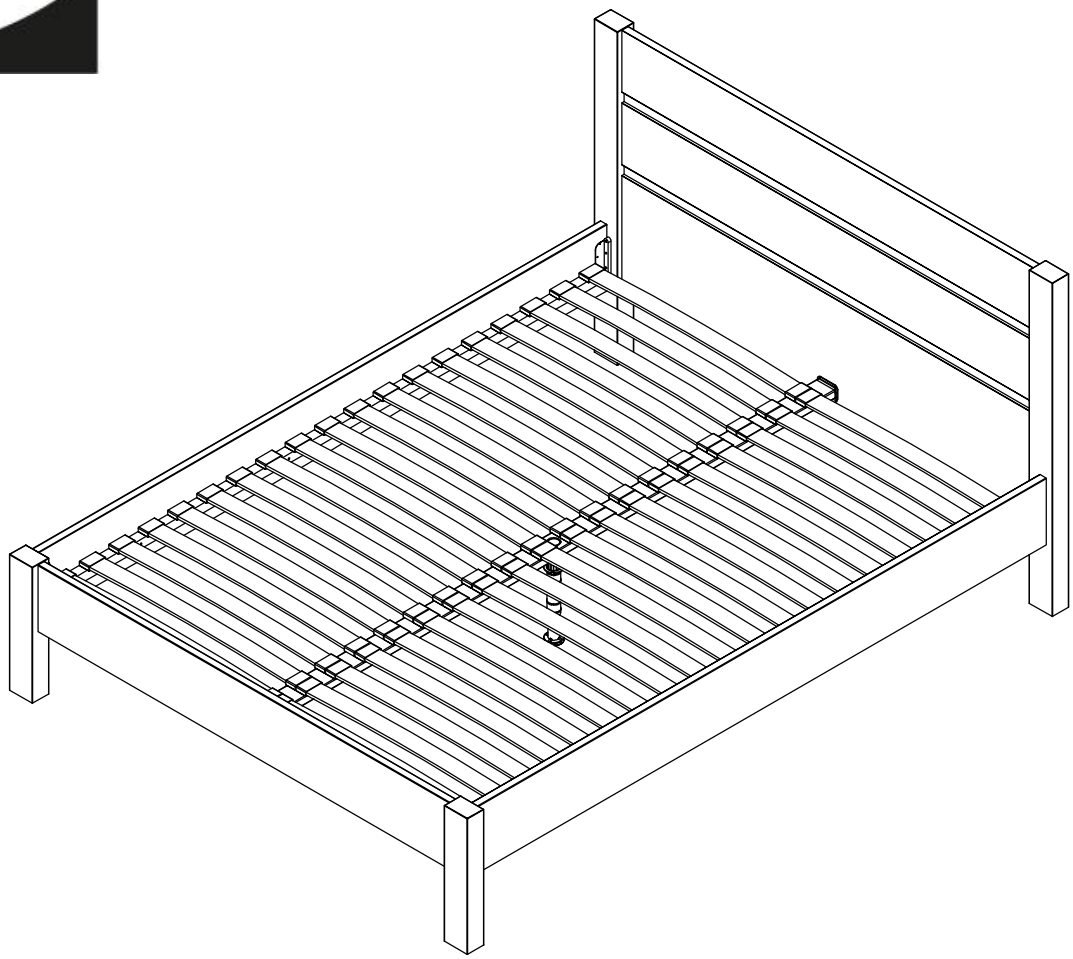

Dimensions

Width - 158.7cm
Depth - 208.4cm
Height -100.3cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (- in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten bolts.


• Regularly check and ensure that all bolts and fittings are tightened properly.

Components - Parts

If you have damaged or missing commponents, call the Customer Helpline: 03456 400 800


Please check you have all the panels listed below

1

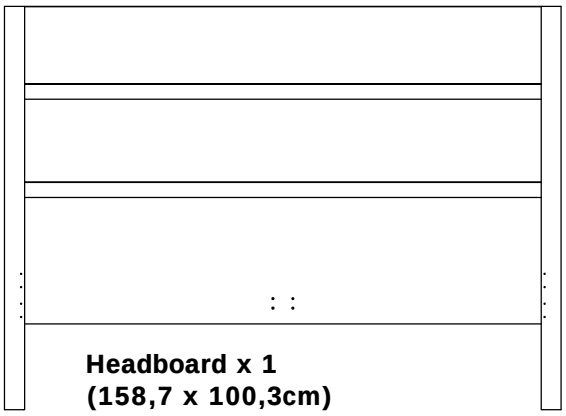


Headboard x 1
(158,7 x 100,3cm)

2

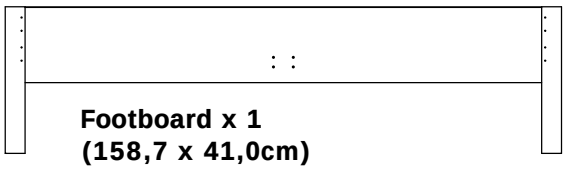


Footboard x 1
(158,7 x 41,0cm)

3



Side rail x 2
(197 x 20cm)

4



Central rail x 1
(198,4 x 6,5cm)

5

Slat x 38
(73,5 x 5,3cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A1




Sideboard hanger A x4

B1



30mm Screw x16

C1

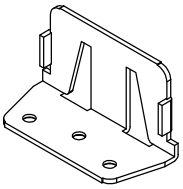


Central rail hanger A x2

D1



25mm Screw x4

E1

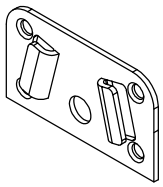

Central rail hanger B x2

F1




11mm Screw x8

G1




Slat housing x72

H1

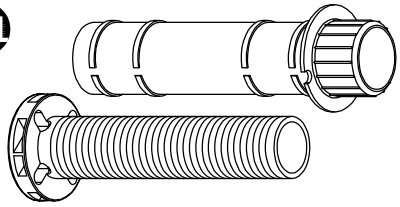


Support leg x1

I1

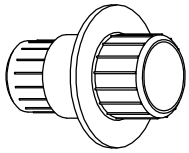


Leg extension x1

J1



Sideboard hanger B left x2

K1




Sideboard hanger B right x2

M1



16mm Screw x16

Tools required



Phillips screwdriver
(medium & large)




Hammer



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws

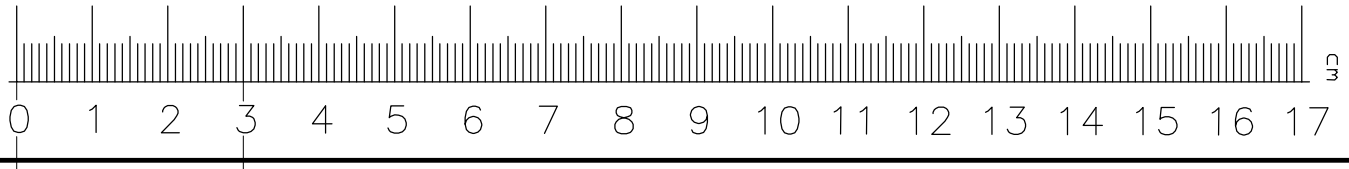




The screws length is measured from the head to the point (30mm screw shown)

Assembly Instructions

Step 1

Attaching the central rail hangers B


Fit central rail hanger B E1 to headboard 1 and footboard 2 with screws F1 .

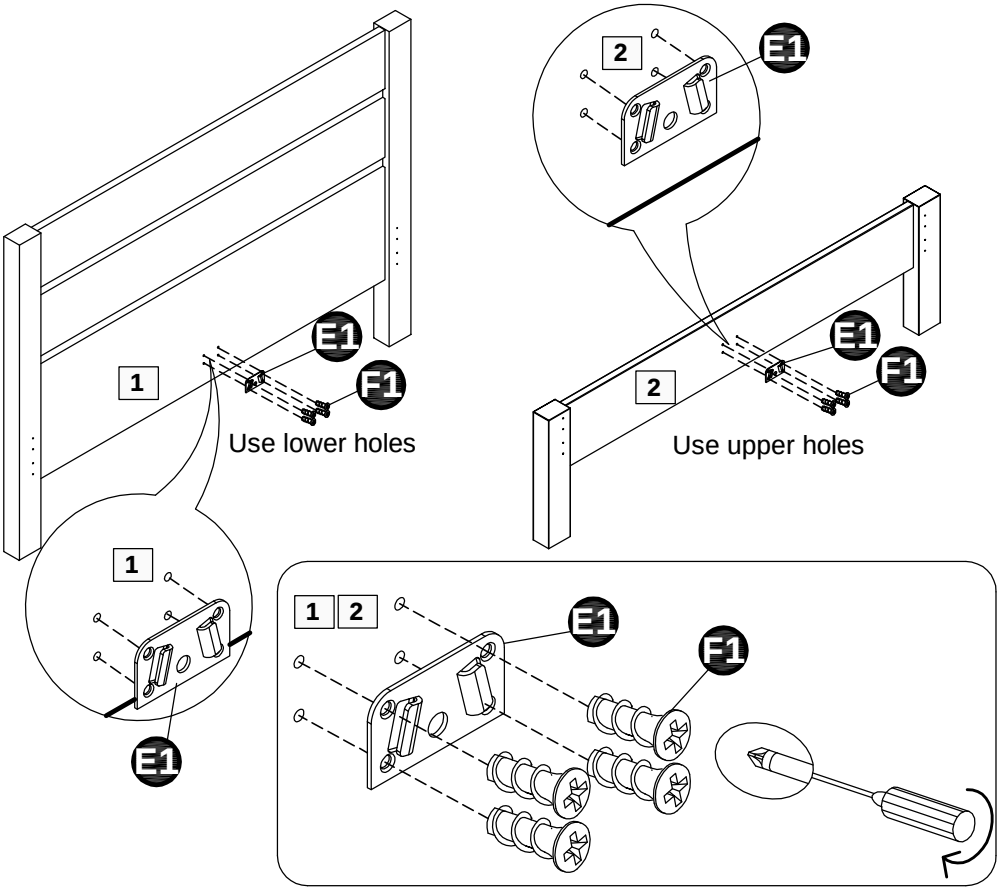

Step 2

Attaching the sideboard hangers A

Position sideboard hanger A A1 onto the drilled holes of the headboard 1 and footboard 2 .
Fix through holes shown using screws B1

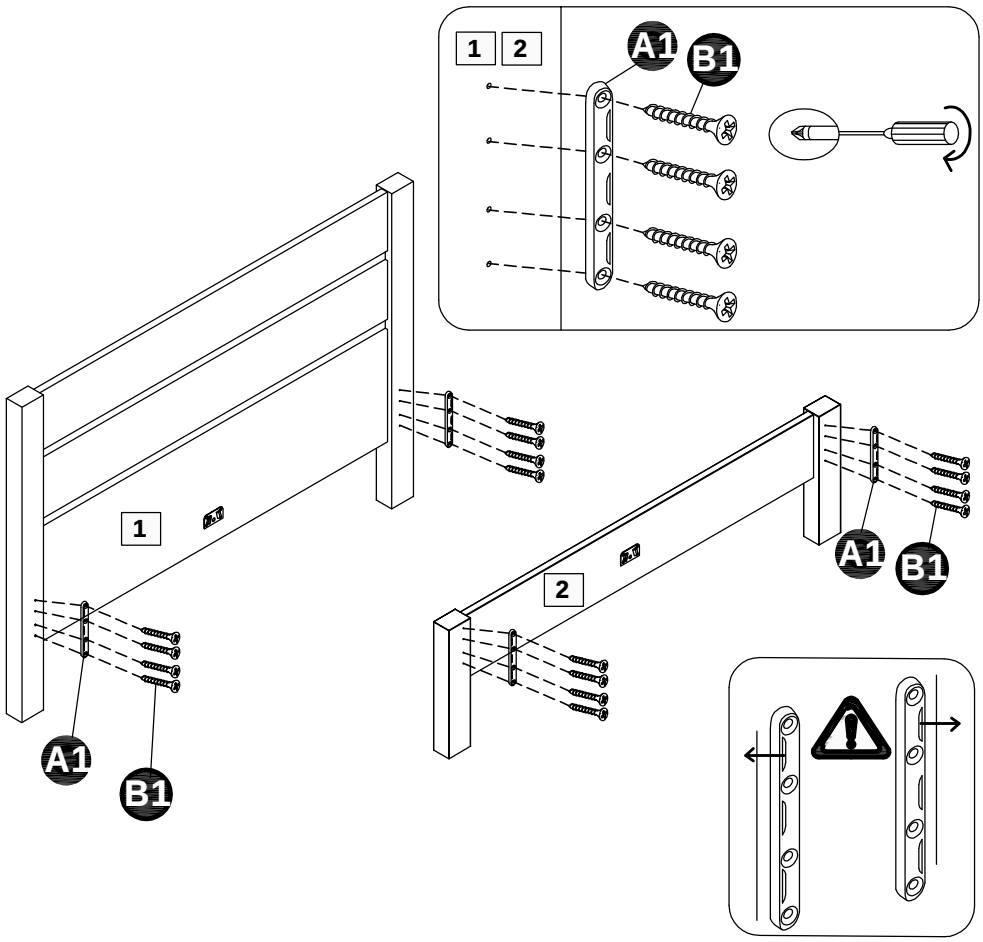



Assembly Instructions


Step 3

Attaching sideboard hangers B

Position right K1 / left sideboard hanger B J1 on to the drilled holes of the side rails 3 .
Fix it using the screws M1.

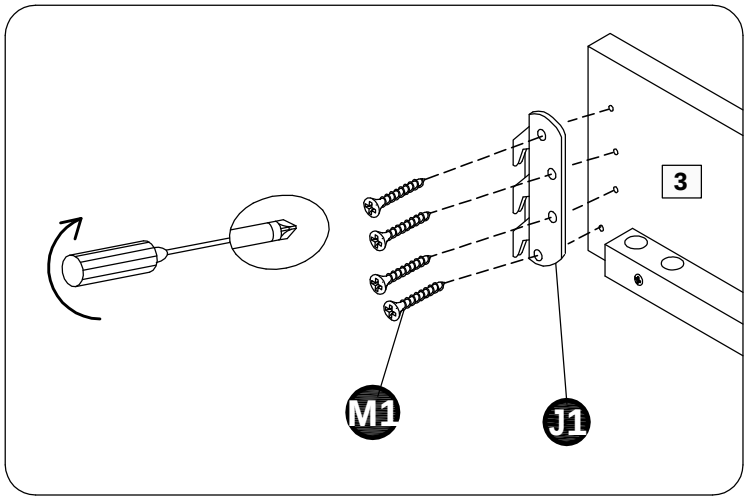

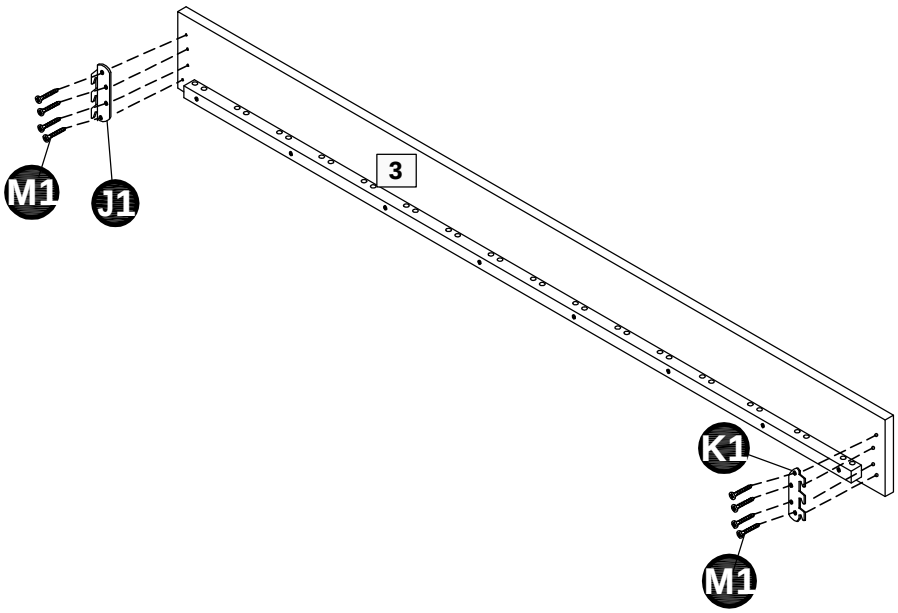

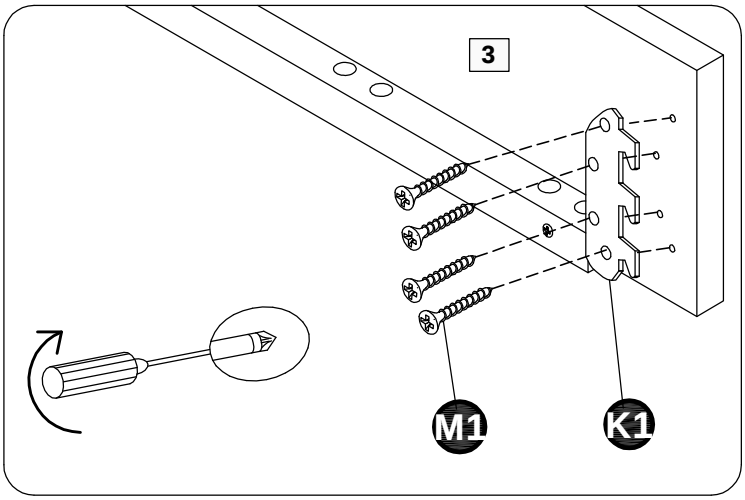


Assembly Instructions

Step 4

Bed frame assembly


Hook the fitting on the side rails 3 into the sideboard hanger A A1 on the footboard 2 and headboard 1 .

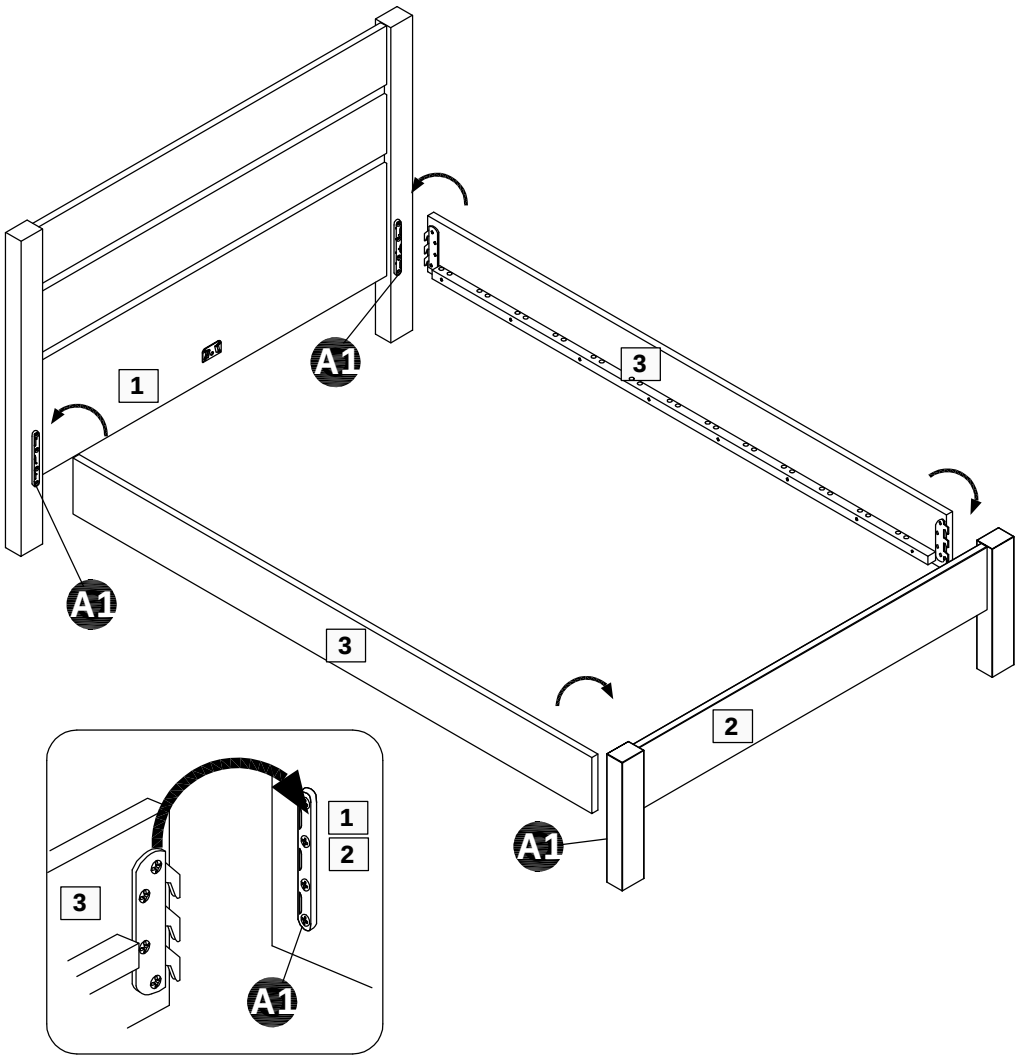

Step 5

Central rail setup

Fit the central rail hanger A C1 to central rail 4 and fix with screws D1 .

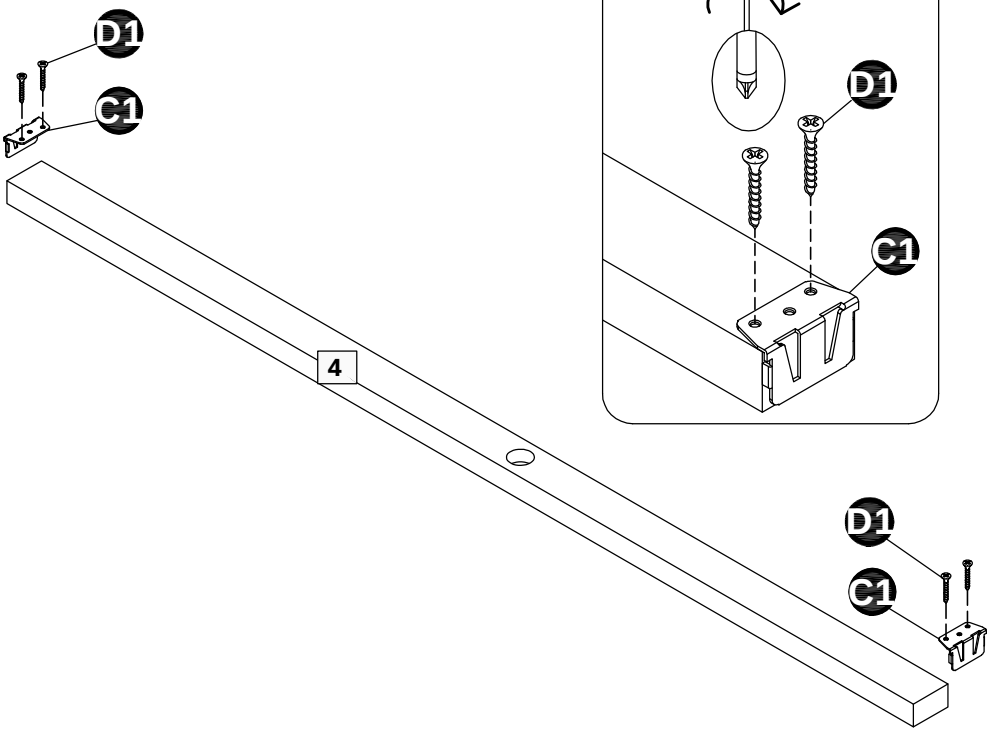


Assembly Instructions

Step 6

Attaching the support leg


Join both parts of the support leg H1 together. Join the support leg H1 with leg extension I1 and insert into the hole in the central rail 4 .

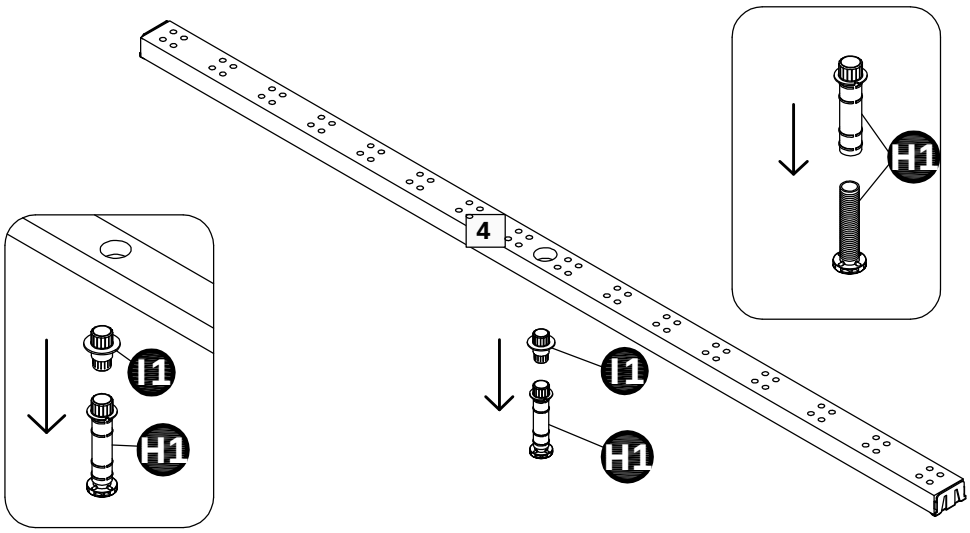


Step 7

Central rail inserting

Hook the central rail hanger A C1 on the central rail 4 into the central rail B E1 on the footboard 2 and headboard 1 .

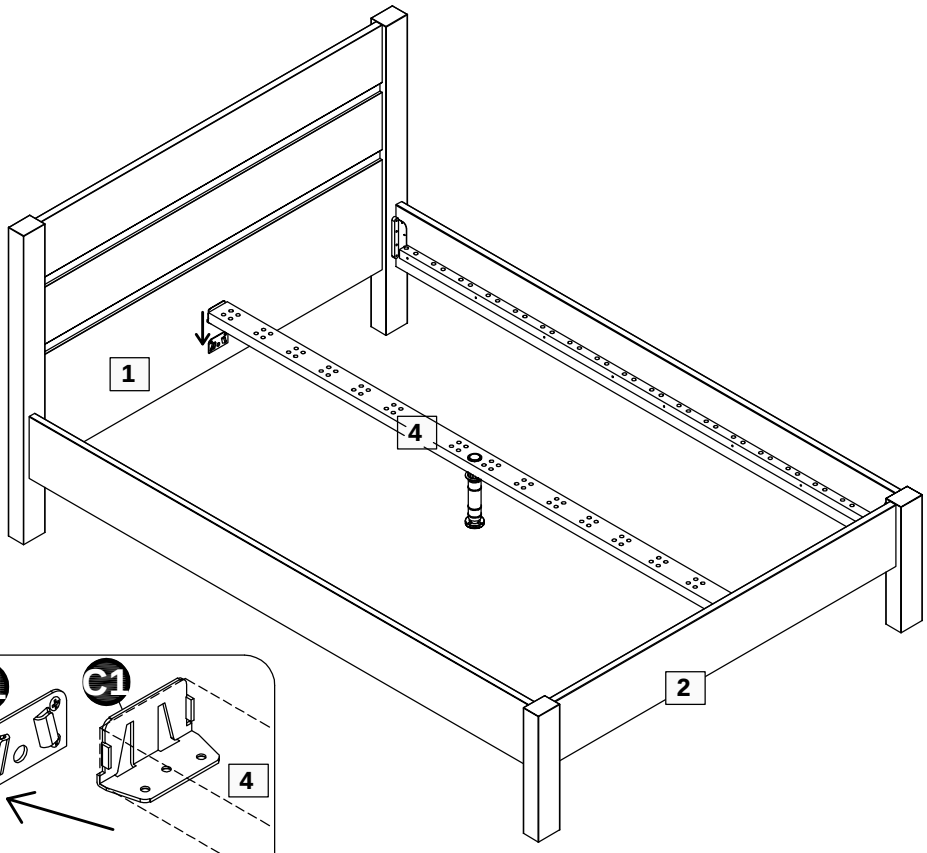

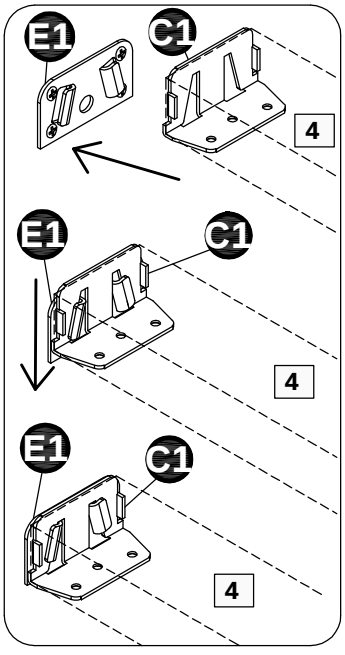


Assembly Instructions

Step 8

Adjusting the support leg

The support leg H1 must stand firmly on the floor, so adjust the height of the support leg H1 accordingly.

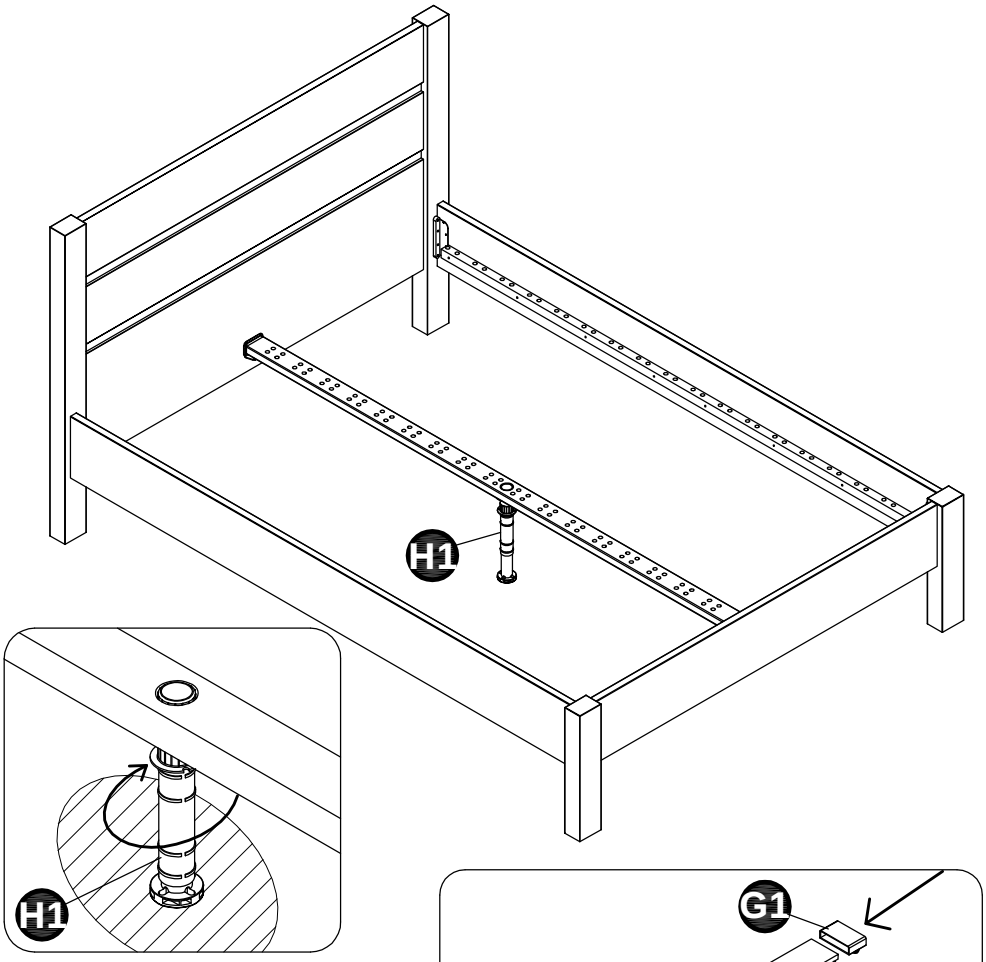



Step 9

Slats installation


Put the housing G1 on the both end of the slat 5 , than stick it into holes in side and central rail 4 . Use a hammer gently if needed.


Repeat for the rest of slats.

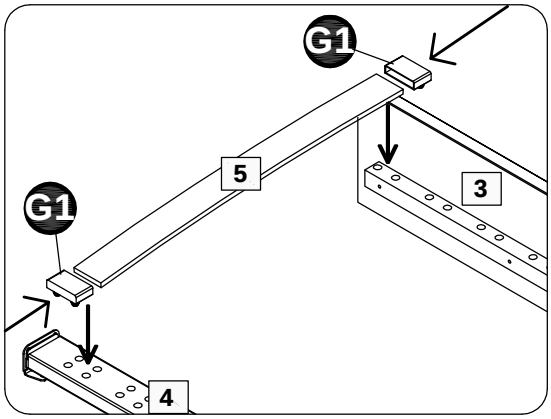

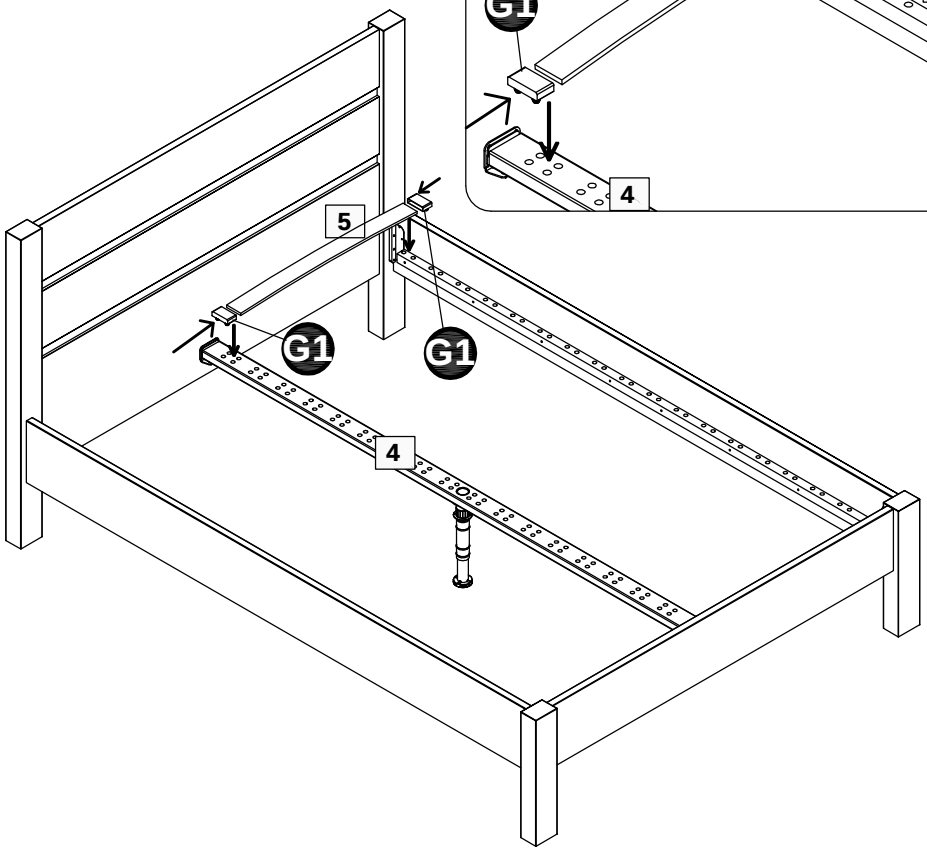

Assembly Instructions

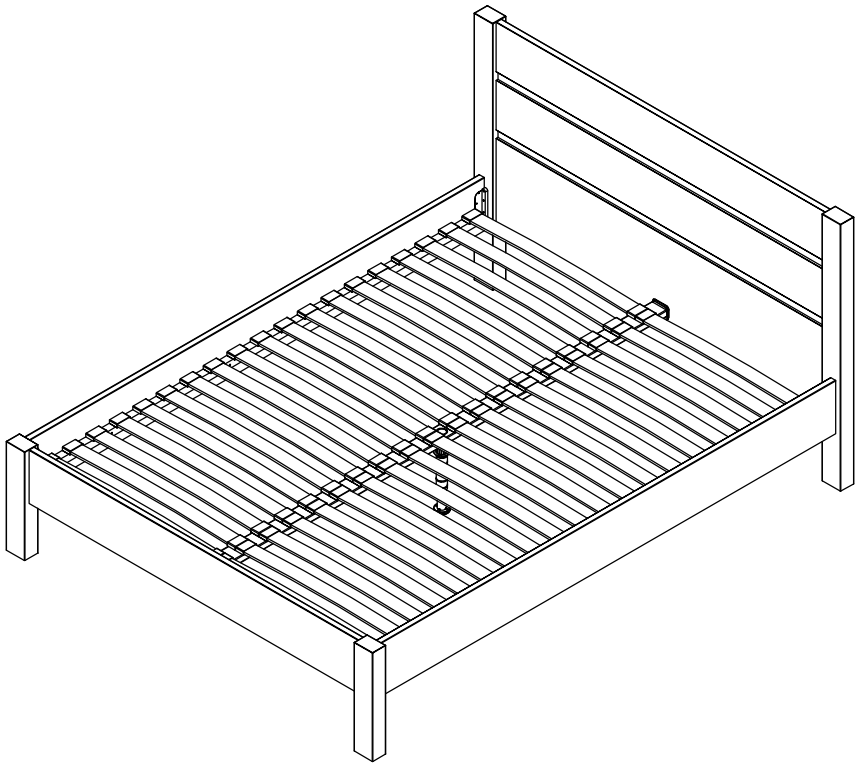

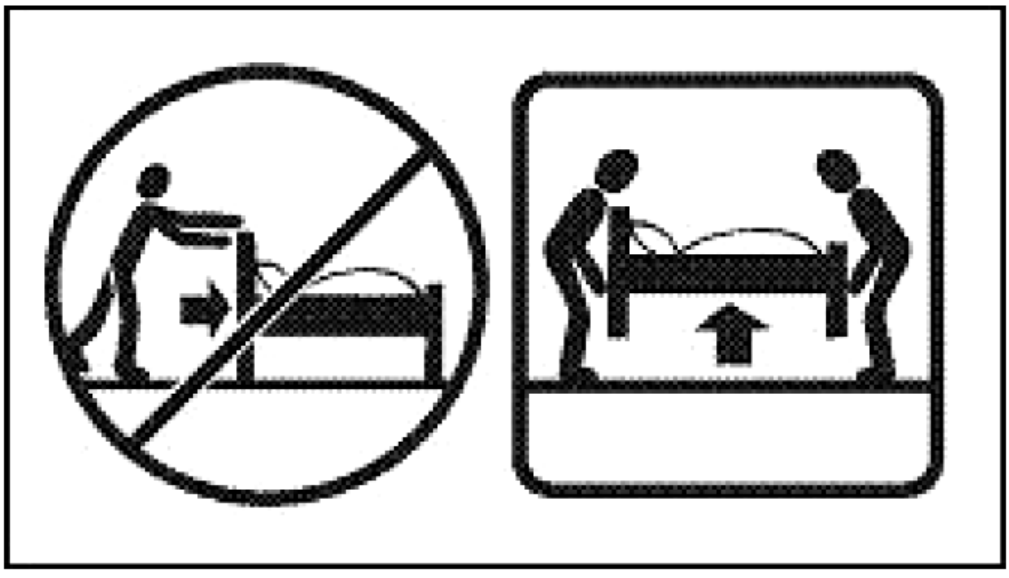

Assembly is complete.