
Curve Wardrobe White

Assembly Instructions - Please keep for future reference 377/3633

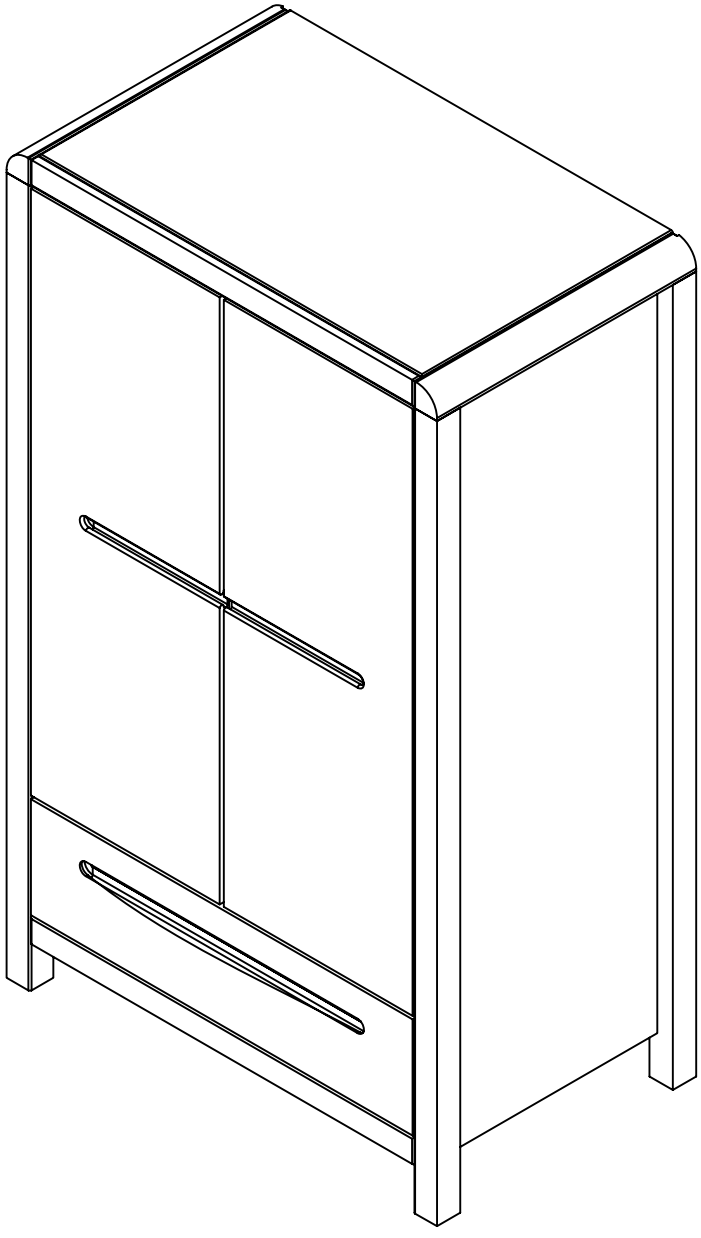

Dimensions

Width - 83cm
Depth - 50cm
Height -139cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the **Customer Helpline:08456 400800.**

Issue 1 - 06/05/10

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2, 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels 1

If you have damaged or missing componets, call the **Customer Helpline:08456 400800.**

Please check you have all the panels listed below

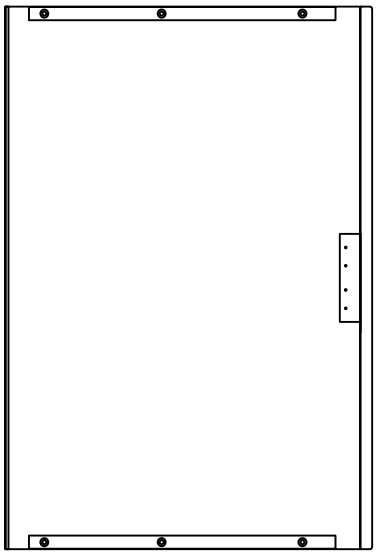

1 Top (74 × 50cm)

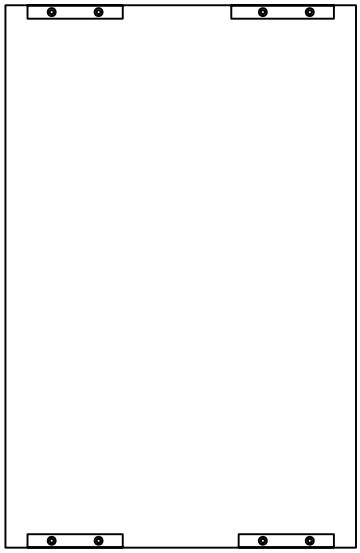


2 Shelf (74 × 47.8cm)




7 Drawer side, left
(45 × 14.5cm)




8 Drawer side, right
(45 × 14.5cm)

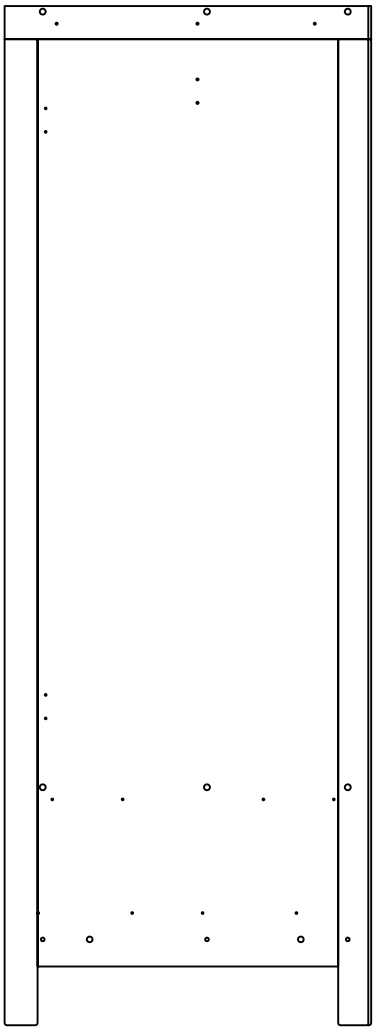


3 Left side (139 × 50cm)

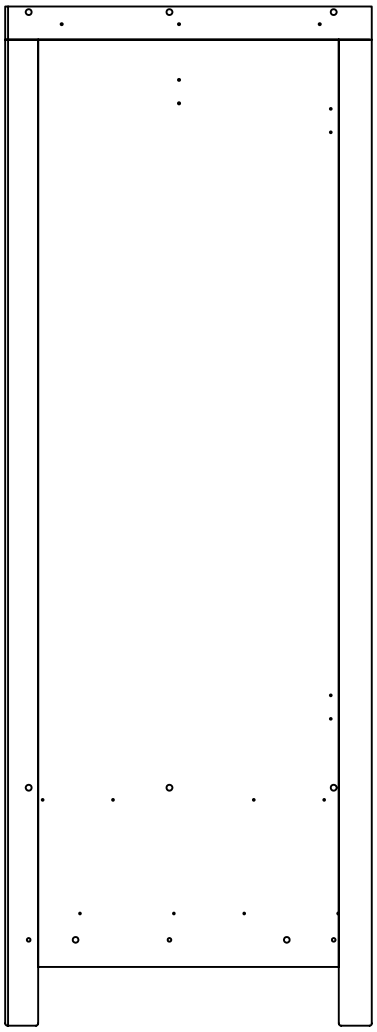

4 Right side (139 × 50cm)

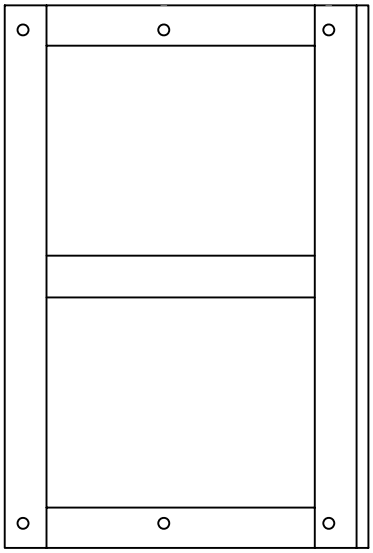


5 Bottom frame
(74 × 49.6cm)

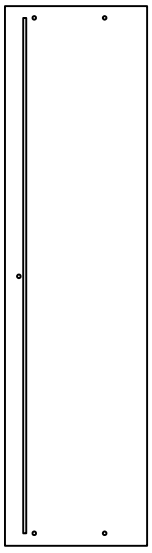


6 Drawer front
(73.6 × 19.4cm)

Components - Panels 2

Please check you have all the panels listed below




9 Drawer back
(69.1 × 14.5cm)




10 Drawer base
(70.2 × 44.9cm)




11 Support rail
(43.8 × 5.7cm)



12 Back panel × 2
(127.7 × 38 cm)

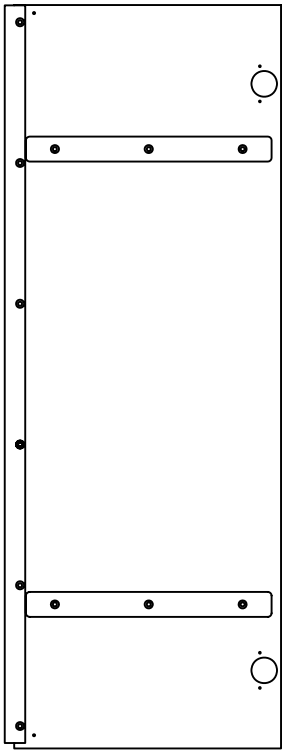

13 Door,left (101.4× 37.7cm)


















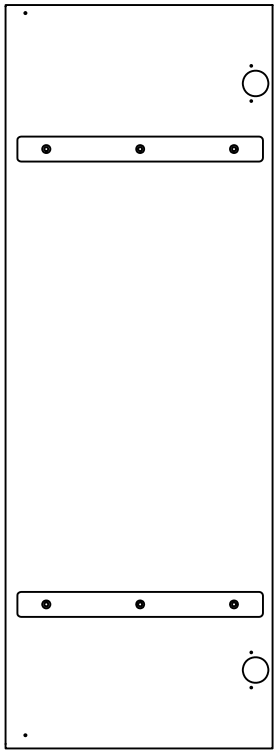


14 Door,right (101.4× 36.4cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembiy. In some cases more fittings may be supplied than are required.

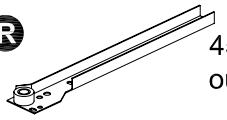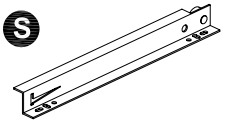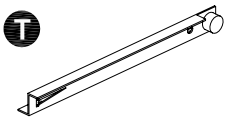A  Wooden dowel × 16	B  Large locking pin × 6	C  Large locking nut × 6
D  Door hinge × 4	E  Ø3.5×15mm Screw × 8	F  Ø3.5×12mm Screw × 36
G  Ø3.5×25mm Screw × 6	H  Small locking pin × 5	I  Small locking nut × 5
J  Ø3.0×15mm Screw for Back panel × 30	K  Magnet, part 1 × 4	L  Magnet, part 2 × 4
M  Ø3.0×15mm Screw for Magnet × 8	N  Ø3.0×15mm Screw × 4	O  Ø4×25mm Screw × 14
P  Joining Strip - 1249mm x 1	Q  450mm Runner, outside left × 1	R  450mm Runner, outside right × 1
S  450mm Runner, inside left × 1	T  450mm Runner, inside right × 1	U  Wall strap × 1
V  Small washer × 1	W  Hanger rail support × 2	X  Hanging rail -731mm× 1


Tools required


Phillips screwdriver (mendium & large)


Small hammer


Flatblade screwdriver (medium)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting dowels

a: Insert 3 Large locking pin (B) into Left side [3].


Note: Insert locking pin as far as shown.
Do not over tighten.

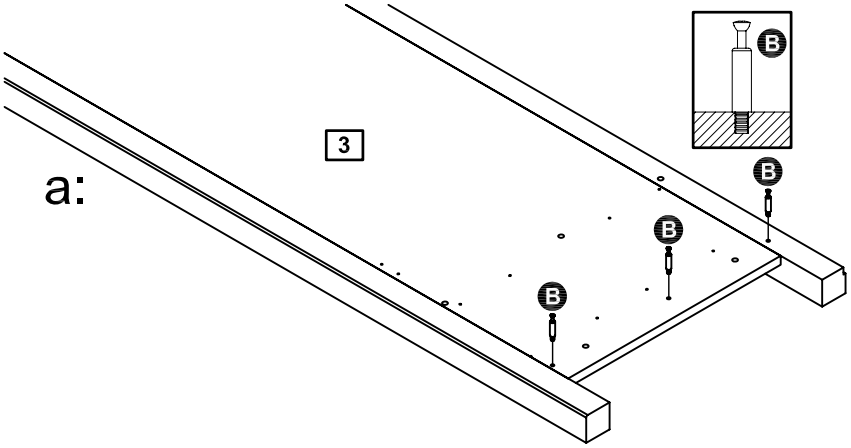


b: Attach Hanger rail support (W) using screws (F).

Loosen door hinge (D) screw shown and separate the "back plate".

Attach door hinge (D) using screws (F).

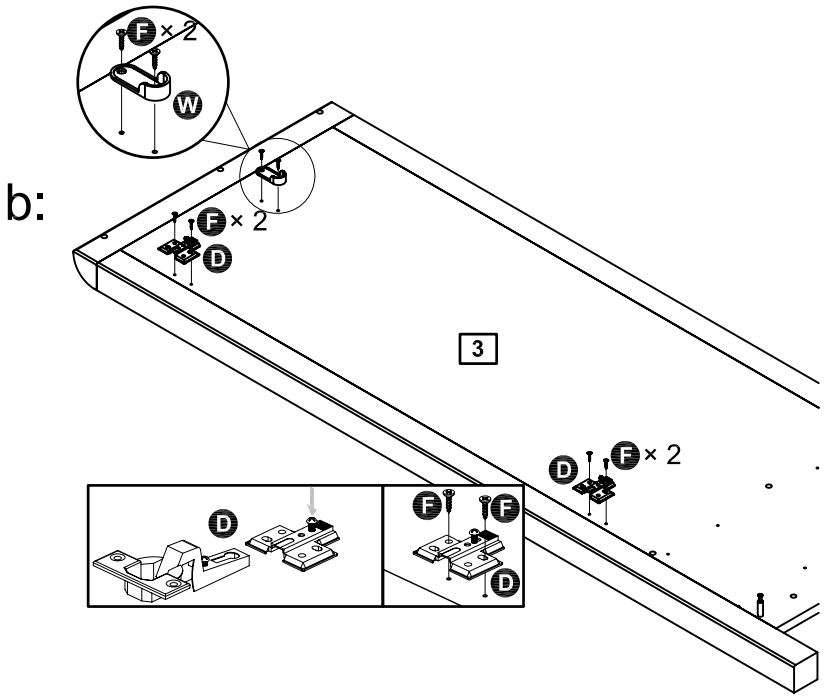

C: Fix the runner outside left (Q) by using screws (F).

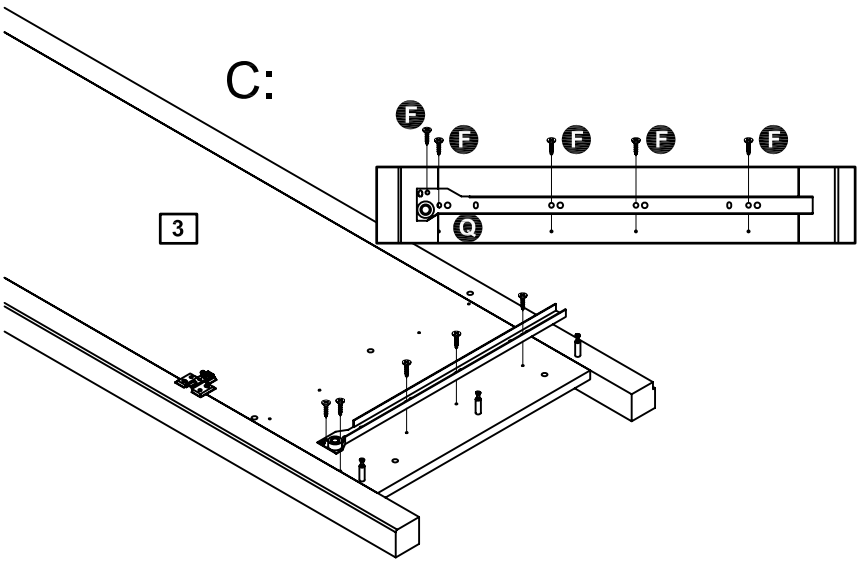


Repeat **a**, **b** and **c** with Right,side [4].


Step 2

Fitting dowels

a: Insert 6 Wooden dowels (A) into Top [1] .

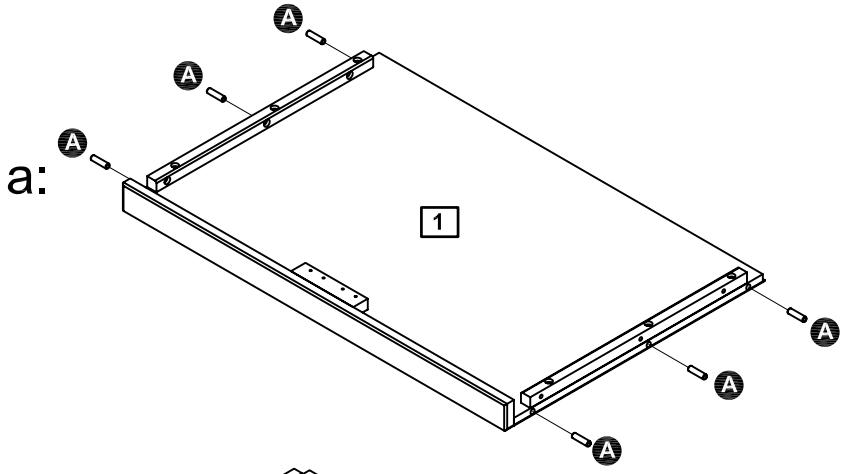


b: Fix Magnet part 1 (K) to Top [1] by using screws (M).

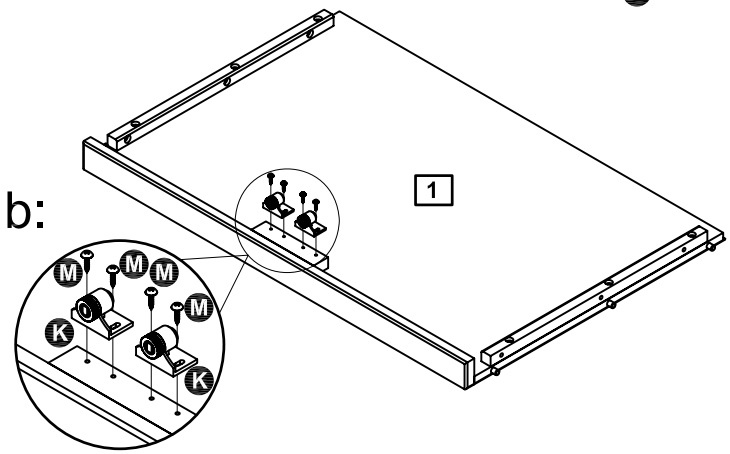


Step 3

Fitting dowels

a: Insert 6 Wooden dowels (A) into Shelf [2] .

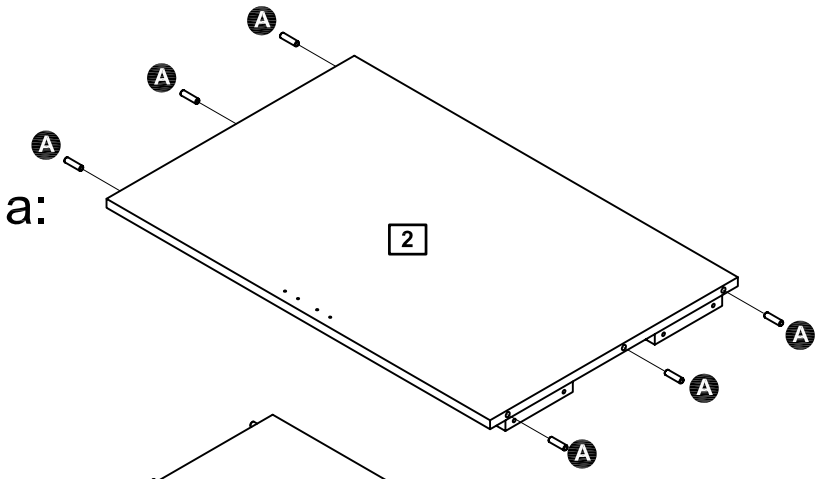


b: Fix Magnet part 1 (K) to Shelf [2] by using screws (M).

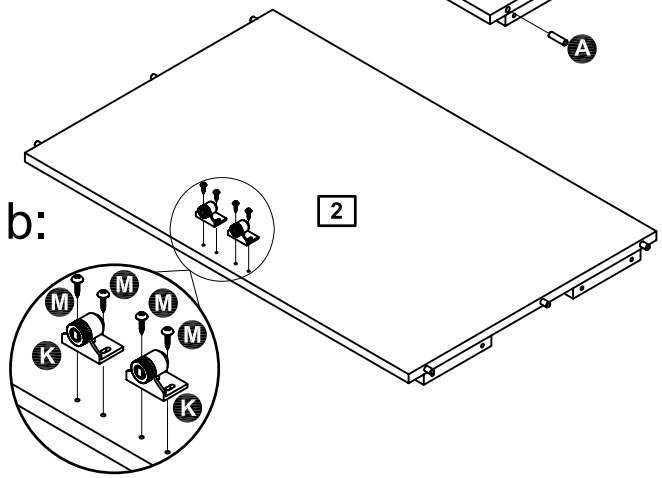

Step 4

Fitting dowels
Fix 4 Wooden dowels A into Bottom frame 5 .

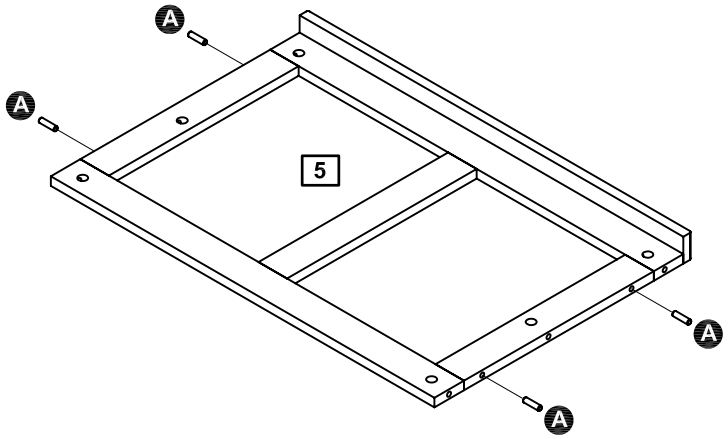

Step 5


Attaching sides


Two people are needed here.
Position Top 1 ,Shelf 2 and Bottom frame 5 onto the Left side 3 .

Fix screws O into Top 1 and Shelf 2 where shown.
Use a screwdriver to fix them by clockise.

Insert 3 Large locking nuts C into Bottom frame 5 where shown.

Use a screwdriver to turn locking nuts C clockwise to lock.

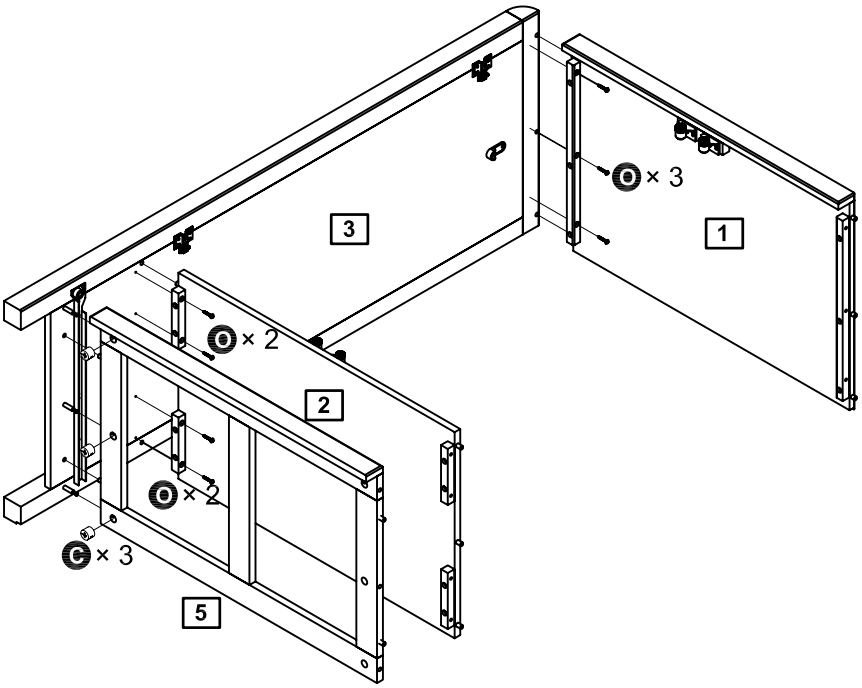

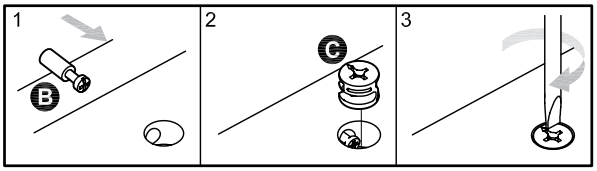

Step 6


Attaching sides


Position Right side [4] onto the assembly.

Fix screws Ⓞ into Top [1] and Shelf [2] where shown.
Use a screwdriver to fix them by clockwise.

Insert 3 Large locking nuts Ⓒ into Bottom frame [5] where shown.

Use a screwdriver to fix them by clockwise.

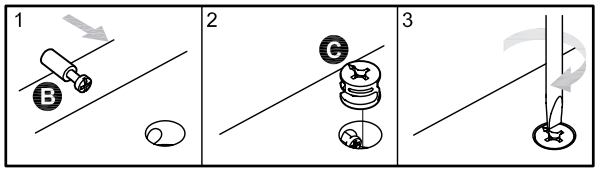

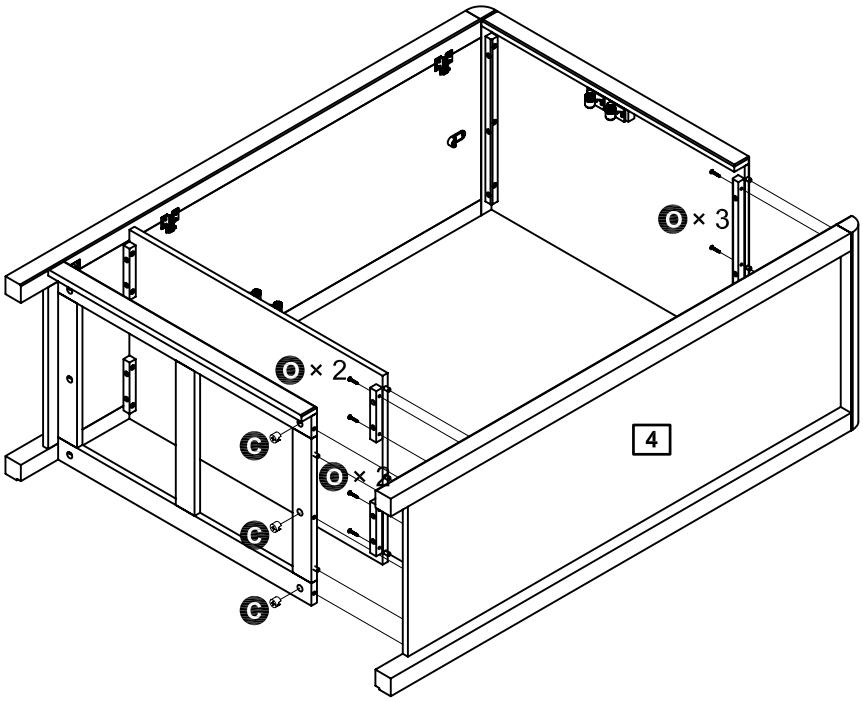


Step 7


Fixint back panels

Insert the Joining strip Ⓟ into Back panels [12].

Attach the back panels [12] onto back of wardrobe by using screws Ⓙ .

IMPORTANT: Cabinet **Must** be 'Square' when back is attached.

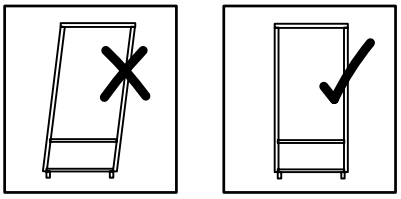

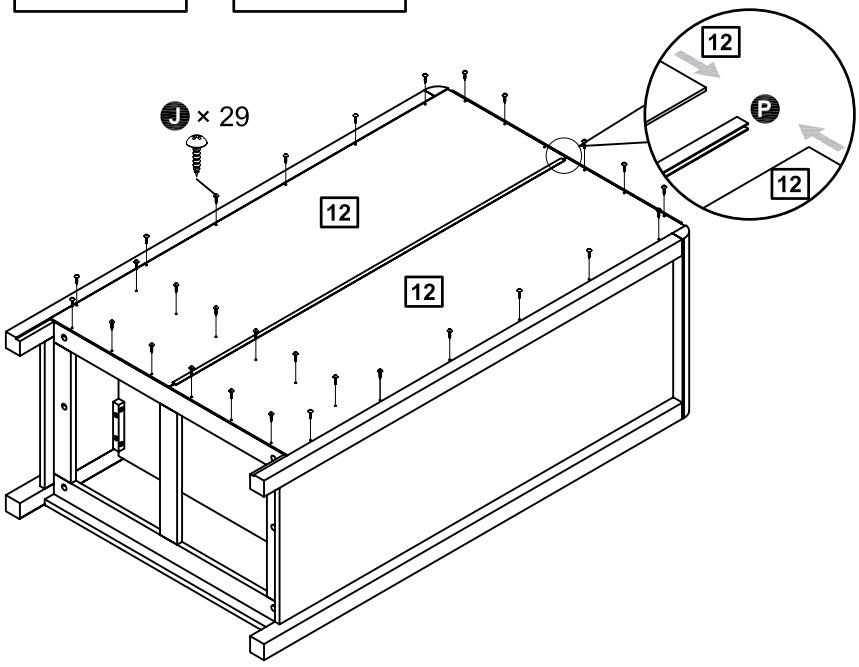

Step 8


Fitting hinges to doors

a: Place Hanger rail X onto Hanger rail support W .

b: Fix 2 Door hinges D to Door, left 13 by using 4 Screws E .

c: Fix Magnet, part 2 L onto Door, left 13 by using Screw N .

Repeat **b** and **c** with door.right 14 .

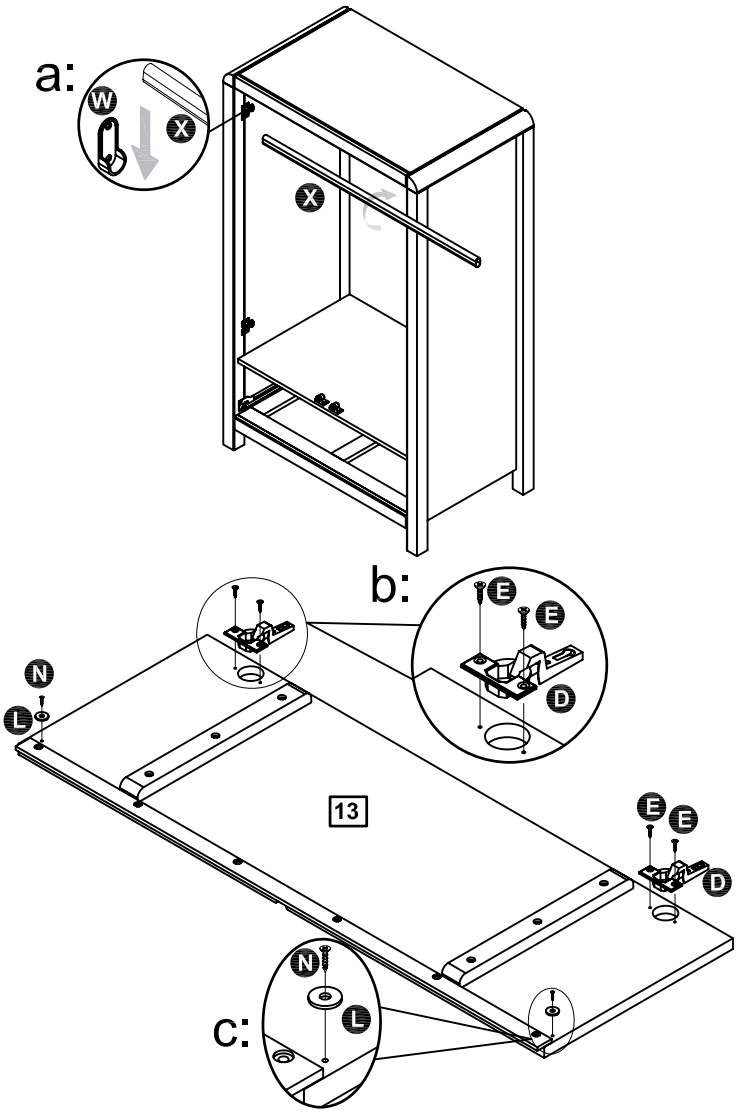

Step 9


Hanging doors

a: With help,slot door hinges D **onto 'hinge plates'.**

b: Tighten screw shown to lock hinges in position.

Repeat **a , b** for opposite door.

See '**Hinge adjustment**' in step 12 if the doors need adjusting.

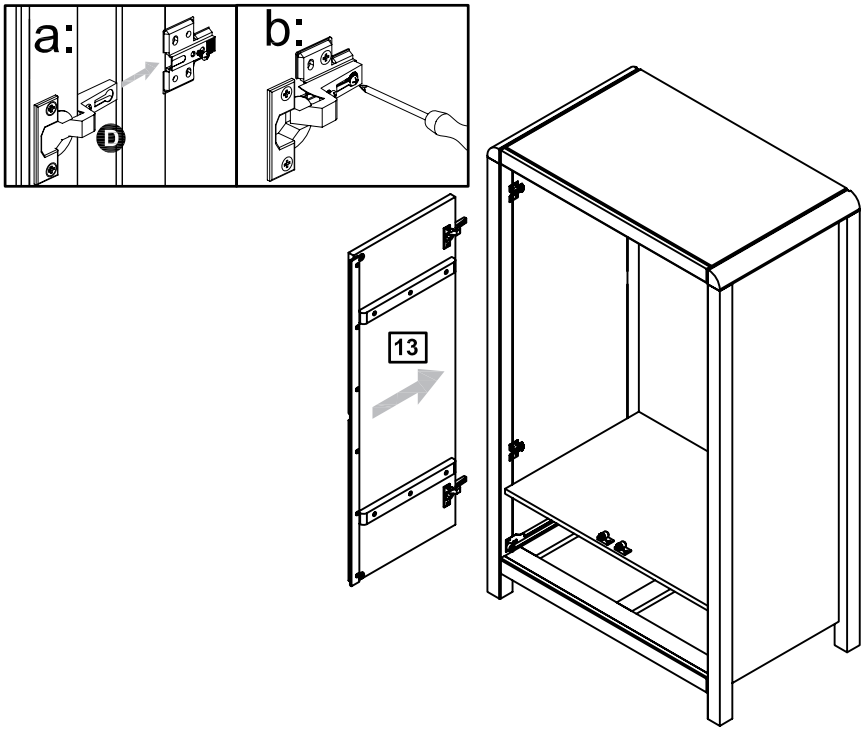


Step 10

Hinge adjustment

a: To move doors up or down: loose screws shown and move doors to suit.

Once doors are aligned, re-tighten and insert screws (F) into all 'hinge plates'.


a:

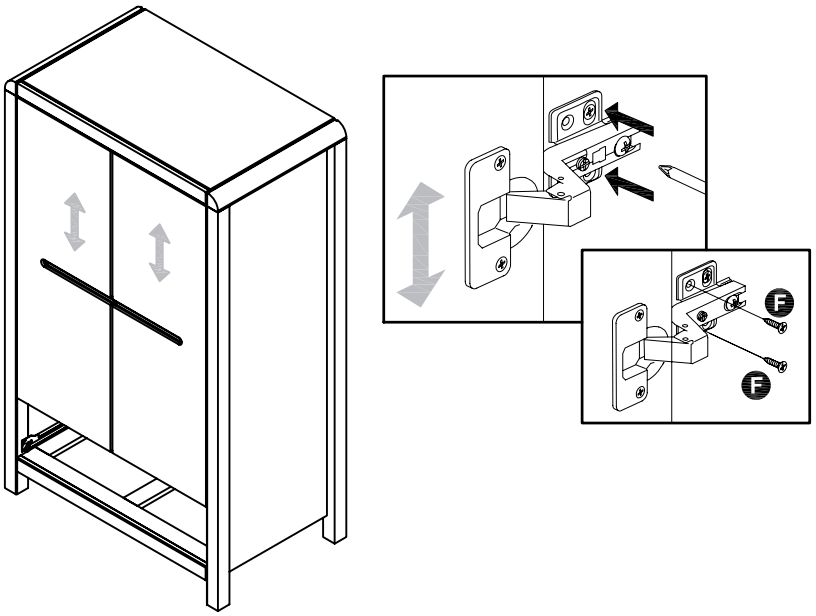

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.


b:

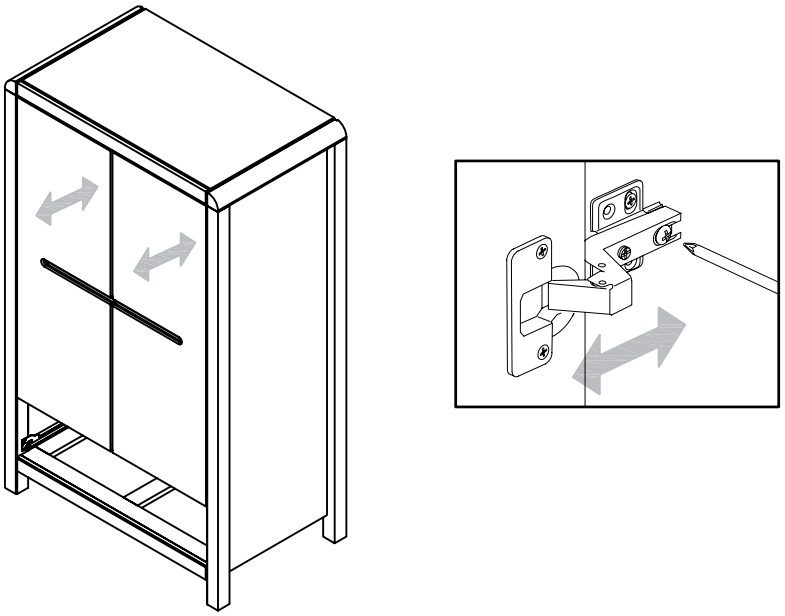

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

c:

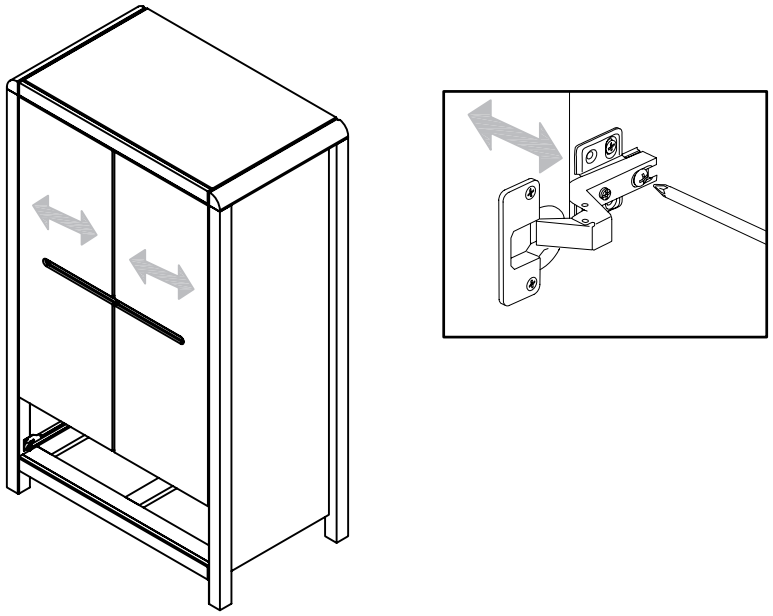

Step 11

Drawer assembly

a: Insert 5 Small locking pin (H) into holes shown on back of Drawer front [6] .

Note: Insert Locking pin as far as shown.
Do not over tighten.

b: Fix Drawer sides [7] and [8] and support rail [11] to Drawer front [6].


Insert 5 Small locking nuts (I) into Sides [7], [8] and support rail [11] .

Use a screwdriver to turn locking nuts (I) clockwise to lock.

c: Slide Drawer base [10] into grooves.

d: Position Drawer back [9] onto sides and by using 6 Screws (G).


e: Fix Runners (T) and (S) onto the drawer sides of drawer by using 6 Screws (F).

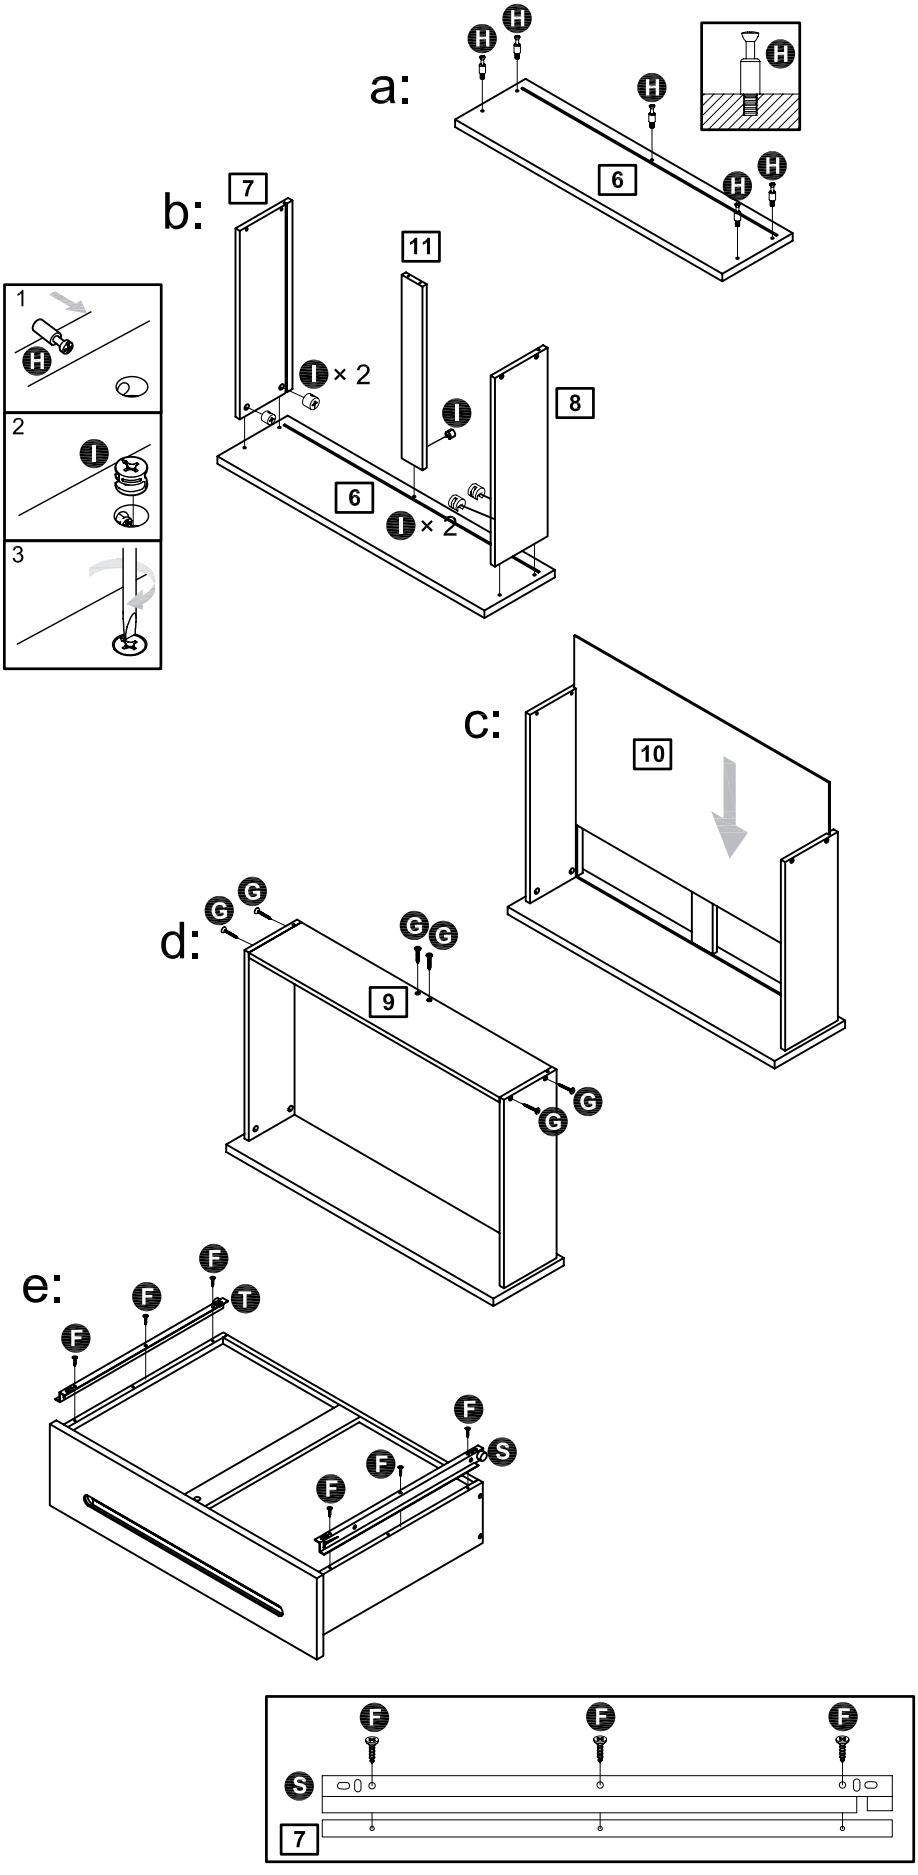

Step 12

Inserting drawer

Carefully put in the drawer.

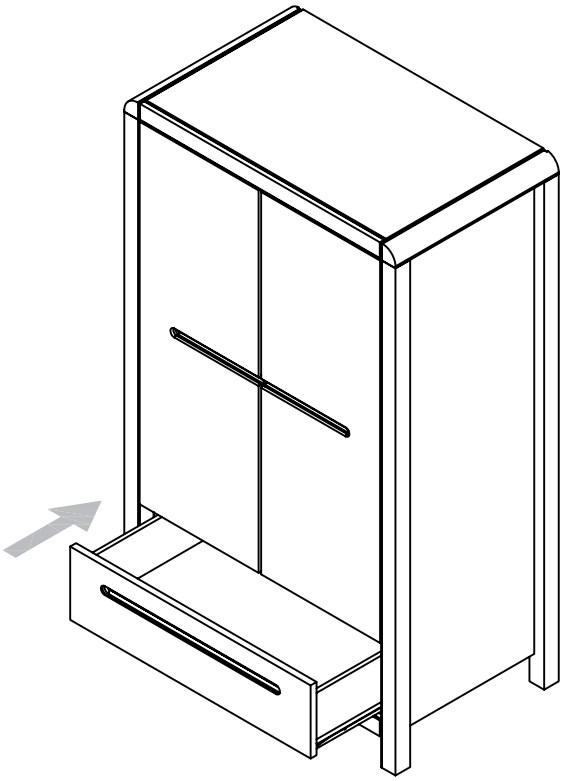

Step 13

Fixing to wall

It is recommended that the Wardrobe is fixed to a wall.

Fix wall strap (U) to top of Wardrobe using screw (J) and washer (V).

With help, move Wardrobe into position.

Warning: The Sideboard is heavy. **Lift with care**


Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.

Warning: Before drilling, check wall for hidden pipes and cables.

Reposition Wardrobe and fix wall strap using screw.

Assembly is complete.

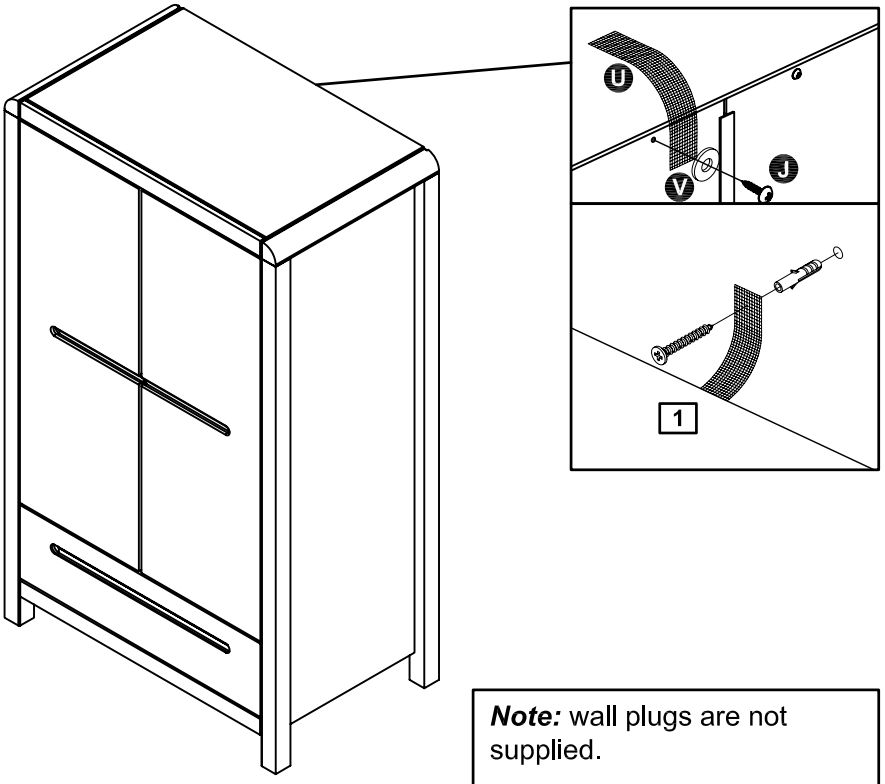

Note: wall plugs are not supplied.

The correct type of fixing must be used for your wall, seek professional advice in doubt.

If you need help or have damaged or missing parts,call the **Customer Helpline:08456 400800.**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

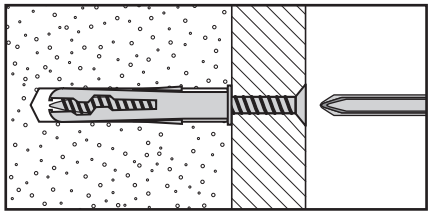


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

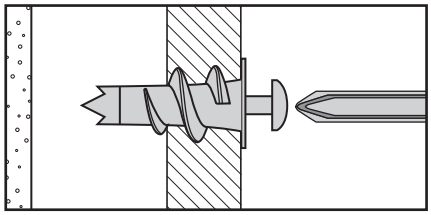


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

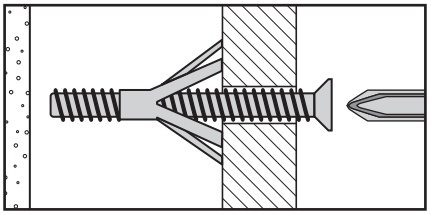


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

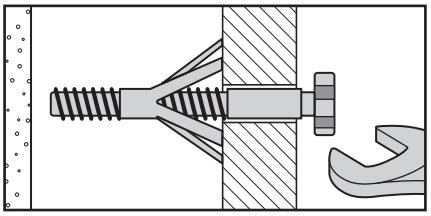


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

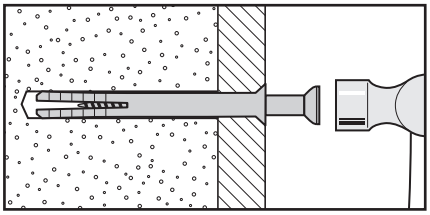

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

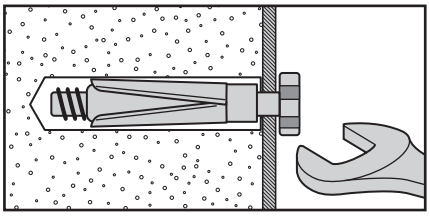

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.