
Classic Two Tone - Cot

Assembly Instructions - Please keep for future reference | 377/4261

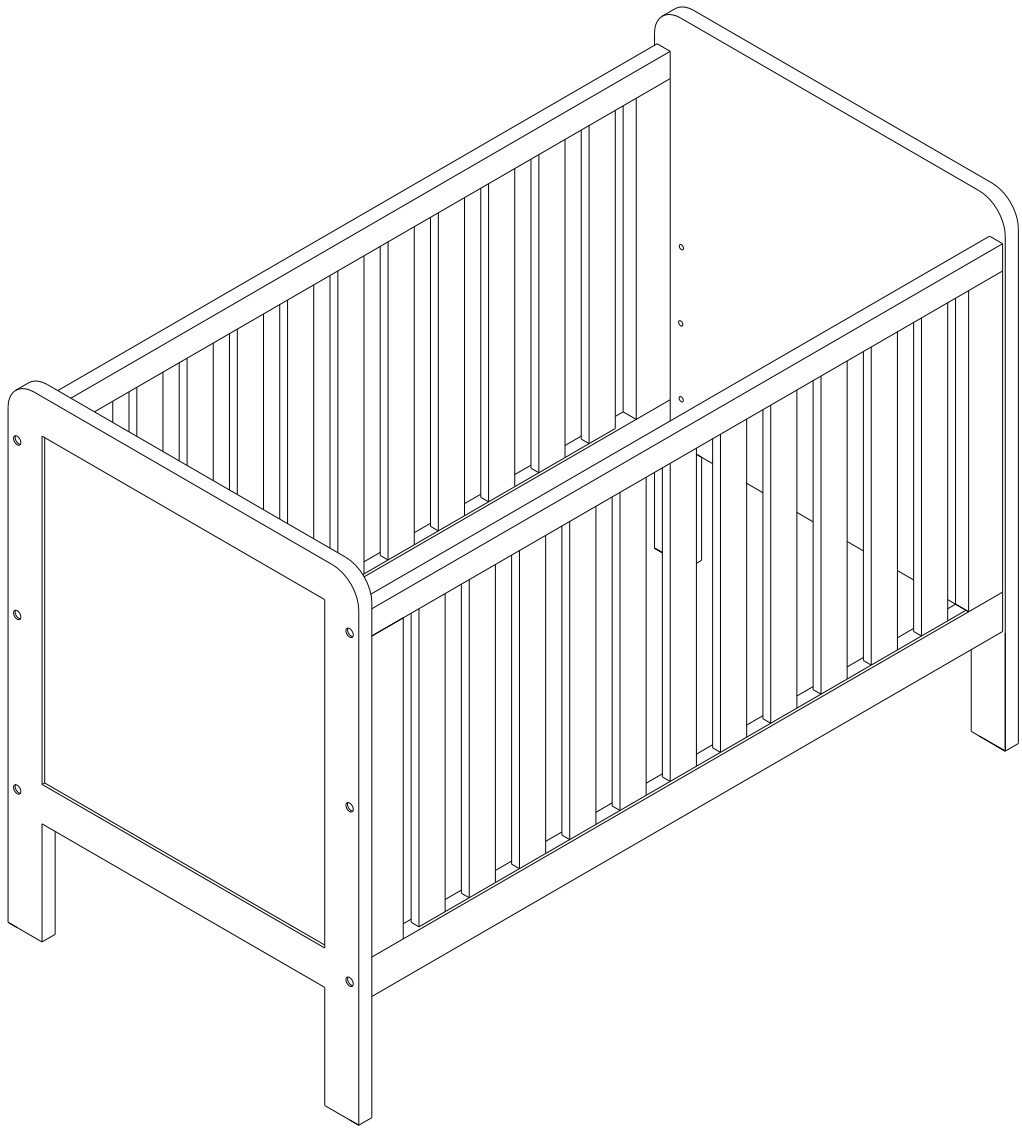

Dimensions

Width - 126cm
Depth - 67cm
Height - 90cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 01/10/10

Safety and Care Advice

Important – **Please read these instructions fully before starting assembly**

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.

· Make sure you have enough space to layout the parts before starting.

· This product contain Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Do not stand or put weight on the product, this could cause damage.

· Assemble the item as close to its final position (in the same room) as possible.



· We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· From time to time check that there are no loose screws on this unit.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Warning !


IMPORTANT KEEP IT FOR FUTURE REFERENCE, READ IT CAREFULLY.

- In cot mode, three base height positions are possible. The lowest position is the safest and should always be used once the child can sit unaided.
- The thickness of the mattress should be such that the distance between the top of the mattress and the top of the sides should be no less than 500mm with the base in its lowest position and no less than 200mm with the base in its highest position (indicated by printed line on cot frame).
- Do not leave anything (large toys etc.) in the cot which could provide a foothold or present a danger of suffocation or strangulation.
- The cot is suitable for a mattress of 1200mm in lenght and 600mm in width. For safety reasons, the minimum mattresss size to be used in this cot must 1180mm in length and 580mm in width.
- Do not position too close to strong sources of heat e.g. open fires, electric fires or gás fires.
- Regularly check the security of fittings and ensure there are no loose screws which could trap parts of the body, or clothing (e.g. strings, necklaces or ribbons for dummies) which would pose a risk of strangulation.
- Do not use the cot if any part is broken, tom or missing and use only spare parts approved by the manufacturer
- Do not use more than one mattress in the cot
- The cot shall no longer be used when the child is able to climb out of the cot to prevent injury from falls
- Designed and manufactured to BS EM 716-1: 2008


Note: *if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

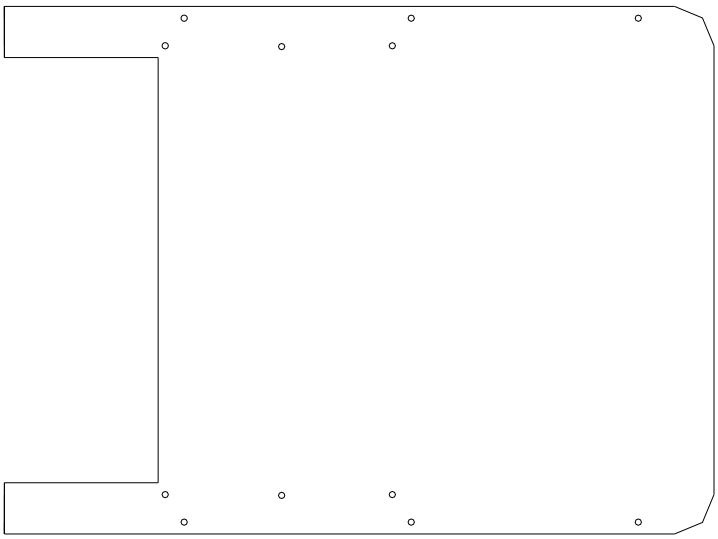

01 Headboard/footboard x 2 (90 x 67cm)

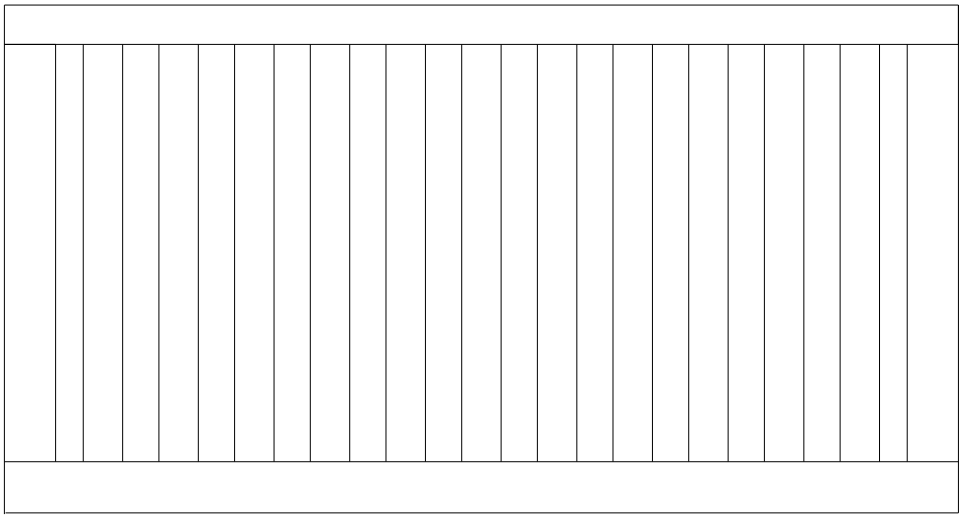

02 Side frame x 2 (121 x 64cm)



03 Slat support x 2 (120,5 x 4cm)




04 Slat x 10 (59 x 6,7cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: **08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  7,0 x 40mm Bolt X 12	B  Allen key X 1	C  3,5 x 25mm Screw X 20
D  Metal suport X 1	E  7,0 x 25mm Bolt X 04	


Tools required




Phillips screwdriver (medium & large)

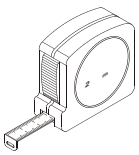

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fit metal supports Ⓓ to the headboard/footboard.

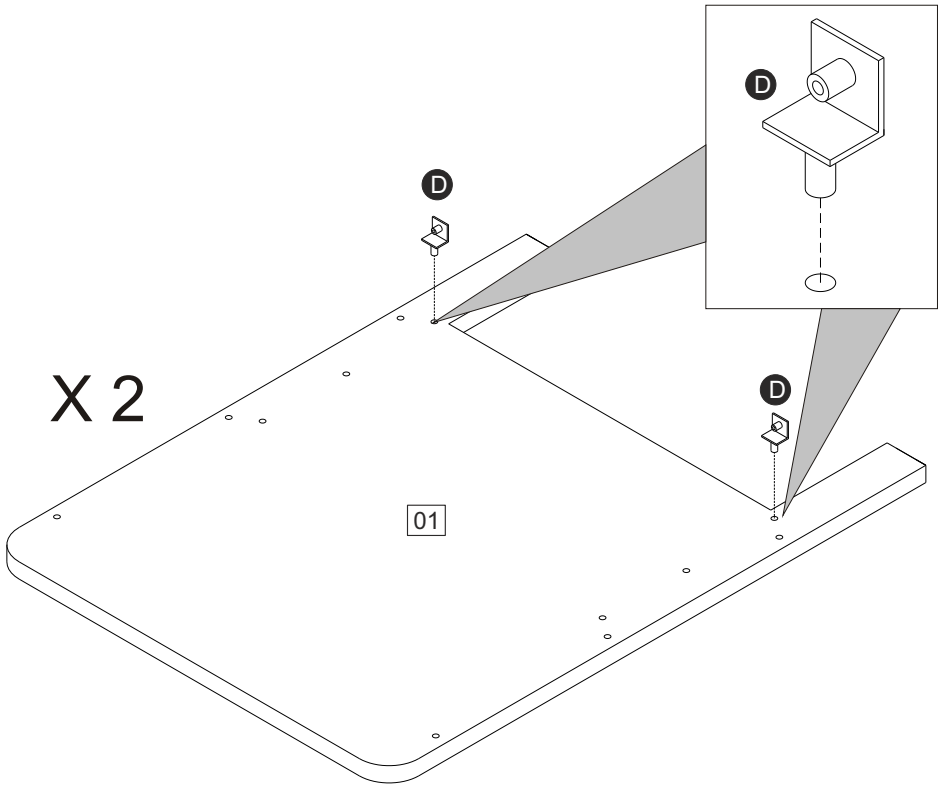

Step 2

Fix side frames 02 to headboard/footboard using bolts Ⓐ and allen key Ⓑ .

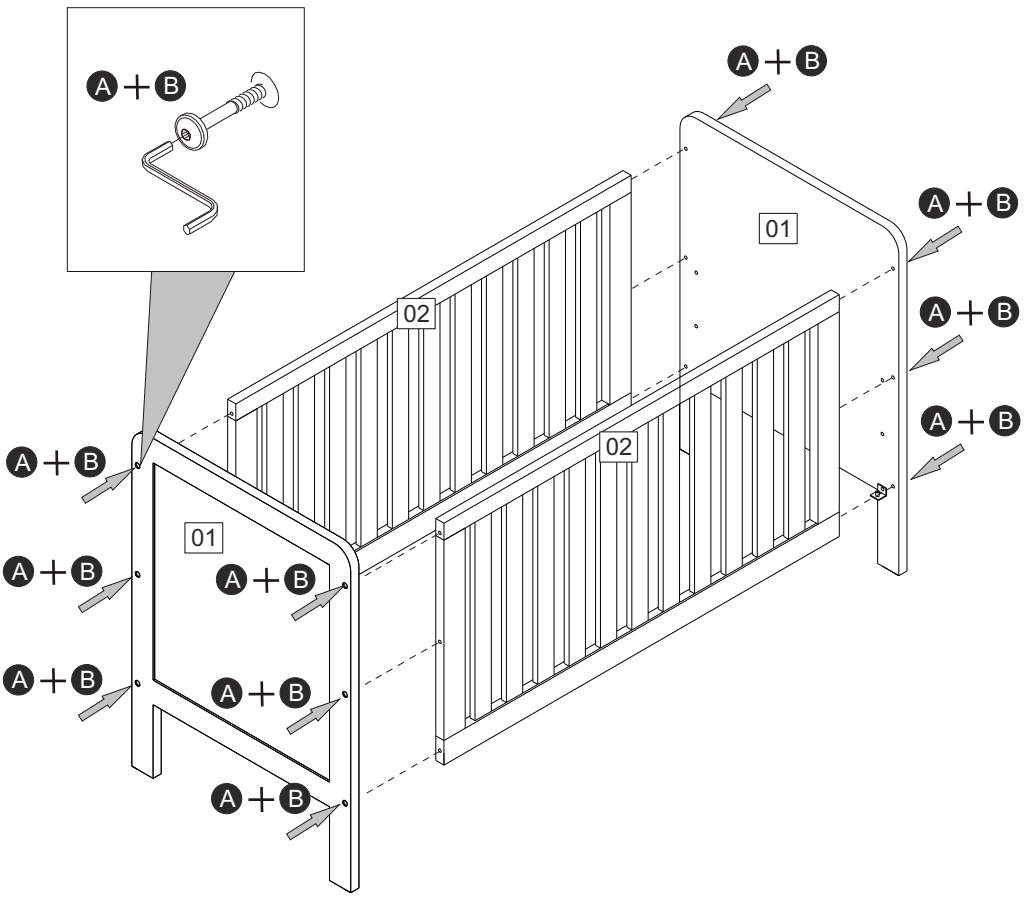


Assembly Instructions

Step 3


Fix slats 04 to the slats support 03 using screws C . Make sure to leave 20mm from the edges of the slats support and 55mm between each slat.

Make sure slats are fully pushed to the sides of the slat support before fixing.

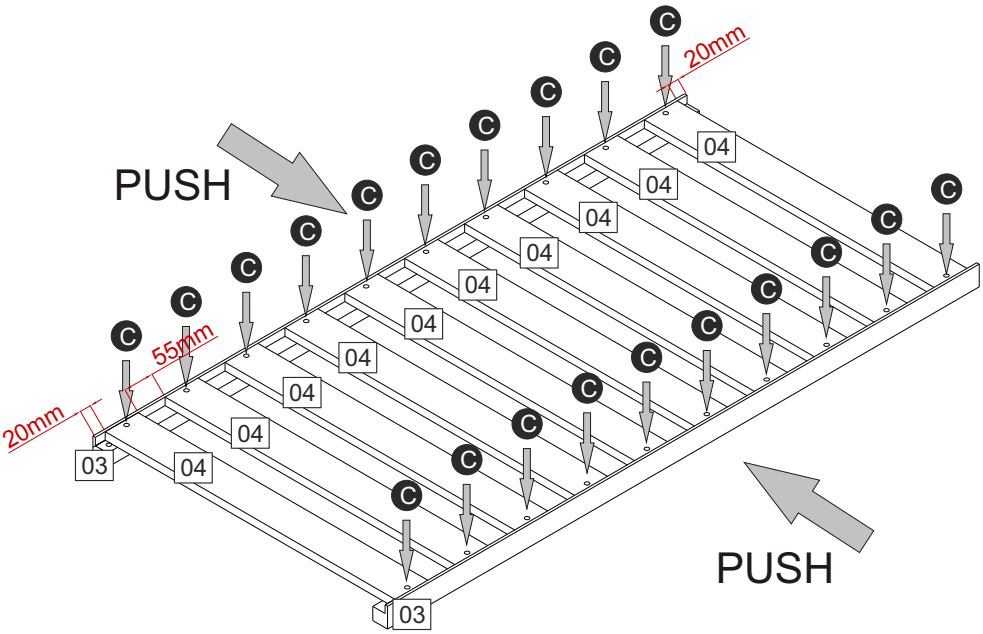

Step 4

Insert slats into the pre-assembled furniture making sure it is fitted to the metal supports.

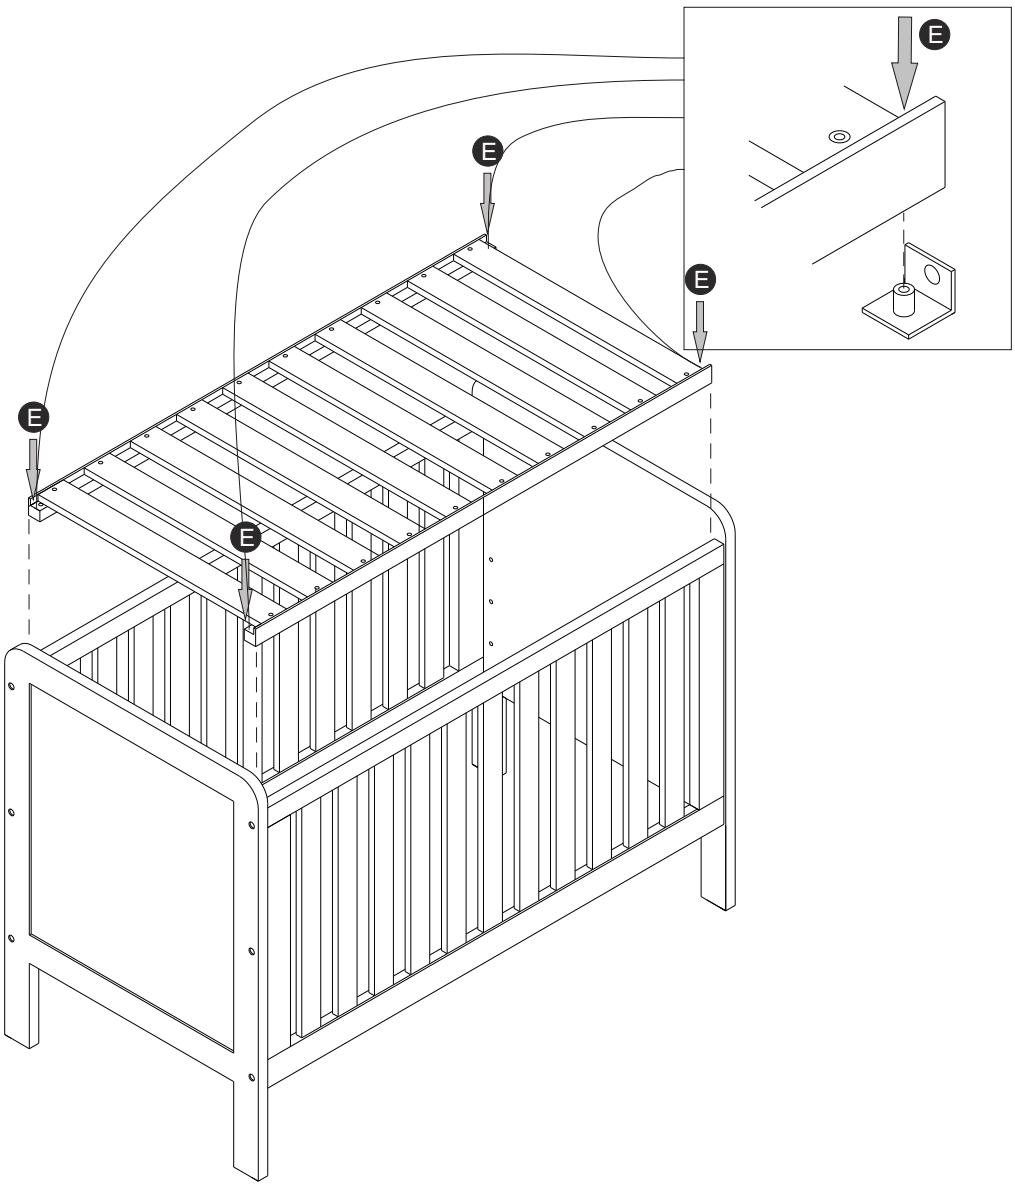

Assemble is complete.