
COT / TODDLER BED

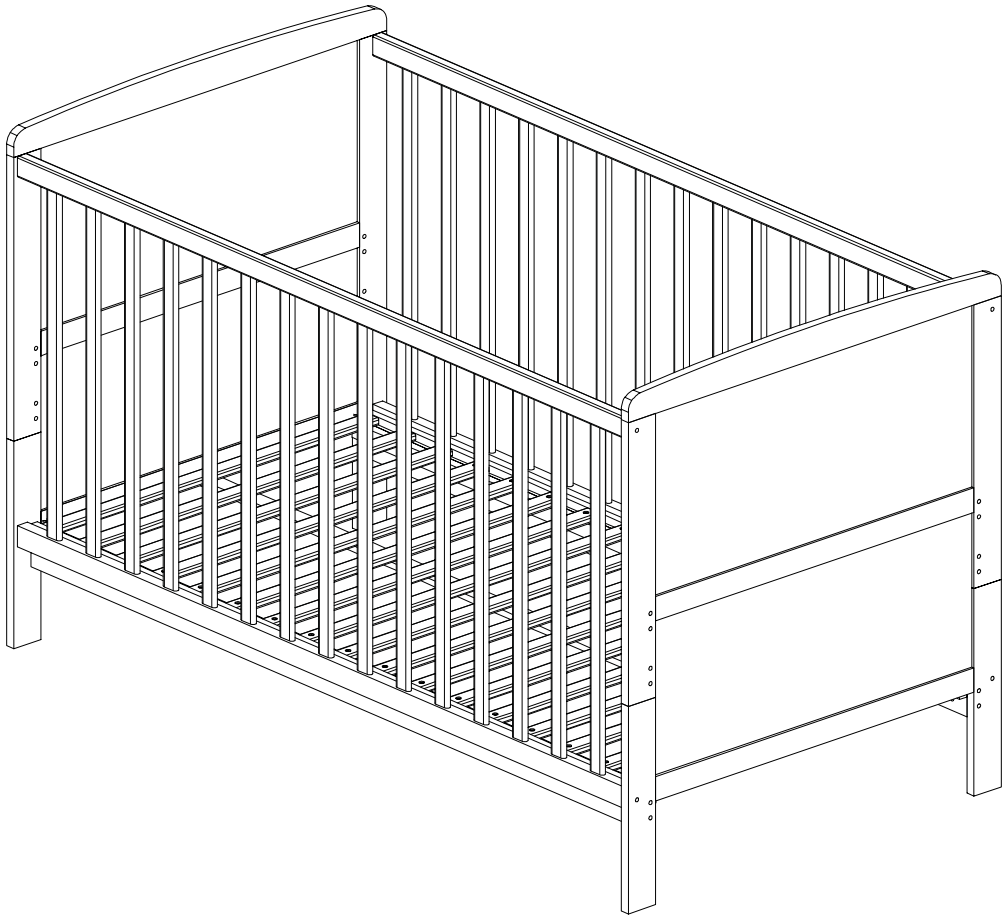

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

Important notes

The Babystart cot / toddler bed is designed to be used from birth to approximately 4 years old or 50kg.
The cot can be converted into a toddler bed.
Once assembled, this cot / toddler bed is not designed to be dismantled, transported and reassembled.
Do not discard any packaging until you have checked the parts against the list below.
Please take a few minutes to read through the assembly instructions
Unpack your cot carefully onto a soft level surface such as a carpeted floor.
Familiarise yourself with the parts by comparing them with the checklist provided below.
The cot / toddler bed conforms to BSEN716:2008 and BS8509:2008+A1:2011 Safety Standards for Cots and Children's bed.

Please sort out all parts before you begin to assemble the item. Make sure you always use the correct part.

Fittings contained in the box.

Ⓐ x 8 **Long bolt** 	Ⓑ x 16 **Nut** 	Ⓒ x 8 **Short bolt** 

Ⓓ **Allen key**




Warning !
Keep all components out of the reach of children.


Tools needed.




Wooden parts contained in the box.

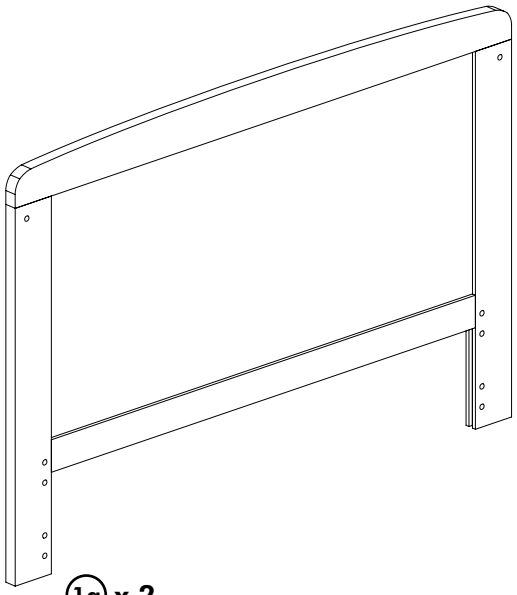


1a x 2

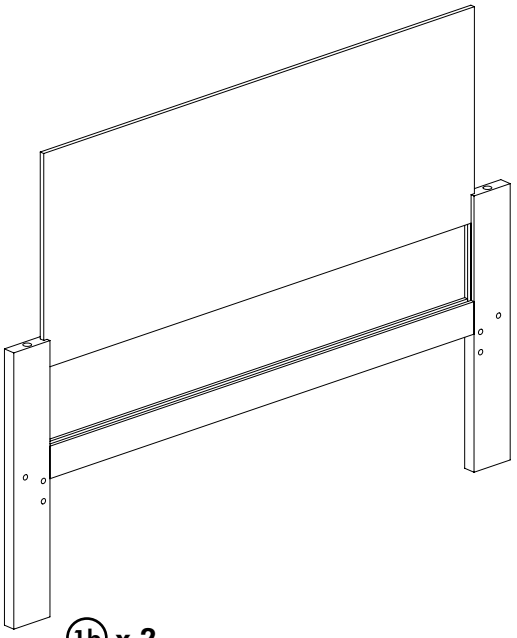

1b x 2

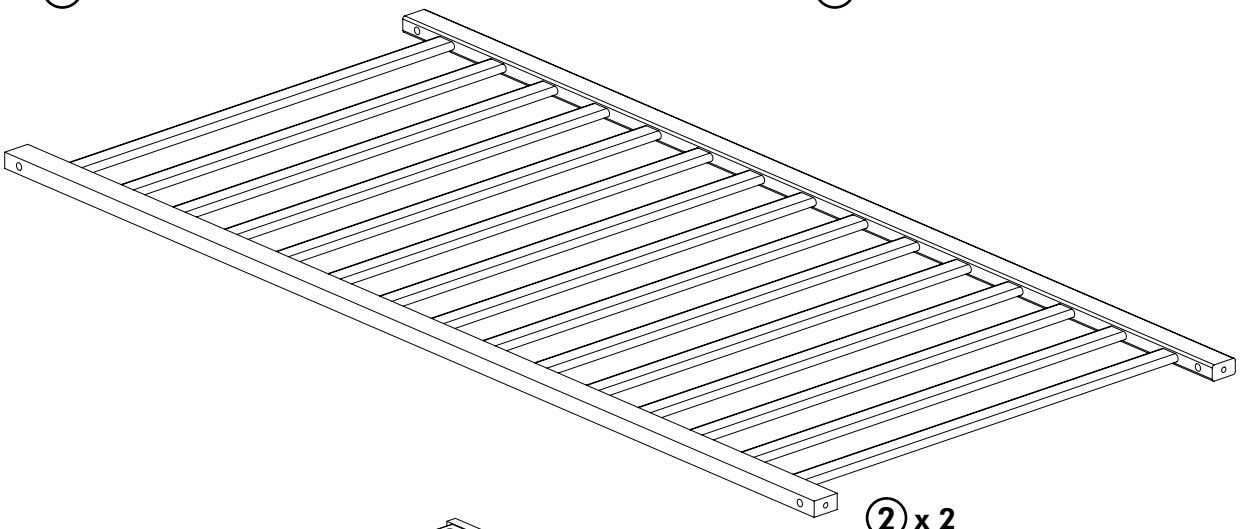


2 x 2

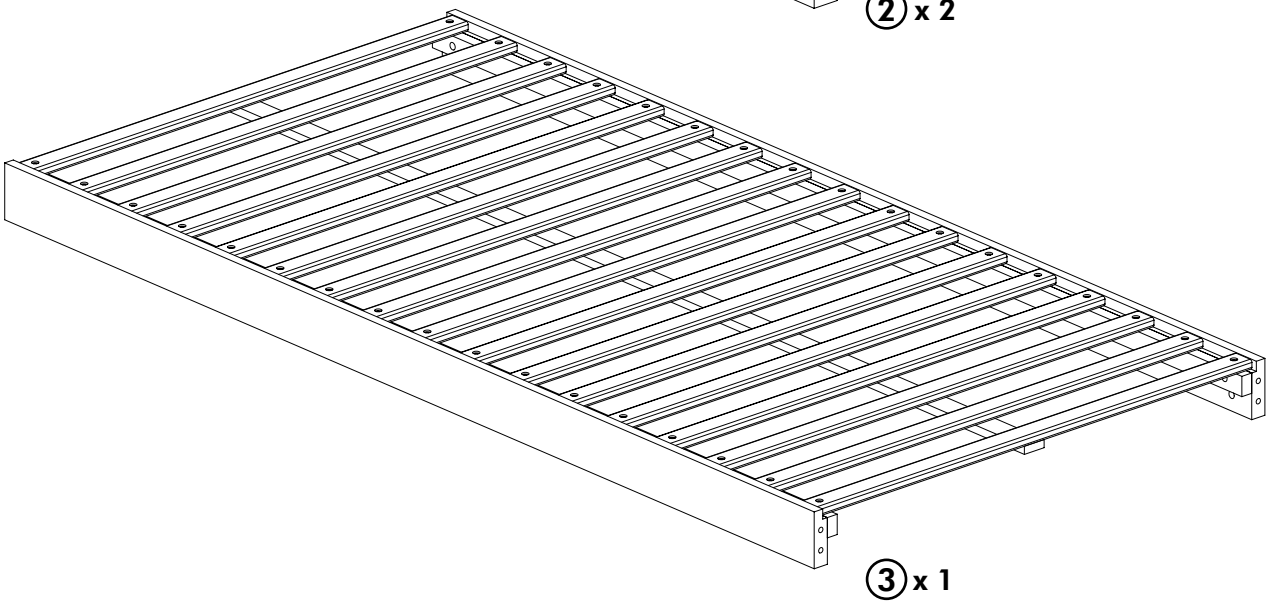

3 x 1

Key diagram.

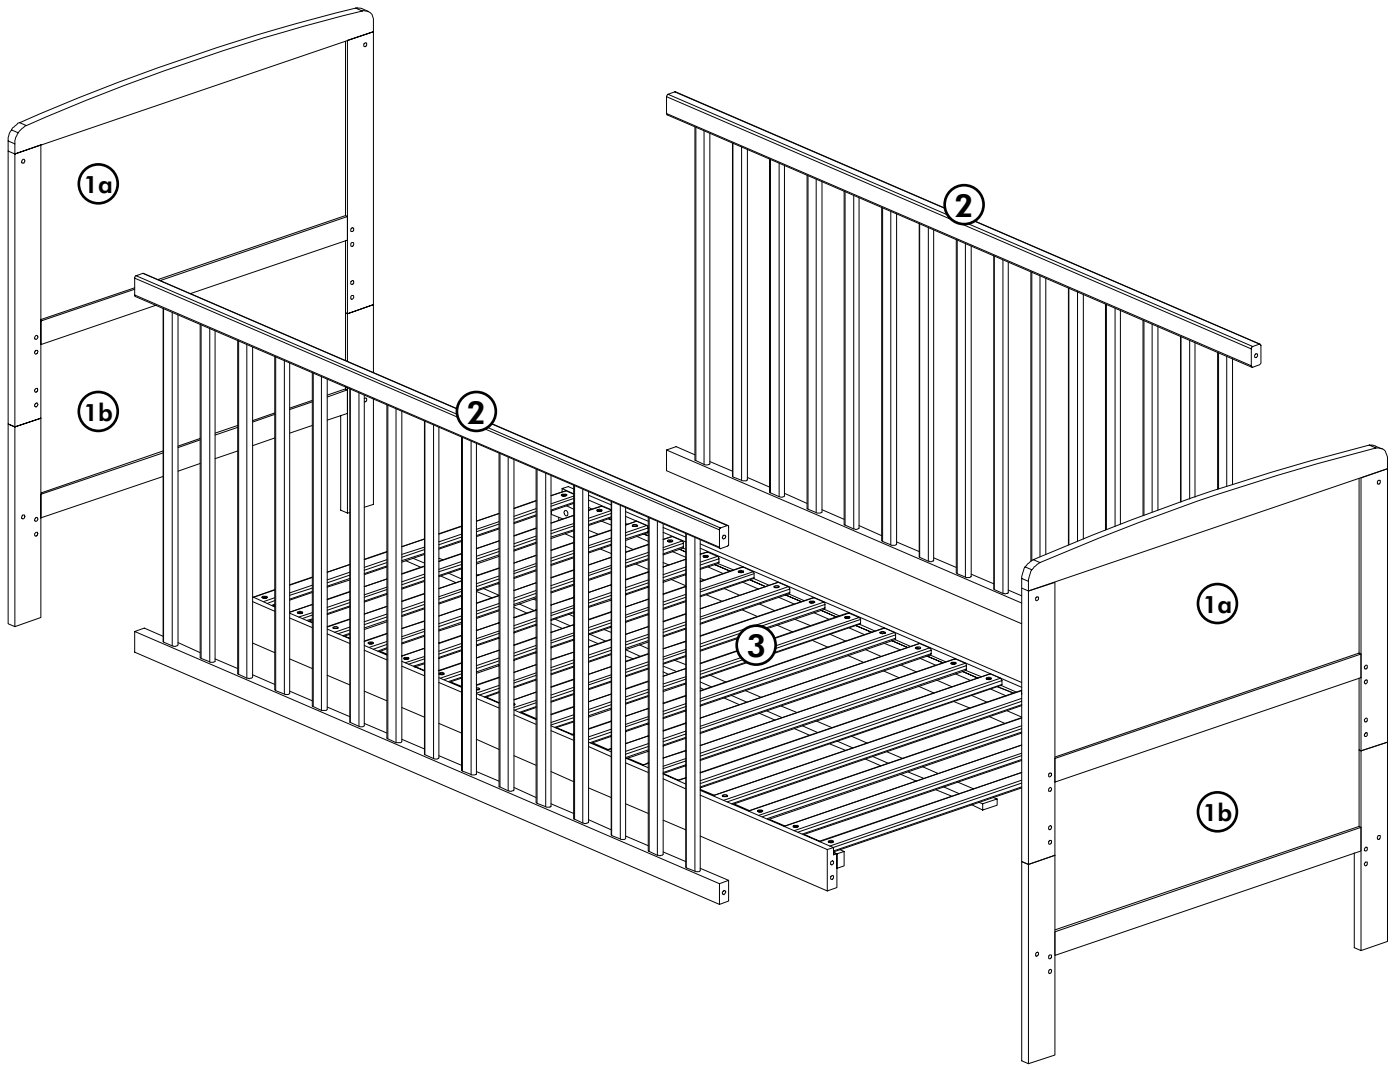


Cot


1. Fitting the bed base


Ax8


Bx8


Dx1

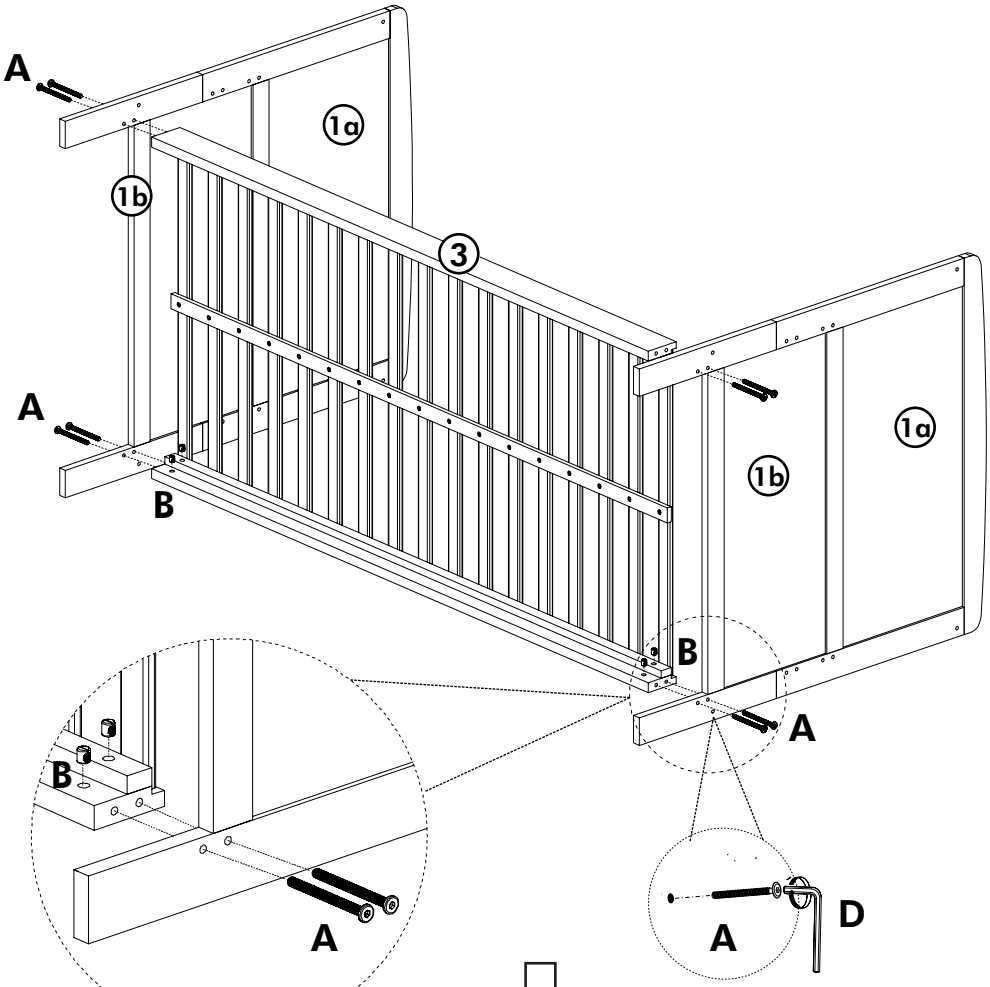

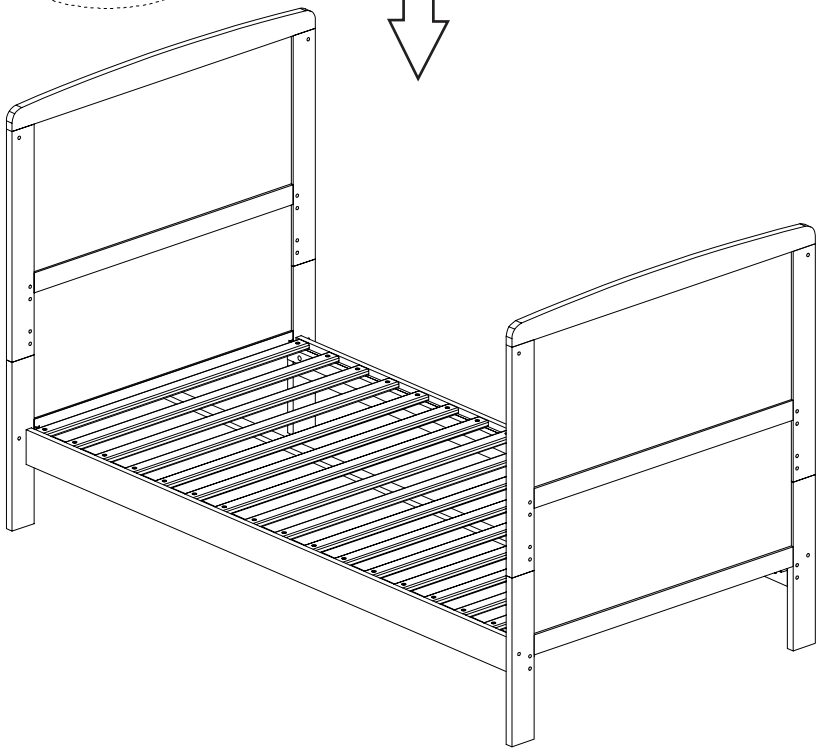


2. Fitting the side frames


Cx8


Bx8


Dx1

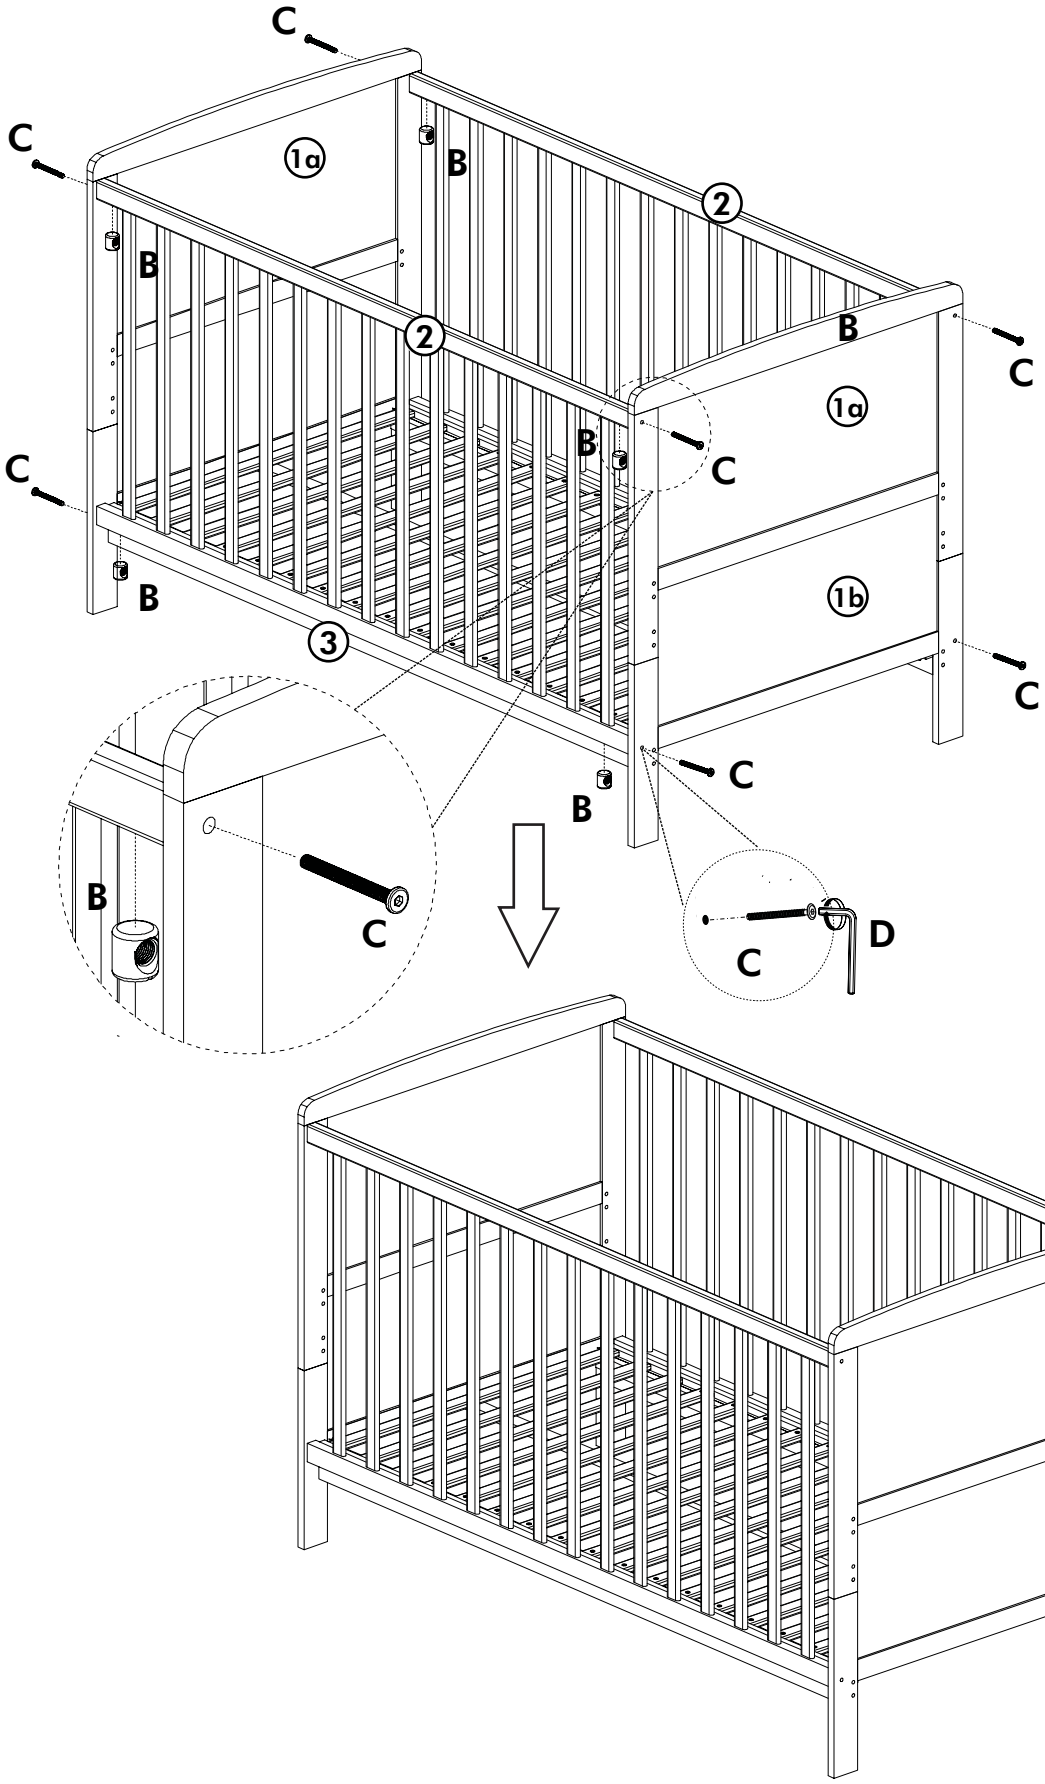



Toddler bed


1. Unscrew the side and the base




Dx1

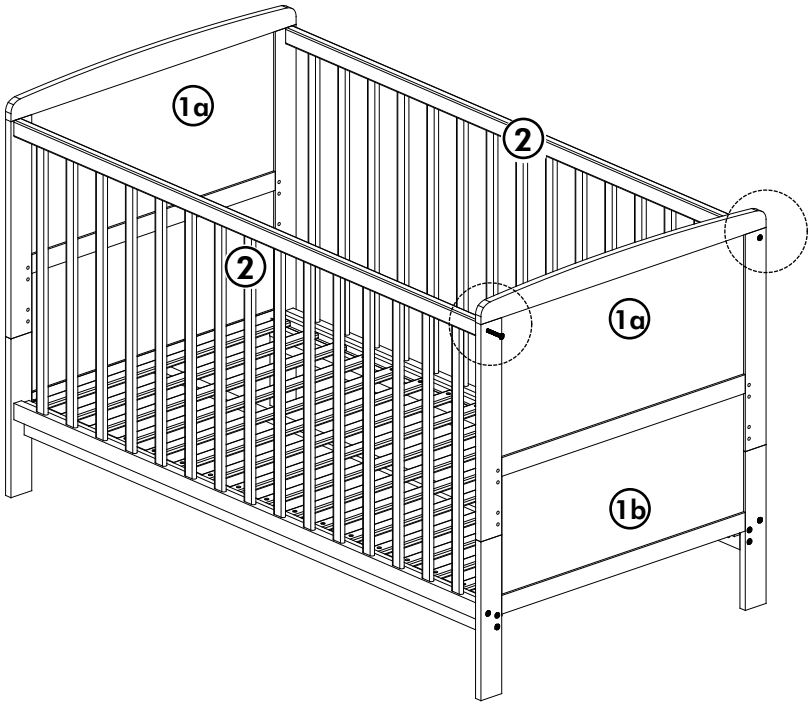


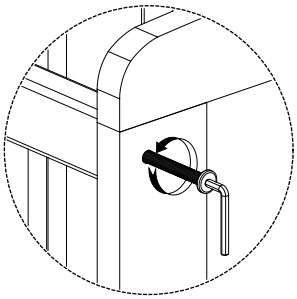

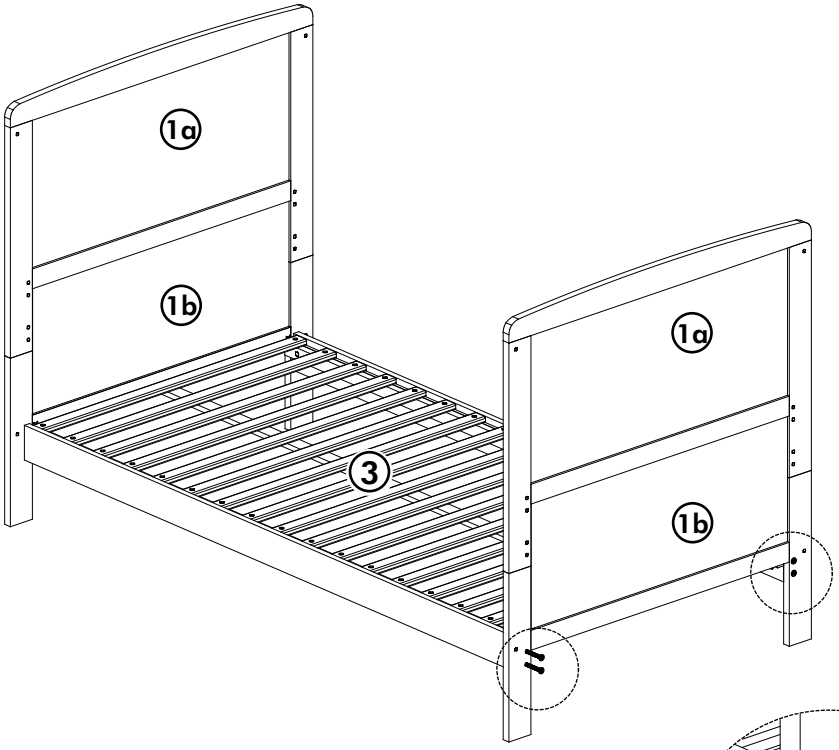

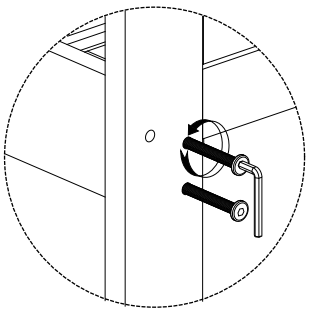

2. Taking the end panels into parts (1a) & (1b)

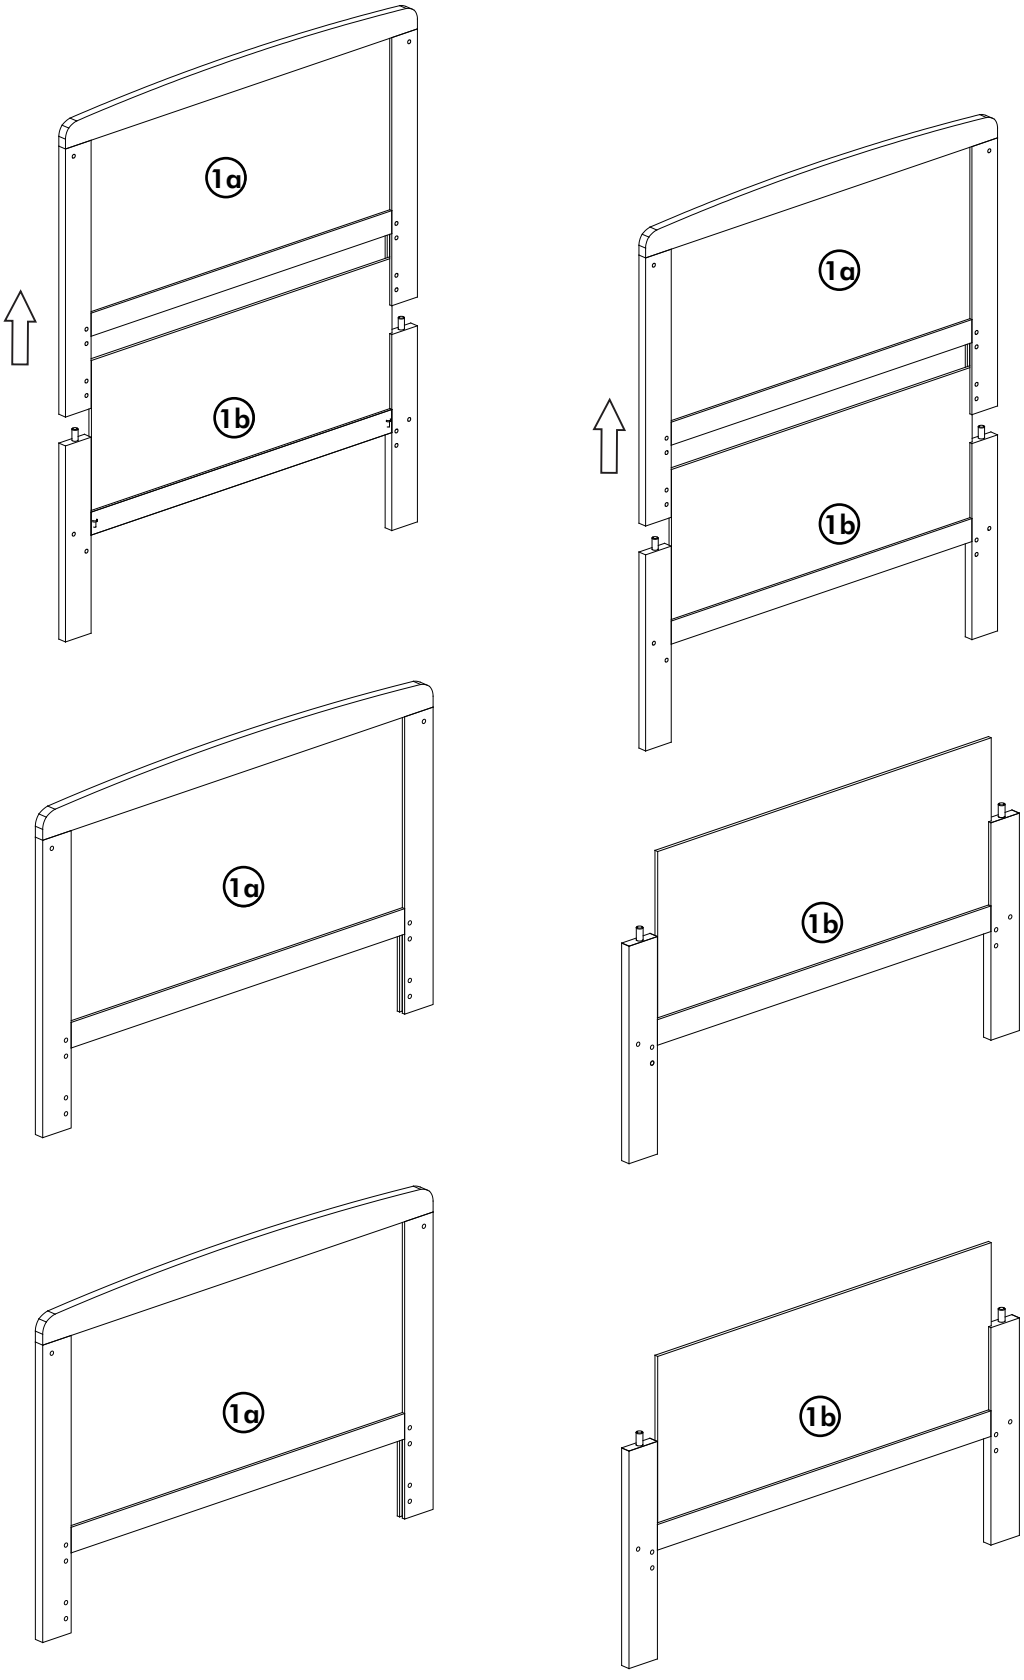



3. Fitting the bed base


Ax8


Bx8


Dx1

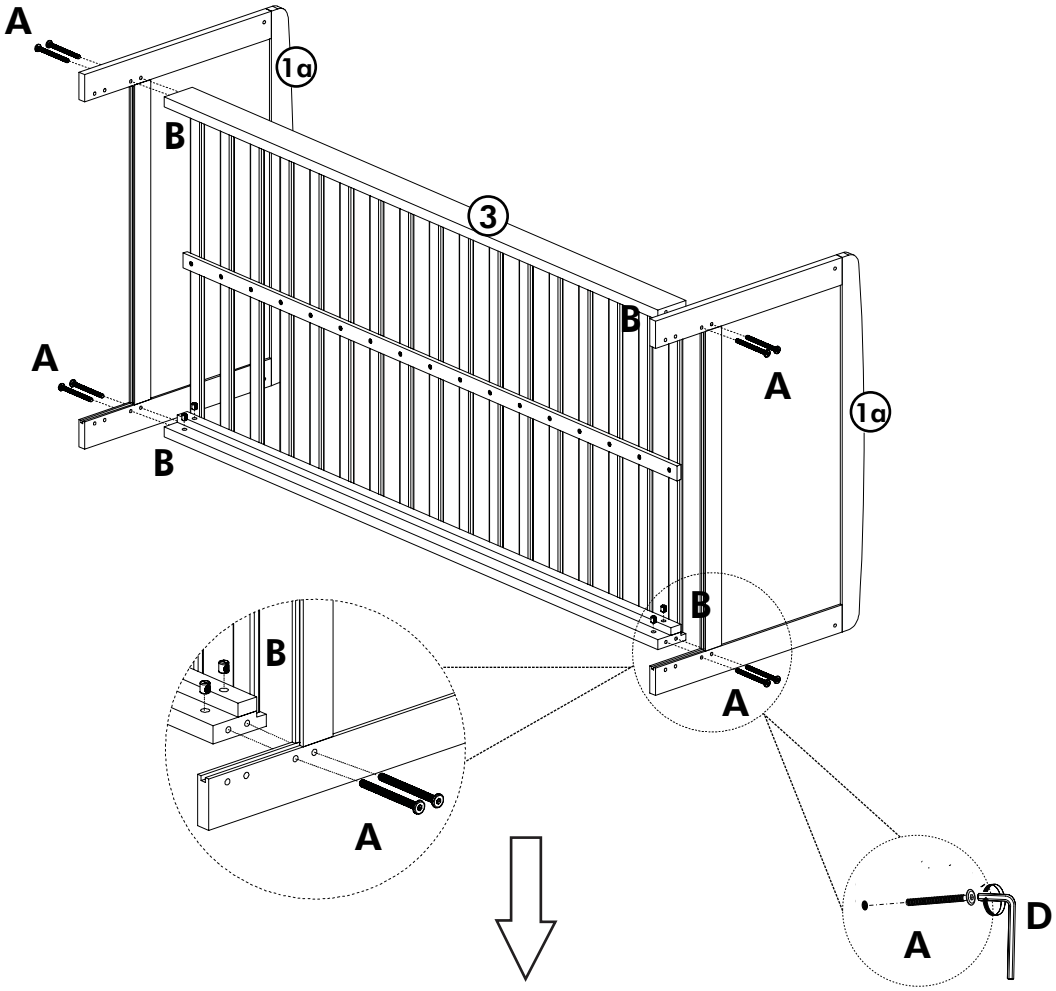

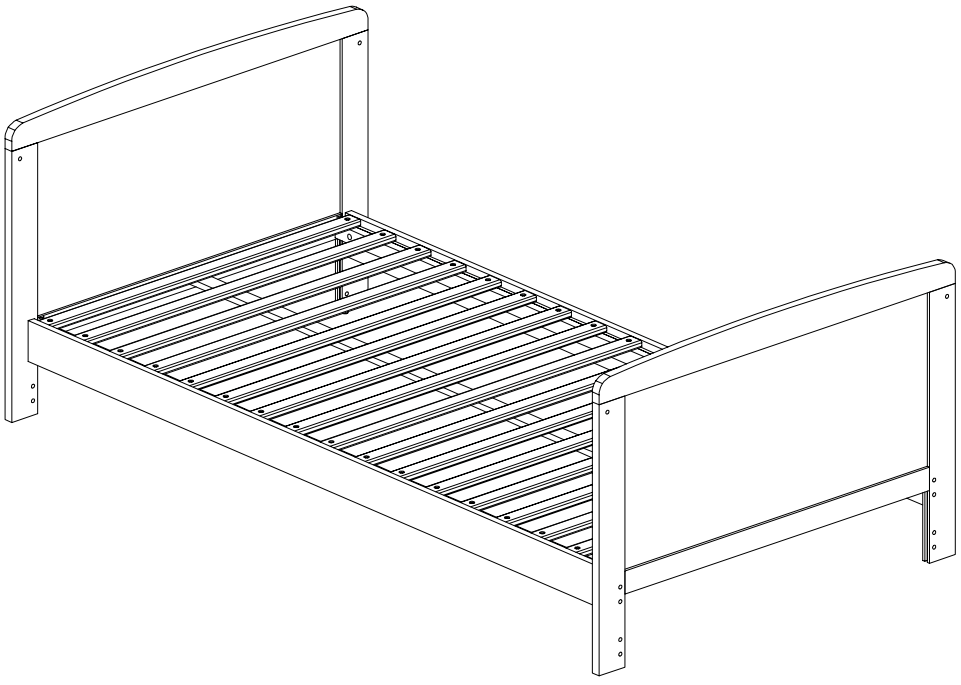

Care and Safety

WARNINGS:

1. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the cot.
2. Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer.
3. Do not leave anything in the cot or place the cot close to another product, which could provide a foothold or present a danger of suffocation or strangulation, e.g. strings, blind/curtain cords, etc.
4. Do not use more than one mattress in the cot.
5. Do not place this child's bed near heat sources, windows, blinds, strings, curtain cords and other furniture.

ADDITIONAL INFORMATION:

1. Do not allow children to climb the cot. The safety of your child is your responsibility.
2. Before use, please ensure each item of cot is on a stable, level surface.
3. Never pivot or drag the cot / toddler bed when moving. The cot / toddler bed must always be lifted by at least two people.
4. To avoid the risk of suffocation, keep all plastic bags and packaging out of reach of babies and young children.
5. The base can be fixed in 3 positions. The lowest base position is the safest and that the base should always be used in that position as soon as the baby can sit unaided.
6. The recommended mattress size for this cot / toddler bed is 70cm (width) x 140cm (length). The thickness of the mattress used shall be such that the internal height (surface of the mattress to the upper edge of the cot frame) is at least 500mm in the lowest position of the cot base and at least 200mm in the highest position of the cot base.
7. The mattress to be used with this cot / toddler bed should be no more than 30mm shorter or narrower than the internal length or width of the cot / toddler bed.
8. All assembly fittings should always be tightened properly and that fittings should be checked regularly and retightened as necessary.
9. To prevent injury from falls, when the child is able to climb out of the cot, the cot shall no longer be used for that child.
10. Children are likely to play, bounce, jump and climb on beds, therefore the child's bed should not be placed too close to other furniture or windows, and should be placed either tight to any wall or have a gap of 300mm between the wall and the side of the bed.
11. Recommendation that any additional or replacement parts are obtained from the manufacturer or distributor.

CARE OF YOUR PRODUCT:


- Periodically check all fittings to ensure that none have come loose. Any loose fittings must be tightened using the correct tool.
- Your cot / toddler bed can be cleaned by wiping with a damp cloth and drying with a soft dry cloth.
- Never clean with abrasives, ammonia based, bleach based or spirit type cleaners.
- Take care when handling or moving the bed. Careless handling can damage wooden furniture.

ARGOS
Avebury 489-499 Avebury Boulevard Milton Keynes
MK9 2NW
Helpline: 08456 400 800

Babystart Delfina - Cot Bed

Assembly Instructions - Please keep for future reference

377/4467
377/4474

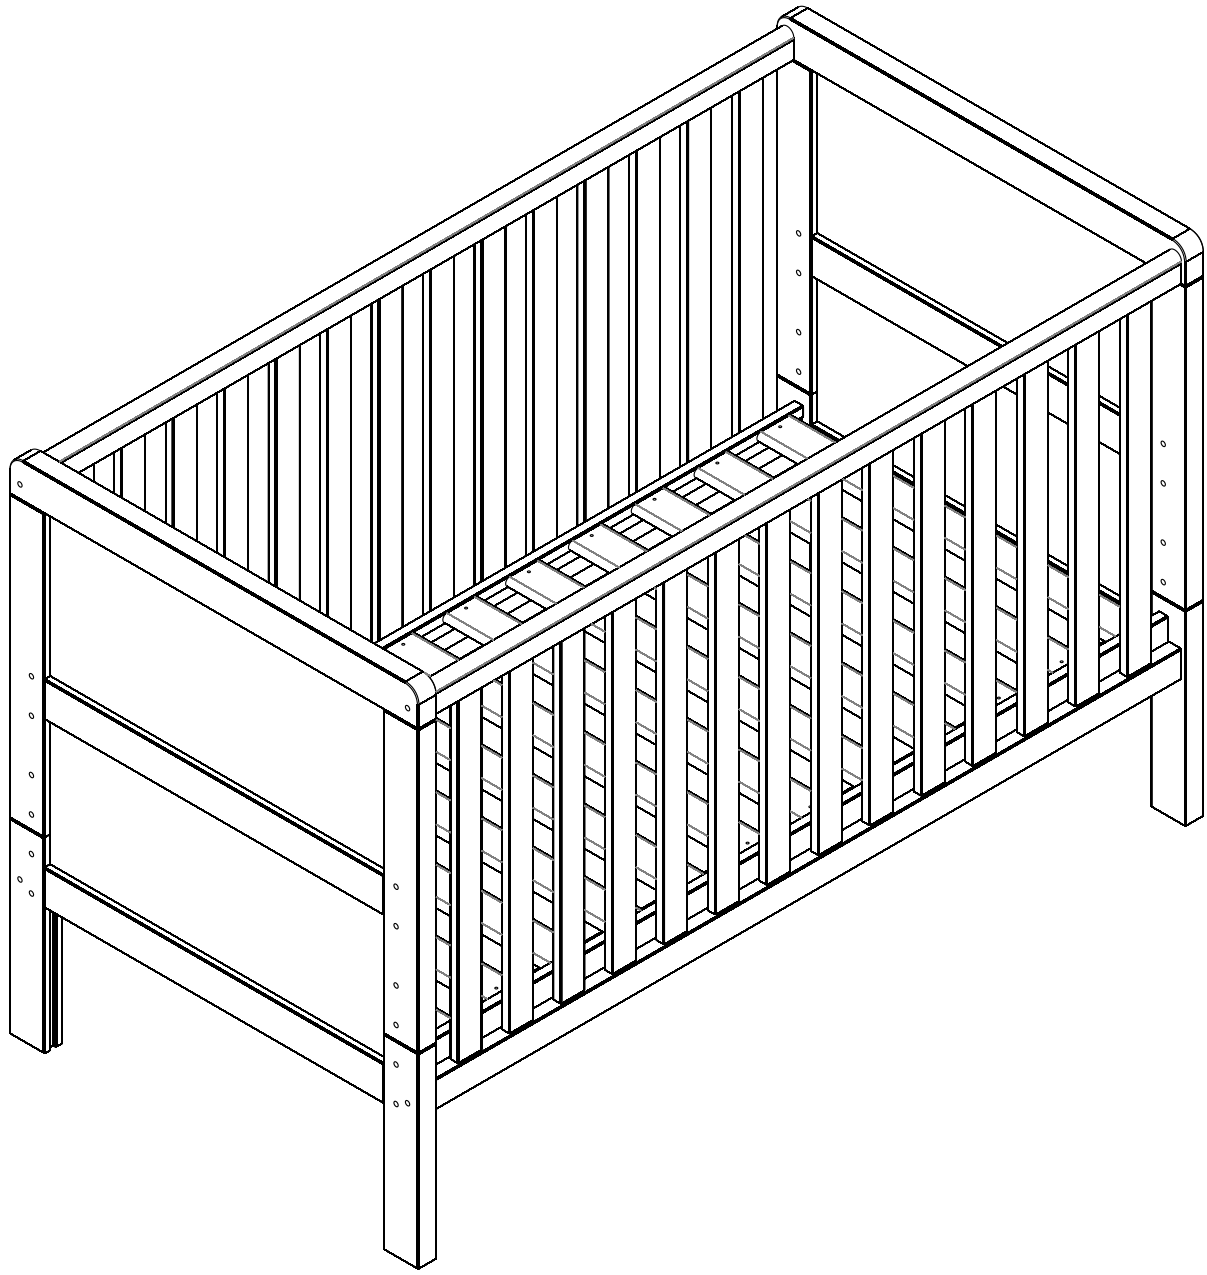

Dimensions

Width - 145cm
Depth - 76.5cm
Height - 94cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 30/01/13

Safety and Care Advice

Important – **Please read these instructions fully before starting assembly**

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.

· Make sure you have enough space to layout the parts before starting.

· This product contain Natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Do not stand or put weight on the product, this could cause damage.

· Assemble the item as close to its final position (in the same room) as possible.



· We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· From time to time check that there are no loose screws on this unit.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Warning !


IMPORTANT KEEP IT FOR FUTURE REFERENCE, READ IT CAREFULLY.

- In cot mode, three base height positions are possible. The lowest position is the safest and should always be used once the child can sit unaided.
- The thickness of the mattress should be such that the distance between the top of the mattress and the top of the sides should be no less than 500mm with the base in its lowest position and no less than 200mm with the base in its highest position (indicated by printed line on cot frame).
- Do not leave anything (large toys etc.) in the cot which could provide a foothold or present a danger of suffocation or strangulation.
- The cot is suitable for a mattress of 1400mm in lenght and 700mm in width. For safety reasons, the minimum mattress size to be used in this cot must be 1380mm in length and 680mm in width.
- Do not position too close to strong sources of heat e.g. open fires, electric fires or gas fires.
- Regularly check the security of fittings and ensure there are no loose screws which could trap parts of the body, or clothing (e.g. strings, necklaces or ribbons for dummies) which would pose a risk of strangulation.
- Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer
- Do not use more than one mattress in the cot
- The cot shall no longer be used when the child is able to climb out of the cot to prevent injury from falls
- Designed and manufactured to BS EN 716-1: 2008


Note: *if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

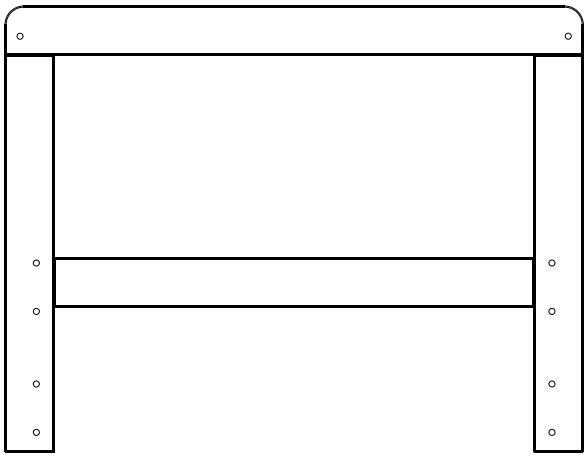


01 Headboard-top x 2 (59 x 76.5cm)

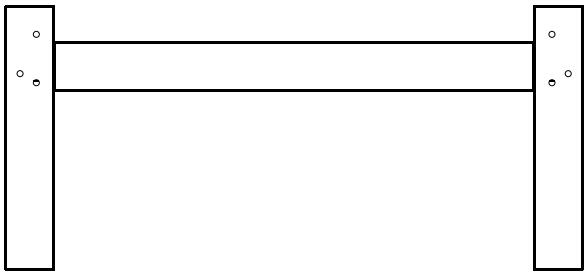


02 Headboard-bottom x 2 (35 x 76.5cm)




03 Headboard Panel x 2 (64.5 x 25cm)



04 Side frame x 2 (140 x 69cm)



05 Side rail x 2 (140 x 9cm)





06 Slat x 12 (66.4 x 6,7cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: **08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

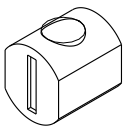A  1/4" x 40mm Bolt X 8	B  Allen key X 1	C  3,5 x 25mm Screw X 24
D  8,0 x 30mm Wooden dowel X 8	E  1/4” x 60mm Bolt X 8	F Barrel Nut x 8 


Tools required




Phillips screwdriver (medium & large)

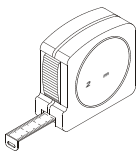

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


COT

Step 1

Fitting dowels

Insert 4 wooden dowels (D)
Into headboard-bottom 02

X 2

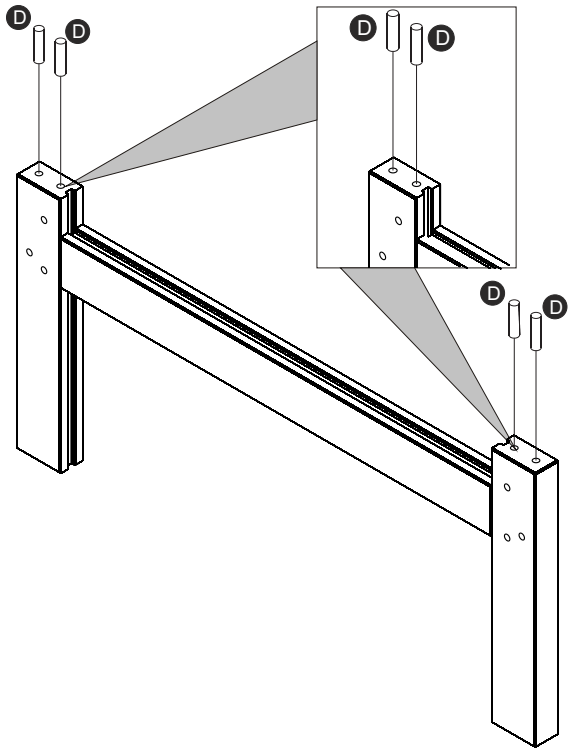


Step 2

Assembling headboards

Insert headboard panel 03,
into headboard top 01 .
Then attach headboard
bottom 02 as shown.

X 2

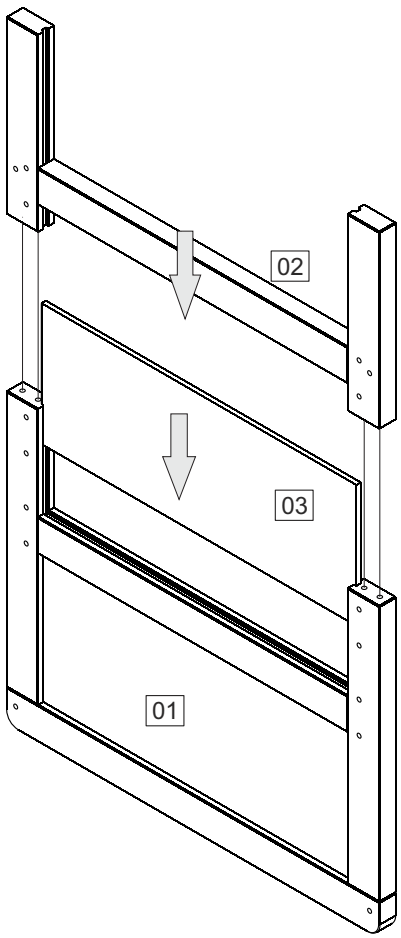

Assembly Instructions

Step 3

Assembling cot bed

a) Insert barrel nuts Ⓕ into side rails 05 as shown.


b) With help fix side rails 05 to the desired height position in the assembled headboards using bolts Ⓔ and allen key Ⓑ.

Attention!
To the correct position of the side rails before fixing.

Attention!
Ensure mattress marks on headboard are facing inward.

Note: Do not fully tight bolts.


Important: Note there are three height positions for the base. The lowest position is the safest.Please refer to the first page, warning section for more information.

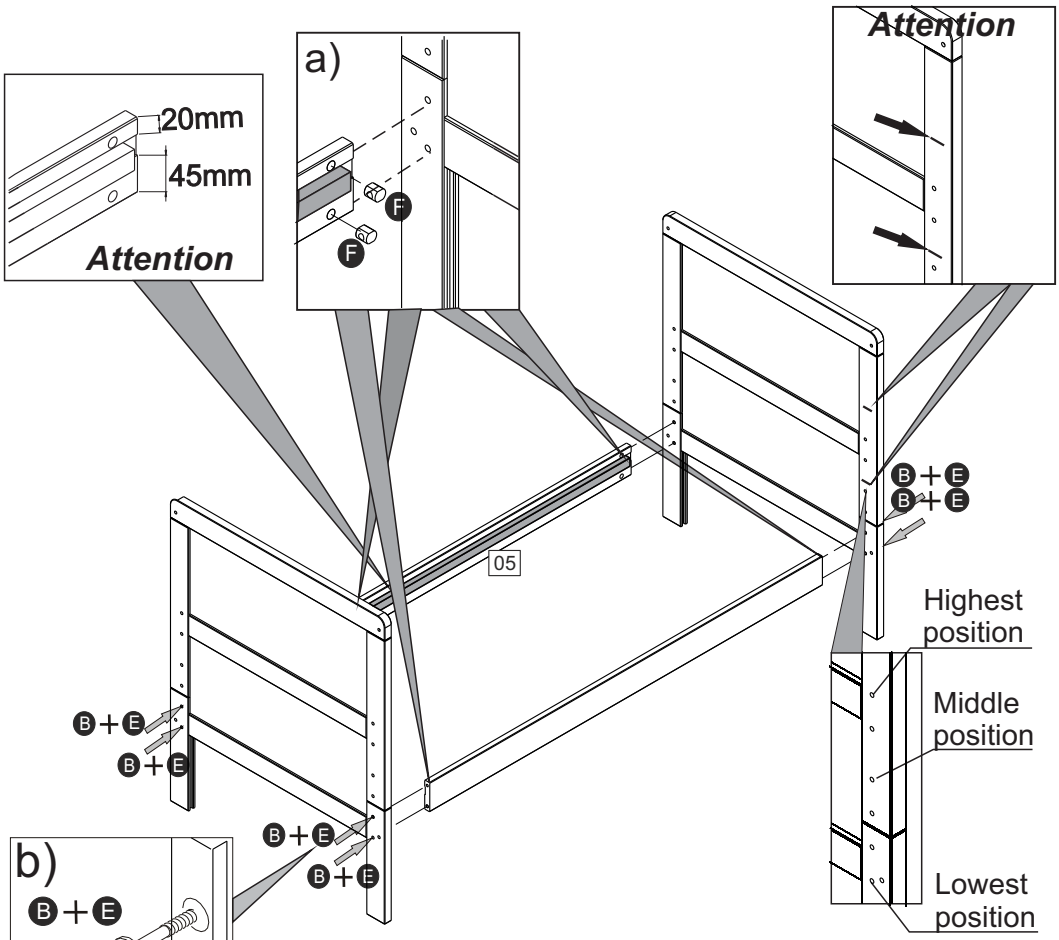

Step 4

Carefully fit side frames 04 to the headboards as shown, then fix them using bolts Ⓐ and allen key Ⓑ.

Finish tighten bolts on side rails using allen key Ⓑ.

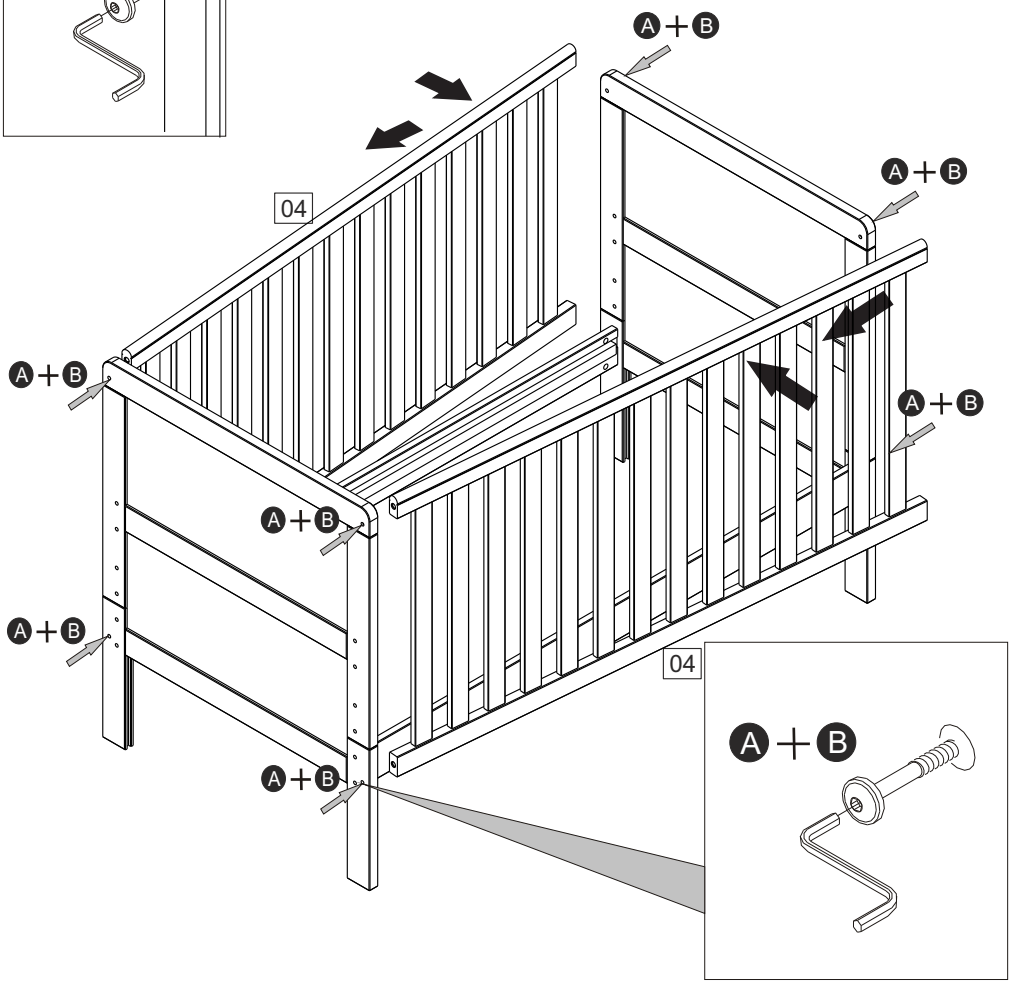

Assembly Instructions


Step 5

Assembling cot base

Fix slats 06 to the side rails 05 using screws C.

Fix first slats at 20mm from the side rails ends, then work towards to the middle leaving a space of 50 mm in between each adjacent slat, as shown.

Make sure slats are fully pushed to the sides of the side rails before fixing. And countersunk holes are facing up.

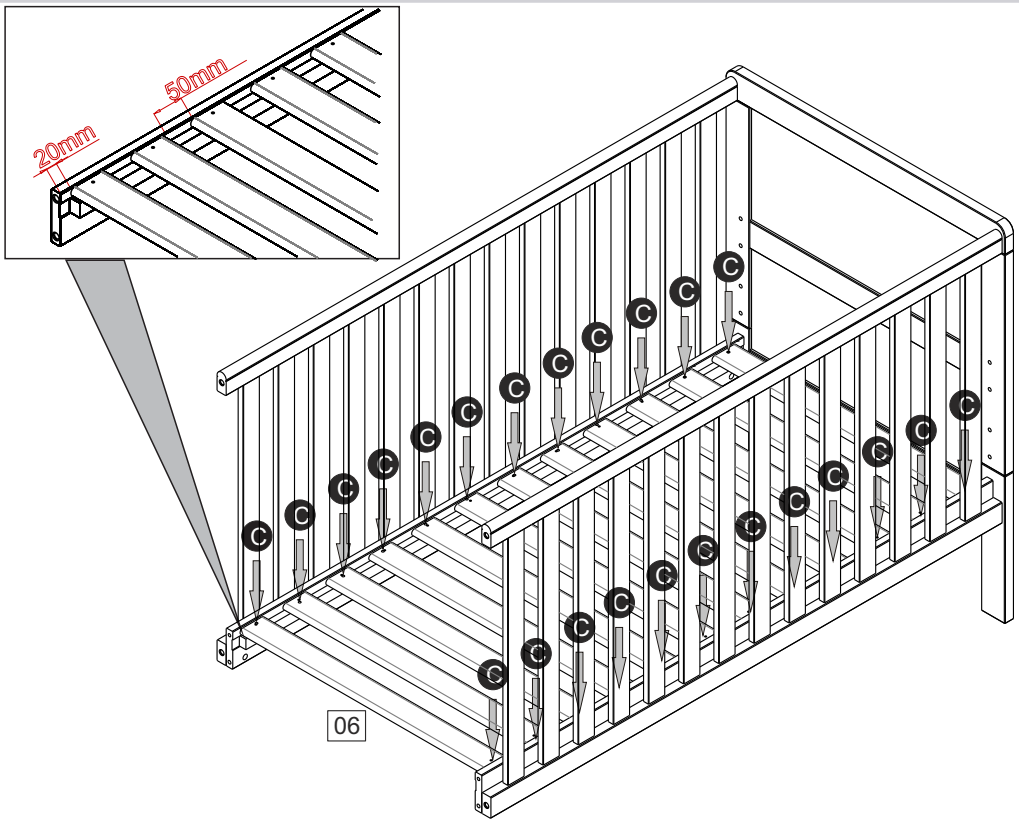


JUNIOR BED

Step 1

Assembling junior bed

Fix cot base to the headboard top 01 using bolts E and allen key B.

Attention to the correct position of the side rails before fixing

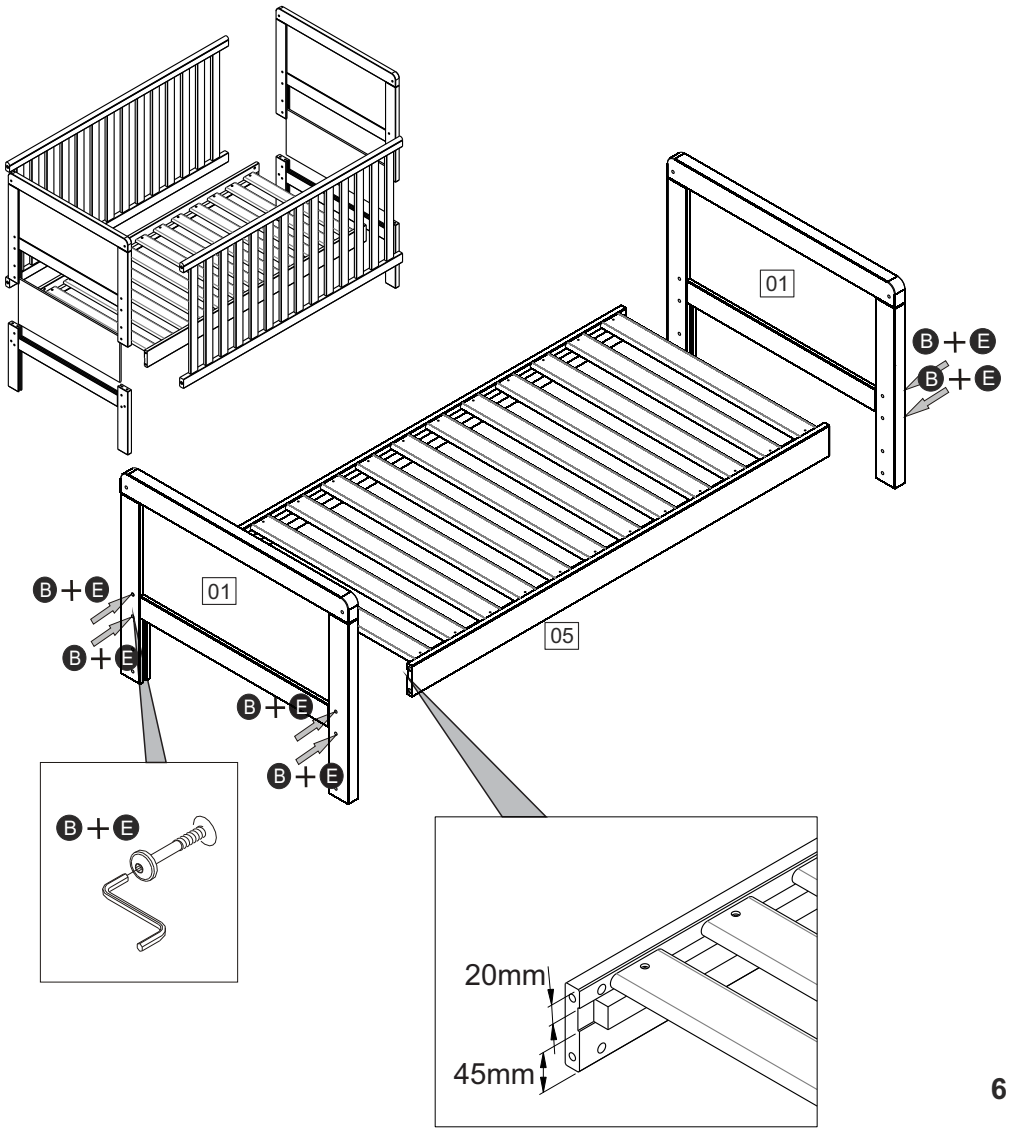

Assemble is complete.