
Mendoza - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

228/9953

244/8316

258/3044

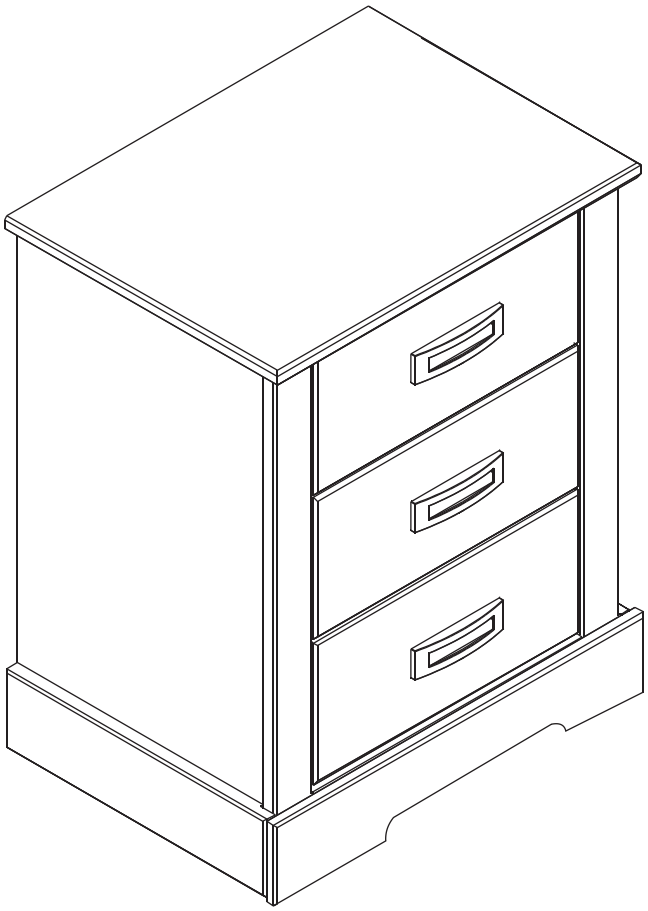

Dimensions

Width - 47.6cm
Depth - 35.4cm
Height - 60.1cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

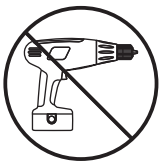

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Top panel
(47.6 x 35.4cm)

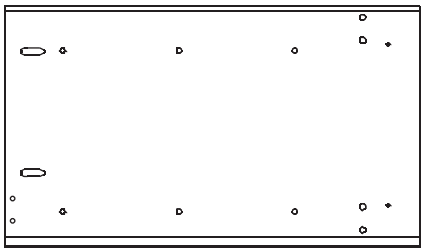


2 Left side panel
(57.6 x 33.8cm)

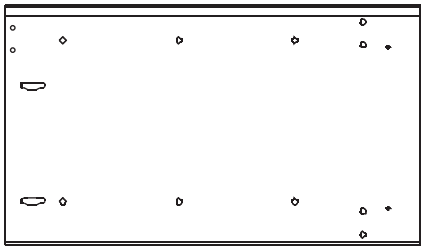


3 Right side panel
(57.6 x 33.8cm)



4 Bottom front rail
(40.8 x 6.4cm)




5 Back rail (40.8 x 5cm)




6 Front plinth (47.5 x 9cm)




7 Side plinth x 2
(33.7 x 8.8cm)



8 Drawer runner x 6
(29 x 5.1cm)



9 Back panel x 2
(51.4 x 21.2cm)

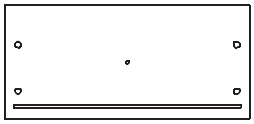

10 Drawer front x 3
(34.2 x 15.6cm)




11 Drawer left side x 3
(29 x 13.5cm)




12 Drawer right side x 3
(29 x 13.5cm)



13 Drawer back x 3
(29.2 x 13cm)



14 Drawer bottom x 3
(30.4 x 28.9cm)










15 Top front rail
(40.8 x 5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

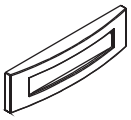A  Ø8x25mm Wooden dowel x 36	**B**  30mm Screw x 30	**C**  50mm Screw x 12
D  25mm Screw x 07	**E**  Handle x 03	**F**  22mm Bolt x 06
G  Profile 485mm x 01	**H**  Nails x 20	**I**  35mm Screw x 04
J  Ø8x35mm Long wooden dowel x 06	**K**  Ø6x25mm Thin wooden dowel x 04	


Tools required




Phillips screwdriver (medium & large)

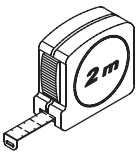

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting wooden dowels:

a: Insert dowels Ⓐ into the indicated parts.

b: Insert thin wooden dowels Ⓚ on top front rail 15 only.

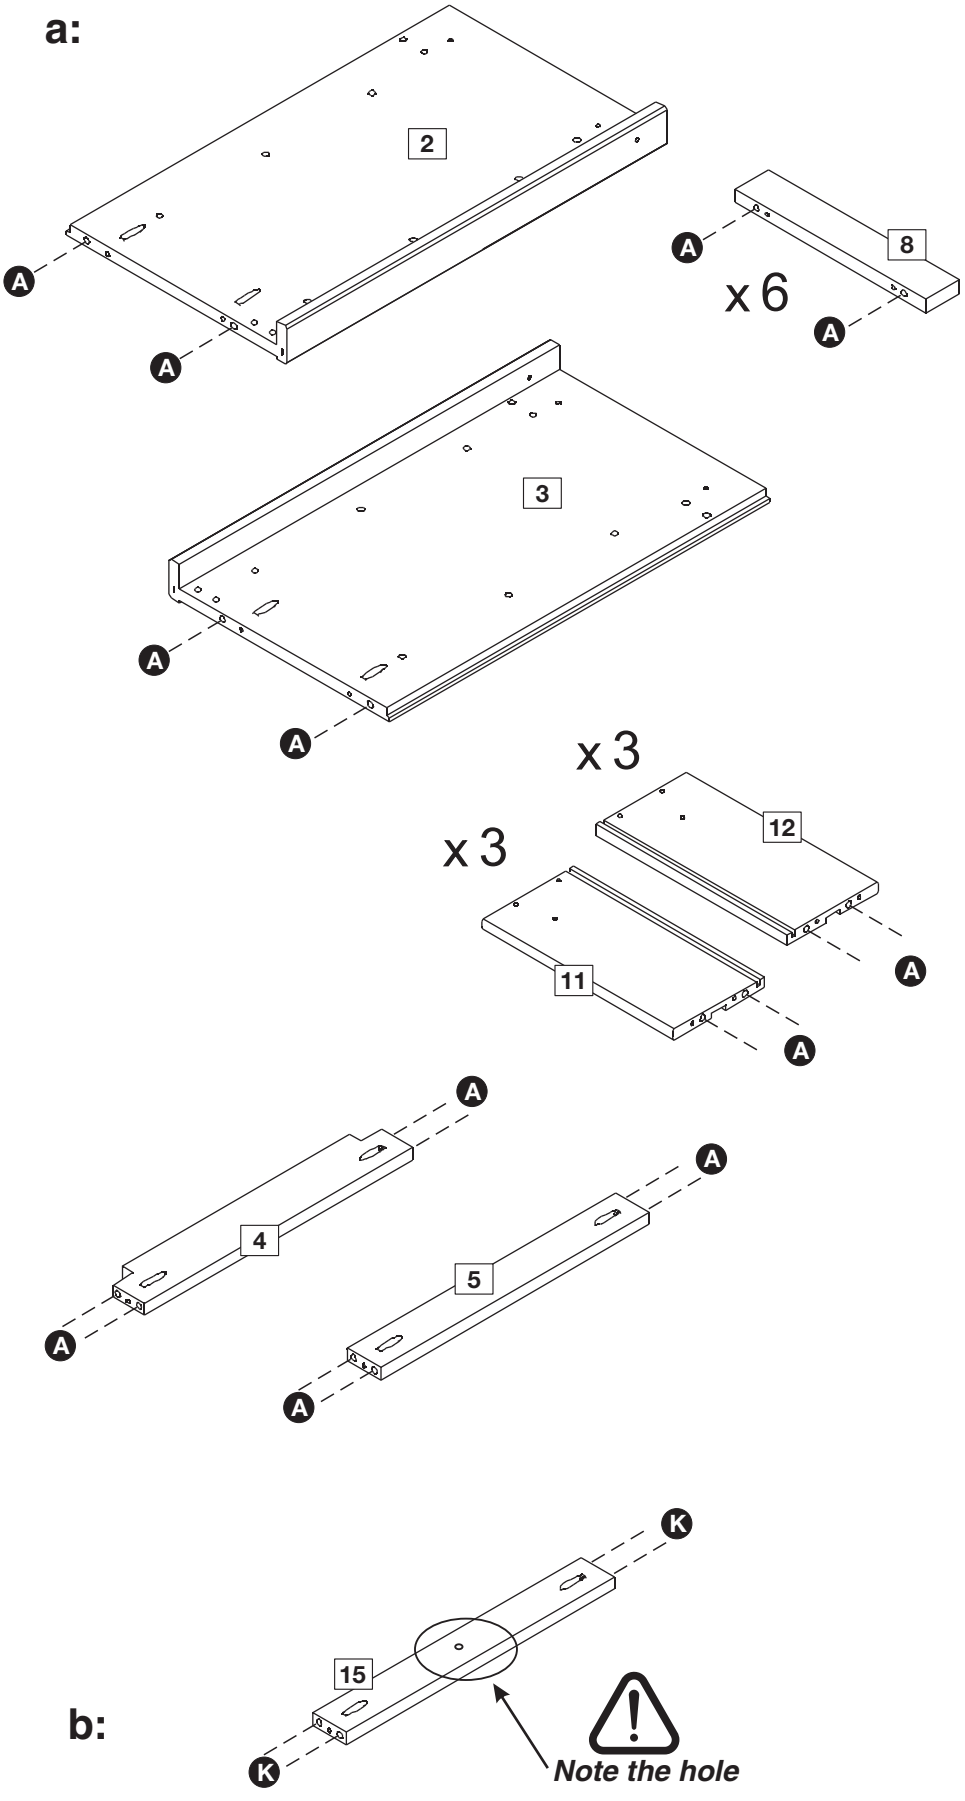


Assembly Instructions

Step 2

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the left side panel 2 using screws B.

Note: Holes on top front rail must be facing up as shown in the diagram.

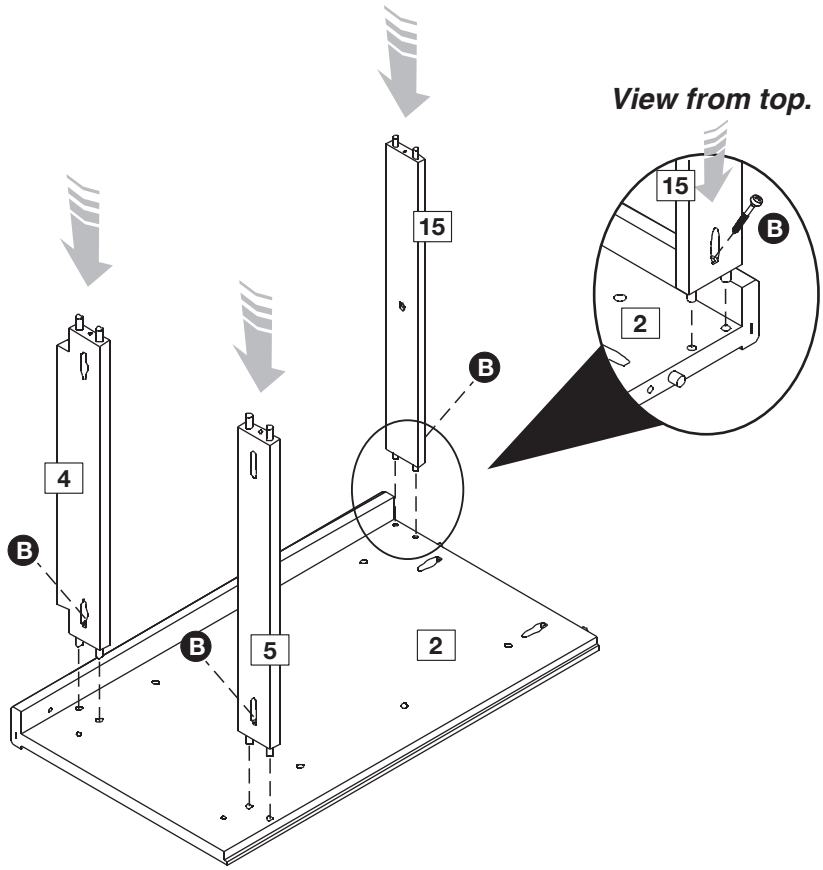


Step 3

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the right side panel 3 using screws B.

Note: Holes on top front rail must be facing up as shown in the diagram.

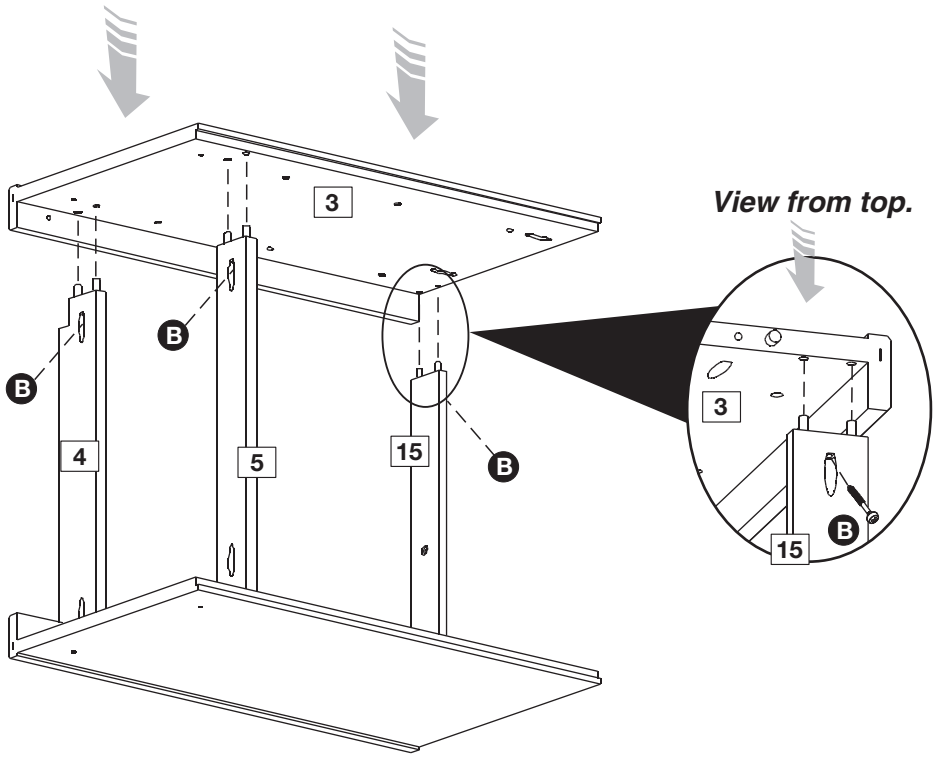


Step 4

Assembling cabinet;

Turn cabinet with its front facing up.

a: Fix the top panel 1 to the sides 2 and 3 using screws I.

b: Fix top front rail 15 to the top panel 1 using screws D.

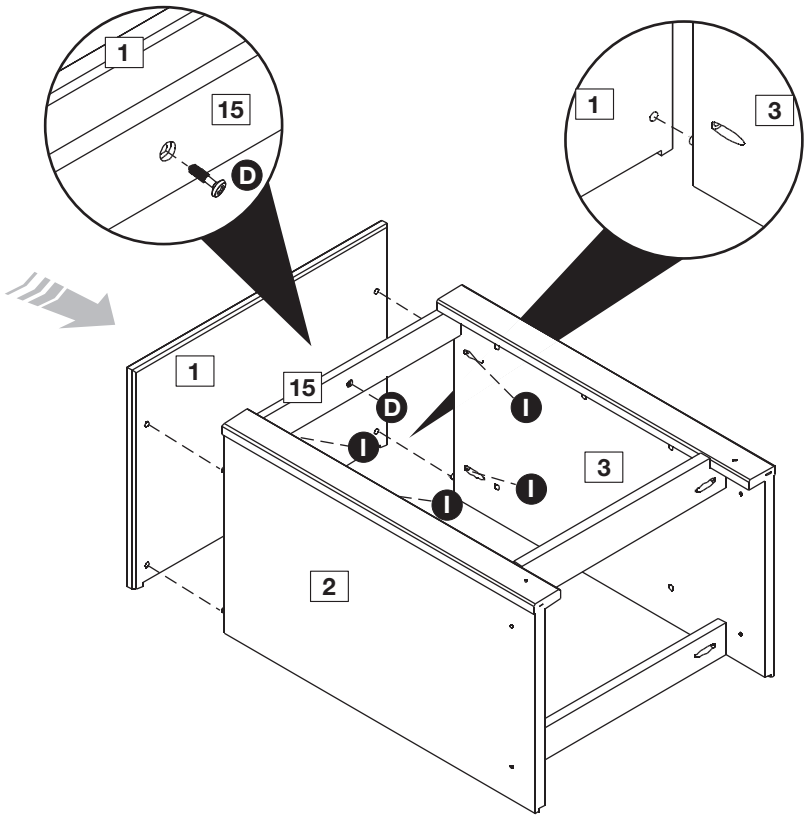

Step 5


Assembling cabinet:

a: Fix side plinths 7 to the side panels using screws D.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 6 to the sides using screws D.

Note: Make sure front plinth 6 is aligned to the bottom edges of the side panels and in line to the side plinths.

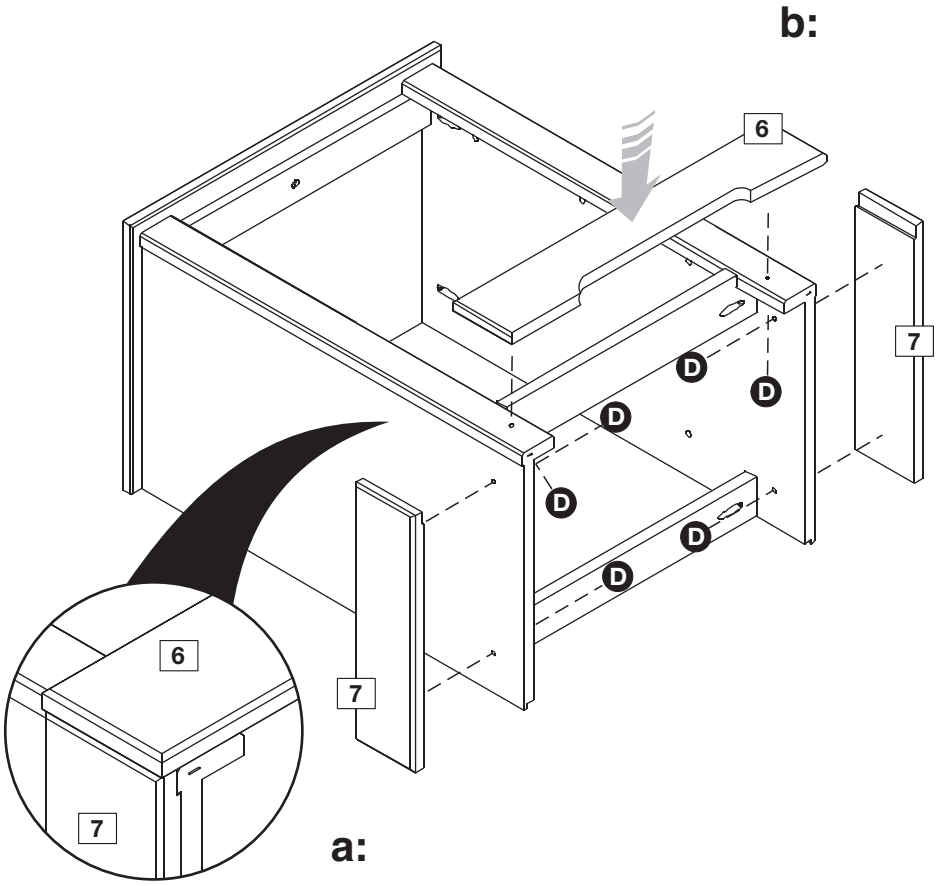


Step 6

Fixing drawer runners:

Carefully stand the product uprigth.


Fix drawer runners 8 to the sides using screws C as shown.

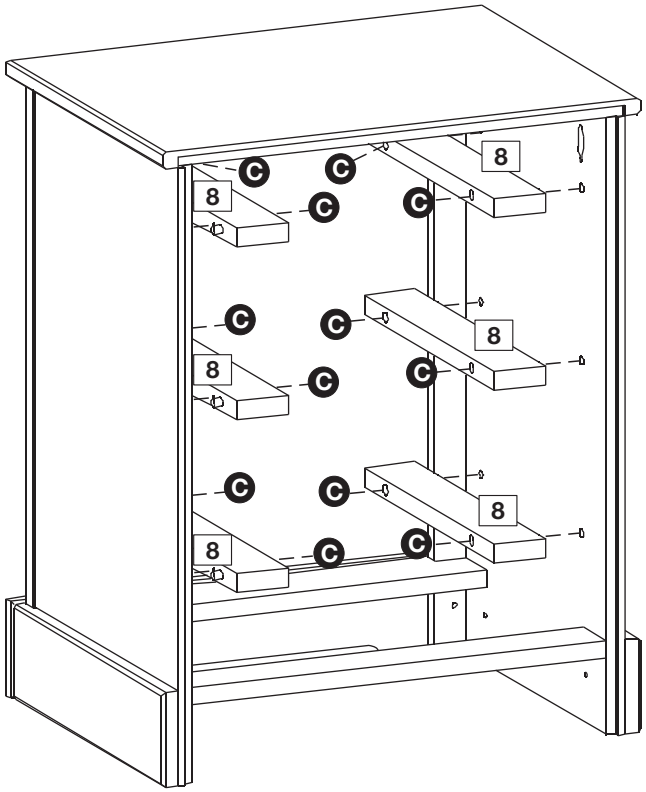

Step 7

Fixing back panels:


Important: Cabinet MUST be "square" when back panels are attached.

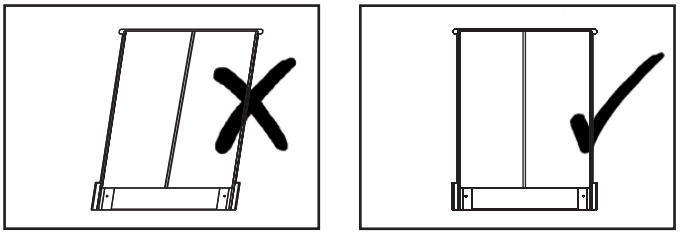

a: Attach back panel 9 to the right side first using nails H.

b: Position profile G onto back panel (just attach).

c: Carefully slot the second back panel 9 into profile and fix it to the cabinet using nails H.

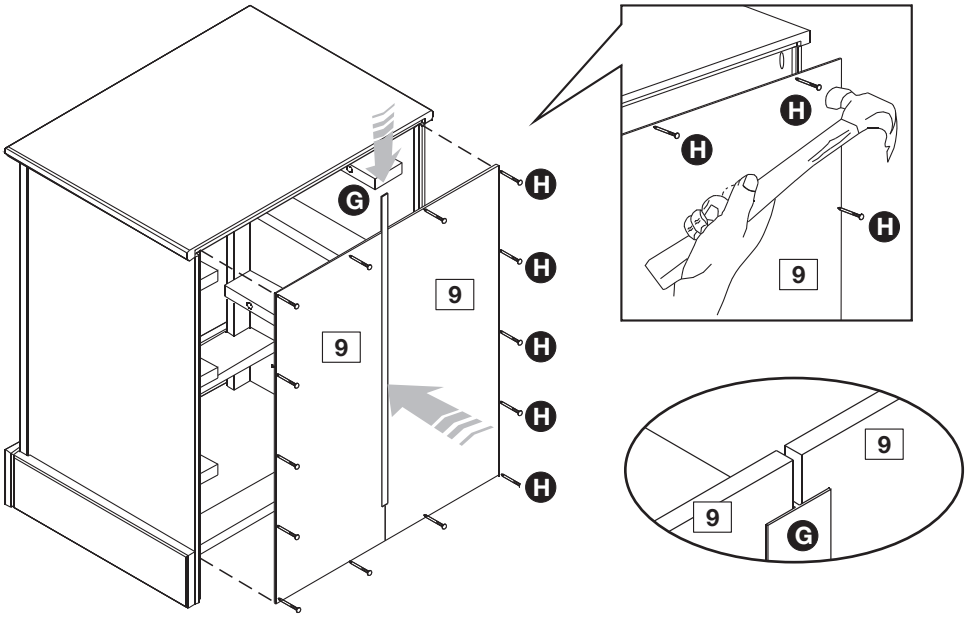

Assembly Instructions

Step 8

Assembling the drawers:


a: Attach drawer sides 11 and 12 to the drawer front 10 using screws B.

b: Slide drawer bottom 14 into slots on drawer sides.

c: Holding the drawer back 13 in place and flush to the edge of drawer side, fix them to the drawer back using screws B.

d: Using bolt F attach the drawer handles E to the drawer front.


Repeat step 8 for the other drawers.

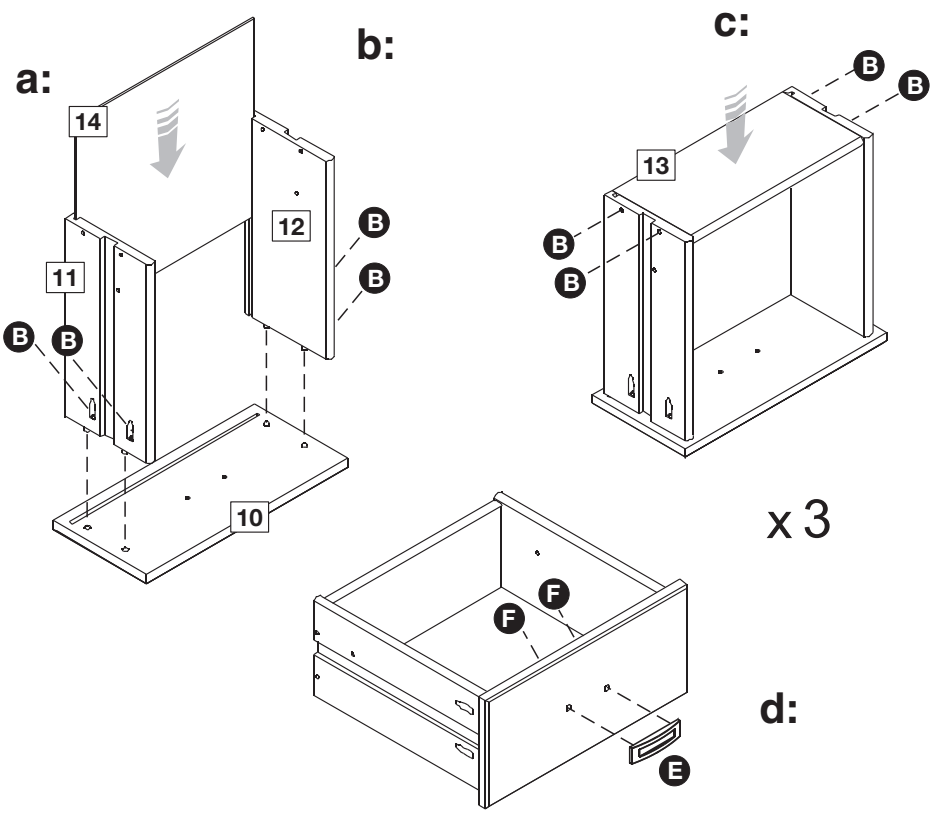


Step 9

Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap the dowels J in flush to the drawer sides. This is a safety catch to stop drawers falling out.

Assembly is complete.

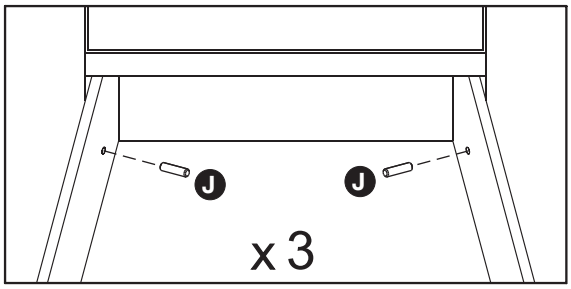

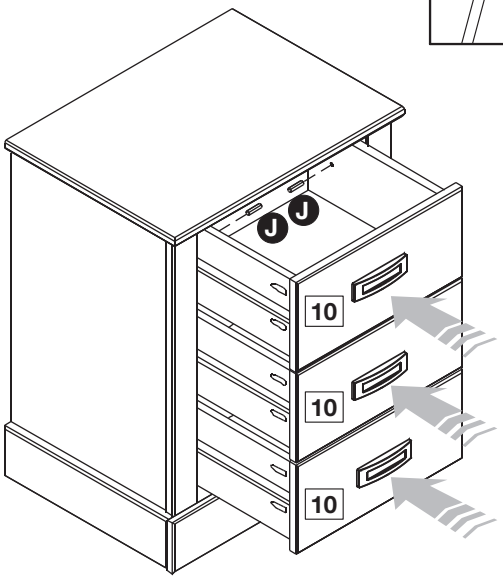

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**


Mendoza - 4 Drawer Chest

Assembly Instructions - Please keep for future reference

227/2623

248/5427

248/8022

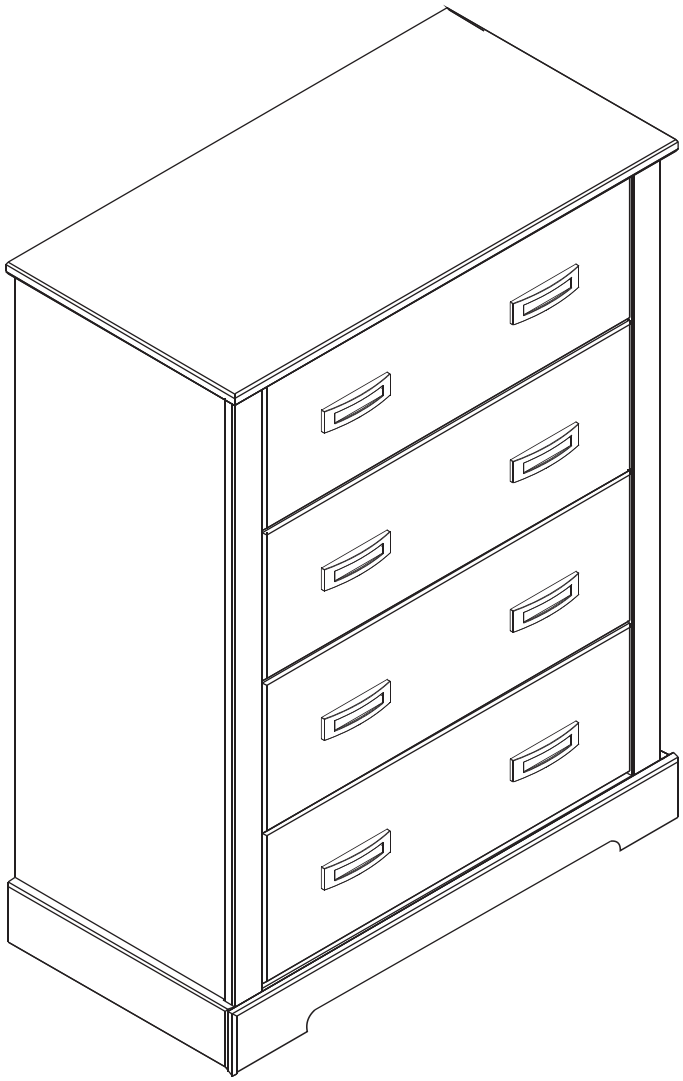

Dimensions

Width - 75.8cm
Depth - 39.4cm
Height - 100.6cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

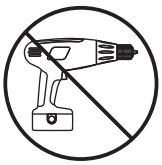

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Top panel
(75.8 x 39.4cm)

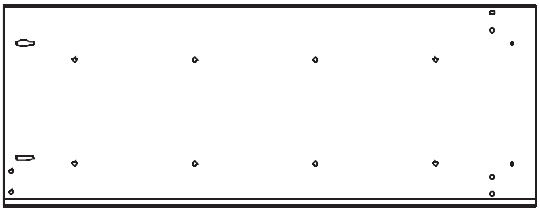


2 Left side panel
(98.1 x 36.7cm)

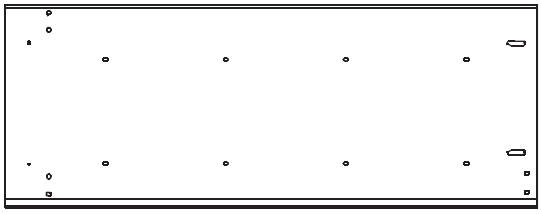


3 Right side panel
(98.1 x 36.7cm)




4 Bottom front rail (69 x 6.4cm)




5 Back rail (69 x 5cm)




6 Front plinth (75.7 x 9cm)



7 Side plinth x 2
(37.7 x 8.8cm)



8 Drawer runner x 8
(32 x 5.1cm)



9 Back panel x 2
(91.9 x 35.4cm)



10 Drawer front x 4
(62.4 x 21.9cm)



11 Drawer left side x 4
(32 x 19.4cm)



12 Drawer right side x 4
(32 x 19.4cm)



13 Drawer back x 4
(57.4 x 18.9cm)



14 Drawer bottom x 4
(58.6 x 31.8cm)












15 Top front rail (69 x 5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

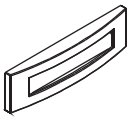A  Ø8x25mm Wooden dowel x 44	**B**  30mm Screw x 38	**C**  50mm Screw x 24
D  25mm Screw x 07	**E** Handle x 08 	**F**  22mm Bolt x 16
G  H profile 890mm x 01	**H**  Nails x 30	**I**  35mm Screw x 04
J  Ø8x35mm Large wooden dowel x 08	**K**  16mm Screw x 1	**L**  Wall strap x 1
M  Washer x 2	**N**  Ø6x25mm Thin wooden dowel x 04	


Tools required




Phillips screwdriver (medium & large)

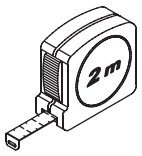

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting wooden dowels:

a: Insert dowels Ⓐ into the indicated parts.

b: Insert dowels Ⓝ on top front rail 15 only.

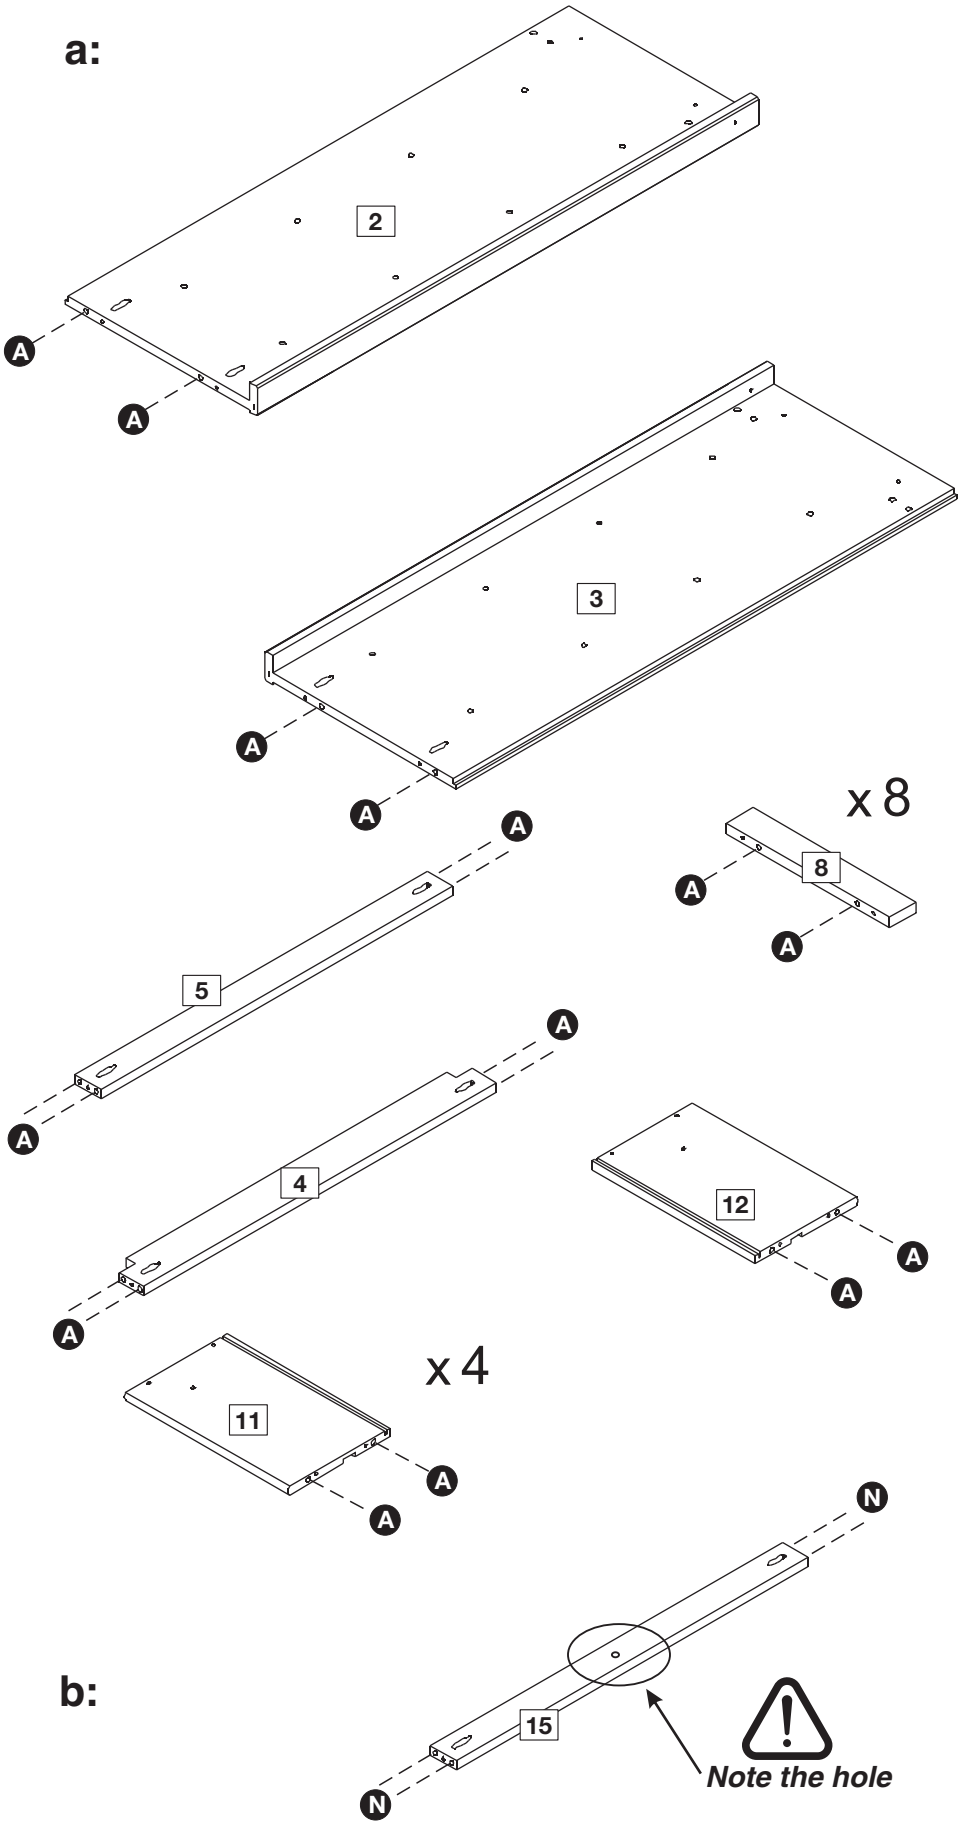


Step 2

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the left side panel 2 using screws B .

Note: Holes on top front rail must be facing up as shown in the diagram.

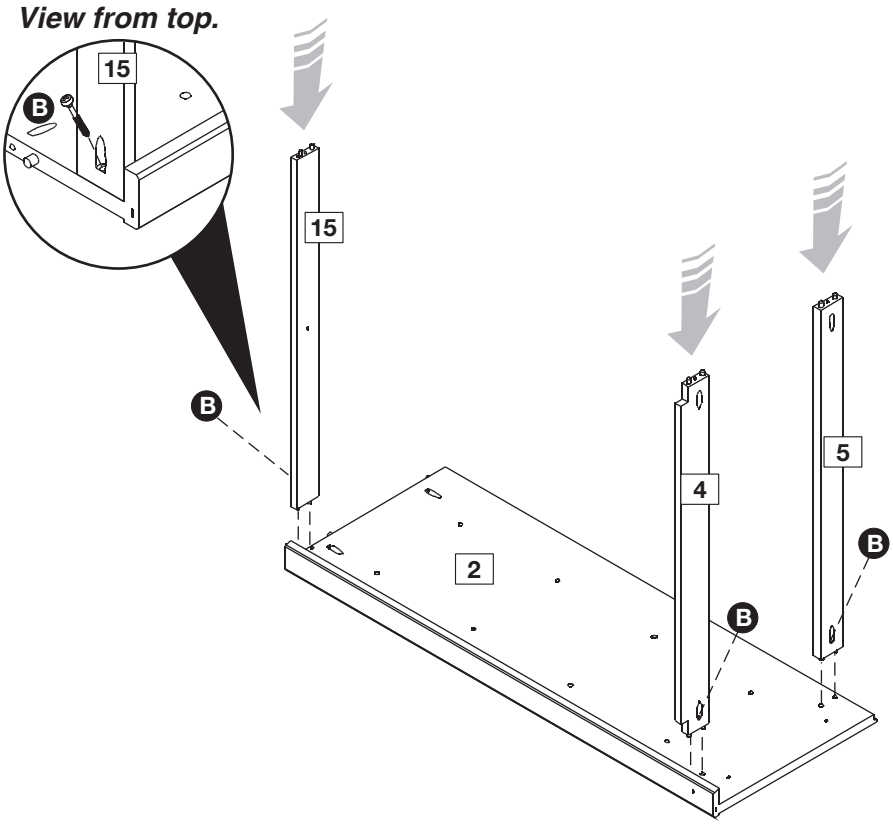


Step 3

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the right side panel 3 using screws B .

Note: Holes on top front rail must be facing up as shown in the diagram.

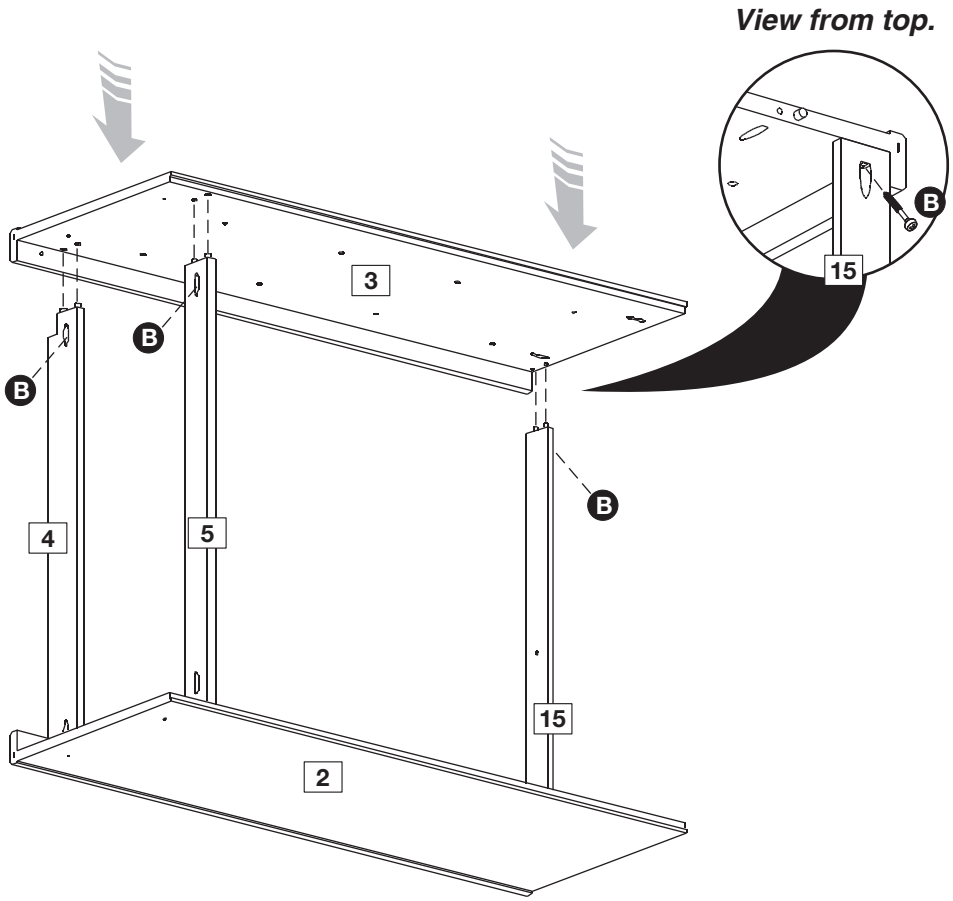


Assembly Instructions

Step 4

Assembling cabinet:

a: Fix the top panel 1 to the sides 2 and 3 using screws I.

b: Fix top front rail 15 to the top panel 1 using screws D.

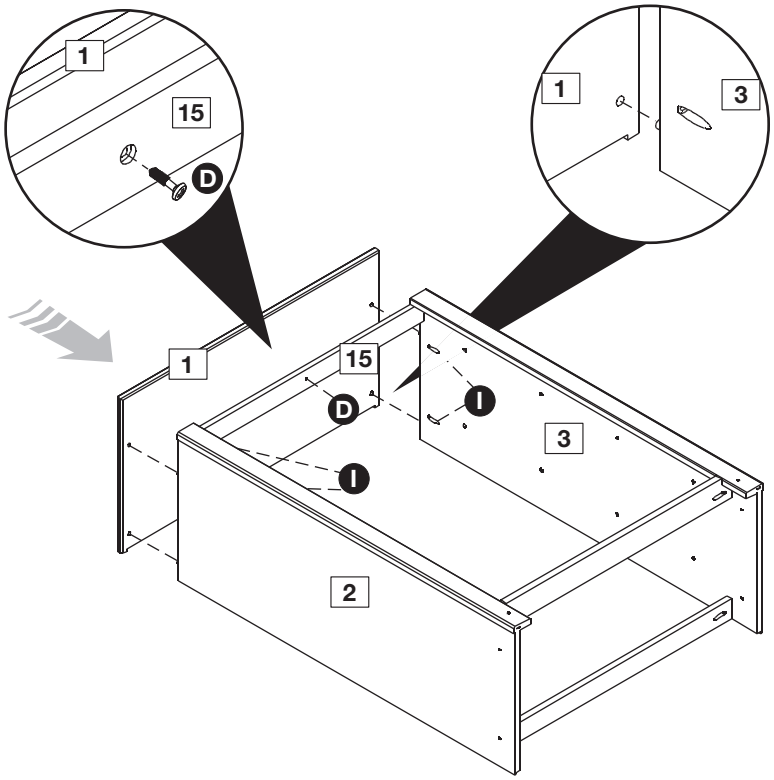

Step 5


Assembling cabinet:

a: Fix side plinths 7 to the side panels using screws D.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 6 to the sides using screws D.

Note: Make sure front plinth 6 is aligned to the bottom edges of the side panels and in line to the side plinths.

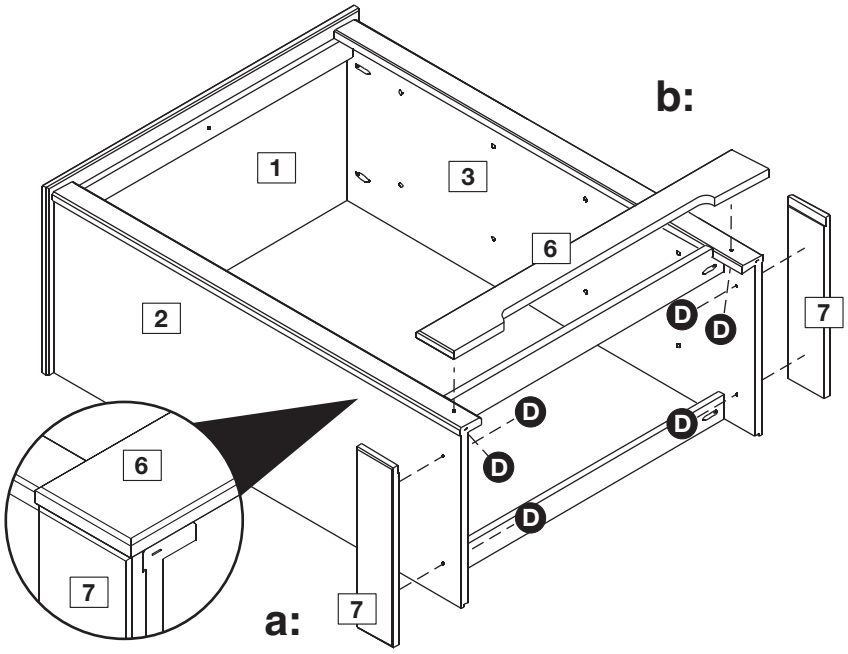


Step **6**

Fixing drawer runners:

Carefully stand the product uprigth.


Fix drawer runners 8 to the sides using screws C as shown.

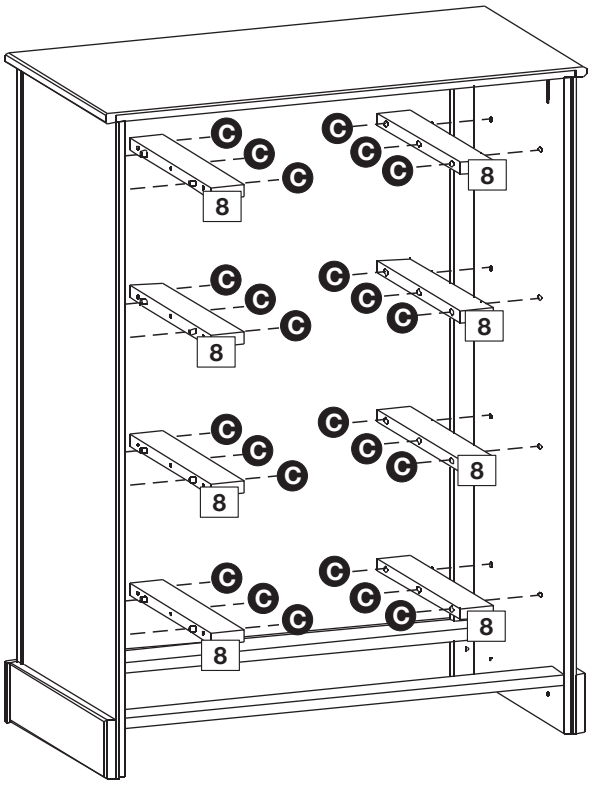


Step **7**

Fixing back panels:

Important: Cabinet MUST be “square” when back panels are attached.

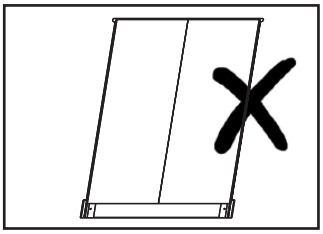


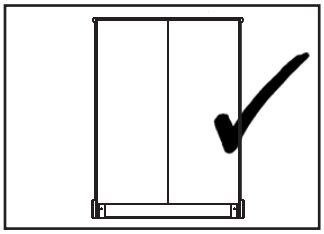



a: Attach back panel 9 to the right side first using nails H.

b: Position profile G onto back panel (just attach).

c: Carefully slot the second back panel 9 into profile and fix it to the cabinet using nails H .

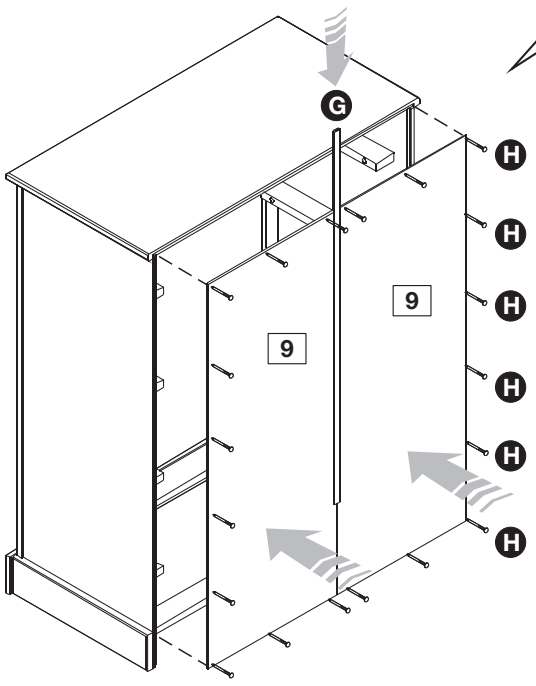

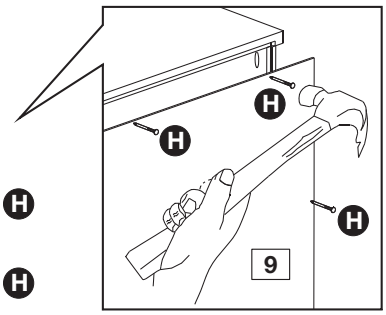

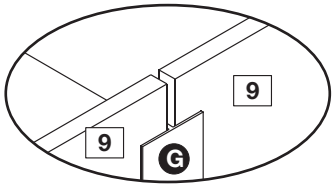

Step 8

Assembling the drawers:


a: Attach drawer sides 11 and 12 to the drawer front 10 using screws B.

b: Slide drawer bottom 14 into slots on drawer sides.

c: Holding the drawer back 13 in place and flush to the edge of drawer side, fix them to the drawer back using screws B.


d: Using bolt F attach the drawer handles E to the drawer front.


Repeat step 8 for the other drawers.

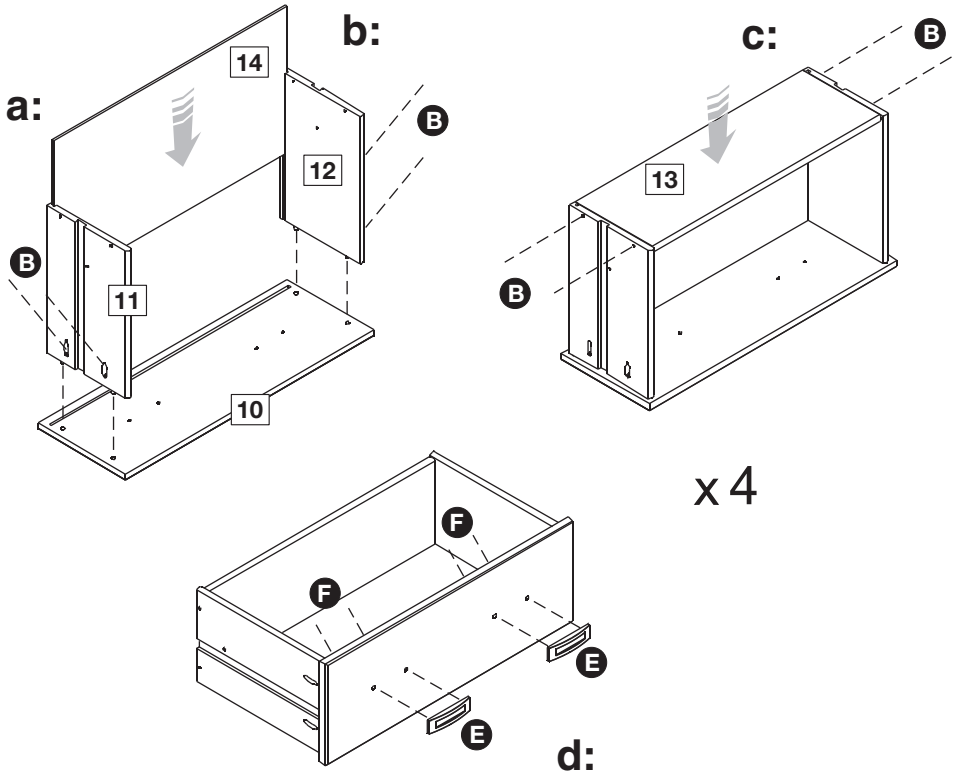

Step 9

Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap the dowels J in flush to the drawer sides. This is a safety catch to stop drawers falling out.

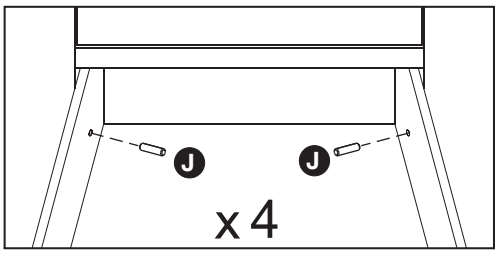

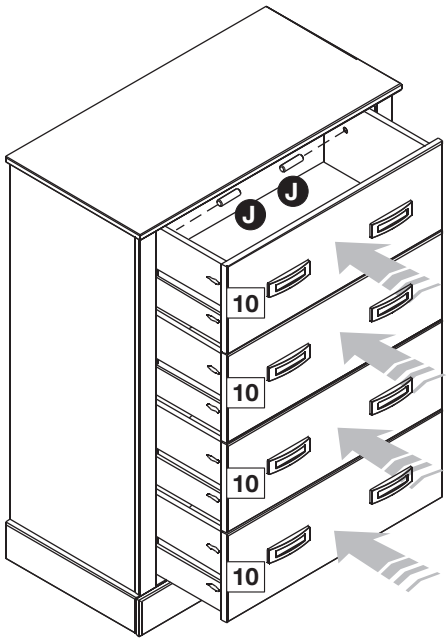


Assembly Instructions


Step **10**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **L** to top of furniture using washer **M** and screw **K**. With help, move furniture into position.

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

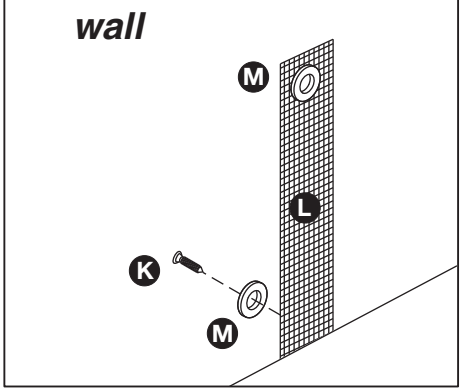

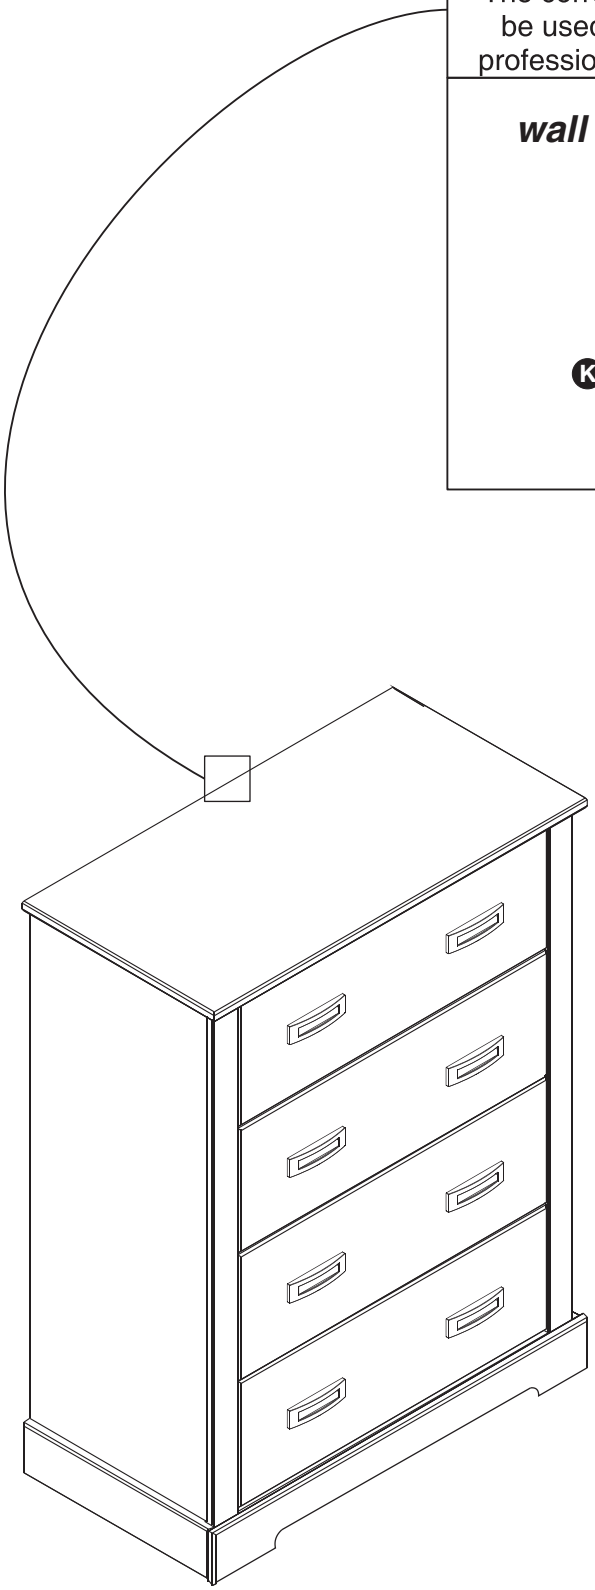


Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

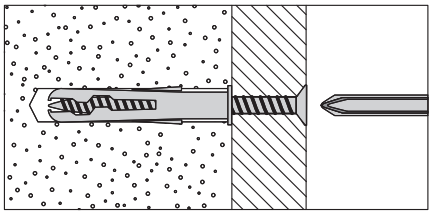


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

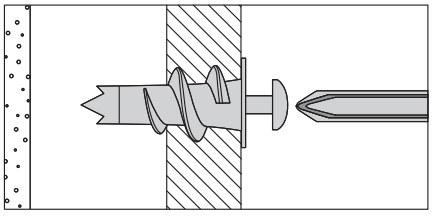


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

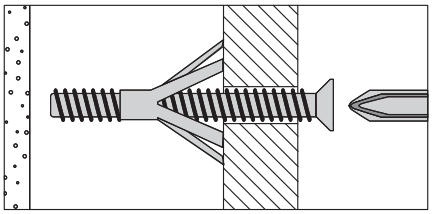


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

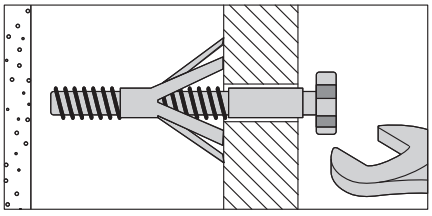


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

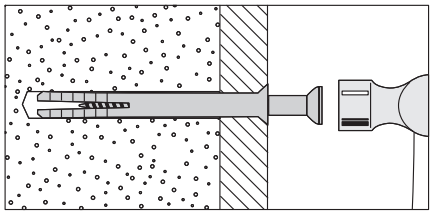

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

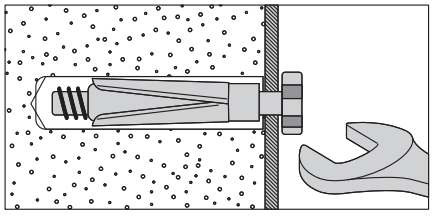

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.


Mendoza - 3 Door Mirrored Robe

Assembly Instructions - Please keep for future reference

322/0186

332/8992

339/8128

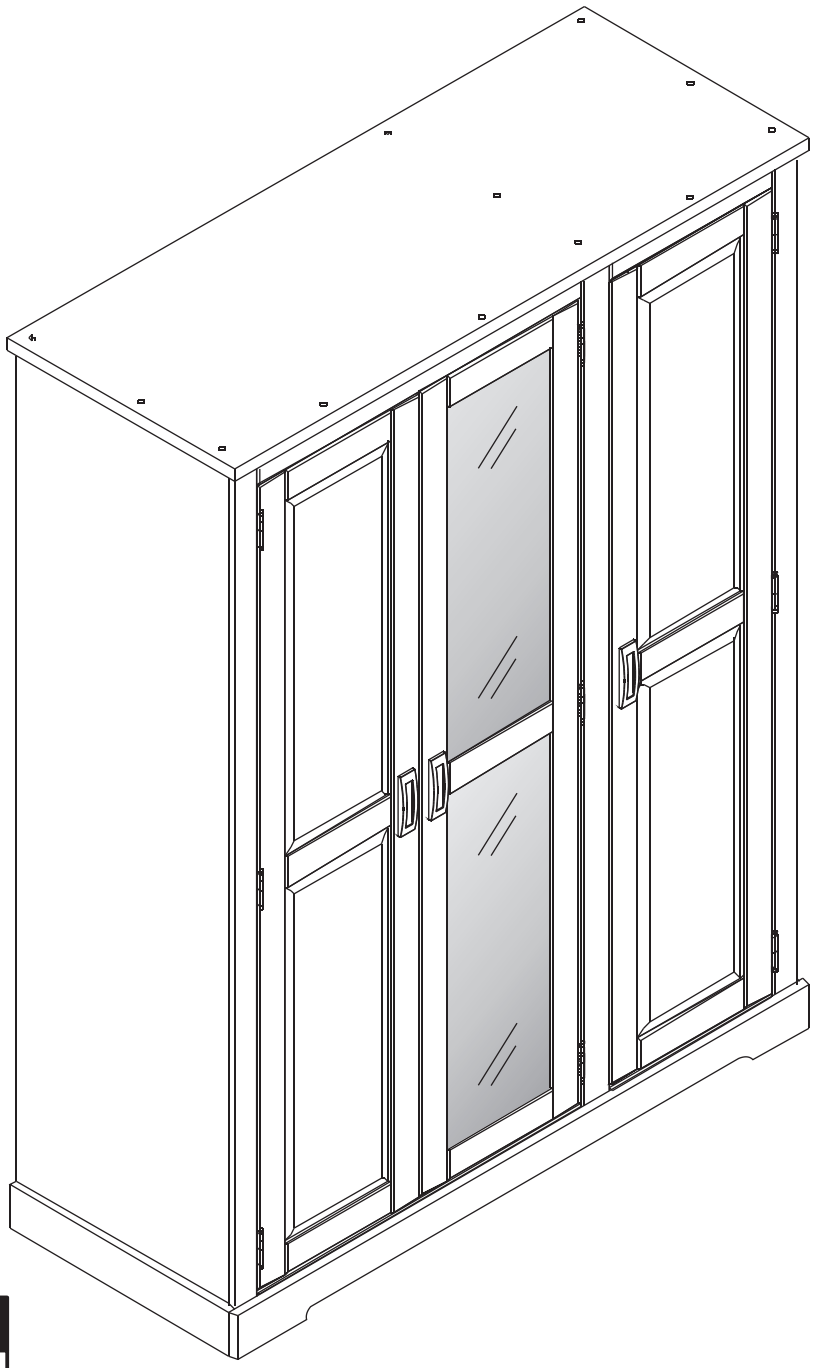

Dimensions

Width - 134.7cm
Depth - 53cm
Height - 180cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

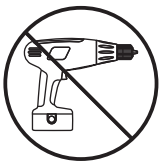

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

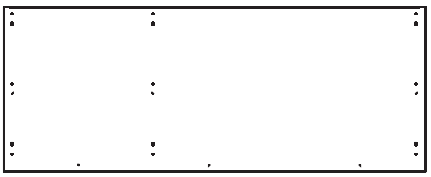

1 Top panel (134.7 x 53cm)




2 Base (82.3 x 49.1cm)

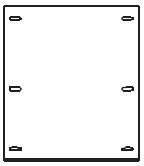


3 Small base (43.1 x 49.1cm)




4 Left side panel (177.5 x 49.6cm)




5 Left front frame (177.5 x 5cm)

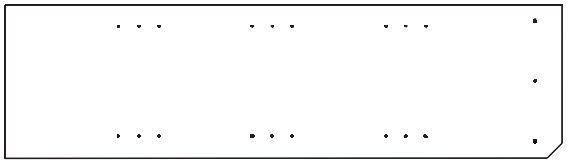


6 Division (177.5 x 49.1cm)




7 Division front frame (175 x 6.5cm)




9 Right front frame (177.5 x 5cm)

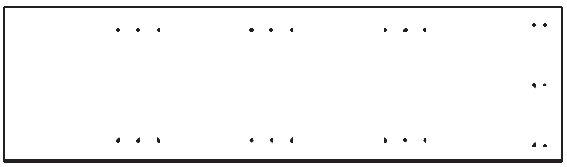


8 Right side panel (177.5 x 49.6cm)

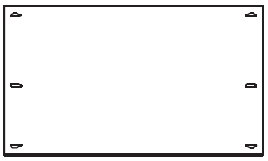


10 Fixed shelf (82.3 x 48cm)




11 Adjustable shelf x 3 (42.8 x 47.5cm)



12 Large top rail (76.2 x 5cm)




13 Small top rail (38.3 x 5cm)




16 Small bottom rail (38.3 x 5cm)

14 Hanging rail (81.5 x 3cm)




15 Large bottom rail (76.2 x 5cm)




19 Small H profile (28.8 x 2.8cm)



17 Side plinth x 2 (51.4 x 8.8cm)




18 Front plinth (133.6 x 9cm)

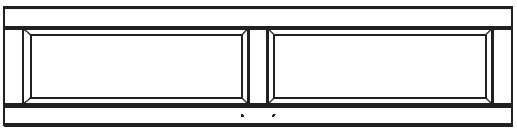

21 Left door (162.6 x 37.6cm)




20 Small back panel x 2 (170.5 x 41.5cm)

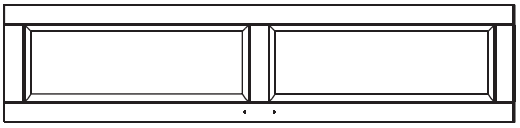

23 Right door (162.6 x 37.6cm)

22 Door knocker (161.6 x 3cm)

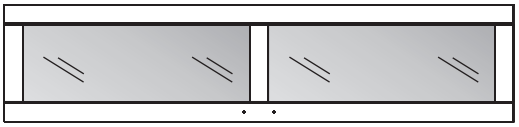

27 Centre door (162.6 x 37.6cm)



24 Large back panel (170.5 x 44.9cm)

25 Large H profile (136.4 x 2.8cm)














26 Blocks x 12 (6.4 x 1.9cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

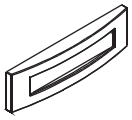A  30mm Screw x 54	**B**  Ø8x25mm Wooden dowel x 58	**C**  45mm Screw x 12
D  16mm Screw x 70	**E**  25mm Screw x 10	**F**  Metal bracket x 03
G  Hanging rail support x 02	**H**  Nails x 60	**I**  Metal door knocker x 01
J  Right door hinge x 6	**K**  Left door hinge x 3	**L**  Door clip x 04
M  Handle x 03	**N**  22mm Bolt x 06	**O**  Shelf support pins x 12
P  Wall strap x 1	**Q**  Washer x 2	**R**  Straight metal door knocker x 01
S  Door clip x 04		


Tools required




Phillips screwdriver (medium & large)

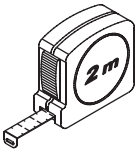

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1


Fitting wooden dowels:

a: Insert dowels Ⓑ into holes in the indicated parts.

Continued on next page.

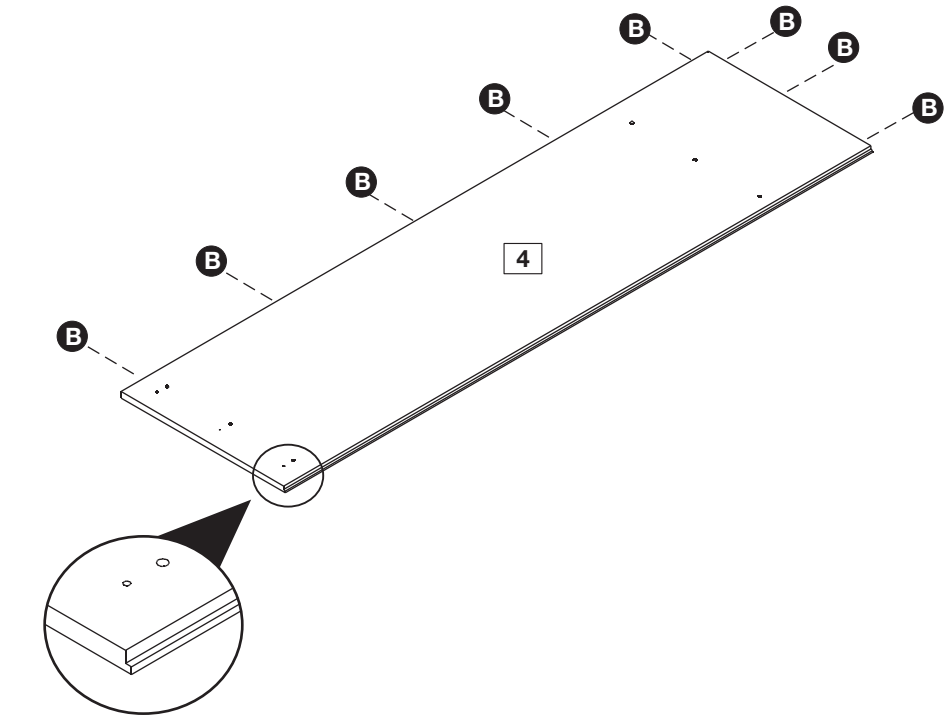

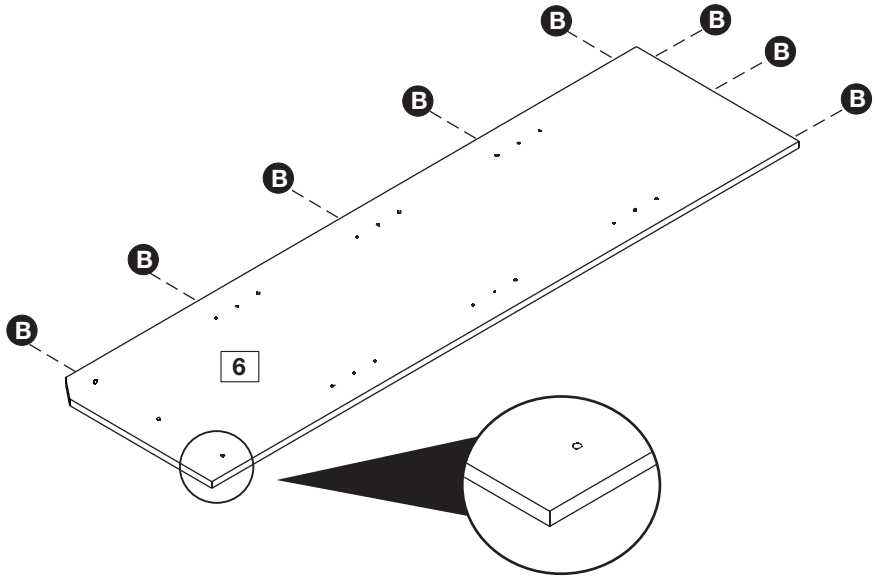

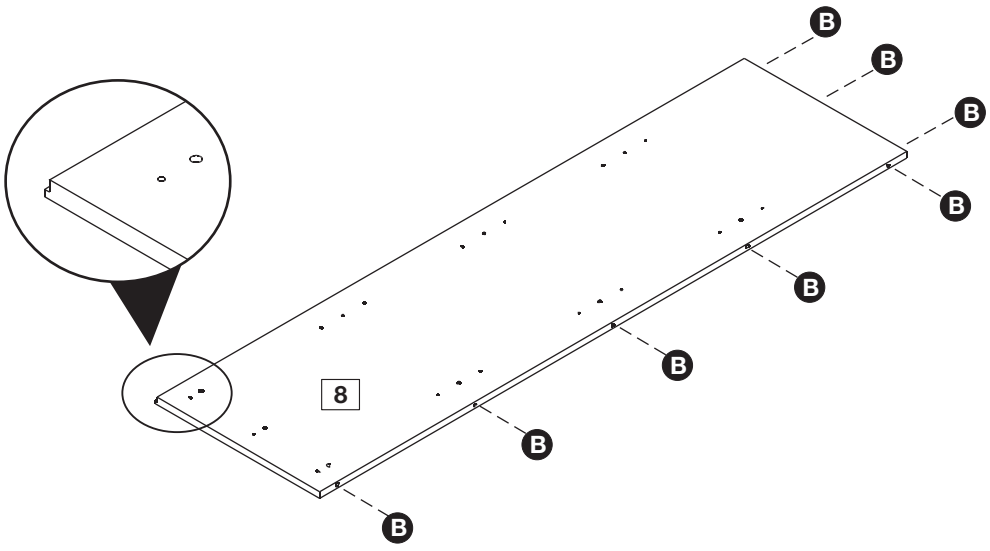



Assembly Instructions


Step 1


Fitting wooden dowels:


b: Insert dowels Ⓑ into holes in the indicated parts.

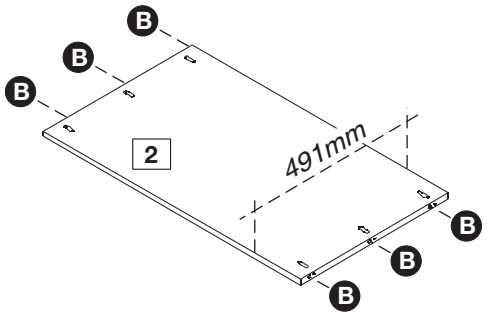


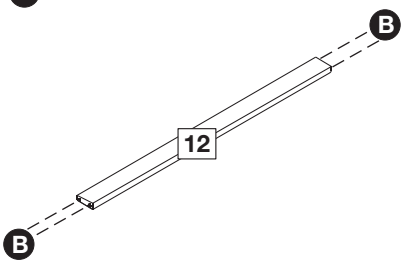


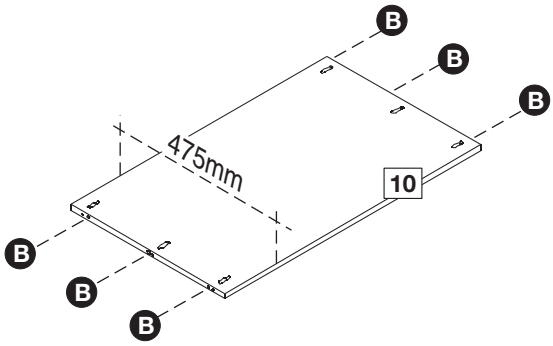

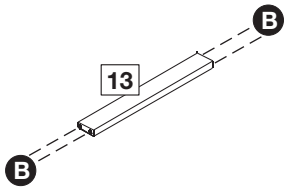

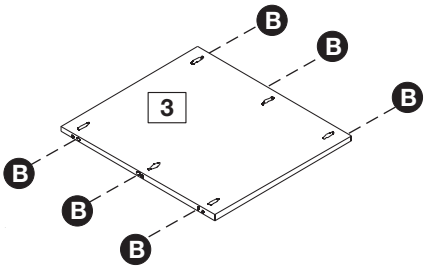

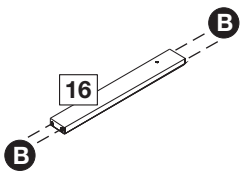


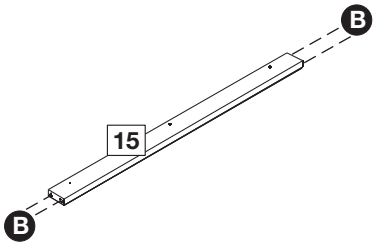

Step **2**

Fix hanging rail support:


Fix hanging rail support G in the pre marked holes on the left side panel 4 and division panel 6 using screws D.

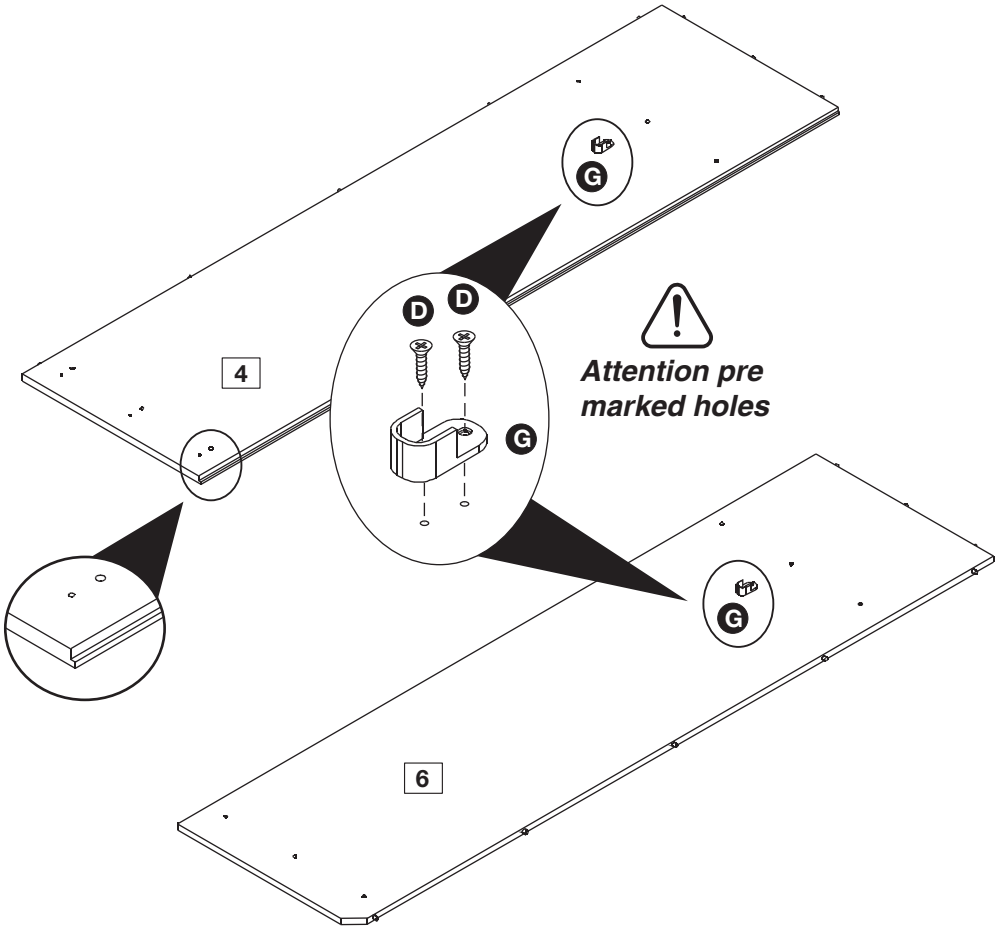

Step **3**

Fix shelf support pins:

Fix shelf support pins O to the holes indicated on the division panel 6 and right side panel 8 as shown.

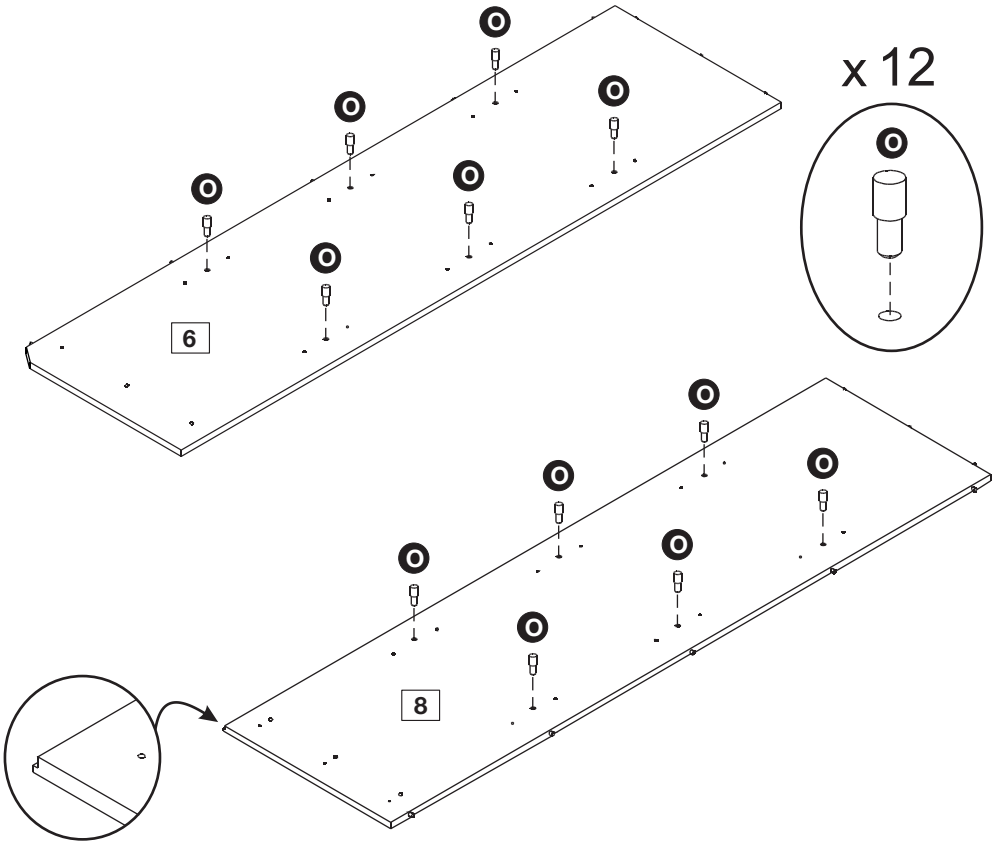



Step 4


Fixing front frames:
(Two people required for an easier assembly)

a: Fix blocks 26 in the pre marked holes on right side panel 8 as shown using screws A.

Important: Make sure blocks 26 are flush to the edge on side panels before fixing.

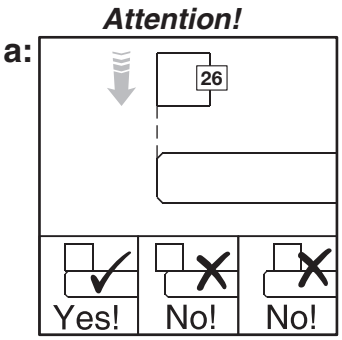

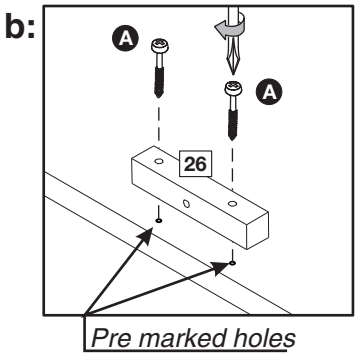


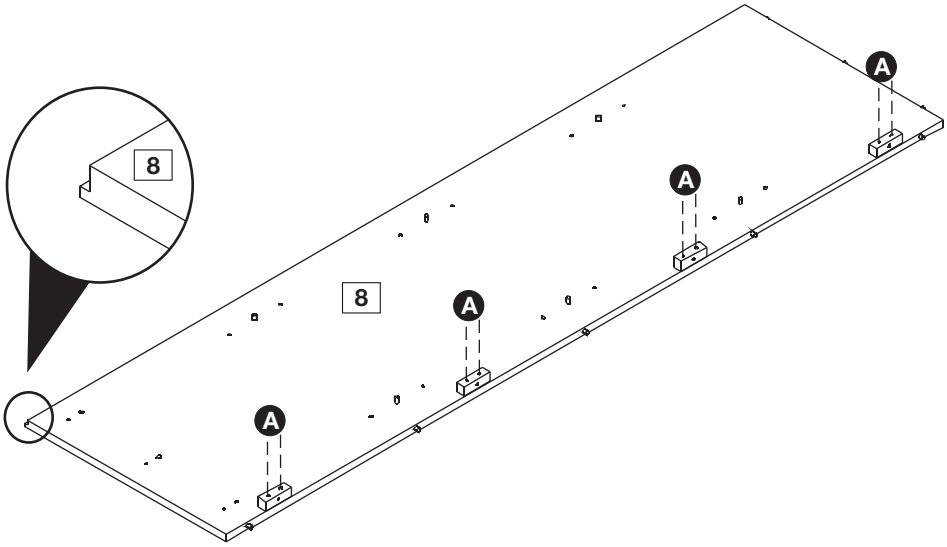



b: Fix blocks 26 in the pre marked holes on left side panel 4 as shown using screws A.

Important: Make sure blocks 26 are flush to the edge on side panels before fixing.

Continued on next page.

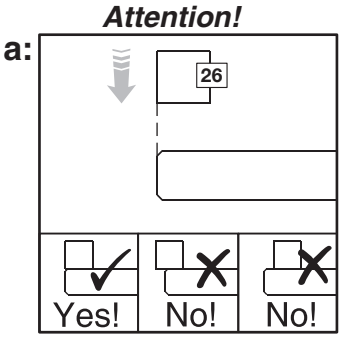

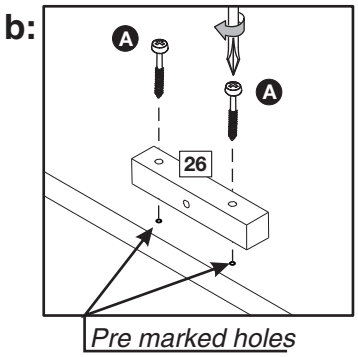

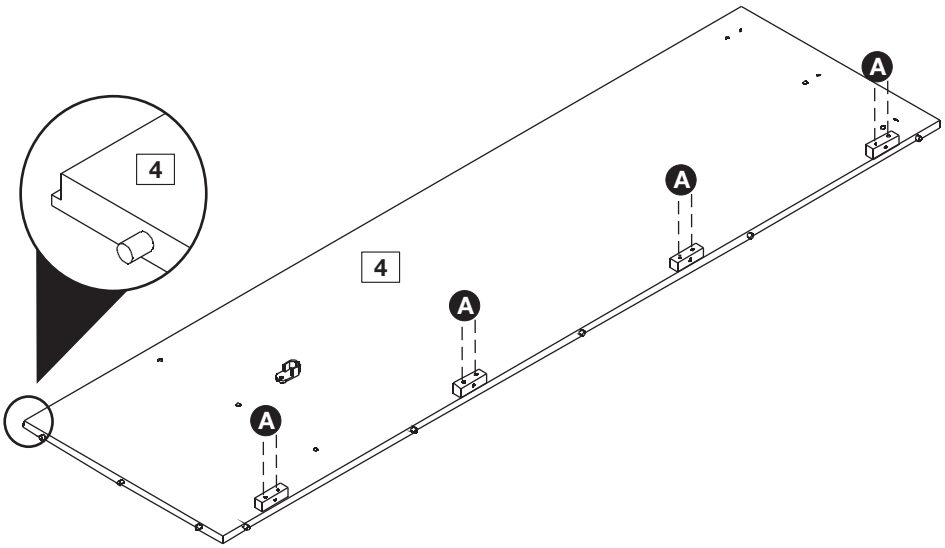



Step 4

Fixing front frames:

c: Fix blocks 26 in the pre marked holes on division panel 6 as shown using screws A.

Important: Make sure blocks 26 are flush to the edge on side panels before fixing.

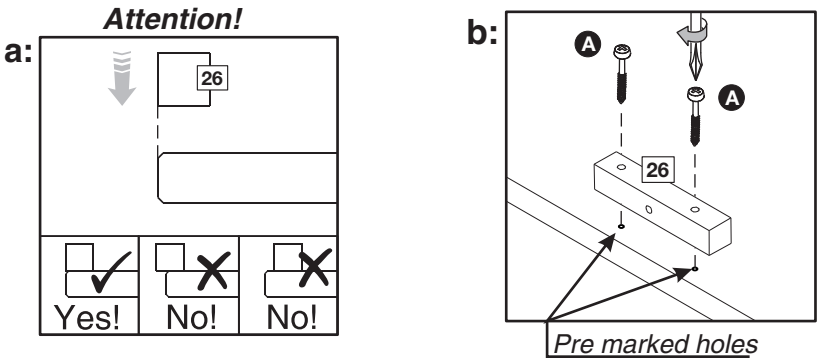

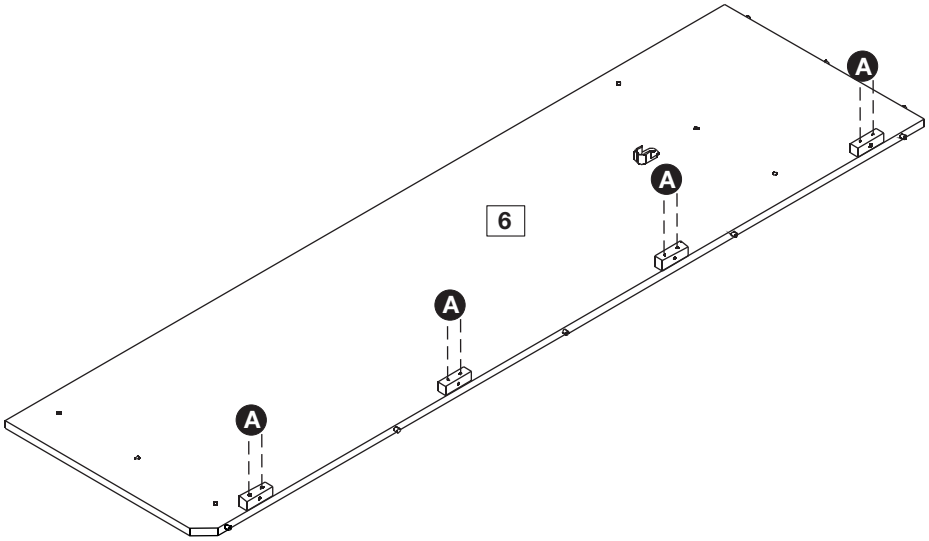


Step 5

Fixing door clip and knocker:

a: Fix door clip S in the pre marked holes on large top rail 12 and small top rail 13 using screws D as shown.

b: Fix straight door knocker R in the pre marked holes on large top rail 12 using screws D as shown.

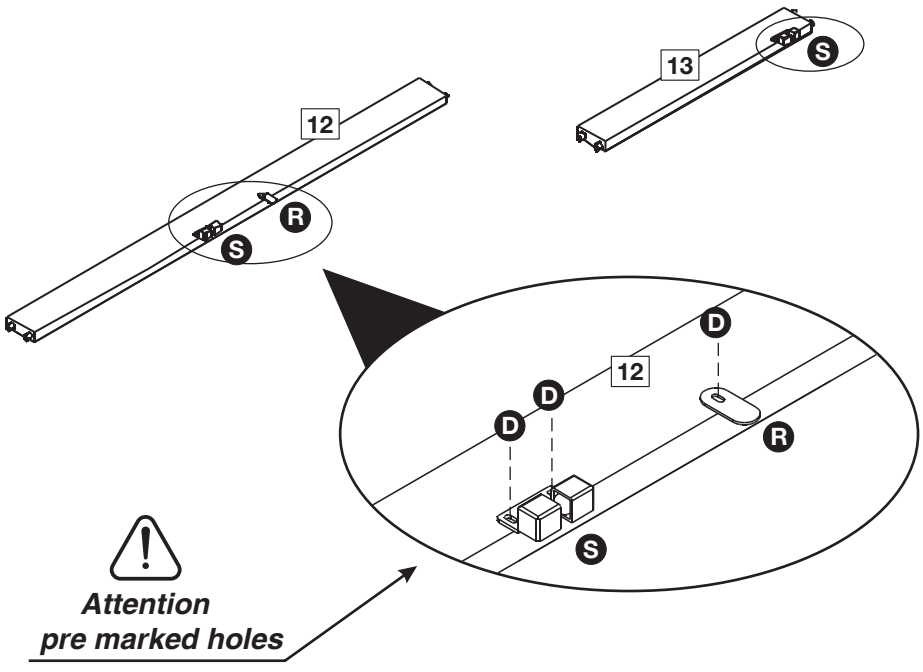


Step 6

Fixing front frames:

Fix right front frame 9 to the right side panel 8 through blocks 26 using screws A as shown.

Attention: Note correct position of parts before fixing.

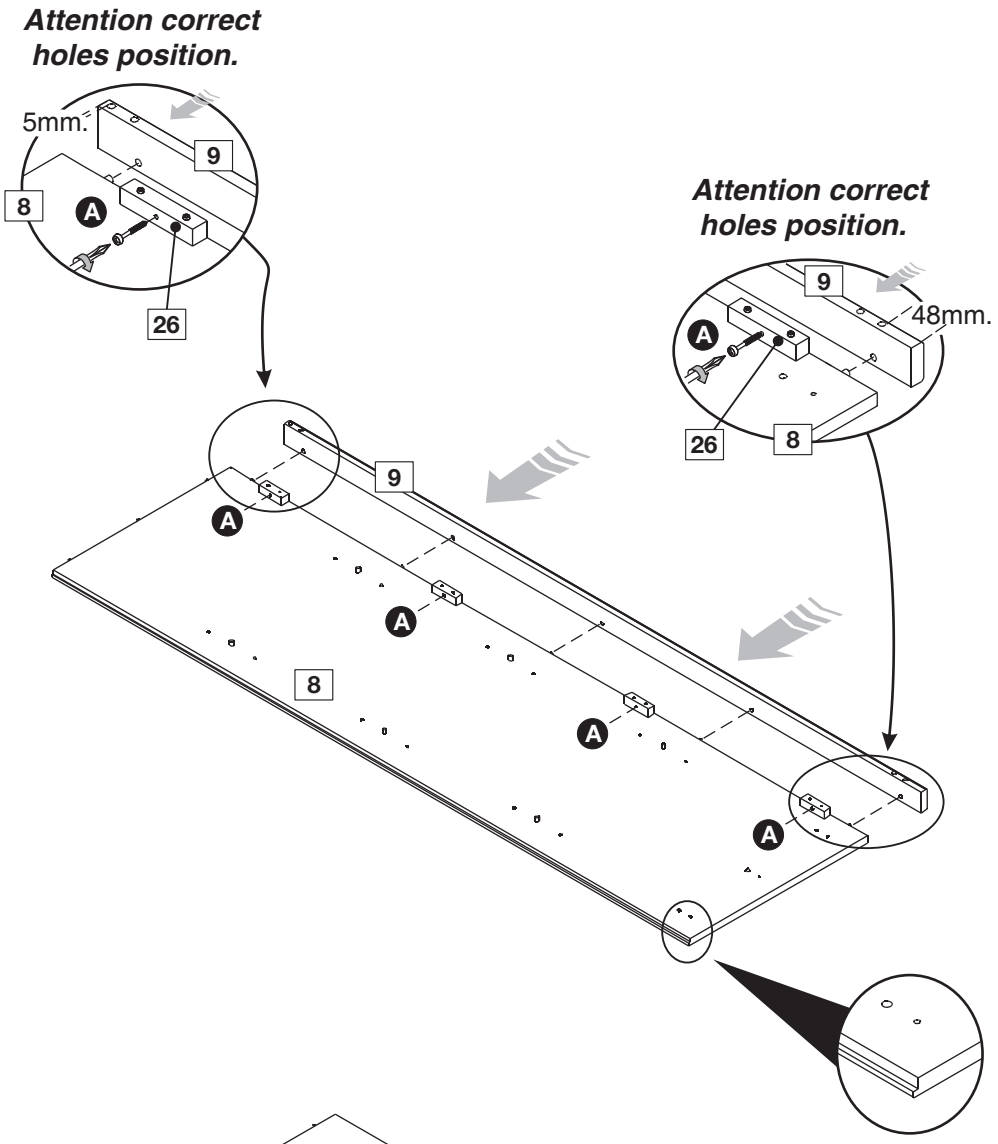


Step 7

Fixing front frames:

Fix left front frame 5 to the left side panel 4 through blocks 26 using screws A as shown.

Attention: Note correct position of parts before fixing.

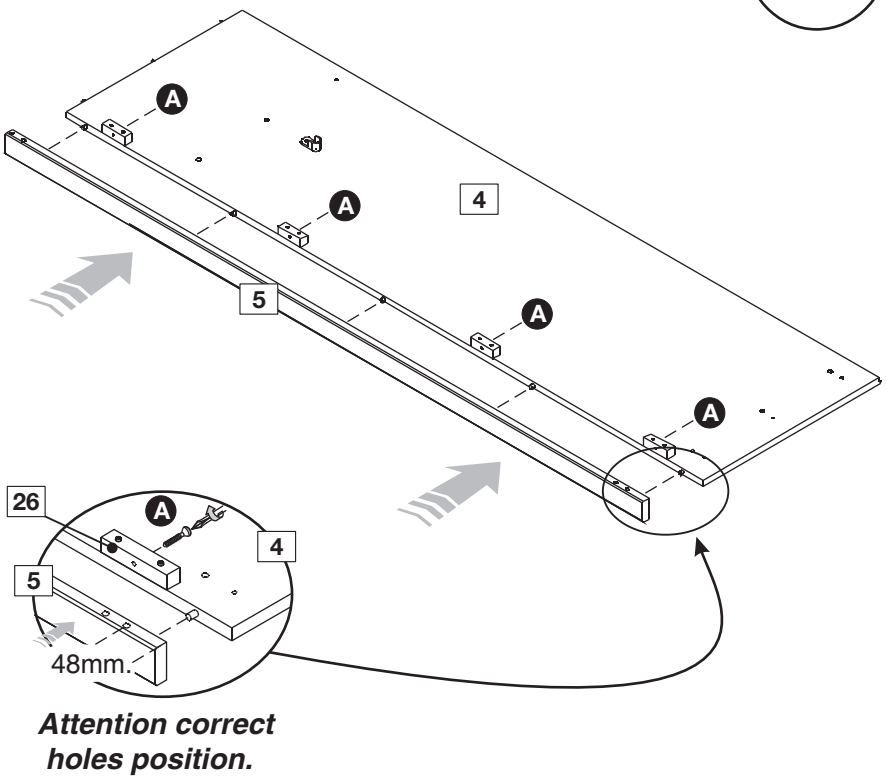


Step **8**

Fixing front frames:

Fix division front frame 7 to the division panel 6 through blocks 26 using screws A as shown.

Attention: Note correct position of parts before fixing.

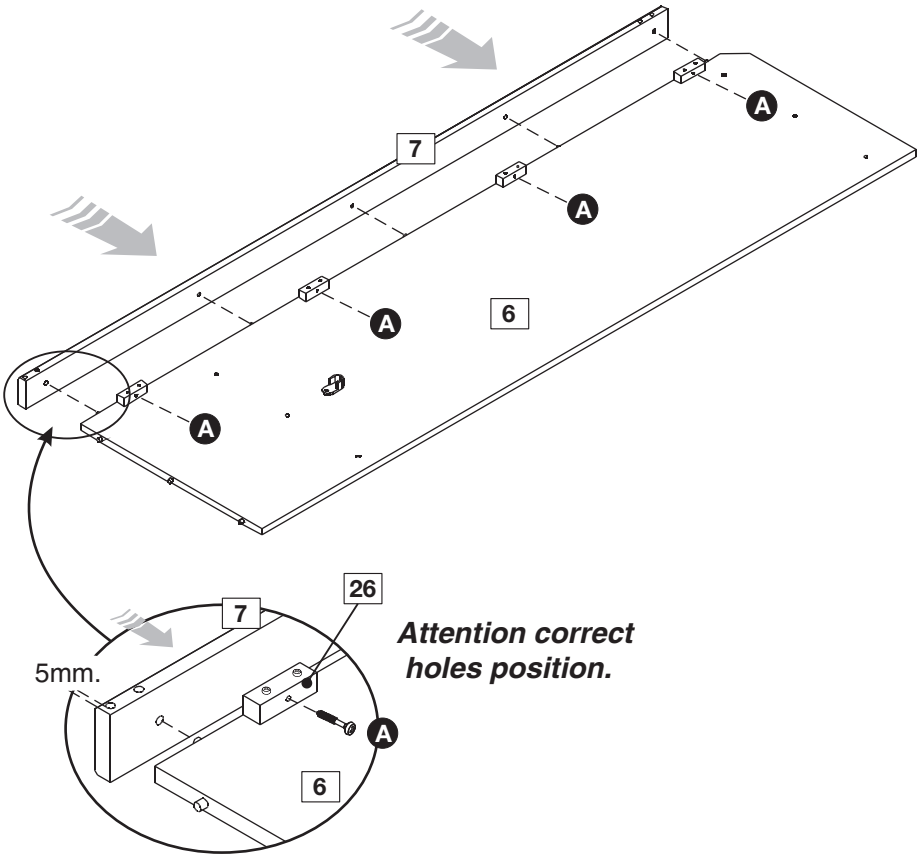


Step **9**

Assembling the cabinet: (Two people required for an easier assembly)

With help, fit base panel 2, and fixed shelf 10 to the left side panel 4.

Fix base panel 2 and fixed shelf 10 using screws A.

Note correct position of parts before fixing.

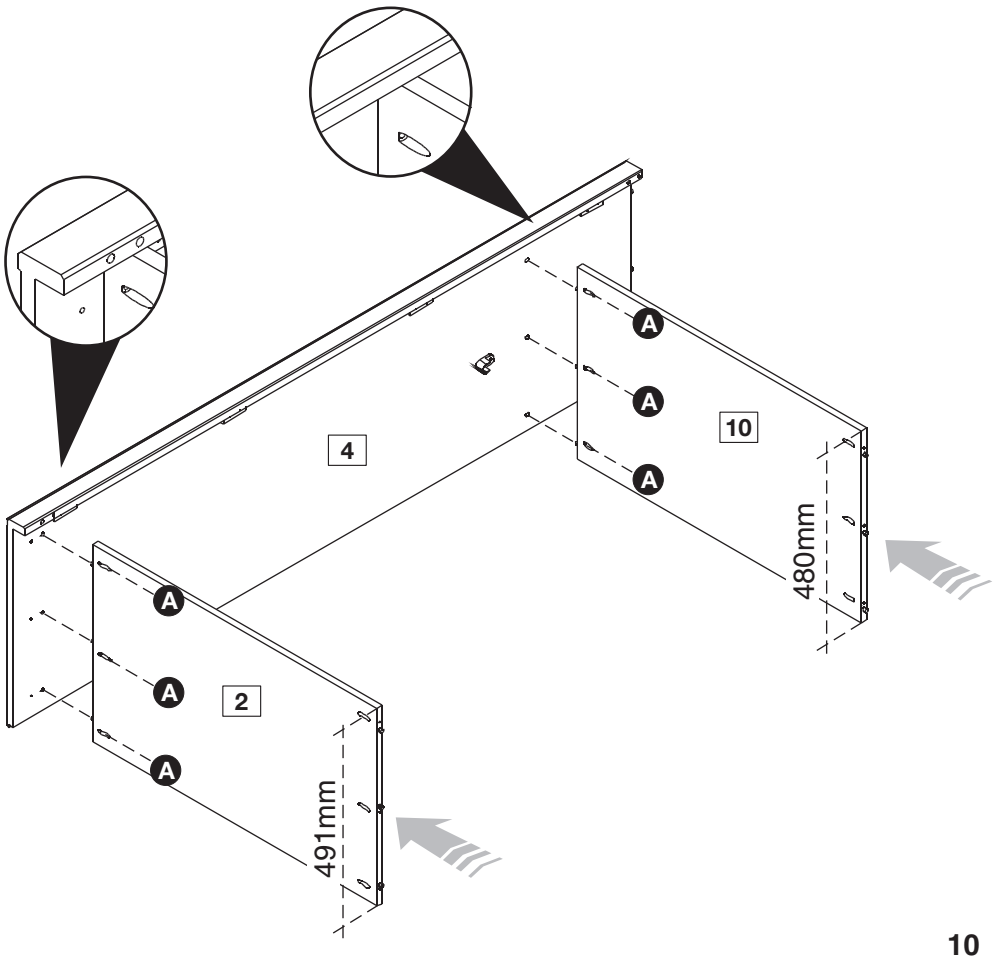

Step 10

Assembling the cabinet:
(Two people required for an easier assembly)


With help, fit base panel 2, fixed shelf 10, large top rail 12 and large bottom rail 15 to the division panel 6.

Fix base panel 2 and fixed shelf 10 using screws A.

Note correct position of parts before fixing.

Door clip to be facing down.

Note: Make sure rounded edges are facing up and holes are facing down on large bottom rail 15.

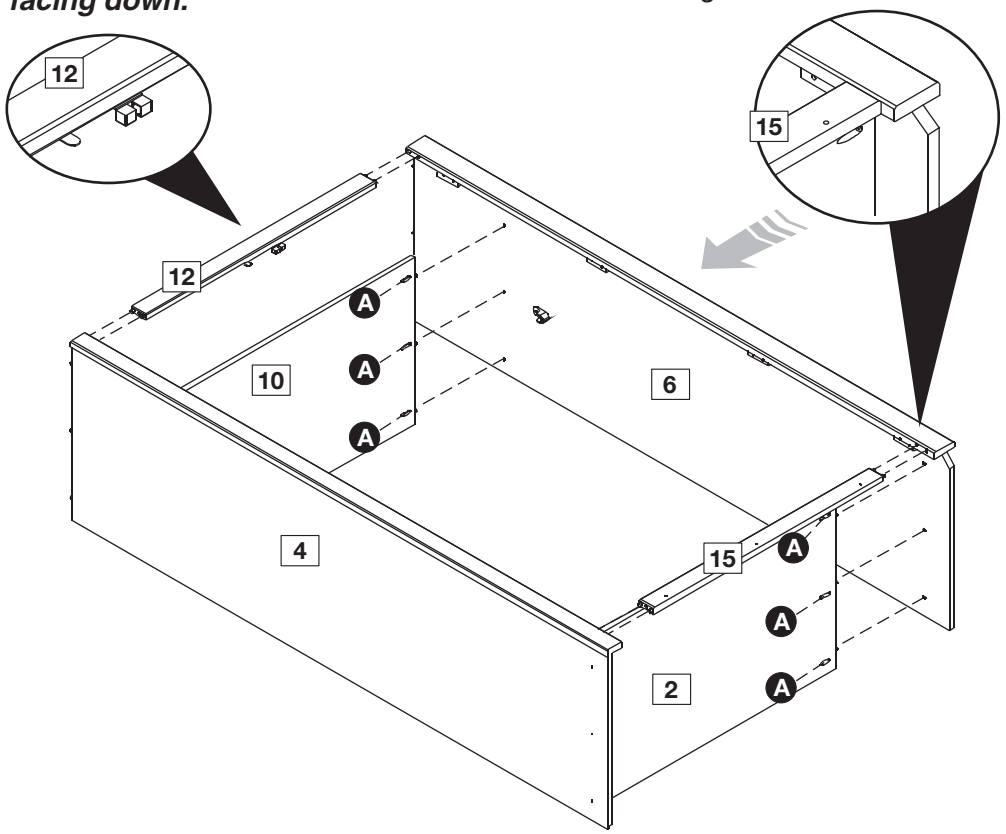

Step 11

Assembling the cabinet:
(Two people required for an easier assembly)


With help, fit small base panel 3, small bottom rail 16 and small top rail 13 to the right side panel 8 and division panel 6.

Fix small base panel 3 and using screws A.

Note correct position of parts before fixing.

Door clip to be facing down.


Note: Make sure rounded edges are facing up and holes are facing down on small bottom rail 16.

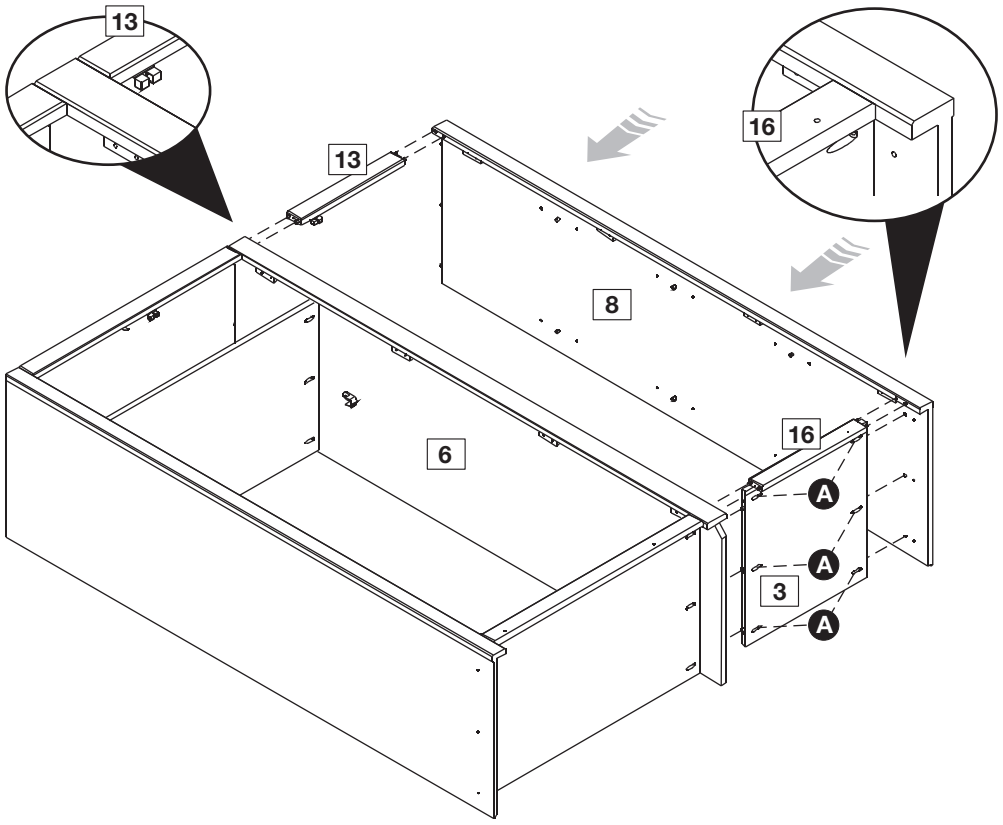

Step **12**

Fixing top panel:

Fix top panel 1 to the assembled cabinet using screws C as shown.

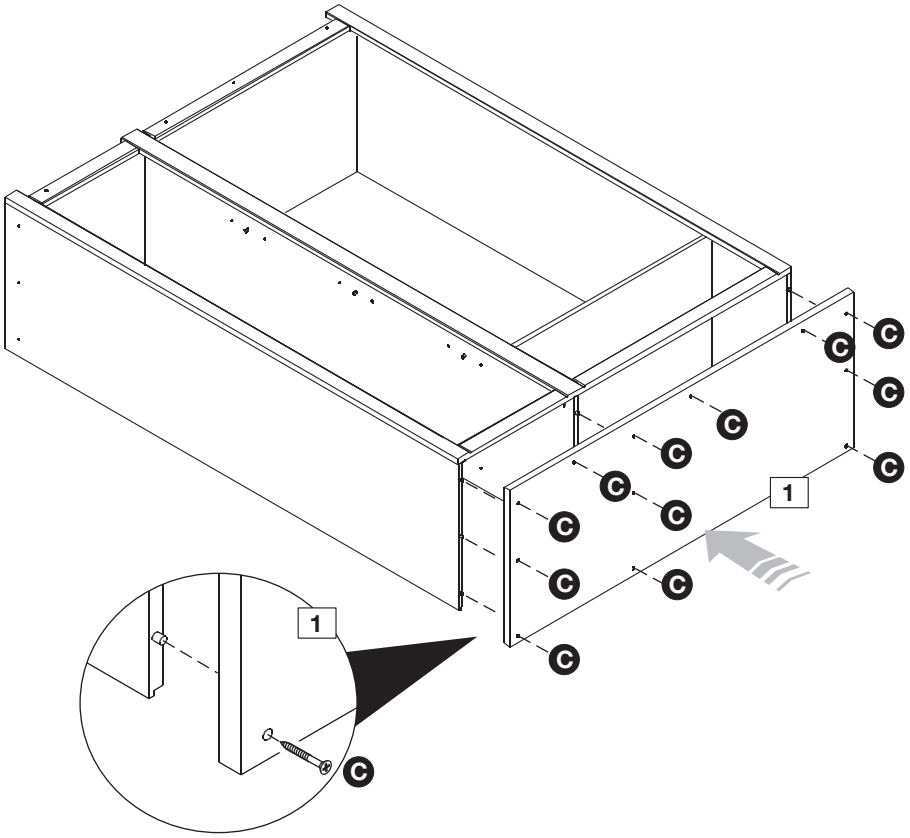

Step **13**

Assembling the cabinet:


a: Fix side plinths 17 to the side panels using screws E.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 18 to the large bottom rail 15 and small bottom rail 16 using screws E.

Note: Make sure front plihth 18 is aligned to the bottom edge of the side panels and in line to the side plinths.


Attention to the parts alignment

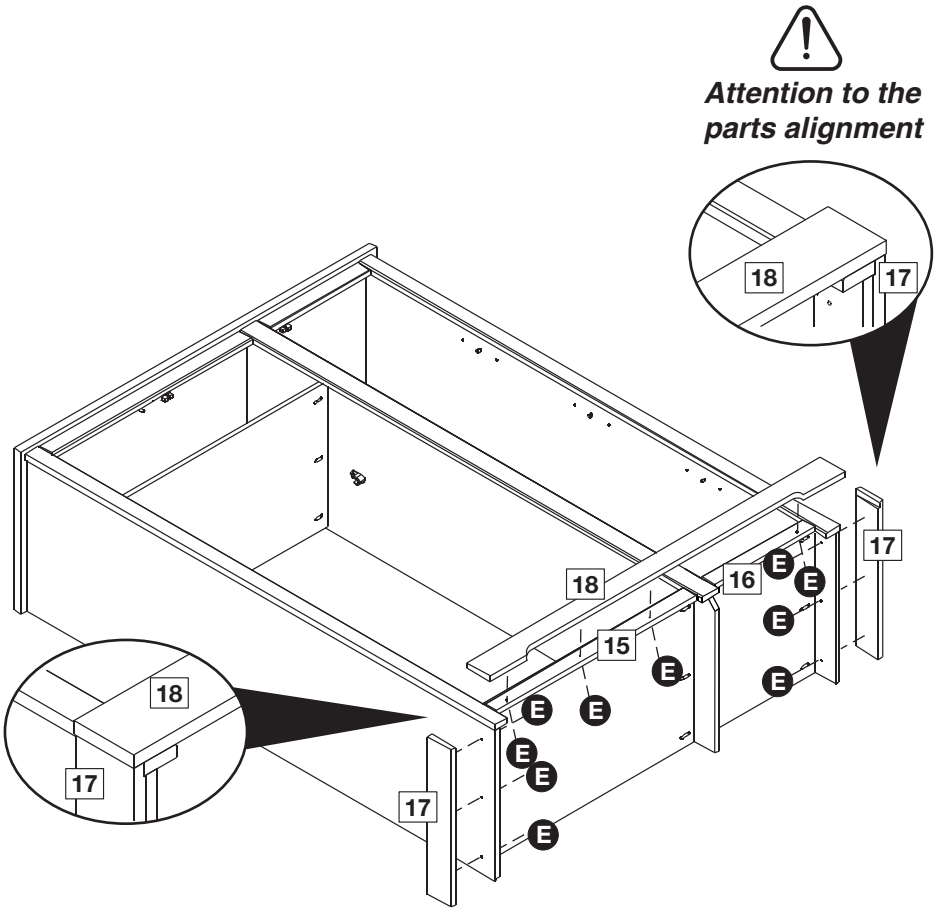

Step **14**

Fixing metal brackets:

Fix metal brackets F to the base panel and bottom frame using screws D as shown.

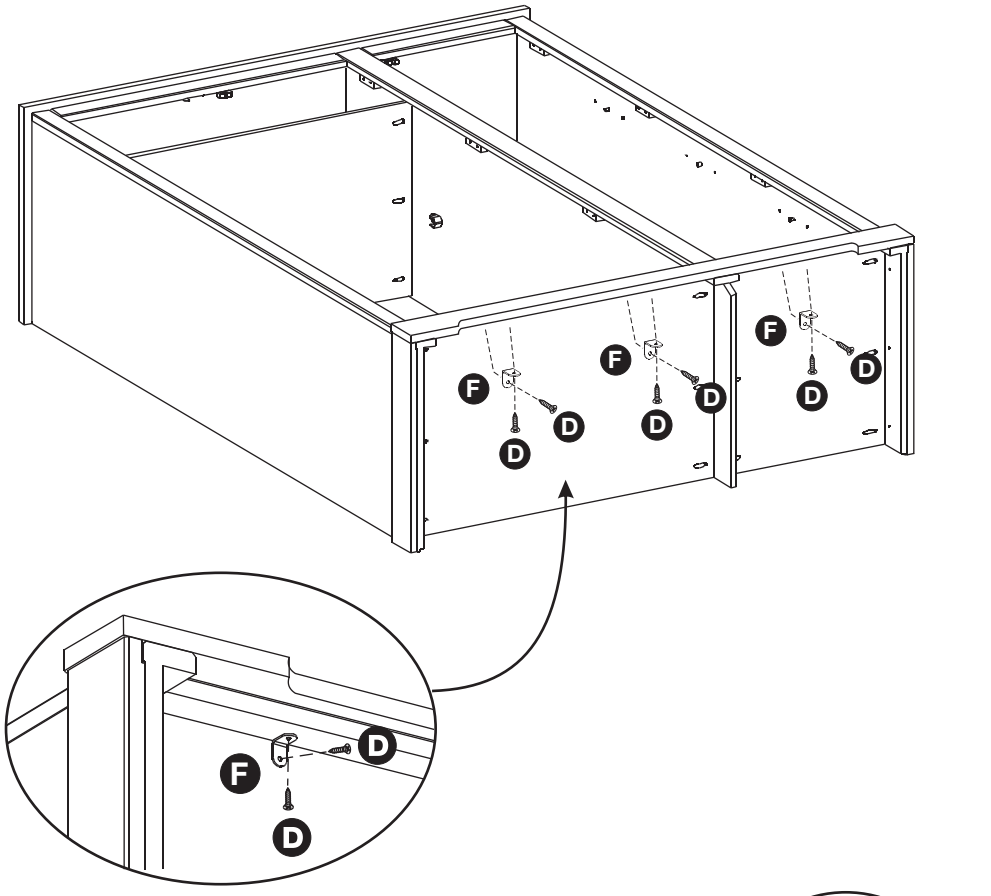


Step **15**

Placing shelves and hanging rail:

Carefully turn the product upright.

a: Place hanging rail 14 into the supports within the cabinet as shown.

b: Place adjustable shelves 11 to the cabinet as shown.

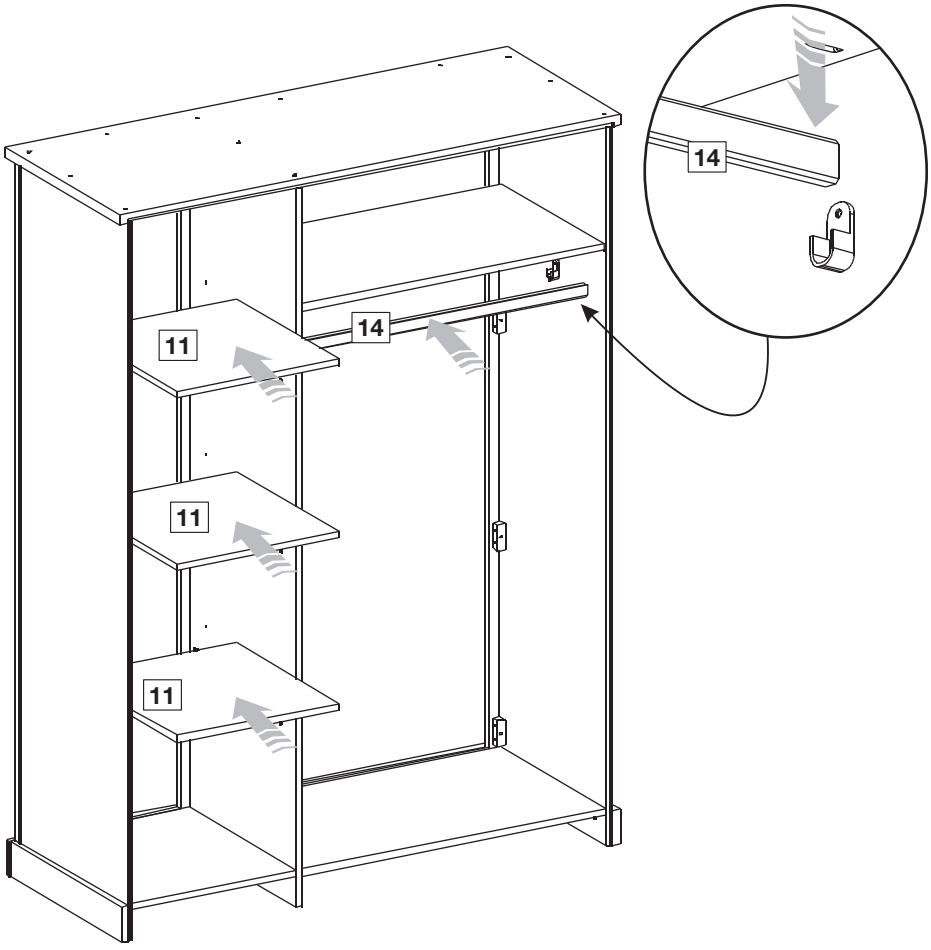

Step **16**


Fixing back panels:


Important:
Cabinet MUST be "square" when back panels are attached.


a: Attach the large back panel 24 and small back panel 20 first using nails H.

b: Position small profile 19 and large profile 25 to the attached back panel.

c: Carefully slot the second back panel 20 into profiles and fix it to the cabinet using nails H.

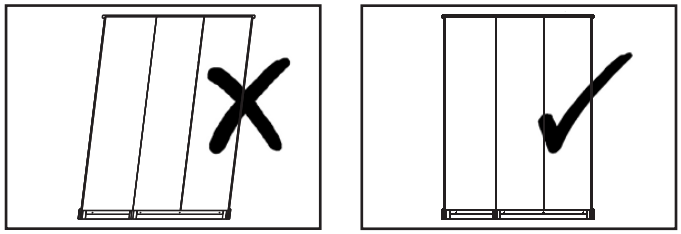

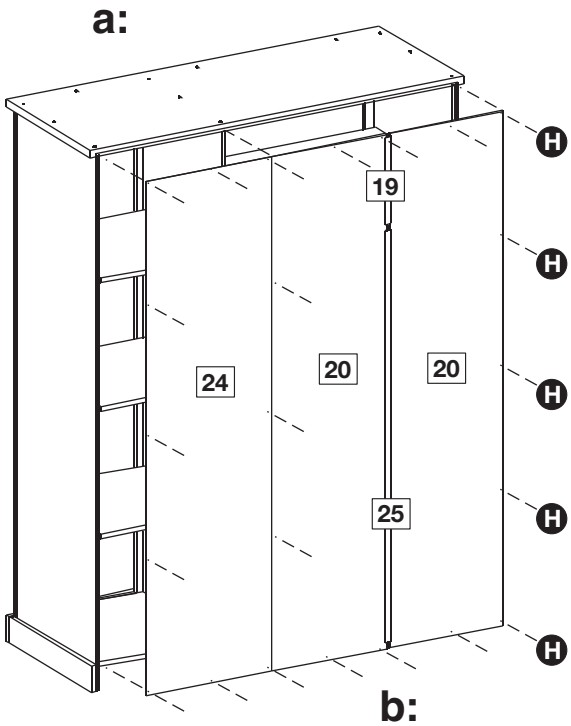


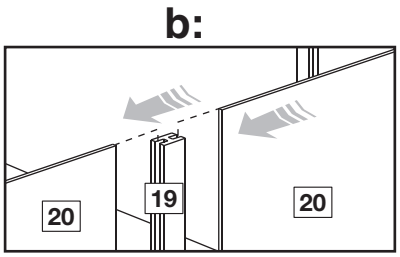


Step **17**

Fixing door clip:

Fix the door clip S and door knocker I to the pre marked holes on base panel using screws D as shown.

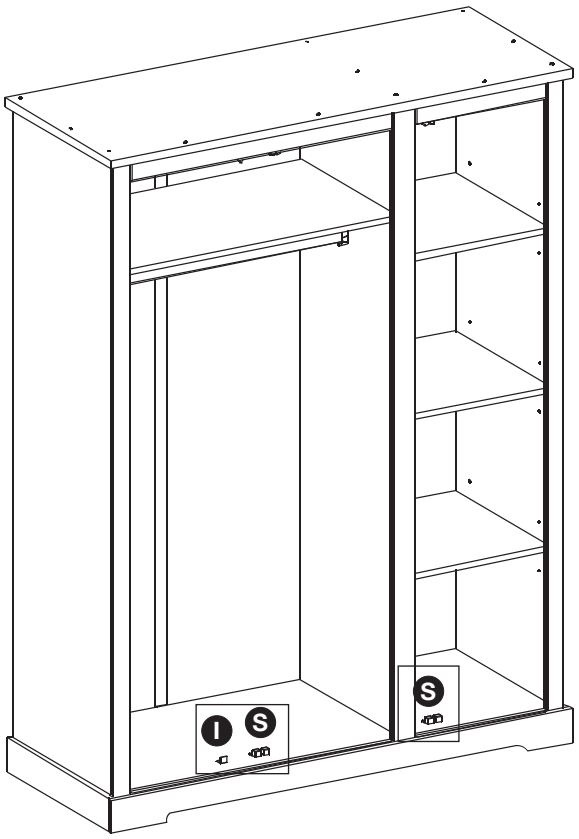

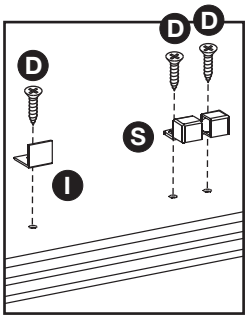

Pre marked holes.

Step **18**

Preparing the doors:


Right door:

a: Fix door clips **L** to the pre marked holes on right door 23 using screws **D** as shown.

b: Attach right hinge **J** to the pre marked holes on right door 23 using screws **D**.

Repeat step 18 for the centre door 27.

Note: Make sure hinges are positioned as shown in the diagram.

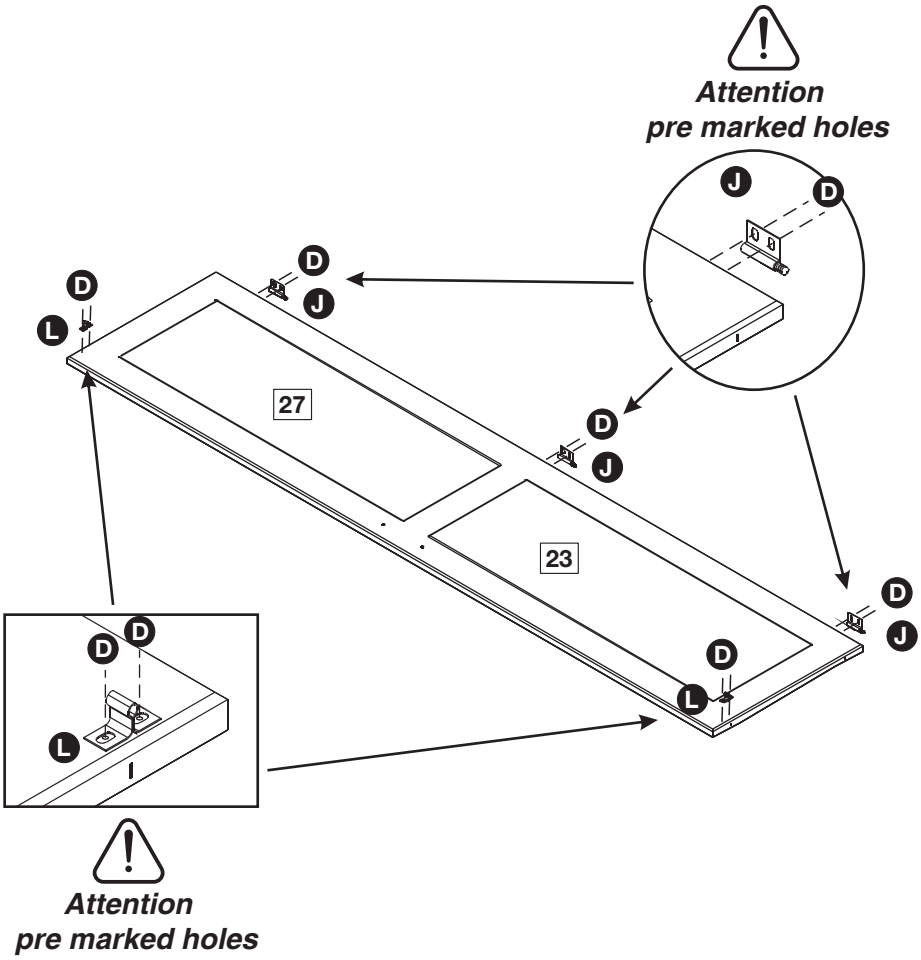


Left door:

a: Fix door knocker 22 to the pre marked holes on the left door 21 using screws **D** as shown.

b: Attach left hinge **K** to the pre marked holes on left door 21 using screws **D**.


Note: Make sure hinges are positioned as shown in the diagram.

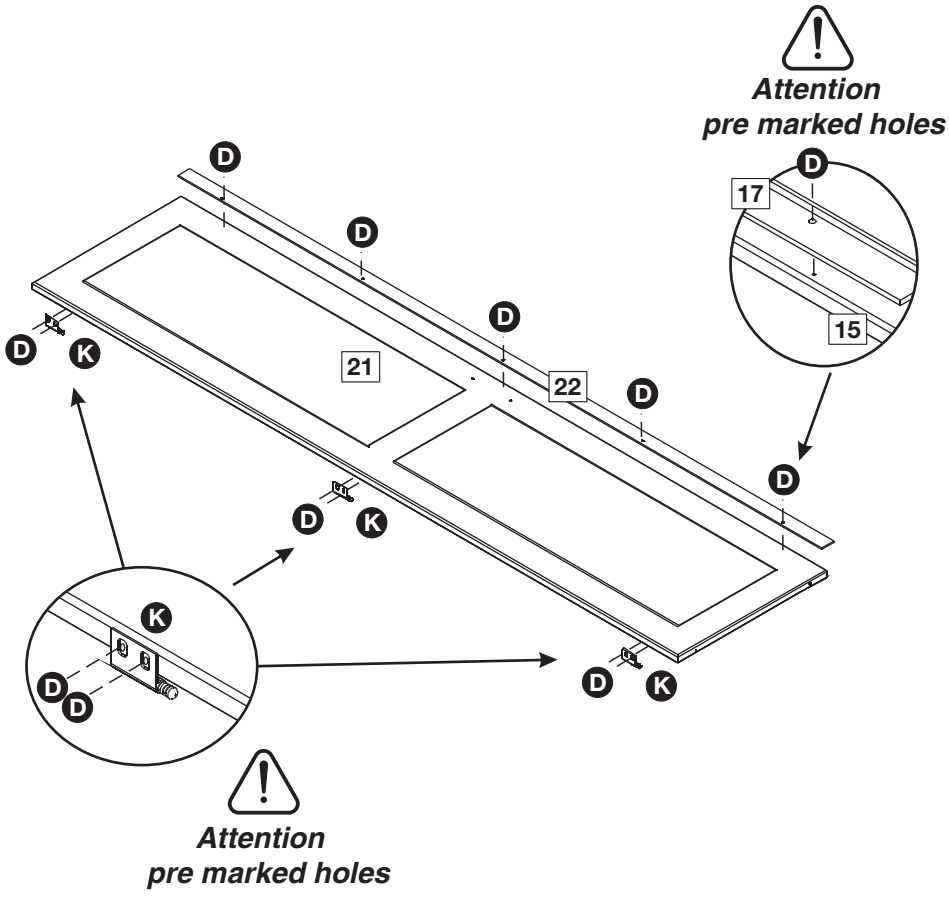

Step **19**

Carefully turn the doors with their front facing up.

Fix handles (M) to the doors using bolts (N).

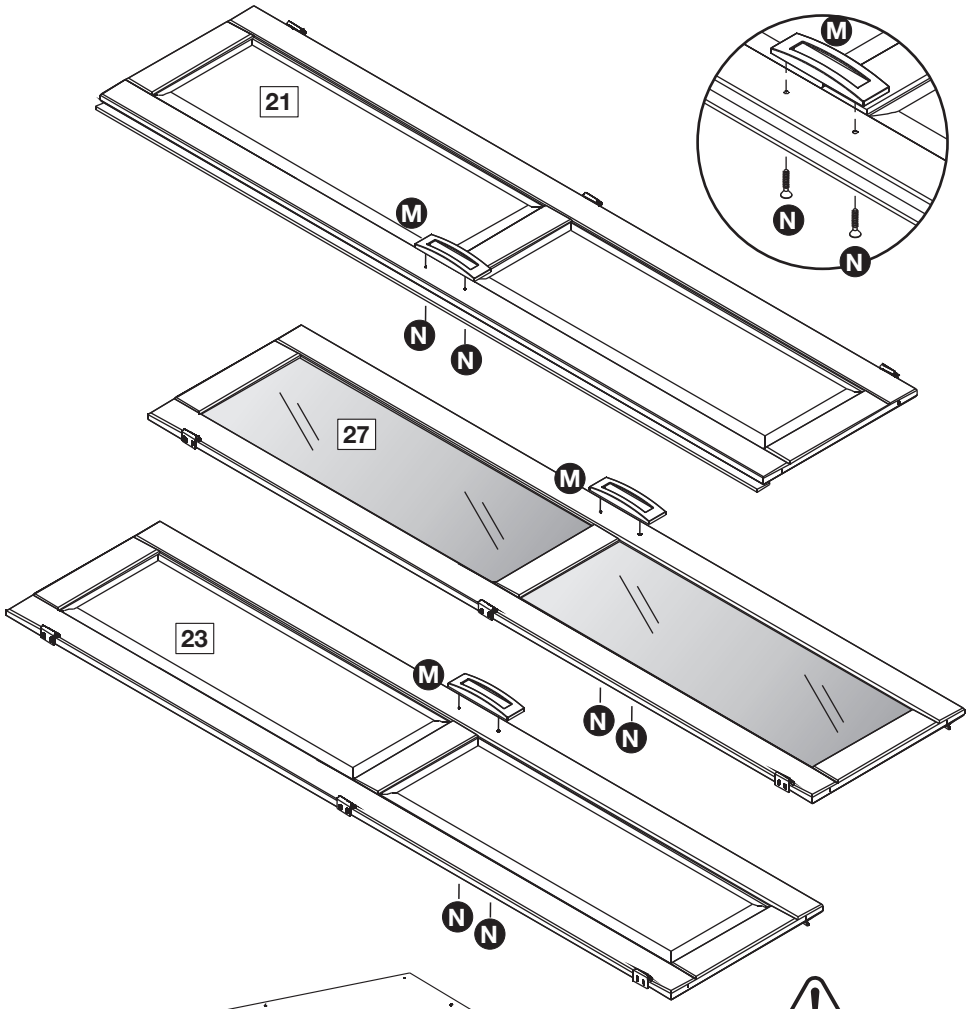

Step **20**


Fixing hinges:

a: Fix left door hinges (K) to the pre marked holes on the left front frame as shown.


Note correct position of the hinge prior to fixing.

b: Fix right door hinges (J) to the pre marked holes on the right front frame as shown.

Note correct position of the hinge prior to fixing.

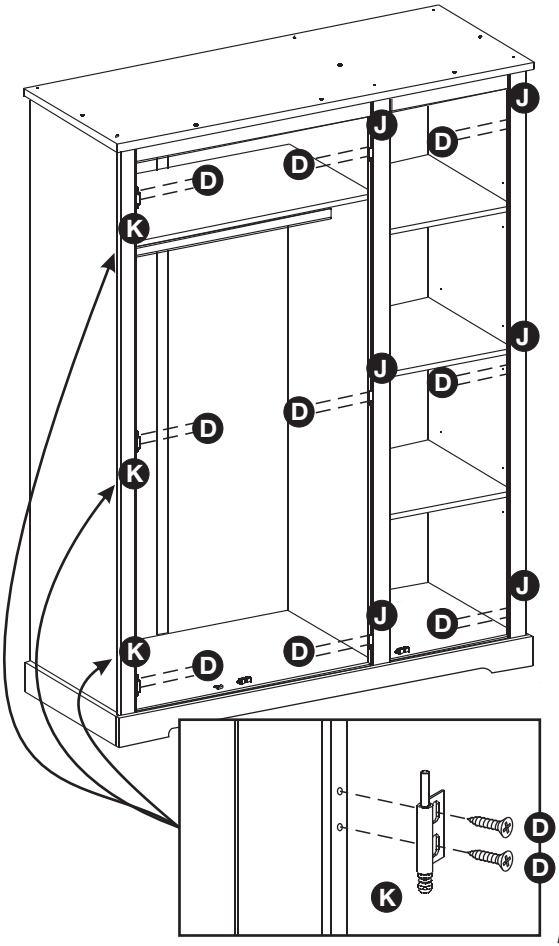

Attention
pre marked holes

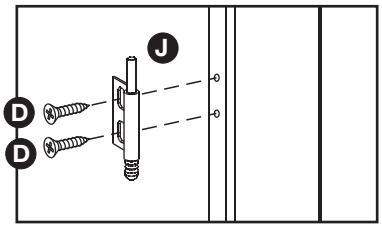


Attention
pre marked holes

Step **21**

Fitting doors:


With help fit door hinges together as shown in the diagram.

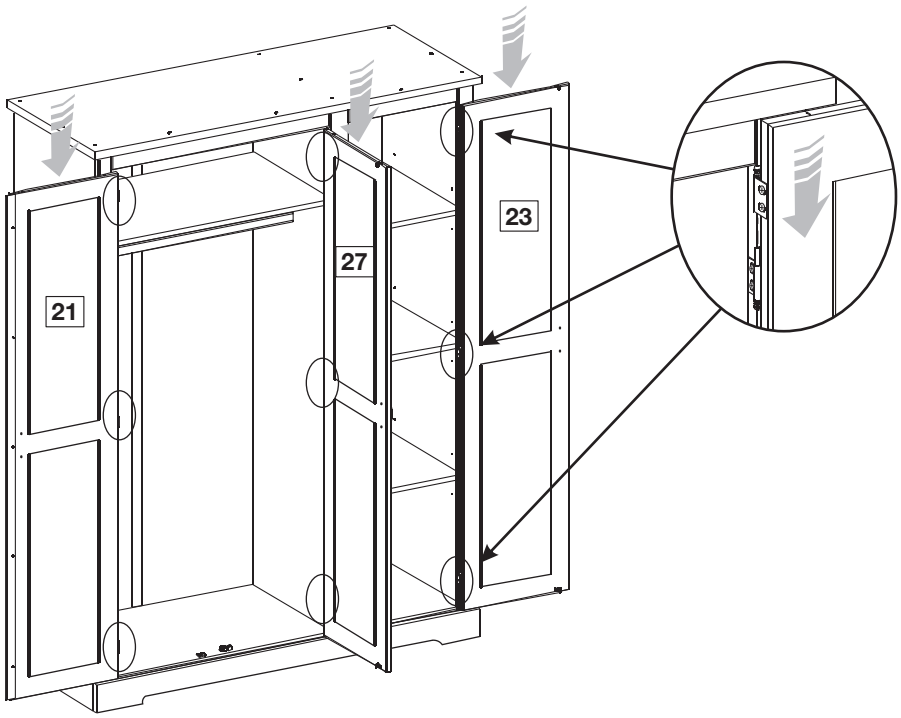


Step **22**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap Ⓟ to top of furniture using washer Ⓠ and screw Ⓓ. With help, move furniture into position.

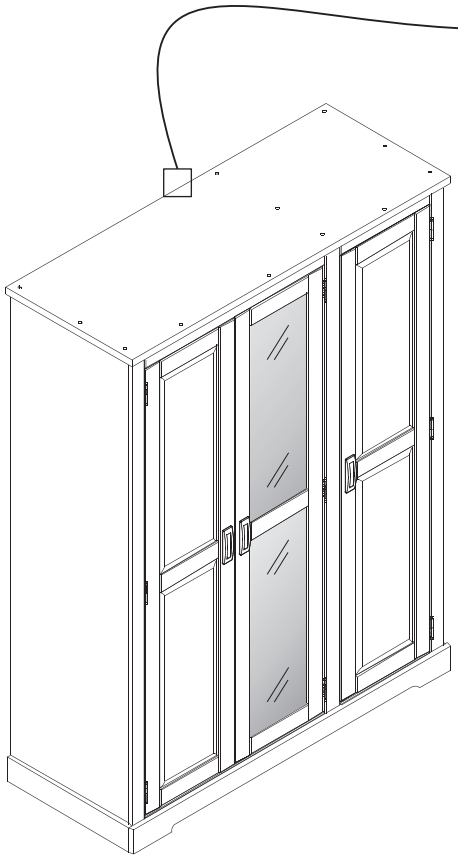

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

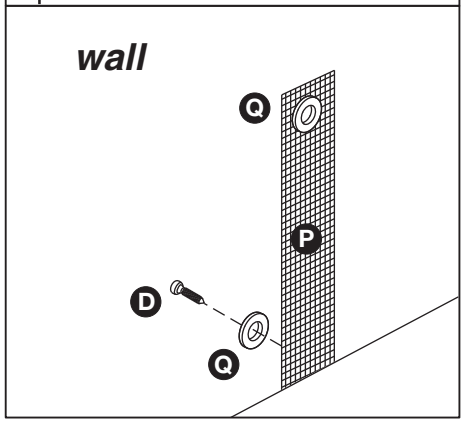


Assembly is complete.

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

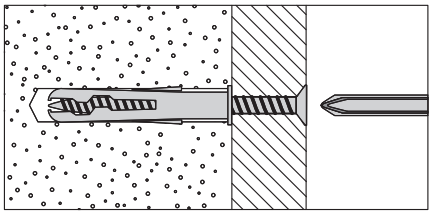


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

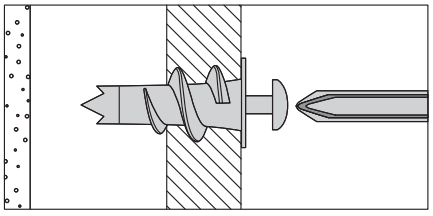


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

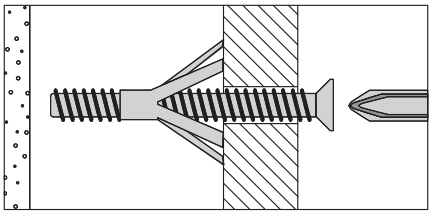


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

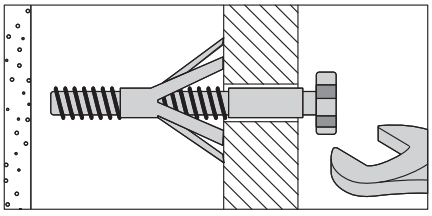


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

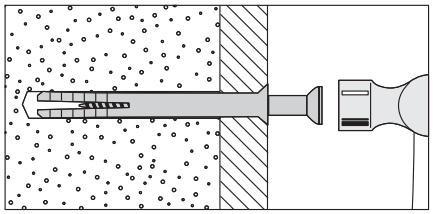

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

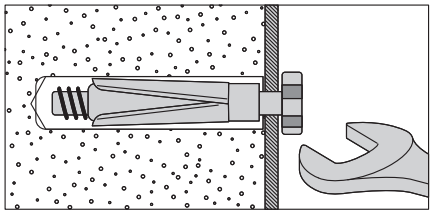

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.