
avignon 4ft 6 frame

Assembly Instructions - Please keep for future reference | **379/9806** | **382/1585**

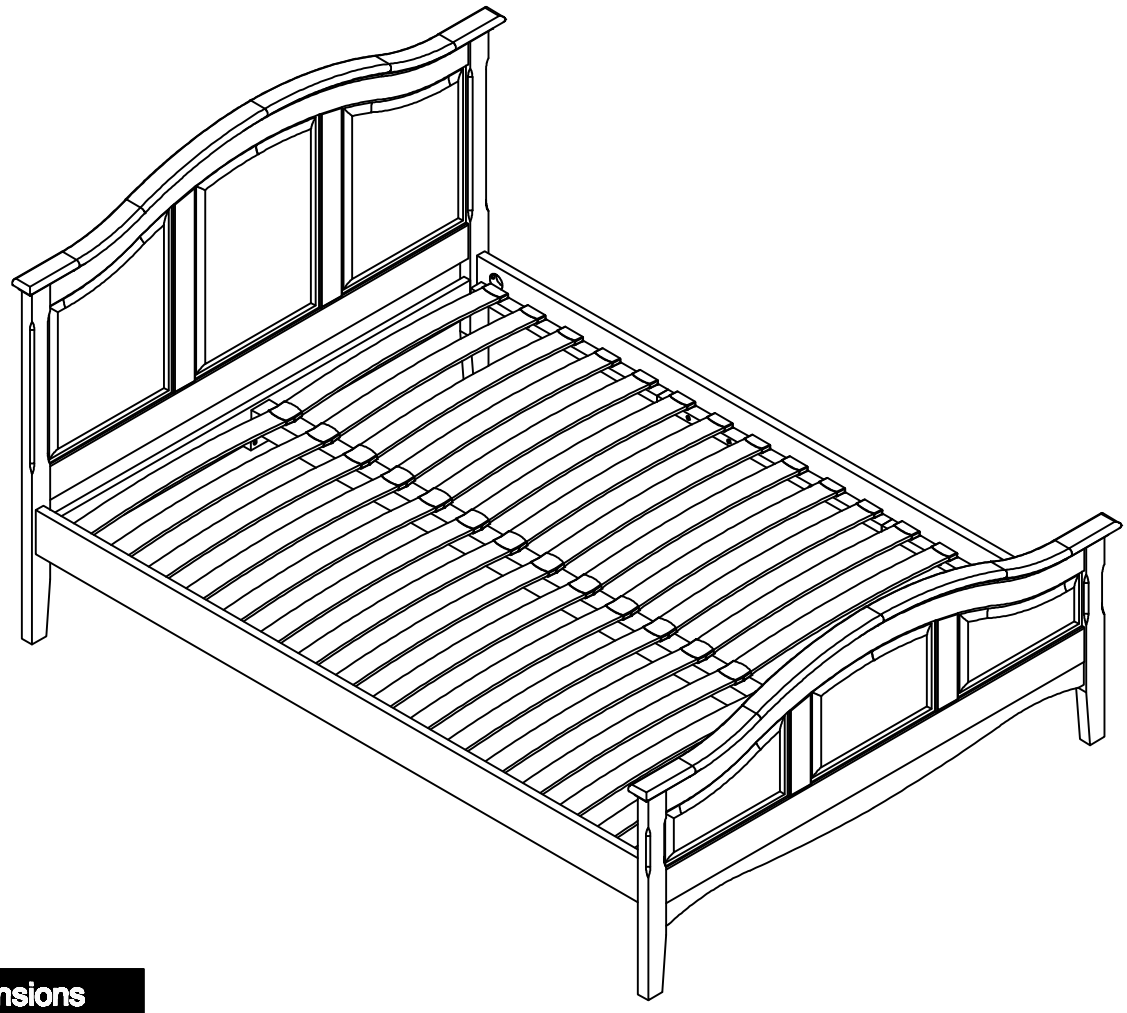

Dimensions

Width - 199.9cm
Depth - 149.8cm
Height - 111cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the Customer Helpline: Argos = 0345 6400 800

Issue 1 - 15/11/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Check you have all the components and tools listed on pages 2 and 3.**
- **Remove all fittings from the plastic bags and separate them into their groups.**
- **Keep children and animals away from the work area, small parts could choke if swallowed.**
- **Make sure you have enough space to layout the parts before starting.**
- **Do not stand or put weight on the product, this could cause damage.**
- **Assemble the item as close to its final position (in the same room) as possible.**
- **Assemble on a soft level surface to avoid damaging the unit or your floor.**
- **Parts of the assembly will be easier with 2 people.**



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torgue setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.


Components - Panels

If you have damaged or missing componets, call the Customer Helpline: Argos = 0345 6400 800


Please check you have all the panels listed below

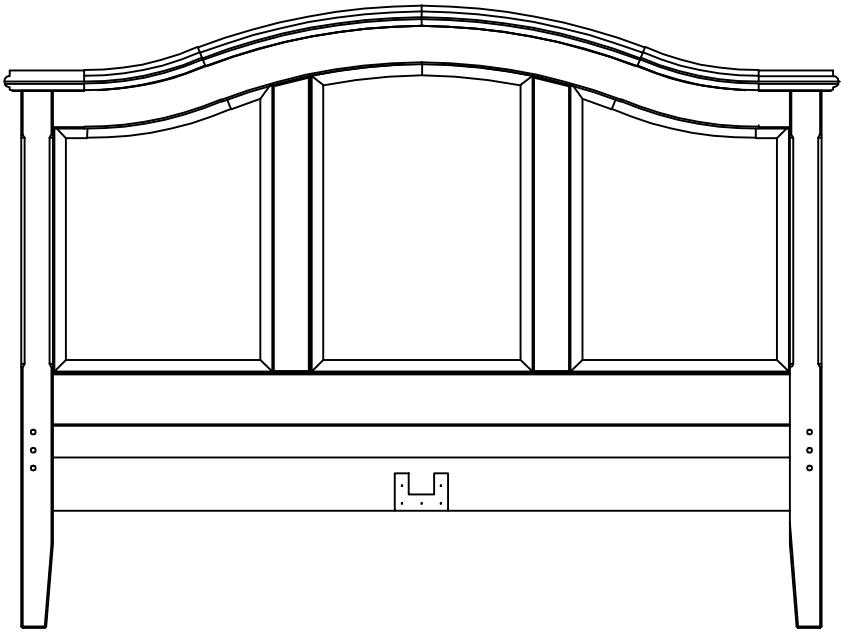


1 Headboard × 1 (149.8× 111cm)

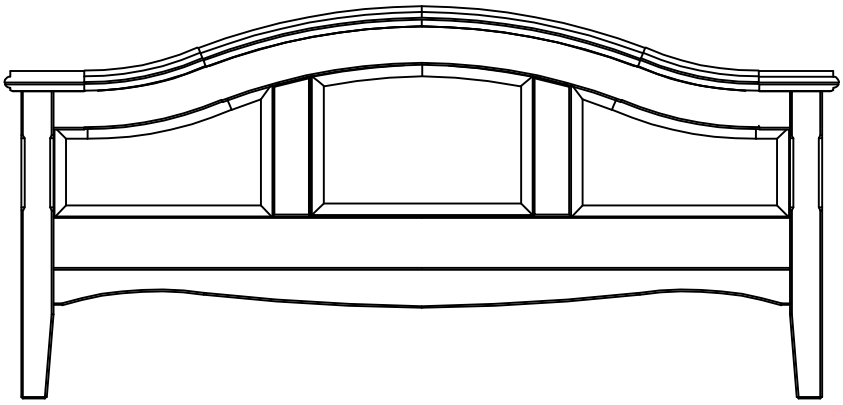


2 Footboard × 1 (149.8 ×70cm)



3 Side Frame × 2 (191 ×12cm)



4 Slat holder × 1 (191.3 × 5.6cm)








5 Sprung slats × 32 (67.4 × 6cm)


Components - Fittings


Please check you have all the fittings listed below


Note: **The quantities below are the correct amount to complete the assemb ly. In some cases more fittings may be supplied than are required.**

A  Ø10 ×40mm Wooden dowel × 8	**B**  Ø8 ×95mm Bolt × 4	**C**  Connector × 4
D  Nut × 4	**E**  Allen wrench × 1	**F**  Cap × 4
G  Plastic cap× 32	**H**  Plastic cap× 16	


Tools required


Phillips screwdriver
(medium & large)


Rubber mallet


Flatblade screwdriver
(medium)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fixing bolts

Insert 4 bolts B into headboard 1 and footboard 2.

Note: There are 2 panels inside the frame of the headboard and footboard, if there is a gap within 1mm, it is not a crack.

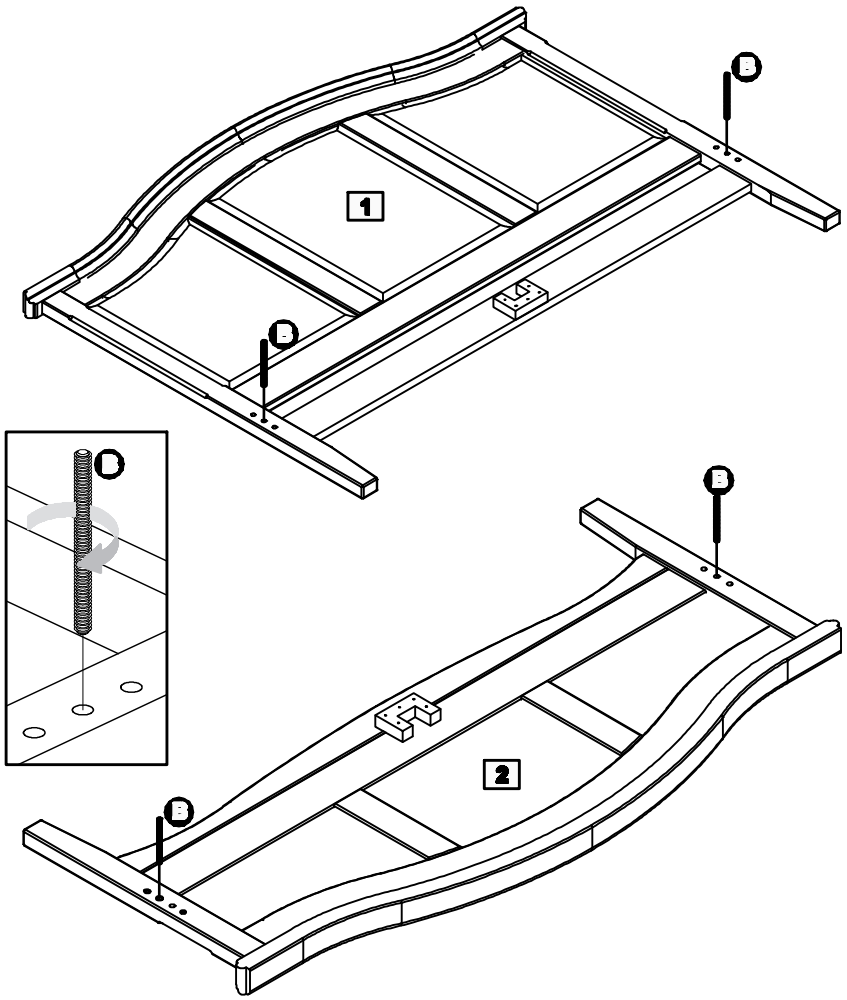


Step 2

Fitting dowels

Insert 4 wooden dowels A into side frame 3.

Repeat above step with the other side frame 3.

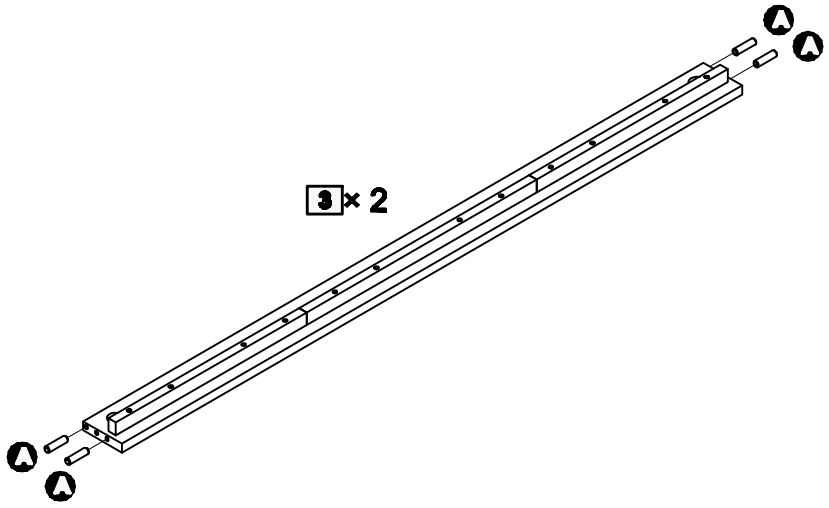

Assembly Instructions

Step 3

Fixing the Bed Frame


Two people are needed here.

Fix the side frame [3] onto the headboard [1].

Insert 4 Connectors (C) into Side Frame [3] where shown.

Use allen wrench (E) to turn bolts (D) lockwise to lock.


Cover the cap (F) to the hole in the side frame.

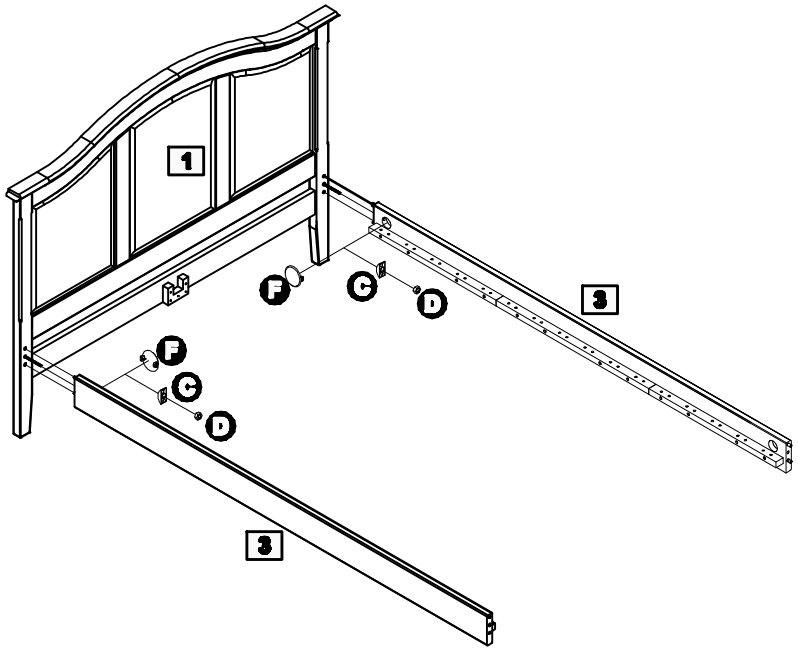


Step 4

Fixing the footboard

Fixing the footboard [2] onto the unit as Step 3.

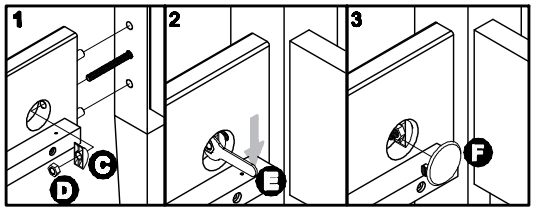

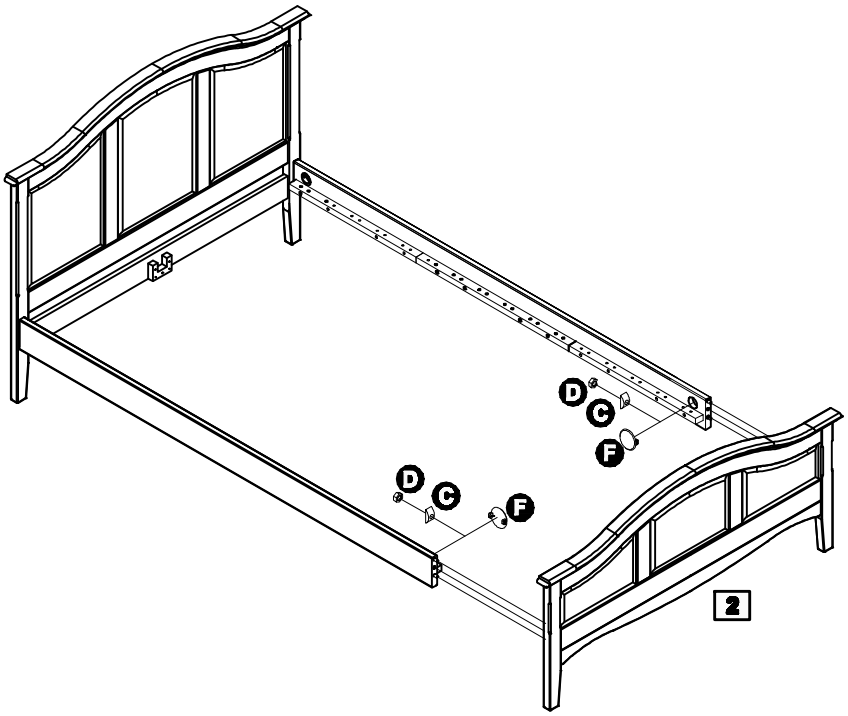



Assembly Instructions

Step 5

Fixing the slat holder

Fixing the slat holder [4] onto the unit. Pls note the end with arrow mark should attach to the headboard.

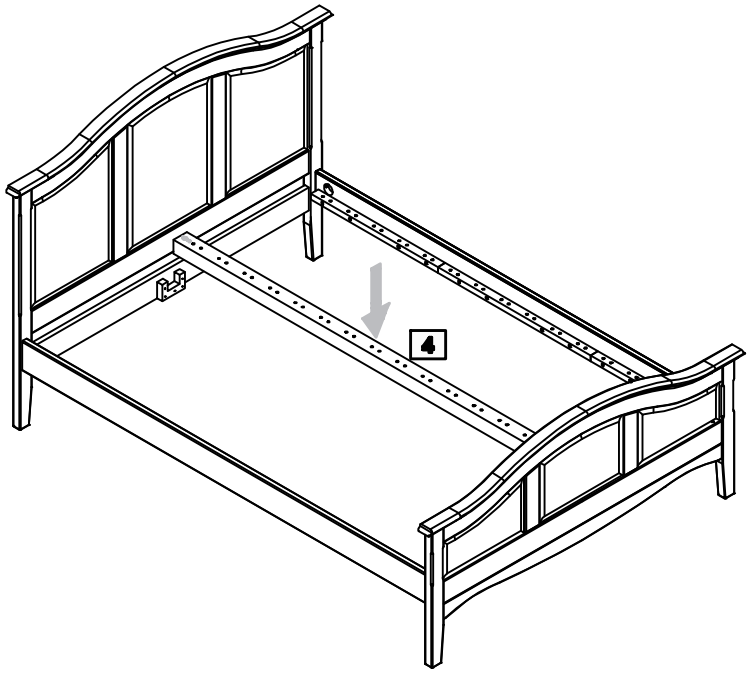


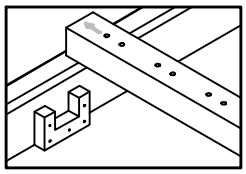

Step 6

Attach plastic caps

Attach Plastic caps (H) and (G) to Sprung slats [5] as show on picture.

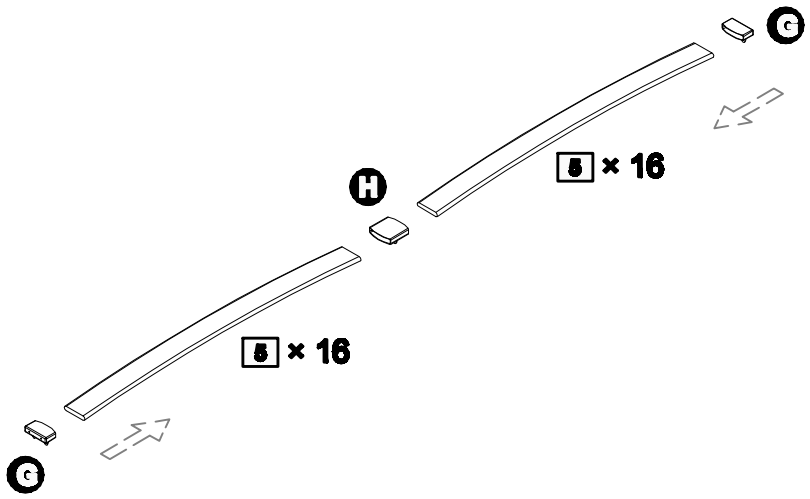



Assembly Instructions

Step 7

Fixing the slats

Push the Pins of the Plastic caps to the holds on the bed frames to fix the slats.

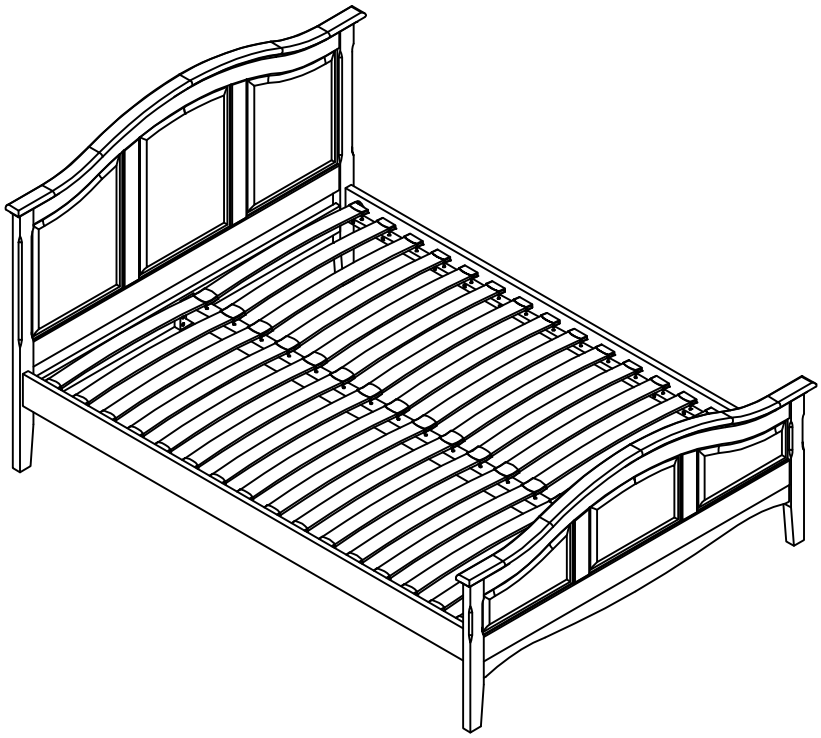

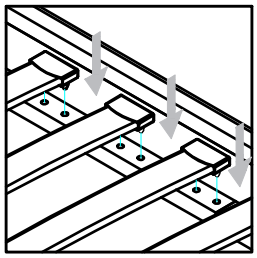

This bed is made from timber which will continue to adjust to the environment in which it is in (i.e. the bedroom). This may lead to minor cracking at the joints and is to be expected on a premium solid timber piece of furniture.

Assembly is complete.

If you need help or have damaged or missing parts,call the Customer Helpline: = 03456 400800
Retailer: Argos
Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9,2NW