
Kids Sywell - Cabin Bed

Assembly Instructions - Please keep for future reference

385/1775
365/7120
379/1316
376/6853
385/3845
357/6232

WARNING
NOT SUITABLE FOR CHILDREN UNDER 4 YEARS OF AGE .

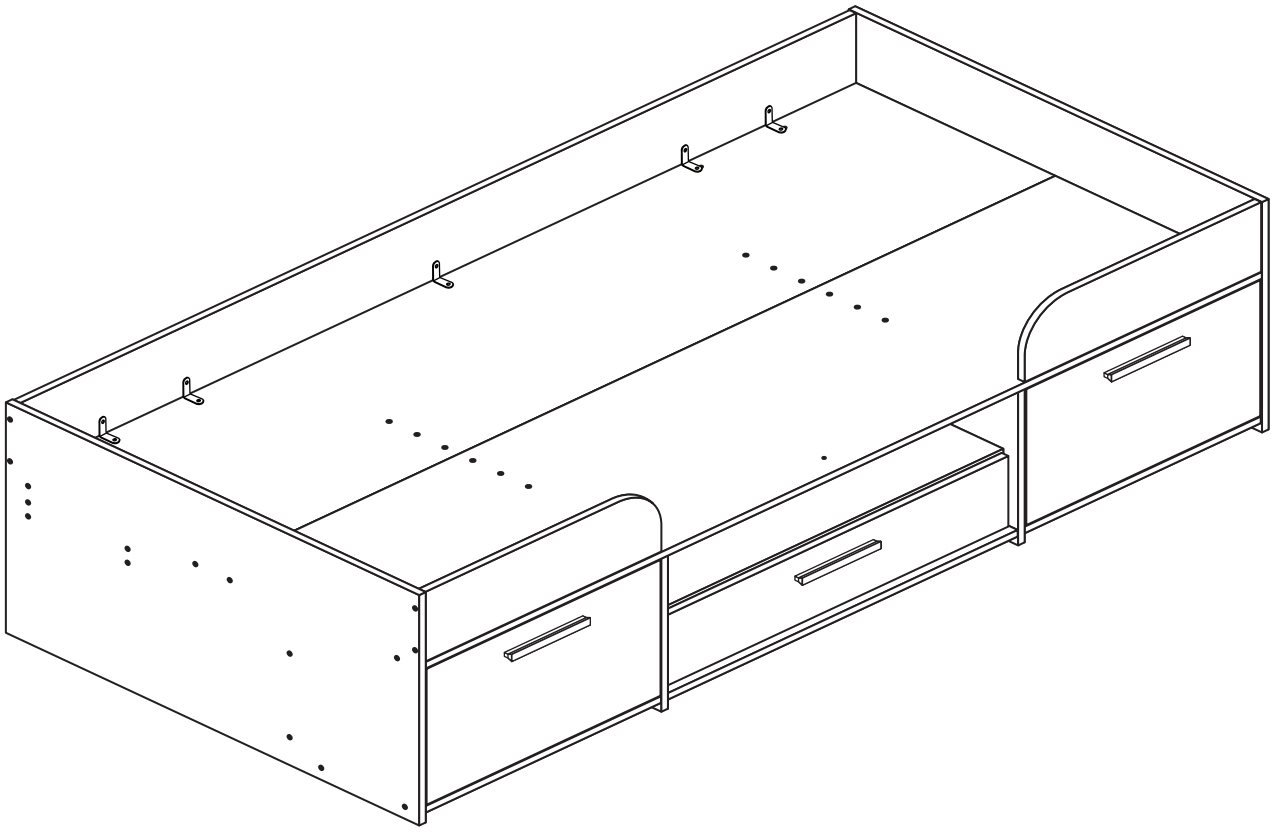

Dimensions
Width - 195cm
Depth - 95cm
Height - 53cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 3 - 23/01/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 66kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).


• Dispose of all packaging carefully and responsibly.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

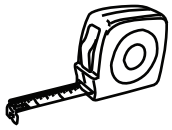


Rule




Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)


IMPORTANT
On a regular basis please check that the screws and fittings have not become loose as this could present a potential choke hazard.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

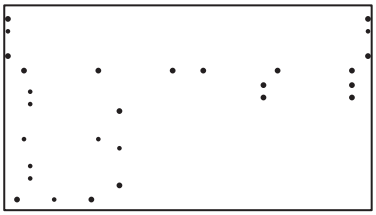


1 Left Side *(DF1658)*
(949 x 529mm)

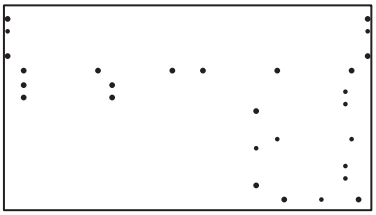


2 Right Side *(DF1659)*
(949 x 529mm)




3 Left Quadrant *(DF2481)*
(543 x 160mm)



4 Right Quadrant *(DF1661)*
(543 x 160mm)

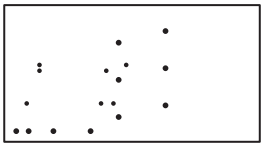

5 Left Upright *(DF1664)*
(353 x 660mm)

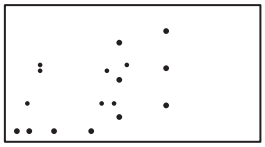


6 Right Upright *(DF1665)*
(353 x 660mm)




7 Left Base *(DF1663)*
(543 x 287mm)



8 Right Base *(DF2480)*
(543 x 287mm)

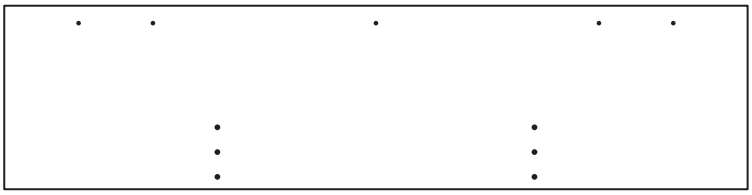


9 Bed Base *(DF1667)*
(1920 x 474mm) x 2




10 Cross Rail *(DF1668)*
(804 x 92mm)



12 Fixed Shelf *(DF1671)*
(804 x 377mm)



11 Back Panel *(DF1660)*
(1920 x 160mm)



13 Support Rail *(DF1673)*
(1920 x 92mm) x 2




14 Centre Back *(DF1670)*
(804 x 353mm)




15 End Back *(DF1669)*
(543 x 353mm) x 2




16 Loose Shelf *(DF1672)*
(543 x 257mm) x 2

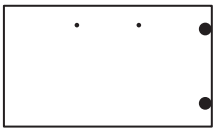

17 Left Door *(DF1662)*
(312 x 537mm)

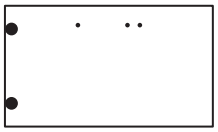


18 Righ Door *(DF2482)*
(312 x 537mm)




19 Drawer Front *(DF1666)*
(800 x 162mm)



21 Left Drawer Side *(W370-124LH)*
(370 x 124mm)



23 Drawer Base *(T784-367)*
(784 x 367mm)



20 Drawer Back *(W773-124)*
(773 x 124mm)



22 Right Drawer Side *(W370-124RH)*
(370 x 124mm)




Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Wooden dowel *(F22)* x 24

B 

Metal dowel *(F901)* x 6

C 

Knock-in Peg *(F171GY)* x 4

D 

Shelf stud *(F110)* x 8

E 


Large locking nut *(F900)* x 8

F 

Small locking nut *(F3)* x 2

G 

50mm Screw *(F49)* x 50

H 

45mm Screw *(F65)* x 5

I 

25mm Screw *(F95)* x 6

J 

13mm Screw *(F79)* x 9

K 

13mm Screw *(F52)* x 4

L 

13mm Screw *(F63)* x 8

M 

9mm Screw *(F74)* x 2

N 


9mm Screw (*F73)* x 4

O 


Allen Key *(F36)* x 1

P 


Wedgefix *(F639)* x 4

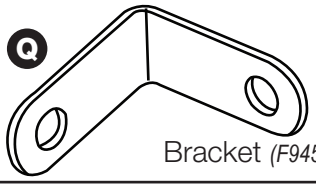Q 


Bracket *(F945)* x 9

R 


Plastic Nail *(F91)* x 12

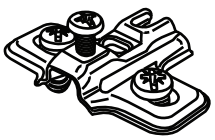S 

Hinge plate *(F523)* x 4

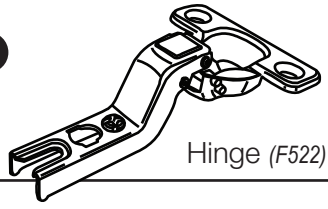T 


Hinge *(F522)* x 4

U 

Double metal dowel *(F566)* x 2


V 

Drawer runner *(F1004)* x 2

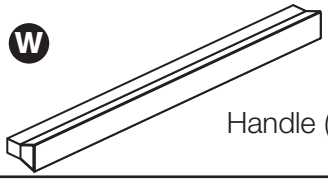W 

Handle (*F315)* x 3

Ruler - Use this ruler to help correctly identify the screws

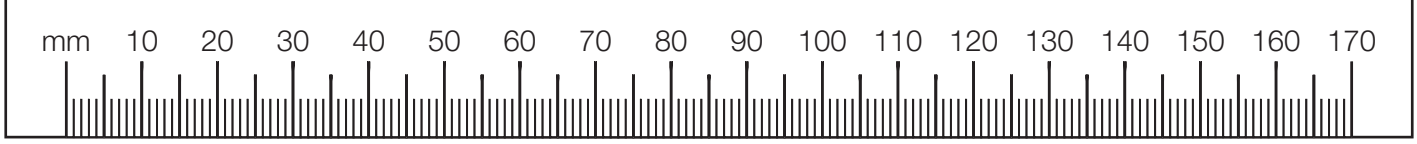

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer front

Screw 2 metal dowels B into the drawer front 19.

Note: Tighten the metal dowels up fully against the panels.

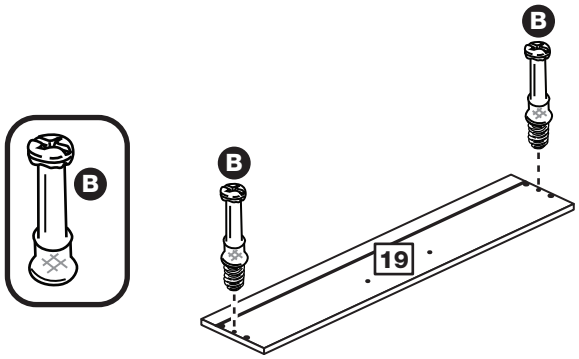


Step 2

Prepare the drawer sides

Insert a small locking nut F into the hole shown on the left drawer side 21 and the right drawer side 22.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

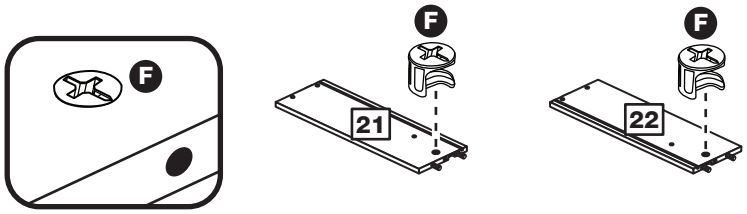


Step 3

Attach the drawer sides to the drawer front

Push the left drawer sides 21 and right drawer sides 22 onto the back of the drawer front 19.

Turn the small locking nuts F on the left drawer side 21 and right drawer side 22.

Note: Turn the locking nuts F clockwise to secure panels - more than 1/2 a turn.

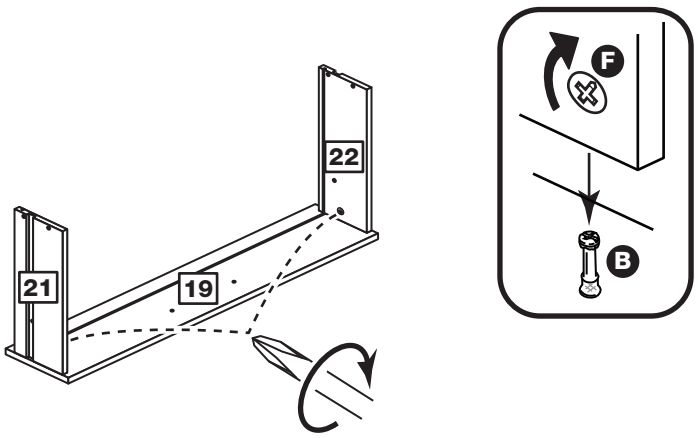


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 23 down the grooves in the drawer sides 21 and 22 and down into the groove in the drawer front 19.

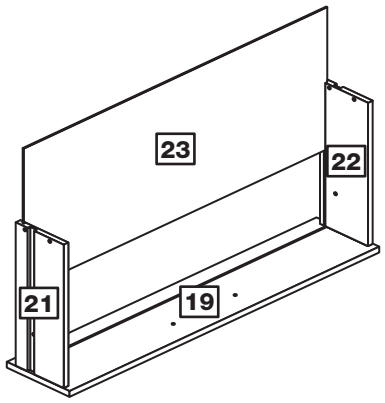


Step 5

Fit the drawer back

Fit the drawer back 20 between the drawer sides 21 and 22. Make sure that the drawer base 23 fits into the groove in the drawer back 20.

Hold the drawer back 20 in position and tap the knock-in pegs C through the holes in the drawer sides 21 and 22.

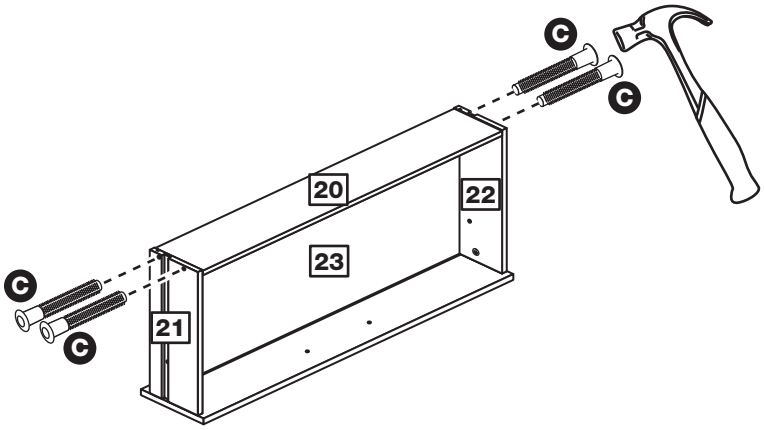


Step 6

Attach the handle

Attach a handle W to the drawer front 19 using 2 screws I.


Note: Do not overtighten the screws.

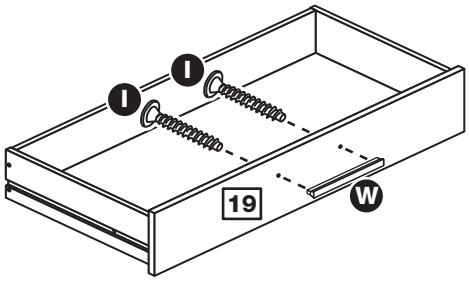


Step 7

Fit the wedgefixes

Turn the drawer assembly over and slide 2 wedgefixes P into the front and back grooves, as shown, and tighten up the screws.

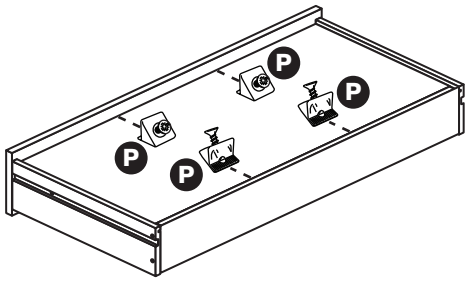

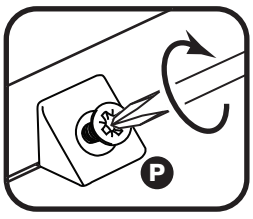

Step 8


Prepare the left upright


a: Tap 2 wooden dowels (A) into the left upright [5].


Place a runner (V) on the left upright [5] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (N).

b: Slide the runner (V) back the other way and fit the 2nd screw (N) into the corresponding hole in the left upright [5].

Screw 2 metal dowels (B) into the left upright [5].

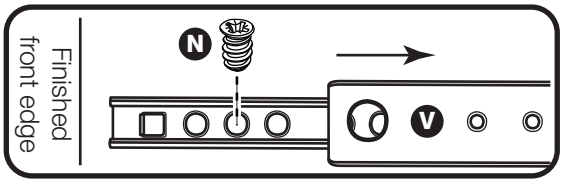

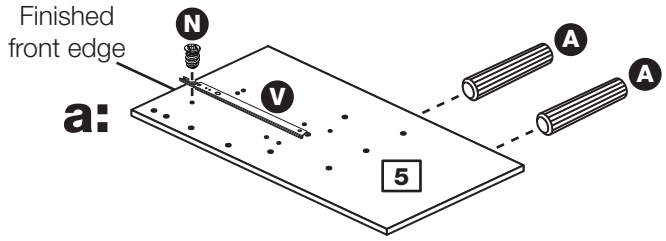

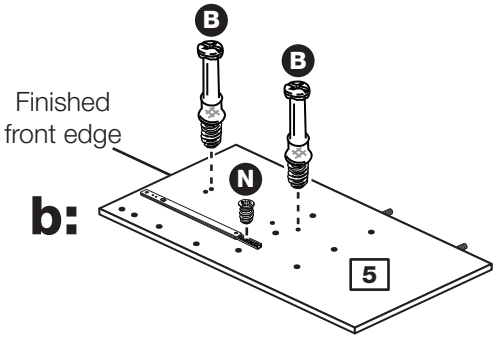

Step 9


Prepare the right upright


a: Tap 2 wooden dowels (A) into the right upright [6].


Place a runner (V) on the right upright [6] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (N).

b: Slide the runner (V) back the other way and fit the 2nd screw (N) into the corresponding hole in the right upright [6].

Screw 2 metal dowels (B) into the right upright [6].

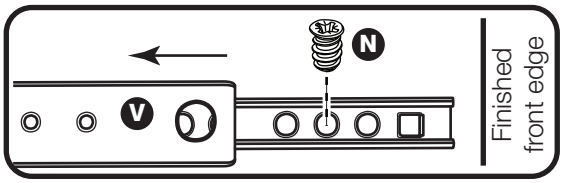

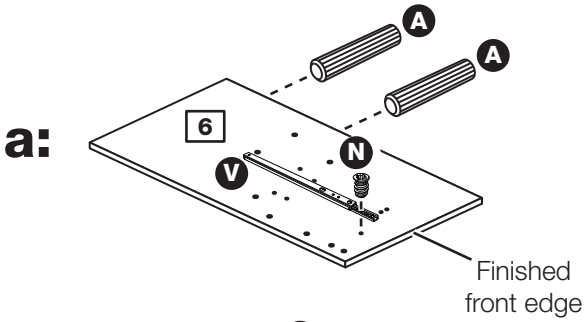

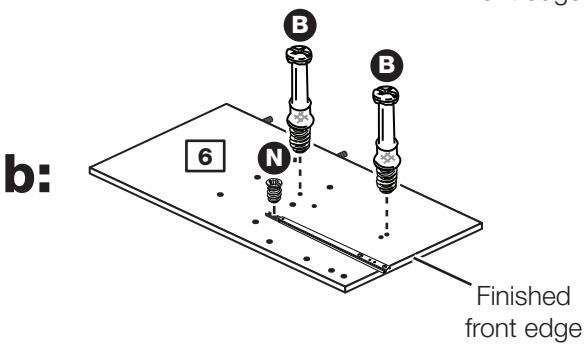


Step 10

Prepare the fixed shelf

Insert 4 large locking nuts E into the fixed shelf 12.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

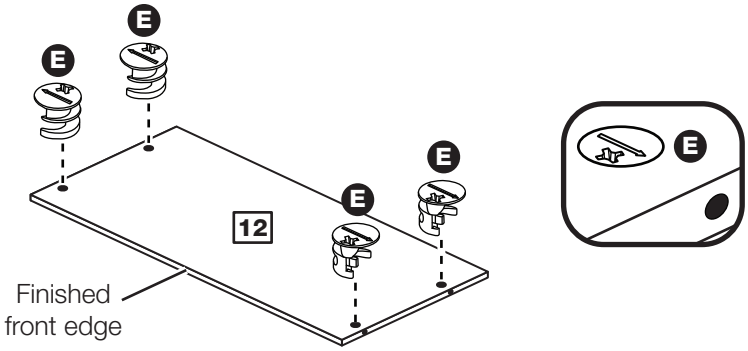


Step 11

Fit the fixed shelf to the right upright

Push the fixed shelf 12 onto the right upright 6.

Use a screwdriver to tighten the 2 large locking nuts E fitted to the fixed shelf 12.

Note: Turn the large locking nuts E as far as they will go - more than 1/2 a turn.

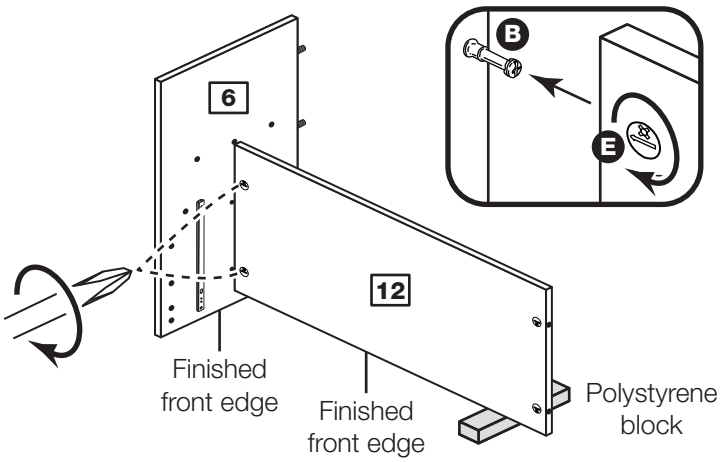


Note: To keep the fixed shelf level, place a polystyrene block from the packaging underneath it.

Step 12

Prepare the cross rail

Tap 2 wooden dowels A into the cross rail 10.

Insert 2 large locking nuts E into the cross rail 10.

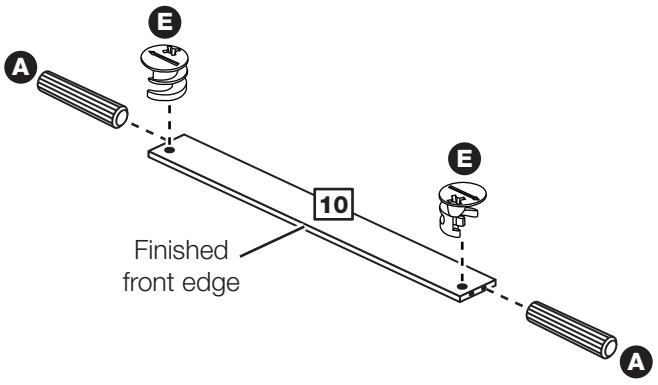


Step 13

Fit the cross rail

a: Tap a double metal dowel U through the right upright 6 and into the cross rail 10 until it ''bottoms out".


b: Use a screwdriver to tighten the large locking nut E fitted to the cross rail 10.

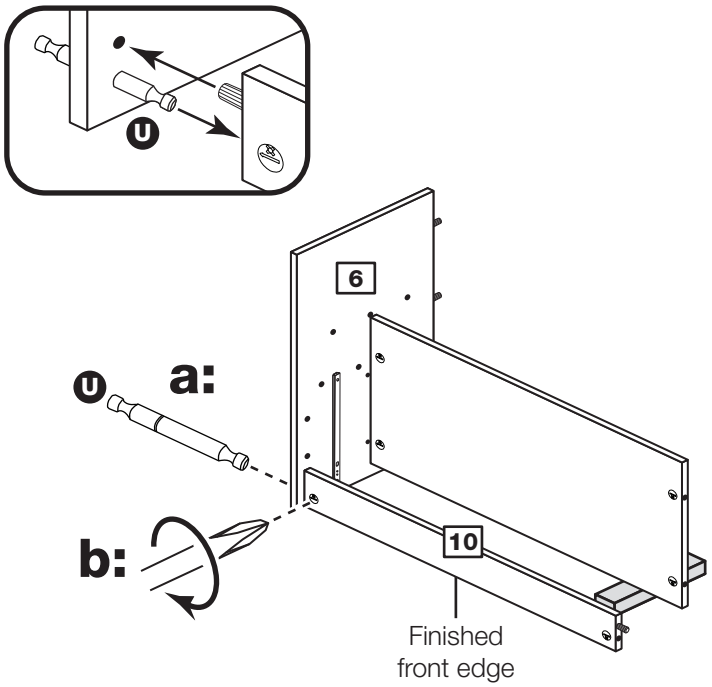

Step 14

Prepare the centre back


Tap 2 wooden dowels A into the centre back 14.

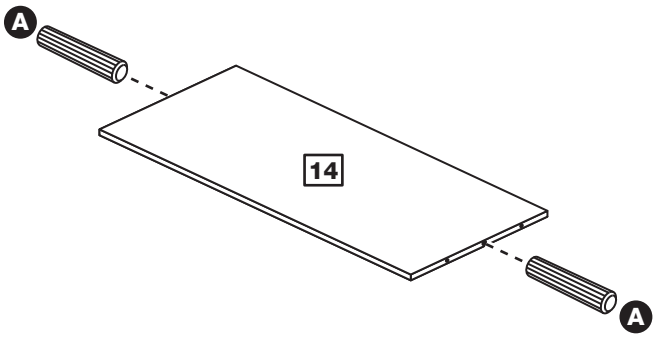

Step 15

Fit the centre back

Fit the centre back 14 onto the right upright 6 using 2 screws G and the allen key O.

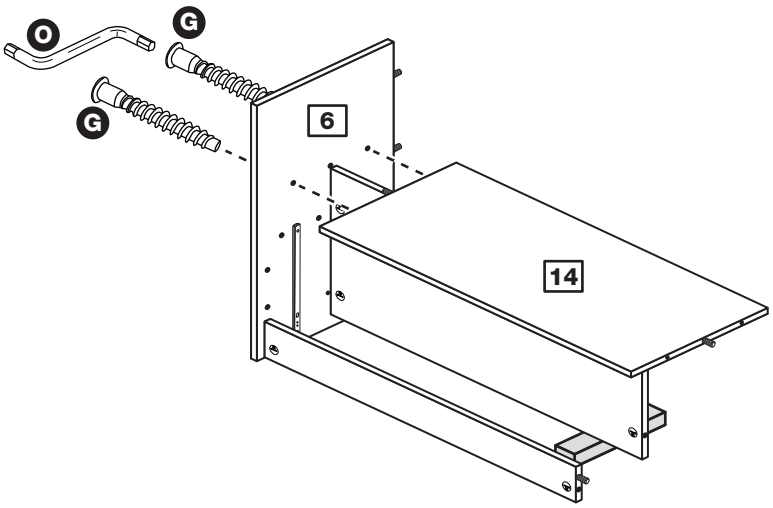


Step 16

Fit the left upright

Push the left upright [5] onto the assembly.

Use a screwdriver to tighten the 2 large locking nuts (E) fitted to the fixed shelf [12].

Secure the left upright [5] to the centre back [14] using 2 screws (G) and the allen key (O).

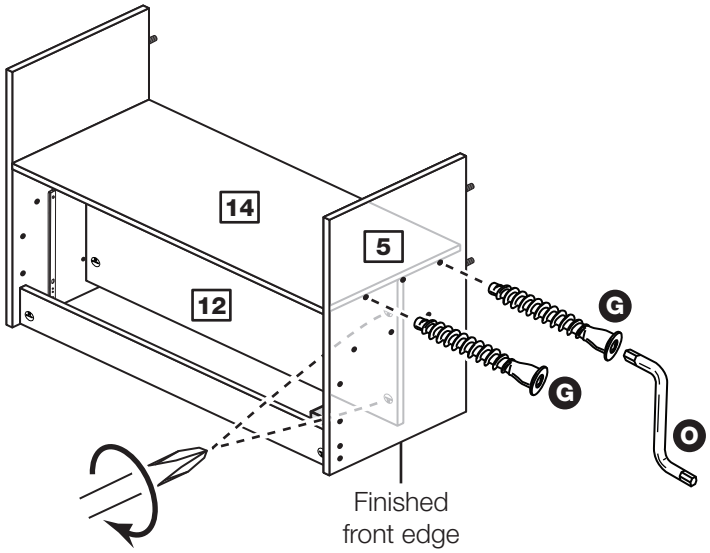


Step 17

Secure the cross rail

a: Tap a double metal dowel (U) through the left upright [5] and into the cross rail [10] until it ''bottoms out".


b: Use a screwdriver to tighten the large locking nut (E) fitted to the cross rail [10].

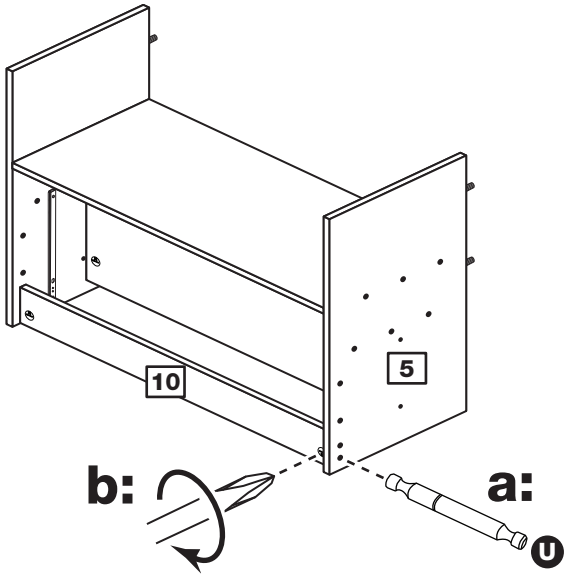

Step 18

Fit 6 plastic nails

Tap 3 plastic nails (R) into the bottom edge of each of the uprights [5] and [6].

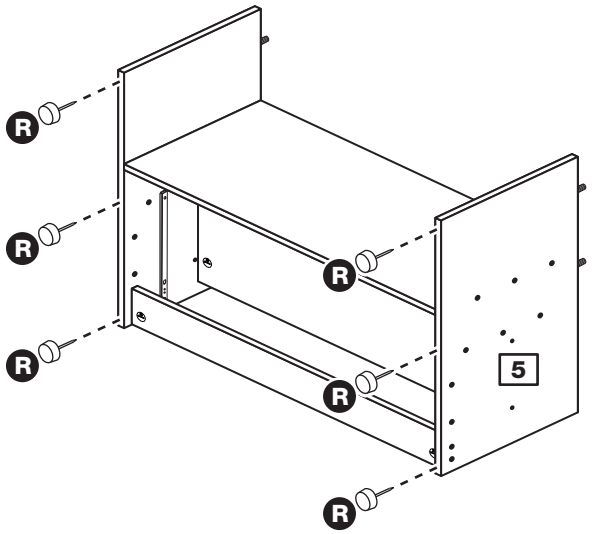


Step 19

Prepare the left and right base

Tap 2 wooden dowels A into the left base 7 and the right base 8.

Insert a large locking nut E into the left base 7 and the right base 8.

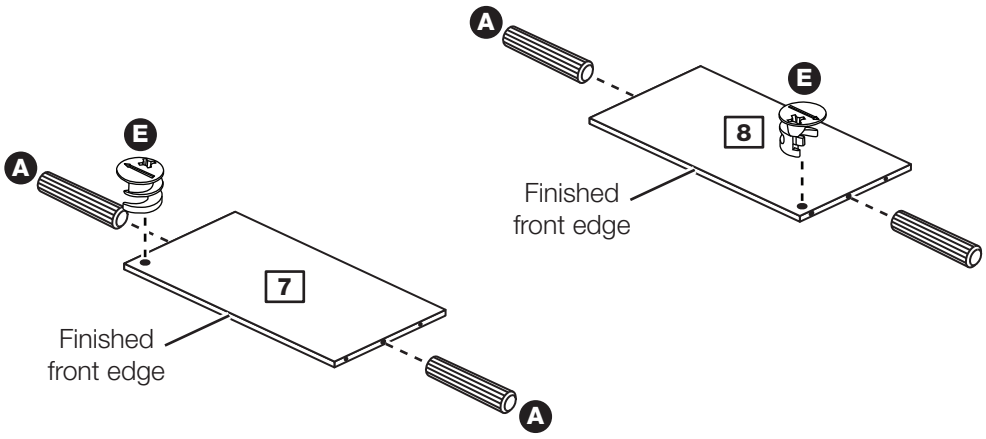

Step 20


Fit the left and right base

Push the left base 7 and right base 8 onto the assembly.

Secure the left base 7 to the left upright 5 using screw G and the allen key O.

Secure the right base 8 to the right upright 6 using screw G and the allen key O.


Use a screwdriver to tighten the large locking nut E fitted to the left base 7 and the right base 8.

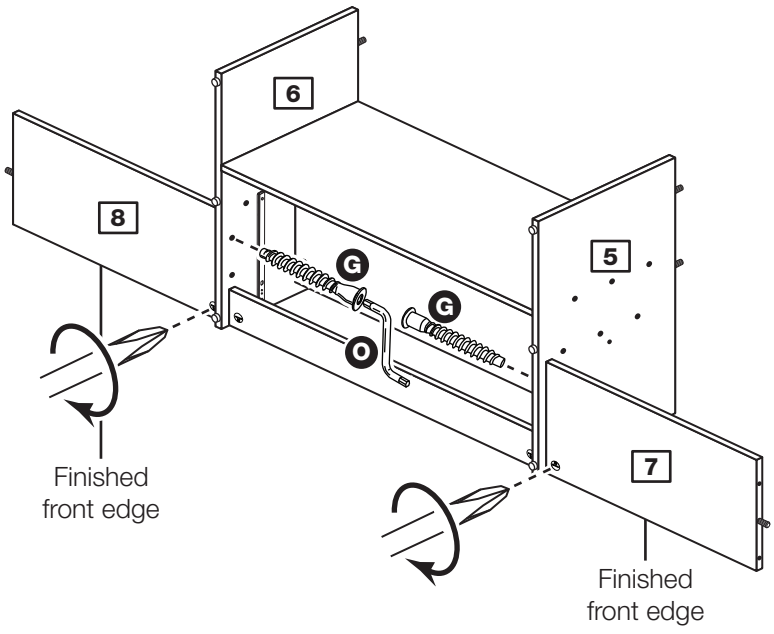

Step 21

Prepare the 2 end backs

Tap 2 wooden dowels A into each of the 2 end backs 15.

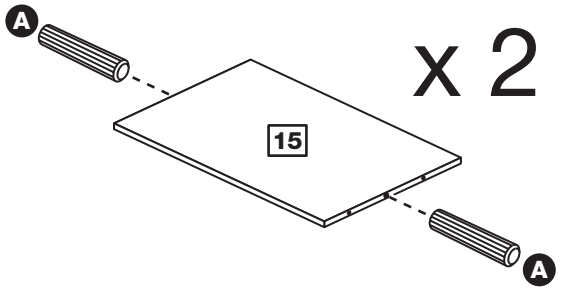


Step 22

Fit the 2 end backs

Push both of the end backs 15 onto the assembly.


Secure each end back 15 to the uprights 5 and 6 using 2 screws G and the allen key O.

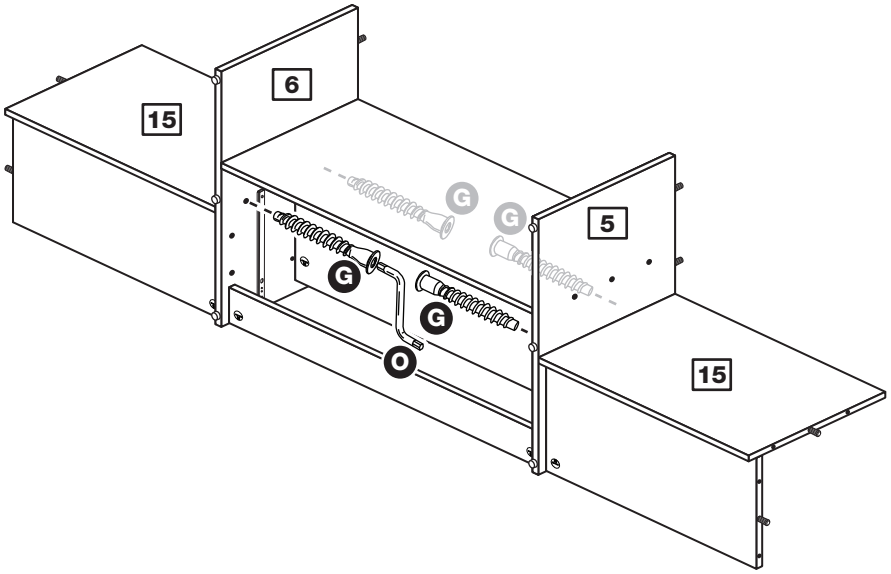

Step 23

Prepare the 2 bed bases

Tap 2 wooden dowels A into each of the bed bases 9.

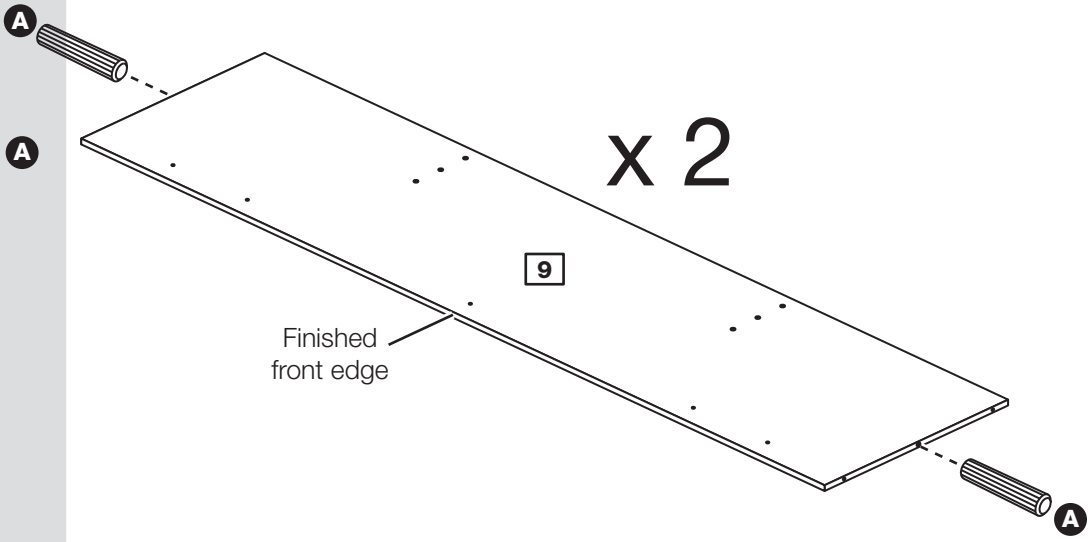


Step 24

Fit a bed base

Push a bed base [9] onto the uprights [5] and [6].

Secure the bed base [9] to each upright [5] and [6] using 2 screws G and the allen key O.

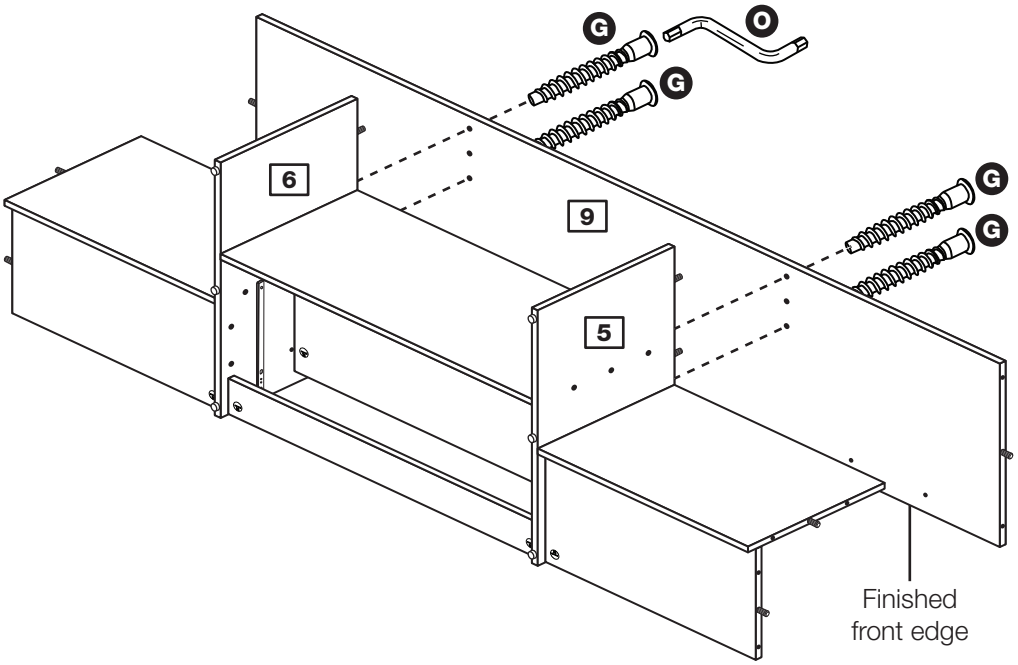


Step 25

Fit the other bed base


Push the other bed base [9] onto the uprights [5] and [6].

Secure the bed base [9] to each upright [5] and [6] using 2 screws G and the allen key O.

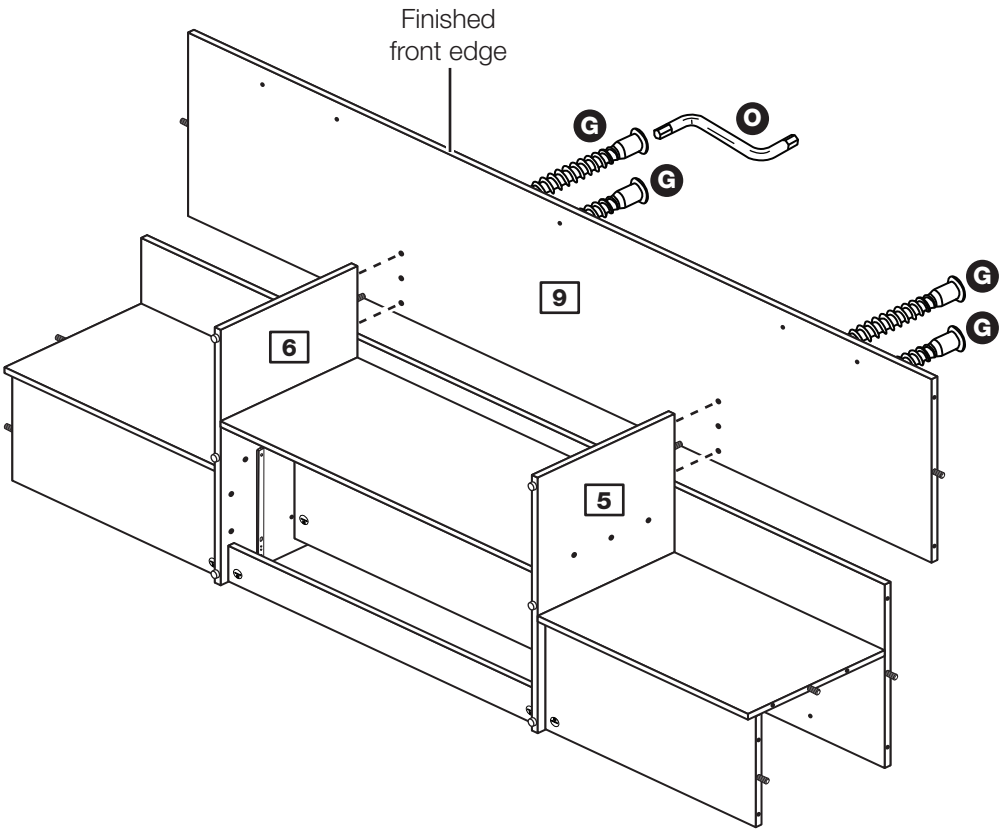


Step 26

Fit 2 hinge plates (S) onto the left side [1], making sure that the slot is facing towards the finished front edge.

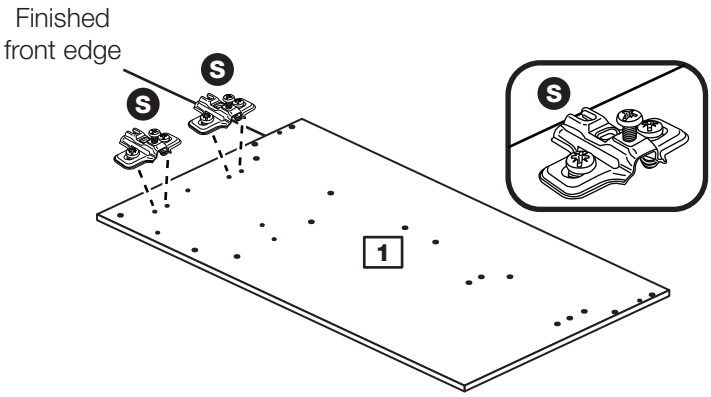

Step 27


Fit 2 hinge plates (S) onto the right side [2], making sure that the slot is facing towards the finished front edge.

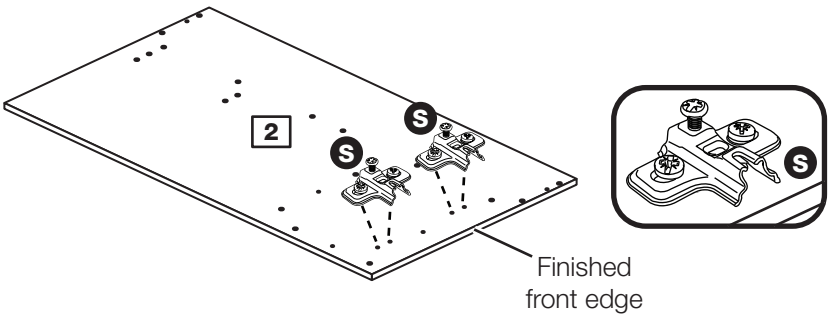

Step 28

Fit the right side


Fit the right side [2] onto the right base [8] and end back [15] and the 2 bed bases [9] using 8 screws (G) and allen key (O).

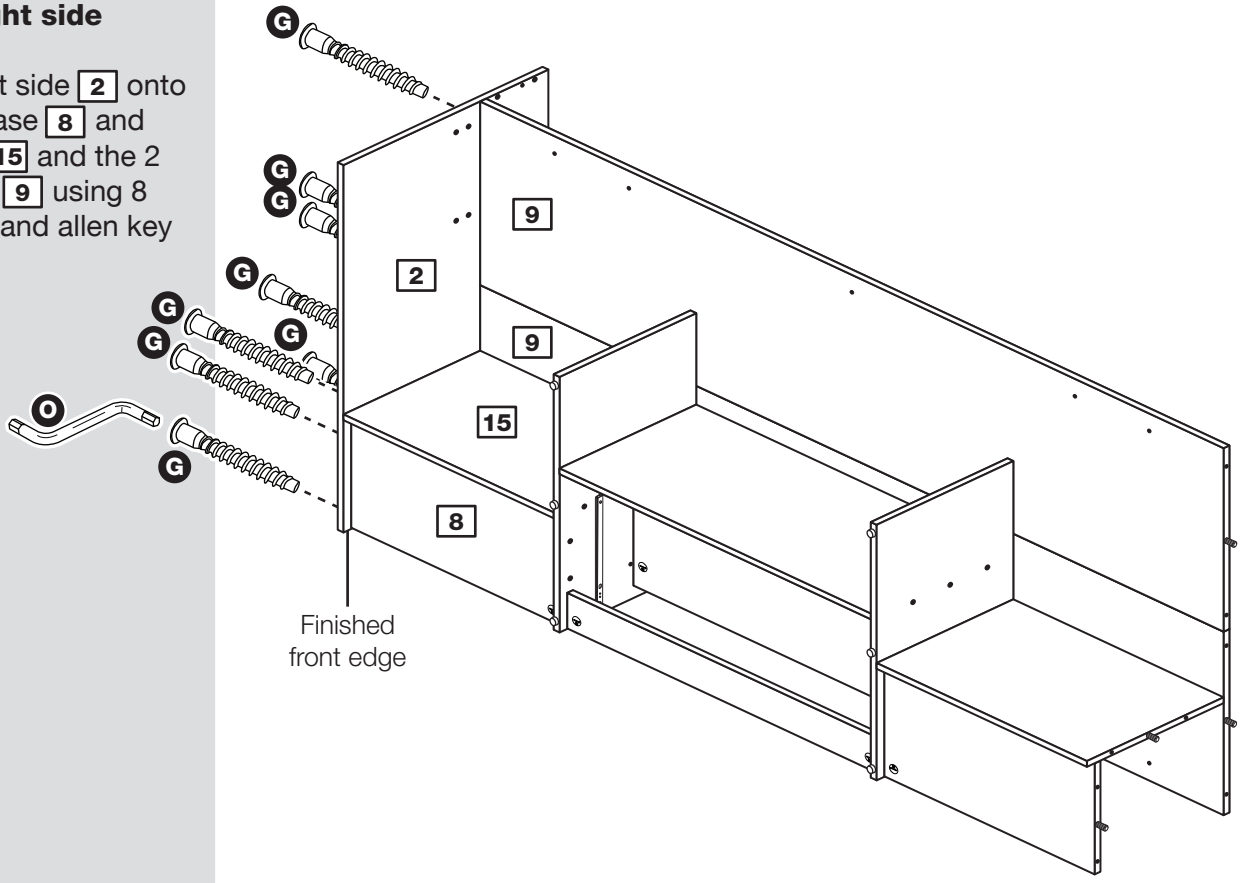

Step 29

Fit a support rail


Fit a support rail 13 onto the right side 2 using 2 screws G and allen key O.

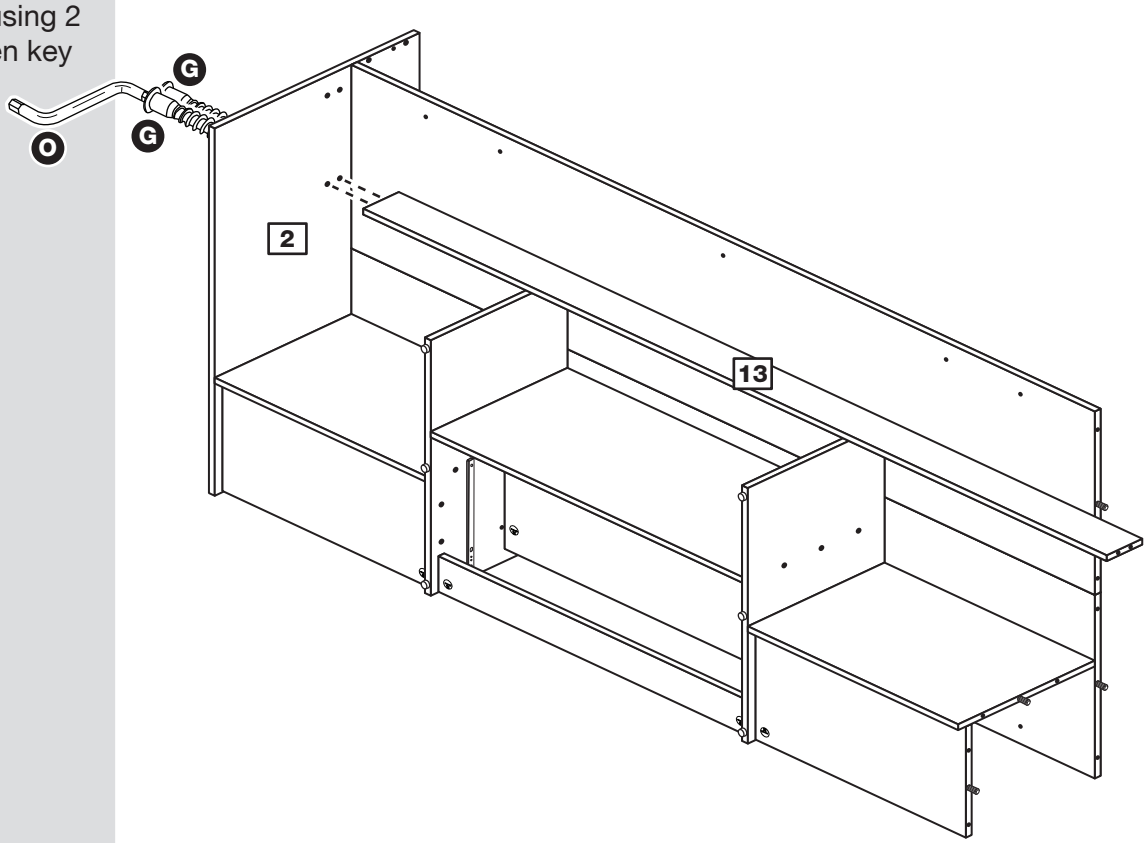


Step 30

Prepare the back panel

Tap 2 wooden dowels A into the back panel 11.

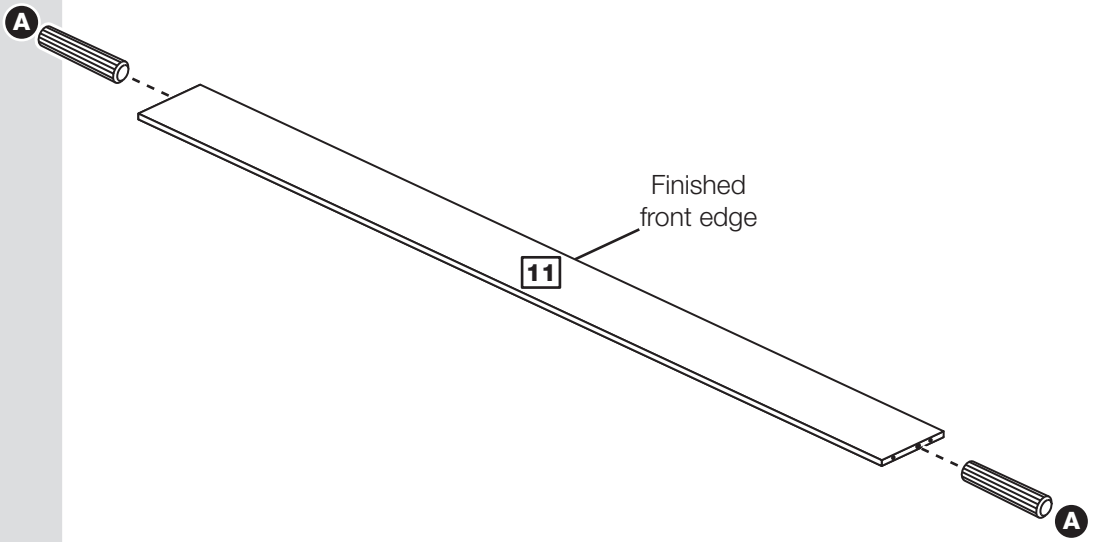


Step 31

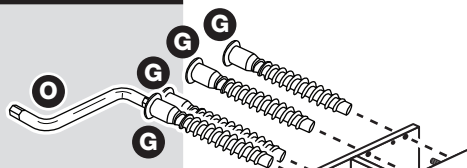

Fit the back panel and the other support rail

Fit the back panel 11 and the support rail 13 onto the right side 2 using 4 screws G and allen key O.


Note: Support the back panel and the support rail until the left side has been fitted in the next step.

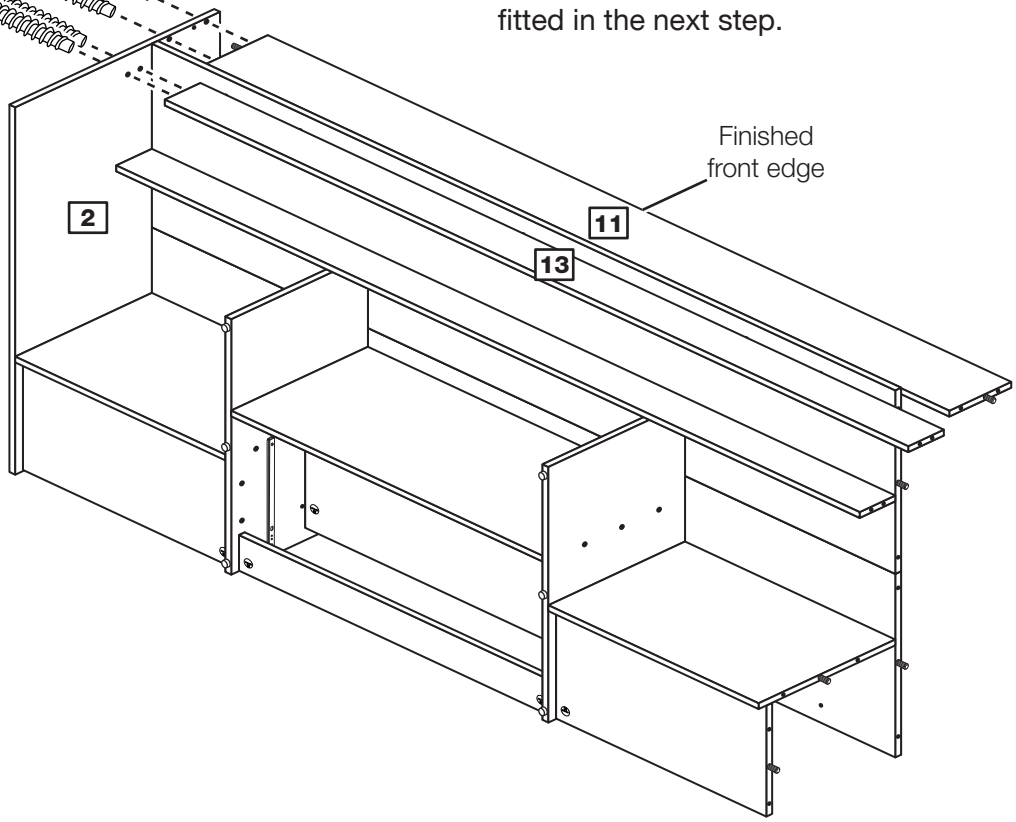

Step 32

Fit the left side

Fit the left side 1 onto the assembly using 14 screws G and allen key O.

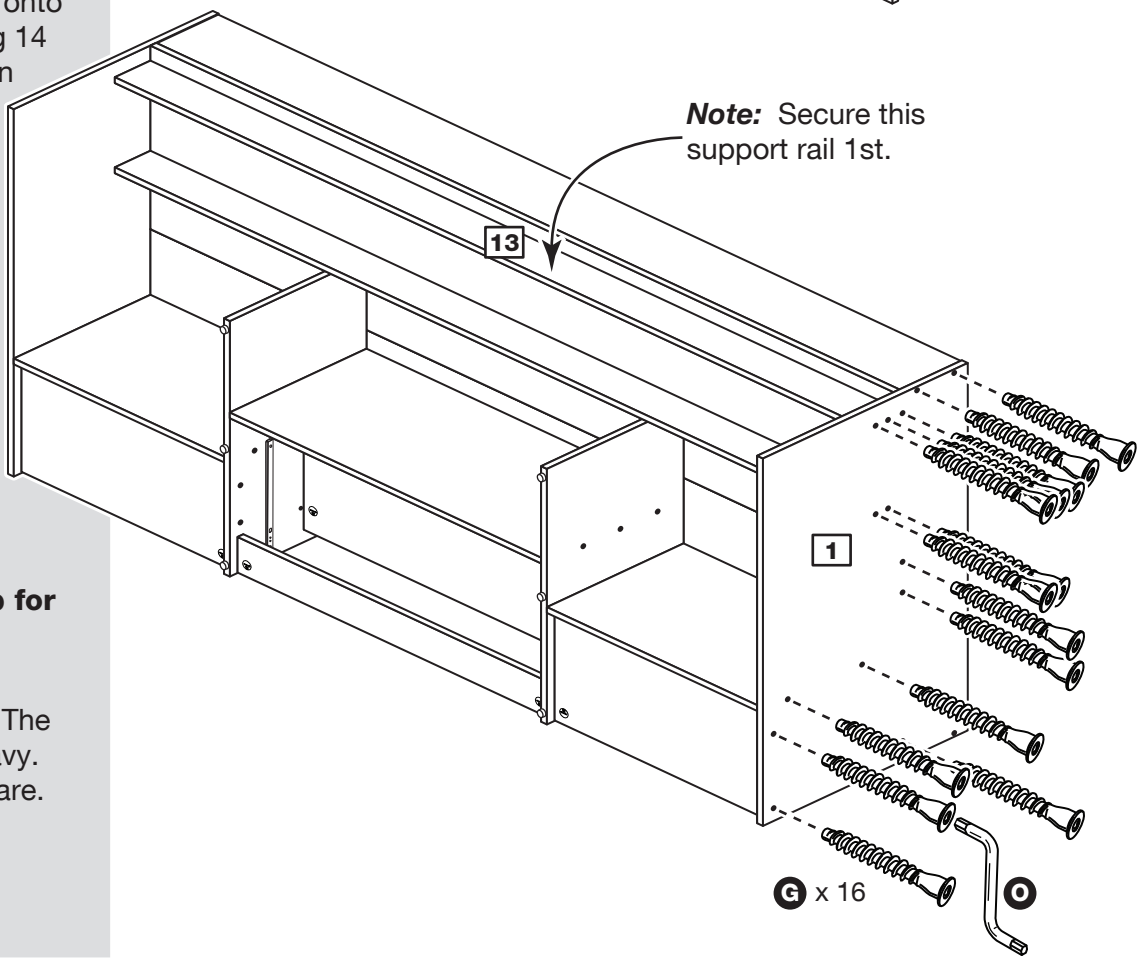


Using at least 2 people, carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

Step 33

Fit 6 plastic nails

Tap 3 plastic nails R into the bottom edge of each of the sides 1 and 2.

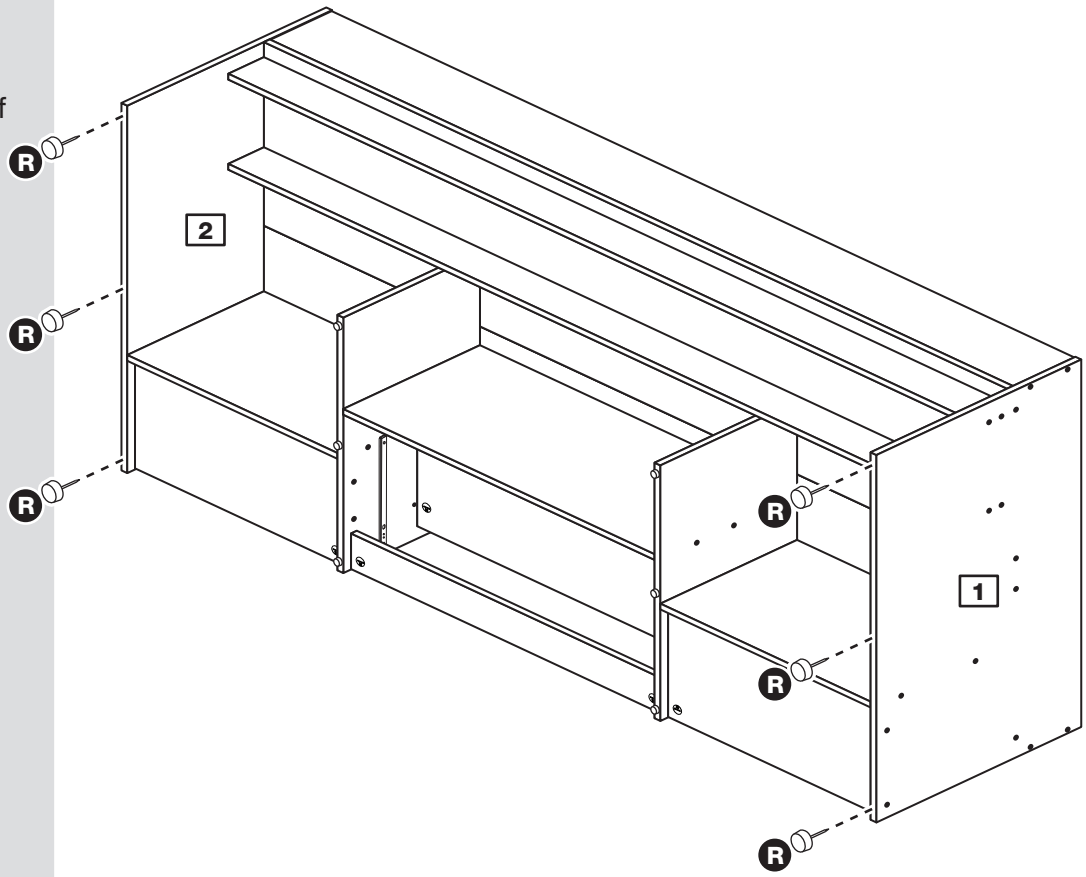


Step 34

Secure the back panel

Fix 5 brackets Q to the holes in the bed base 9 using screws H.

Important: Make sure that you screw down into the top edge of the support rail underneath.

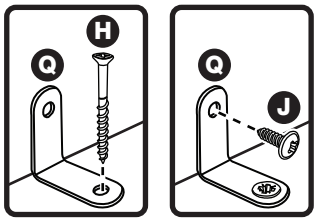


Fix the brackets Q to the back panel 11 using screws J.

Step 35

Prepare the left and right quadrants

Tap a wooden dowel A into the left quadrant 3 and the right quadrant 4.

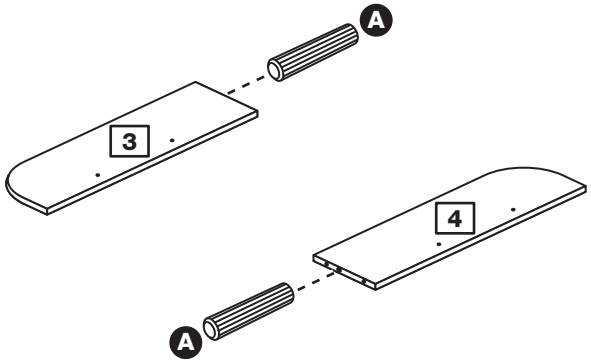


Step 36

Fit the quadrants

Fit the left quadrant 3 onto the left side 1 using 2 screws G and allen key O.

Fit the right quadrant 4 onto the right side 2 using 2 screws G and allen key O.

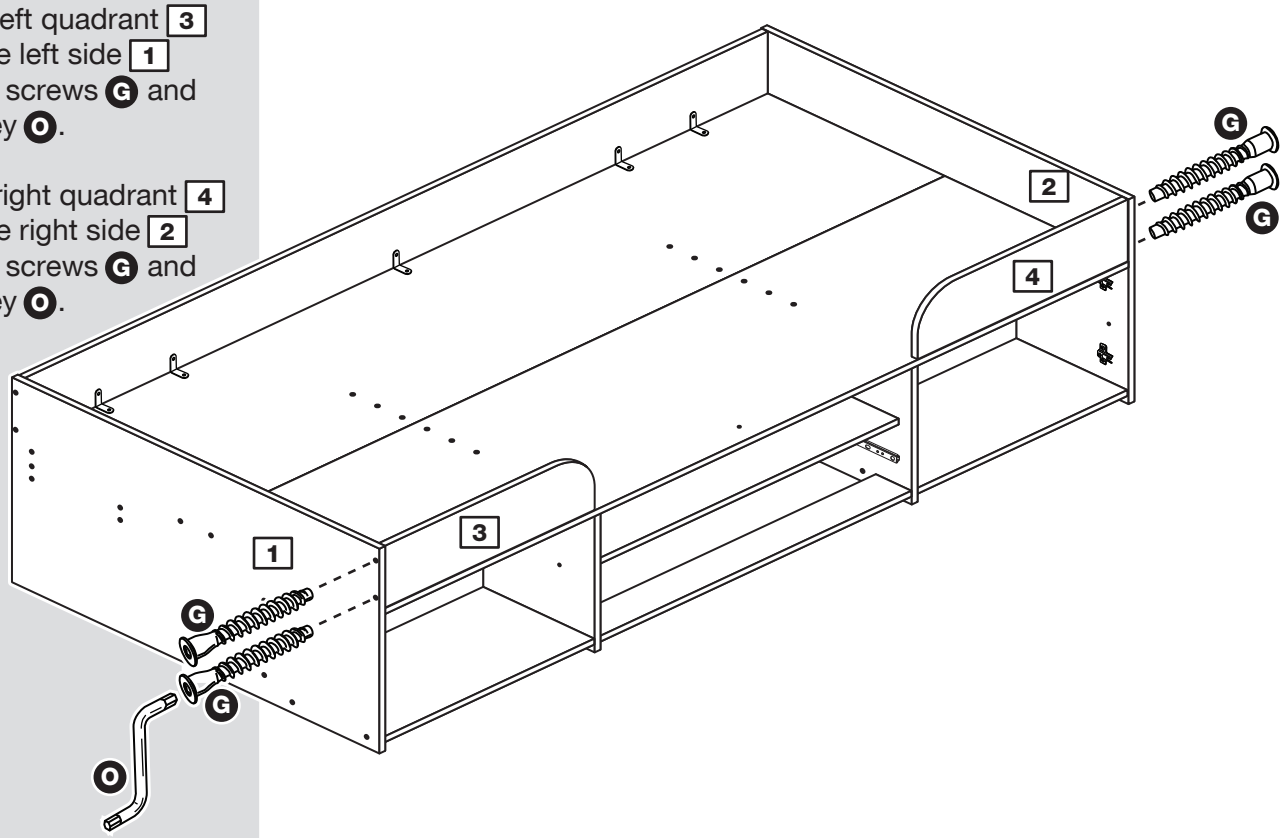


Step 37

Secure the quadrants

For each quadrant, fix 2 brackets Q to the holes in the bed base 9 using screws K.

Fix the brackets Q to the quadrants 3 and 4 using screws J.

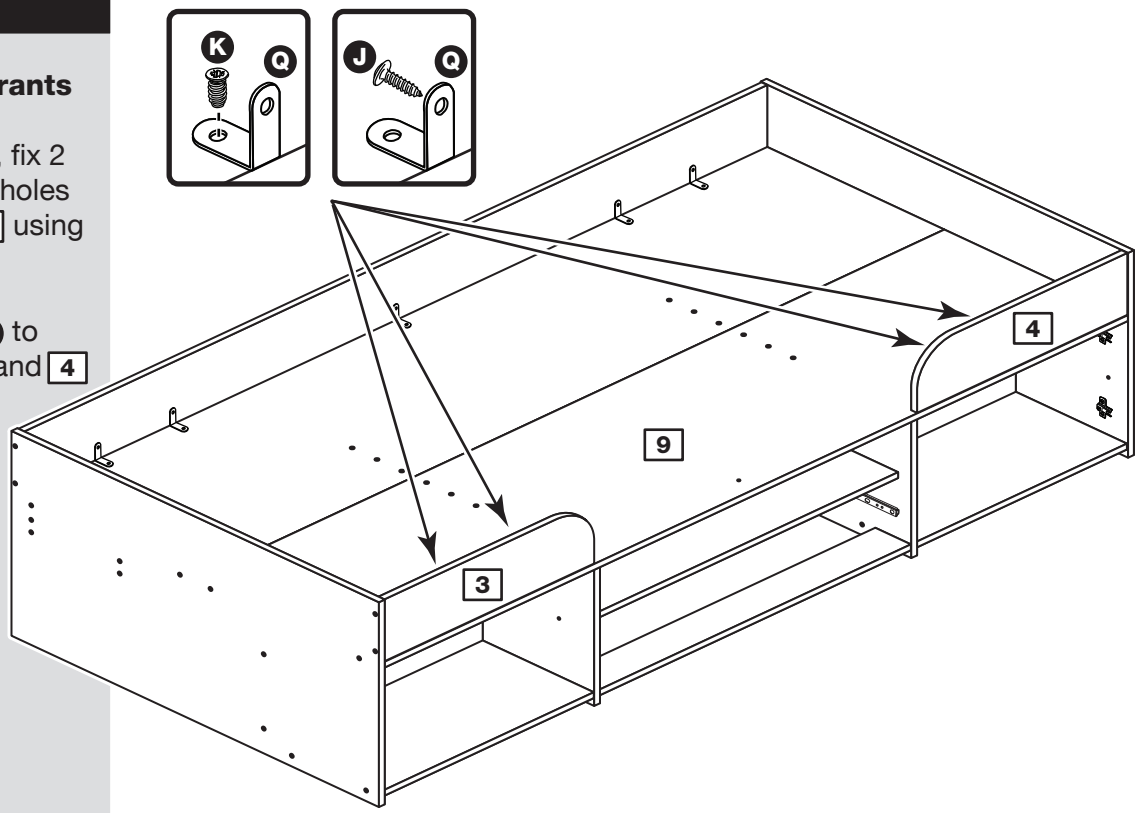


Step 38


Fit the drawer

Slide both the runners V forward and locate the drawer sides 21 and 22 between them, lining up the holes in the drawer sides with the 2nd 'threaded' holes in the runners V.

Working from the inside of the drawer, insert 2 screws M through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws.
If they catch on the runner you may need to loosen them slightly.

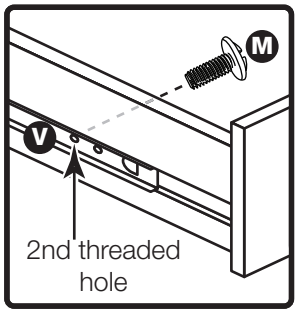

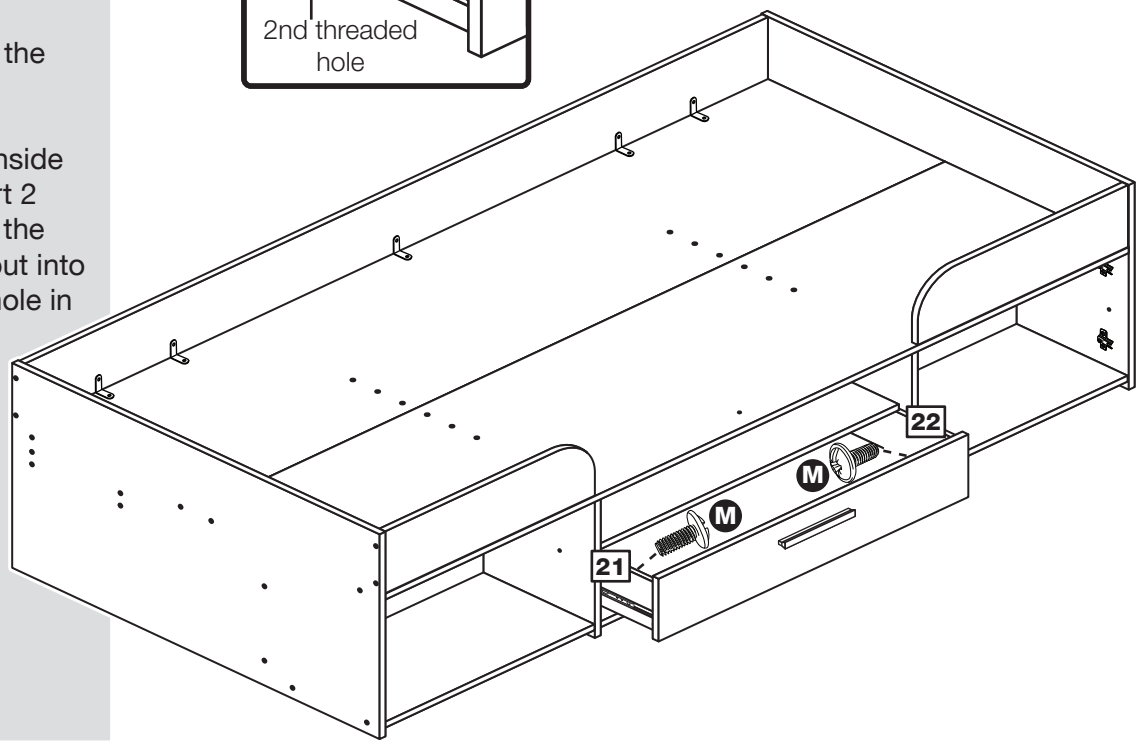


Step 39

Fit the loose shelves

For each of the 2 loose shelves, insert 4 shelf studs D into the holes shown in the sides and uprights.

Lower the 2 loose shelves 16 down onto the shelf studs D.

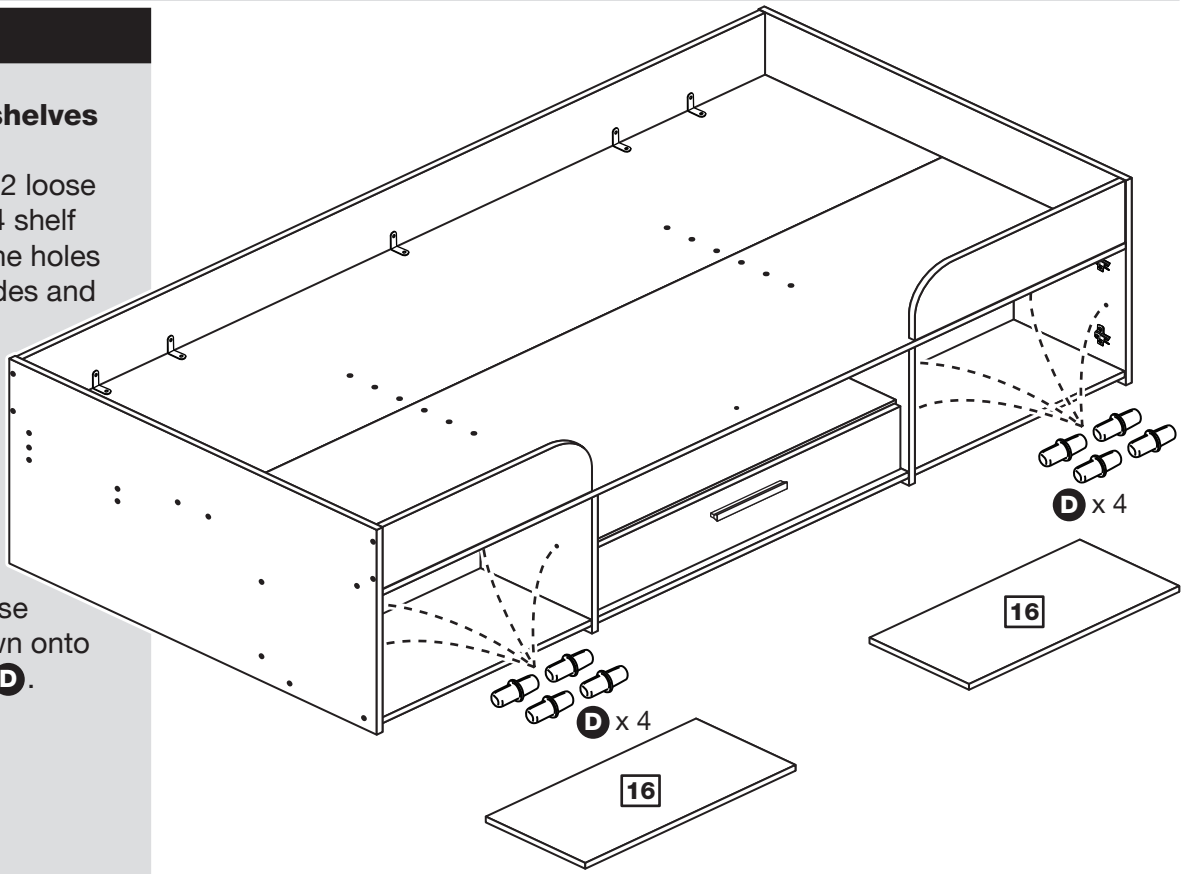


Step 40


Prepare the 2 doors


Push fit 2 hinges T into each of the 2 doors 17 and 18.

Secure each hinge with 2 screws L.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the

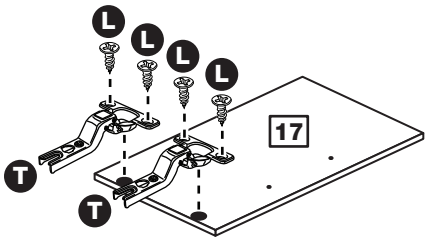

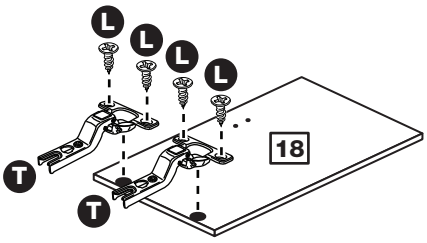

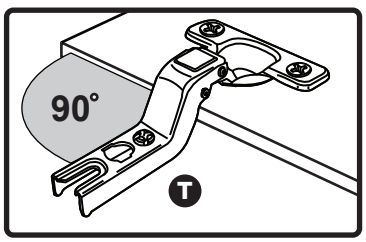

Step 41

Fit doors and handles

Note: The easiest way to attach each door 17 and 18 is to fit the top hinge first, then align and fit the other hinge.

a: Push the hinge T onto the front part of the hinge plate S.
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge T FLAT against the hinge plate S as you slide it across as far as it will go. Tighten screw A.

c: The hinge T must be flat against the hinge plate S prior to any adjustment.

d: The hinge T must NOT be AT AN ANGLE to the hinge plate S when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle W to each door 17 and 18 using 2 screws I.

Note: Do not overtighten the screws.

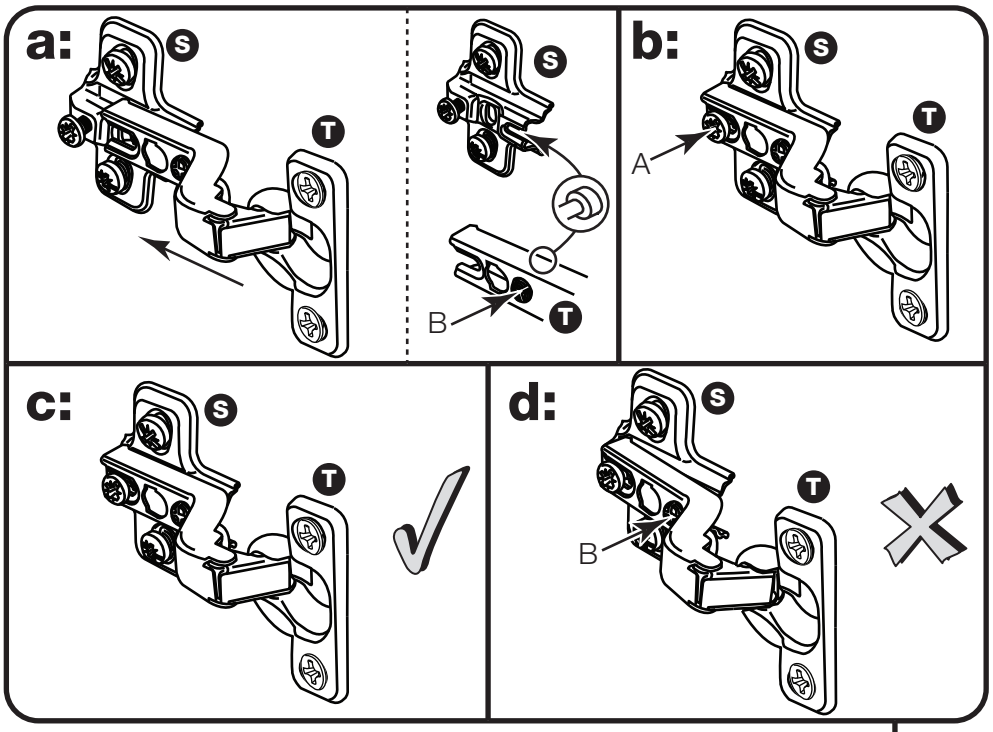

Step 42


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.


c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

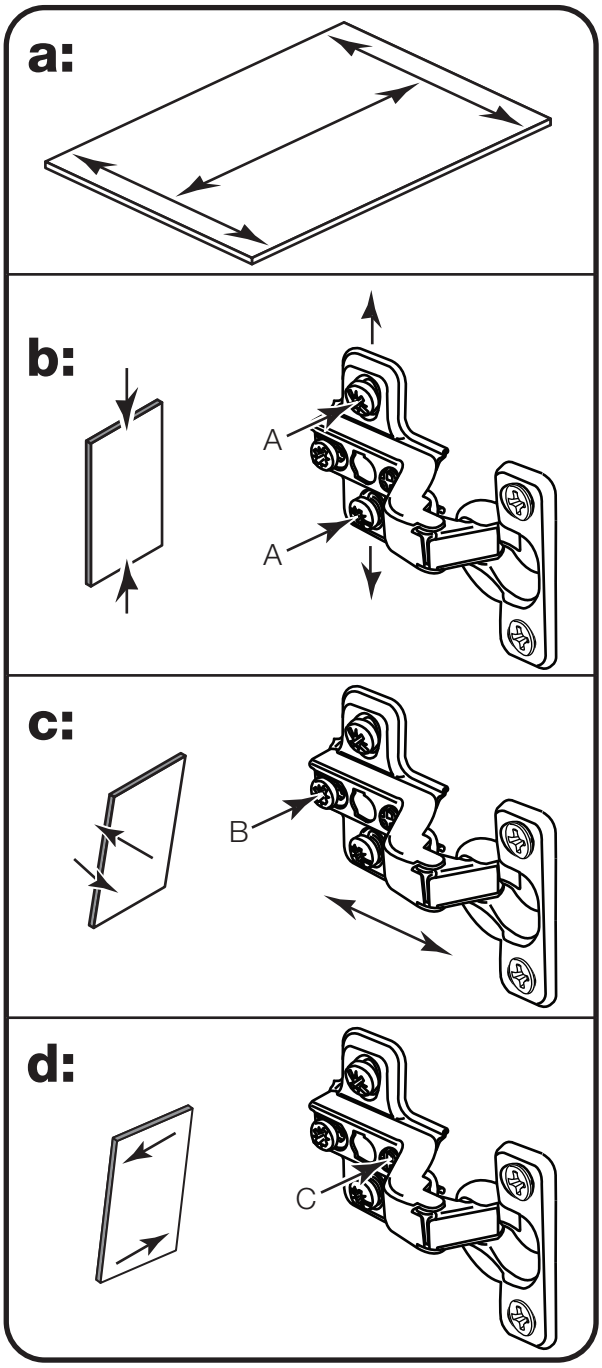

Step 43

Assembly is complete

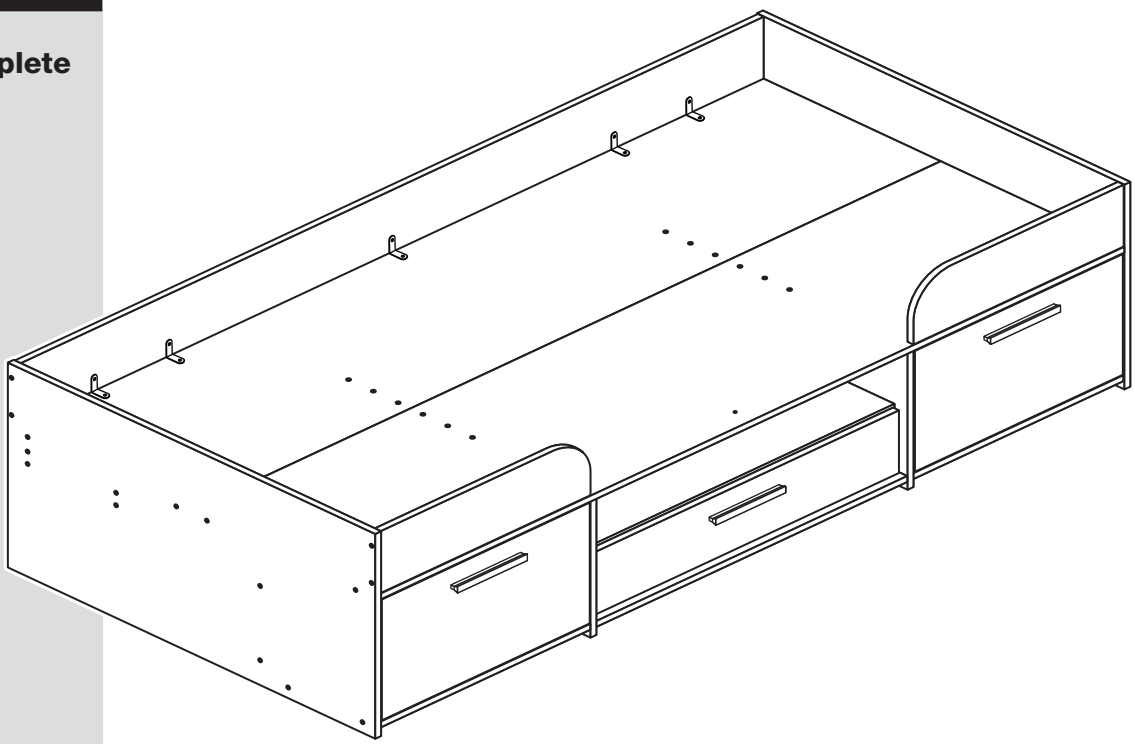

IMPORTANT

On a regular basis please check that the screws and fittings have not become loose as this could present a potential choke hazard.