
# HOH ARIANO UPHOL WING 4FT6/5FT BED

**Assembly Instructions** - Please keep for future reference | **4179140/3896297**

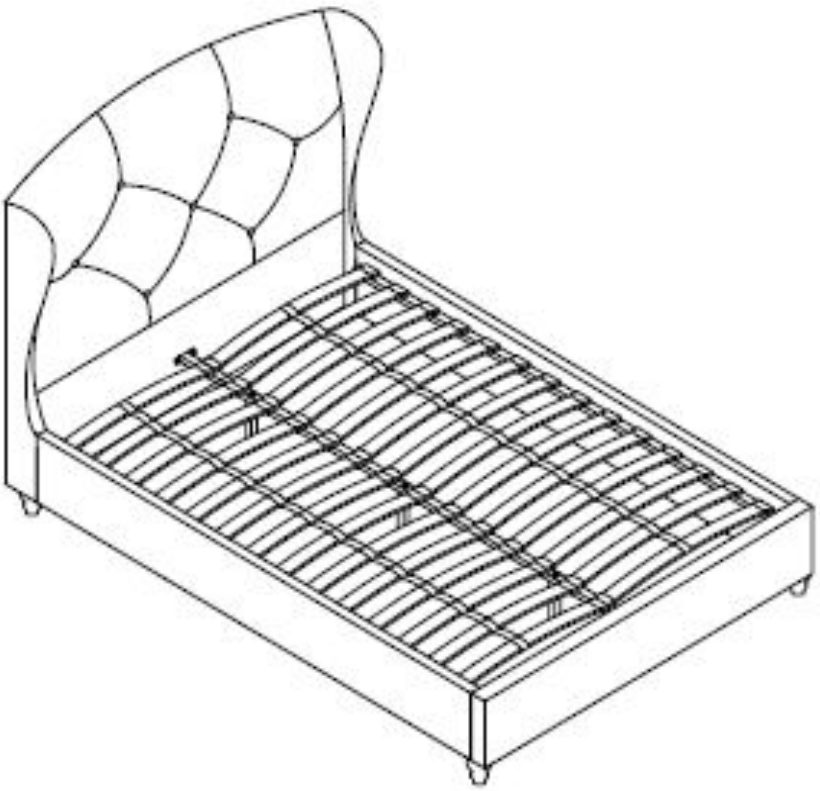

**Dimensions**

Width - 145/160

Depth - 210/220

Height - 120

**Important** – Please read these instructions carefully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**

# ⚠ Safety and care advice

## **Important** - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 3 and 4 .
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the panels during assembly, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.




- We do not recommend the use of power drill/ drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

## Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

# Components - Parts

**Please check you have all the parts listed below**

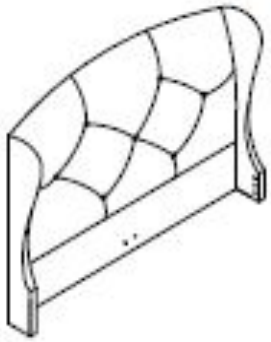

1 Head Board ( 145/160 x 112 cm )

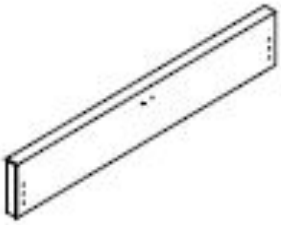

2 Foot Board ( 145/160 x 24 cm )




3 Side Panel ( 186/196 x 24 cm )
(Left )



4 Side Panel ( 186/196 x 24 cm )
(Right )



5 Center Rail x 1 ( 195/205 x 10 cm )



6 Support Leg x 3 ( 20 x 4 cm )



7 Wood leg x 4 ( 8 x 8 cm )



8 Wood Slat x 28 ( 67.8/75.3 x 0.9cm )



9 Fabric Strap x 2 ( 176/184 x 2.5 cm )

# Components - Fittings :

If you have damaged or missing components, call the **Customer Helpline: 0345 640 0800**

**Please check you have all the fittings listed below**

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | |
|---|---|---|
| **A**  20 mm<br>8mm Bolt x 4 | **B**  25 mm<br>8mm Bolt x 12<br>(Fixed on Headboard & Footboard) | **C**  30 mm<br>6mm Bolt x 3 |
| **D** <br>4mm Allen Key x 1 | **E** <br>5mm Allen Key x 1 | **F** <br>Side stopper x 28 |
| **G** <br>Centre stopper x 14 | **H** <br>6mm Adjuster x 3 | |

**Ruler - Use this ruler to help correctly identify the screws**




# Assembly Instructions

## Step 1

**Attaching Wood legs to Headborad and Footboard.**

***Note:*** It would be useful to ask someone to help you at this stage.

***Important:*** Because of the size of this unit we recommend that it is built in the room intended for use.

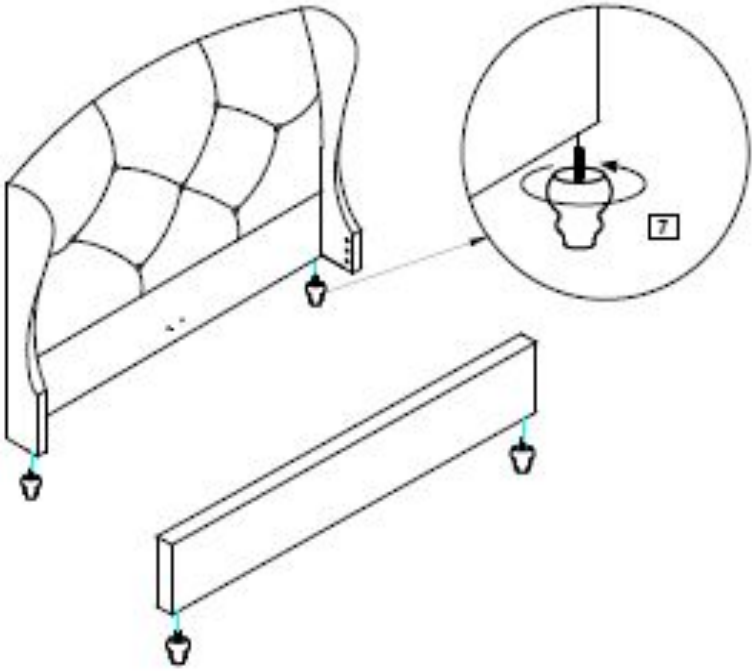



Hand-Tighten the Wood legs [7] to the Headboard [1] and Footboard [2]

## Step 2

**Attaching Head/Foot board onto Side Panels**

***Note:*** It would be useful to ask someone to help you at this stage.

Loosen screw (B), using Allen key (E).
Hang Side Panel [3]/[4] onto Head/Foot board [1]/[2] And fasten screw (B).

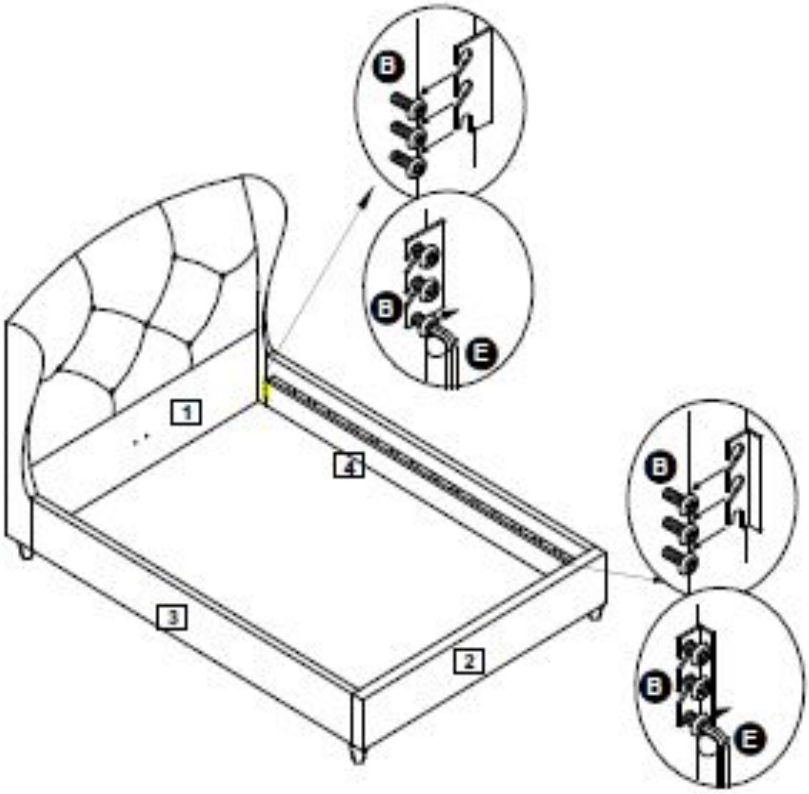


***Note:*** Not tighten all ' bolts ' at this step.


# Assembly Instructions

## Step 3

**Fitting the Support Leg**

*Note:* It would be useful to ask someone to help you at this stage.

Screw the Adjuster Ⓗ full into the bottom of the Support Leg [6]. Use Bolts Ⓒ and Allen Key Ⓓ to fix the Support leg [6] onto the Centre Rail [5].

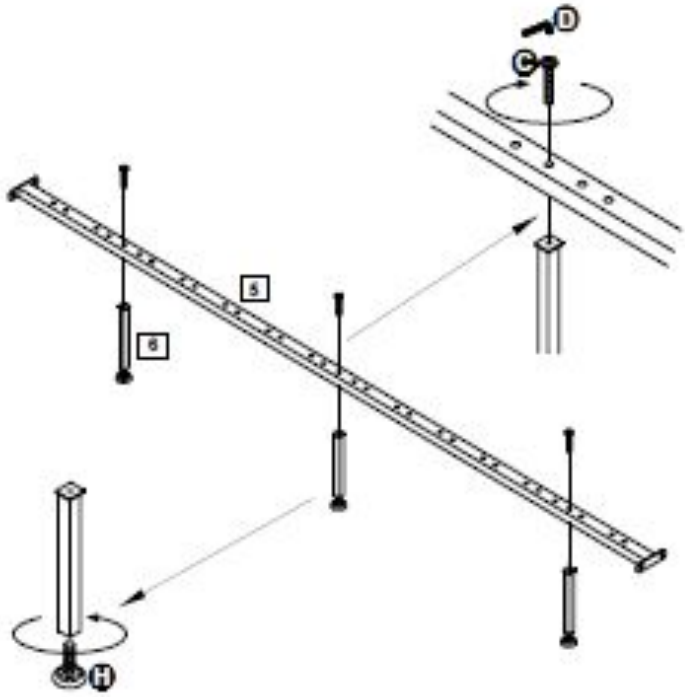


## Step 4

**Fix the Centre Rail**

*Note:* It would be useful to ask someone to help you at this stage.

Use bolt Ⓐ and Allen Key Ⓔ to fix the Centre Rail [5] onto the Headboard [1] and Footboard [2].

*Note:* If the screw hole can not match when assemble, need move the base a little to make sure the bed is straight.

Tighten all ' bolts '.



# Assembly Instructions

## Step 5


**Fix the Wood Slat and the Fabric Strap.**

***Note:*** It would be useful to ask someone to help you at this stage.

1.Insert a Wood Slat [8] through the first hole in Fabric Strap [9]. Repeat using another Wood Slat and the other Fabric Strap.

2.Attach Side Stopper (F) onto one end of the Wood Slat [8]. Attach Centre Stopper (G) onto the other end of the Wood Slat [8]. Repeat.

3.Insert the Stoppers into the holes in the Side Panel [3] & [4] and Centre Rail [5].

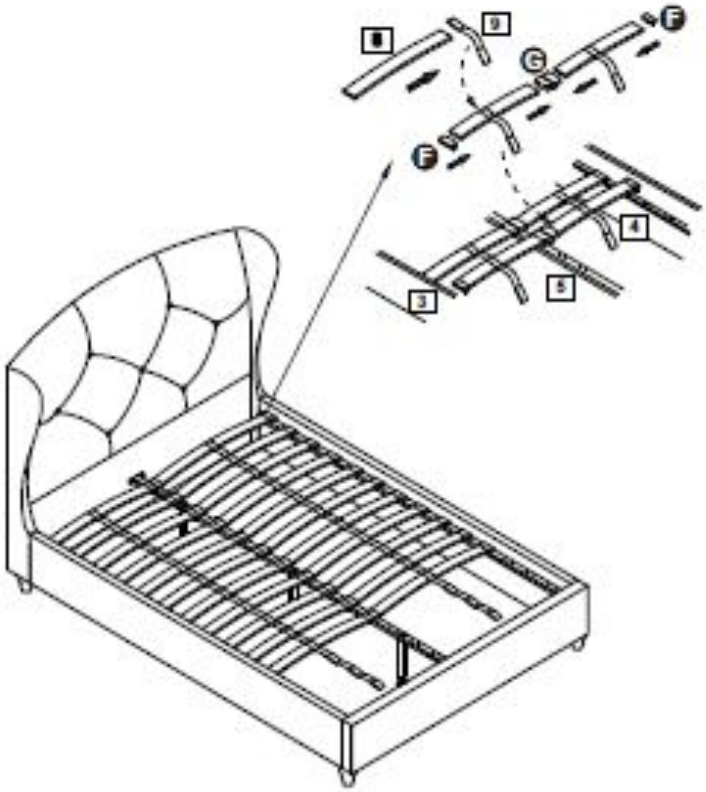


## Step 6

**Bed Assembly Finished**



If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800**