
HEREFORD STORAGE BENCH

Assembly Instructions - Please keep for future reference | 391/7121

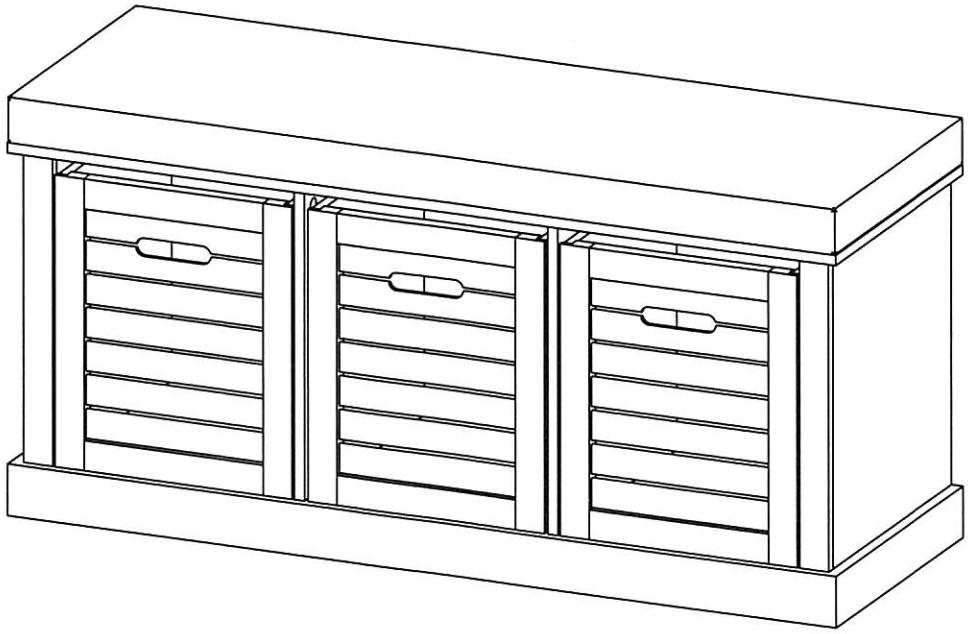

Dimensions

Length - 100cm

Height - 50cm

Depth - 35cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**

Issue 1 - 08/04/15

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on this product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.




- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


Please check you have all the panels listed below

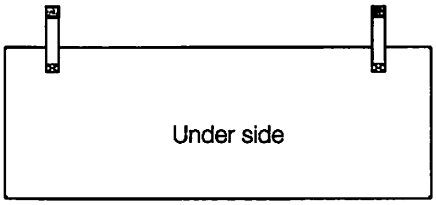


1 Cushion x1 (100x35cm)

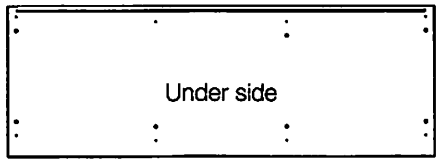


2 Top x1 (100x35cm)

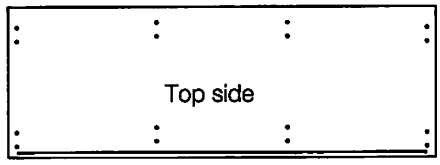


3 Bottom unit x1 (100x35cm)

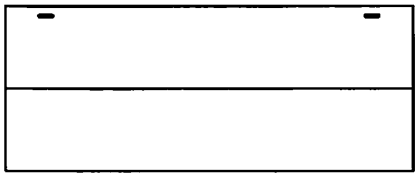


4 Back panel x1 (95x37cm)

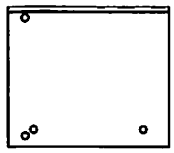


5 Left side x1 (36x32cm)

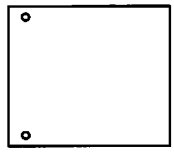


6 Left divider x1 (36x32cm)

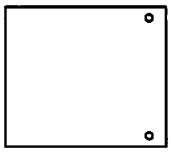


7 Right divider x1 (36x32cm)

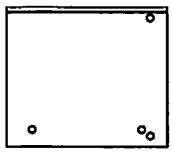


8 Right side x1 (36x32cm)




9 Left slat x1 (36x4cm)




10 Right slat x1 (36x4cm)

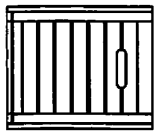

11 Box front x3 (34x28.5cm)

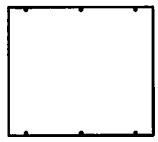


12 Left box side x3 (33.8x31.5cm)

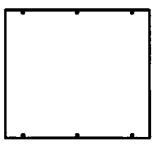

13 Right box side x3 (33.8x31.5cm)



14 Box back x3 (33.8x25.5cm)

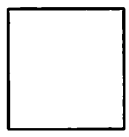


15 Box bottom x3 (29.5x26.5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0845 640 0800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  35mm Metal dowel x12	**B**  10mm Locking nut x12	**C**  30mm Wooden dowel x20
D  Foot x6	**E**  25mm Screw x36	**F**  Plastic corner x8
G  18mm Screw x8	**H**  40mm Screw x8	**I**  310mm Box glide strip x6


Tools required



Phillips screwdriver (medium)



Flatblade screwdriver (medium)

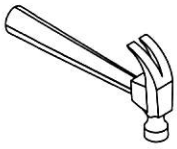


Small Hammer



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws

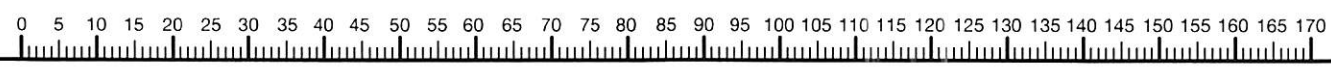


Assembly Instructions

Step 1

Fitting dowels


Insert wooden dowels C to panels 5 6 7 & 8.

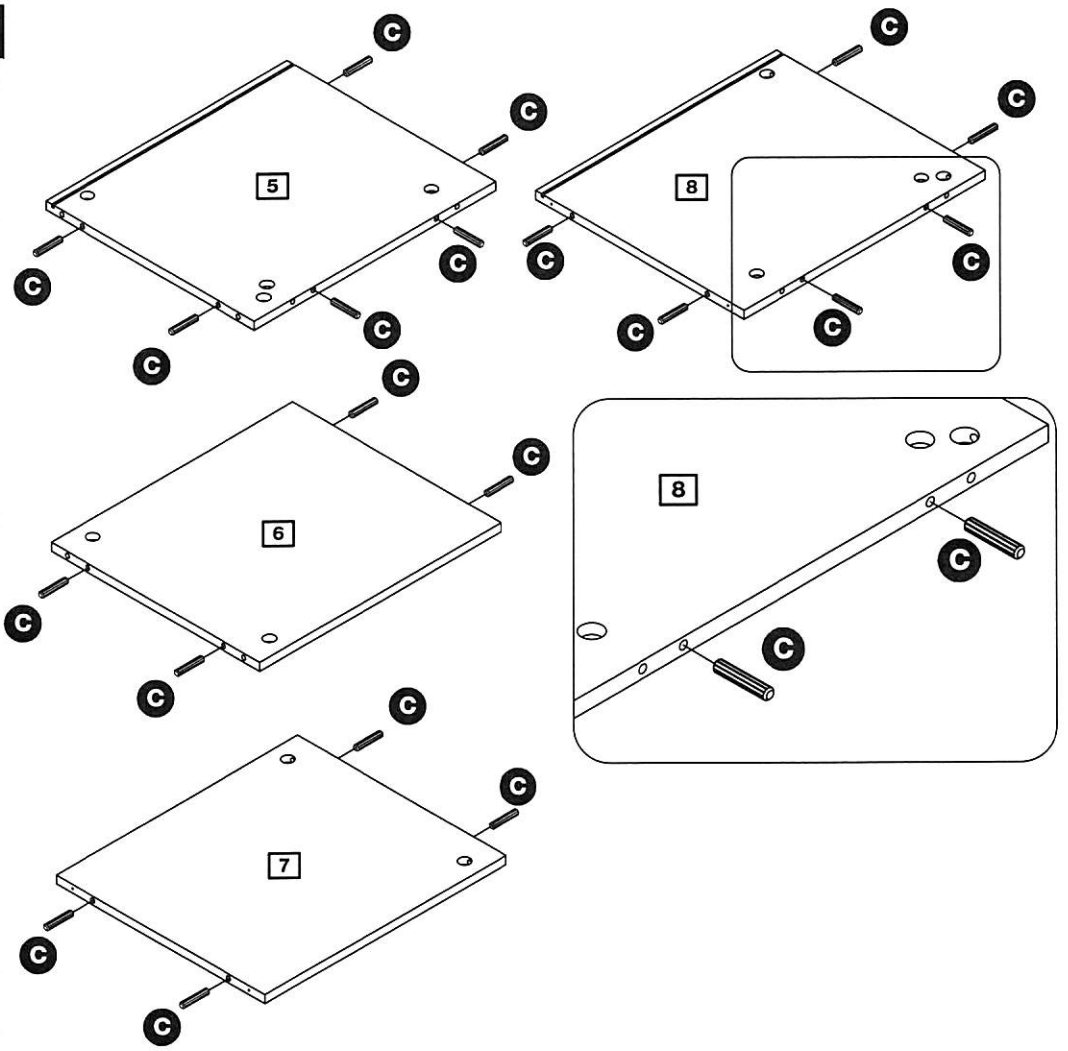

Step 2

Fitting dowels


Screw metal dowels A into top 2 and slats 9 & 10 with a Phillips screwdriver.

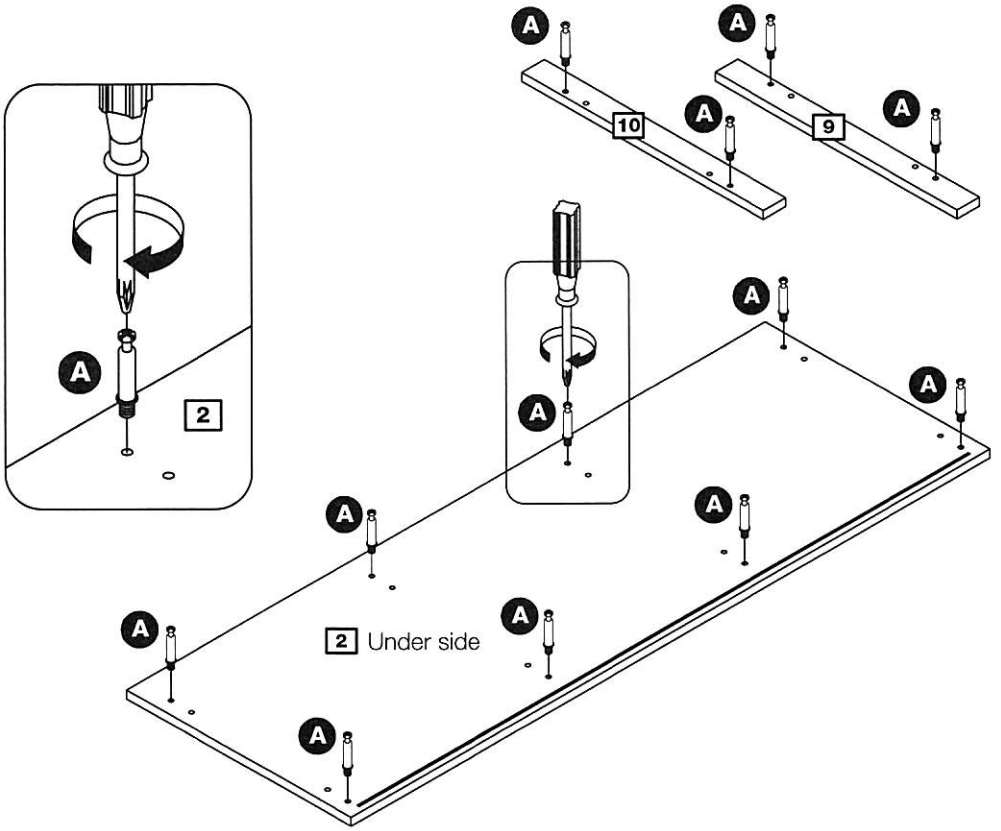

Step 3

Attaching slats

Attach right slat [10] to right side panel [8] using locking nut (B).
Use a screwdriver to turn locking nut (B) clockwise to lock.

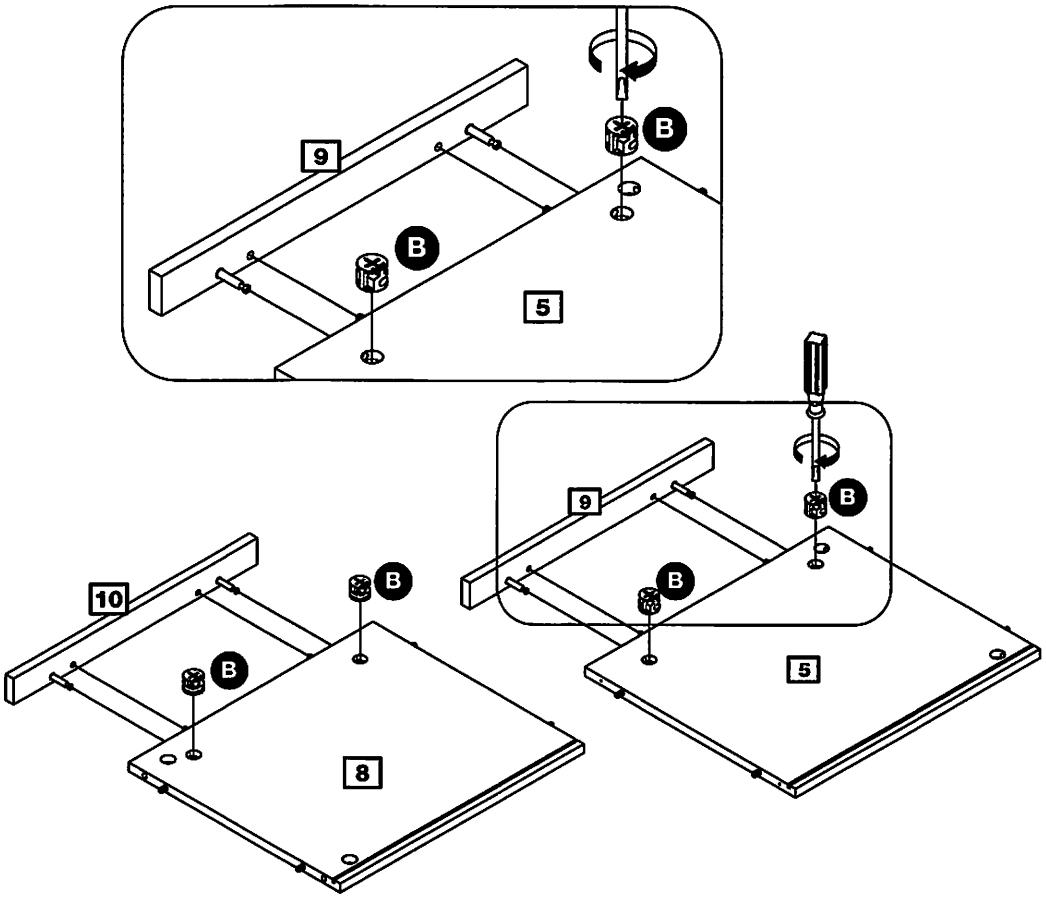


Step 4

Attaching panels

Attach left side [5] to bottom unit [3] using screws (H) with a Phillips screwdriver.

Repeat with side [8] and divider [6] & [7].


Tighten all the screws.

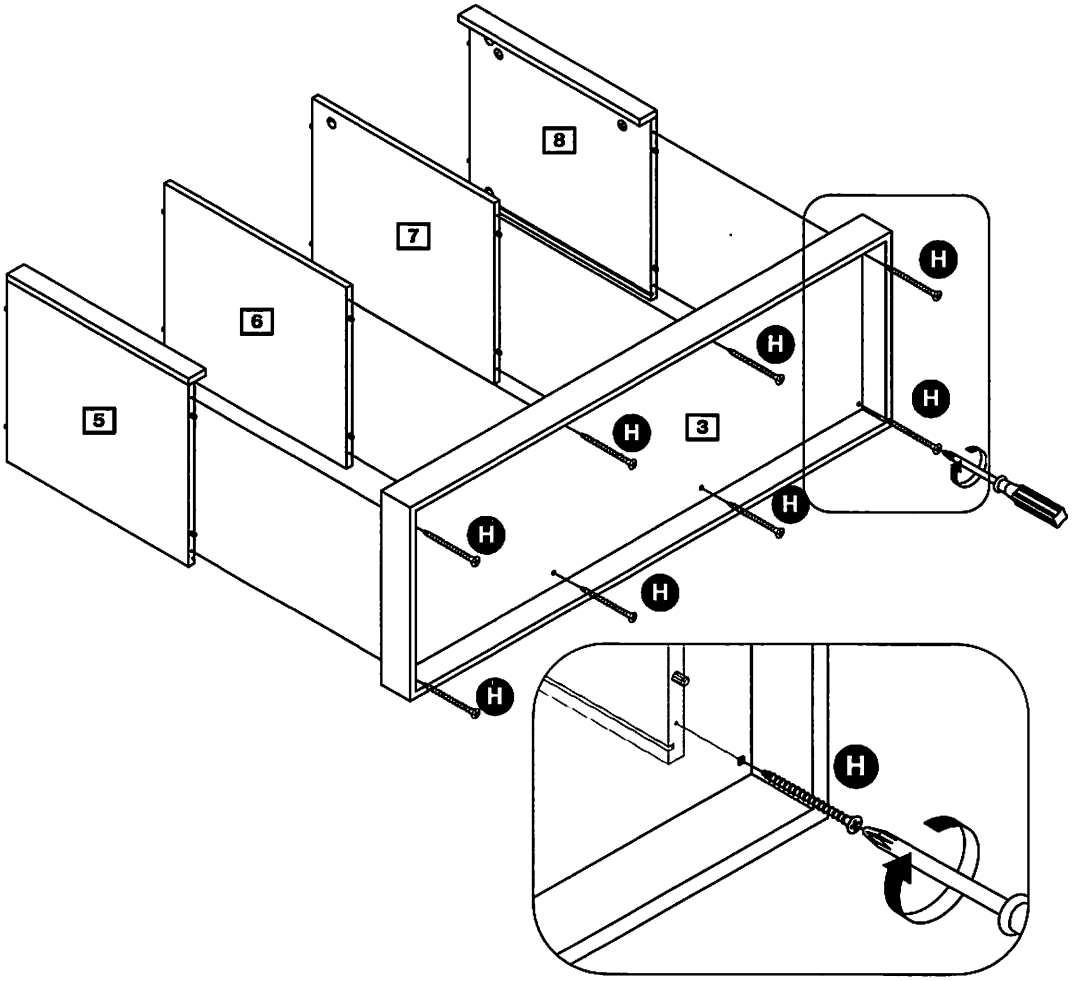

Step 5

Attaching feet

Attach feet Ⓓ to bottom unit [3] with a small hammer.

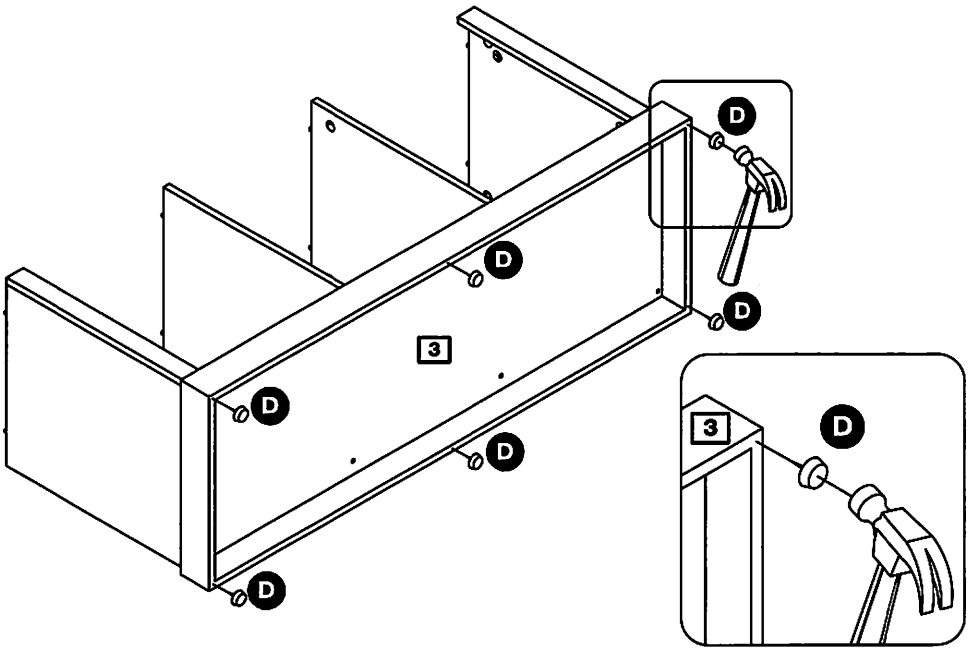


Step 6

Inserting back panel

Unfold back panel [4] .
Slide back panel [4] into the grooves on side panels [5] [8] and bottom unit [3].


The holes on back panel shall be put on top as shown.

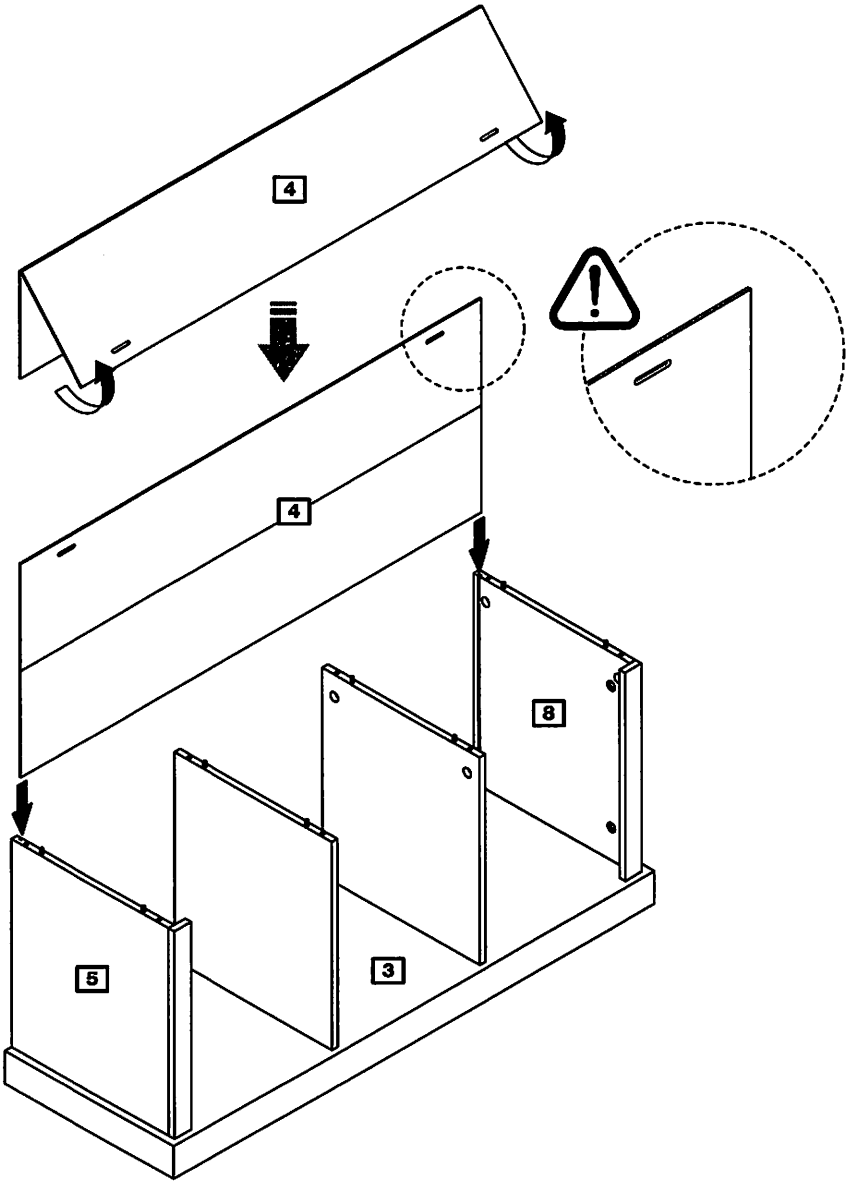


Step 7

Attaching top

Attach top [2] to panels [5] [6] [7] & [8] using locking nut (B).
Use a screwdriver to turn locking nut (B) clockwise to lock.

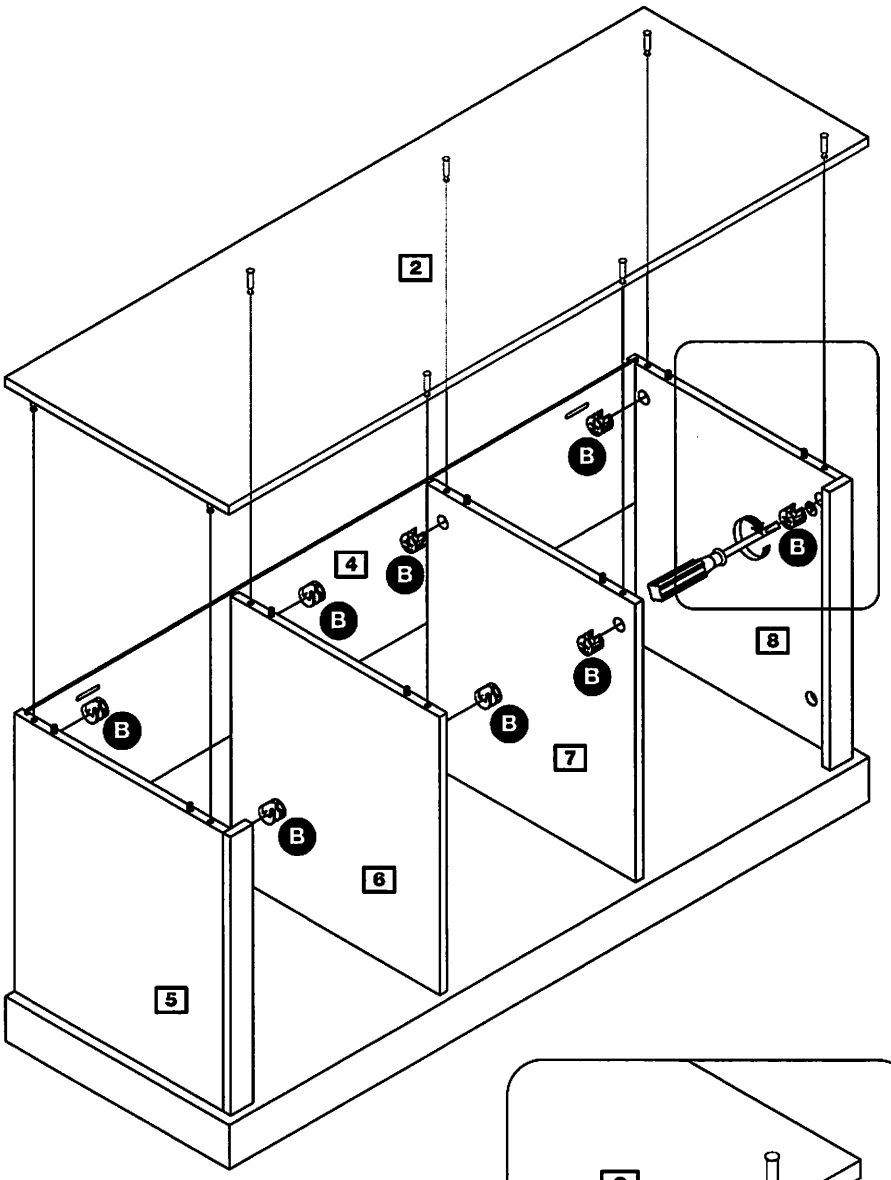

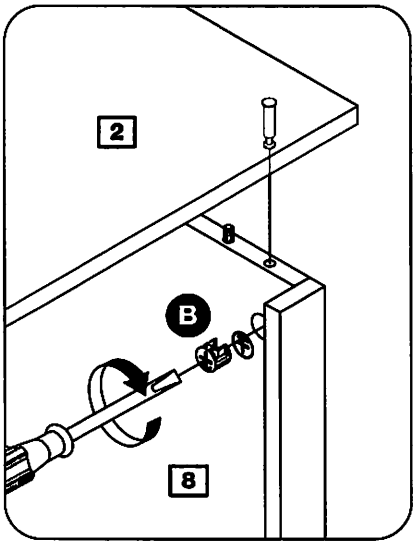


Step 8

Fixing back panel

Push plastic corner I into the gap around back panel 4 .

Fix plastic corner F using screws G with a Phillips screwdriver.

Tighten all the screws.

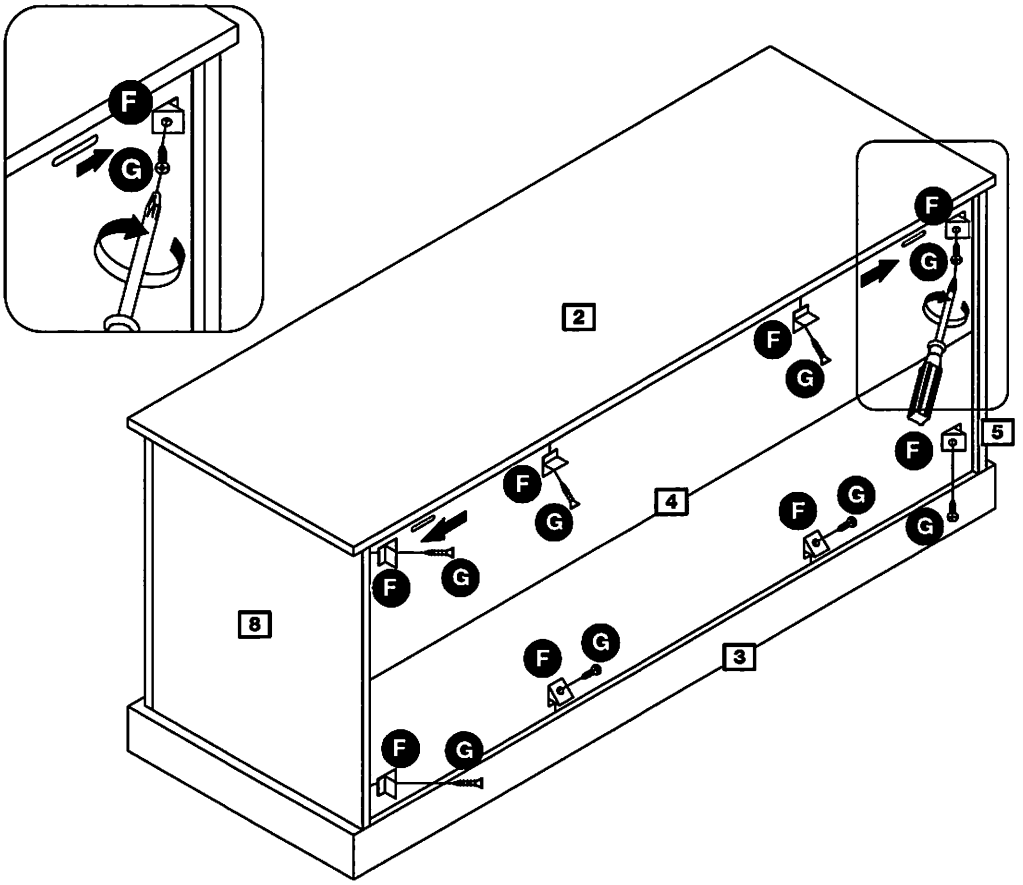


Step 9

Attaching cushion

Insert the Velcro tapes (loops) on cushion 1 into the holes on top of back panel 4 .

Pull the Velcro tapes(loops) from inside of the cabinet, attach it to the Velcro tapes (hooks) underneath top 2 .

Turn around cushion 1 and put the cushion into position.

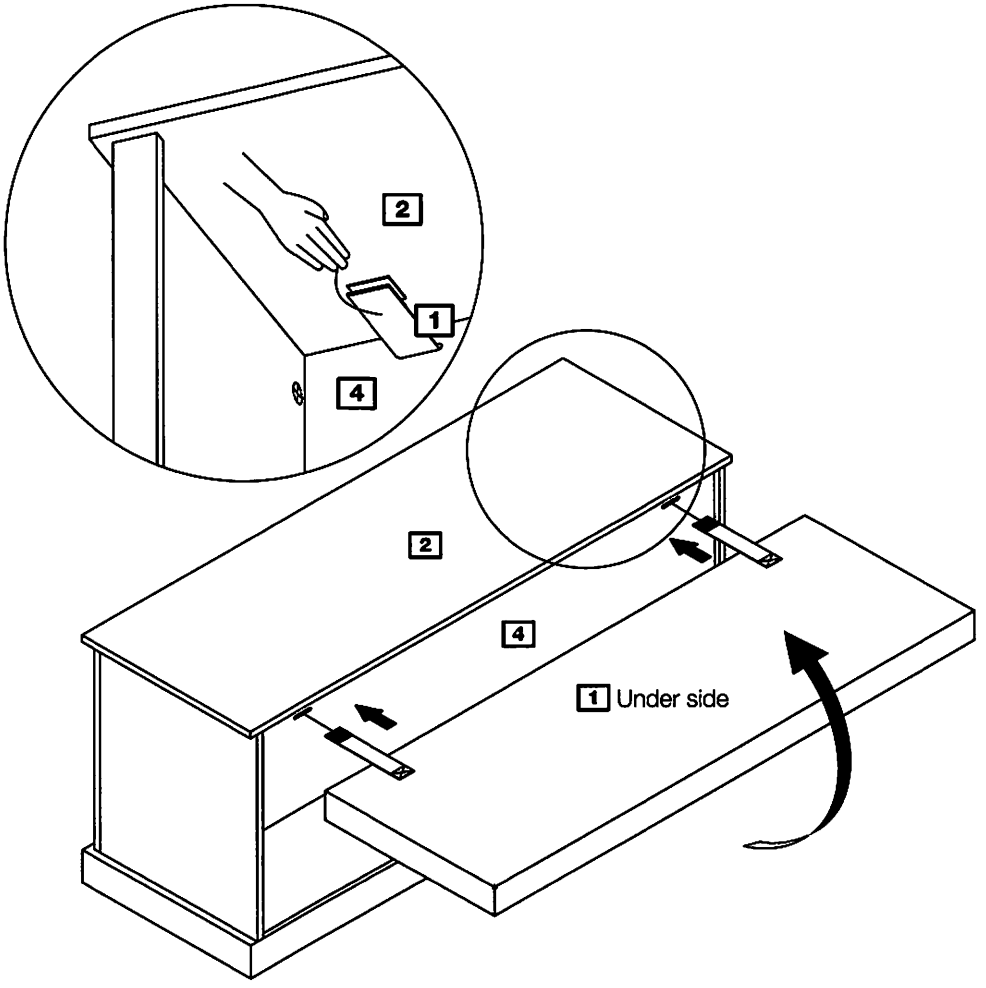


Step 10

Attaching box sides

Attach box side 12 & 13 to box back 14 using screw E with a Phillips screwdriver.

Repeat with remaining box sides 12 & 13 .

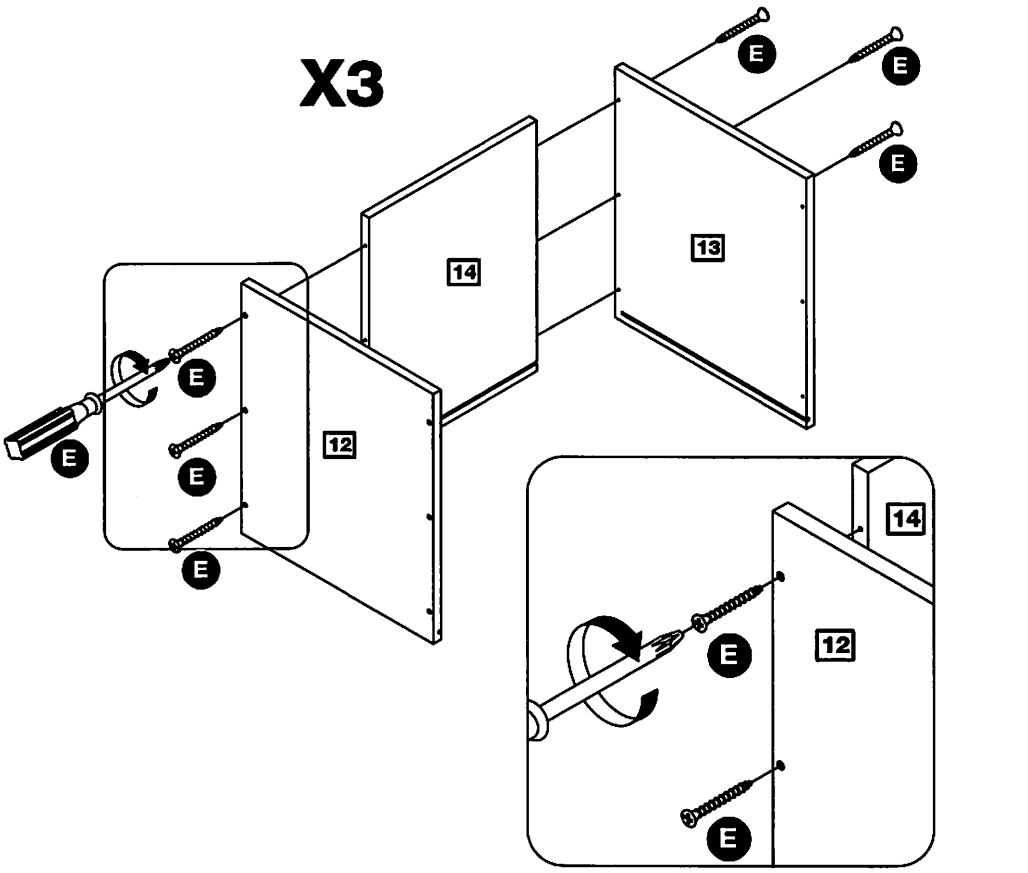

Step 11


Attaching box bottom & front

Slide box bottom 15 into the grooves on box side 12 & 13.

Attach box front 11 to box side 12 & 13 using screw E with a Phillips screwdriver.

Repeat with remaining box bottom 15 & front 11.

Tighten all the screws.

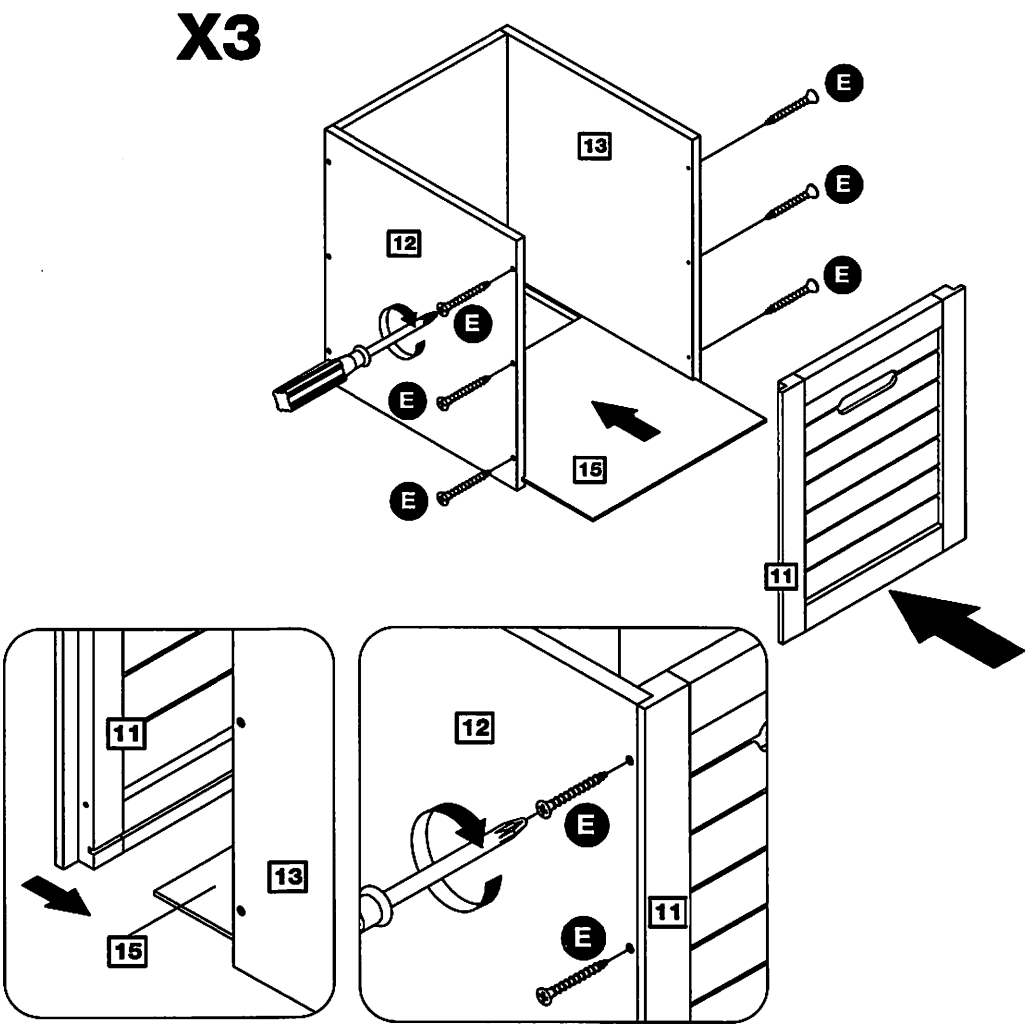


Step 12

Attaching glide strips

Turn over the box.
Detach paper backing from glide strips ❶.

Paste glide strips ❶ on bottom of box sides [12] & [13].


Repeat with remaining strips ❶ to the other two drawers.

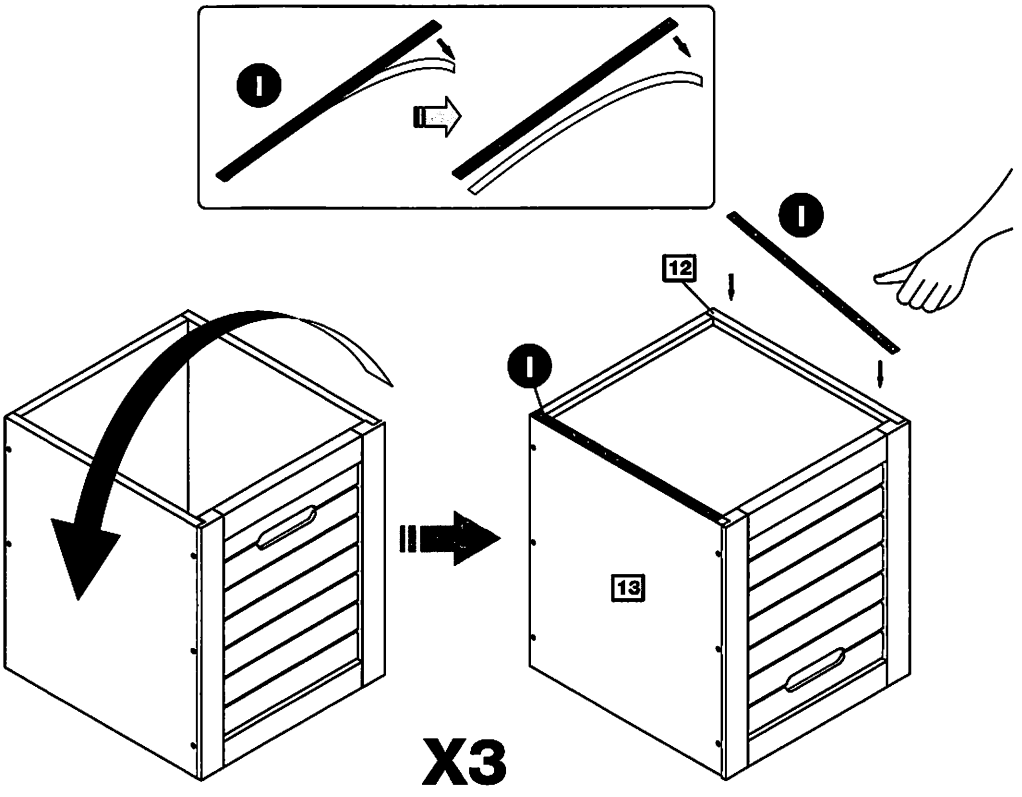

Step 13

Inserting boxes

Insert boxes to cabinet.

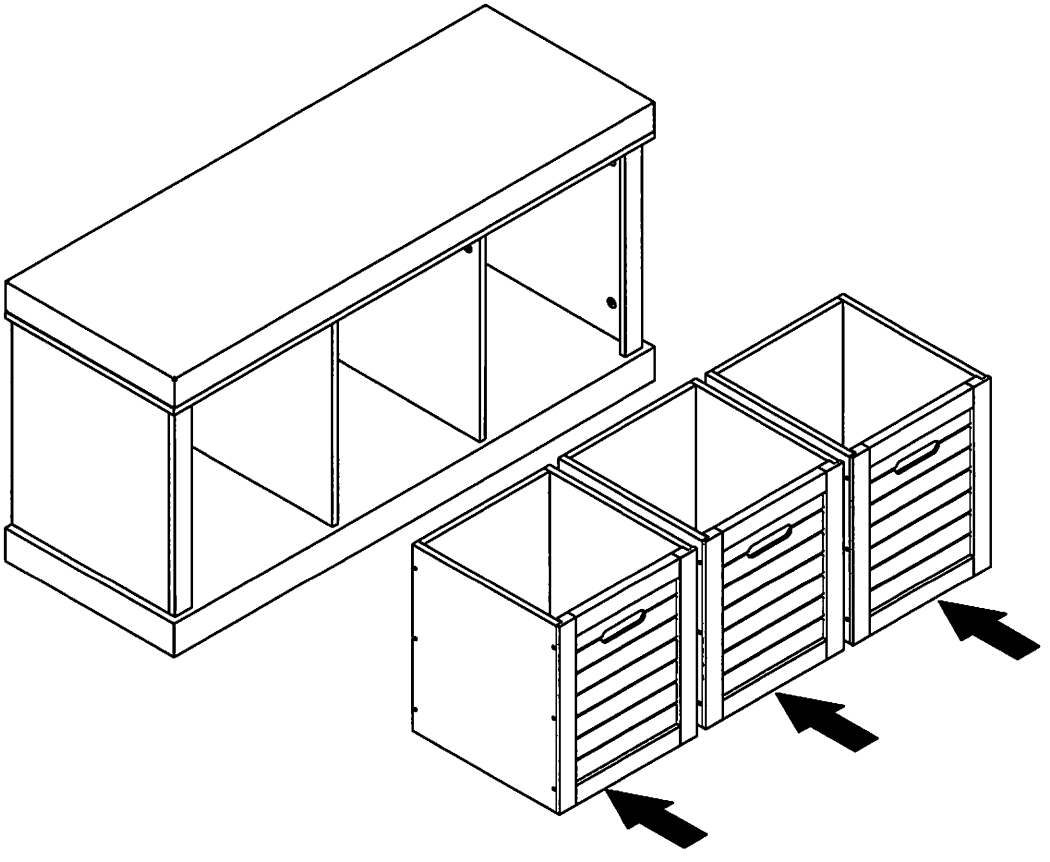

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0845 640 0800**
Argos Ltd MK9 2NW

