
Winchester - Console Table

Assembly Instructions - Please keep for future reference | 395/5798

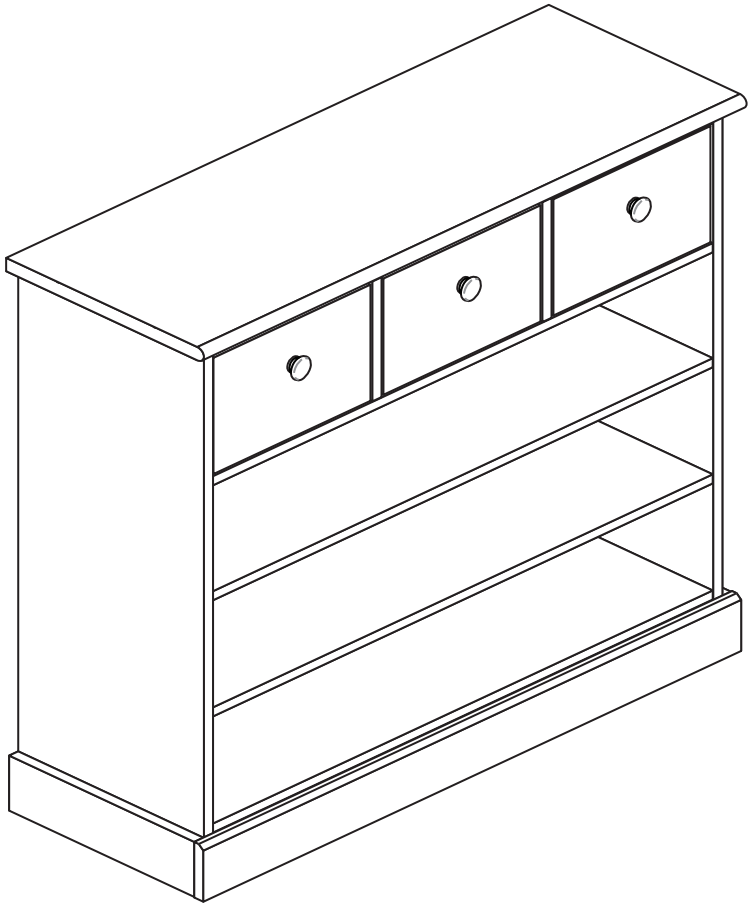

Dimensions
Width - 90cm
Depth - 33cm
Height - 92cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 2 - 28/07/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 30kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

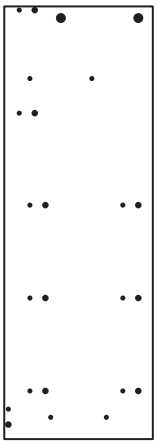


1 Left End *(DF2944)*
(894 x 307mm)

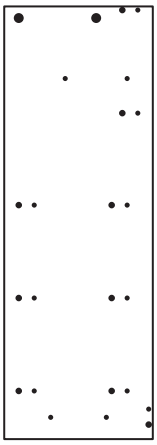

2 Right End *(DF2945)*
(894 x 307mm)




3 Cross Rail *(DF2946)*
(827 x 92mm) x 3




4 Front Plinth *(DF2948)*
(889 x 92mm)



5 Side Plinth *(DF2941)*
(307 x 91mm) x 2




6 Divider *(DF2950)*
(198 x 305mm) x 2

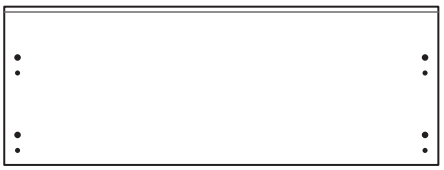


7 Top *(DF3377)*
(897 x 327mm)




8 Shelf *(DF2949)*
(827 x 306mm) x 3



9 Drawer Front *(DF2947)*
(259.5 x 192mm) x 3



10 Left Drawer Side *(W260-124LH)*
(260 x 124mm) x 3




11 Right Drawer Side *(W260-124RH)*
(260 x 124mm) x 3



12 Drawer Back *(W232-124)*
(232 x 124mm) x 3



13 Drawer Base *(T243-257)*
(243 x 257mm) x 3

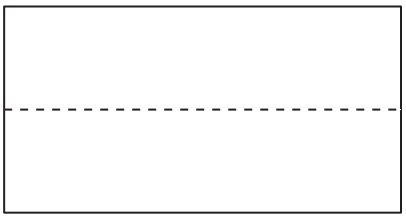


14 Back *(X820-426)*
(820 x 426mm) x 2

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Metal dowel *(F901)* x 34

B 

Large locking nut *(F900)* x 28

C 

Small locking nut *(F3)* x 6

D 

Knock-in Peg *(F171GY)* x 12

E 

38mm Screw *(F81)* x 3

F 


25mm Screw *(F50)* x 8

G 

9mm Screw (*F73)* x 12

H 


9mm Screw *(F74)* x 6

I 

Plastic Nail *(F91)* x 4

J 

Wedgefix *(F639)* x 6

K 

Nail *(F51)* x 26

L 


Wooden dowel *(F22)* x 28

M 

Drawer runner *(F307)* x 6

N 


Handle (*F463)* x 3

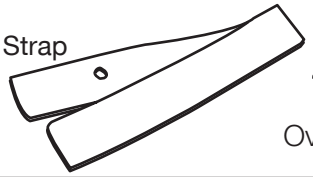O Strap 

 Screw  Washer x 2

Overbalance protector kit *(F269)* x 1

Tools required

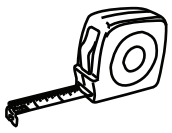


Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

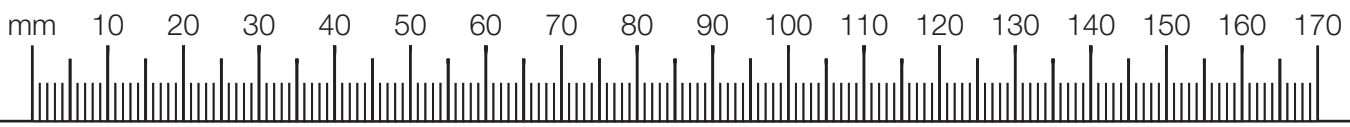

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Step 1

Prepare the 3 drawer fronts

Screw 2 metal dowels **A** into each of the 3 drawer fronts **9**.

Note: Tighten the metal dowels up fully against the panels.

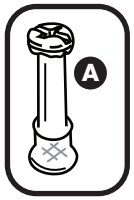

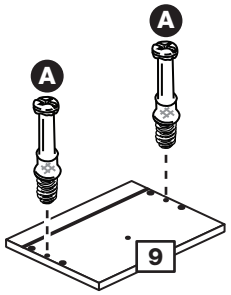


x 3


Step 2

Prepare the drawer sides


Insert a small locking nut **C** into the hole shown on the left drawer side **10** and the right drawer side **11**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

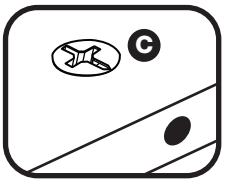

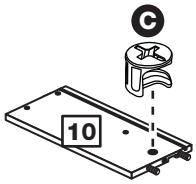

x 3

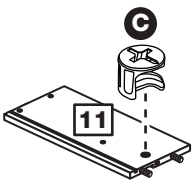

x 3

Step 3


Attach the drawer sides to the drawer fronts


Push the left drawer side **10** and right drawer side **11** onto the back of the drawer front **9**.

Turn the small locking nuts **C** on the left drawer side **10** and right drawer side **11**.

Note: Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

x 3

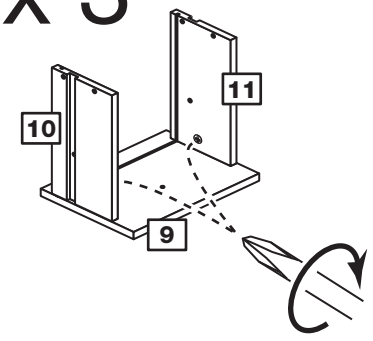

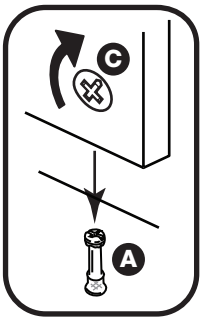


Assembly Instructions

Step 4

Fit the drawer bases

Slide the drawer base 13 down the grooves in the drawer sides 10 and 11 and down into the groove in the drawer front 9.

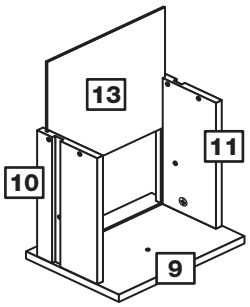

x 3


Step 5

Fit the drawer backs

Fit the drawer back 12 between the drawer sides 10 and 11.

Make sure that the drawer base 13 fits into the groove in the drawer back 12.

Hold the drawer back 12 in position and tap the knock-in pegs D through the holes in the drawer sides 10 and 11.

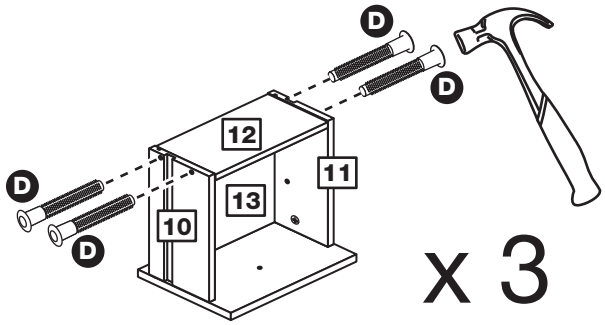


x 3

Step 6

Attach the handle

Attach a handle N to each drawer front 9 using screw E.

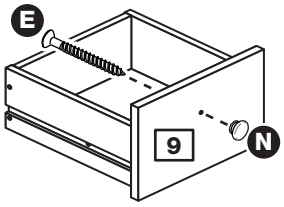



x 3

Step 7

Fit the wedgefixes

Turn the drawer assembies over and slide 2 wedgefixes J into the front and back grooves, as shown, and tighten up the screws.

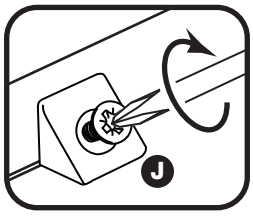

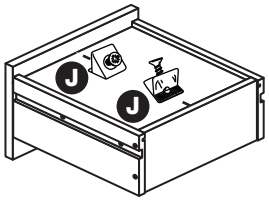

x 3

Step 8

Prepare the left end

a: Place a runner M onto the left end 1. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw G.

b: Slide the runner M back the other way and use the 2nd hole from the back to fit the 2nd screw G.


c: Screw 9 metal dowels A into the left end 1.

Insert 2 large locking nuts B into the left end 1.


Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels L into the left end 1.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

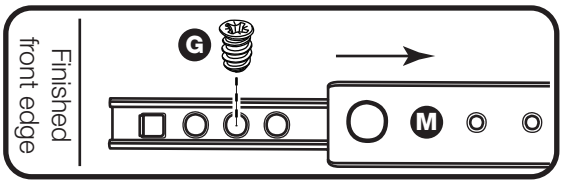


a:

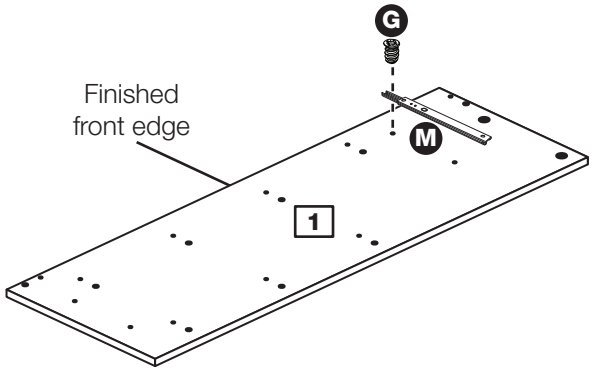

b:

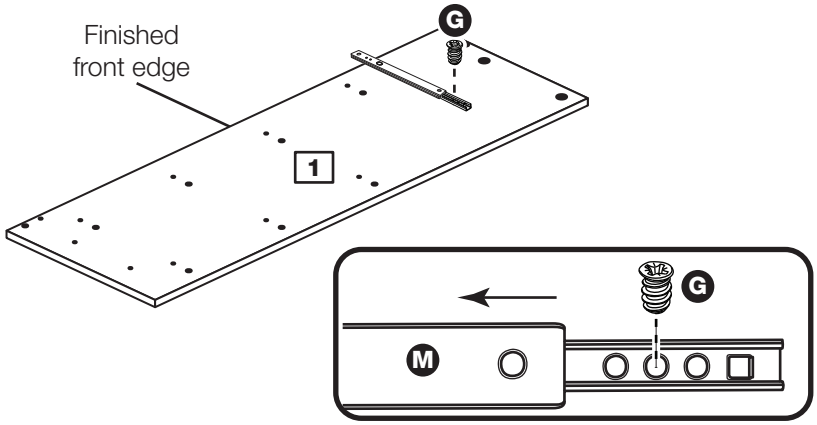

c:

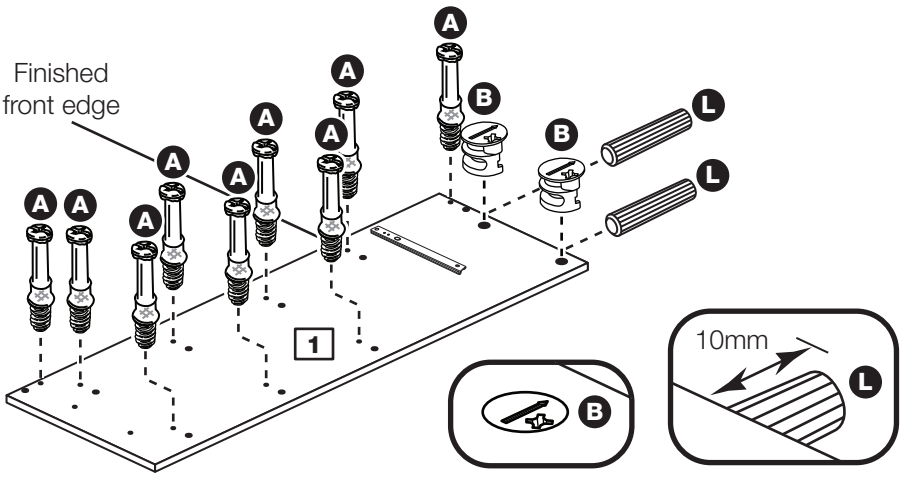

Step 9

Prepare the right end


a: Place a runner M onto the right end 2. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw G.

b: Slide the runner M back the other way and use the 2nd hole from the back to fit the 2nd screw G.


c: Screw 9 metal dowels A into the right end 2.


Insert 2 large locking nuts B into the right end 2.

Tap 2 wooden dowels L into the right end 2.

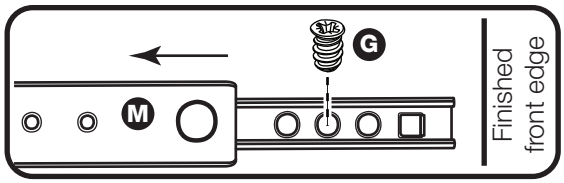


a:

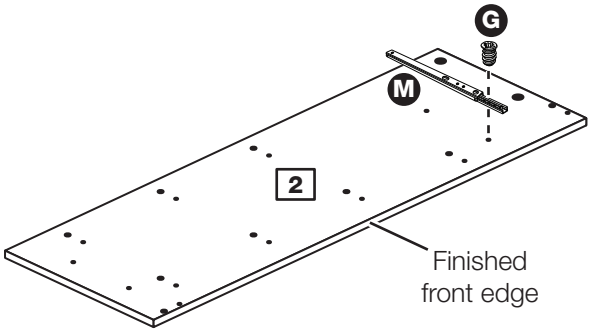


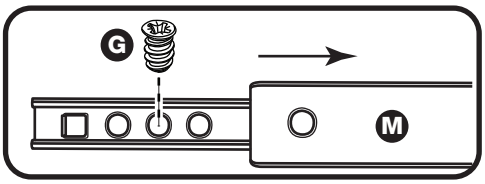

b:

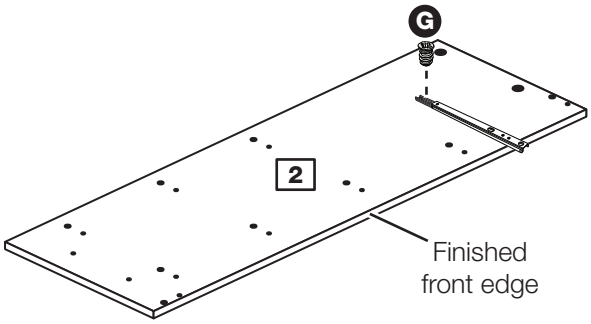

c:

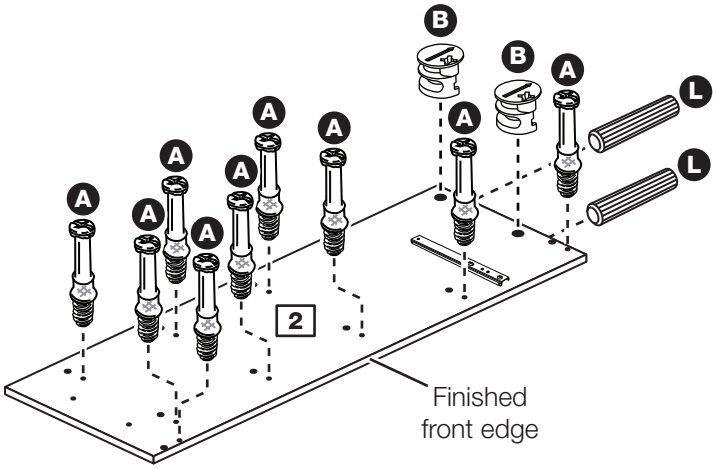

Assembly Instructions

Step 10

Prepare the 2 dividers

a: Place a runner Ⓜ onto the divider [6]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw Ⓖ.

b: Slide the runner Ⓜ back the other way and use the 2nd hole from the back to fit the 2nd screw Ⓖ.

Turn the divider over


c: Place a runner Ⓜ onto the divider [6]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw Ⓖ.


d: Slide the runner Ⓜ back the other way and use the 2nd hole from the back to fit the 2nd screw Ⓖ.


e: Insert 2 large locking nuts Ⓑ into the divider [6].


Tap 2 wooden dowels Ⓛ into the divider [6].


Note: Due to the manufacturing process, the 2 holes for the large locking nut can be on either surface of the 2 dividers.

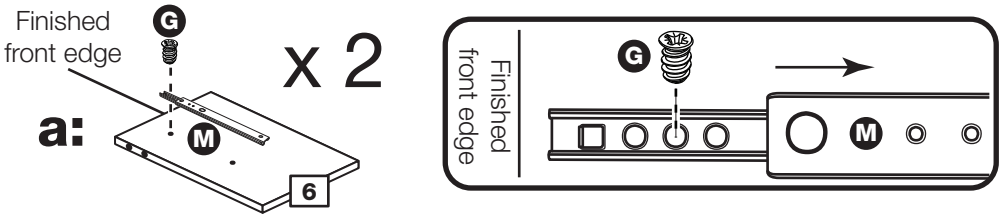


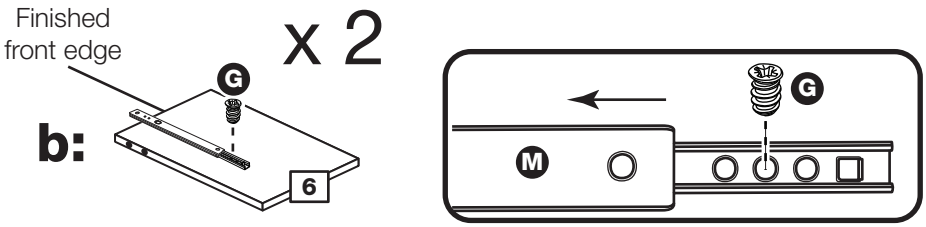

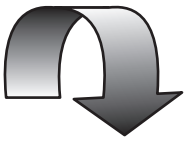

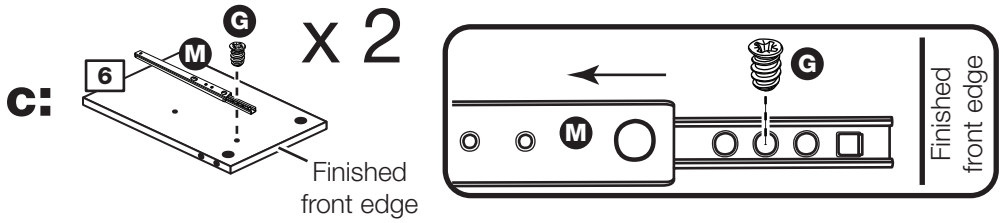

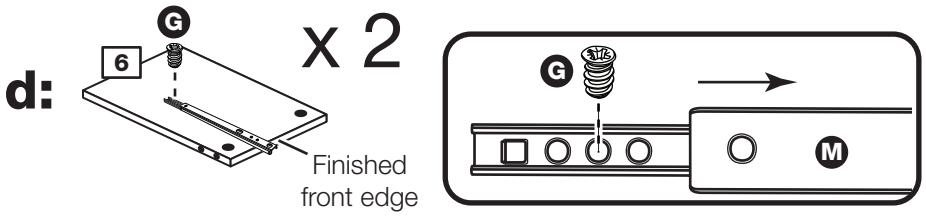

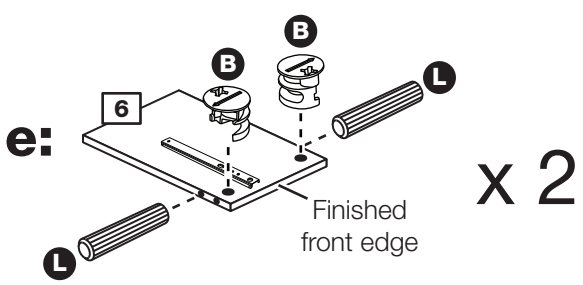

Assembly Instructions


Step 11

Prepare 2 of the cross rails

Screw 2 metal dowels **A** into 2 of the cross rails **3**.

Insert 2 large locking nuts **B** into 2 of the cross rails **3**.

Tap 2 wooden dowels **L** into 2 of the cross rails **3**.

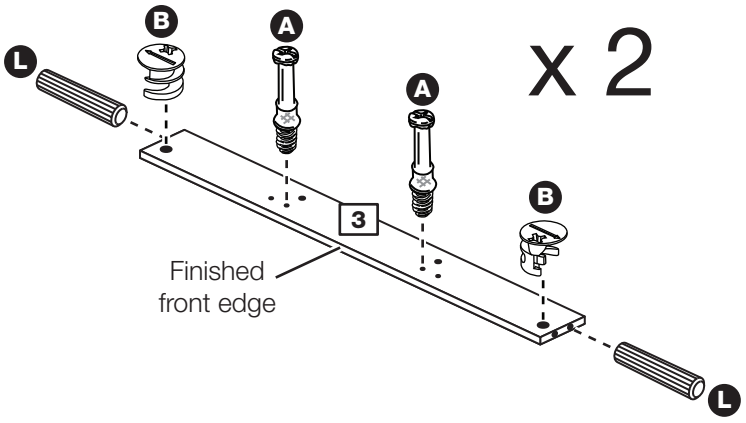


Step 12

Fit a divider to a cross rail

Push a divider **6** onto a cross rail **3**.

Use a screwdriver to tighten the large locking nut **B** fitted to the divider **6**.

Note: Turn the large locking nut **B** as far as it will go - more than 1/2 a turn.

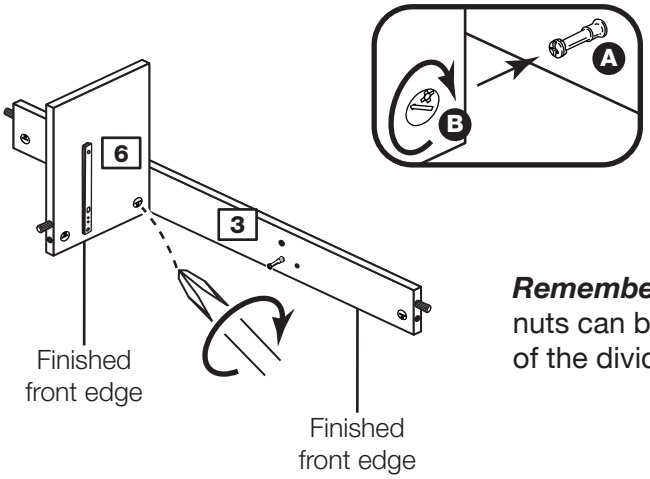


Remember: The large locking nuts can be on either surface of the dividers.

Step 13

Fit another divider

Push another divider **6** onto the cross rail **3**.

Use a screwdriver to tighten the large locking nut **B** fitted to the divider **6**.

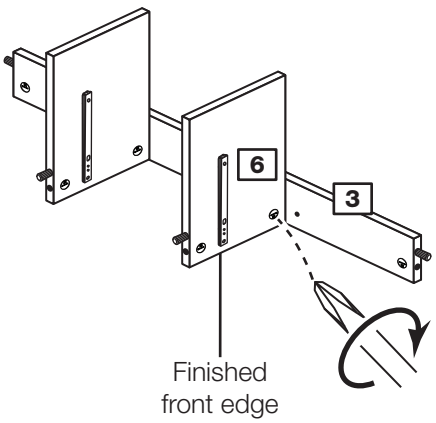


Step 14

Fit the other cross rail

Push the other cross rail [3] onto the dividers [6].

Use a screwdriver to tighten the 2 large locking nuts (B) fitted to the dividers [6].

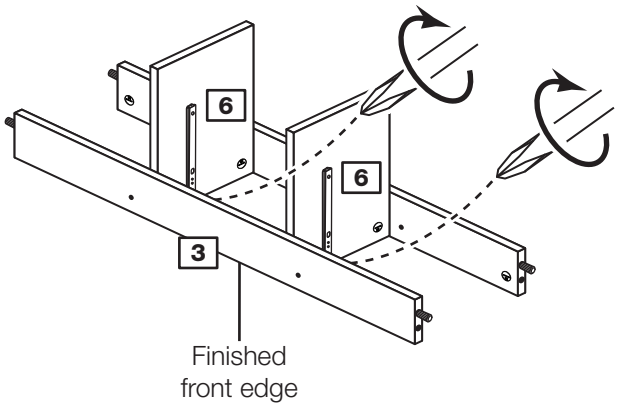


Step 15

Fit the cross rails to the right end

Push the cross rails [3] onto the right end [2].

Use a screwdriver to tighten the 2 large locking nuts (B) fitted to the cross rails [3].

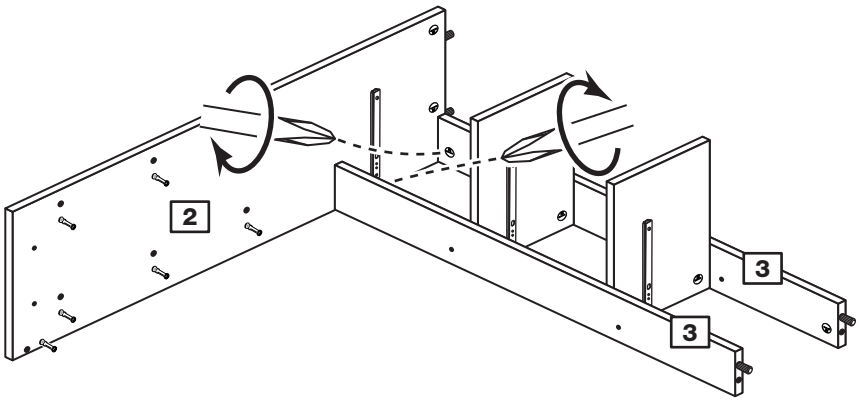


Step 16

Prepare the 3 shelves

Insert 4 large locking nuts (B) into each of the 3 shelves [8].

Tap 4 wooden dowels (L) into each of the 3 shelves [8].

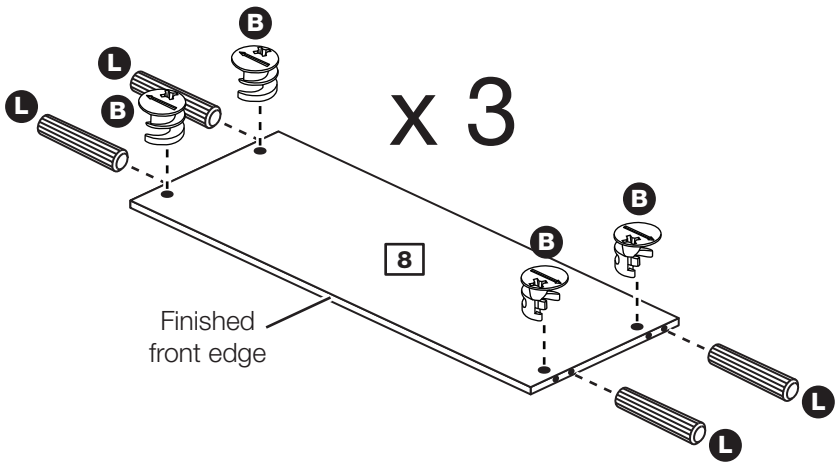


Step 17

Fit the 3 shelves

Push the 3 shelves [8] onto the right end [2].

Use a screwdriver to tighten the 2 large locking nuts (B) fitted to each of the 3 shelves [8].

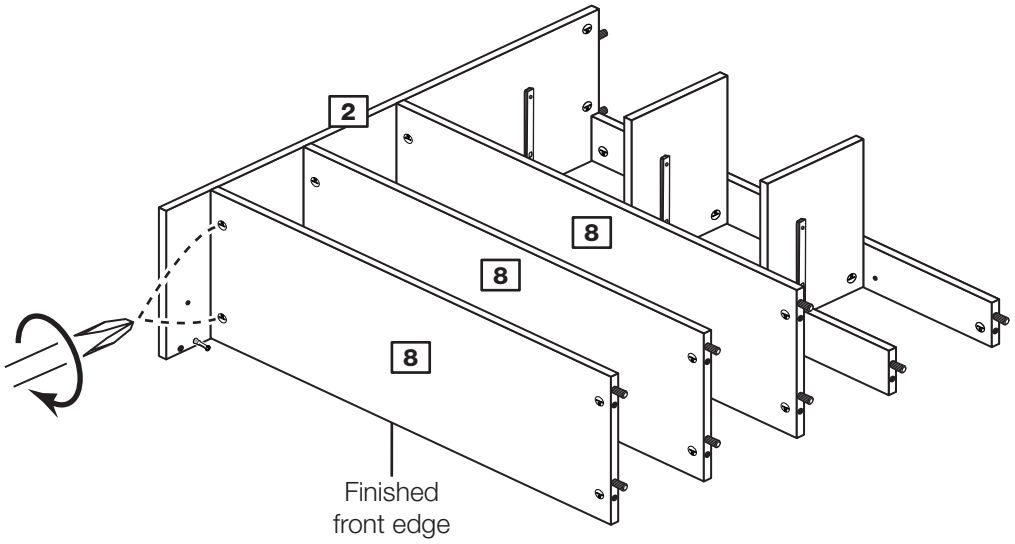


Step 18

Prepare the remaining cross rail

Insert 2 large locking nuts (B) into the cross rail [3].

Tap 2 wooden dowels (L) into the cross rail [3].

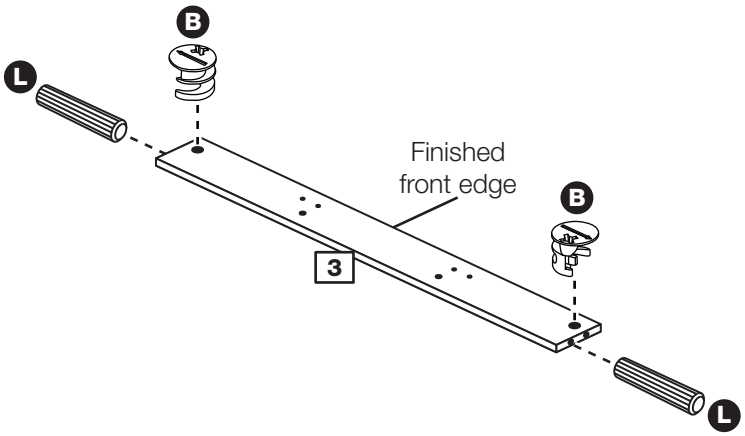


Step 19

Fit the cross rail

Push the cross rail [3] onto the right end [2].

Use a screwdriver to tighten the large locking nut (B) fitted to the cross rail [3].

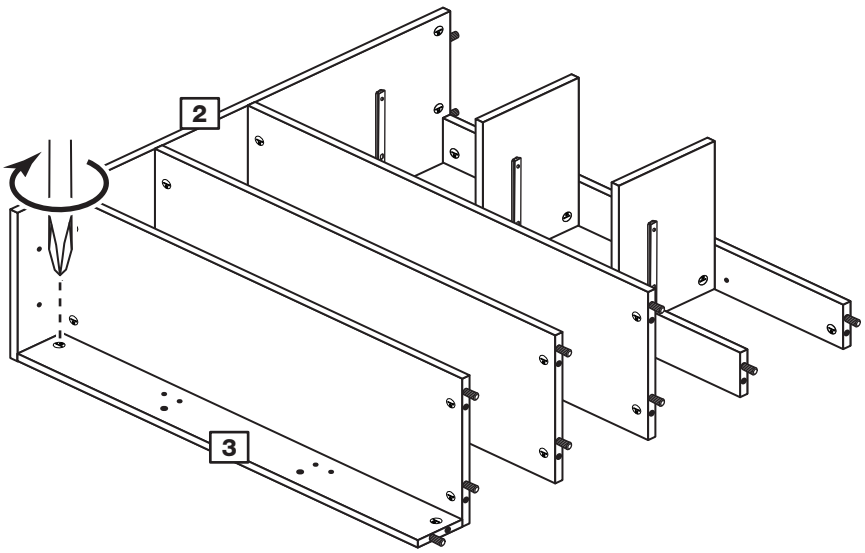


Step 20

Fit the left end

Push the left end 1 onto the assembly.


Use a screwdriver to tighten the 9 large locking nuts B fitted to the 3 cross rails 3 and the 3 shelves 8.

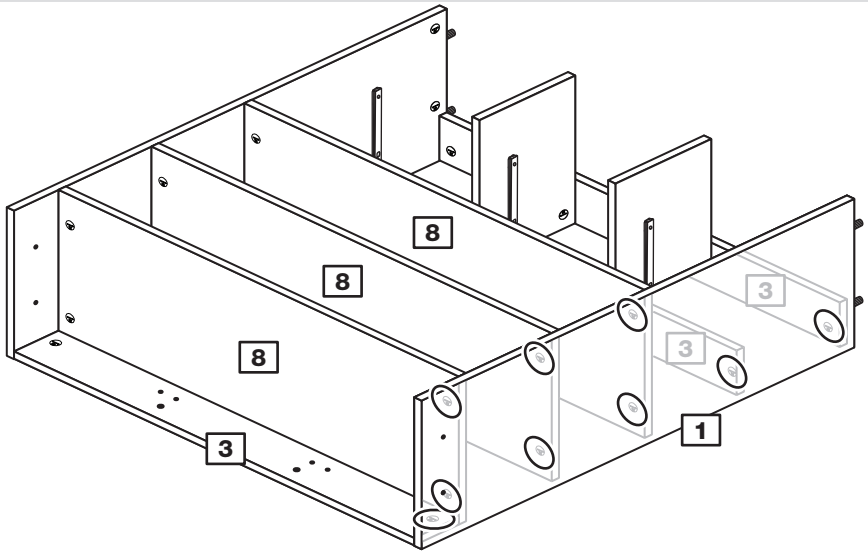

Step 21

Prepare the top

Screw 4 metal dowels A into the top 7.

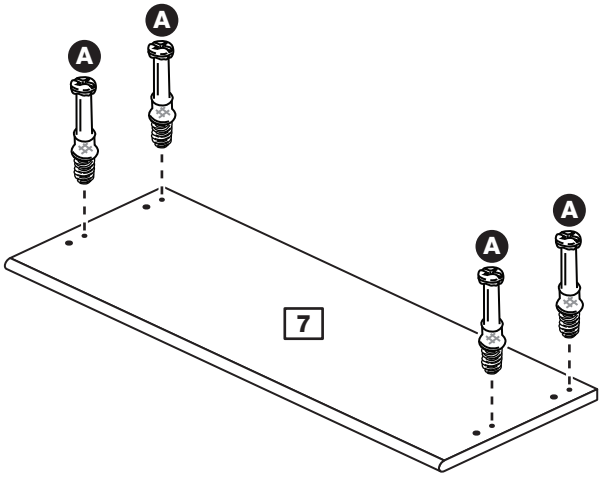


Step 22

Fit the top

Push the top 7 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts B fitted to the left end 1 and right end 2.

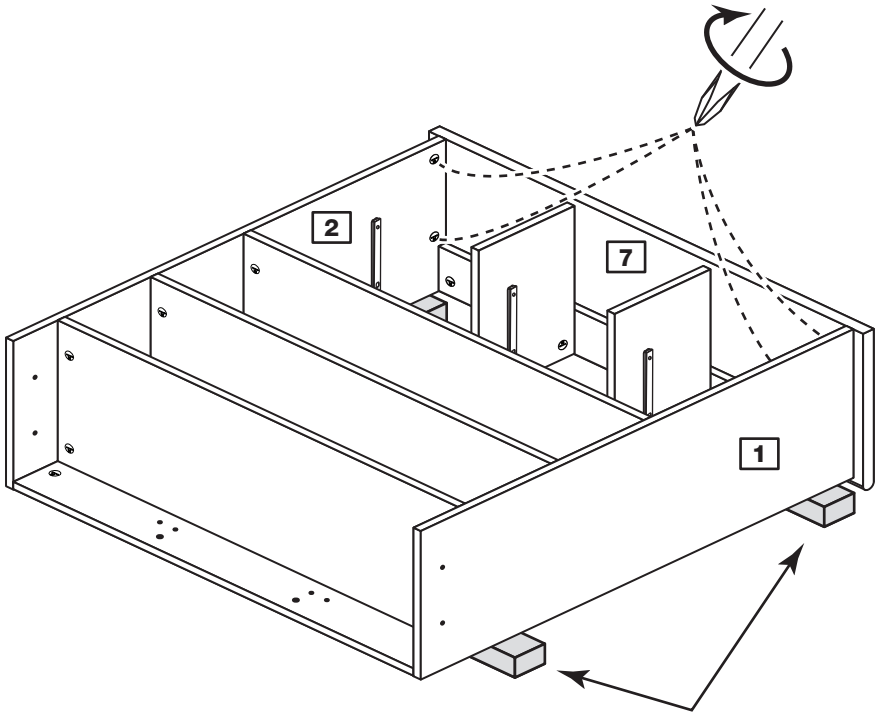


Note: To make it easier to fit the top and the plinths, place 4 polystyrene blocks from the packaging underneath the side panels to raise the assembly.

Step 23

Prepare a side plinth

Insert a large locking nut B into 1 of the side plinths 5.

Tap a wooden dowel L into the side plinth 5.

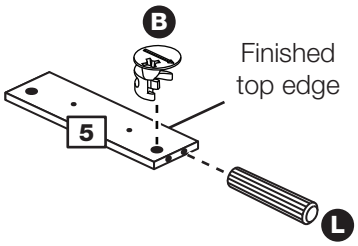


Step 24

Prepare the other side plinth

Insert a large locking nut B into the side plinth 5.


Tap a wooden dowel L into the side plinth 5.

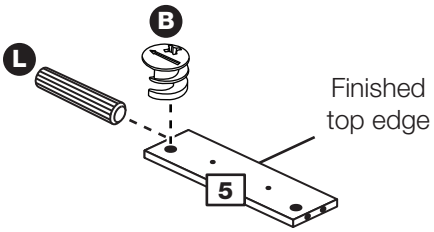

Step 25

Prepare the front plinth

Screw 2 metal dowels A into the front plinth 4.

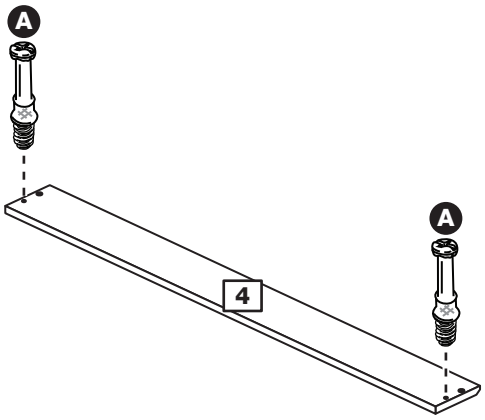


Step 26

Fit the plinths together

Push the 2 side plinths 5 onto the front plinth 4.

Use a screwdriver to tighten the large locking nuts B fitted to the side plinths 5.

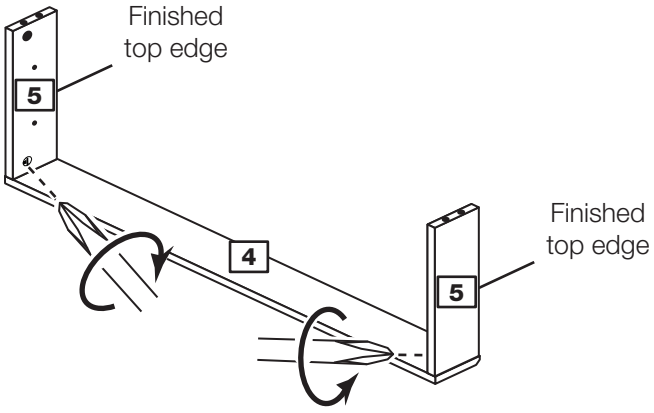


Step 27

Fit the plinths

Position the 3 plinths onto the assembly, as shown.

Secure the 2 side plinths 5 through the left end 1 and right end 2 using screws F.
Use the 2 mark holes on the side plinths to line them up with the holes in the ends.

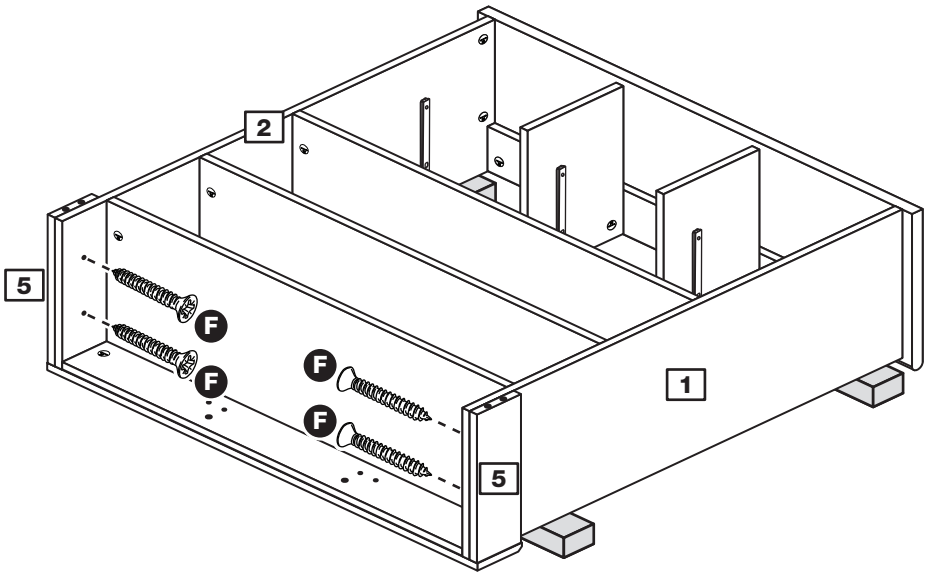


Step 28

Secure the front plinth and the top cross rail

Secure the front plinth 4 to the bottom cross rail 3 using 2 screws F.

Secure the top cross rail 3 to the top 7 using 2 screws F.

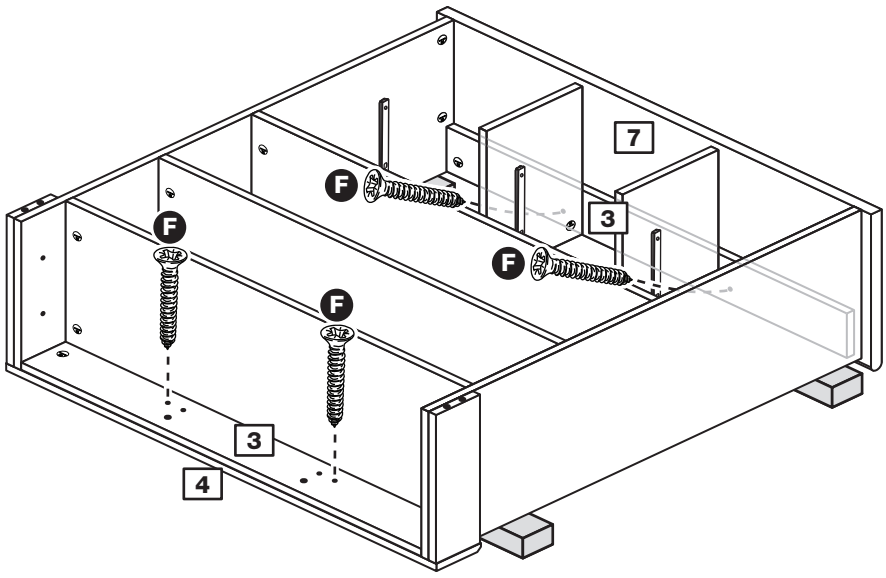

Step 29

Fit a back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place a back 14 onto the unit and tap 11 nails K around its 3 outside edges, as shown.

Note: Nails should be spaced about 150mm apart.

Tap 2 additional nails K through the back 14 and down into the shelves 8.

Note: Make sure that the nails are fitted central to the shelves to avoid damage.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

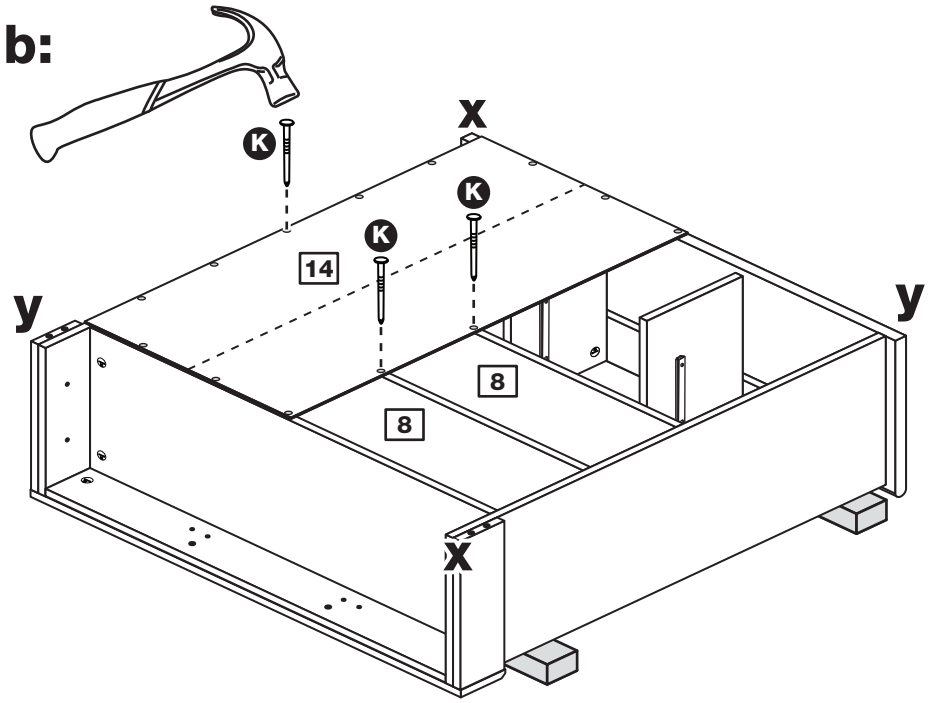

Step 30


Fit the other back

Push the other back 14 up against the 1st back and tap 11 nails K around its 3 outside edges, as shown.

Note: Nails should be spaced about 150mm apart.

Tap 2 additional nails K through the back 14 and down into the shelves 8.

Note: Make sure that the nails are fitted central to the shelves to avoid damage.

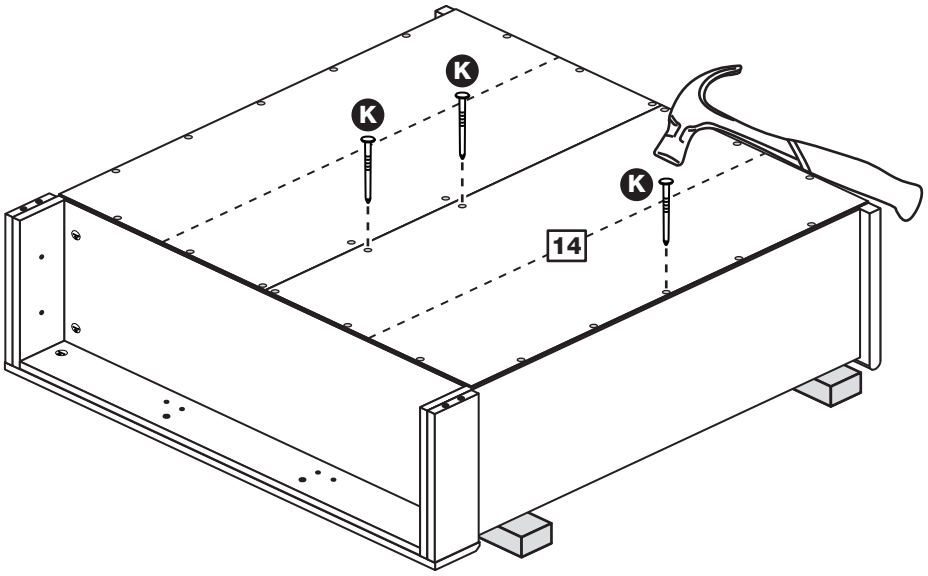

Assembly Instructions

Step 31


Fit the 4 plastic nails

Tap 2 plastic nails (I) into the bottom edge of each of the sides [1] and [2].

DO NOT fit the plastinails to the side plinths.

Carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

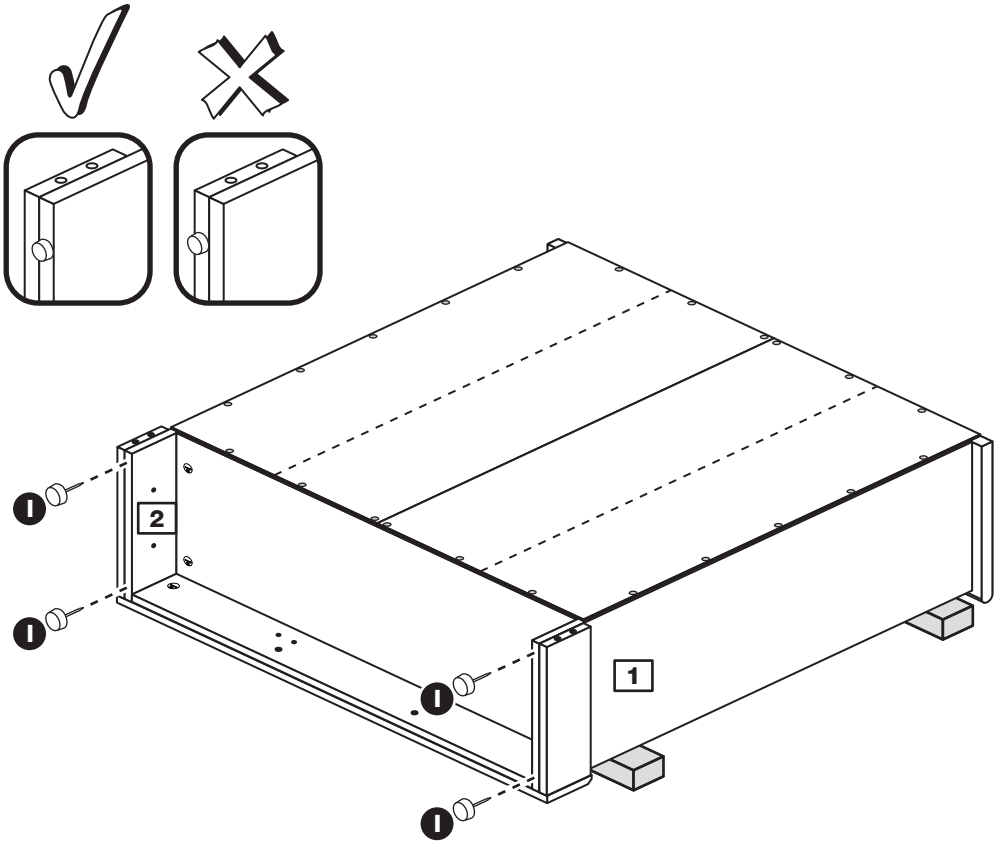


Step 32


Fit the drawers

Slide both the runners (M) forward and locate the drawer sides [10] and [11] between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners (M).

Working from the inside of the drawer, insert 2 screws (H) through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws (H).
If they catch on the runner you may need to loosen them slightly.

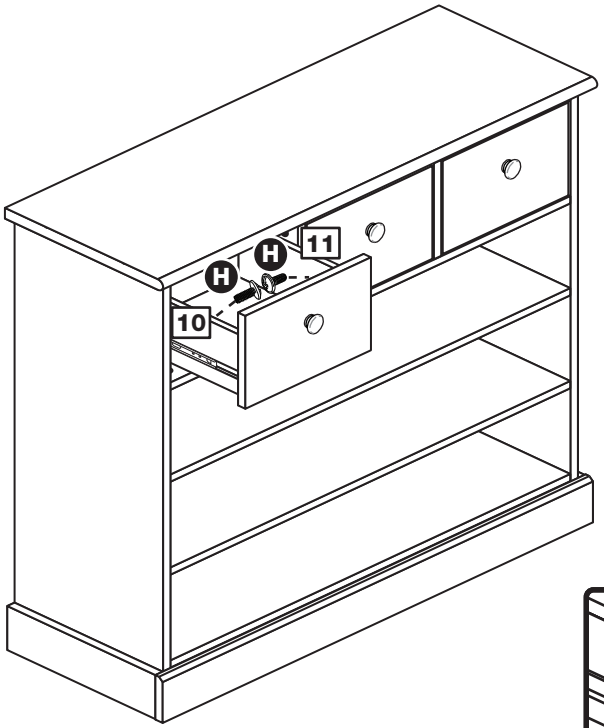

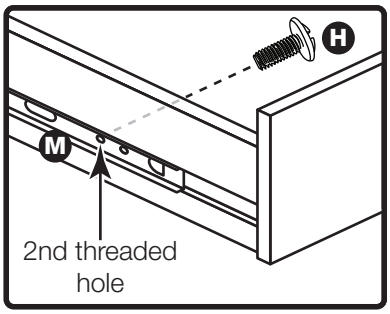

Step 33

Fit the overbalance protector kit

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit O to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

