
Grafton - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

414/1642

402/9496

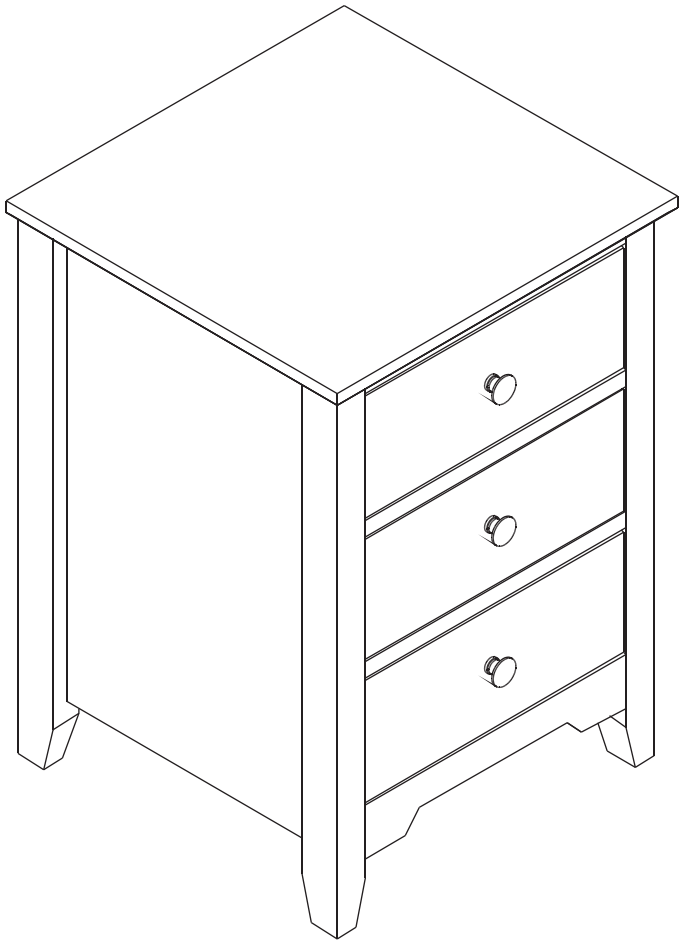

Dimensions

Width - 44cm
Depth - 43cm
Height - 62.5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 31/03/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

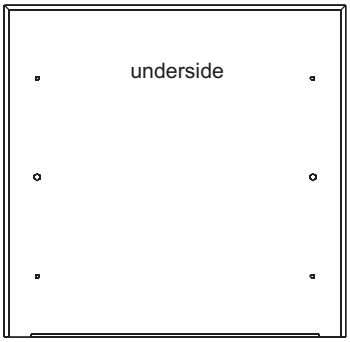

1 Top panel
(44 x 43cm)

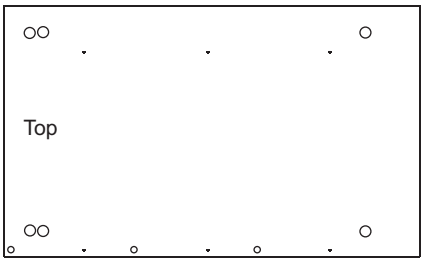


2 Left side panel
(53.7 x 32.5cm)




3 Left back foot
(60.7 x 4.5cm)




4 Left front foot
(60.7 x 4.5cm)

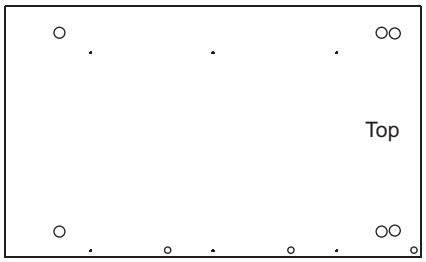


5 Right side panel
(53.7 x 32.5cm)



6 Right back foot
(60.7 x 4.5cm)




7 Right front foot
(60.7 x 4.5cm)




8 Bottom front rail
(34 x 6cm)



9 Front rail x 3
(34 x 6.5cm)



10 Back rail
(34 x 6cm)



11 Drawer front x 3
(33.4 x 13.5cm)




12 Drawer left side x 3
(30 x 10cm)




13 Drawer right side x 3
(30 x 10cm)



14 Drawer back x 3
(28.5 x 10cm)



15 Drawer bottom x 3
(29,9 x 29,9cm)










16 Back panel
(54.6 x 35.9cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Metal dowel x 28	**B** Locking nut x 28 	**C**  30mm Screw x 12
D  16mm Screw x 03	**E**  14mm Screw x 30	**F**  Nail x 15
G  22mm Bolt x 03	**H**  Wooden dowel x 32	**L**  Right runner x 03 pair
M  Left runner x 03 pair	**N**  Handle x 03	


Tools required




Phillips screwdriver (medium & large)

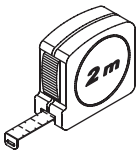

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels (H) into the indicated parts.

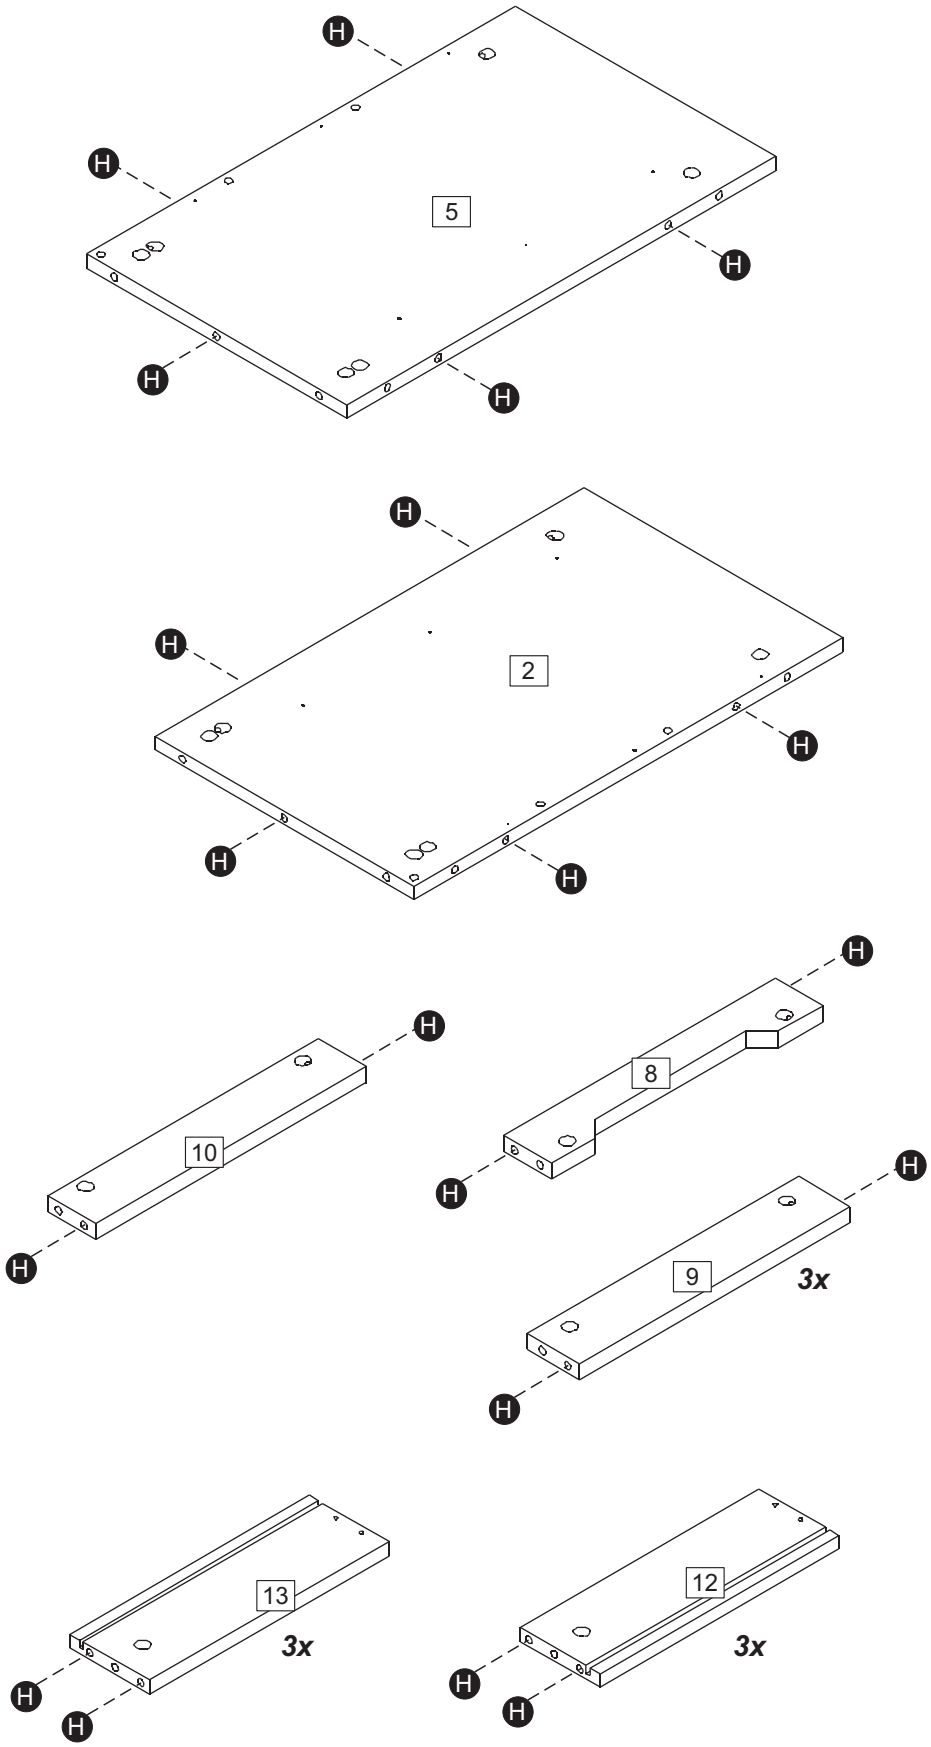


Step **2**

Fitting metal dowels.


Screw metal dowels (A) in the indicated parts .


Note: Insert metal dowels as far as shown.

Do not over tighten.

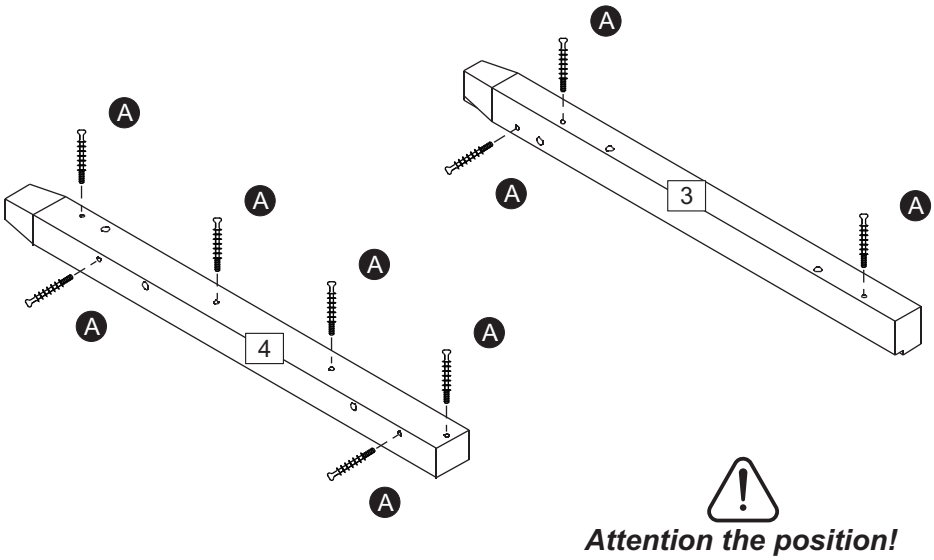



Attention the position!

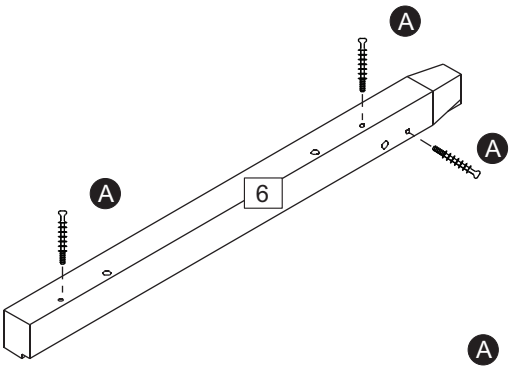


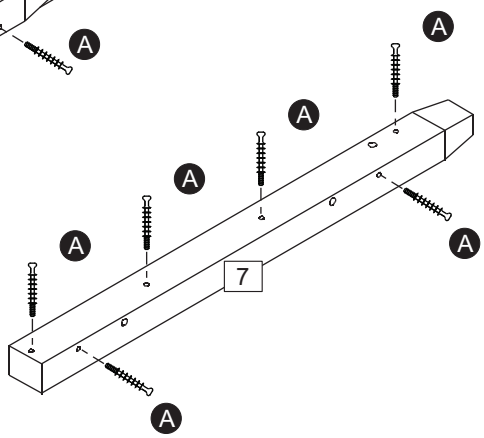

Attention:

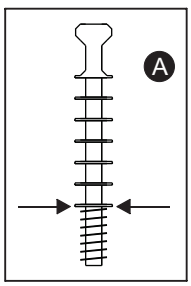

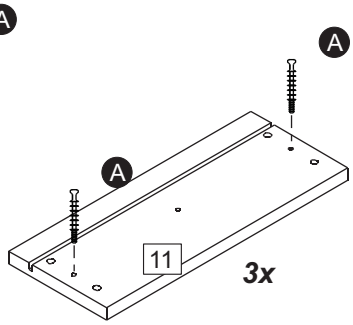

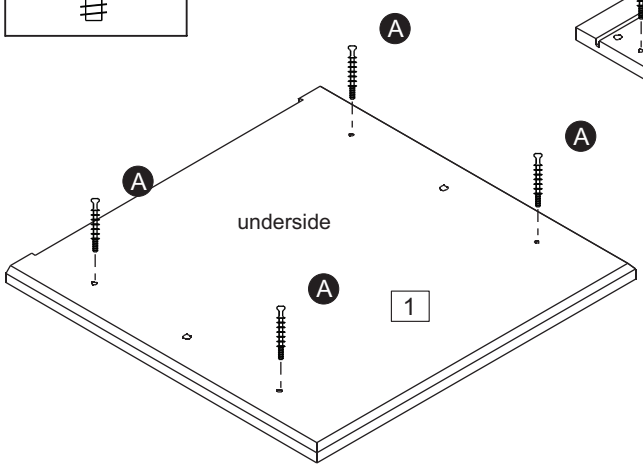

Assembly Instructions

Step **3**

Assembling the sides.

Note that feet are numbered!


Fit feet 6 and 7 to the right side panel 5 as shown.

Fit feet 3 and 4 to the left side panel 2 as shown.

Insert 8 locking nuts B in the indicated parts.


Use a screwdriver to turn locking nuts B clockwise to lock.


Do not over tighten.

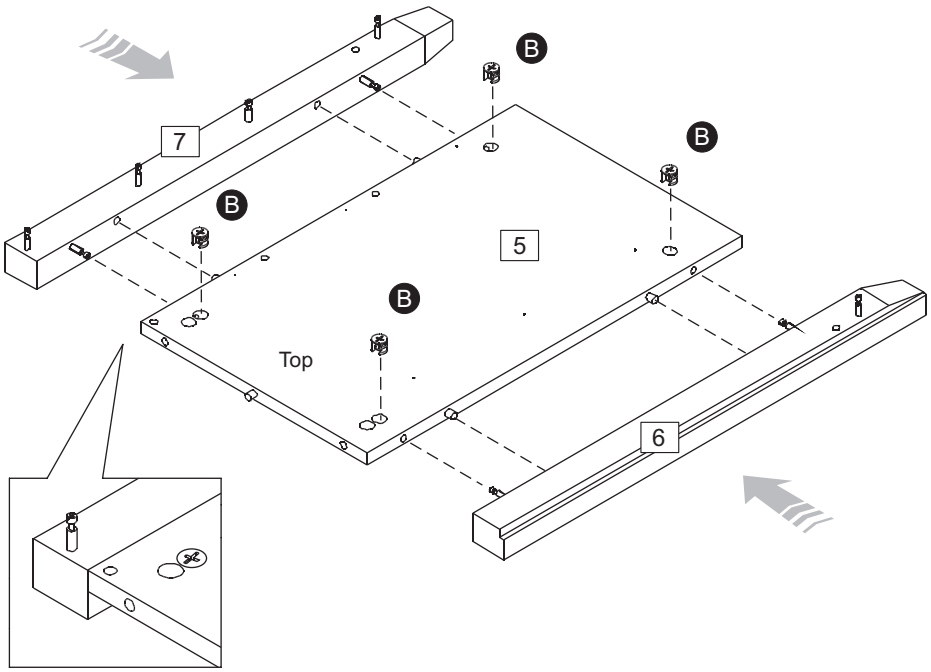



Attention the position!

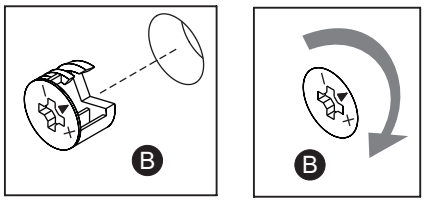

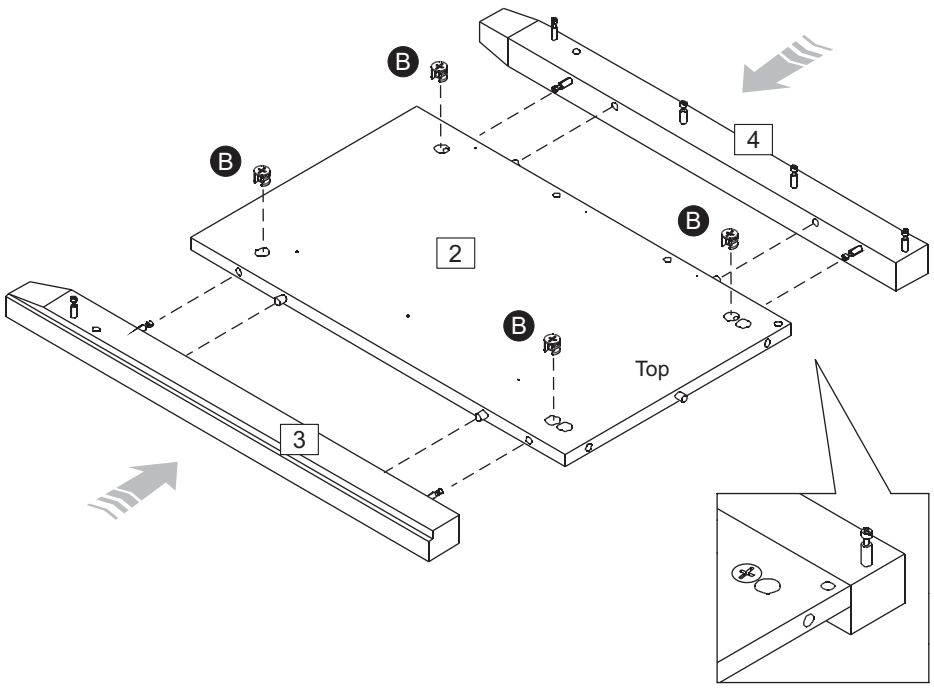

Assembly Instructions


Step **4**


Fixing runners.

Attachright runners (L) to the pre drilled holes on the right sidepanel [5] usingscrews (E).

Important:
Make sure screws are fully inserted, otherwise, drawers may not open and close easily.

Attachleft runners (M) to the pre drilled holes on the left sidepanel [2] usingscrews (E).

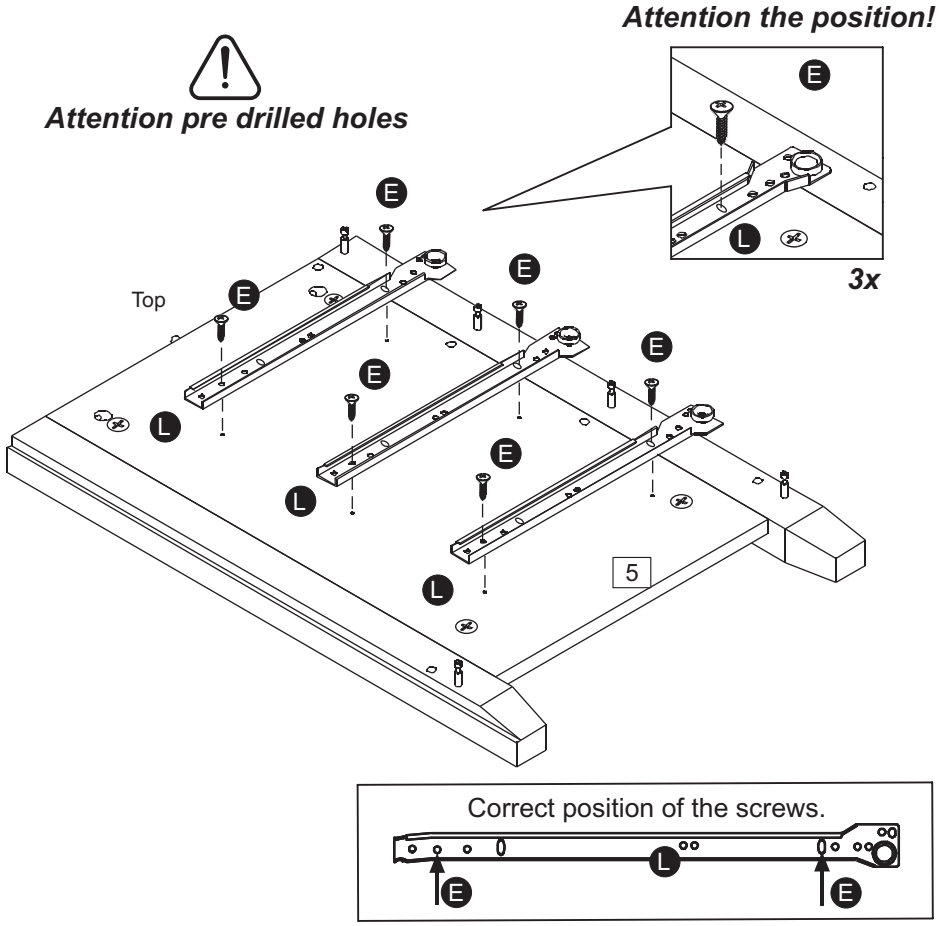

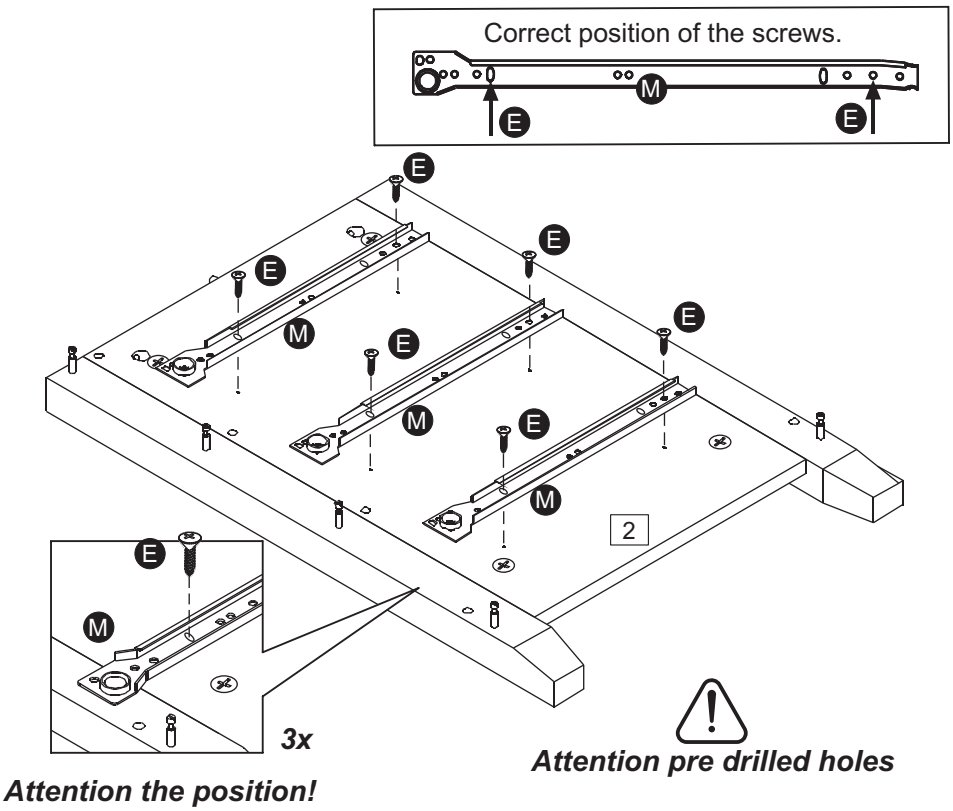

Step **5**


Assembling the cabinet.

Fit parts 8, 9 and 10 to left side panel 2.

Insert 5 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

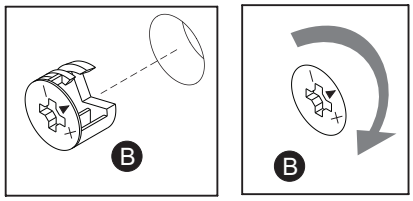

Step **6**


Fixing right side panel.


Fit right side panel 5 on to cabinet.


Insert 5 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

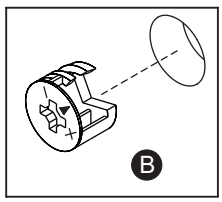

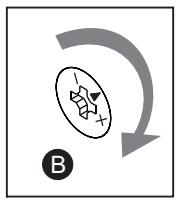

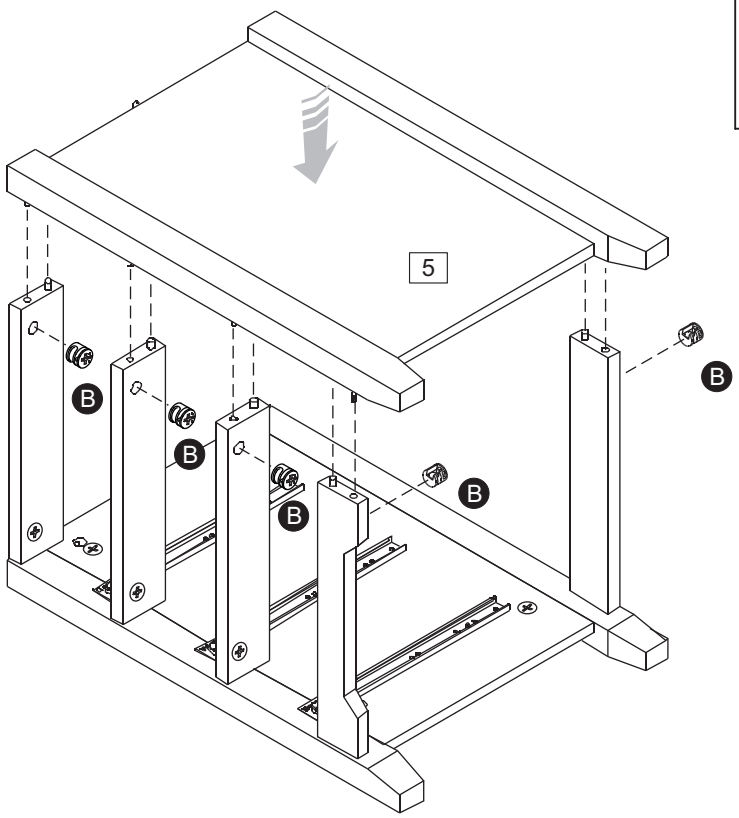

Step 7

Fixing the top panel.


With help, carefully turn the product with its face upwards.


Fit top panel 1 on to cabinet.

Insert 4 locking nuts B into side panels where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

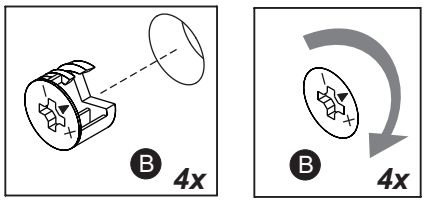

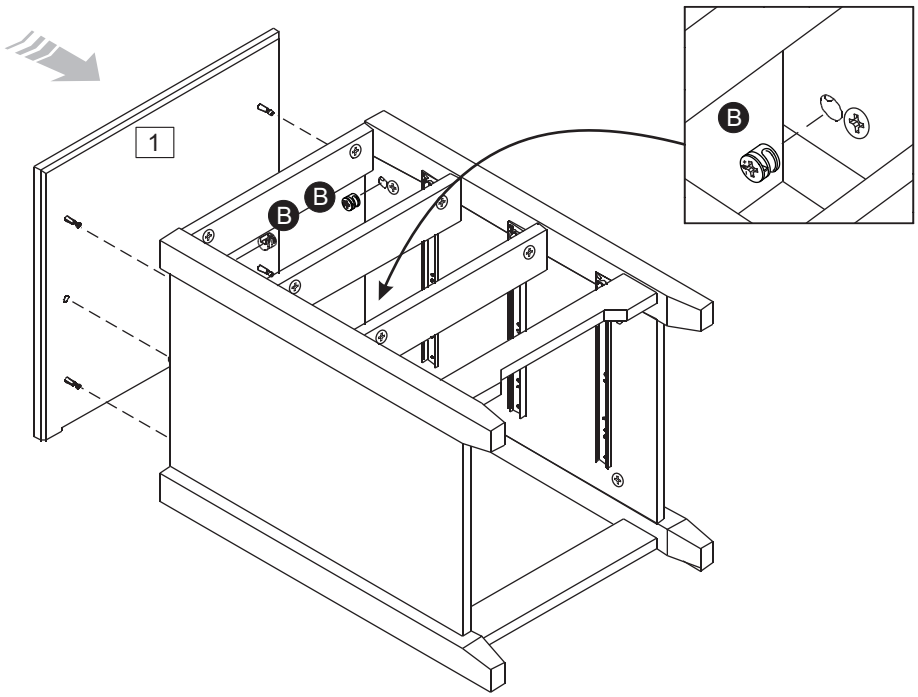

Step 8


Fixing back panel.


With help, carefully stand the product upright.

Important: Cabinet **MUST** be 'square'when back panel is attached.

Fix back panel 16 using nails F as shown.

Note: Attention to the measures.

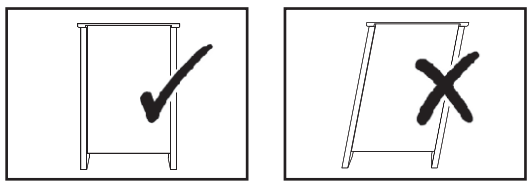

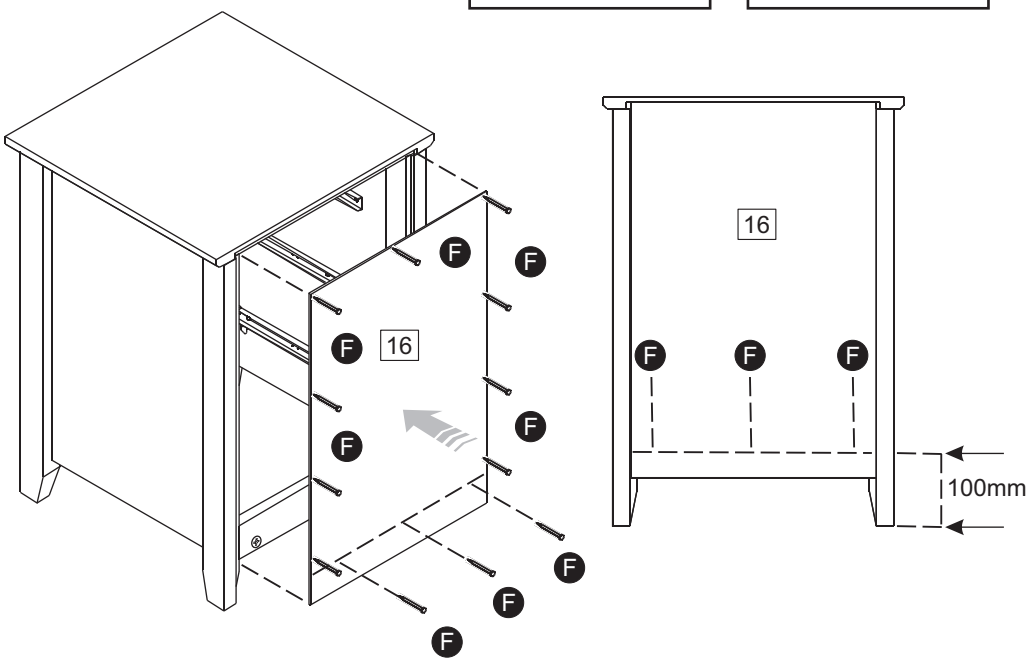

Assembly Instructions

Step **9**

Assembling the drawers:

a: Fit drawer sides 12 and 13 to the drawer front 11 .

Insert 2 locking nuts B into drawer sides where shown.


Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

b: Slide drawer bottom 15 into slots on drawer sides.

c: Position drawer back 14 in place, press the drawer sides and fix using screws C .

Using bolt G attach handle N to the drawer front.

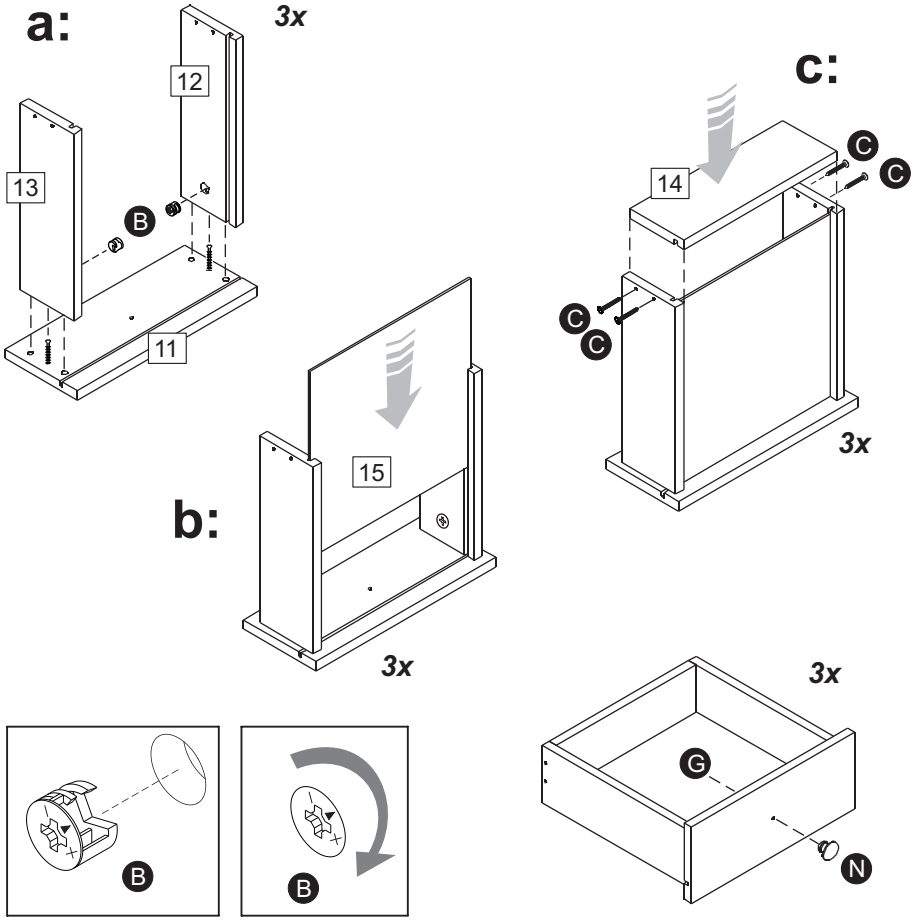



Step **10**

Fixing runners.

Attach right runners L and left runners M in the bottom edge of the drawers using screws E as shown.


Make sure runners are correctly positioned according to the diagram prior to fixing.

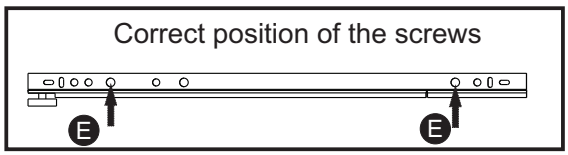

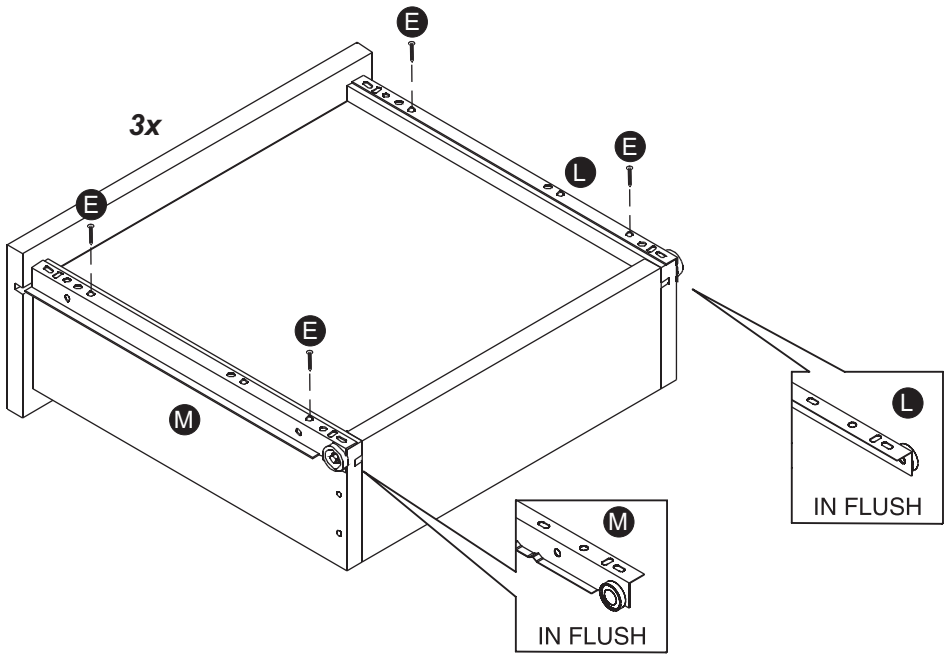

Step **11**

Hook the wheels of the runners on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

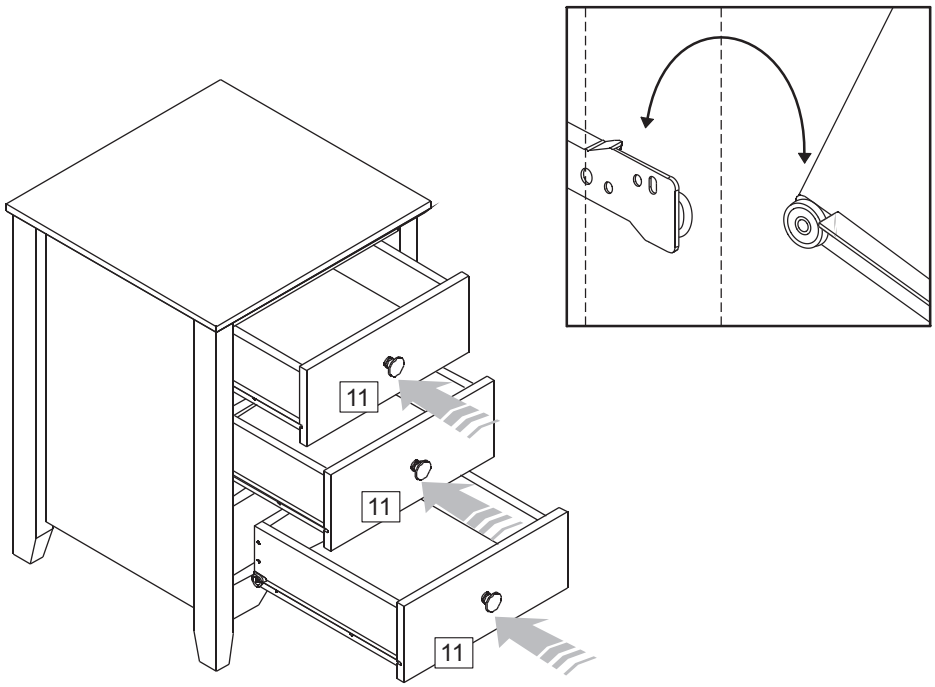


Step **12**

Adjusting drawers.

To move drawers up or down:

Loosen the screws in the runners in the side panels, adjust the drawers to suit and once drawers are aligned retighten screws.

Then, add 1 screw Ⓔ in the hole as indicated in the diagram.

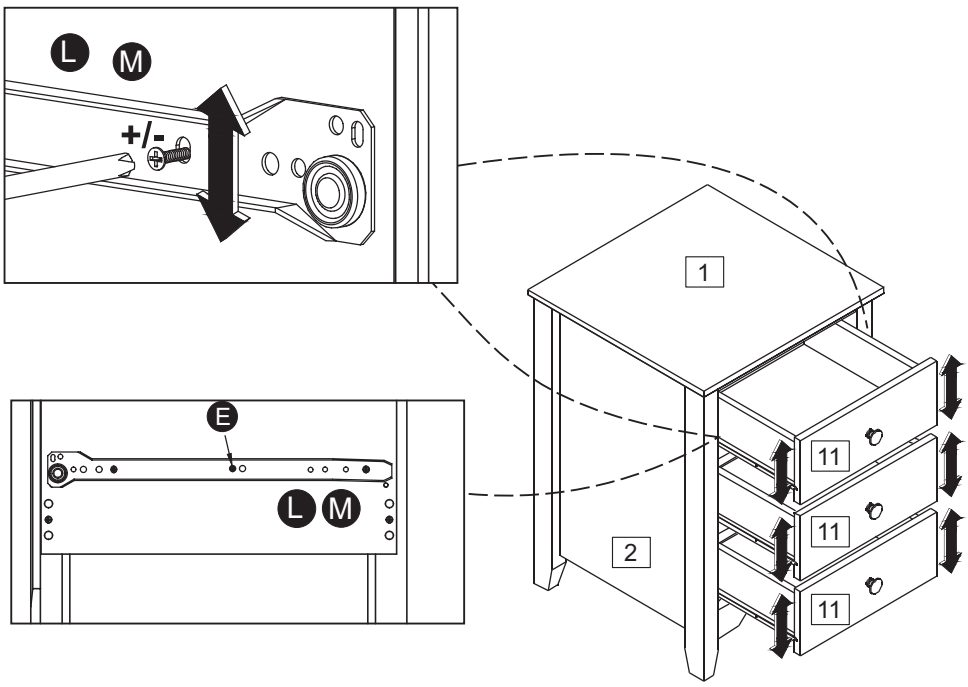

Assembly is complete.

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**