
HEART of HOUSE

abingdon 4124566

dimensions
width: 101.2 cm
depth: 40.0 cm
height: 76.0 cm

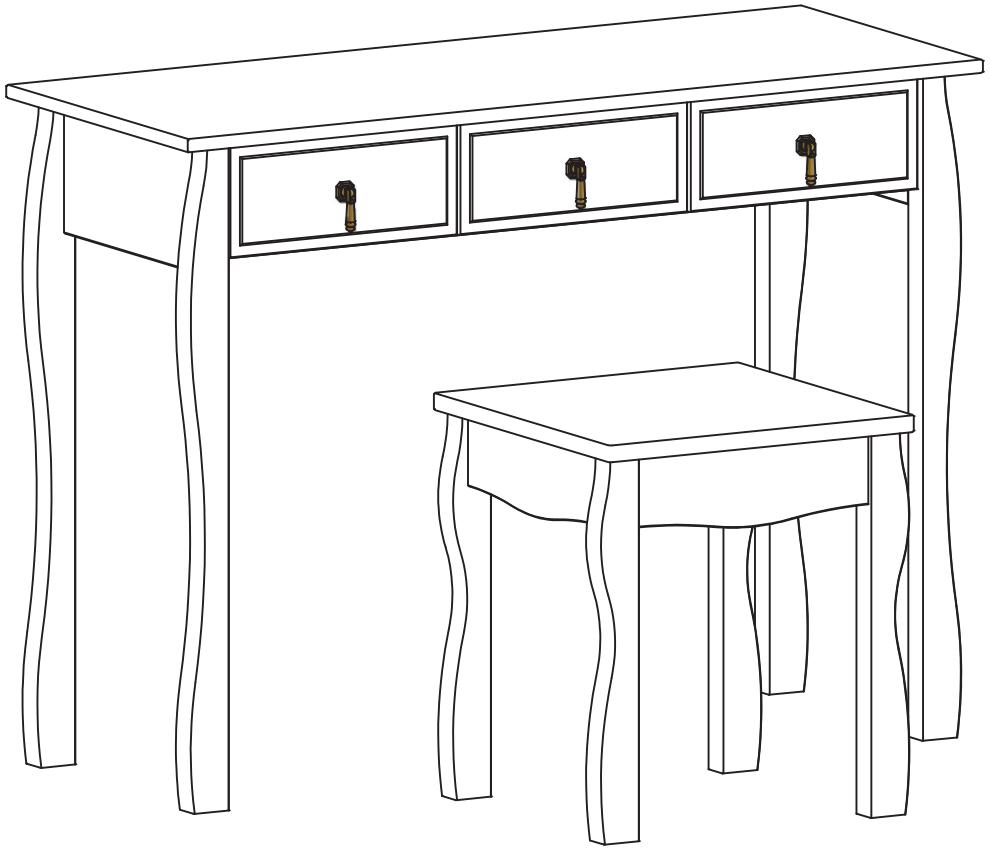

assembly instructions - please keep for future reference

if you need help or have damaged or missing parts, call the **argos customer helpline: 03456 400 800**

350812-01

issue 1 - 08-06-2015

safety and care advice

important - please read these instructions fully before starting assembly

• assembly should be carried out by a competent adult only.

• check you have all the components and tools listed on pages 2 and 3.

• do not use this product if any components are missing or damaged.

• remove all fittings from the plastic bags and separate them into their groups.

• keep children and animals away from the work area, small parts could choke if swallowed.

• make sure you have enough space to layout the parts before starting.

• do not stand or put weight on the product, this could cause damage.

• assemble the item as close to its final position (in the same room) as possible.

• assemble on a soft level surface to avoid damaging the unit or your floor.

• parts of the assembly will be easier with 2 people.



• we do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• dispose of all packaging carefully and responsibly.

• made for home retail group, milton keynes.

care and maintenance

• only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• regularly check fastenings to ensure they are tightened.


• this product should not be discarded with household waste.
take to your local authority waste disposal centre.

note: if required the next page can be cut out and used as reference throughout the assembly. keep this page with these instructions for future reference.


components - panels

if you have damaged or missing components, call the **argos customer helpline: 03456 400 800**


please check you have all the panels listed below

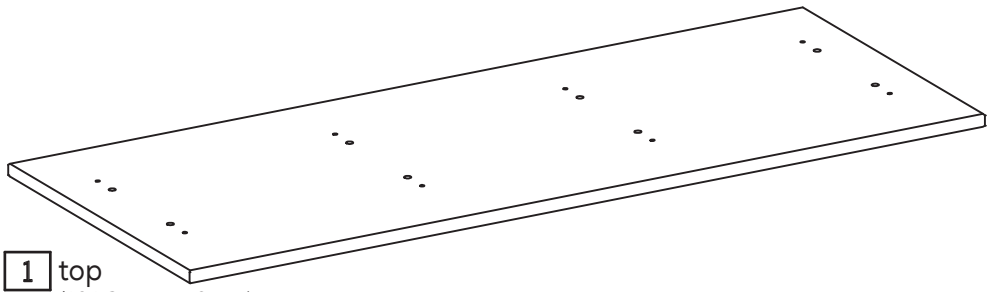


1 top
(101,2 cm x 40 cm)

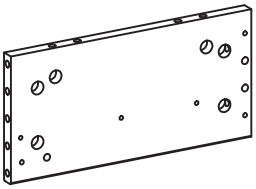

2 side, left
(15 cm x 30,6 cm)

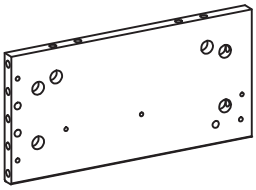

3 side, right
(15 cm x 30,6 cm)

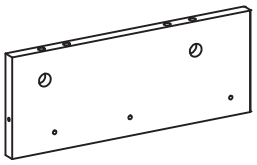


4 divider x 2
(11,9 cm x 30,4 cm)




5 post, left x 2
(74,5 cm x 5 cm)




6 post, right x 2
(74,5 cm x 5 cm)

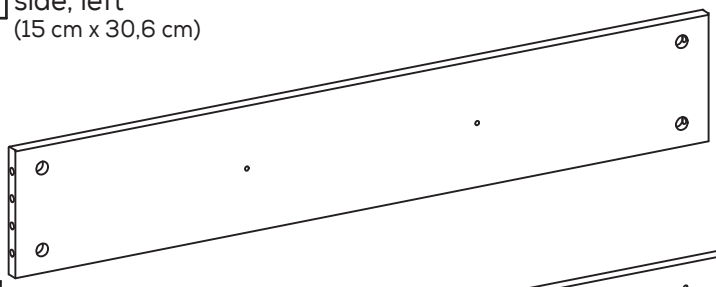


7 back rail
(88,2 cm x 15 cm)

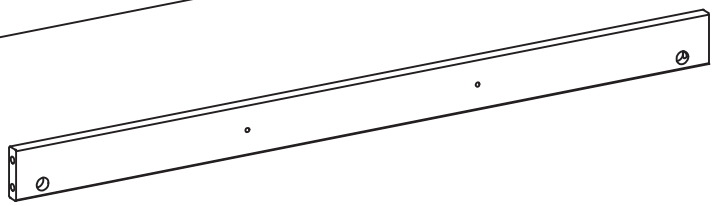


8 front rail
(88,2 cm x 6 cm)

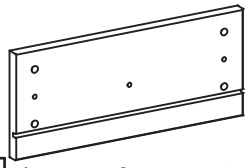


9 drawer front x 3
(29,0 cm x 12,5 cm)

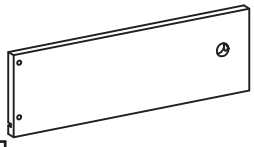


10 drawer side, left x 3
(30 cm x 9,6 cm)

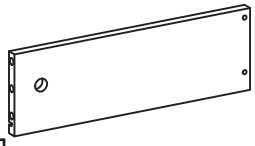


11 drawer side, right x 3
(30 cm x 9,6 cm)

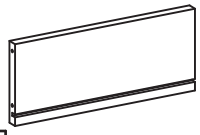

12 drawer back x 3
(22,9 cm x 9,6 cm)

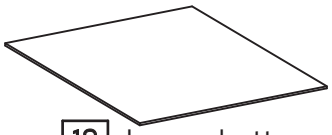

13 drawer bottom x 2
(23,8 cm x 29,7 cm)

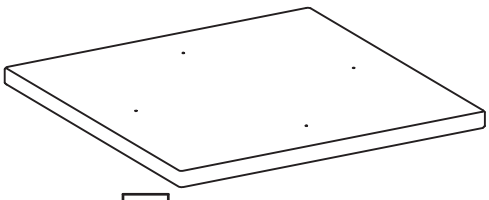


14 seat
(39 cm x 39 cm)



15 post, left x 2
(43,0 cm x 5,0 cm)



16 post, right x 2
(43,0 cm x 5,0 cm)






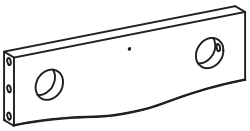


17 rail x 4
(29,4 cm x 9,2 cm)

components - fittings

please check you have all the panels listed below


note: the quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

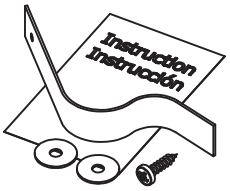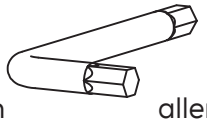Aa  ø7.8 x 40mm wooden dowel x 54	Ba  ø3.5 x 35mm screw x 12	Bc  ø3.5 x 15mm screw x 8
Bo  ø3 x 12mm screw x 12	Ca  ø15 x 10.5mm cam x 28	Cp  ø5 x 11, cc34mm bolt x 28
Dj  ø5 x 38mm screw x 4	Fe  ø35mm bracket x 8	Fh  wall strap and instruction x 1
Fi  back fitting w. ø3.5 x 15mm screw x 6	Gm  54mm handle x 3	
Hd  m4 x 20mm screw x 3	Hf  m6 x 60mm threaded rod x 8	Kb  ø5.8 x 8mm screw x 12
Kf  ø5.8 x 19mm screw x 6	Na  m6 x 10mm nut x 8	Nc  ø6 / ø11mm washer x 8
Nh  m6 x 13mm bush x 8	Nu  ø18 x 9mm spacer x 6	Vn  angle 23 x 23 x 24mm x 4
Yb  10/13mm wrench x 1	Yc  6mm allen key x 1	
CL  300mm drawer runner, left, side x 3	CR  300mm drawer runner, right, side x 3	
DL  300mm drawer runner, left x 3	DR  300mm drawer runner, right x 3	


tools required

 phillips screwdriver (medium & large)

 flatblade screwdriver (medium)

 hammer


ruler - use this ruler to help correctly identify the screws




assembly instructions

step 1


assembly of the dressing table.

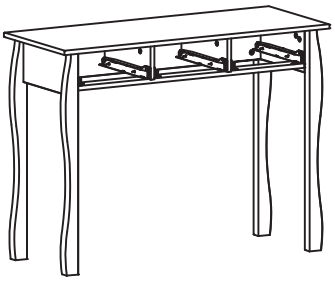


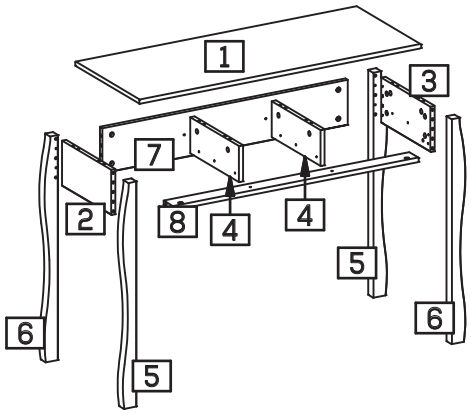

step 1.1

knock the dowels Aa into the holes indicated on the sides 2 and 3, and the dividers 4 using a small hammer.

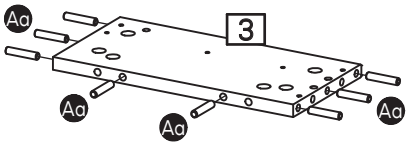


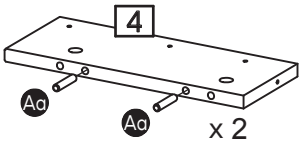

Aa




ø7.8 x 40mm wooden dowel x 20

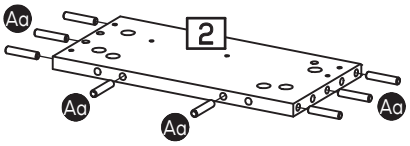


step 1.2

screw the bolts Cp into the holes indicated on the posts 5 and 6.

Cp



ø5 x 11, cc34mm bolt x 8

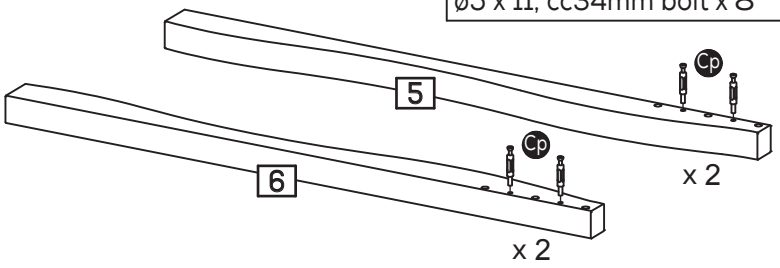

step 1.3

place the posts 5 and 6 onto the sides 2 and 3 as shown.


push cams Ca into the holes indicated on the sides 2 and 3. arrows pointing towards the posts 5 and 6.

turn the cams Ca to the right to fix the posts 5 and 6.

Ca




ø15 x 10.5mm cam x 8

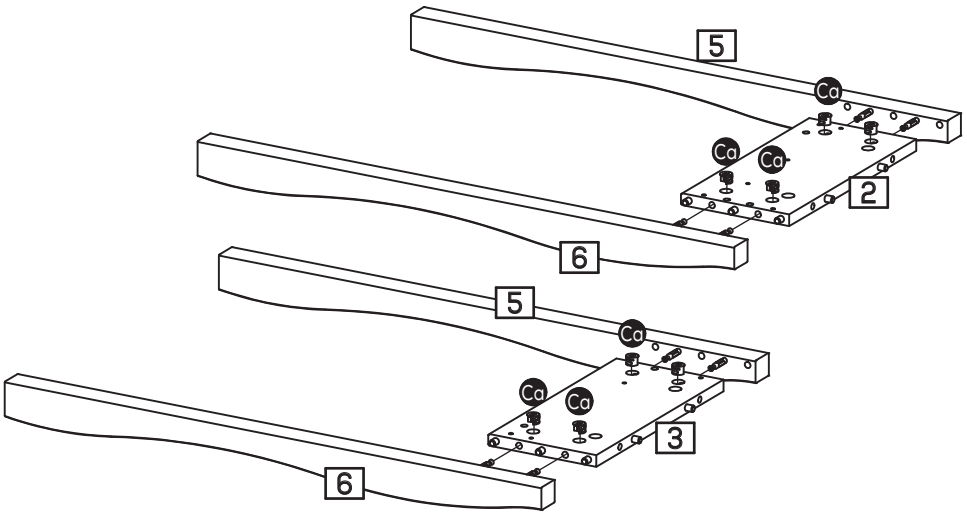

step 1.4

screw the bolts Cp into the holes indicated on the sides 2 and 3.

Cp
ø5 x 11, cc34mm bolt x 6

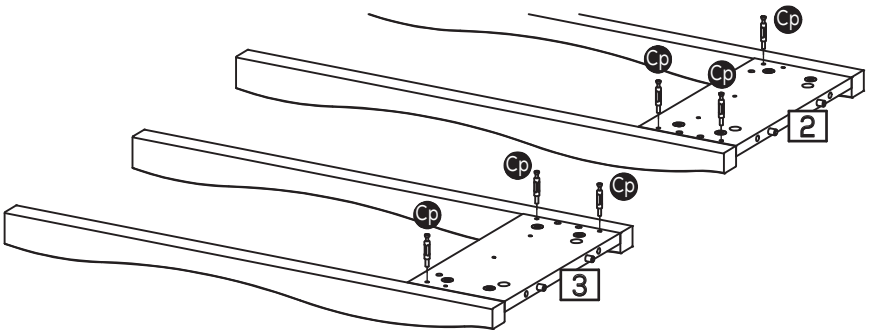

step 1.5

fix the drawer runners CL and CR to the sides 2 and 3 using screws Kf through the holes and the spacers Nu as indicated.


see details.

CL
300mm drawer runner, left, side x 1

CR
300mm drawer runner, right, side x 1

Kf
ø5.8 x 19mm Screw x 6

Nu
ø18 x 9mm Spacer x 6

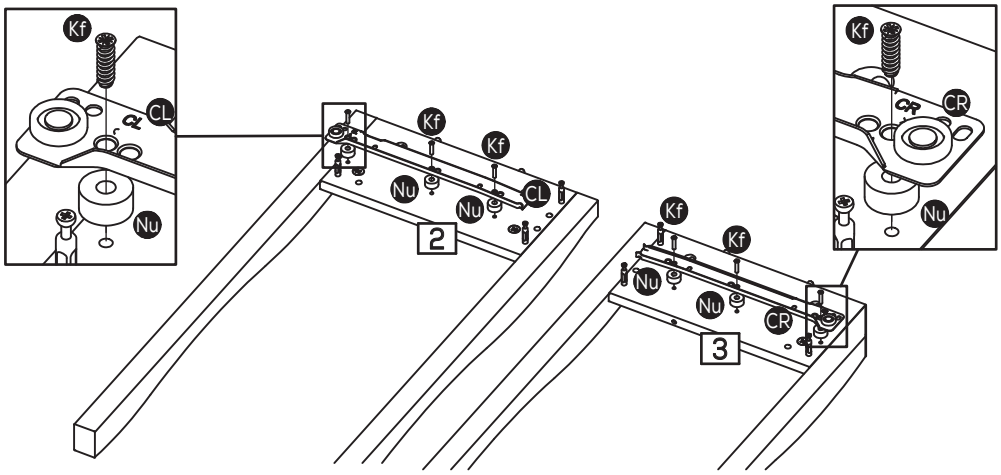

step 1.6

fix the drawer runner CL to the left hand side of the divider 4 using screws Kb through the holes indicated.


turn around the divider 4 and fix the drawer runner CR to the right hand side.

see details.

CL
300mm drawer runner, left, side x 2

CR
300mm drawer runner, right, side x 2

Kb
ø5.8 x 8mm screw x 12

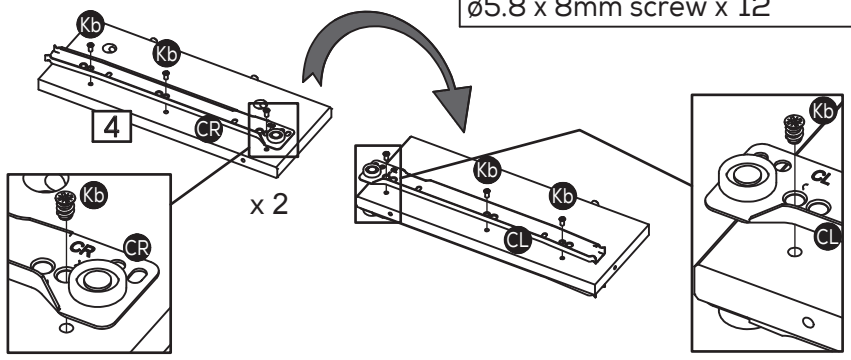


assembly instructions


step 1.7

screw the bolts Cp into the holes indicated on the top 1.

Cp



ø5 x 11, cc34mm bolt x 8

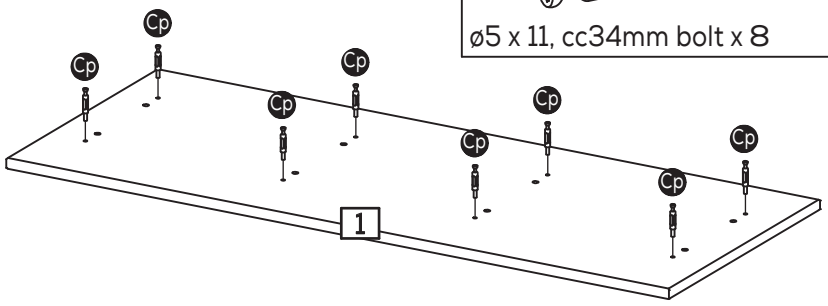

step 1.8


place the dividers 4 onto the top 1.

push cams Ca into the holes indicated on the dividers 4, arrows pointing towards the top 1. turn the cams Ca to the right.

Ca



ø15 x 10.5mm cam x 4

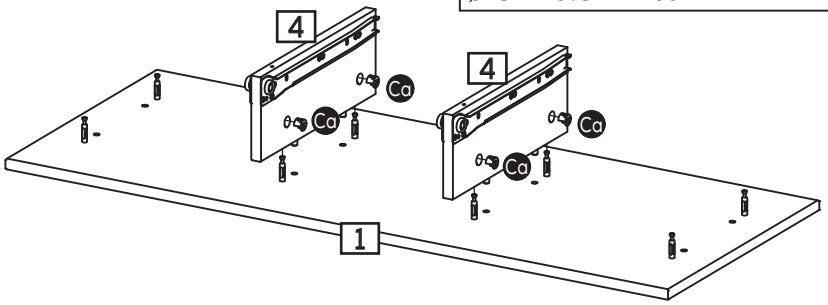


step 1.9

knock the dowels Aa into the holes indicated on the back rail 7 and the front rail 8 using a small hammer.

Aa



ø7.8 x 40mm wooden dowel x 6

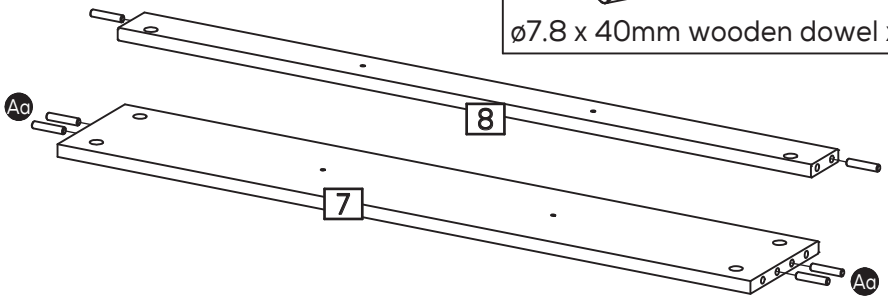

step 1.10

place the sides 2 and 3 onto the back rail 7 and the front rail 8 as shown.


push cams Ca into the holes indicated on the back rail 7 and the front rail 8 . arrows pointing towards the sides.

turn the cams Ca to the right to fix the sides.

Ca



ø15 x 10.5mm cam x 6

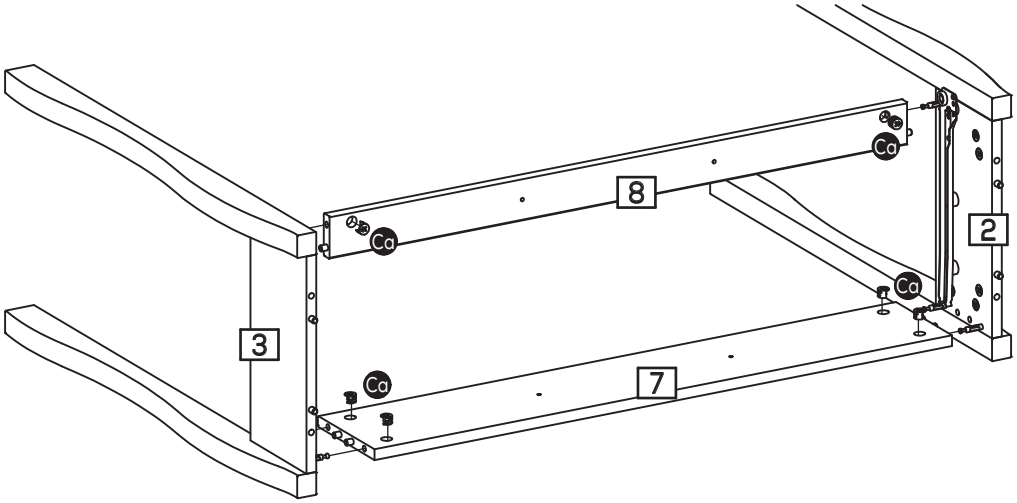

step 1.11

place the sides 2 and 3 onto the top 1.

push cams Ca into the holes indicated on the sides 2 and 3, arrows pointing towards the top 1.

turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm cam x 4


step 1.12

fix the back rail 7 and the front rail 8 to the dividers 4 screws Dj into the holes indicated.

Dj



ø5 x 38mm screw x 4

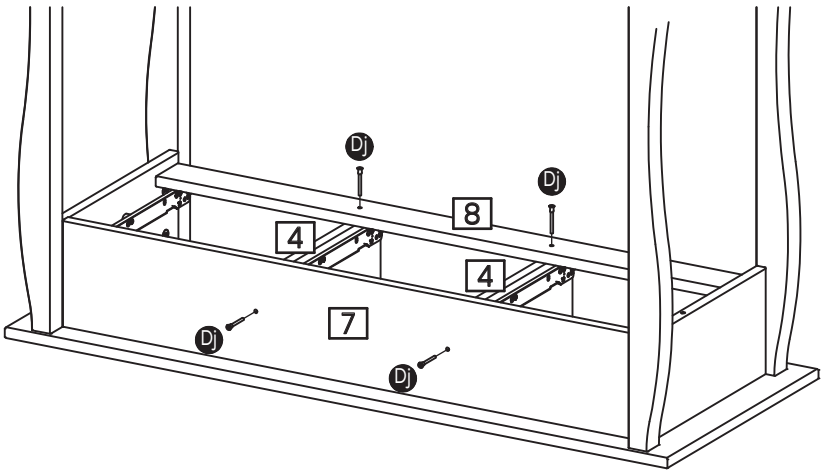


step 1.13

important!


its recommended that the dressing table is fixed to the wall.

use the fittings Fh. follow the instructions included with the fittings.

Fh

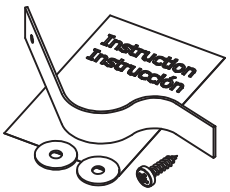



wall strap and instruction x 1

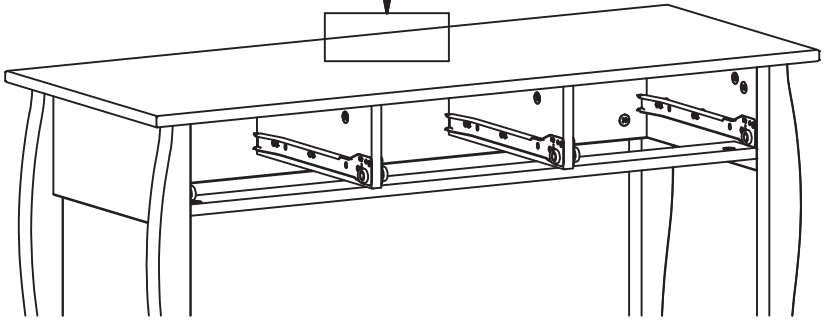

step 2

assembly of the drawers.

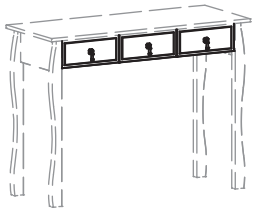

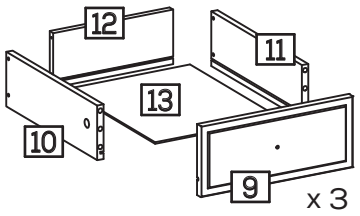


step 2.1

fix the drawer sides 10 and 11 to the drawer back 12 as shown, using screws Ba.

Ba



ø3.5 x 35mm screw x 12

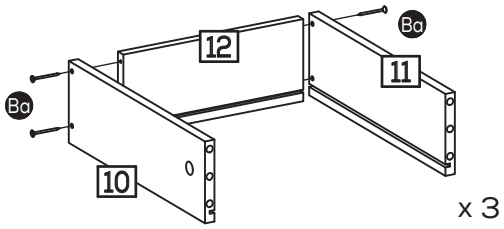


step 2.2

knock the dowels Aa into the holes indicated on the drawer sides 10 and 11 using a smal hammer.

Aa



ø7.8 x 40mm wooden dowel x 12

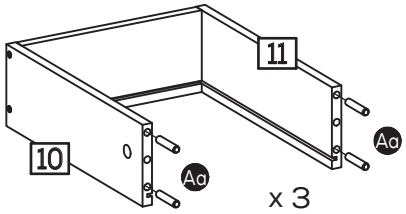


step 2.3

screw the bolts Cb into the holes indicated on the drawer fronts 9.

Cp




ø5 x 11, cc34mm bolt x 6

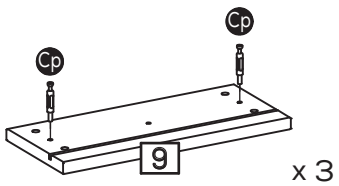

step 2.4

slide the drawer bottoms 13 into the drawer sides 10 and 11.

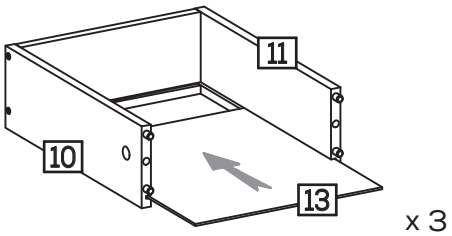


step 2.5

push the drawer fronts [9] onto the drawer sides [10] and [11].

place cams (Ca) into the holes indicated, arrow pointing towards the fronts. turn the cams (Ca) to the right to fix the fronts.

(Ca) ø15 x 10.5mm cam x 6

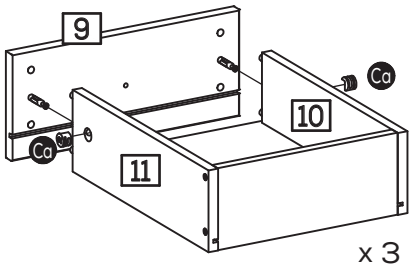


step 2.6


important! make sure the angle between the drawer front [9] and the drawer sides [10] and [11] is 90° before the drawer bottom [13] is fixed using (Fi) as shown.

to adjust the angle between the drawer sides and the fronts push the fitting (Fi) sidewards.

see details.

(Fi) back fitting w. ø3.5 x 15mm screw x 6

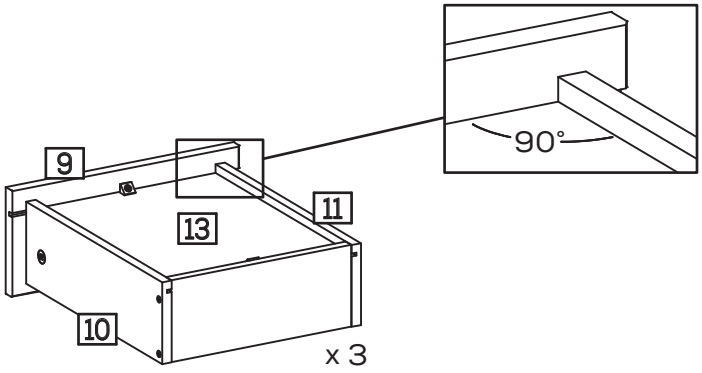

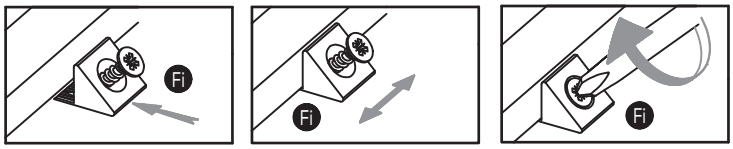

step 2.7


place the drawer runners (DL) and (DR) onto the drawer sides [10] and [11] and push them onto the back of the front [9].

fix the drawer runners (DL) and (DR) to the drawer sides [10] and [11] using screws (Bo) into the holes indicated.

(DL) 300mm drawer runner, left x 3


(DR) 300mm drawer runner, right x 3


(Bo) ø3 x 12mm screw x 12

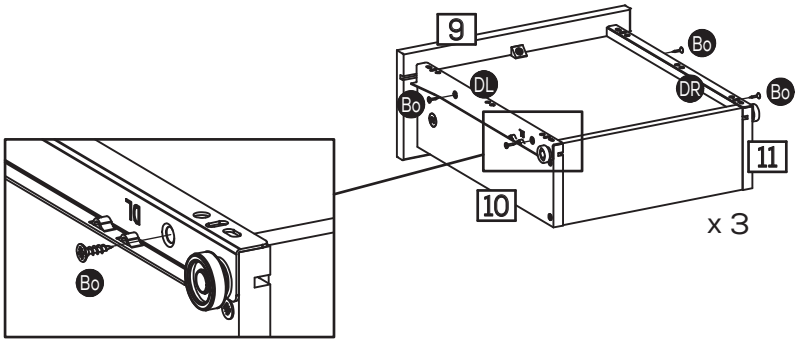

step 2.8

fix the metal handles Gm to the drawer front 9 using screws Hd.


Gm	Hd
 54mm handle x 3	 m4 x 20mm screw x 3

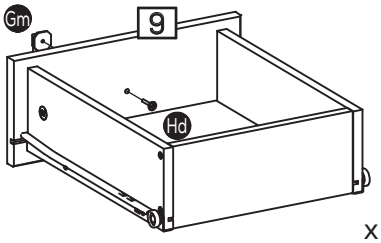

x 3

step 2.9

slide the drawers onto the runners and into the dressing table.

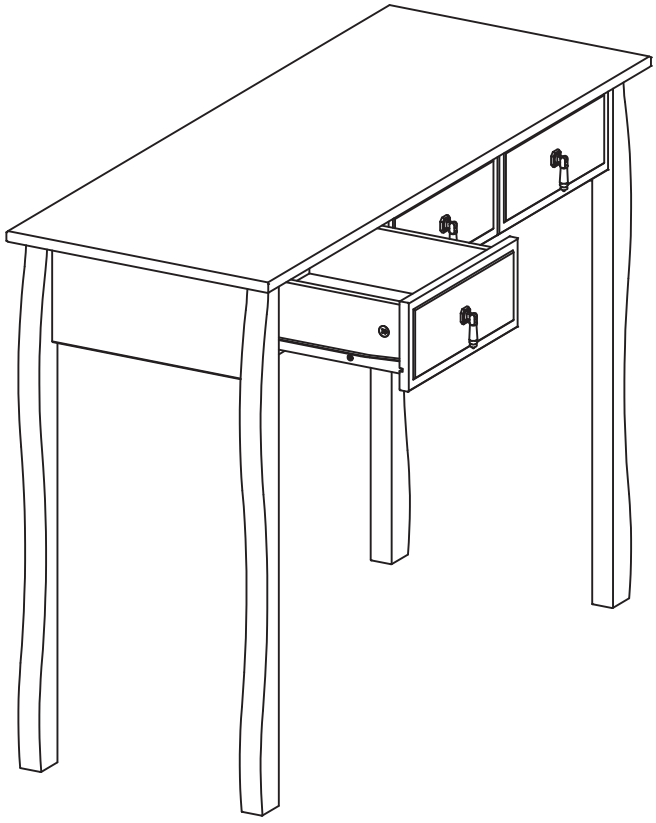


assembly instructions

step 3

assembly of the stool.



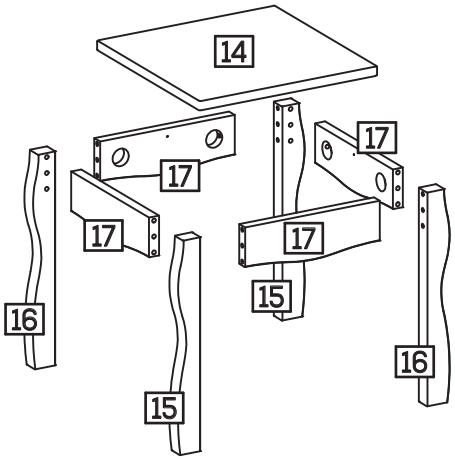

step 3.1


knock the dowels Aa into the holes indicated on the rails 17 using a small hammer.


fix the angles Vn to the rails 17 using screws Bc.

Aa  ø7.8 x 40mm wooden dowel x 16	Bc  ø3.5 x 15mm screw x 8
	Vn  angle 23 x 23 x 24mm x 4

step 3.2

screw the bushings Nh into the holes indicated on the posts 15 and 16 using the allen key Yc.

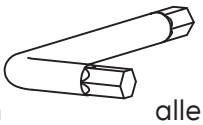
Nh  m6 x 13mm bush x 8	Yc  6mm allen key x 1

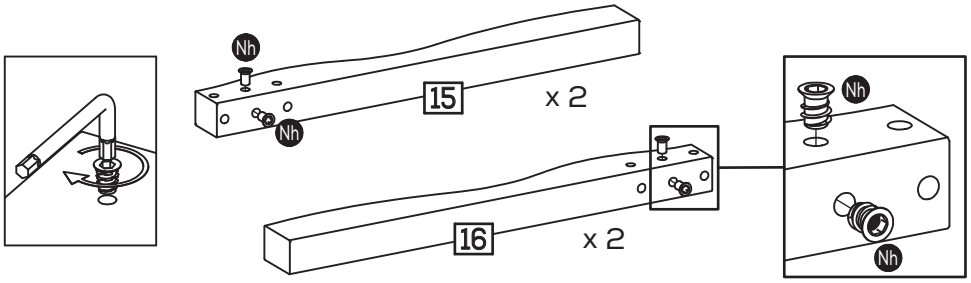

step 3.3

screw the threaded rods Hf into the holes indicated on the posts 15 and 16.

Hf  m6 x 60mm threaded rod x 8

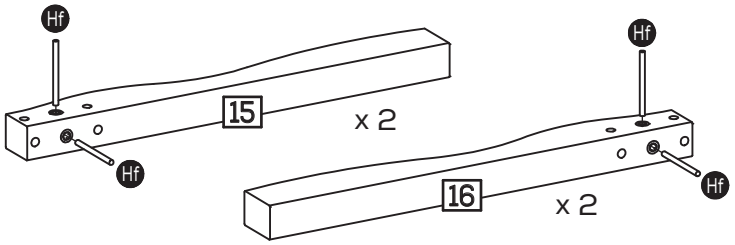



step 3.4

place the posts 15 and 16 onto the rail 17.

push the brackets Fe, the washers Nc and the nuts Na into the holes indicated on the rails 17 and onto the threaded rods Hf.

ftighten the nuts Na using the wrench Yb.

Fe  ø35mm bracket x 4	Na  m6 x 10mm nut x 4
Nc  ø6 / ø11mm washer x 4	Yb  10/13mm wrench x 1


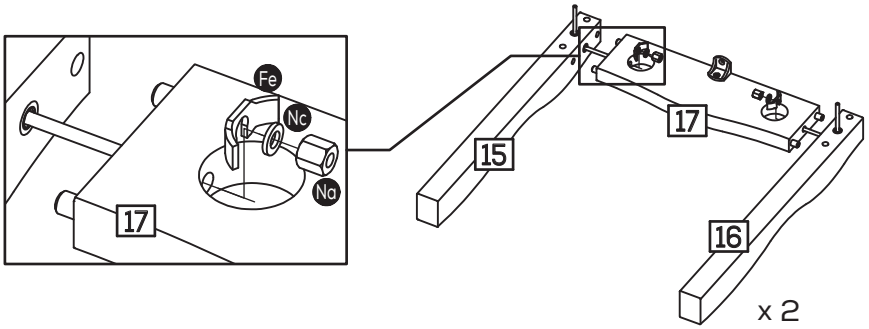



step 3.5

place the sides onto the remaining rails 17.

push the brackets Fe, the washers Nc and the nuts Na into the holes indicated on the rails 17 and onto the threaded rods Hf.

ftighten the nuts Na using the wrench Yb.


Fe  ø35mm bracket x 4	Na  m6 x 10mm nut x 4
Nc  ø6 / ø11mm washer x 4	Yb  10/13mm wrench x 1

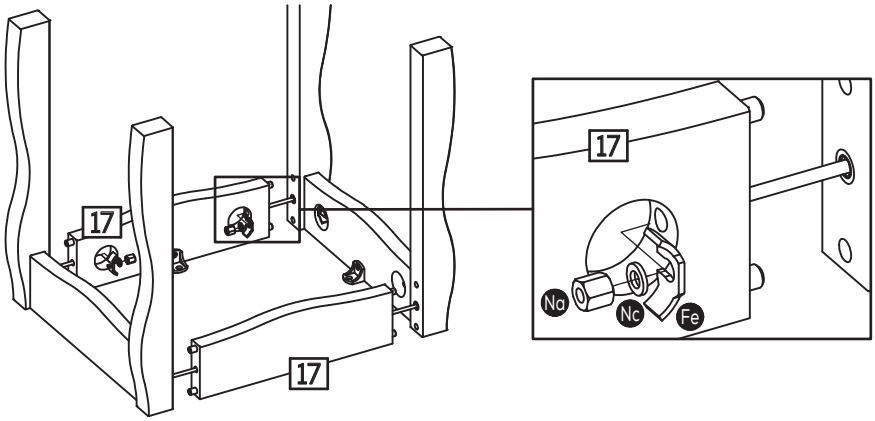

step 3.6


fix the rails 17 to the seat 14 using screws Bc through the angles Vn and into the holes indicated on the seat 14.

Bc  ø3.5 x 15mm screw x 4

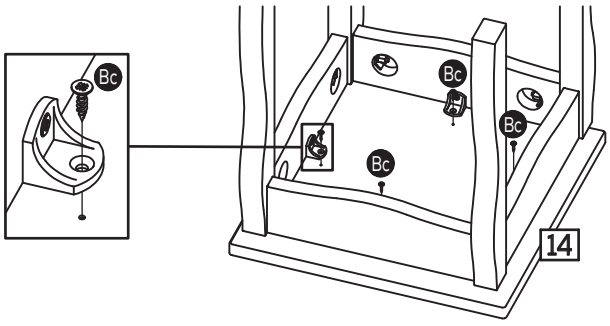

A Guide to

Wall Mounting & Fixings

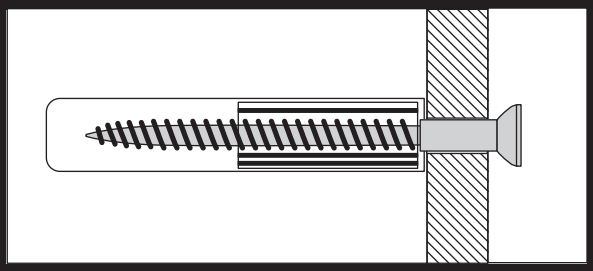

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

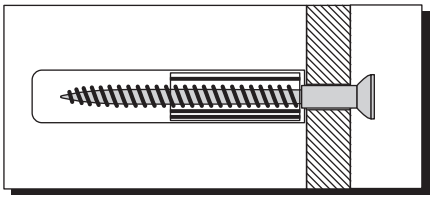


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

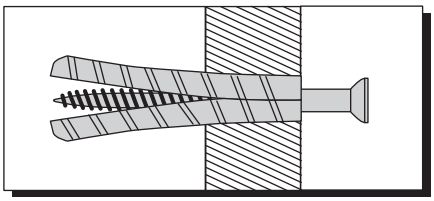


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

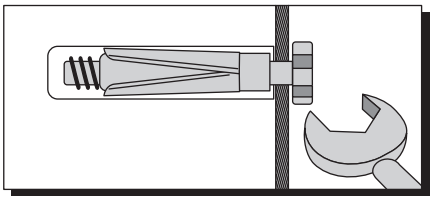


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

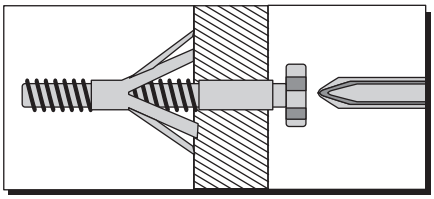


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

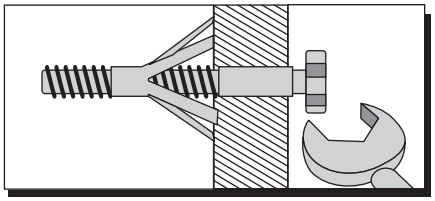

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

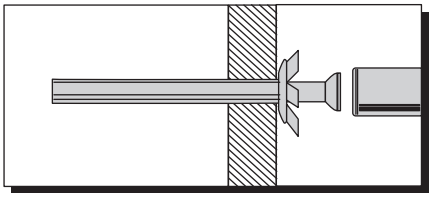

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.