
Sparkle - 3 Drawer Wide Chest

Assembly Instructions - Please keep for future reference

412/4683

412/0759

429/2728

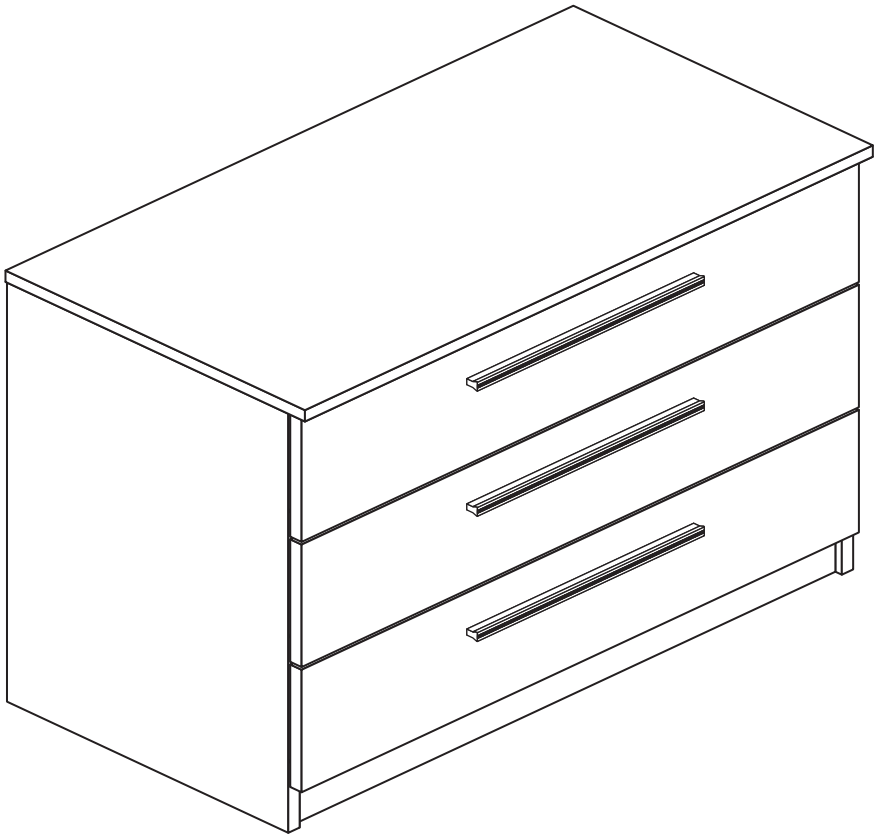

Dimensions
Width - 75.1cm
Depth - 39.6cm
Height - 57.1cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 1 - 04/06/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 20kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

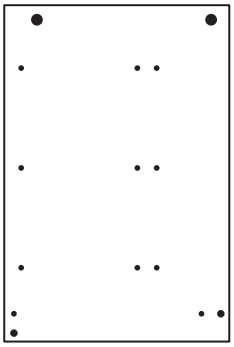

1 Left Side *(DF3853)*
(55.6 x 37.2cm)

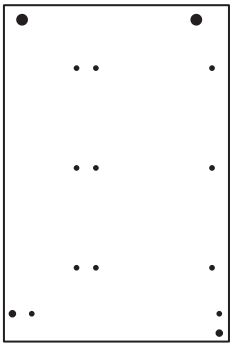


2 Right Side *(DF3854)*
(55.6 x 37.2cm)

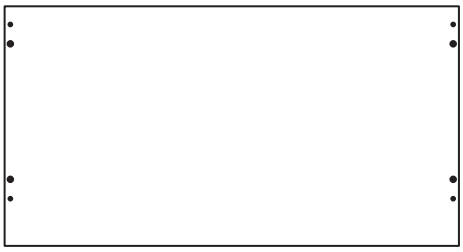

3 Top *(DF3812)*
(75.1 x 39.6cm)



4 Rail *(DF3813)*
(71.7 x 6cm) x 2



5 Drawer Front *(DF3814)*
(73.7 x 16.2cm) x 3



6 Left Drawer Side *(W370-124LH)*
(37 x 12.4cm) x 3




7 Right Drawer Side *(W370-124RH)*
(37 x 12.4cm) x 3



8 Drawer Back *(W684-124)*
(68.4 x 12.4cm) x 3



9 Drawer Base *(T695-367)*
(69.5 x 36.7cm) x 3

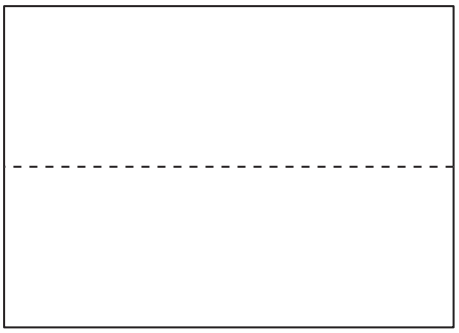


10 Back *(X743-531)*
(74.3 x 53.1cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Metal dowel *(F901)* x 14

B 

Large locking nut *(F900)* x 8

C 

Small locking nut *(F3)* x 6

D 

Wooden dowel *(F22)* x 8

E

Nail *(F51)* x 16

F 

Knock-in Peg *(F171GY)* x 12

G 


25mm Screw *(F50)* x 9

H 

9mm Screw *(F74)* x 6

I 


9mm Screw (*F73)* x 12

J 

Plastic Nail *(F91)* x 4

K 

Wedgefix *(F639)* x 12

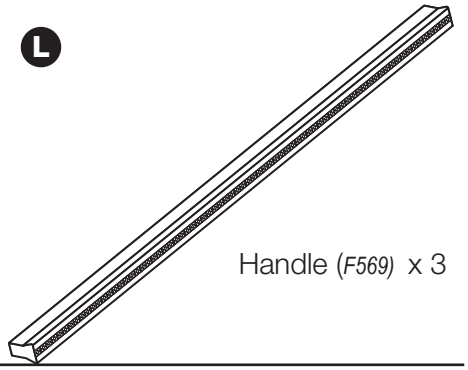
L 

Handle (*F569)* x 3

M 

Drawer runner *(F1004)* x 6

Tools required

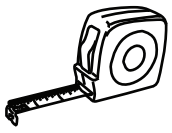


Rule




Cross-head screwdriver



Scissors




Hammer

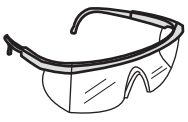

Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

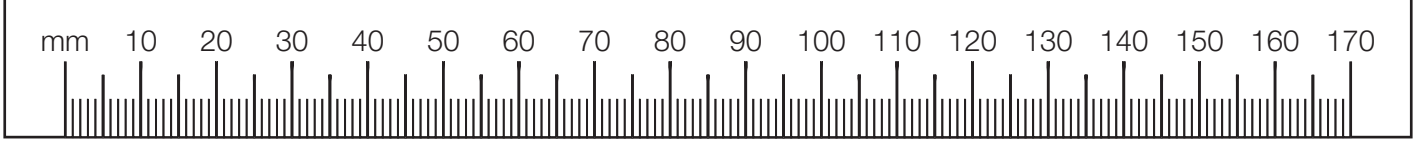

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Step 1

Prepare the 3 drawer fronts

Screw 2 metal dowels A into each of the drawer fronts 5.

Note: Tighten the metal dowels up fully against the panels.

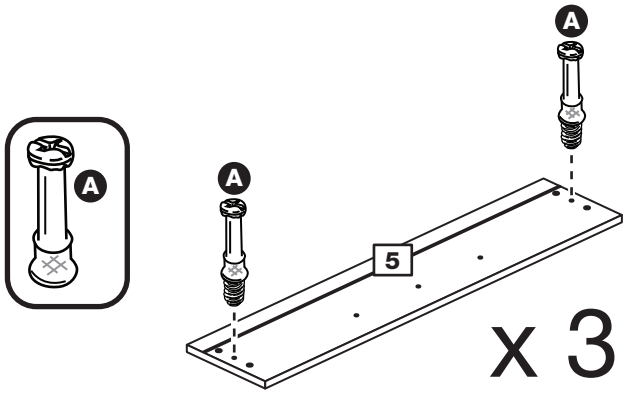


Step 2

Prepare the drawer sides

Insert a small locking nut C into the hole shown on the left drawer side 6 and the right drawer side 7.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

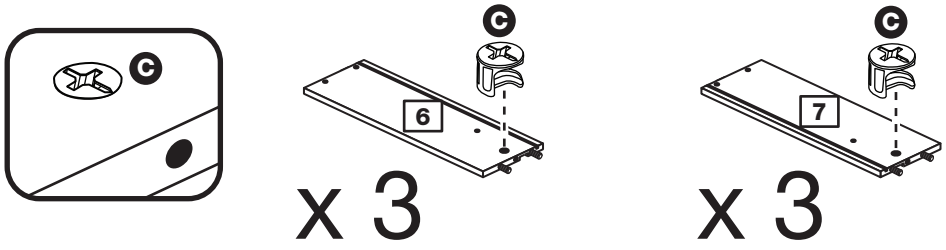


Step 3

Attach the drawer sides to the drawer fronts

Push the left drawer sides 6 and right drawer sides 7 onto the back of the drawer fronts 5.

Turn the small locking nuts C on the left drawer side 6 and right drawer side 7.

Note: Turn the locking nuts C clockwise to secure panels - more than 1/2 a turn.

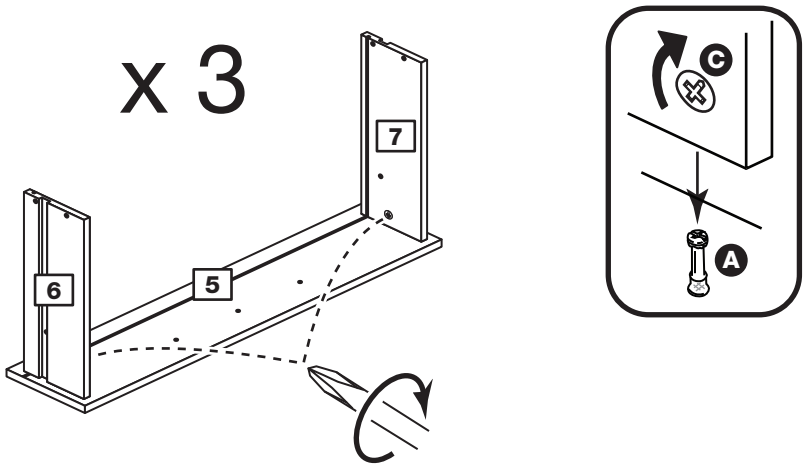


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 9 down the grooves in the drawer sides 6 and 7 and down into the groove in the drawer front 5.

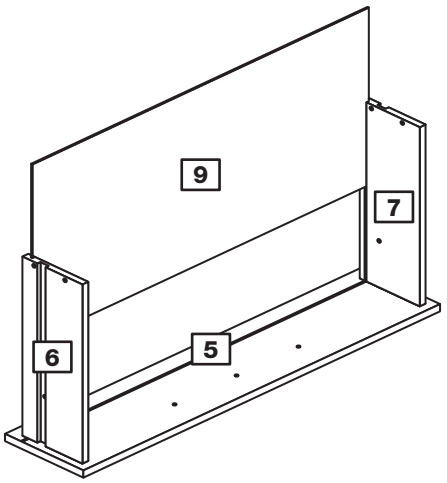


x 3

Step 5

Fit the drawer back

Fit the drawer back 8 between the drawer sides 6 and 7. Make sure that the drawer base 9 fits into the groove in the drawer back 8.

Hold the drawer back 8 in position and tap the knock-in pegs F through the holes in the drawer sides 6 and 7.

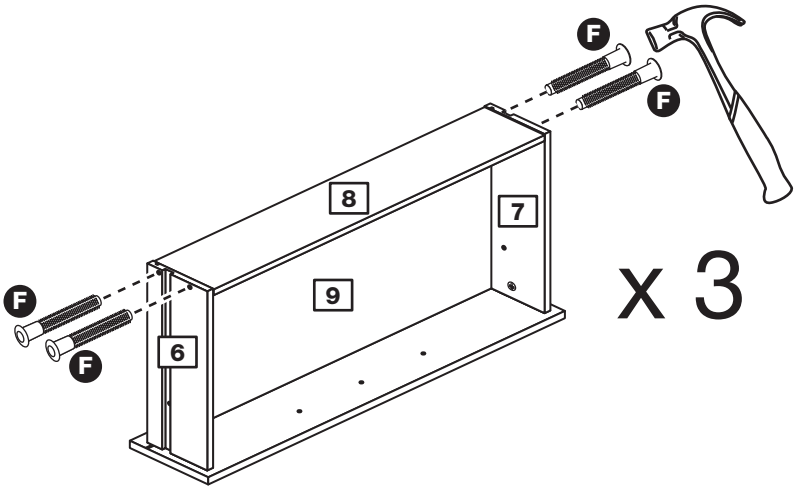


x 3

Step 6

Attach the handles

Attach a handle L to each of the drawer fronts 5 using screws G.

Note: Do not overtighten the screws.

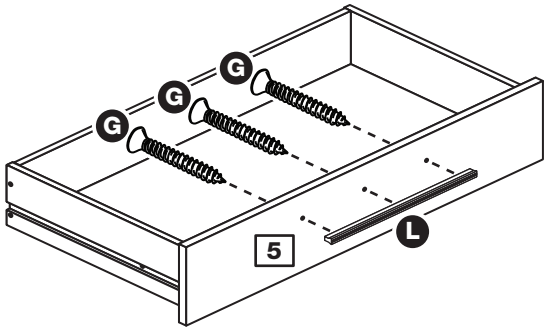


x 3


Step 7

Fit the wedgefixes

Turn the 3 drawer assemblies over and slide 2 wedgefixes K into the front and back grooves, as shown, and tighten up the screws.

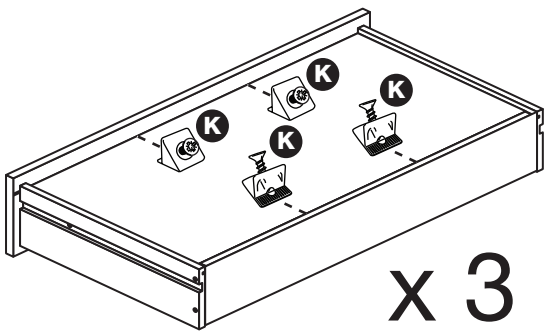

x 3

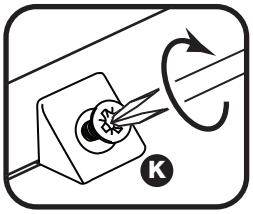

Step 8

Prepare the left side

a: Place 3 runners (M) on the left side [1] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).

b: Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the left side [1].


c: Screw 2 metal dowels (A) into the left side [1].


Insert 2 large locking nuts (B) into the left side [1].


Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.


Tap 2 wooden dowels (D) into the left side [1].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

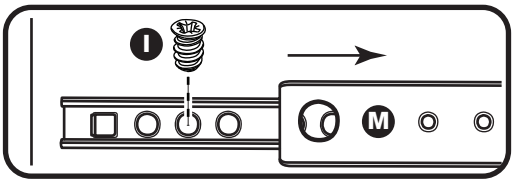

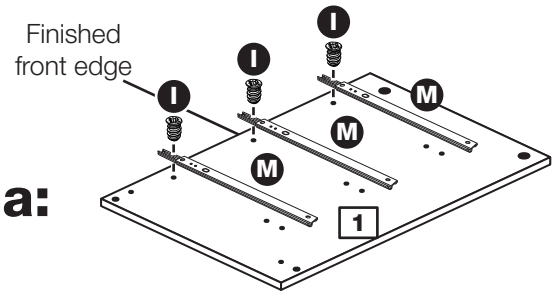

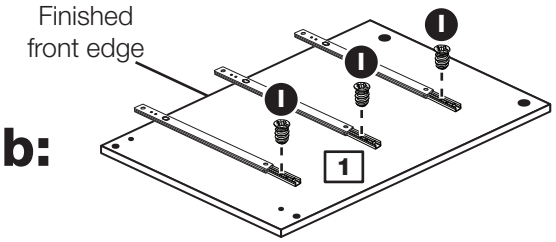

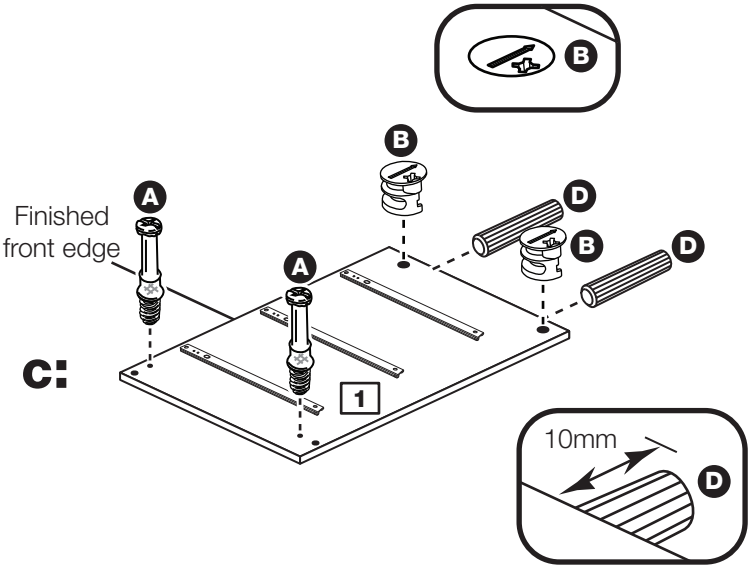

Step 9

Prepare the right side


a: Place 3 runners (M) on the right side [2] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).

b: Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the right side [2].


c: Screw 2 metal dowels (A) into the right side [2].

Insert 2 large locking nuts (B) into the right side [2].


Tap 2 wooden dowels (D) into the right side [2].

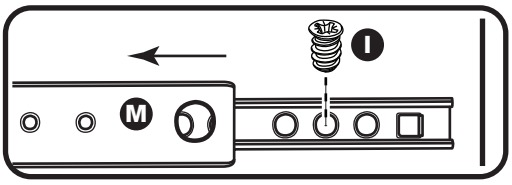


a:

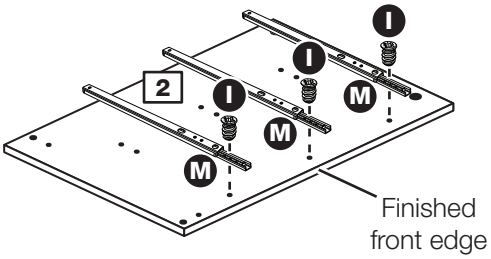

b:

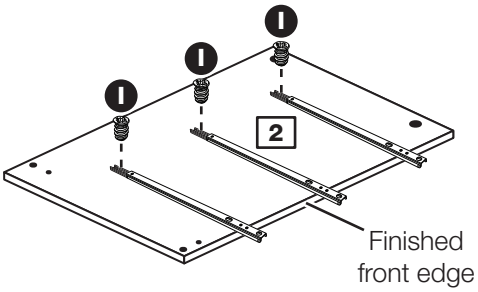

c:

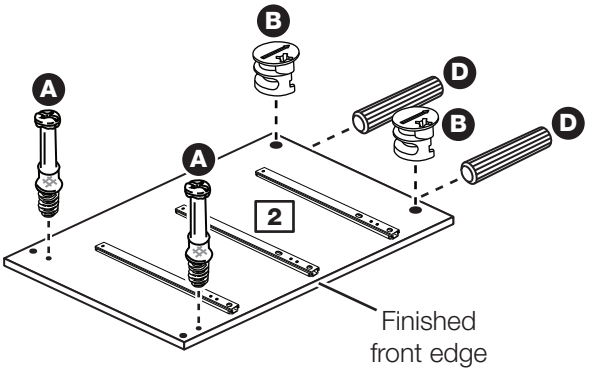


Assembly Instructions

Step 10

Prepare the 2 rails

Insert 2 large locking nuts B into each of 2 the rails 4.

Tap 2 wooden dowels D into each of 2 the rails 4.

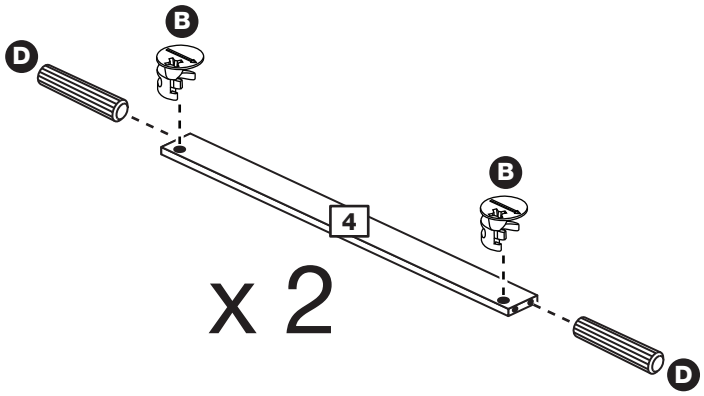


Step 11

Fit the 2 rails to the right side

Push the 2 rails 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut B fitted to each of the rails 4.

Note: Turn the large locking nuts B as far as they will go - more than 1/2 a turn.

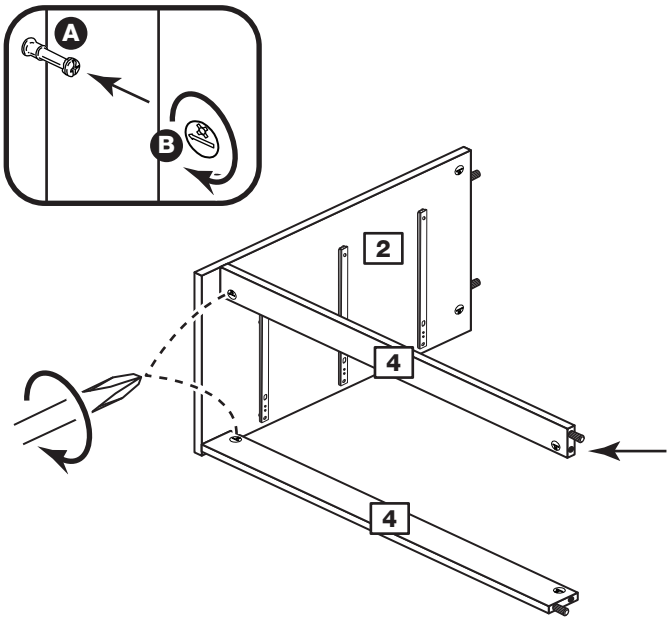


Note: Support this rail until the left side has been fitted in the next step.

Step 12

Fit the left side

Push the left side 1 onto the rails 4.


Use a screwdriver to tighten the large locking nut B fitted to each of the rails 4.

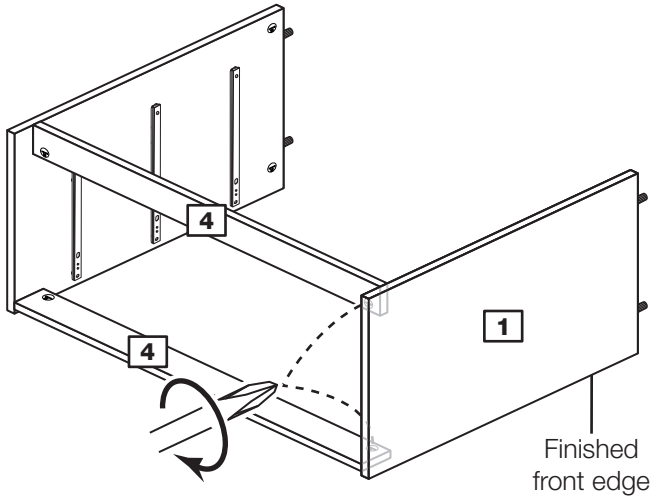

Step 13

Prepare the top

Screw 4 metal dowels A into the top 3.

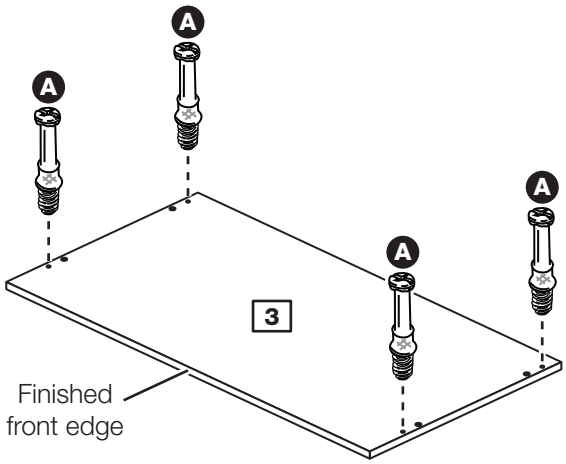


Step 14

Fit the top

Push the top 3 onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts B fitted to each of the sides 1 and 2.

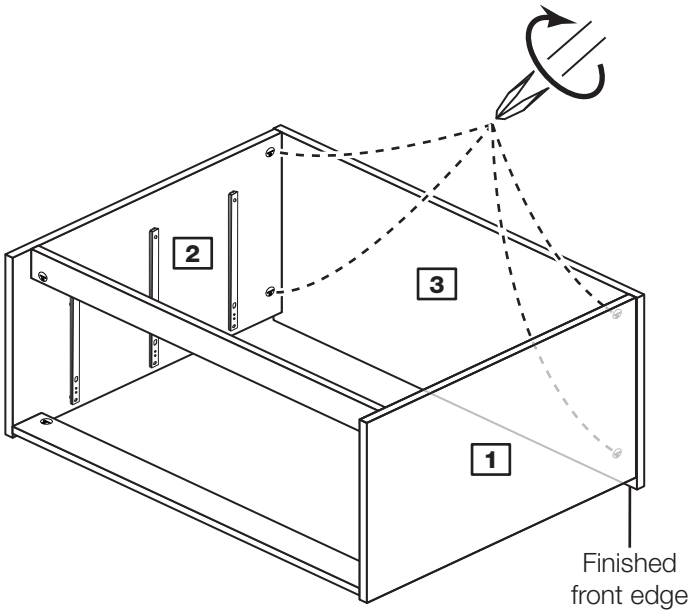

Step 15

Fit the 4 plastic nails

Tap 2 plastic nails J into the bottom edge of each of the sides 1 and 2.

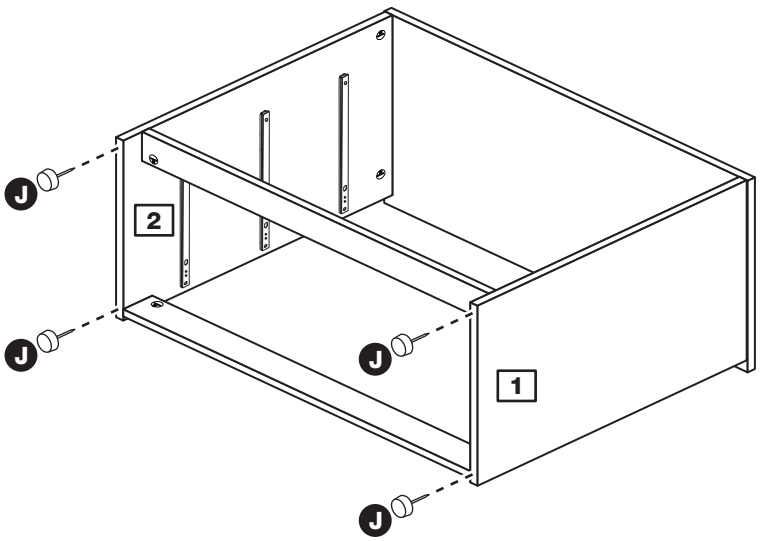

Step 16

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.


Nail E around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

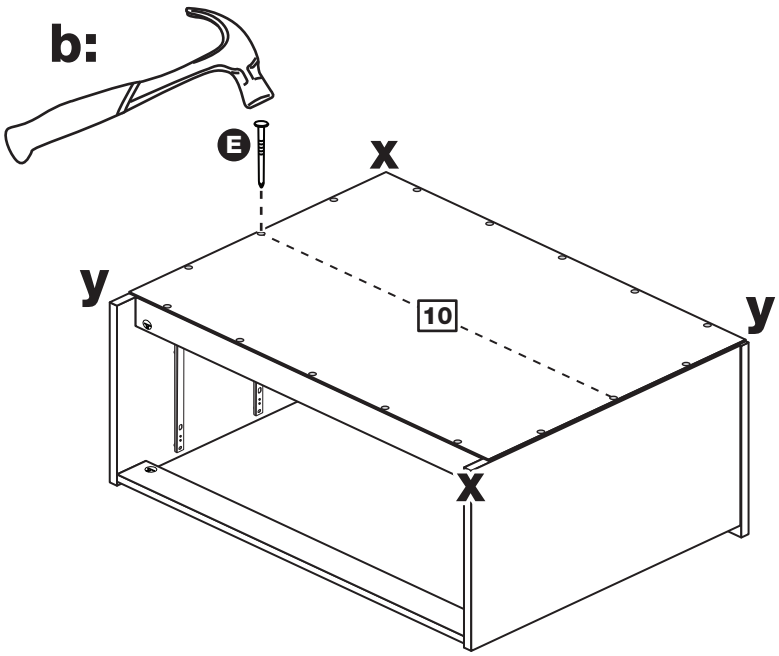

Step 17

Fit the drawers

Starting with the bottom drawer, slide both the runners (M) forward and locate the drawer sides [6] and [7] between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners (M).

Working from the inside of the drawer, insert 2 screws (H) through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws (H).
If they catch on the runner you may need to loosen them slightly.

