Bergen 180 Gloss/Mirror doors


Assembly Instructions Please keep for future reference

412/7305

417/9463

Gloss/Mirror doors



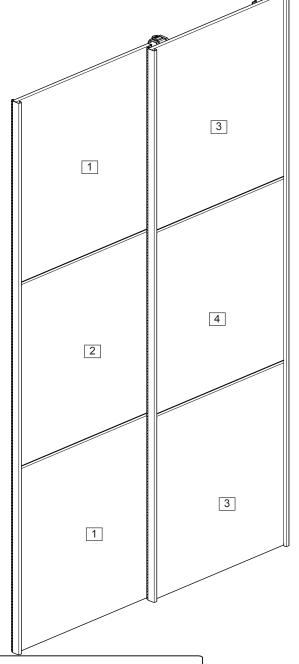

Dimensions

Width - 180cm Depth - 6.7cm

Height - 195.2cm

Tip: To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

412/7305 WHITE GLOSS- MIRROR 417/9463 CASH GLOSS- MIRROR

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



•To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

 Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels For damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@clickSpares.co.uk

Please check you have all the panels listed below

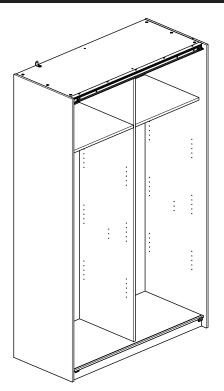


Cabinet supplied separately

249/4834

248/6921

226/8730

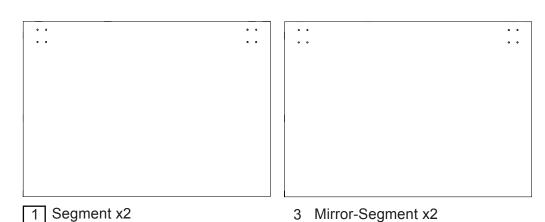

(91.5 x 65cm)

P3355

PS3335

(91.5 x 65cm)



Segment middle x1 (91.5 x 65.1cm) P3356


4 Mirror-Segment middle x1 (91.5 x 65.1cm) PS3274


Components - Fittings


For damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

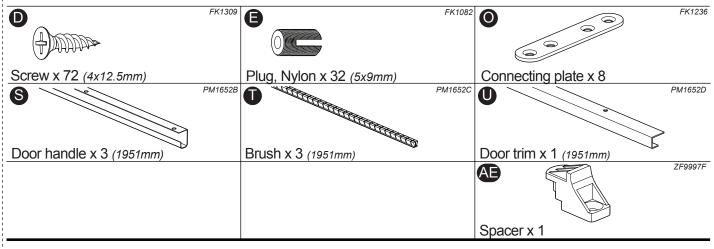



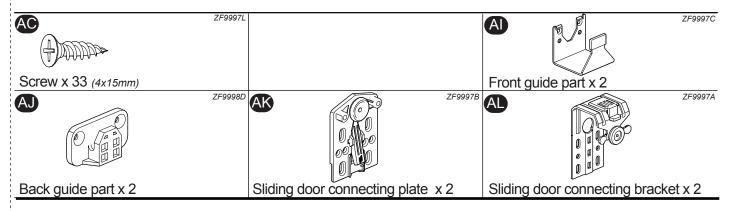

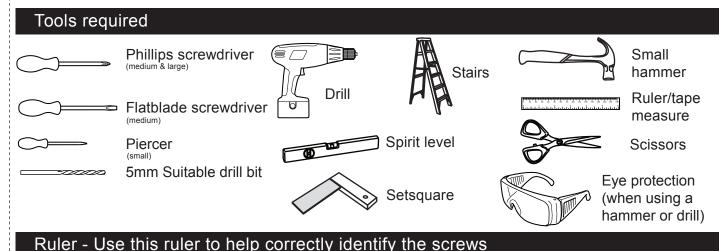


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Step 2

3 Segment slide door left

a: Put 8x nylon plug into the segment 1. Use a small hammer. Repeat this step.

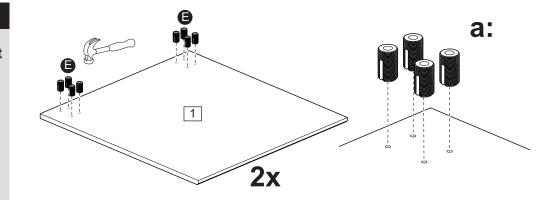


b: Mount door trim **①** with 3x screws **①** on segment

Note: there should be no gap between doorsegment and door trim **①**.


No Gap between metal profiles and door panel!

C: Mount segment middle 2 with 3x screws **D** on door trim **U**. Mount segment 1 with 4x screws **D** on door trim **U**.

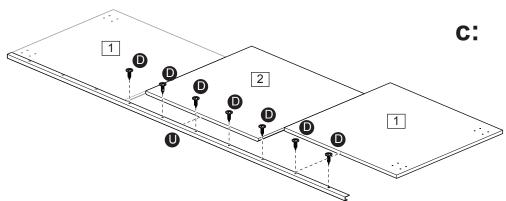

d: Mount door handle S on segment 1 with 4x screws D and on middle segment 2 with 3x screws D.

Note: there should be no gap between doorsegment 1 and door handle 5.

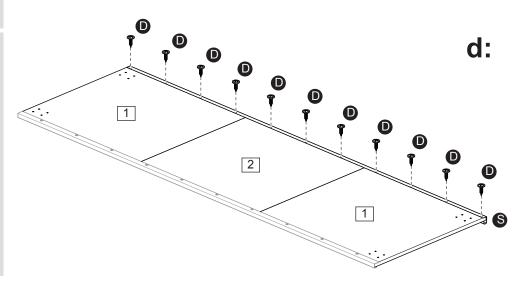

Step 2

3 Segment slide door left

e: Mount 4x connecting plate •, each with 2x screws • on segment 1 and 2x screws • on middle segment 2.


Remove protective film from door handle S. Stick 1x brush Tonto door handle S by partially removing the cover from adhease as brush is applied.

f: Upside.

Mount 2x Sliding door connecting plate AK squarely by using the guidemarks in the plate AK, each with 6x screws AC on segment 1. Attach 1x spacer AE with 1x screw AC on the brush side sliding door connecting plate AK.

g: Underside.


Mount 2x back guide
part AJ, each with 2x
screws AC on segment 1.

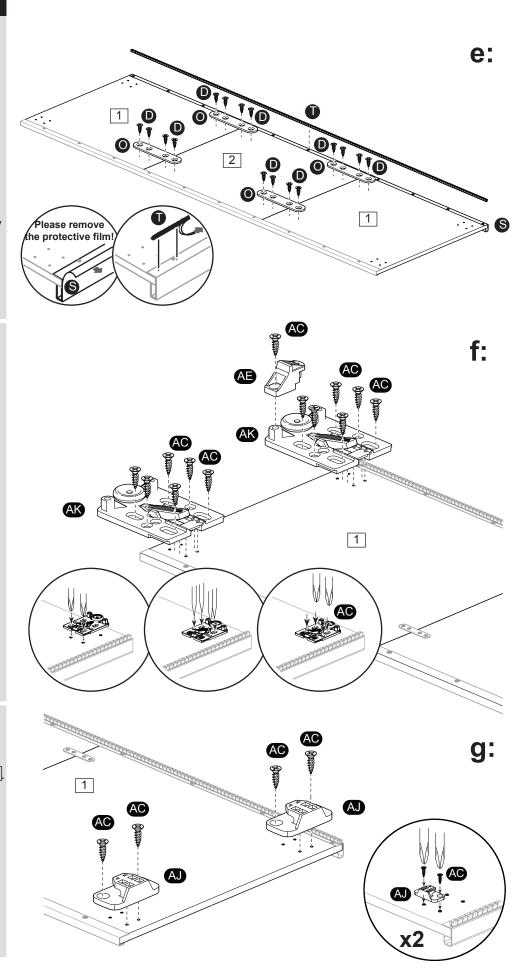

Step 3

Place left slide door 2 People are required for step 3a and 3b.


a: Hook the 2x back guide part AJ into the plastic guide rail **R**.

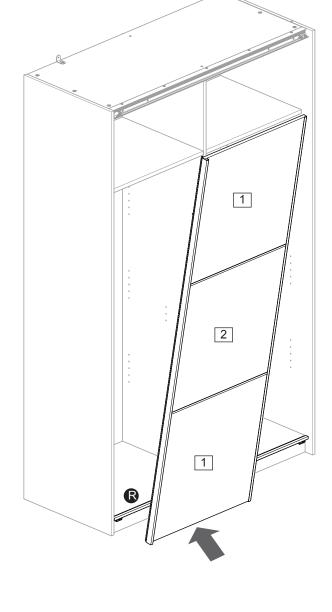

a:

a: Detail.

The hook of the back guide part AJ should be in the front guide of the plastic guide rail R

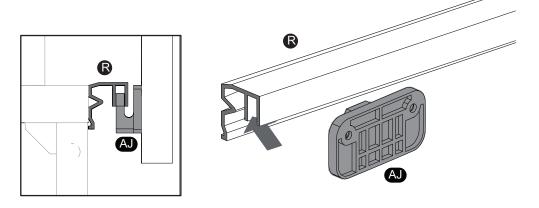

Step 3


Place left slide door

b: Hook Sliding door connecting plate AK on metal guide rail **Q**.



The wheel of the sliding door connecting plate AK should be in the front guide of the metal guide rail **Q**.


To lock the door, lock the Sliding door connecting plate (AK) on the guide rail (Q) with the locking pawl.

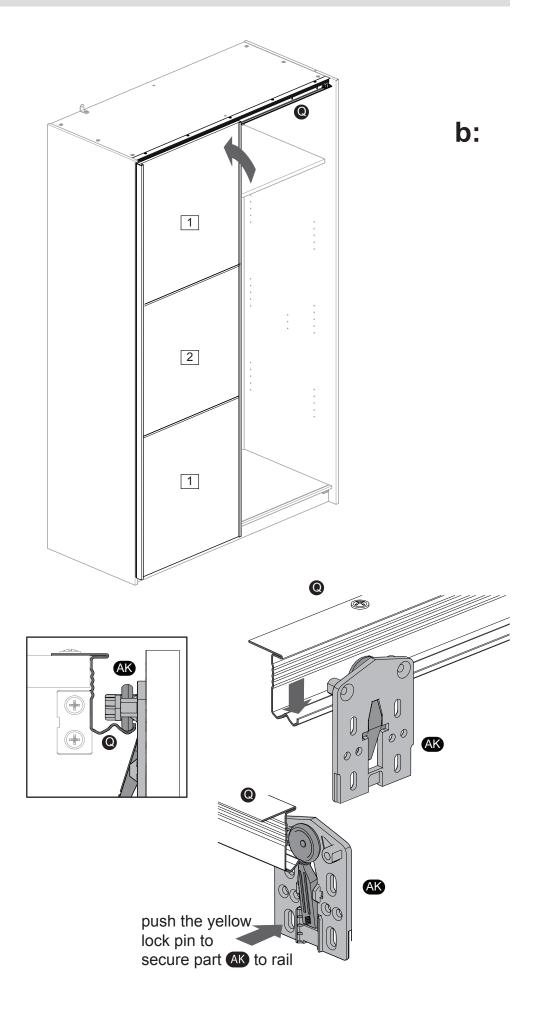

Step 4


3 Segment slide door right

a: Put 8x nylon plug into the segment 3. Use a small hammer. Repeat this step.

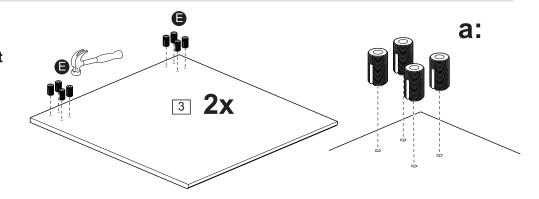


b: Mount door handle **s** with 4x screws **D** on segment **3**.

Note: there should be no gap between doorsegment 3 and door handle 5.

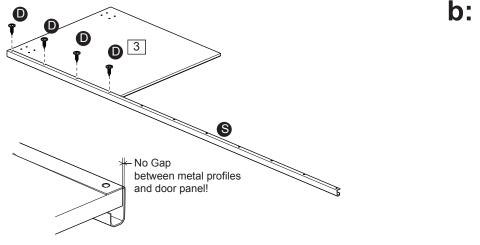


c: Mount segment middle
with 3x screws on on
door handle s.
Mount segment with
4x screws on door
handle s.

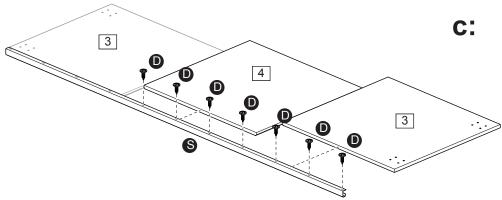

d: Mount door handle son segment with 4x screws and on middle segment with 3x screws .

Note: there should be no gap between doorsegment and door handle .

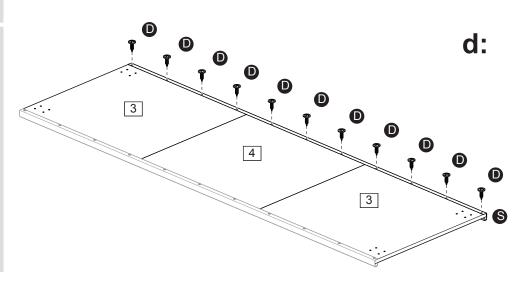

Step 4

3 Segment slide door right


e: Mount 4x connecting plate ①, each with 2x screws ① on segment ③ and 2x screws ② on middle segment ④.

Remove protective film from door handle **S**. Stick 2x brush **1** onto 2x door handle **S** by partially remove the cover from adhease as brush is applied.

f: Upside.

Mount 2x sliding door connecting bracket AL squarely by using the guidemarks in the plate AL, each with 6x screws AC on segment 3.


g: Underside.
Mount 2x front guide
part Al , each with 2x
screws AC on
segment 3

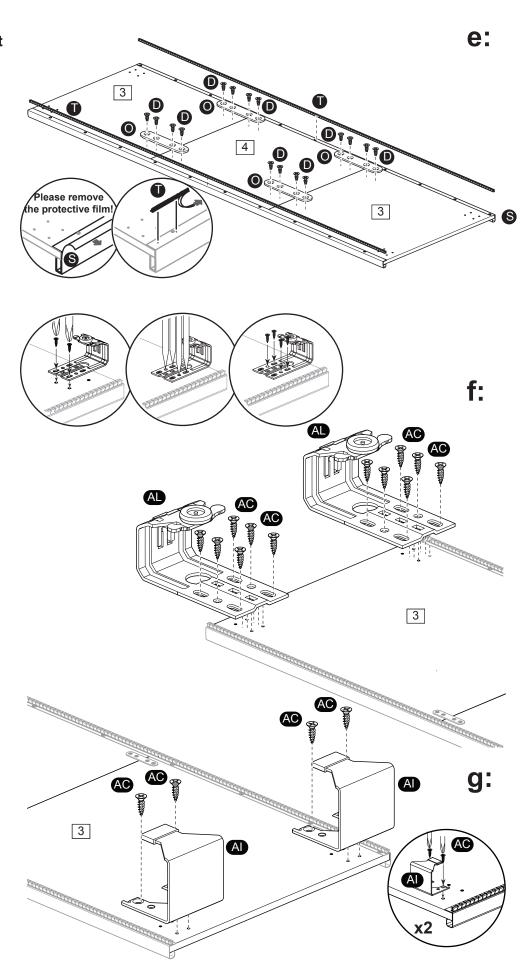

Step 5


Place right slide door

a: Hook the 2x front guide part Al into the plastic guide rail **R**.

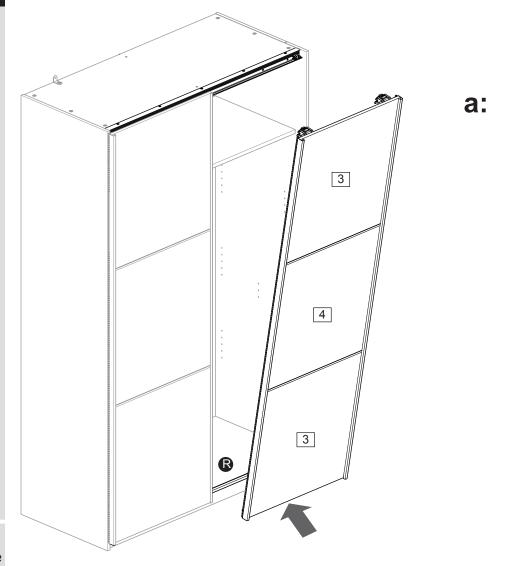

a: Detail.

The hook of the front guide part (Al) should be in the rear guide of the plastic guide rail (R)

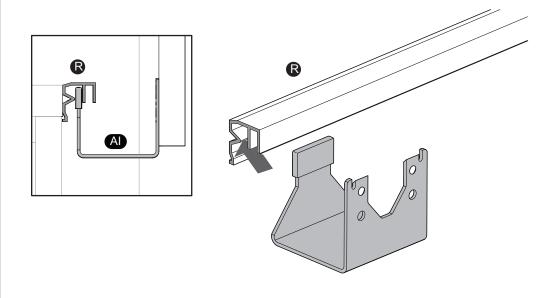

Step 5

Place right slide door

b: Hook the sliding door connecting bracket AL on metal guide rail **Q**.

b: Detail.

The wheel of the sliding door connecting bracket AL should be in the rear guide of the metal guide rail Q.

To lock the door, lock the sliding door connecting bracket (AL) on the guide rail (Q) with the locking pawl.

