
DR82516

Tolga - 2drw Bedside

Assembly Instructions - Please keep for future reference

391/3651
414/5758
417/5137

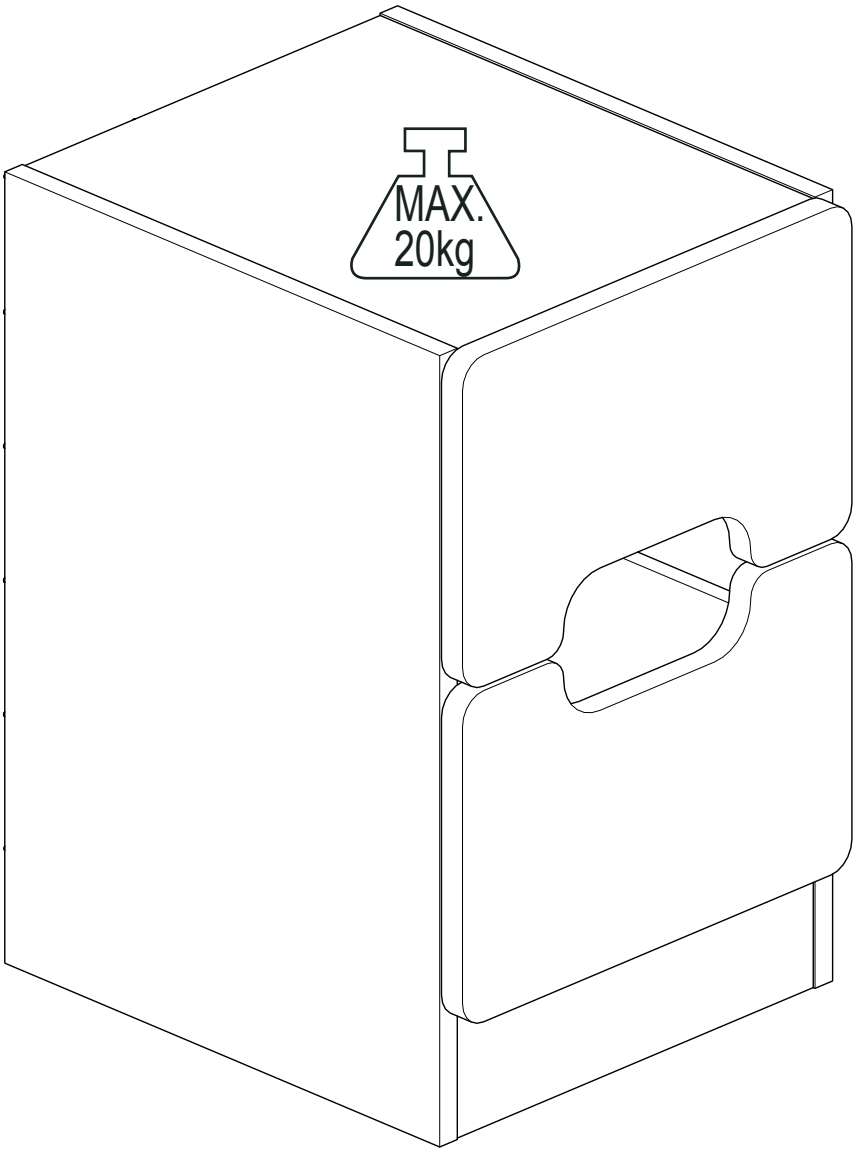

Dimensions

Width - 33,6cm
Depth - 39cm
Height - 52,8cm

391/3651	OAK
414/5758	BLUE
414/5137	PINK

Tip : To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 03456 400 800

Issue 1 - 18/05/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
• Assembly should be carried out by a competent adult only.
• do not use this item if any components are missing or damaged.
• this item is suitable for childeren from the age of 6.

Glue safety - Take care when using glue, please follow the advice below•

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fi ttings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

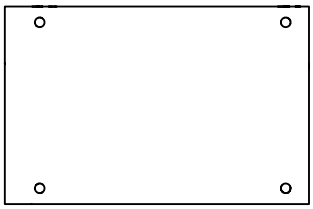


1 Top x 1
(371 x 306 x 18mm)
P1978




2 Drawer Base x 2
(343 x 267 x 2.5mm)
BO2542




3 Back x 1
(331 x 452 x 2.5mm)
BO2541

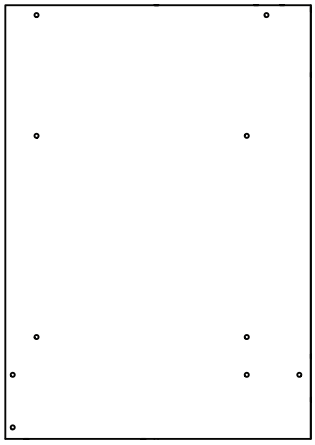


5 Left Side x 1
(372 x 528 x 15mm)
P2091

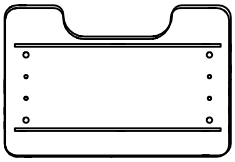

4 Drawer Front x 2
(333 x 221 x 18mm)
P4140



6 Plinth x 2
(306 x 92 x 15mm)
P7059

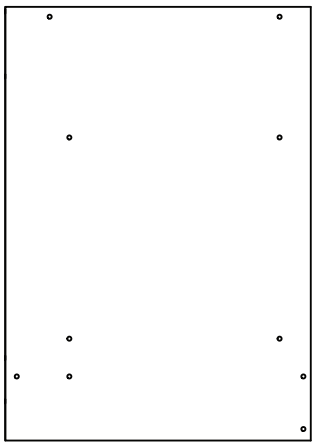

7 Right Side x 1
(372 x 528 x 15mm)
P2092



8 Left Drawer Side x 2
(350 x 140 x 12.50mm)
LA1614



9 Drawer Back x 2
(257 x 140 x 12.50mm)
LA1616














10 Right Drawer Side x 2
(350 x 140 x 12.50mm)
LA1615


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly**.** In some cases more fittings may be supplied than are required.

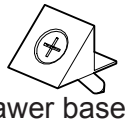
FK1011 **A**  Locking screw x 12 *(5x24mm)*	FK1010 **B**  Locking nut x 4 *(12x10mm)*	FK1012 **C**  Large locking nut x 8 *(15x12mm)*
FK1311 **D**  Screw x 28 *(3x15mm)*	FK1301 **E**  10mm Fixing screw drawer x 8	FK1515 **F**  Nail x 30
FK1410 **G**  Wood dowel x 4 *(5x30mm)*	FK1234 **H**  Peg, brown x 1	FK1250 **I**  Drawer base support x 4
FK1415 **J**  Nail holder x 1	FA1510 **K**  Glue x 1	PM1515 LA **L**  Runner left part A x 2
PM1515 LB **M**  Runner left part B x 2	PM1515 RA **N**  Runner right part A x 2	PM1515 RB **O**  Runner right part B x 2

Tools required



Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

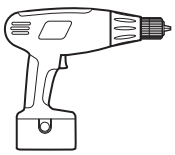

Drill


Spirit level



Setsquare



Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step - 1

Insert large locking nuts Ⓒ into plinth [6].


Make sure the 'arrow' on locking nuts Ⓒ points towards the hole in the edge of [6].

Put drop of glue Ⓚ into the 2 holes of plinth [6].

Put dowels Ⓖ into the holes of plinth [6].

Do this step twice

2x

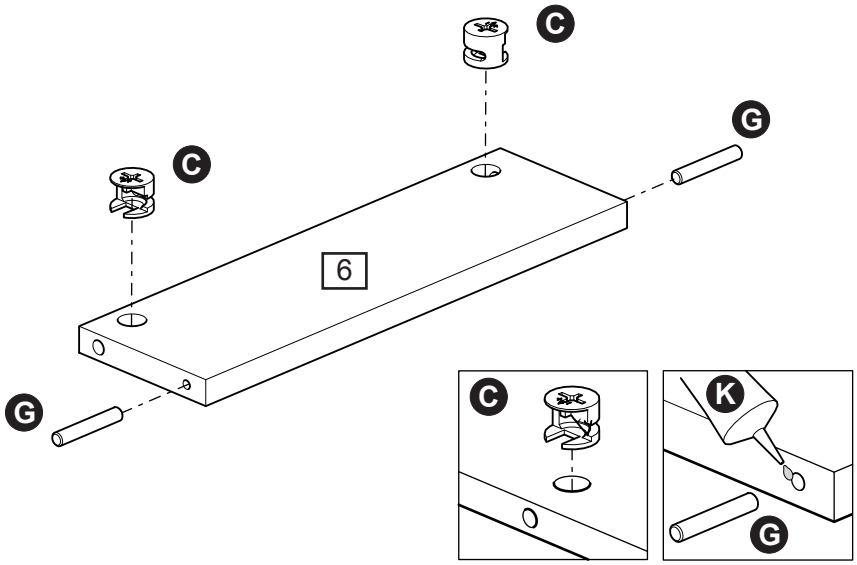

Step - 2

Attaching runners
a: Fix runner right part A Ⓝ on right right side [7] as shown usesing 10mm fixing screw drawer Ⓔ into right side [7]


Note: look carreful for the right postion.


Screw 24mm locking screw Ⓐ into right side [7].

Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**


b: Insert screw Ⓓ as shown into right side [7] to fix runner right part A Ⓝ.

a:

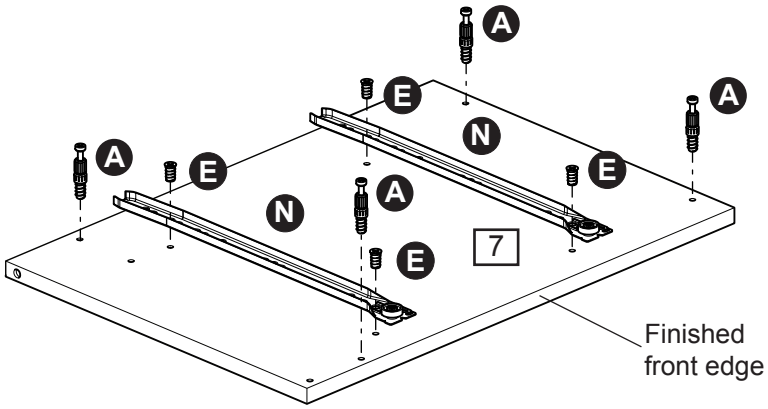

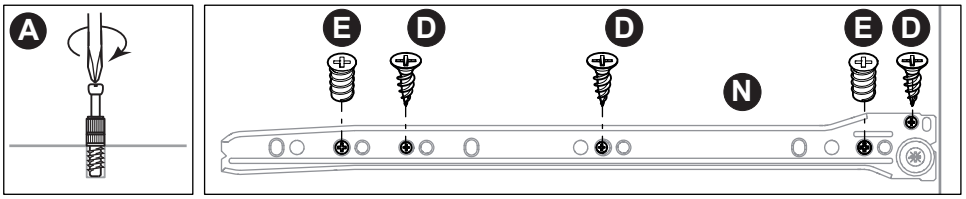

b:

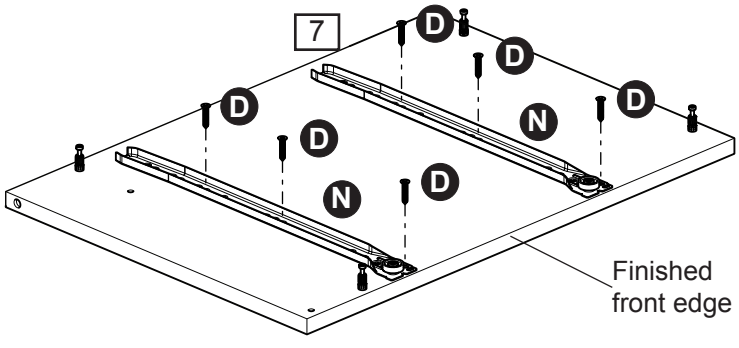

Assembly Instructions

Step - 3

Attaching runners

a: Fix runner left part A Ⓛ on left side [5] as shown usesing 10mm fixing screw drawer Ⓔ into left side [5].


Note: look carreful for the right postion.


Screw 24mm locking screw Ⓐ into left side [5].

Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**


b: Insert screw Ⓓ as shown into left side [5] to fix runner left part A Ⓛ.

a:

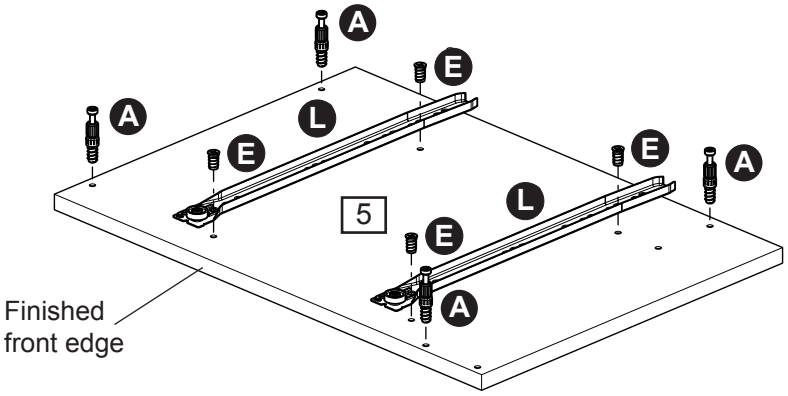

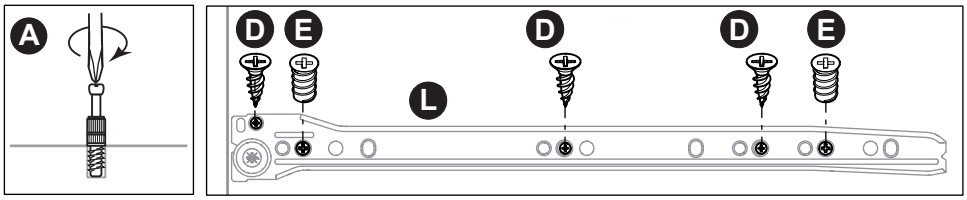


b:

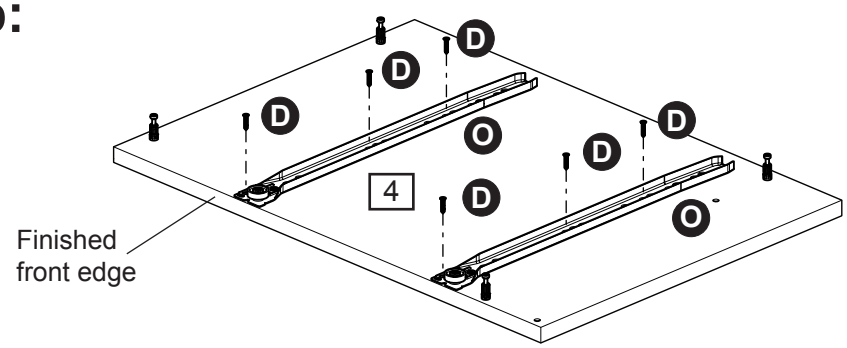


Step - 4

Insert large locking nuts Ⓒ into top [1].

Make sure the ‘arrow’ on locking nuts Ⓒ points towards the hole in the edge of top [1].

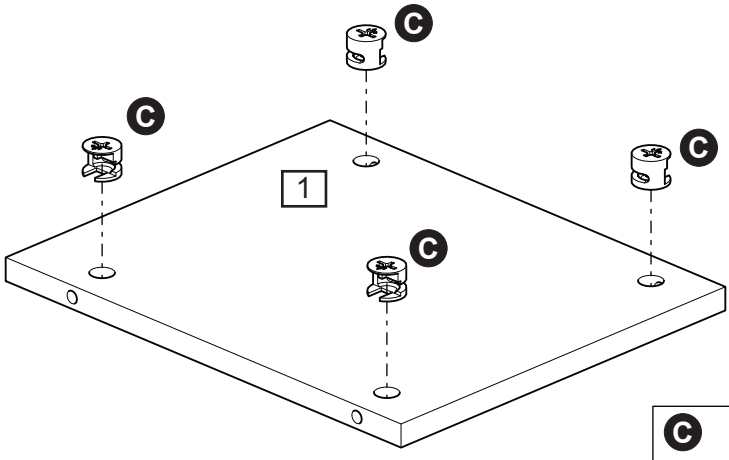

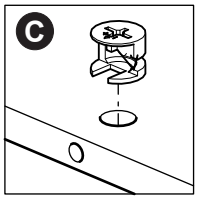

Assembly Instructions


Step - 5


Attaching panels


Put drop of glue Ⓚ into the 2 holes of left side [5] and right side [7] on the bottom of the sides.

Position left side [5] and right side [7] onto plinth [6] and top [1].

Use a screwdriver to turn locking nuts clockwise to lock.

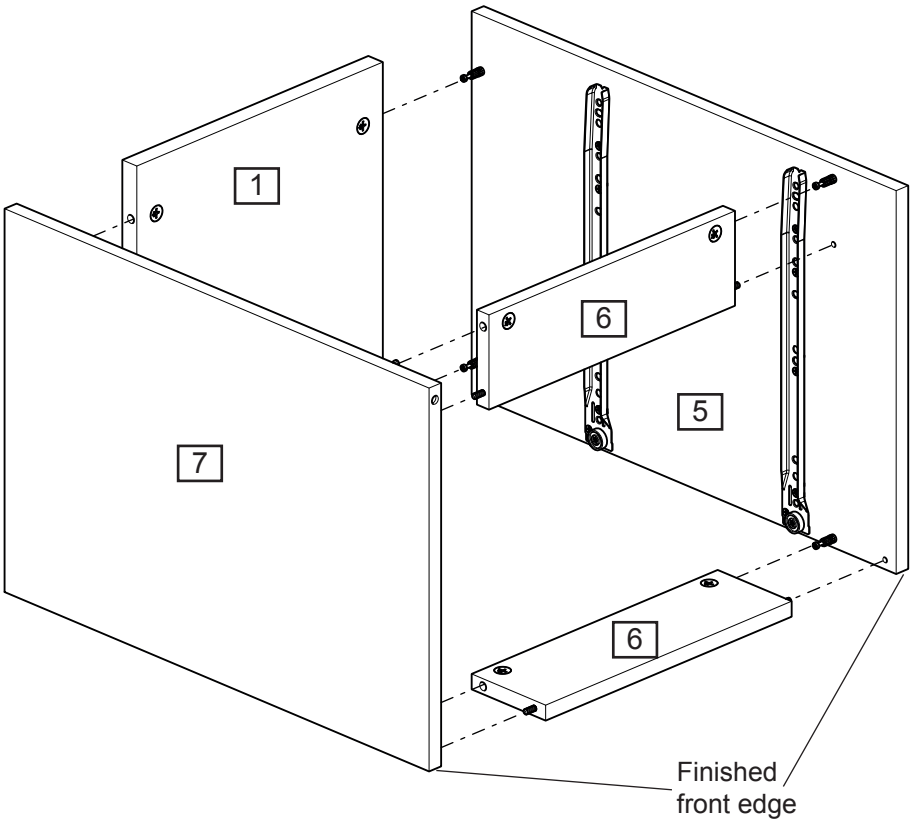

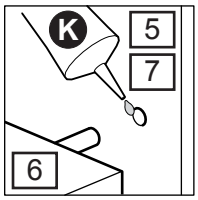

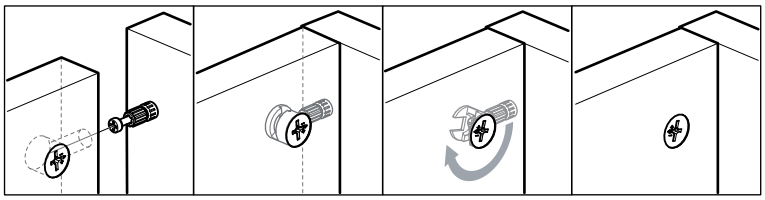



Step - 6


Fitting back panel

Attach back [3] to the back with the coloured surface facing the inside using nails Ⓕ. Use nail holder Ⓙ to hold the nails Ⓕ vertical and at correct distance as you secure the back [3]. Nails Ⓕ should be spaced about 150mm apart.

Important:
Furniture MUST be 'square' when back is attached.

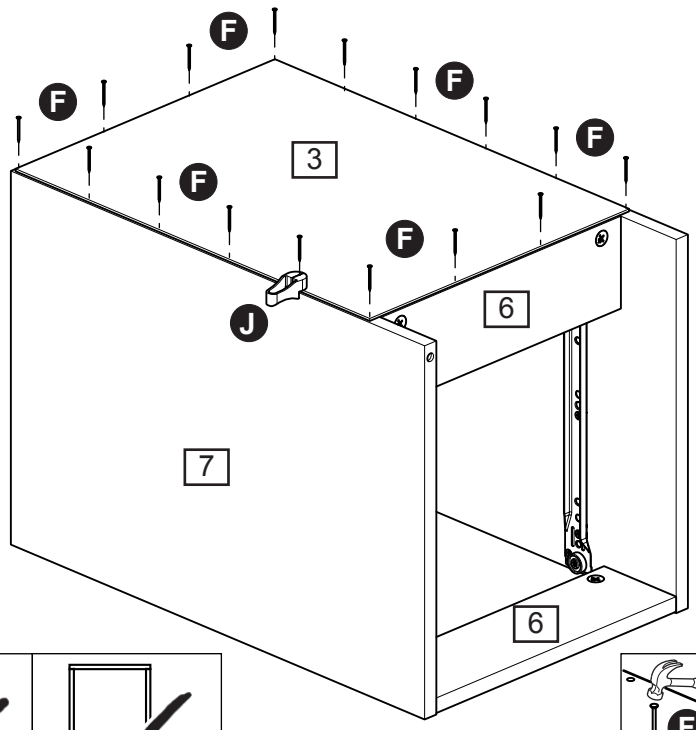

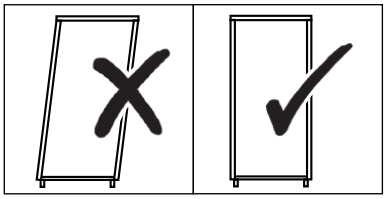

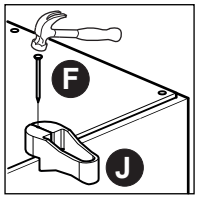

Assembly Instructions

Step - 7

Preparing drawer
Insert locking nuts Ⓑ into left drawer side [8] and right drawer side [10].


Make sure the ‘arrow’ on locking nuts Ⓑ points towards the hole in the edge of [8] and [10].


Put drop of glue Ⓚ into the 3 holes of left drawer side [8] and right drawer side [10].


Attach left drawer side [8] and right drawer side [10] onto drawer back [9].

Insert drawer back [2].

2x

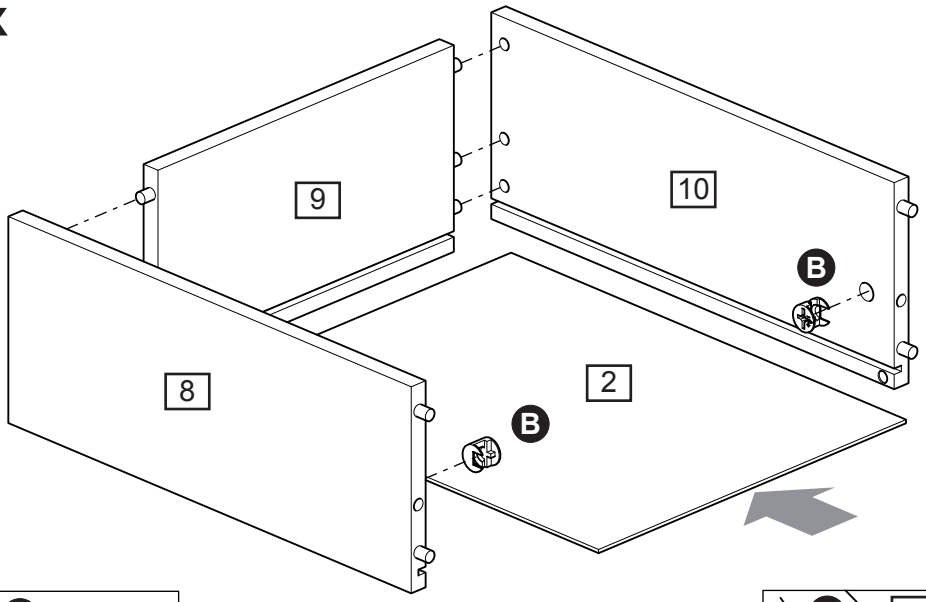

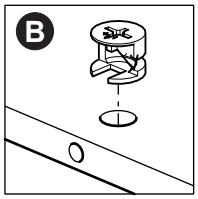


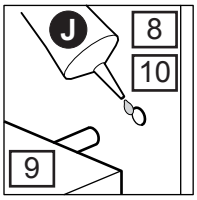


Step - 8

Screw 24mm locking screw Ⓐ into drawer front [4].

Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**

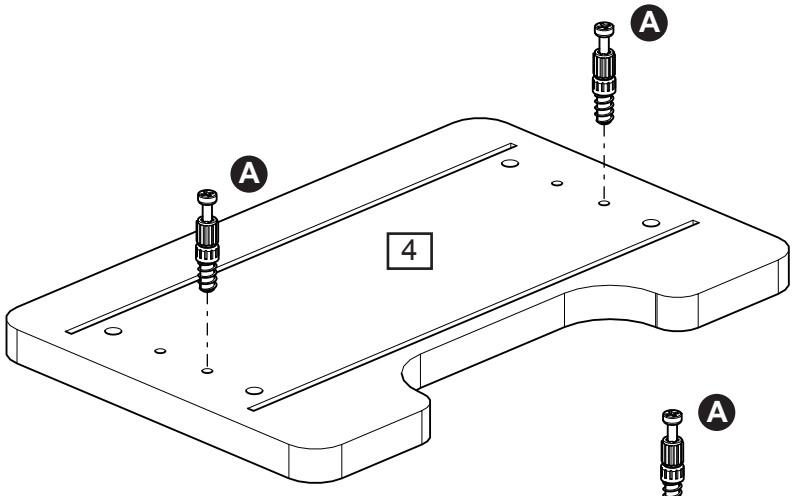

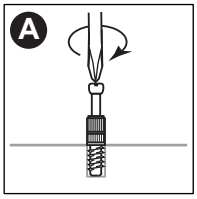



Assembly Instructions

Step - 9

Screw 24mm locking screw Ⓐ into drawer front 12.

Note: Insert 24mm locking screw Ⓐ as far as shown. **Do not over tighten.**

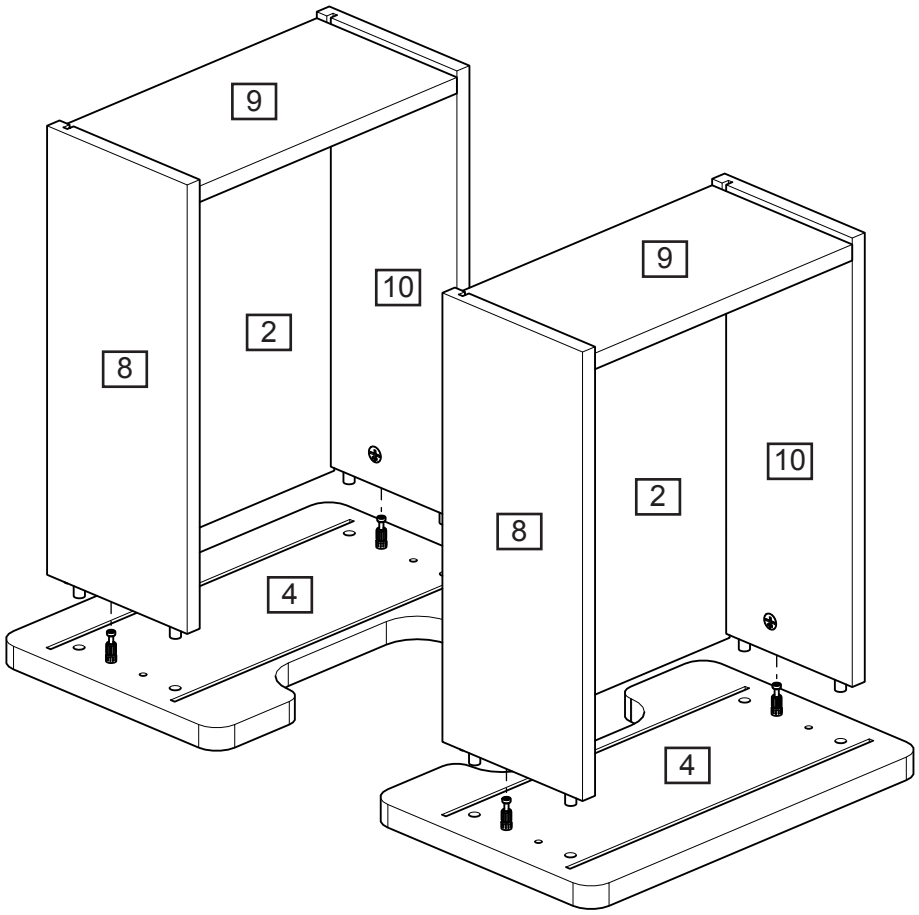


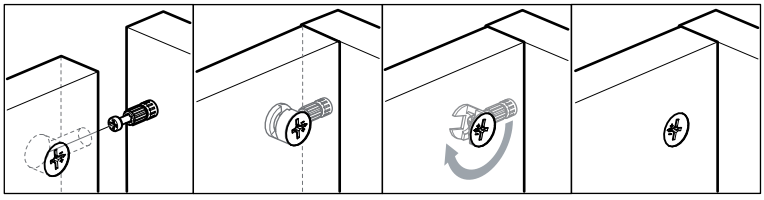

Step - 10

a: Turn over drawer.
Fix runner left part B Ⓜ on left drawer side 8 as shown using 12,5mm pozi screw Ⓓ.
Fix runner right part B Ⓞ on right drawer side 10 as shown using screw Ⓓ.

a:

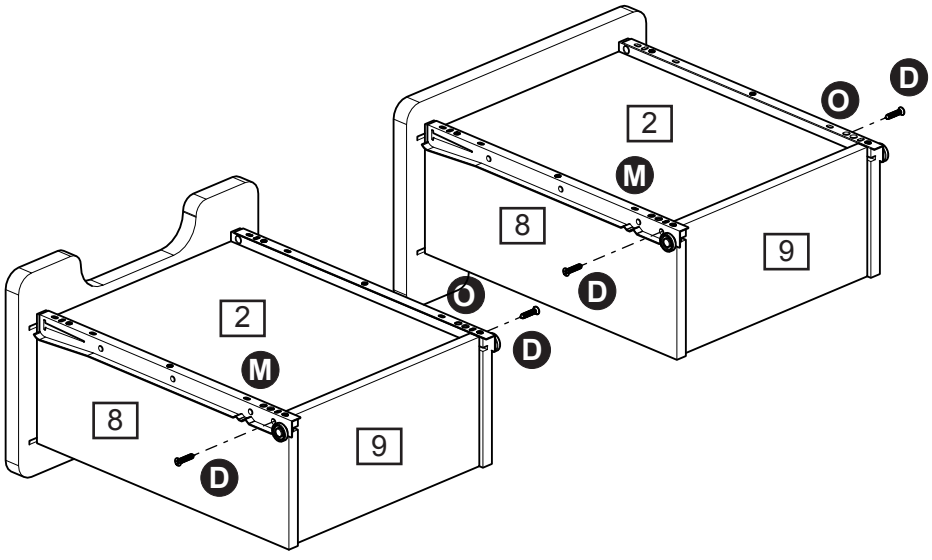



Assembly Instructions

Step - 10

b: Fix runner left part B Ⓜ and runner right part B Ⓞ using screw Ⓓ.
Slide drawer base support Ⓘ in corner as shown and fix them, using the attached nail.

b:

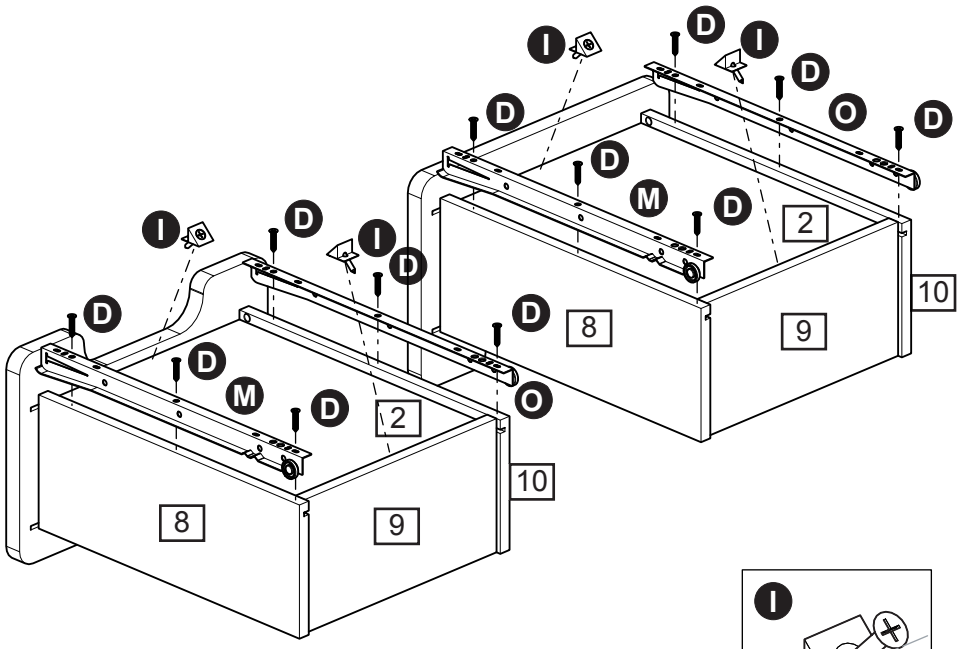


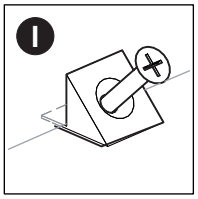


Step - 11

Inserting drawers
as shown. For adjusting the drawers see ‘adjustment’ on page ‘drawer adjustment’.

Use peg Ⓗ to square your furniture. Knock peg Ⓗ in, as far as you require, under the end of the side of the forniture. Then snap off flush with the side.

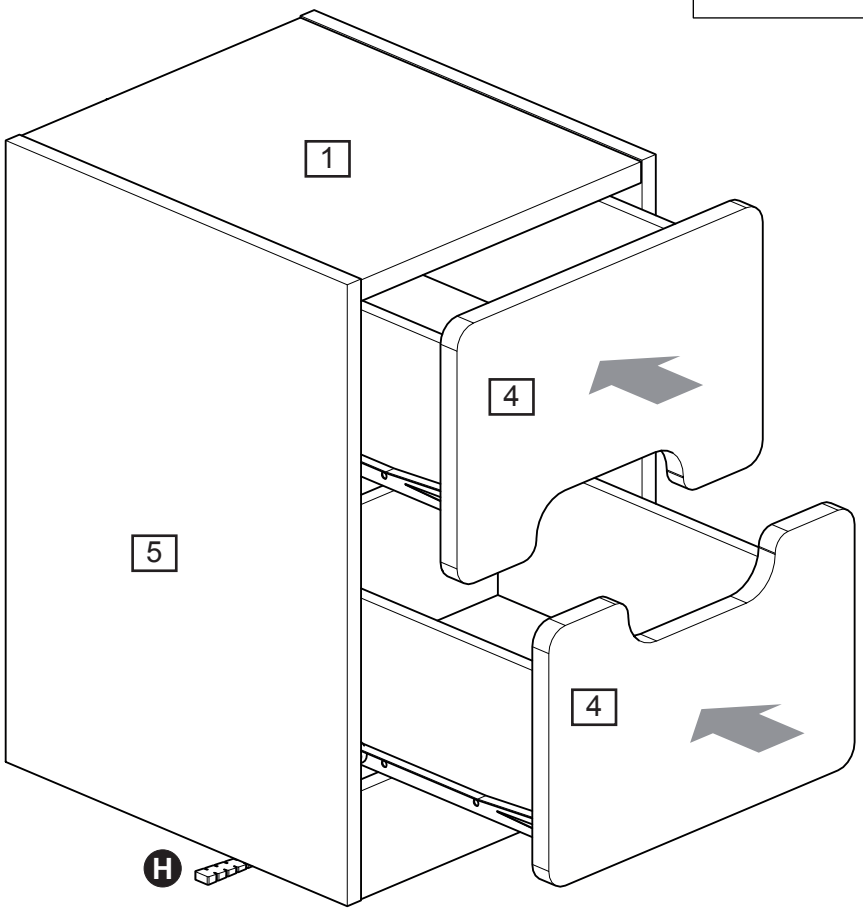

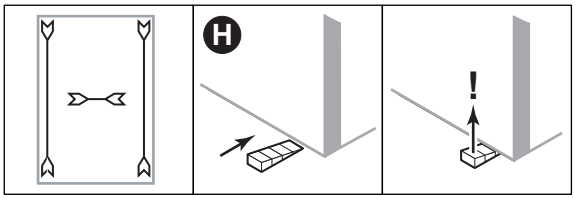

A Guide to - Drawer adjustment


Adjustment

Note: Each drawer can be adjust for approximately 1mm up or down on each site of the drawer.

Remove drawer, adjust the wheel from runner left part and runner right part as shown.

Insert drawer.

Repeat above steps until the desired result is achieved.

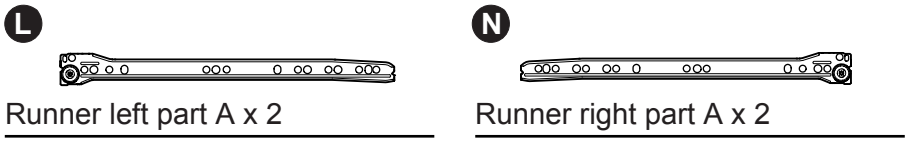

Runner left part A x 2

Runner right part A x 2

