
Shelby Shorty - Cabin Bed

Assembly Instructions - Please keep for future reference

323/2246

319/4030

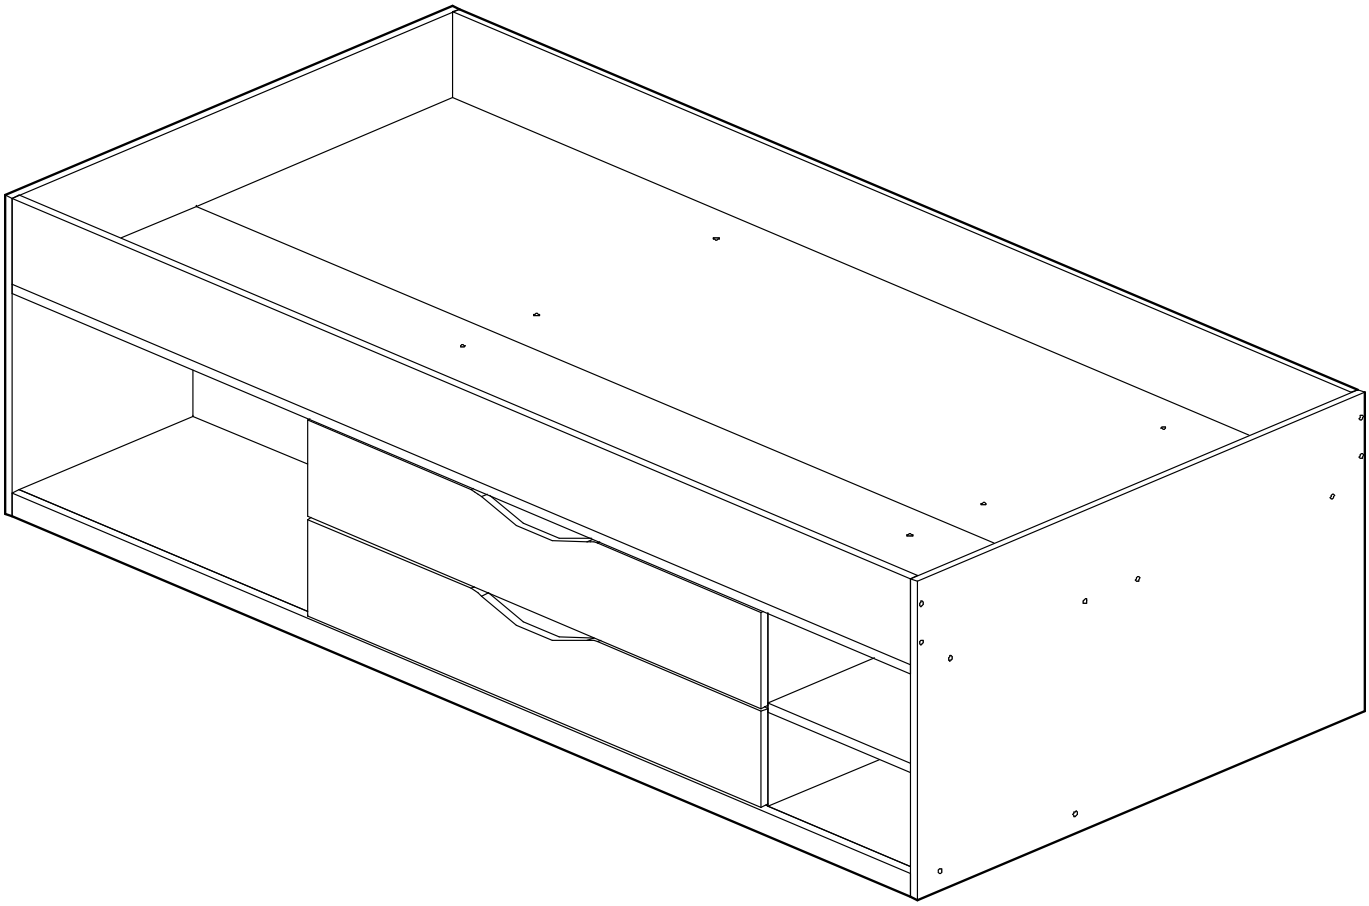

Dimensions

Width - 180cm
Depth - 80.5cm
Height - 53cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**

Issue 1 - 9/02/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2, 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

• WARNING: Do not place this child`s bed near heat sources, windows and other furniture.

• WARNING: Do not use this child`s bed if any part is broken, torn or missing.


• WARNING: Not suitable for children under the age of 4 years.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**


Please check you have all the panels listed below

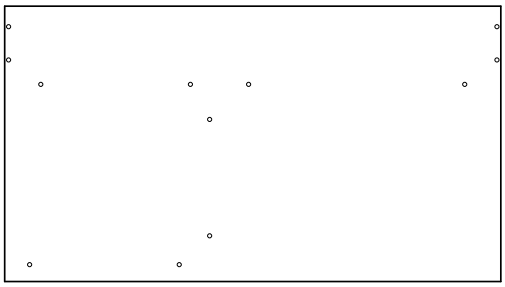


1 Left side panel (80.5 x 53cm)

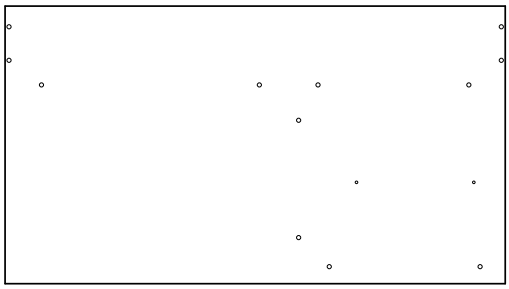

2 Right side panel (80.5 x 53cm)

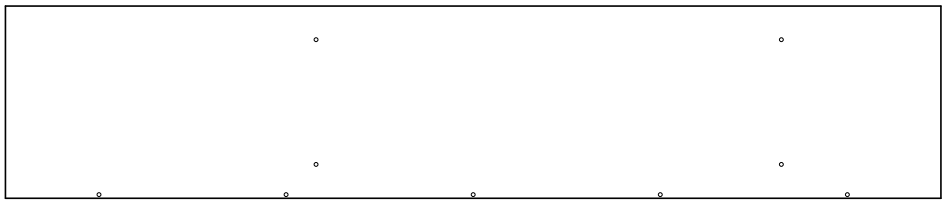


3 Front bed board (177 x 40.25cm)

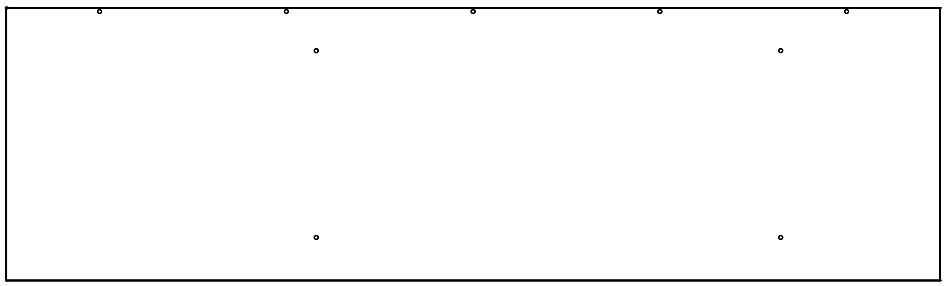

4 Back bed board (177 x 40.25cm)




5 Front/Back bed supports x2 (177 x 14.3cm)




6 Right central support (28 x 37.2cm)



7 Left central support (57 x 37.2cm)

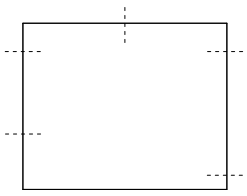

8 Right bottom panel (28 x 37.2cm)

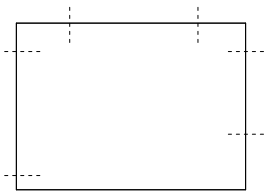


9 Left bottom panel (57 x 37.2cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**


Please check you have all the panels listed below




10 Middle crossbar (89 x 12cm)




11 Back crossbar (89 x 10cm)




12 Front crossbar (89 x 10cm)

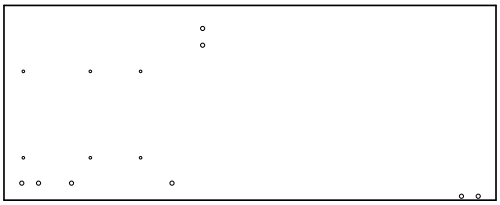

13 Left shelf partition (79 x 37.2cm)

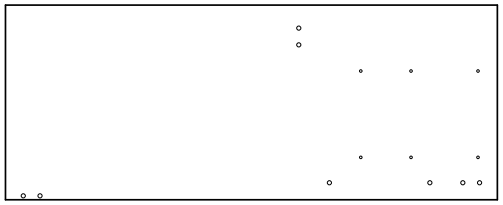


14 Right shelf partition (79 x 37.2cm)



15 Shelf (28 x 38cm)




16 Drawer front **x2** (91.9 x 16cm)



17 Front board (177 x 4cm)



18 Drawer sides **x2** (154.5 x 12cm)














19 Drawer bottom panel **x2** (85.3 x 33.9cm)


Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

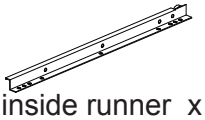
A  50mm wood screw x 20	**B**  50mm fixing screw x 31	**C**  30mm wooden dowel x 14
D  Locking nut x 4	**E**  Screw-in dowel x 4	**F**  Plastic support x 4
G  Shelf support x 4	**H**  16mm wood screw x 38	**I**  13mm fixing screw x 12
J  Left outside runner x 2	**K**  Left inside runner x 2	**L**  Right outside runner x 2
M  Right inside runner x 2	**N**  Plastic support x 7	**O**  Allen key x 1

Tools required



Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)



Ruler/tape measure

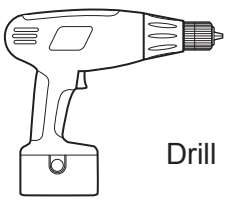
Drill


Small hammer

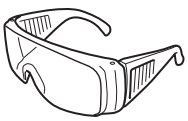
Eye protection (when using a hammer)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step 1


Attaching runners

Position runners J 2mm in from front edge of the left shelf partition 13 and runners L 2mm in from front edge of the right shelf partition 14.

Fix through holes shown using 13mm fixing screws I.

Insert the 30mm dowels C into left shelf partition 13 and into right shelf partition 14.

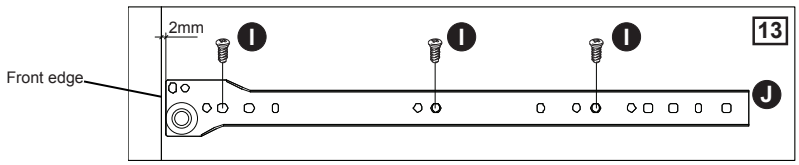

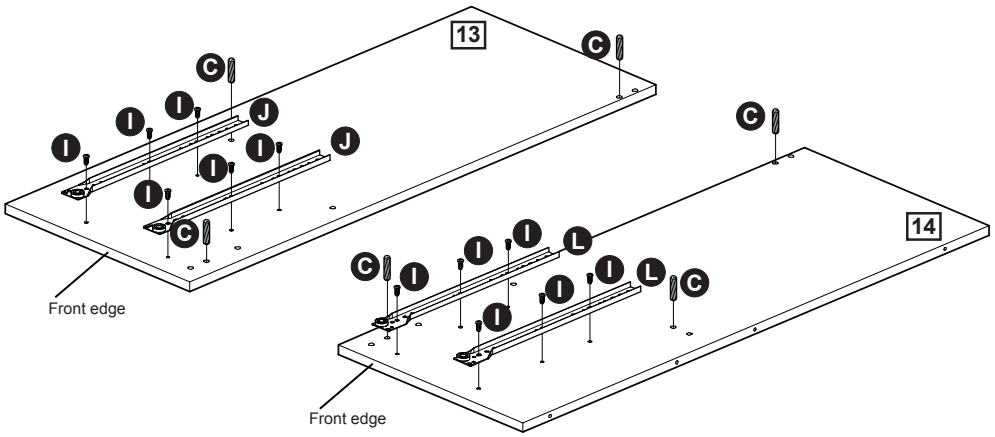



Step 2

Assemble middle module

Screw the left shelf partition 13 and the right shelf partition 14 to the middle crossbar 10, to the back crossbar 11 and to the front crossbar 12 through 50mm fixing screws B.

Note: Use the Allen Key O.

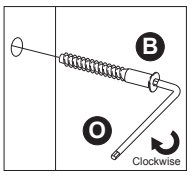

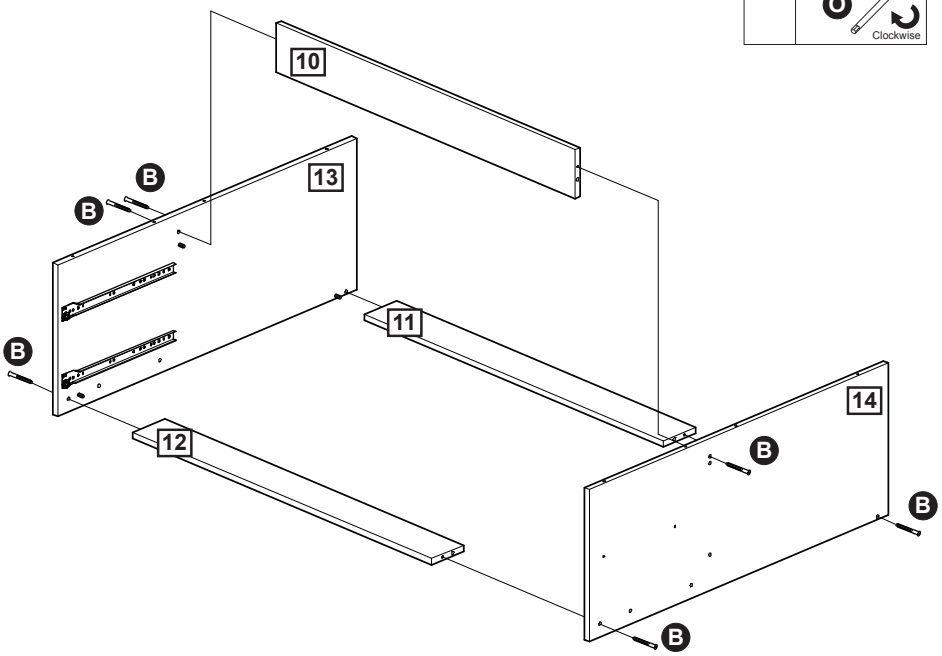

Step 3

Attaching panels


a: Insert the 30mm dowels C into left shelf partition 13 and into right shelf partition 14.

Position left central support 7 to left bottom panel 9 and right central support 6 to right bottom panel 8.

Fix the panels through 50mm fixing screw B.

Note: Use the Allen Key O.

a:

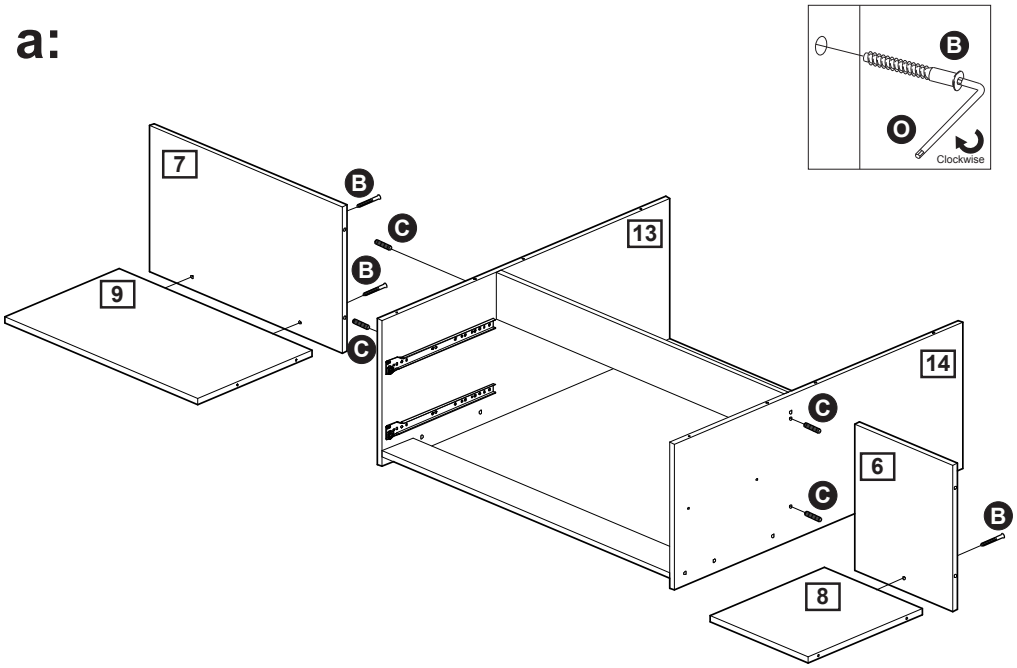


b: Position the attached panels: left central support 7 and left bottom panel 9 and right central support 6 and right bottom panel 8 like shown on the picture.

Fix the panels to left shelf partition 13 and to right shelf partition 14 through 50mm fixing screws B.

Note: Use the Allen Key O.

b:

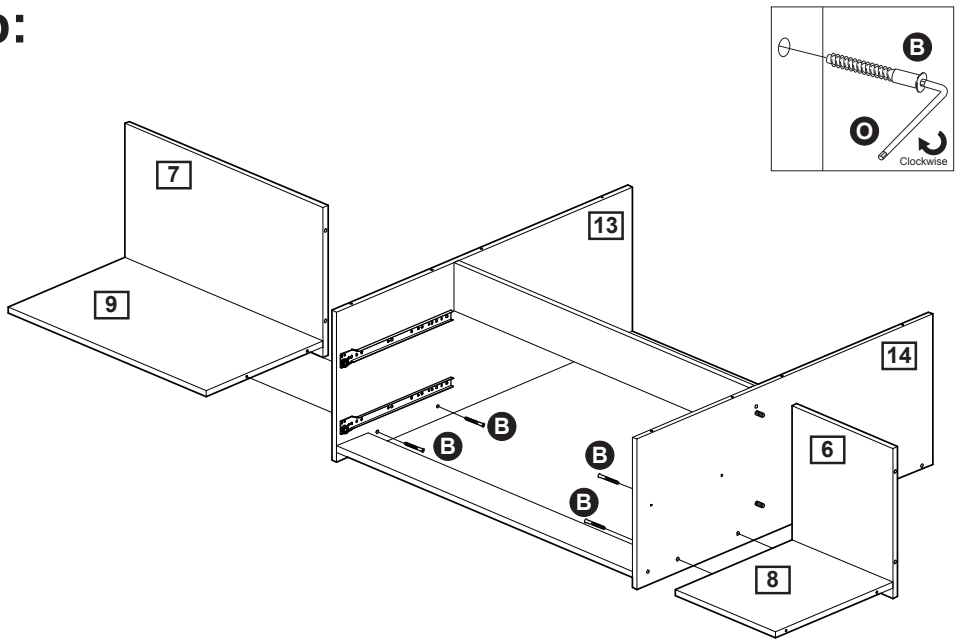


Step 4

Attaching panels

a: Insert the 30mm dowels C into left side panel 1 and into right side panel 2.


a:

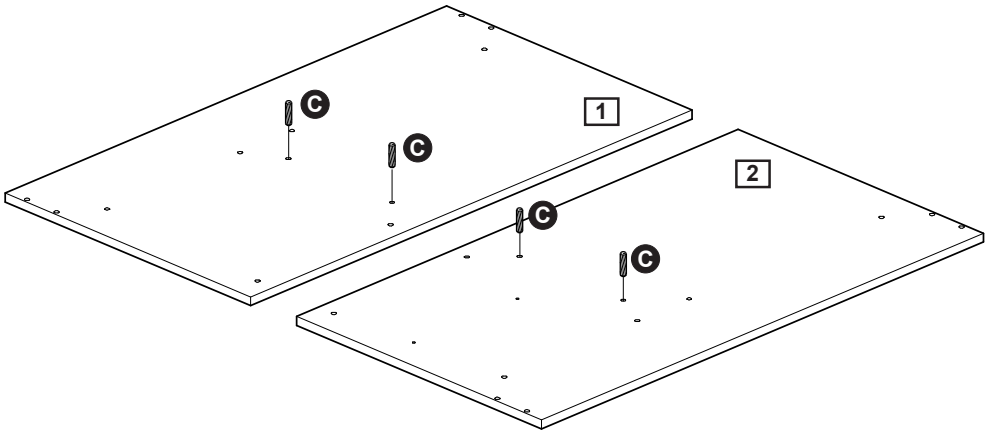


b: Position the left side panel 1 and the right side panel 2 like shown on the picture and fix them to left central support 7, left bottom panel 9, right central support 6 and right bottom panel 9 through 50mm wood screws A.

Note: Use the Allen Key O.

b:

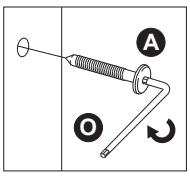

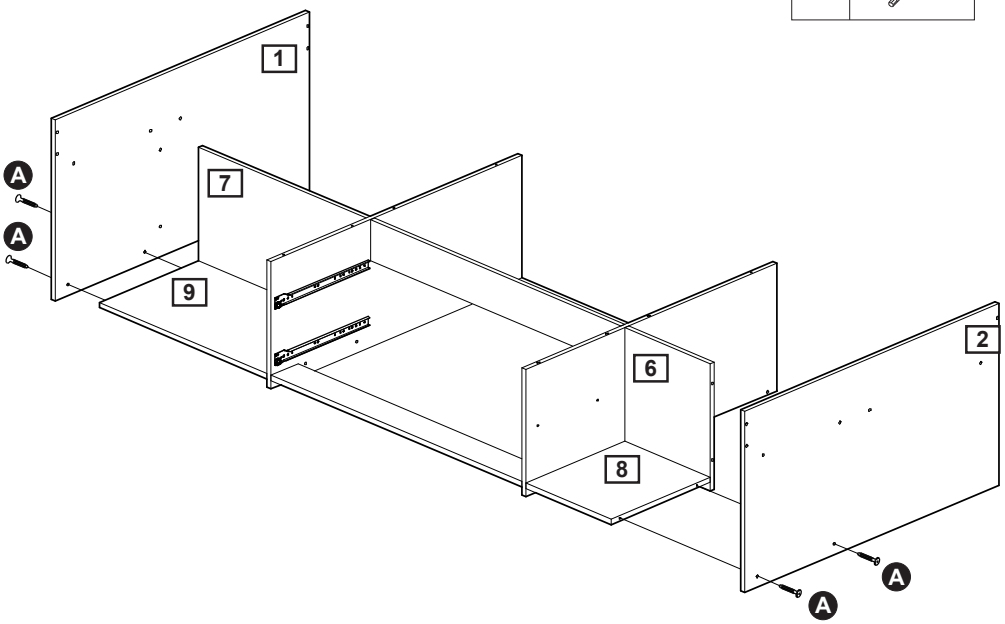


Step 5

Attaching panel

a: Screw plastic supports N to the front board 17 through 16mm wood screws H.


a:

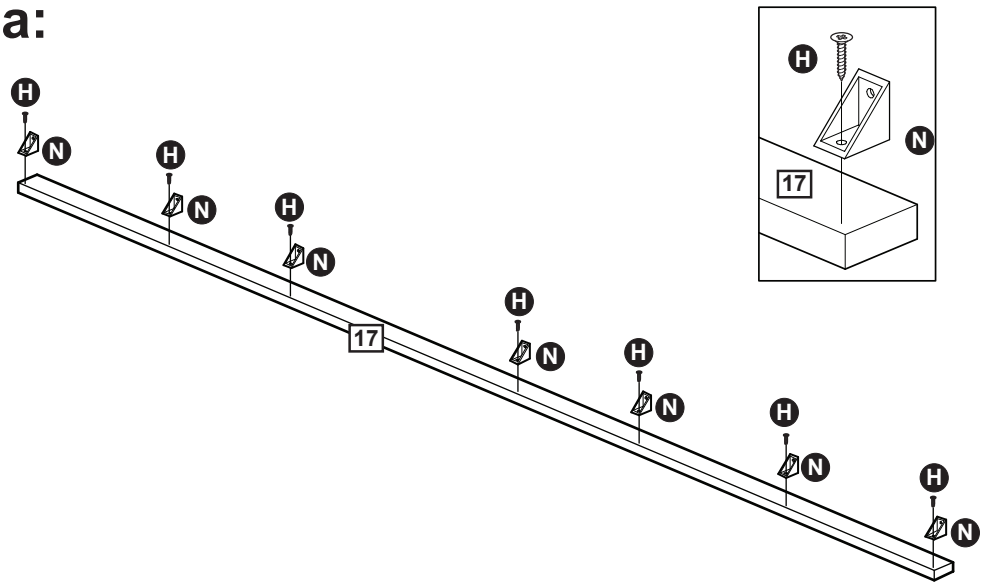


First rotate the construction of the bed horizontally at 180 degrees and then vertically at 90 degrees like shown on the pictures.

b: Position the front board 17 and screw it to left central support 9 , middle crossbar 12 and right central support 8 through 16mm wood screws H.

b:

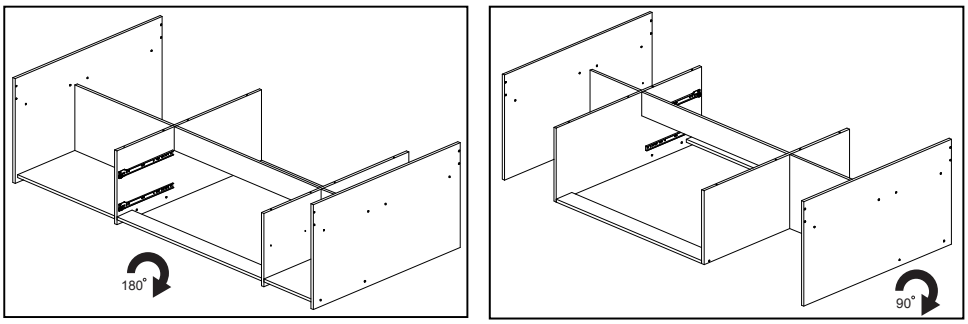

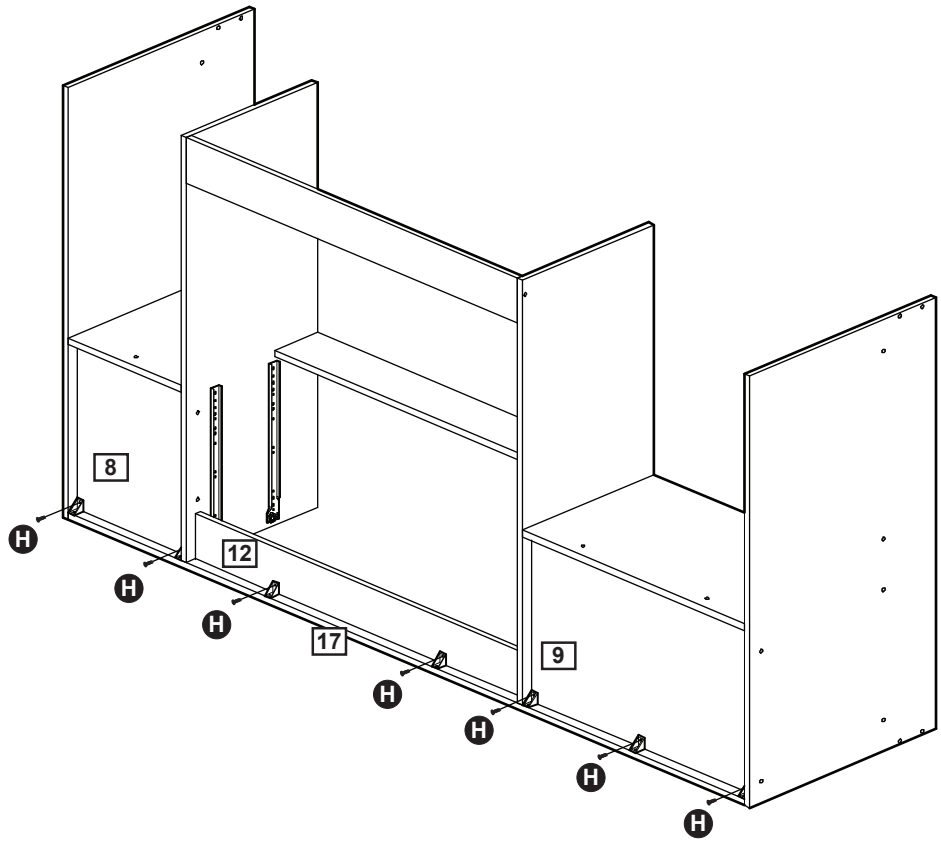

Step 6


Attaching panels

Two people are needed here

a: Position the front bed board 3 and the back bed bord 4 and fix them to left shelf partition 13 and right shelf partition 14 through 50mm fixing screws B.

Note: Use the Allen Key O.


a:

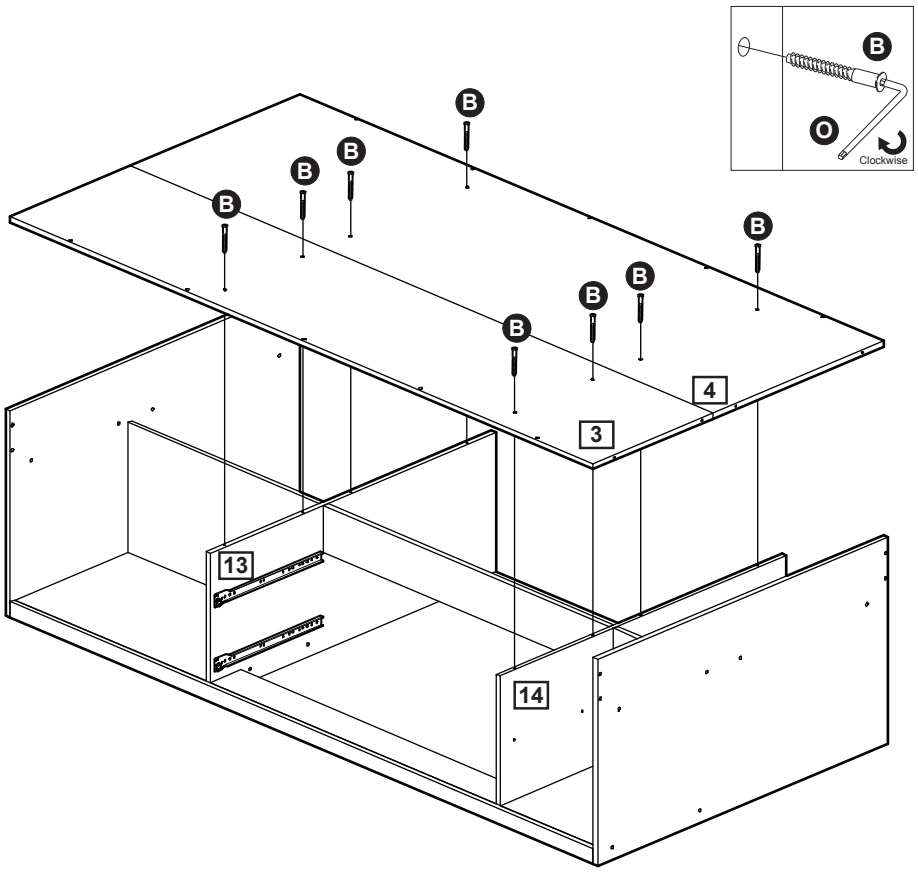

b: Fix the left side panel 1 and the right side panel 2 to the front bed board 3 and the back bed board 4 through 50mm wood screws A.

Note: Use the Allen Key O.

b:

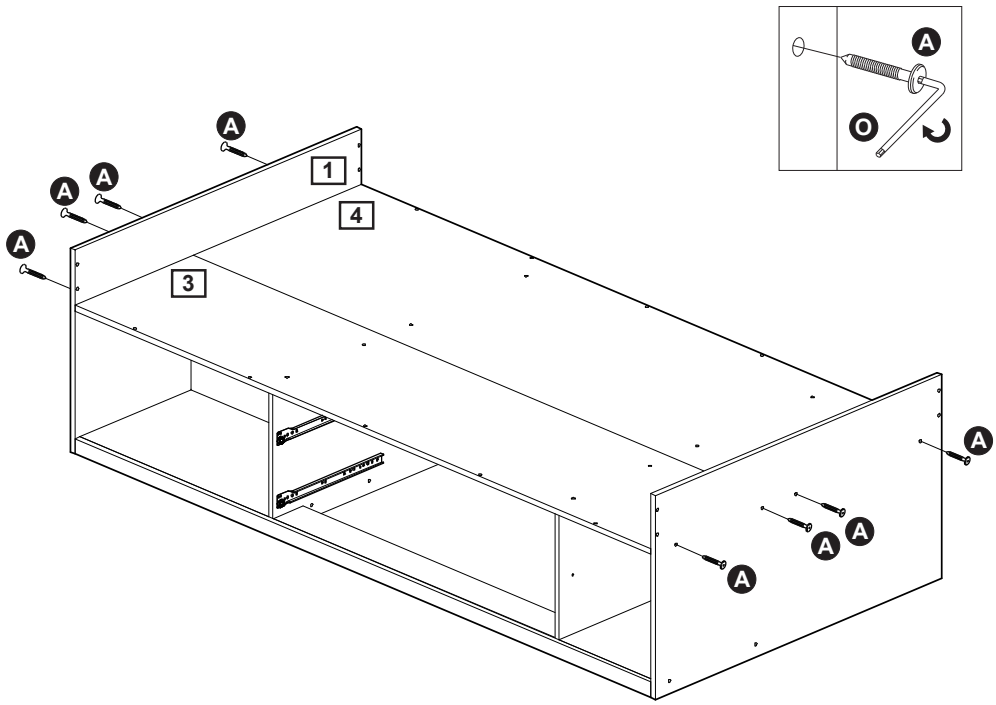

Step 7


Attaching panels


Two people are needed here

a: Position the front/back bed supports 5 and fix them to the front bed board 3 and the back bed board 4 through 50mm fixing screws B.

Note: Use the Allen Key O.

a:

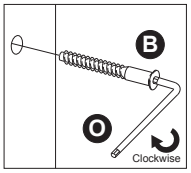


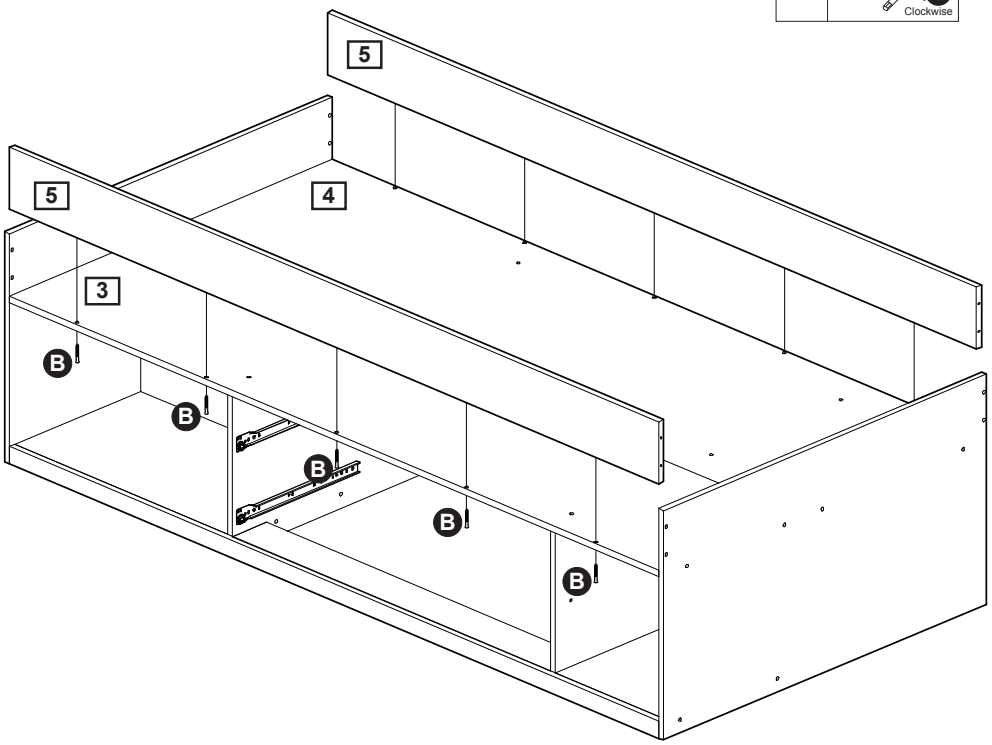


b: Fix the front/back bed supports 5 to the left side panel 1 and to the right side panel 2 through 50mm wood screws A.

Note: Use the Allen Key O.

b:

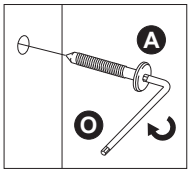

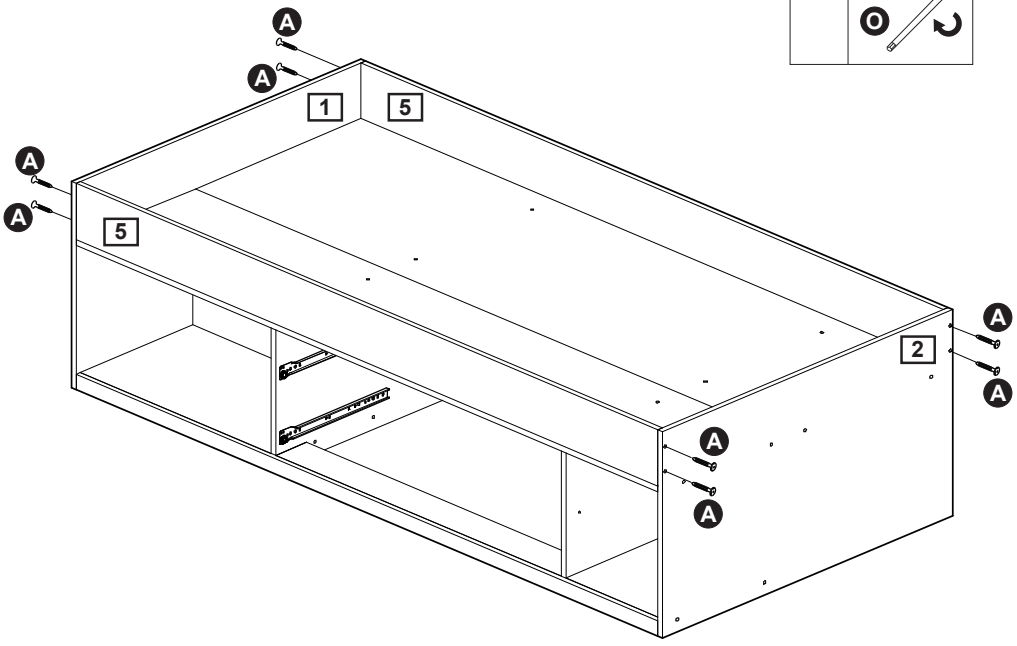


Step 8

Attaching shelf

a: Position the shelf supports G into the right shelf partition 14 and the right side panel 2.

Position the shelf 15 on its place like shown on the picture.

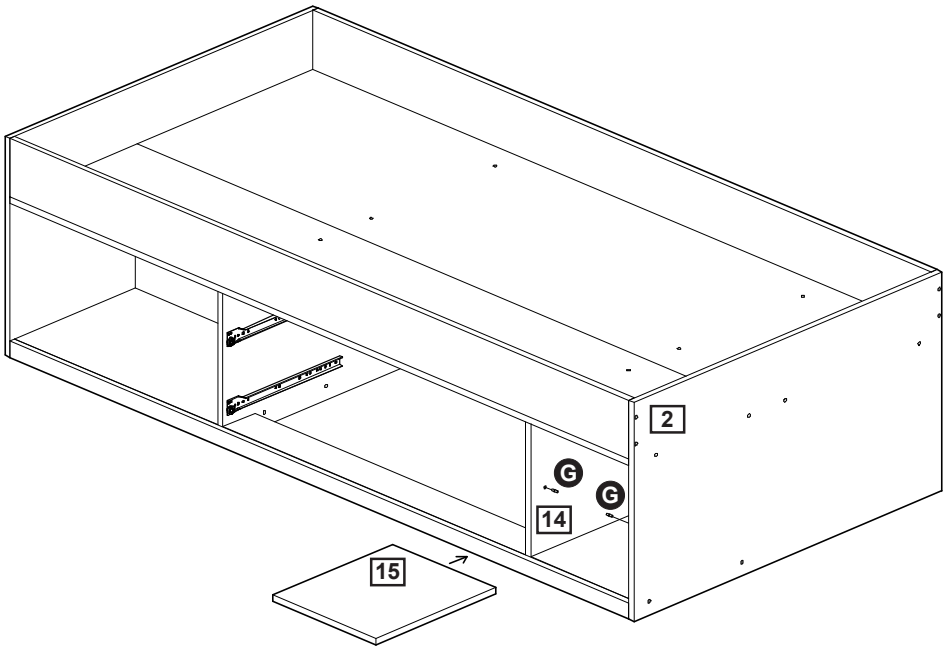


Step 9

Assembling drawer


a: Fold the drawer sides 18 like shown on the picture.

a:

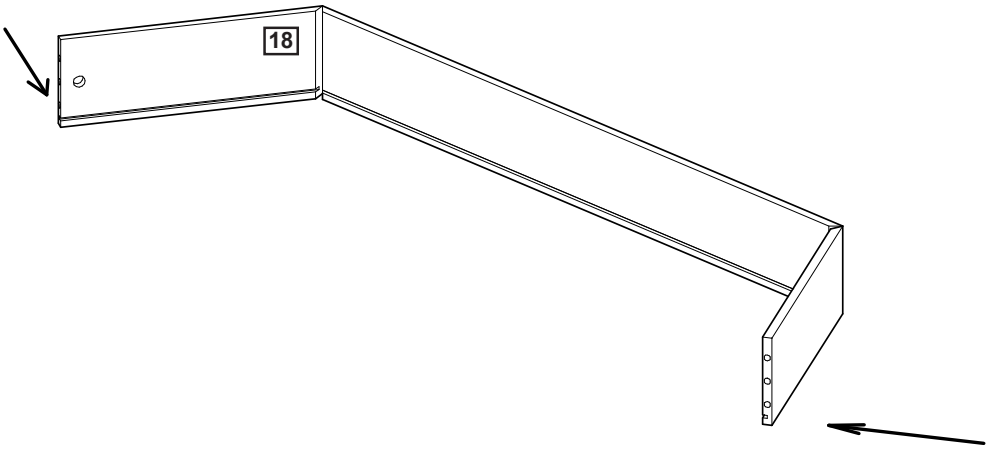

b: Position the drawer bottom 19 in the ditch of the drawer 18 sides like shown on the picture.

b:

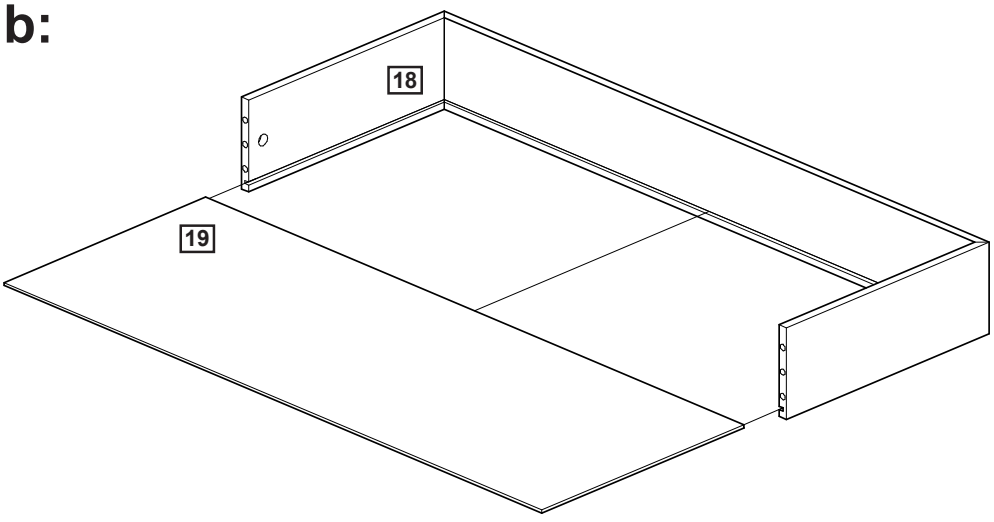

Continued on next page.


Step 9 - continued

c: Position the wooden dowels Ⓒ and the screw-in dowels Ⓔ. Position the drawer sides 18 and the drawer bottom 19 onto the front panel 16.

Insert the locking nuts Ⓓ into the drawer sides.

Use a screwdriver to turn locking nuts Ⓓ clockwise to lock.


c:

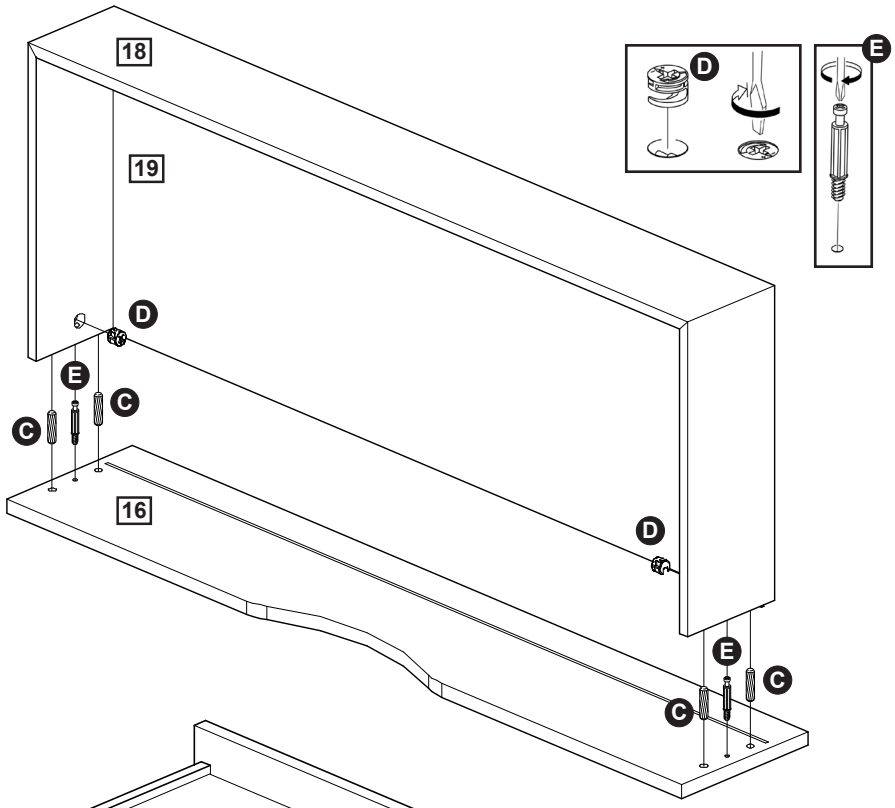

d: Turn the drawer with the bottom up and place the plastic supports Ⓕ like shown on the picture. Fix them with 16mm wood screws Ⓗ.


Note: Place the sharp part of the plastic support Ⓕ in the ditch.

d:

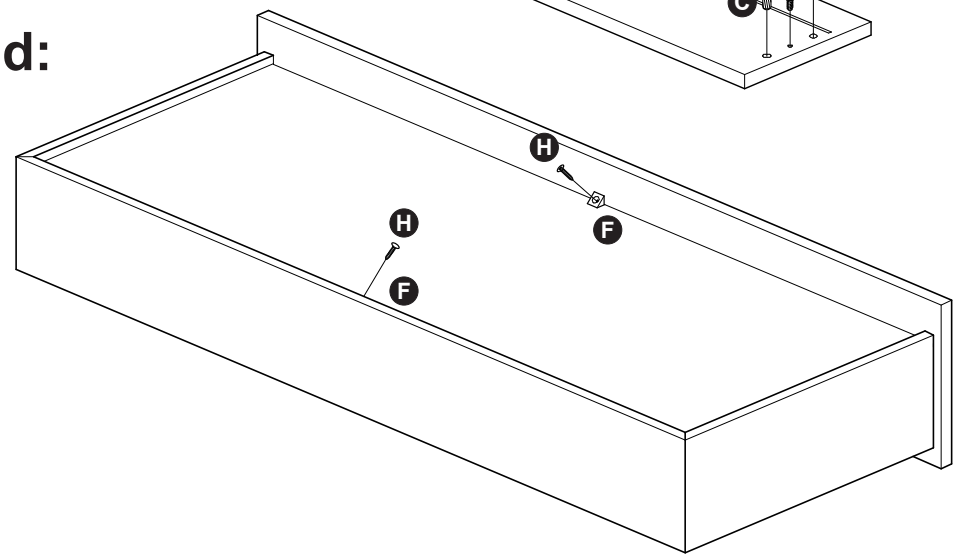

e: Position the left inside runner Ⓚ and the right inside runner Ⓜ onto the drawer and fix them with 16mm wood screw Ⓗ.

e:

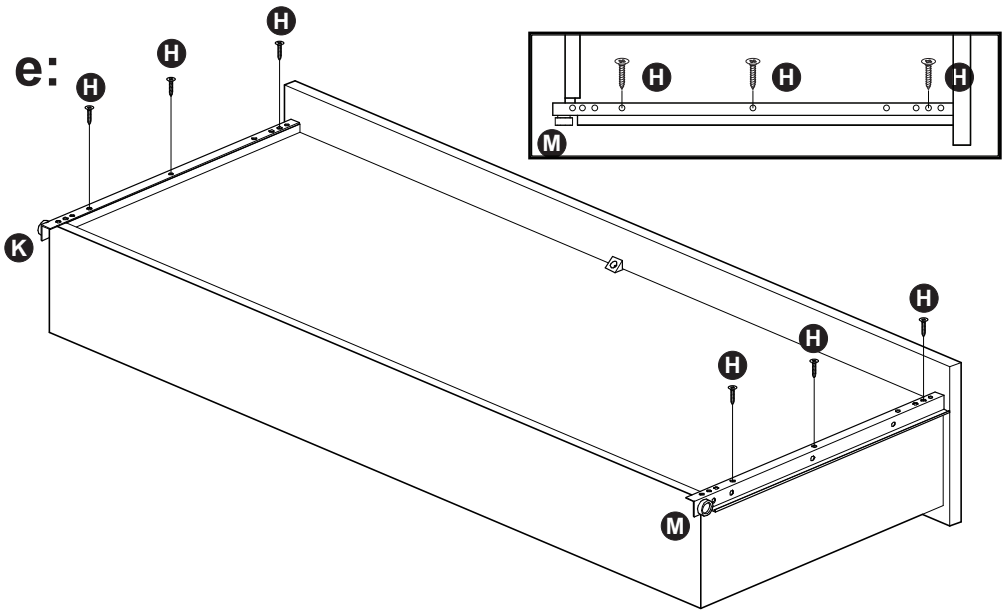


Assembly Instructions

Step 10

Placing drawers

Position the drawers into the bed like shown on the picture.

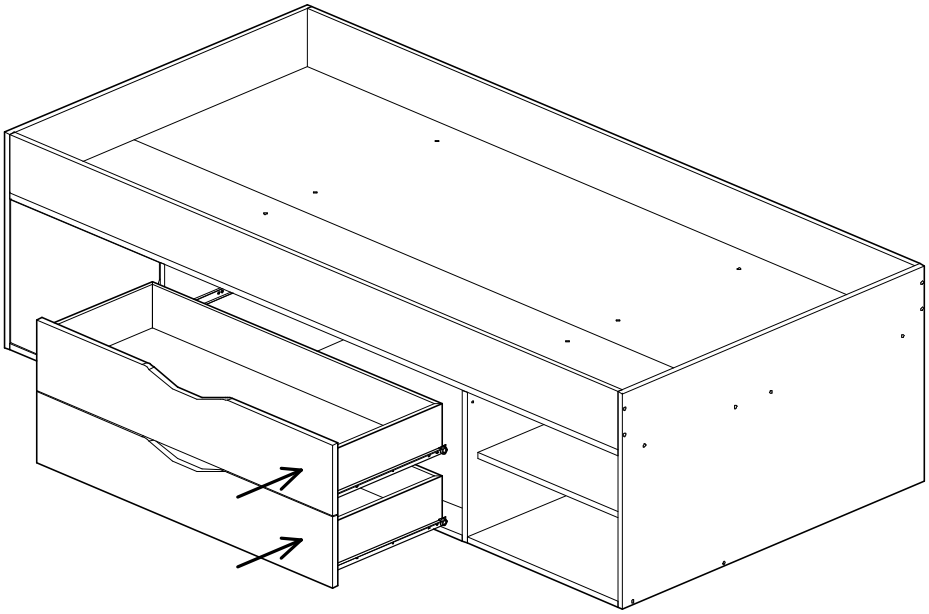

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**
Domestic address or Home Retail Group Plc address.