# Silbury - bed 4"

Assembly Instructions - Please keep for future reference | **4184719**



## Dimensions

Width : 200,8

Depth : 129,3

Height : 110,0

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

# Safety and Care Advice

## Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

## Glue safety - Take care when using glue, please follow the advice below

**Skin contact:** Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

**Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

**If swallowed:** Seek medical advice immediately.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


***Note:*** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline**: **03456 400 800**

## Please check you have all the panels listed below


1 headboard upright x9
V160115
435x64x15 mm




2 footboard legs x2
V540005
450x54x54 mm




5 footboard
V198110
1185x115x19 mm

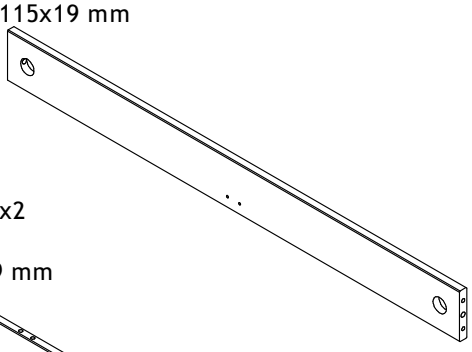


6 headboard x2
V198109
1185x90x19 mm

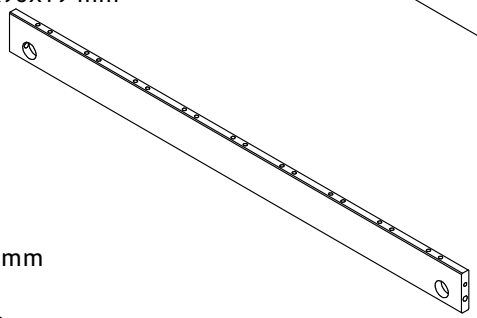


3 headboard legs left
V540006
1100x54x54 mm




4 headboard legs right
V540004
1100x54x54 mm




7 headboard
P198114
1185x68x19 mm

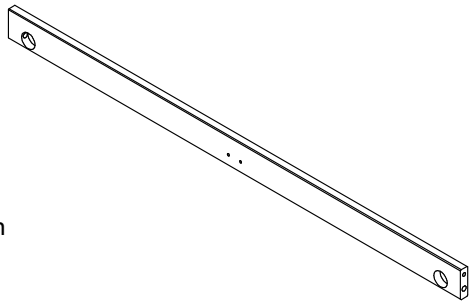

8 bed side x2
V198104
1900x115x19 mm

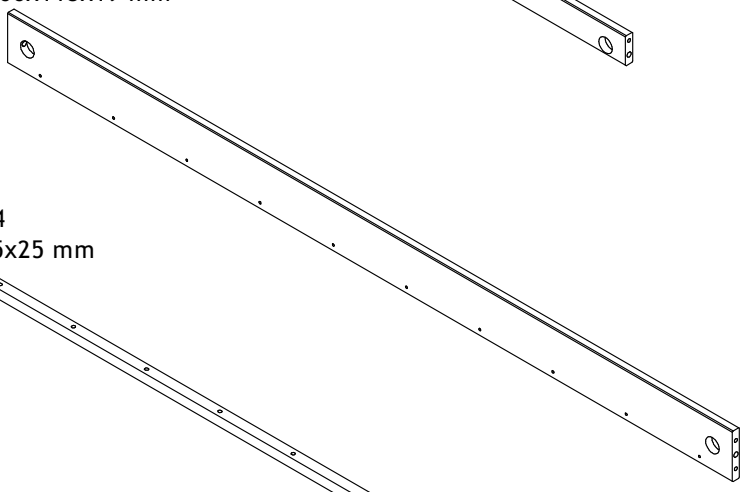

9 rail x2
P250014
1860x25x25 mm

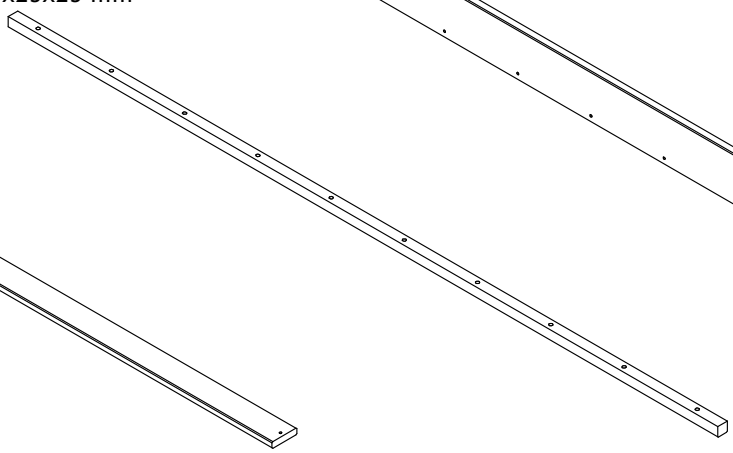

10 slat x14
P160113
1218x65x15 mm



11 center rail
P198101
1931x90x19 mm












12 center legs
P198102
304x90x19 mm

# Components - Fittings

If you have damaged or missing components, call the **Argos Customer Helpline**: **03456 400 800**


## Please check you have all the panels listed below

***Note:*** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
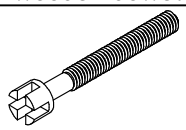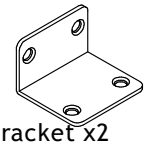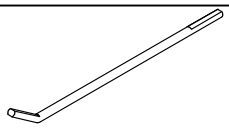
| | | |
|---|---|---|
| **A**  BA10369 ø8x40 mm wooden dowel x54 | **B**  BA10696 M6xø10,5x20 mm screw bush x12 | **C**  BA10672 ø35 mm sector x12 |
| **D**  BA10659 M6x50 mm sector screw x12 | **E**  BA10287 7x40 Ø15 screw x20 | **F**  BA10240 ø6,0x11,5 mm screw x8 |
| **G**  BA10156 ø4,5x60 mm screw x2 | **H**  BA10070 ø3,5x30 mm x28 | **I**  BA10821 45x40x29 mm bracket x2 |
| **J**  BA103474 Ø35/40 cap x4 | **K**  I10882 30 g glue x1 | **L**  BA10663 120 mm sector key x1 |
| **M**  BA10680 4 mm allen key x1 | **N**  BA10678 6 mm allen key x1 | |


## Tools required


Flatblade screwdriver (Medium)


Hammer


Phillips screwdriver (Medium & large)


## Ruler - Use this ruler to help correctly identify the screws



# Assembly Instructions


## Step 1

Pour a drop of glue K into the holes indicated on the headboard upright 1 before knocking the dowels A into the holes using a small hammer.

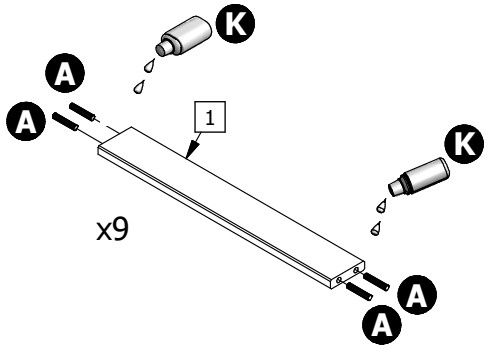



## Step 2

Knock the dowels A into the holes indicated on the headboard 6 and 7 using a small hammer.

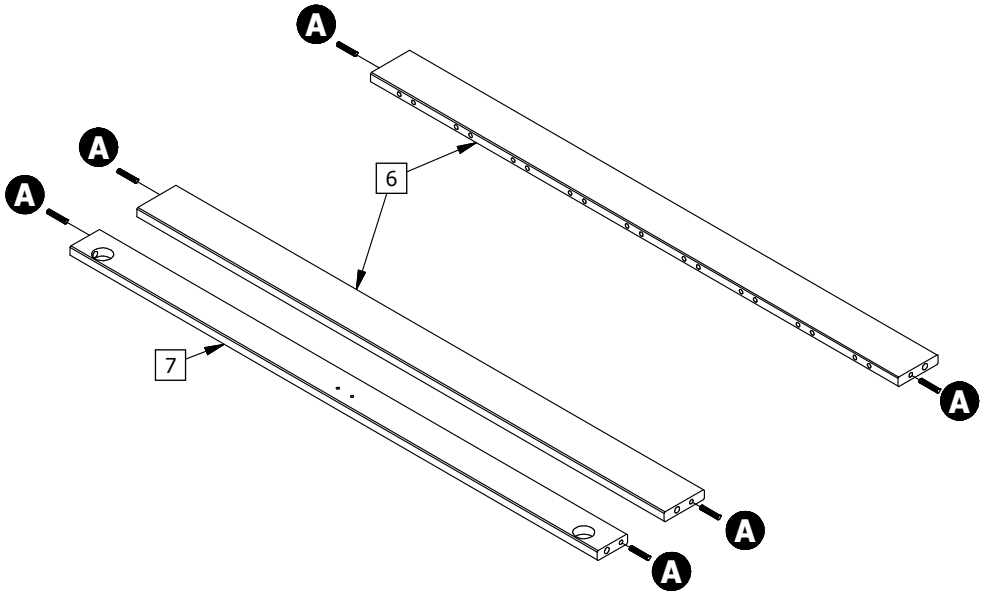


## Step 3


Knock the dowels A into the holes indicated on the footboard 5 using a small hammer.

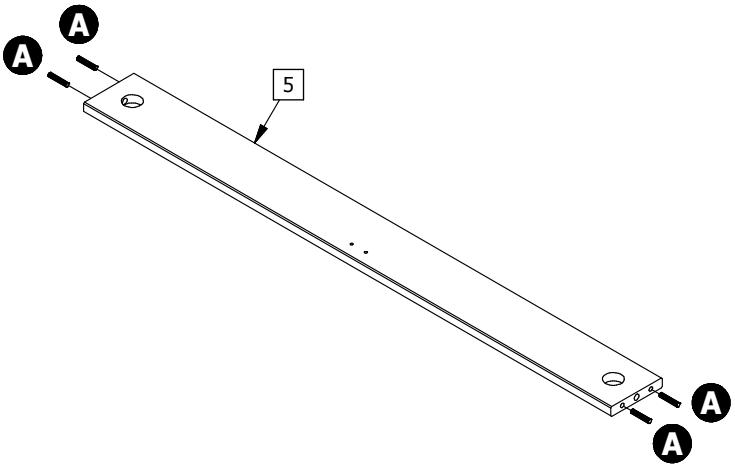

# Assembly Instructions


## Step 4

Insert the screw bush B into the holes indicated on the footboard legs 2 and the headboard legs 3 and 4 using the allen key N.

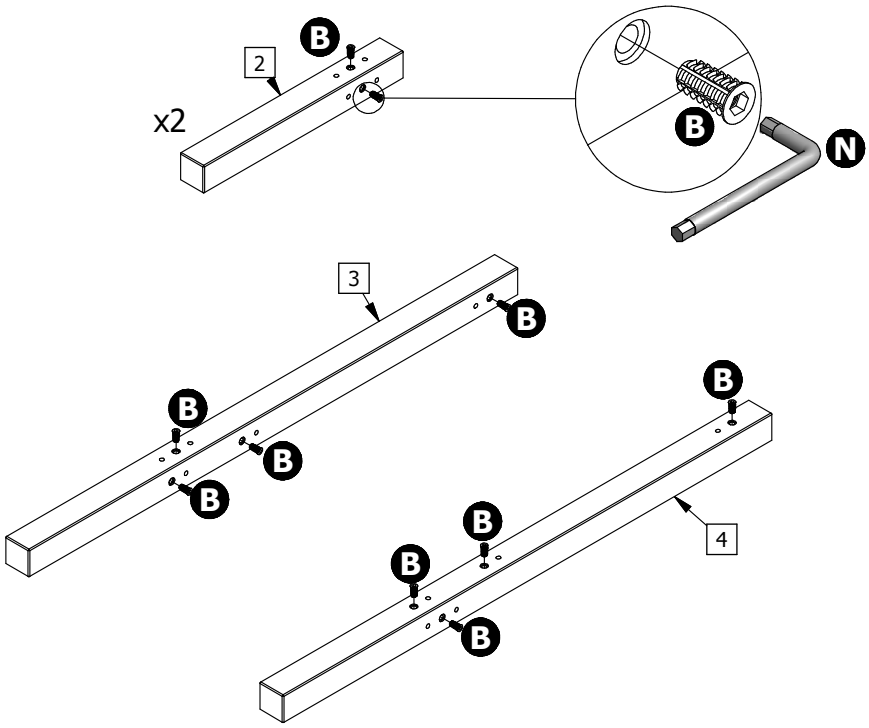


## Step 5


Screw the sector screw D into the holes indicated on the footboard legs 2 and the headboard legs 3 and 4 using a flatblade screwdriver.
Leaving at least 40 mm remaining. See details.

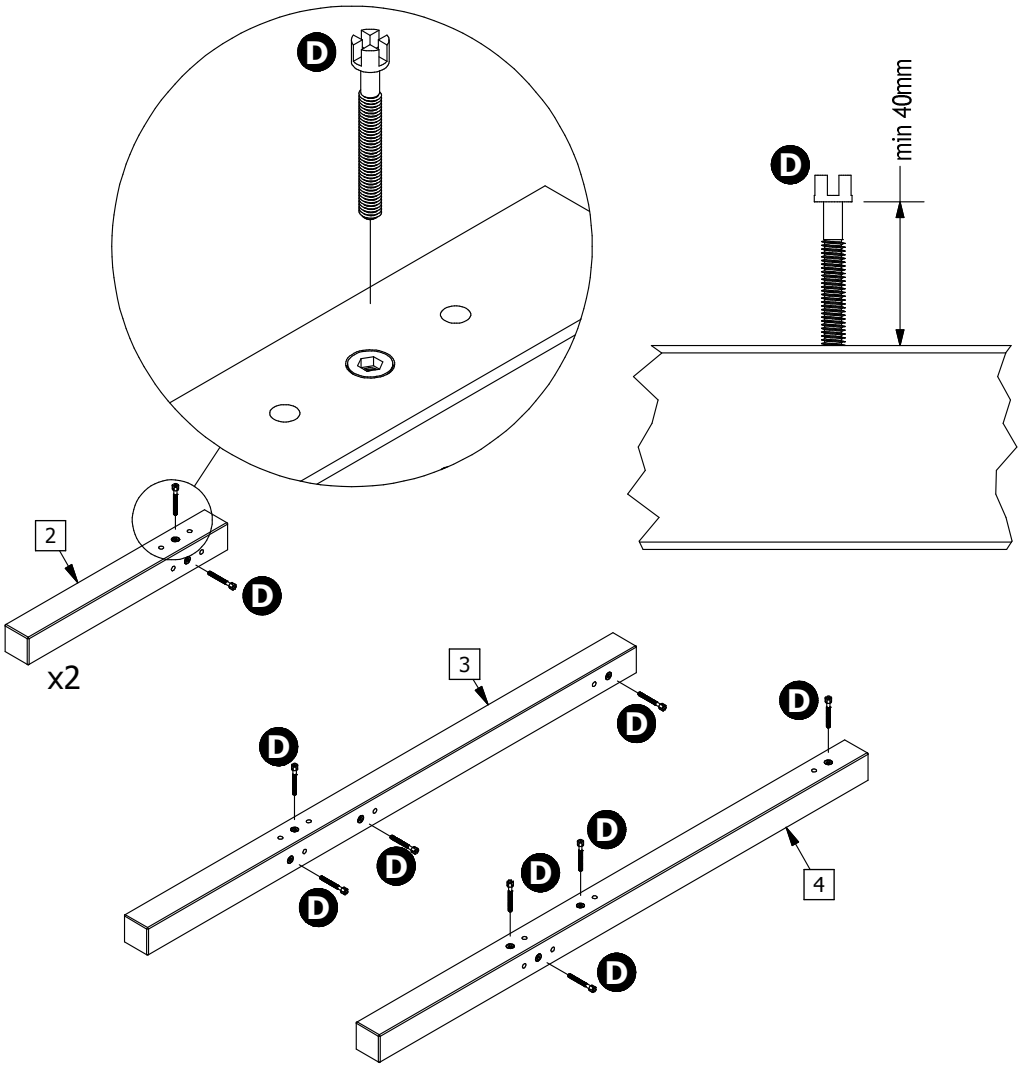

# Assembly Instructions

## Step 6


Push the footboard legs 2 onto the footboard 5.

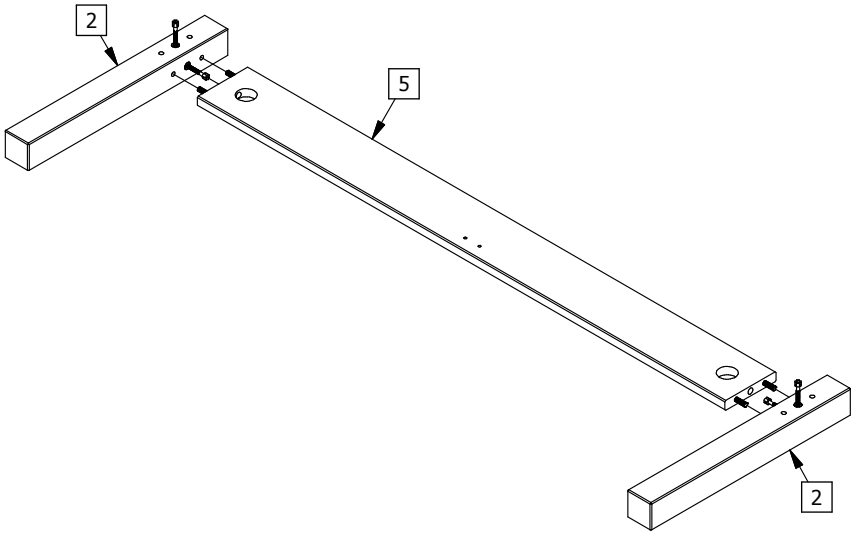


## Step 7

Insert the sector C into the holes indicated on the footboard 5 as shown.
Fix the footboard legs 2 to the footboard 5 by twisting the sector screw D using the sector key L. Tighten properly.


Fix the bracket I to the footboard 5 using the screw F.

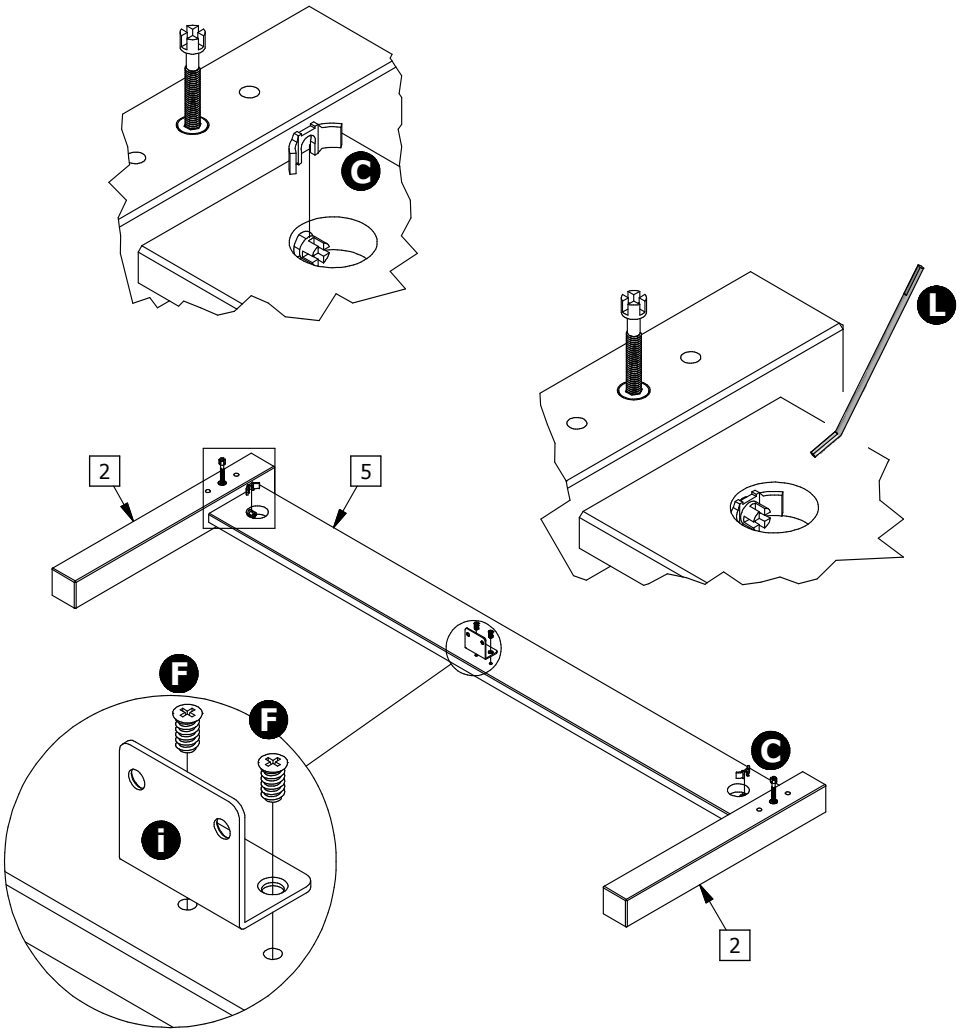

# Assembly Instructions


## Step 8

Pour a drop of glue K into all the holes indicated on the headboard 6 before placing the headboard upright 1.
Push tightly together.

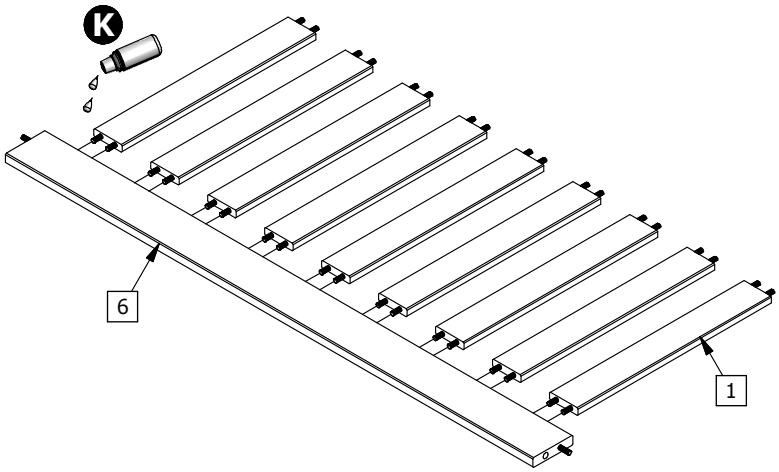



## Step 9

Fix the 2nd headboard 6 by following the instructions in step 8.
All 9 pieces in one step.

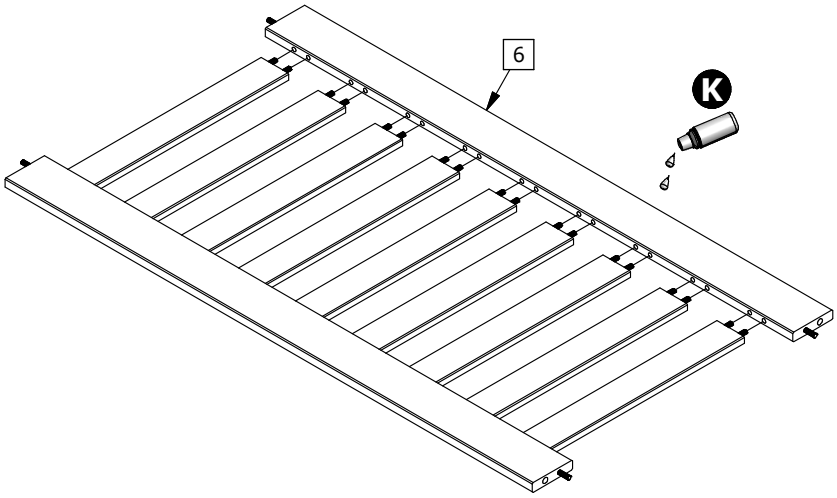


## Step 10

Push the headboard legs 3 and 4 onto the headboard 6 and 7 as shown.
Ensure that the headboards are faced correctly.

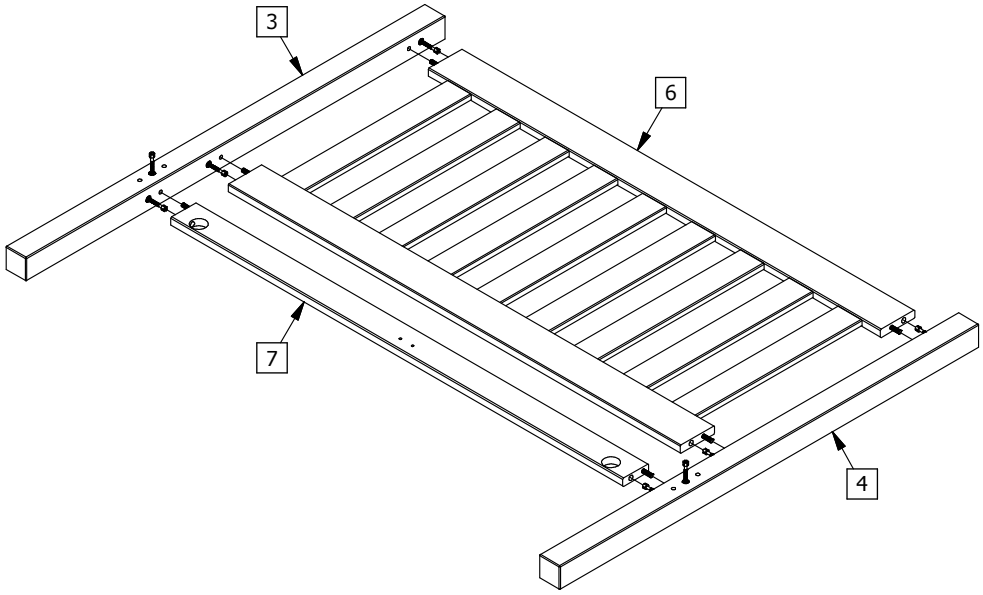


# Assembly Instructions

## Step 11

Insert the sector C into the holes indicated on the headboard 6 and 7 as shown.
(4 of them are located on the opposite side)
Fix the headboard legs 3 and 4 to the headboard 6 and 7 by twisting the sector screw D using til sector key L.
Tighten properly.


Fix the bracket I to the headboard 7 using the screw F.

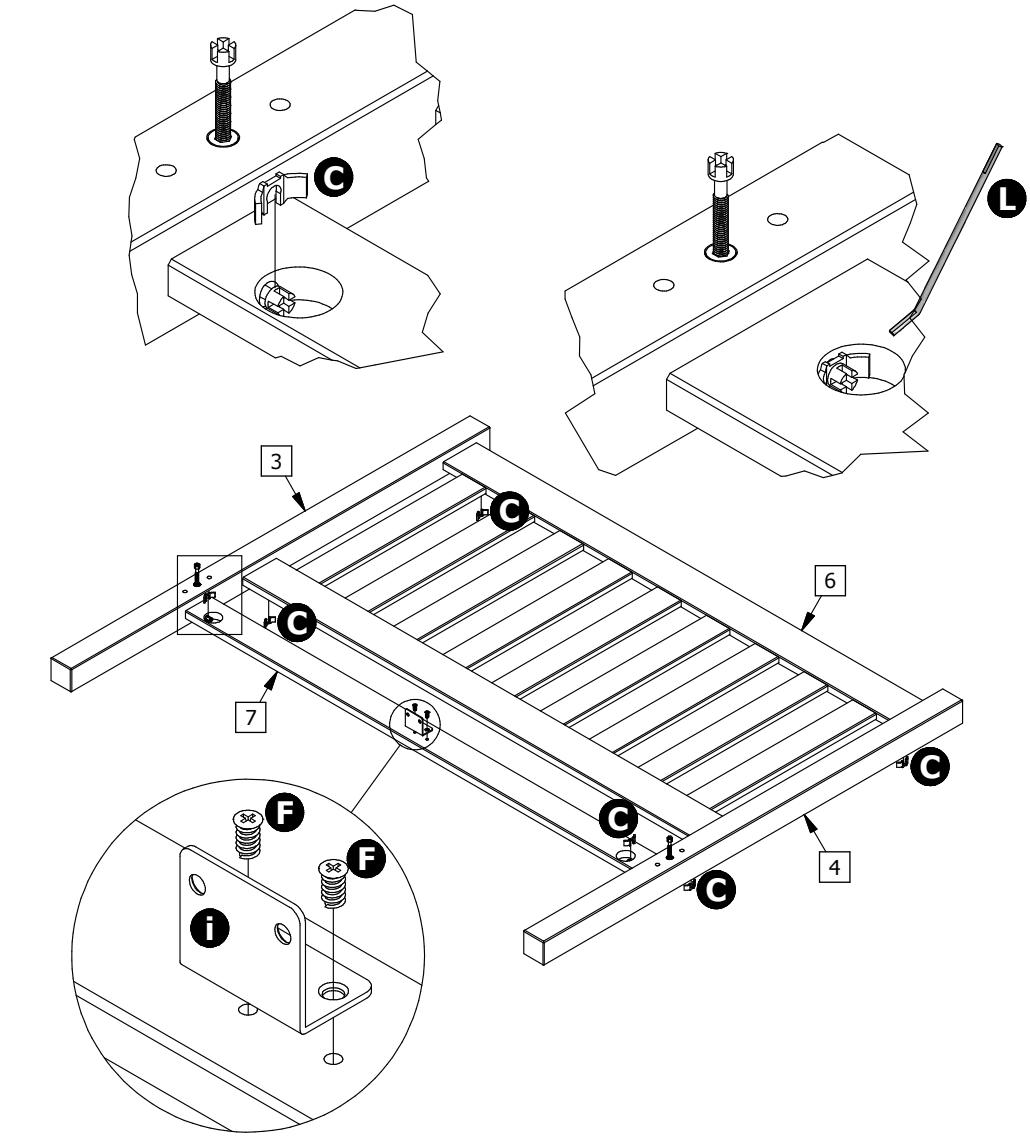


## Step 12

Knock the dowel A into the holes indicated on the bed side 8 using a small hammer.


Fix the rail 9 to the bed side 8 using the screw E and the allen key M

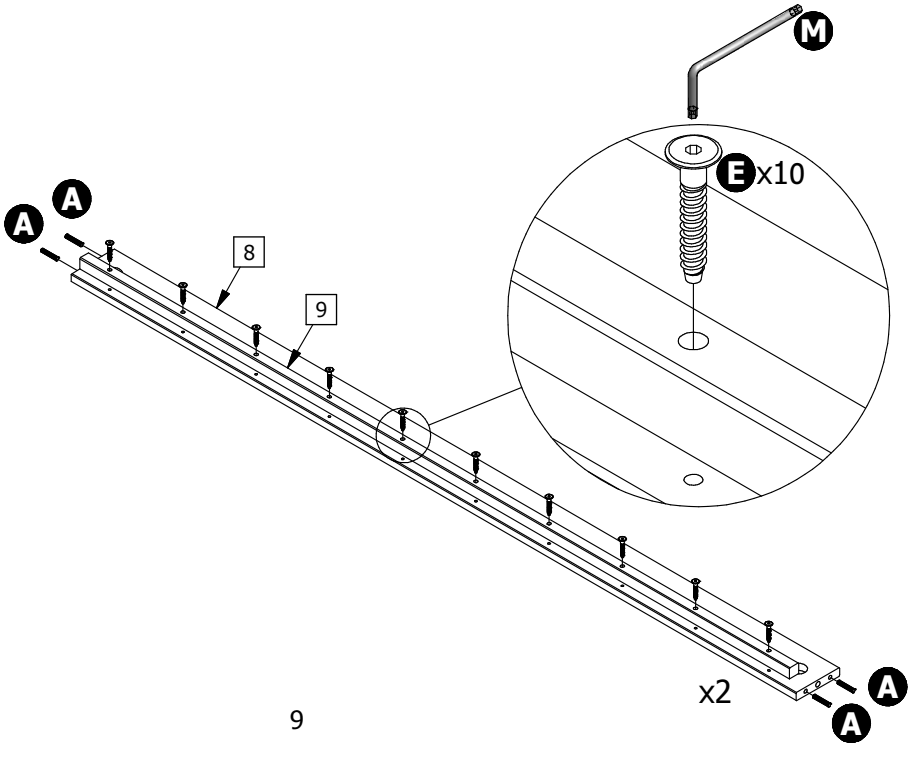

# Assembly Instructions


## Step 13


Push the bed side 8 onto the headboard and the footboard as shown. Ensure that both the headboard and the footboard are faced correctly.

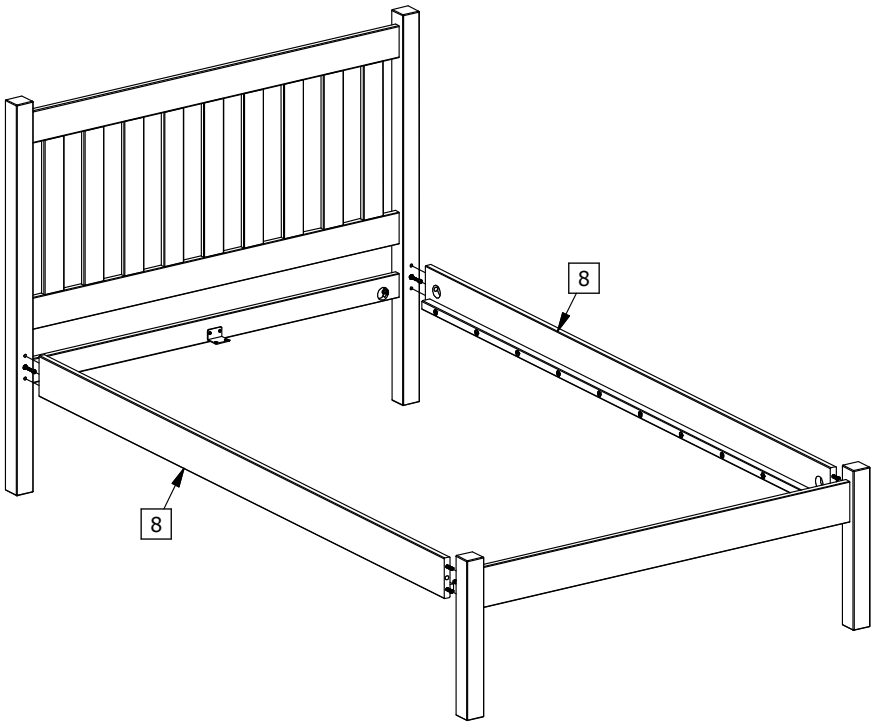



## Step 14

Insert the sector C into the holes indicated on the bed side 8 as shown. Fix the bed side 8 to the footboard and the headboard by twisting the sector screw D using the sector key L. Tighten properly.

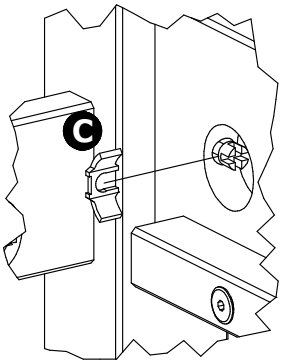

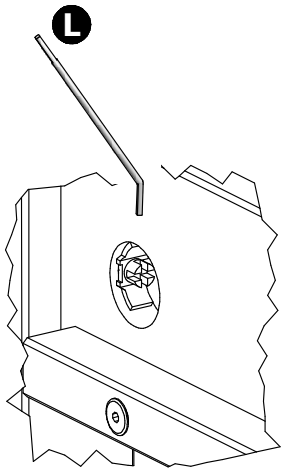


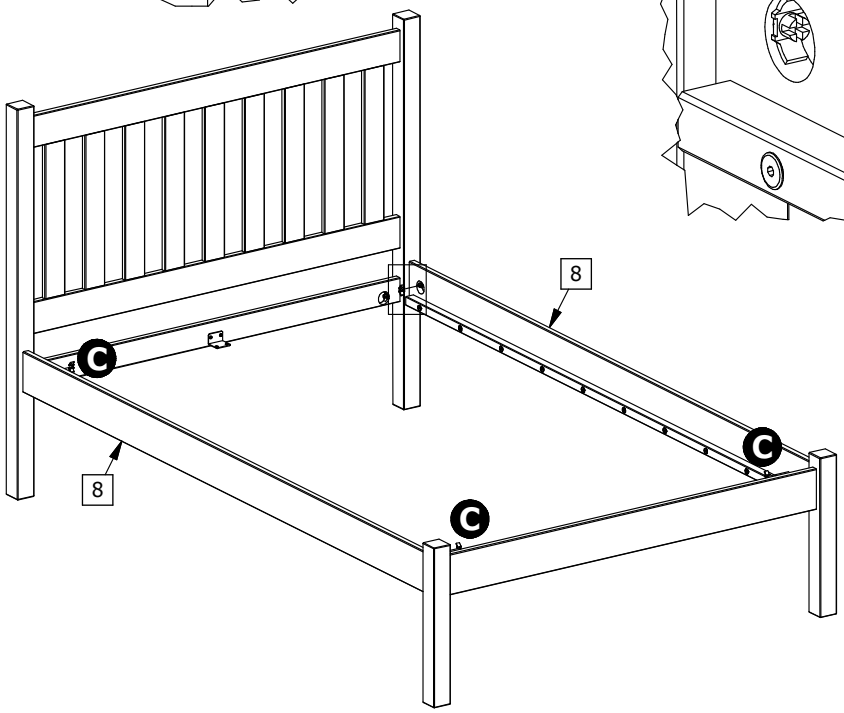
# Assembly Instructions

## Step 15

Place the center rail 11 on the brackets I, fix it to the brackets using screw F.

Place the center legs 12 under the center rail 11, fix it using screw G.

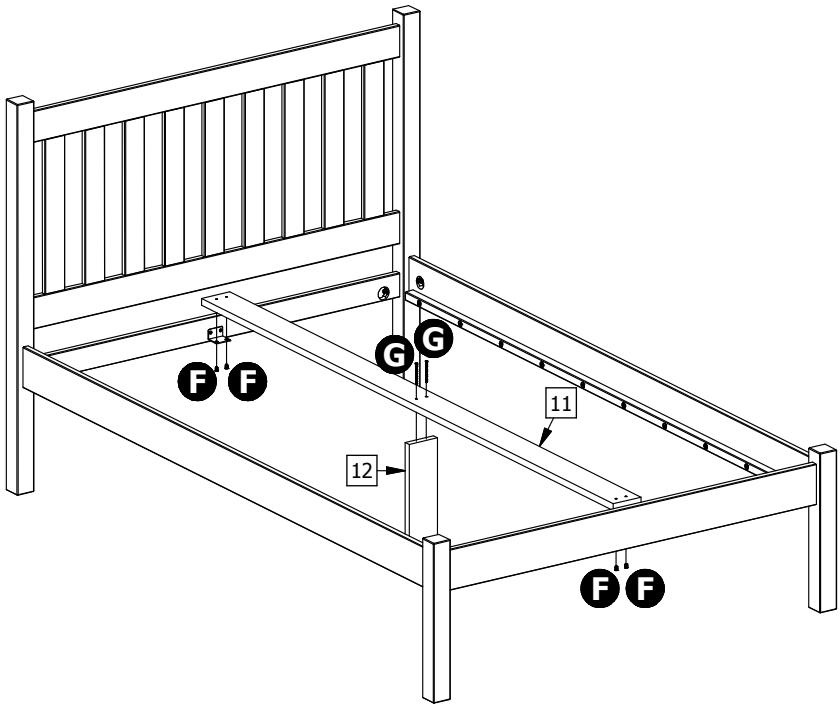



## Step 16

Place the slats 10 onto the rail 9.

Ensure there is approximately the same distance between the slats.


Fix the slats using the screw H.

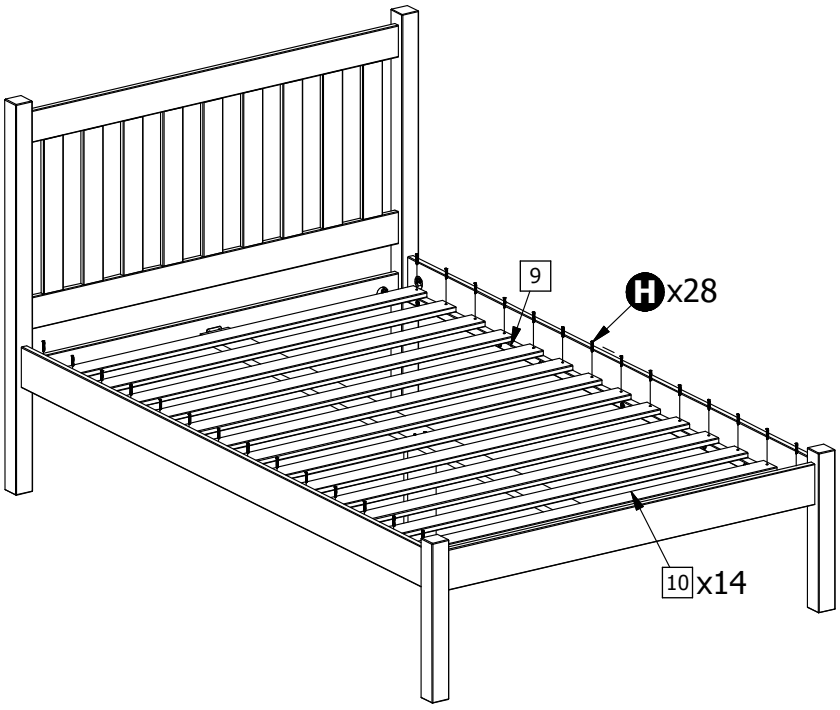

# Assembly Instructions

## Step 17

Place the cap J onto the holes on the headboard 6.

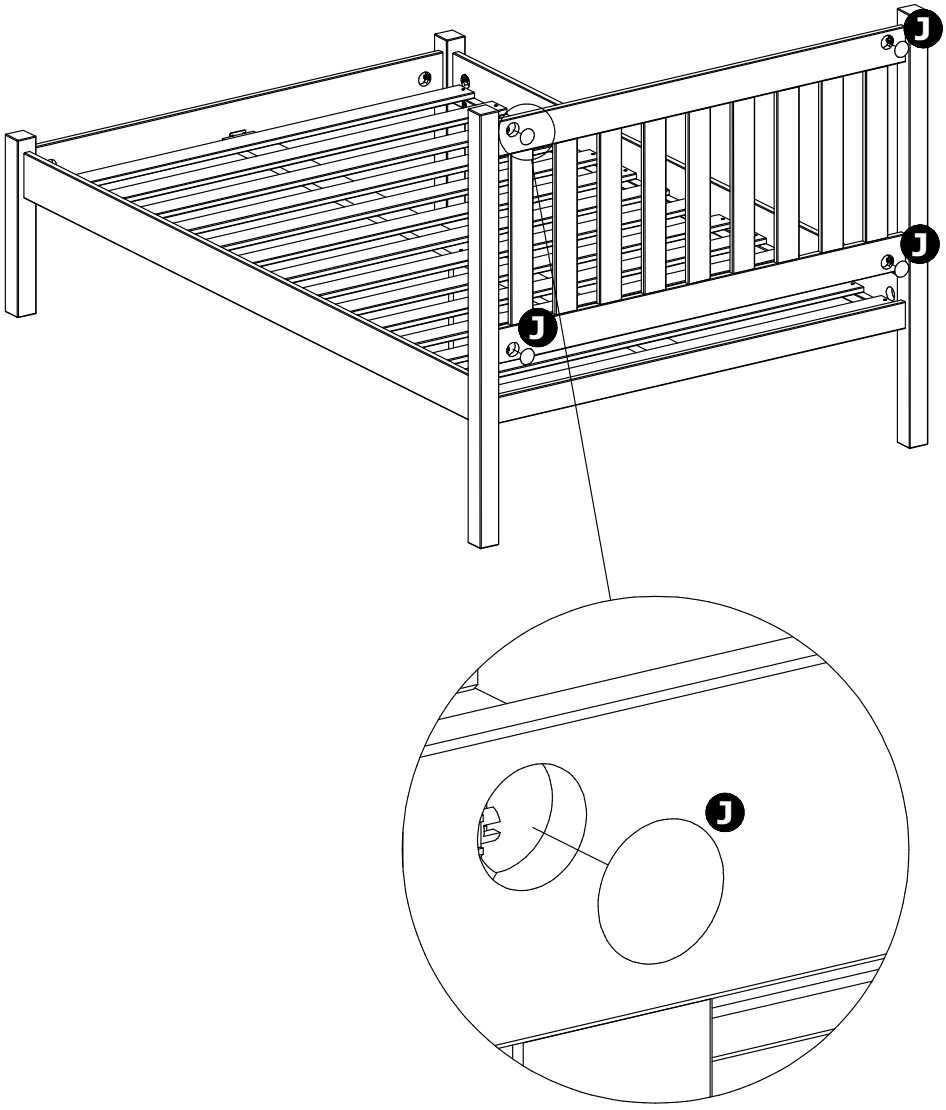


**Assembly is complete.**

If you need help or have damaged or missing parts, **call the Customer Helpline: 03456 400 800**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW