
Sparkle - 2 Door Robe

Assembly Instructions - Please keep for future reference

417/8385

413/3052

414/1343

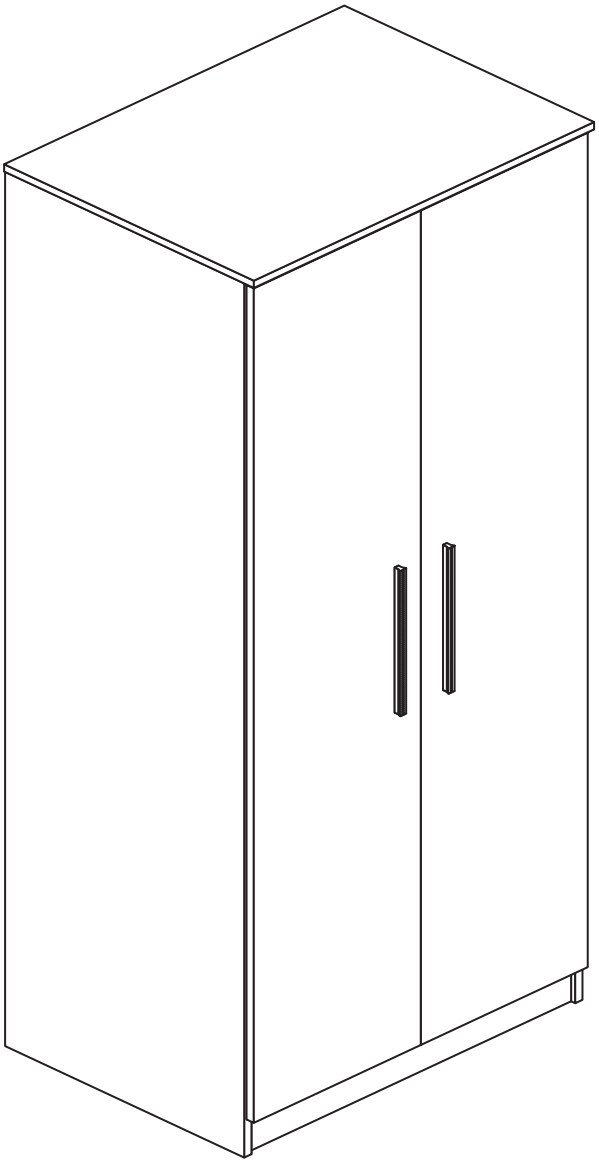

Dimensions

Width - 70.3cm

Depth - 51.6cm

Height - 182.3cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Issue 3 - 02/10/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 46kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.


Care and maintenance


• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

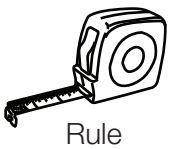
Rule



Spirit level


Eye protection (when using a hammer or drill)


Cross-head screwdriver



Electric drill (only use when drilling into walls)


Step ladder

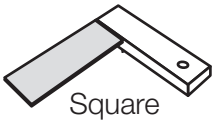
Square


Scissors


Hammer


Bradawl


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

When applicable, remove any protective film before use

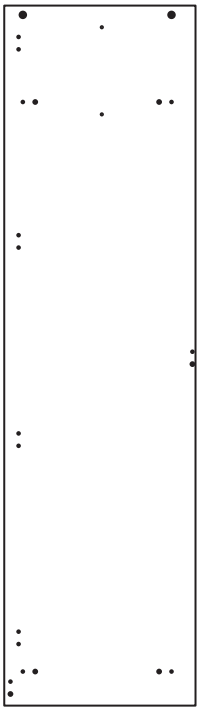

1 Left Side *(DF3837)*
(180.8 x 49.4cm)

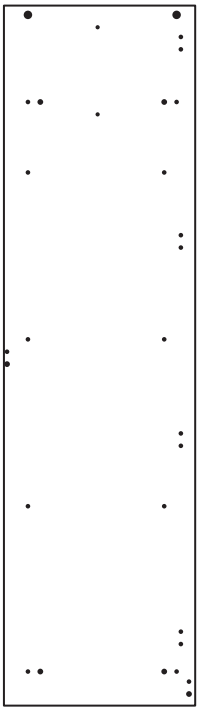

2 Right Side *(DF3838)*
(180.8 x 49.4cm)



3 Top *(DF3839)*
(70.3 x 51.6cm)




4 Horizontal *(DF3841)*
(66.9 x 49.2cm) x 2




5 Rail *(DF3840)*
(66.9 x 8cm) x 2

6 Hanging Rail *(FHR663)*
(66.3cm long)

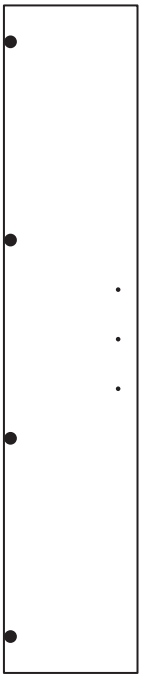

7 Door *(DF3842)*
(172.4 x 34.5cm) x 2

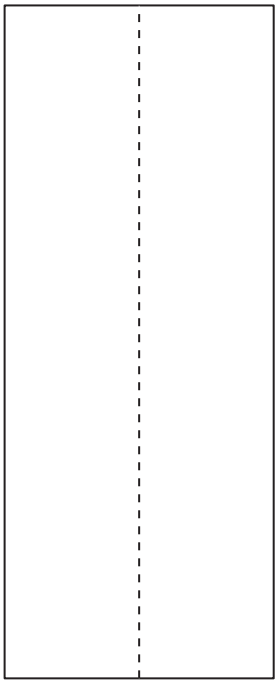


8 Back *(X1738-695)*
(173.8 x 69.5cm)

Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Metal dowel *(F901)* x 16

B 

Large locking nut *(F900)* x 16

C 

Wooden dowel *(F22)* x 16

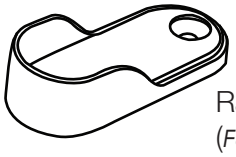D 


Rail Holder (*F891)* x 2

E 


25mm Screw *(F50)* x 6

F 


13mm Screw *(F63)* x 20

G 


Nail *(F51)* x 30

H 


Plastic Nail *(F91)* x 4

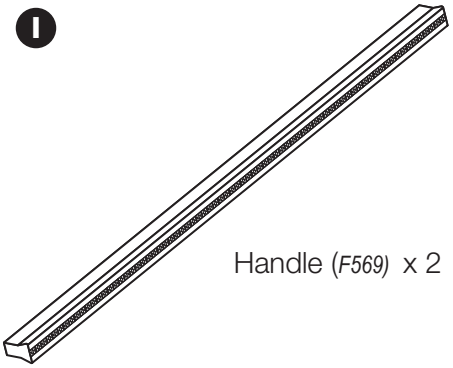I 

Handle (*F569)* x 2

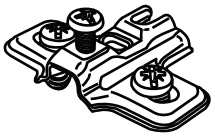
J 

Hinge plate (*F523)* x 8

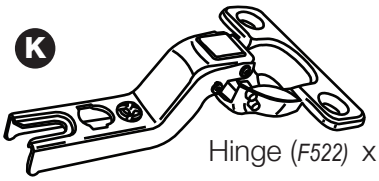K 

Hinge (*F522)* x 8

* * * ***Important:*** Always pair up the hinges with the hinge plates from the same bag. DO NOT mix them up. * * *

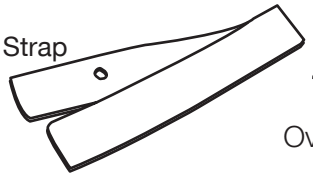L 


Strap 

Screw 

Washer x 2

Overbalance protector kit *(F269)* x 1

Ruler - Use this ruler to help correctly identify the screws

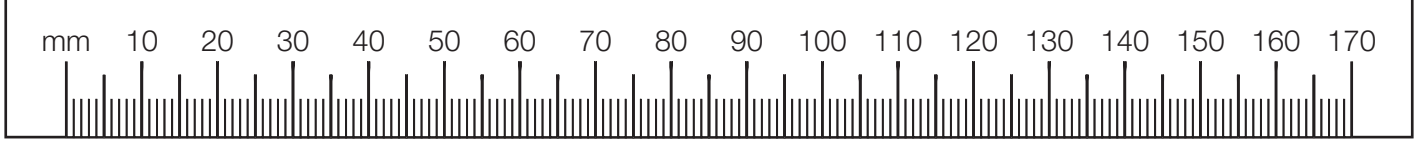

Assembly Instructions

Step 1

Prepare the left side

a: Screw 6 metal dowels **A** into the left side **1**.

Note: Tighten the metal dowels up fully against the panels.

Insert 2 large locking nuts **B** into the left side **1**.


Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Tap 2 wooden dowels **C** into the left side **1**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

b: To fit the rail holder **D** screw through the top hole with screw **F** and into the mark hole drilled in the left side **1**. Make sure that it is fitted straight, in line with the panel edges and then fit another screw **F** using the lower hole.

Fit 4 hinge plates **J** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

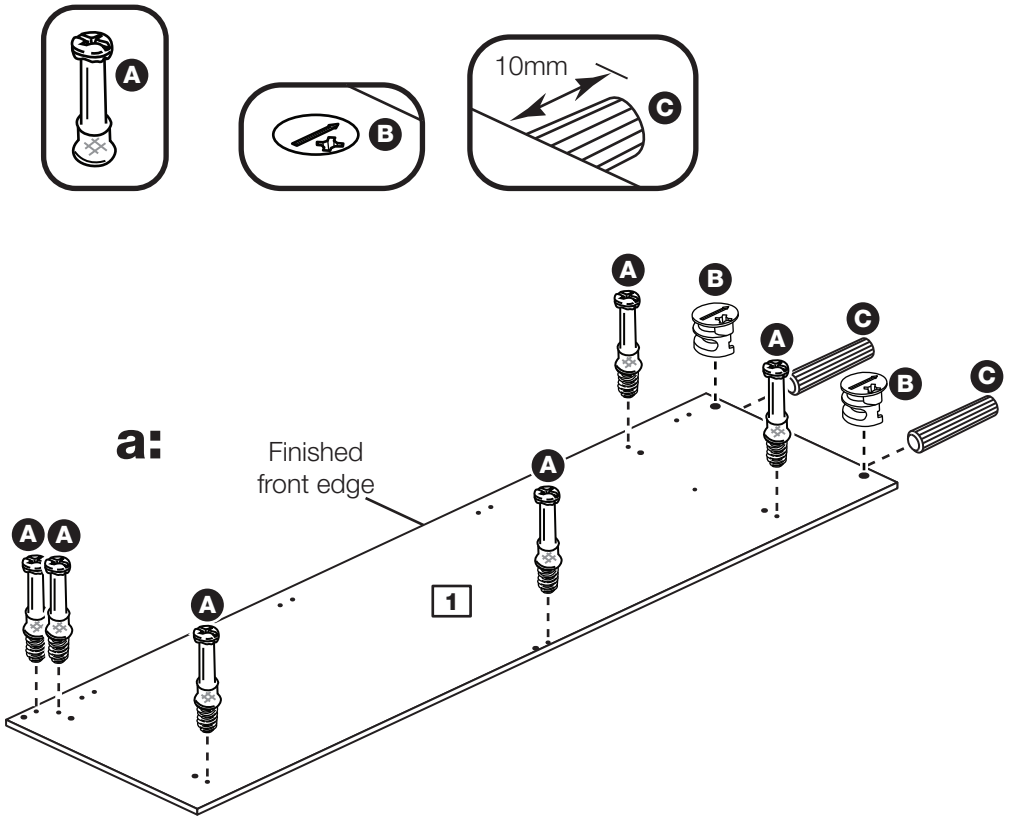

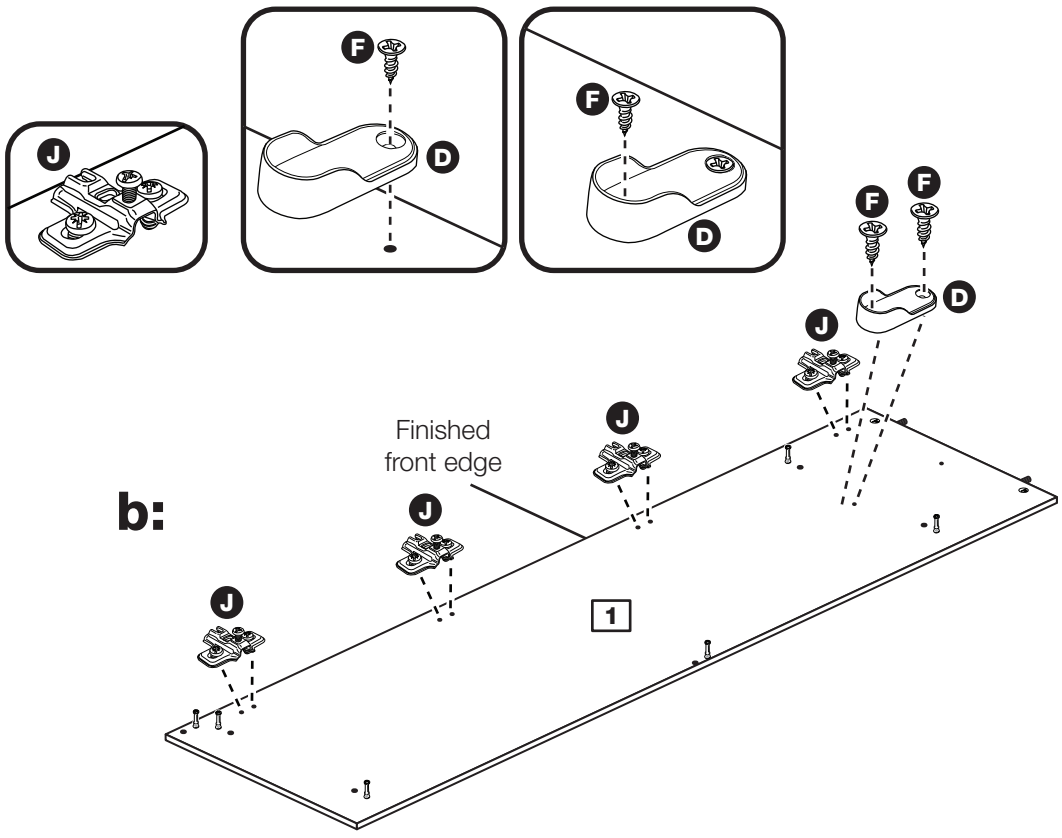

Assembly Instructions

Step 2

Prepare the right side


a: Screw 6 metal dowels (A) into the right side [2].


Insert 2 large locking nuts (B) into the right side [2].


Tap 2 wooden dowels (C) into the right side [2].

b: To fit the rail holder (D) screw through the top hole with screw (F) and into the mark hole drilled in the right side [2]. Make sure that it is fitted straight, in line with the panel edges and then fit another screw (F) using the lower hole.

Fit 4 hinge plates (J) onto the right side [2], making sure that the slot is facing towards the finished front edge.

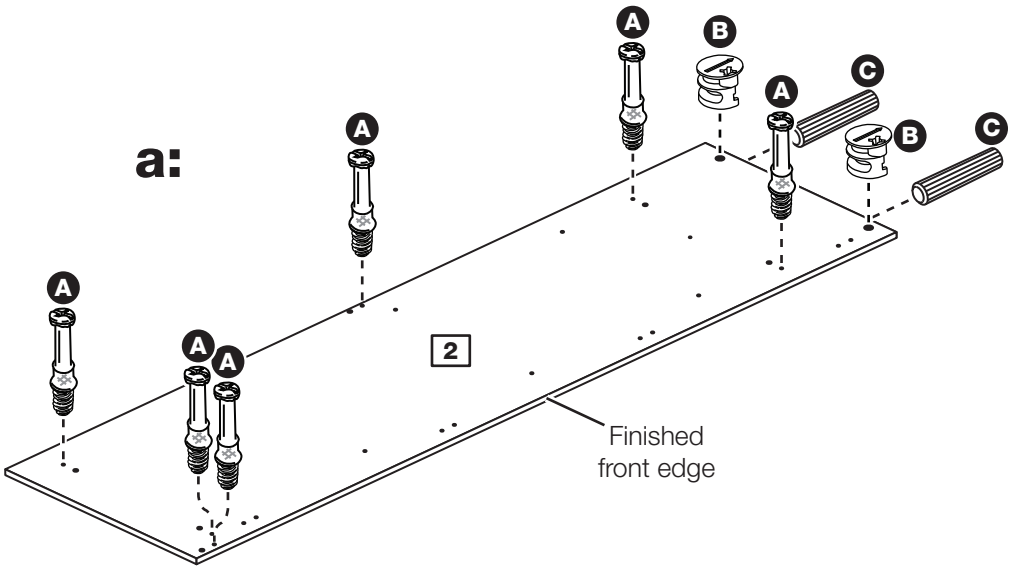

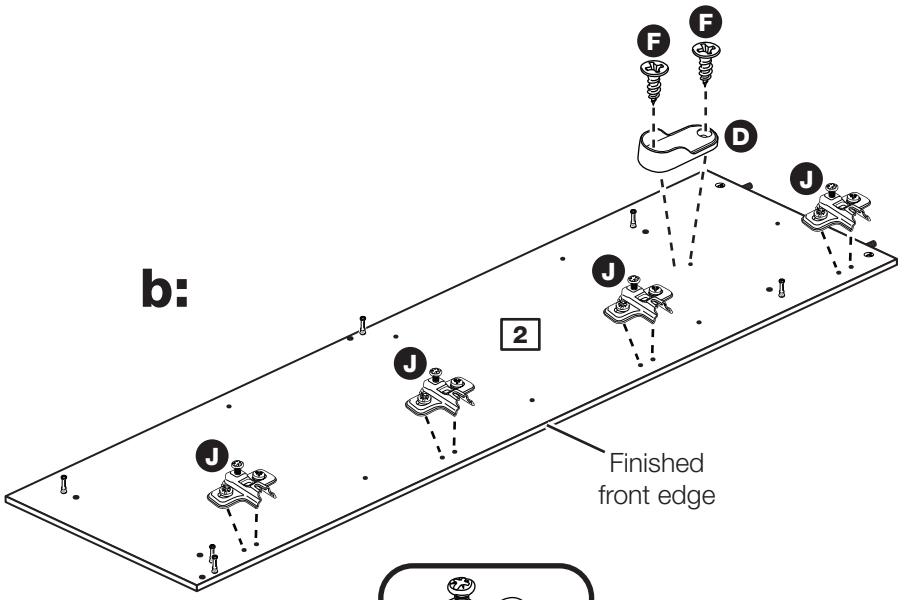

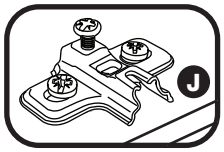


Step 3

Prepare the 2 horizontals

Insert 4 large locking nuts (B) into each of the horizontals [4].

Tap 4 wooden dowels (C) into each of the horizontals [4].

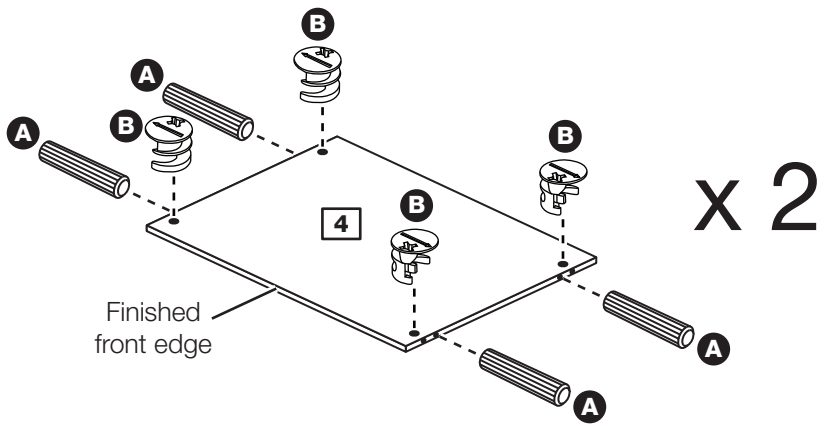


Step 4

Fit the 2 horizontals to the right side

Push the 2 horizontals [4] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (B) fitted to each horizontal [4].

Note: Turn the large locking nuts (B) as far as they will go - more than 1/2 a turn.

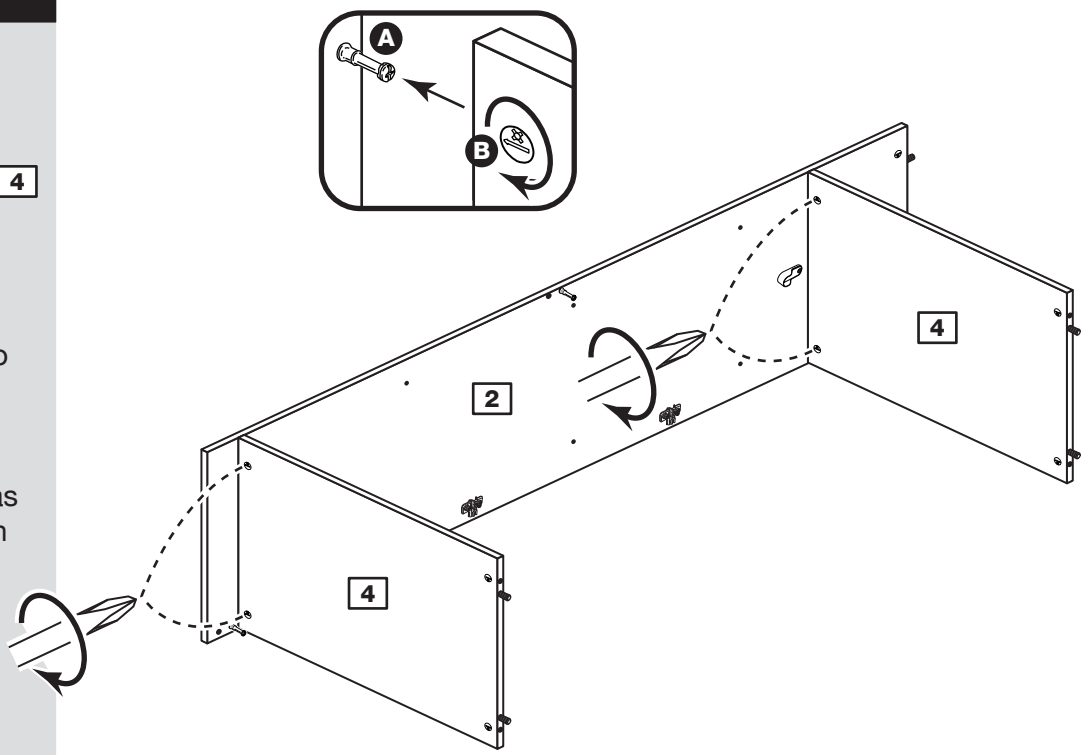


Step 5

Prepare the 2 rails

Insert 2 large locking nuts (B) into each of the rails [5].

Tap 2 wooden dowels (C) into each of the rails [5].

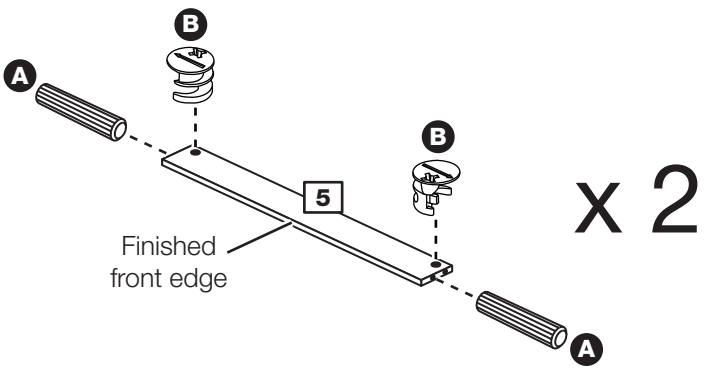


Step 6

Fit the 2 rails

Push the 2 rails [5] onto the right side [2].

Use a screwdriver to tighten the large locking nut (B) fitted to each rail [5].

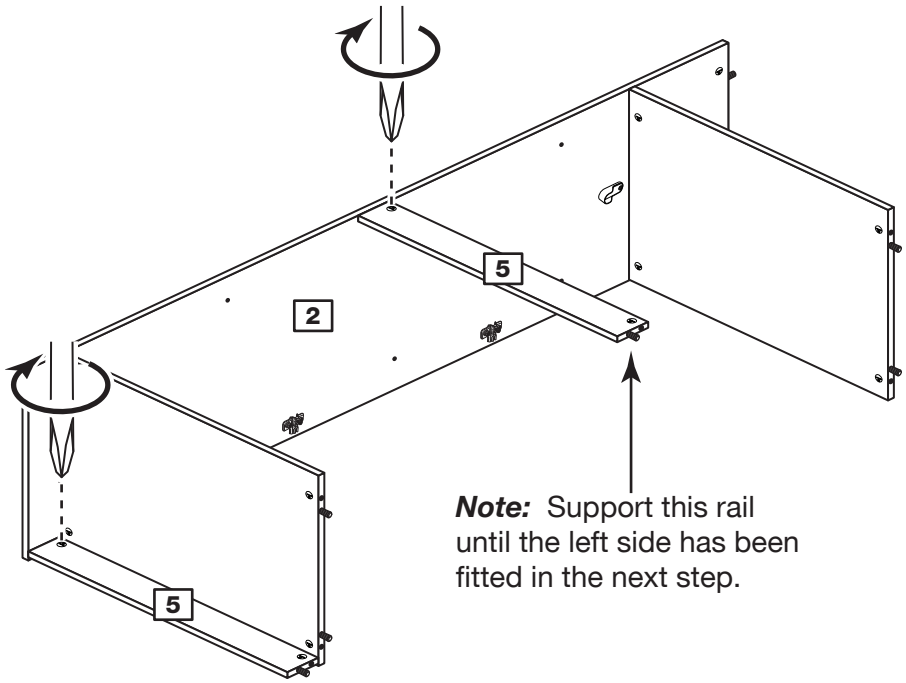


Step 7

Fit the left side

Push the left side [1] onto the assembly.


Use a screwdriver to tighten the 6 large locking nuts (B) fitted to the horizontals [4] and the rails [5].

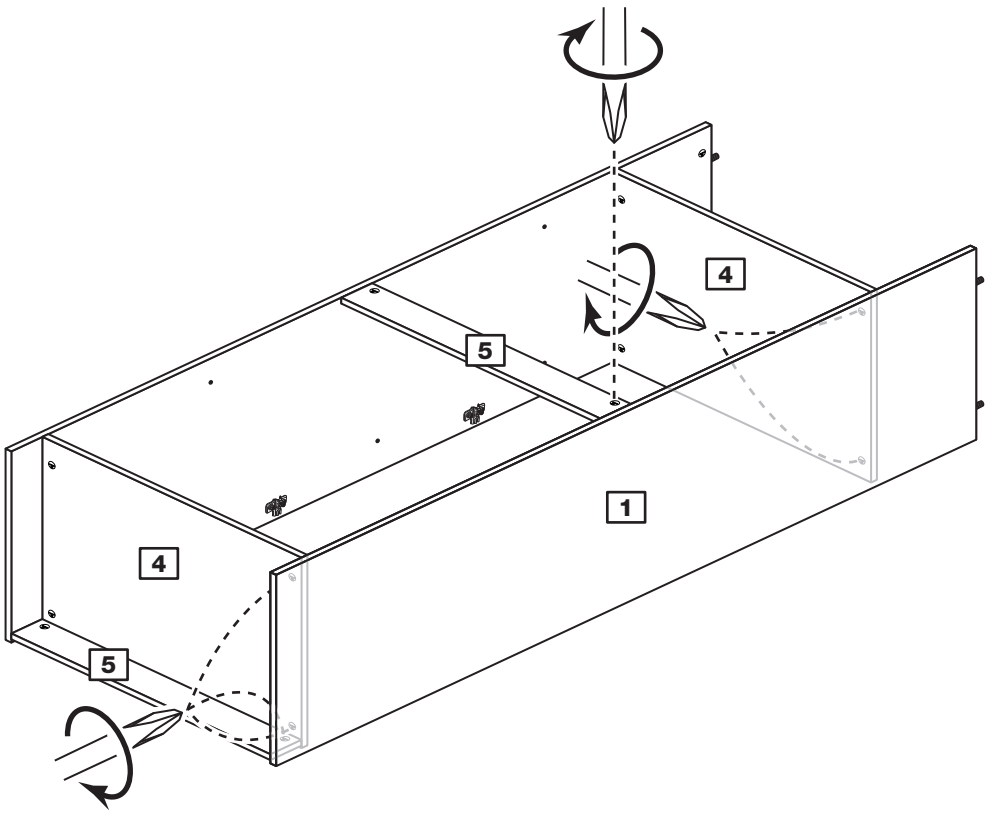

Step 8

Prepare the top

Screw 6 metal dowels (A) into the top [3].

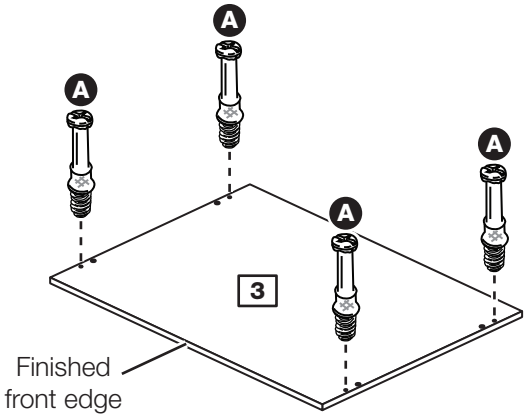


Step 9

Fit the top

Note: To make it easier to fit the top and base panels, place polystyrene blocks from the packaging underneath the side panels to raise the assembly.

Push the top [3] onto the assembly.

Use a screwdriver to tighten the 2 large locking nuts (B) fitted to each side [1] and [2].

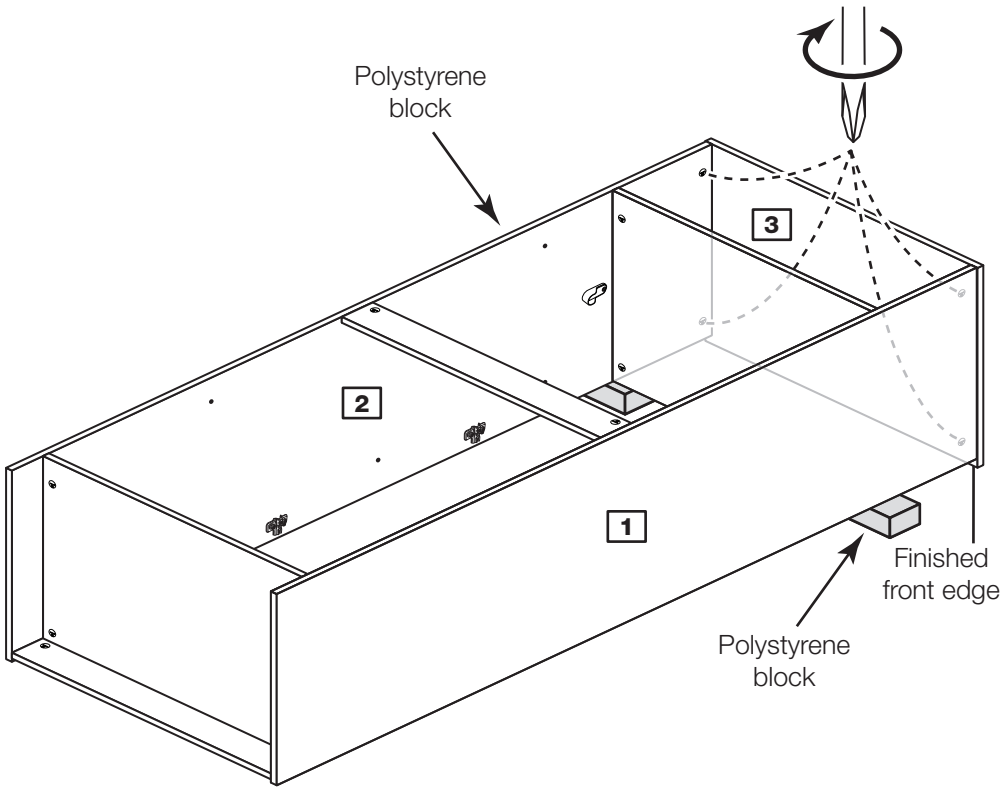

Step 10

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back [8] onto the unit.

Nail (G) around the outside edges of the back [8].

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.


a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

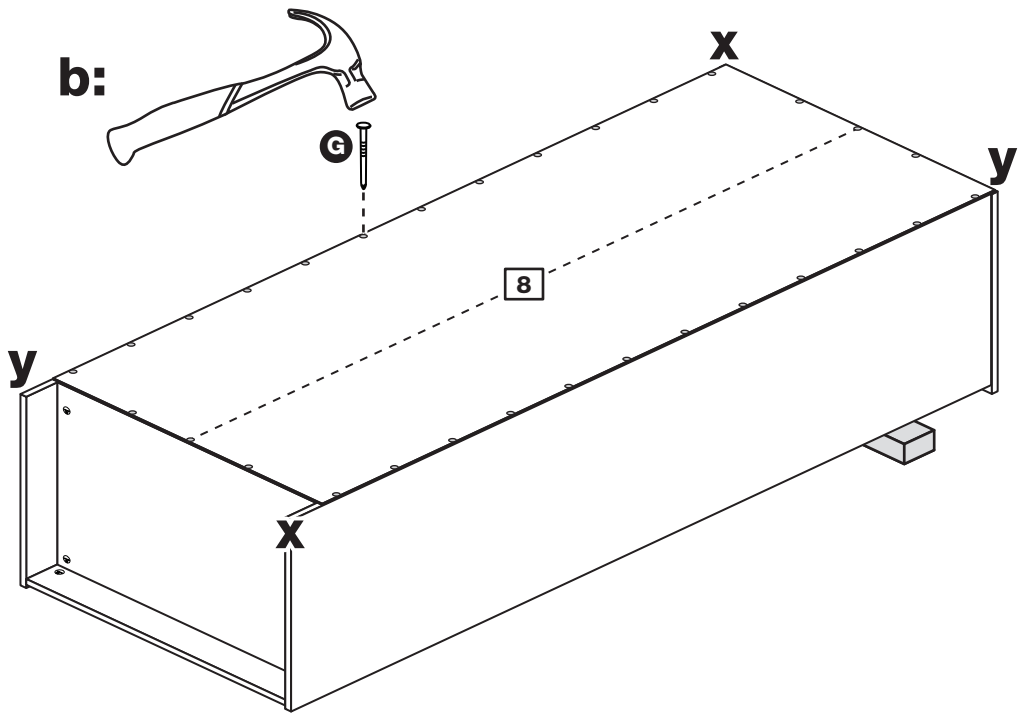

Step 11

Fit the 4 plastic nails

Tap 2 plastic nails (H) into the bottom edge of each of the sides [1] and [2].

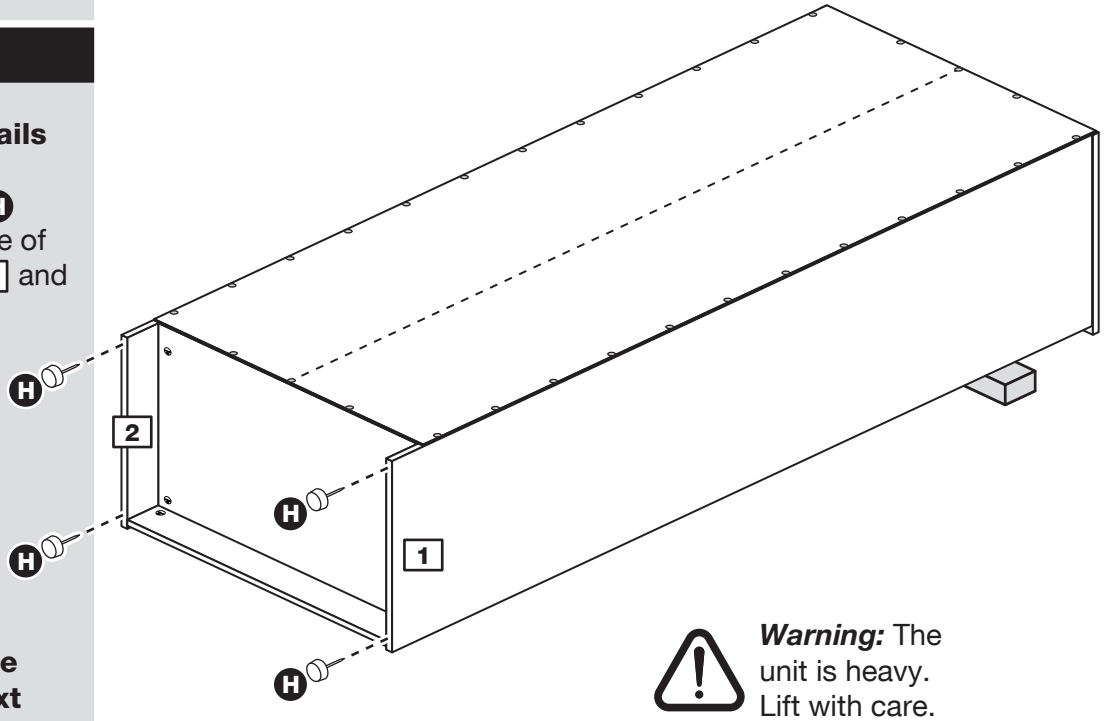


Carefully stand the unit up for the next step.


Warning: The unit is heavy. Lift with care.

Step 12

Fit the hanging rail

Push the hanging rail 6 into the rail holders D fitted to the side panels.

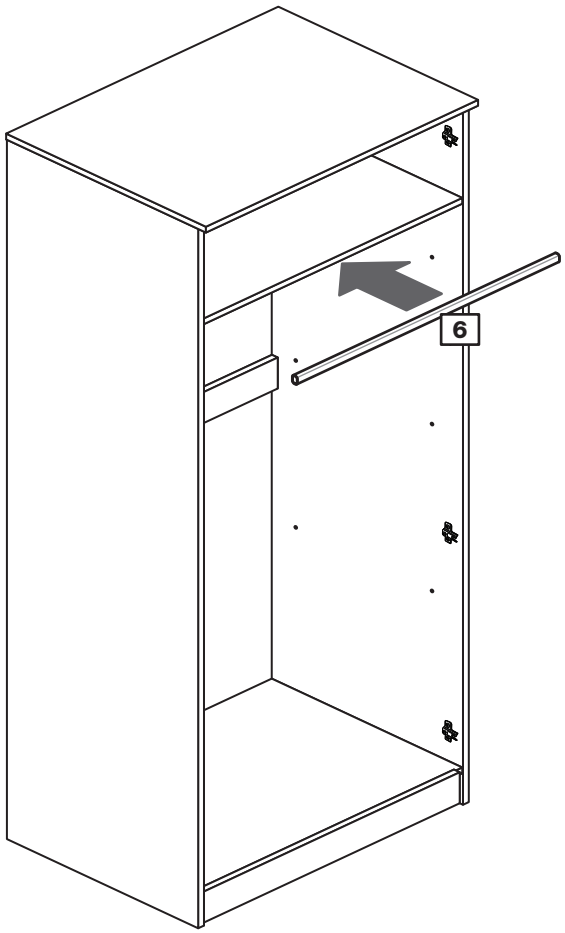

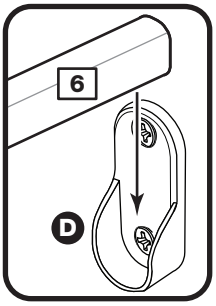


Step 13


Prepare the 2 doors

Push fit 4 hinges K into each of the 2 doors 7.

Secure each hinge with 2 screws F.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

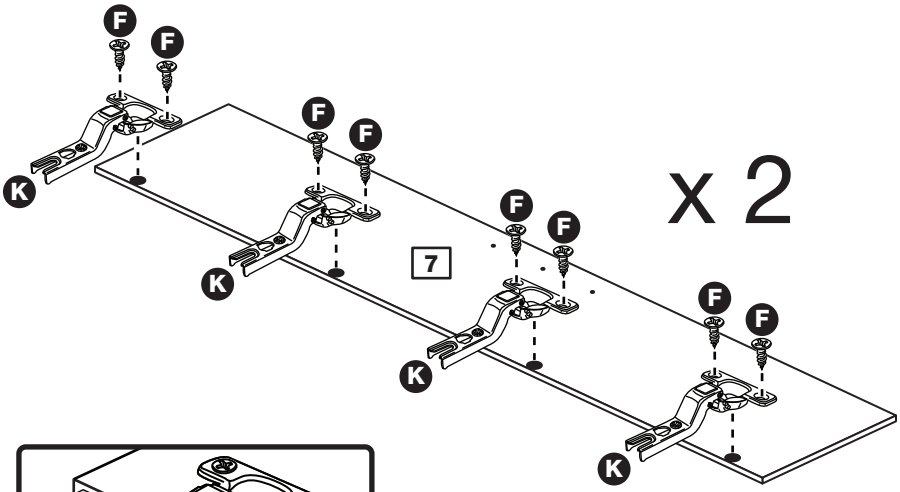

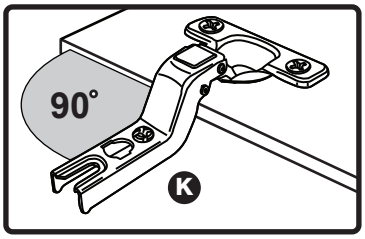

Step 14

Fit doors and handles

Note: The easiest way to attach each door [7] is to fit the top hinge first, then align and fit the other hinges.


a: Push the hinge (K) onto the front part of the hinge plate (J).
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge (K) FLAT against the hinge plate (J) as you slide it across as far as it will go. Tighten screw A.

c: The hinge (K) must be flat against the hinge plate (J) prior to any adjustment.

d: The hinge (K) must NOT be AT AN ANGLE to the hinge plate (J) when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle (I) to each door [7] using 3 screws (E).

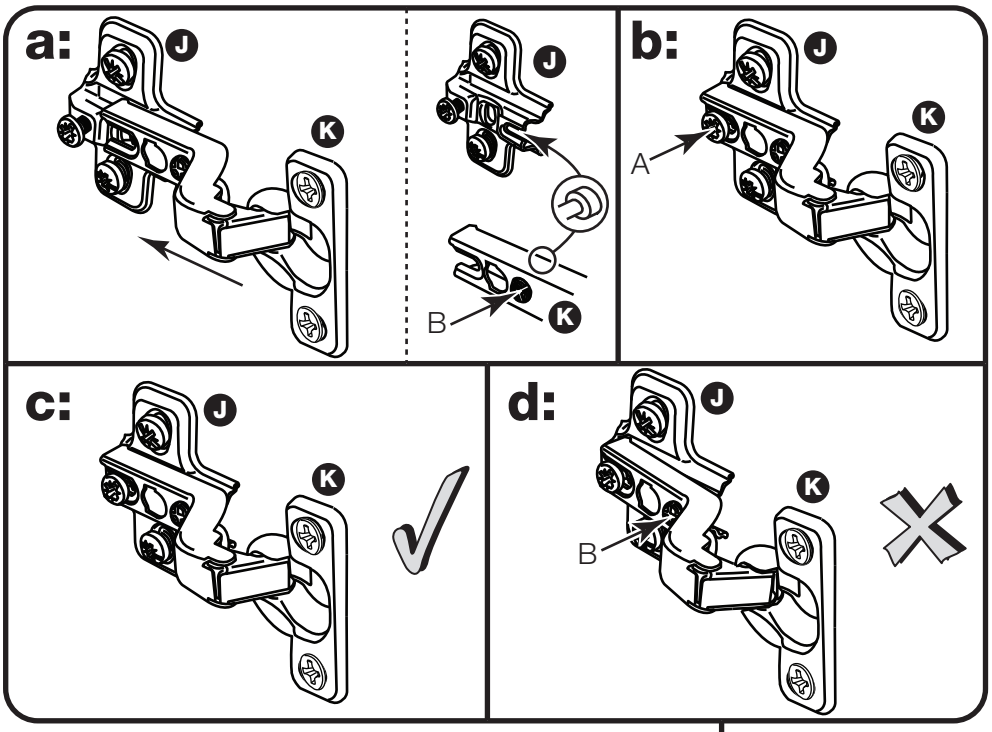

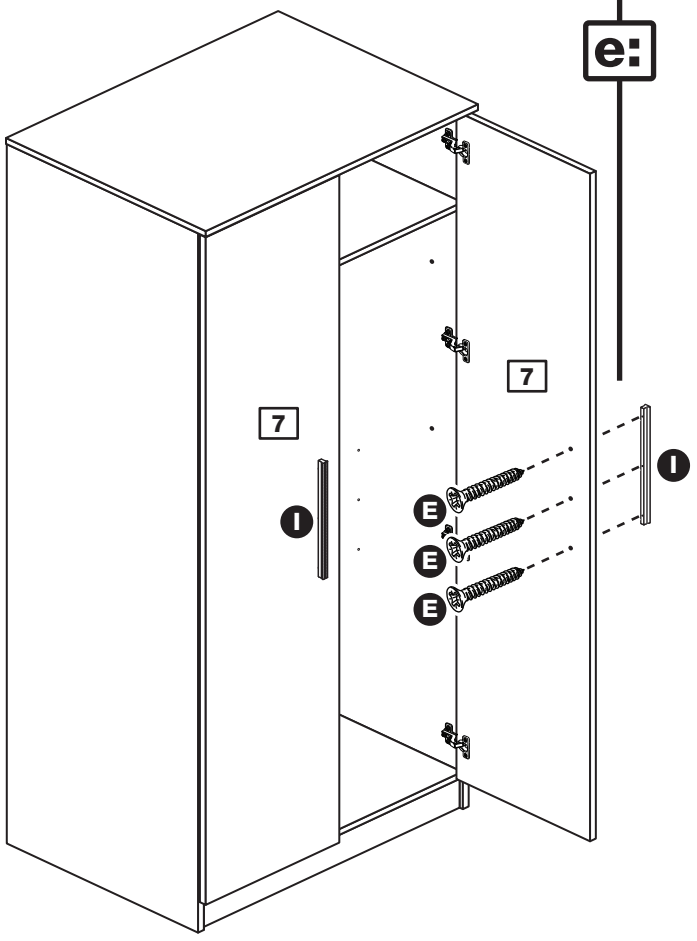

Step 15


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door ‘out’ loosen screw C.
To move door ‘in’ tighten screw C.

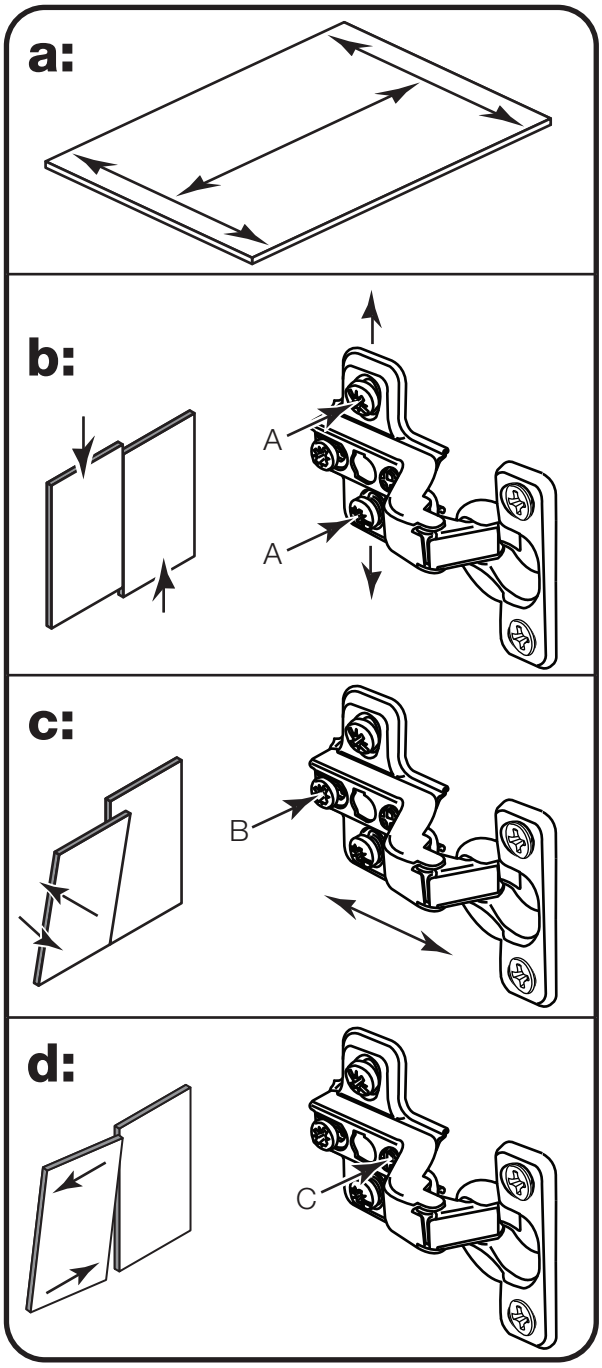

Step 16


Fit the overbalance protector

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit L to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete

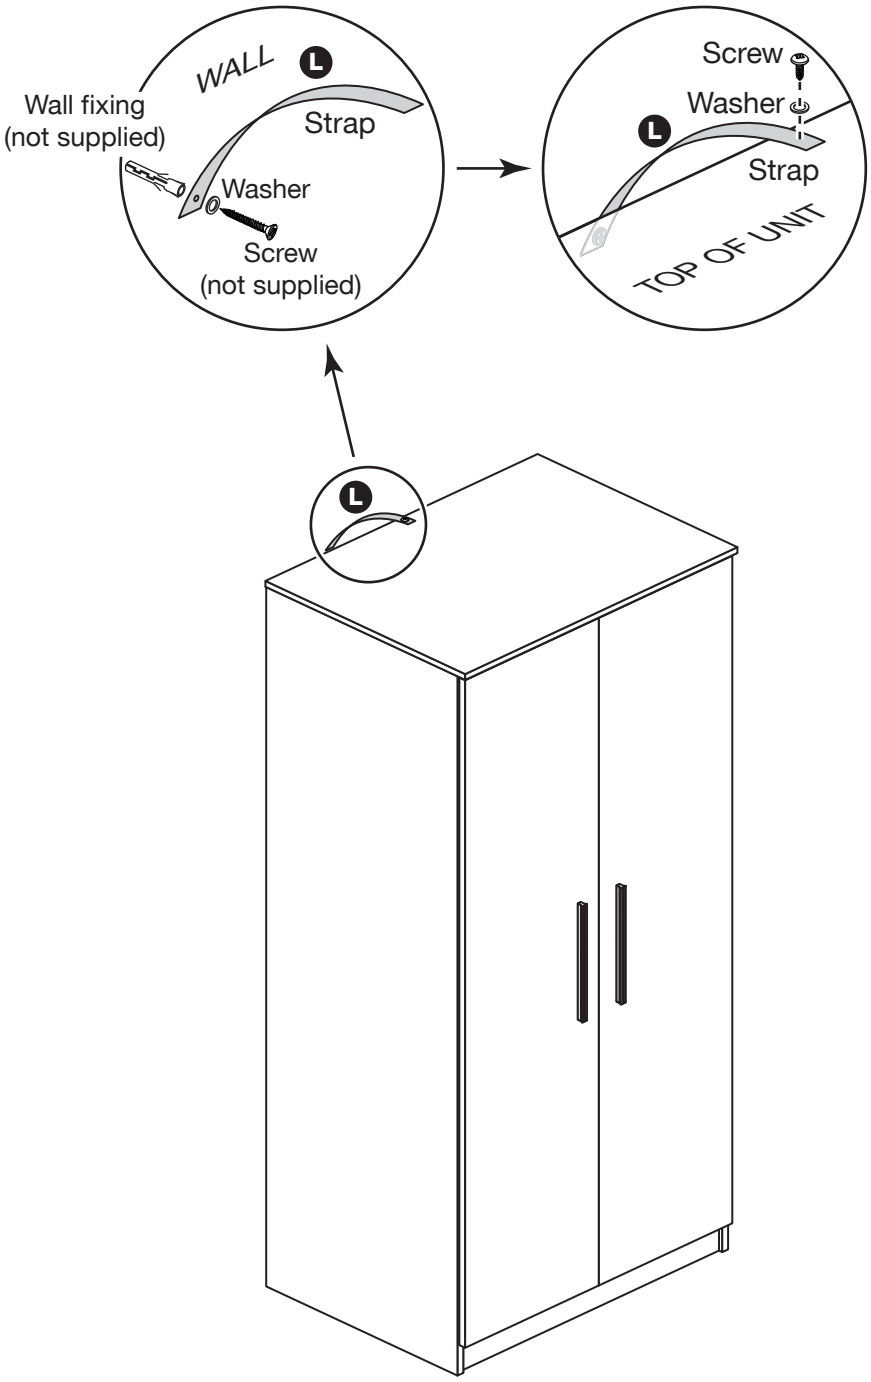

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020


Sparkle - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

411/3436

428/7094

418/1035

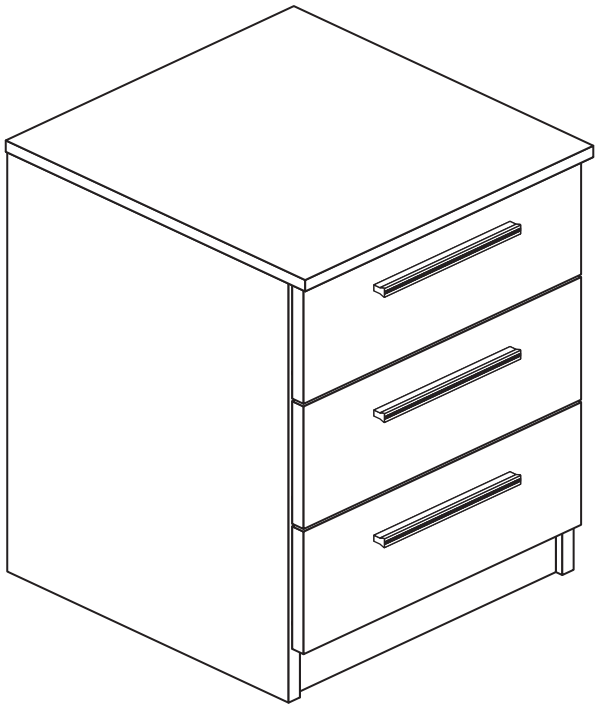

Dimensions
Width - 38.1cm
Depth - 39.6cm
Height - 57.1cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Issue 2 - 02/10/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 14kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film before use

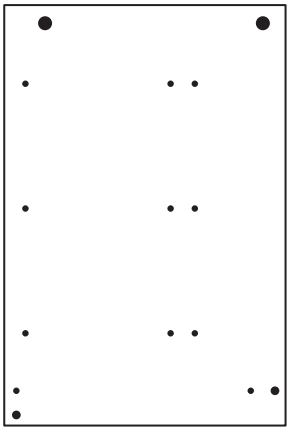


1 Left Side *(DF3853)*
(55.6 x 37.2cm)

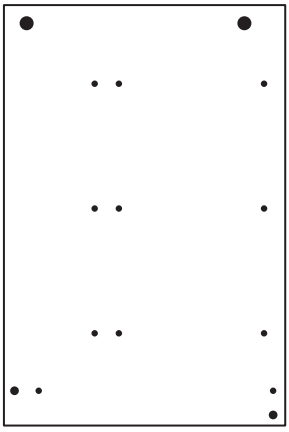


2 Right Side *(DF3854)*
(55.6 x 37.2cm)

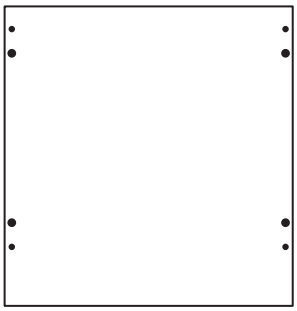

3 Top *(DF3806)*
(38.1 x 39.6cm)



4 Rail *(DF3807)*
(34.7 x 6cm) x 2

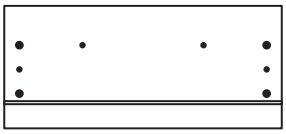

5 Drawer Front *(DF3808)*
(36.7 x 16.2cm) x 3




6 Left Drawer Side *(W370-124LH)*
(37 x 12.4cm) x 3




7 Right Drawer Side *(W370-124RH)*
(37 x 12.4cm) x 3



8 Drawer Back *(W314-124)*
(31.4 x 12.4cm) x 3



9 Drawer Base *(T325-367)*
(32.5 x 36.7cm) x 3



10 Back *(X531-373)*
(53.1 x 37.3cm)




Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Metal dowel *(F901)* x 14

B 


Large locking nut *(F900)* x 8

C 

Small locking nut *(F3)* x 6

D 

Wooden dowel *(F22)* x 8

E 

Nail *(F51)* x 14

F 

Knock-in Peg *(F171GY)* x 12

G 


25mm Screw *(F50)* x 6

H 

9mm Screw *(F74)* x 6

I 


9mm Screw (*F73)* x 12

J 

Plastic Nail *(F91)* x 4

K 

Wedgefix *(F639)* x 6

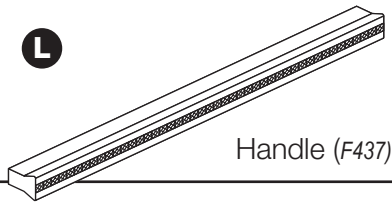
L 

Handle (*F437)* x 3

M 

Drawer runner *(F1004)* x 6

Tools required

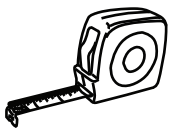

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

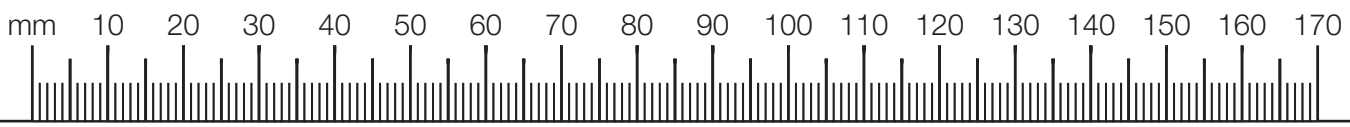


Assembly Instructions

Step 1

Prepare the 3 drawer fronts

Screw 2 metal dowels **A** into each of the drawer fronts **5**.

Note: Tighten the metal dowels up fully against the panels.

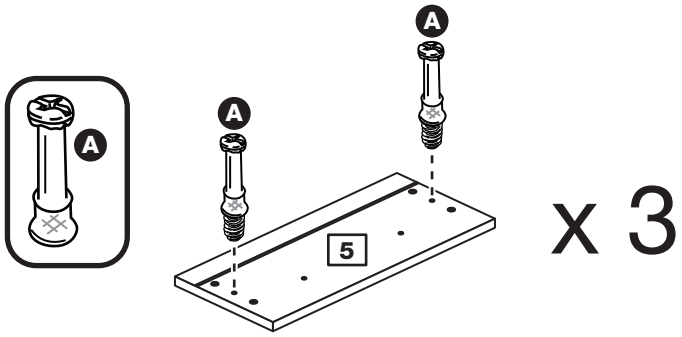


Step 2

Prepare the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side **6** and the right drawer side **7**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

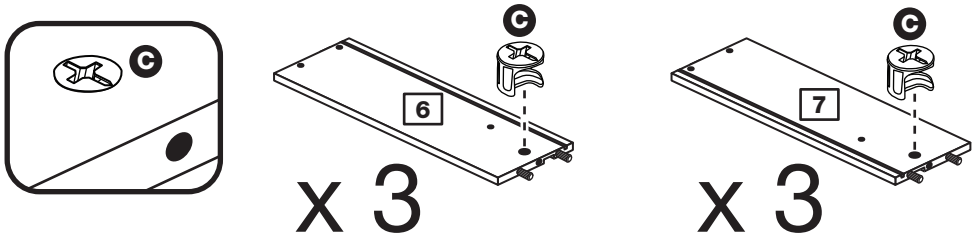


Step 3

Attach the drawer sides to the drawer fronts

Push the left drawer sides **6** and right drawer sides **7** onto the back of the drawer fronts **5**.

Turn the small locking nuts **C** on the left drawer side **6** and right drawer side **7**.

Note: Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

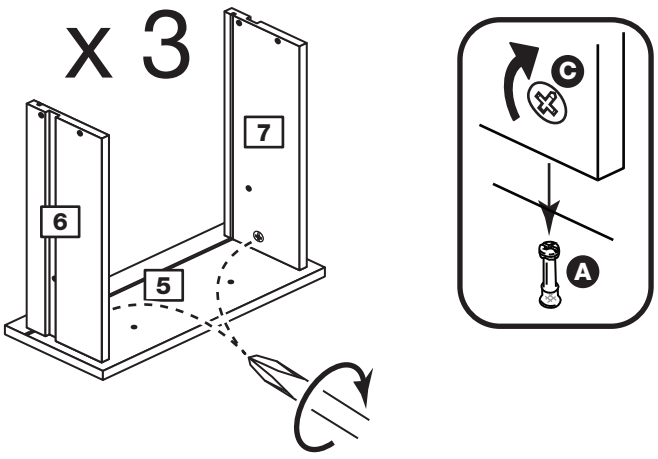


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base [9] down the grooves in the drawer sides [6] and [7] and down into the groove in the drawer front [5].

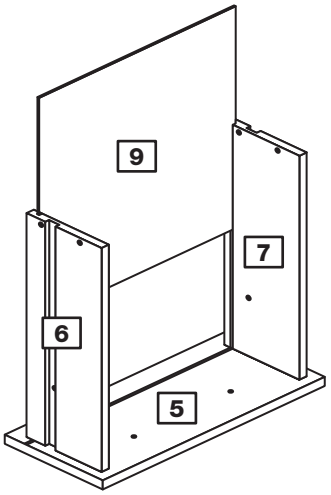


x 3

Step 5

Fit the drawer back

Fit the drawer back [8] between the drawer sides [6] and [7]. Make sure that the drawer base [9] fits into the groove in the drawer back [8].

Hold the drawer back [8] in position and tap the knock-in pegs (F) through the holes in the drawer sides [6] and [7].

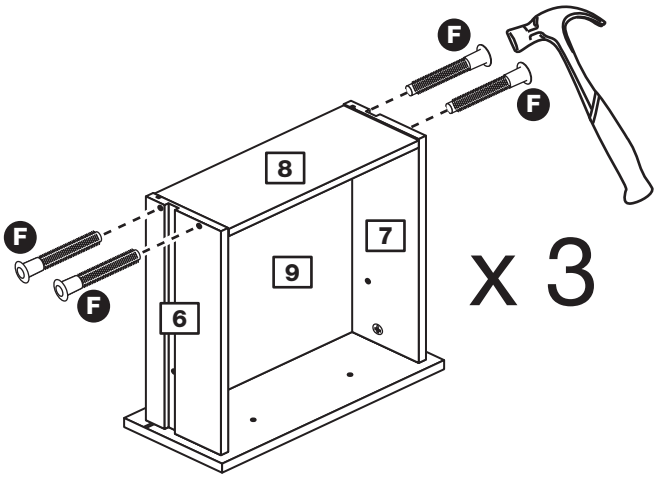


x 3

Step 6

Attach the handles

Attach a handle (L) to each of the drawer fronts [5] using screws (G).

Note: Do not overtighten the screw.

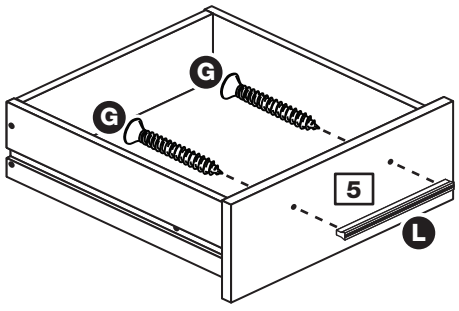


x 3


Step 7

Fit the wedgefixes

Turn the 3 drawer assemblies over and slide 2 wedgefixes (K) into the front and back grooves, as shown, and tighten up the screws.

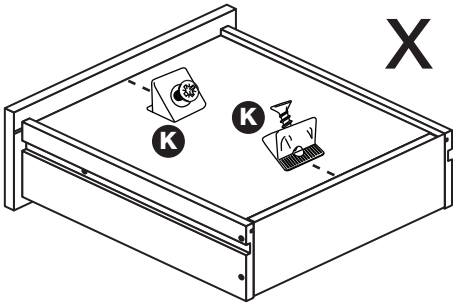

x 3

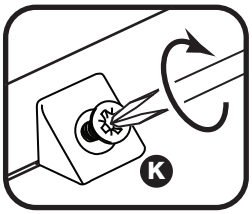

Step 8

Prepare the left side

a: Place 3 runners (M) on the left side [1] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).

b: Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the left side [1].


c: Screw 2 metal dowels (A) into the left side [1].


Insert 2 large locking nuts (B) into the left side [1].


Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.


Tap 2 wooden dowels (D) into the left side [1].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

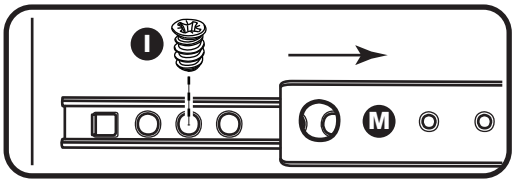

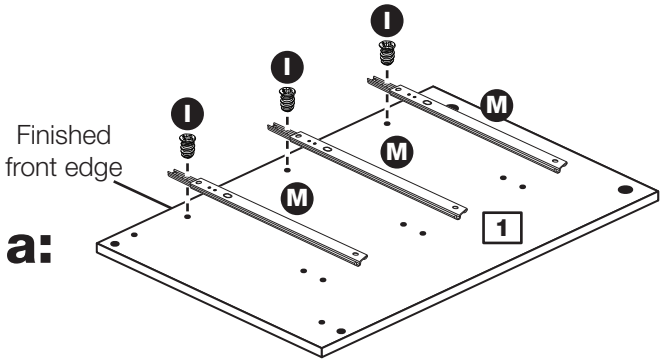

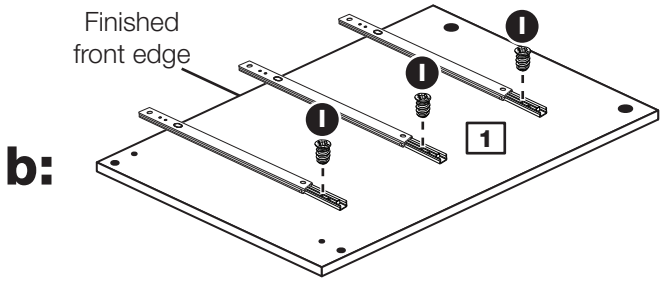

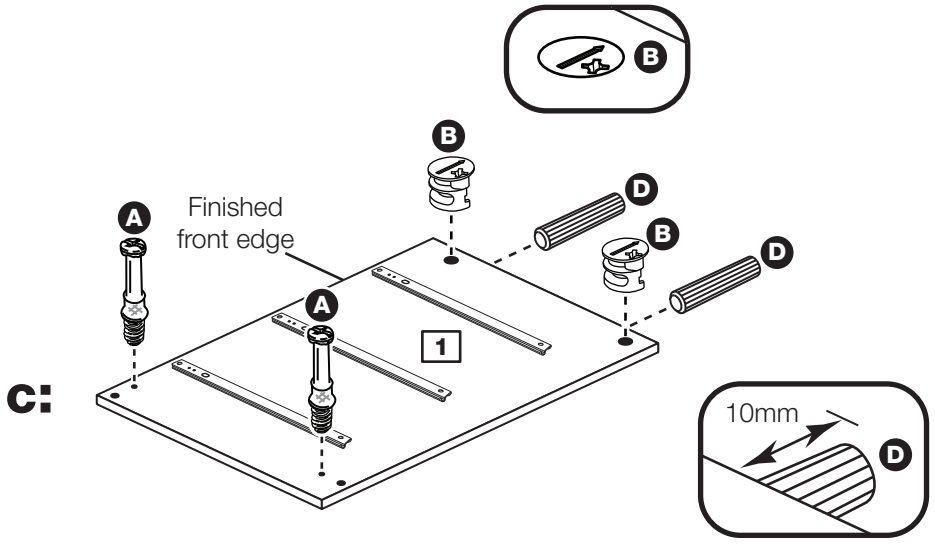

Step 9

Prepare the right side


a: Place 3 runners M on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.


c: Screw 2 metal dowels A into the right side 2.

Insert 2 large locking nuts B into the right side 2.


Tap 2 wooden dowels D into the right side 2.

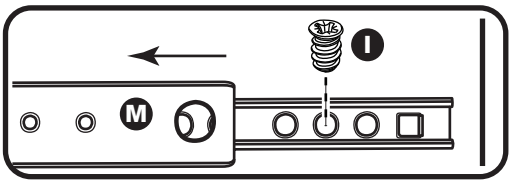


a:

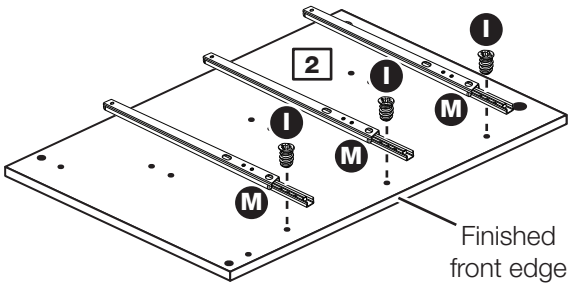

b:

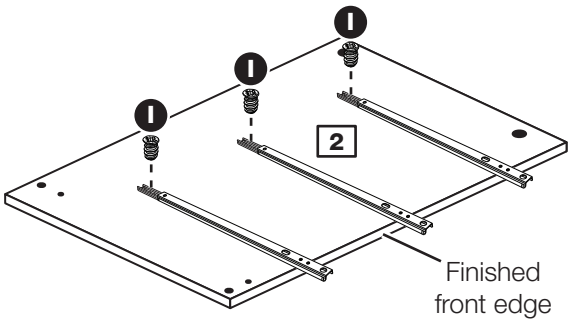

c:

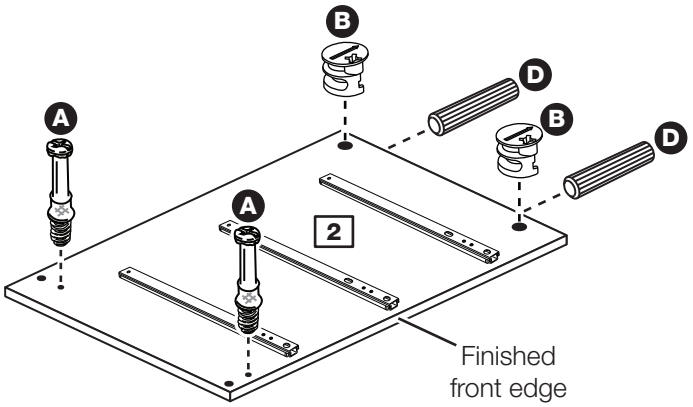


Assembly Instructions

Step 10

Prepare the 2 rails

Insert 2 large locking nuts **B** into each of 2 the rails 4.

Tap 2 wooden dowels **D** into each of 2 the rails 4.

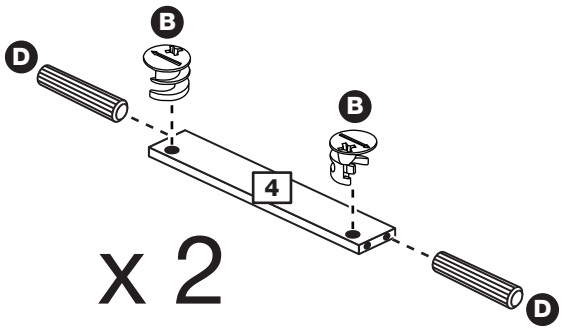


Step 11

Fit the the 2 rails to the right side

Push the 2 rails 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails 4.

Note: Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.

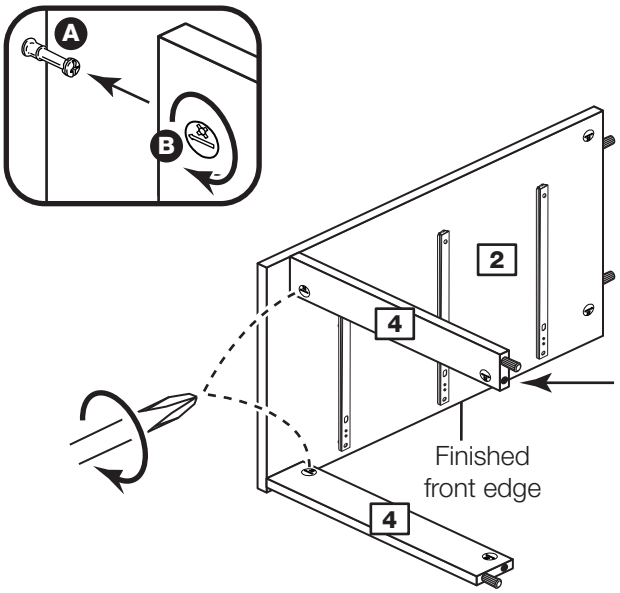


Note: Support this rail until the left side has been fitted in the next step.

Step 12

Fit the left side

Push the left side 1 onto the rails 4.


Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails 4.

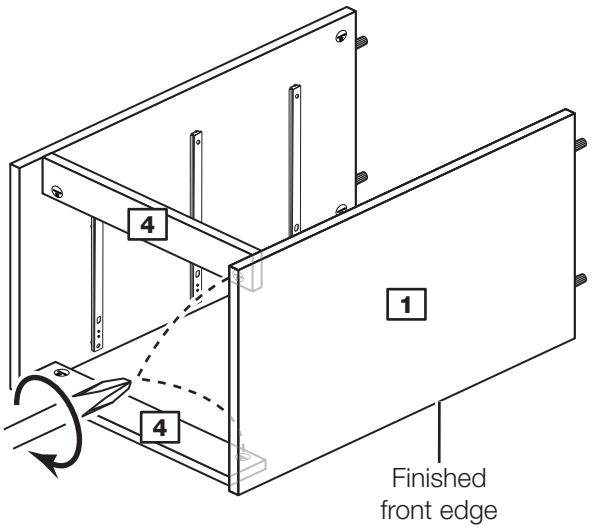

Step 13

Prepare the top

Screw 4 metal dowels A into the top 3.

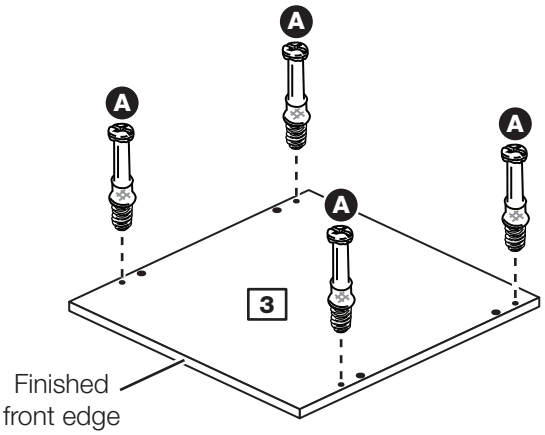


Step 14

Fit the top

Push the top 3 onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts B fitted to each of the sides 1 and 2.

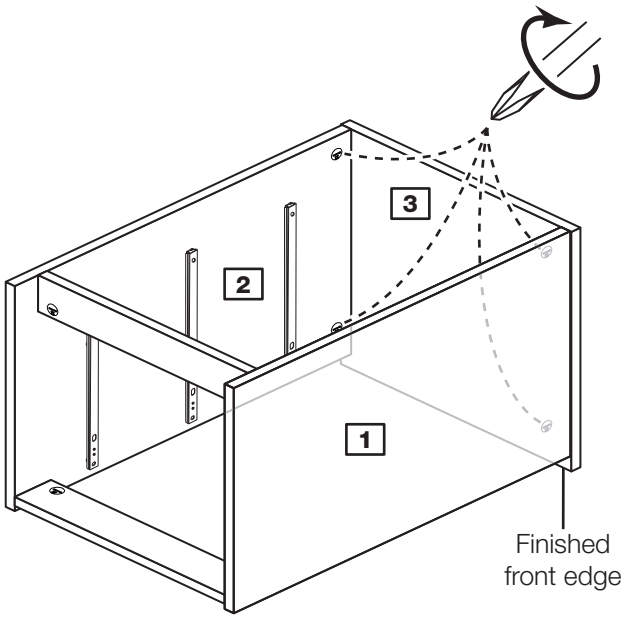

Step 15

Fit the 4 plastic nails

Tap 2 plastic nails J into the bottom edge of each of the sides 1 and 2.

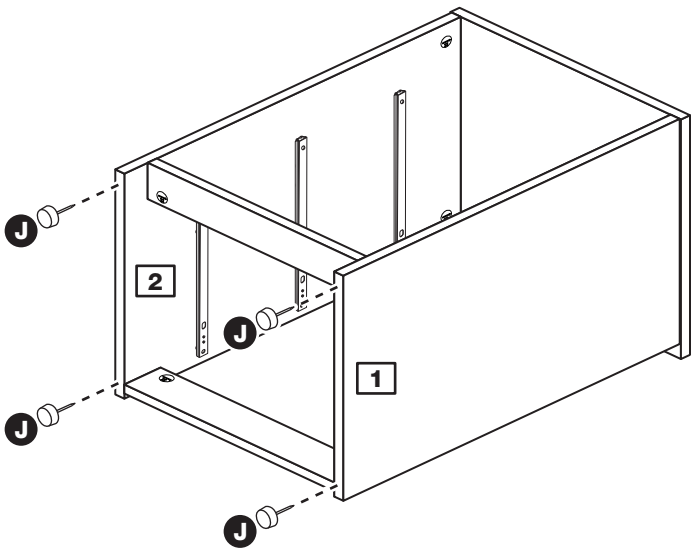

Step 16

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.


Nail E around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

b:

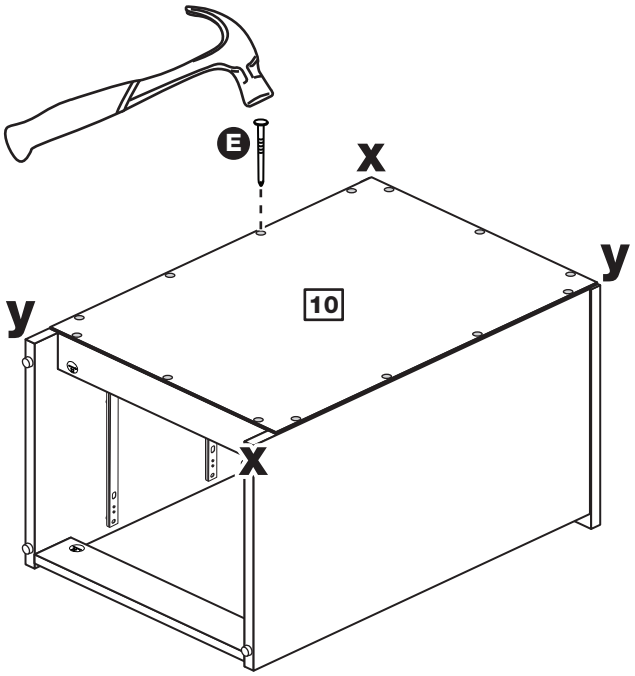

Step 17


Fit the drawers


Starting with the bottom drawer, slide both the runners (M) forward and locate the drawer sides [6] and [7] between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners (M).

Working from the inside of the drawer, insert 2 screws (H) through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws (H).
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

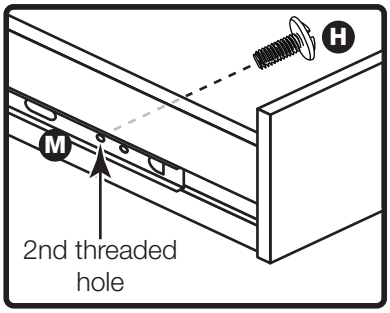

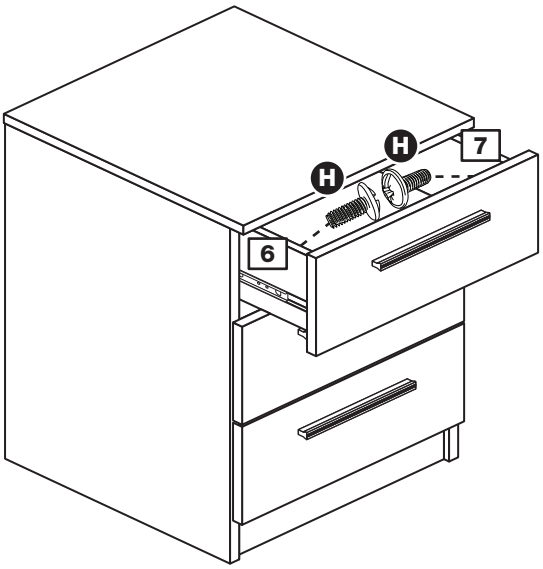

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020


Sparkle - 5 Drawer Chest

Assembly Instructions - Please keep for future reference

412/1961

395/7655

402/3124

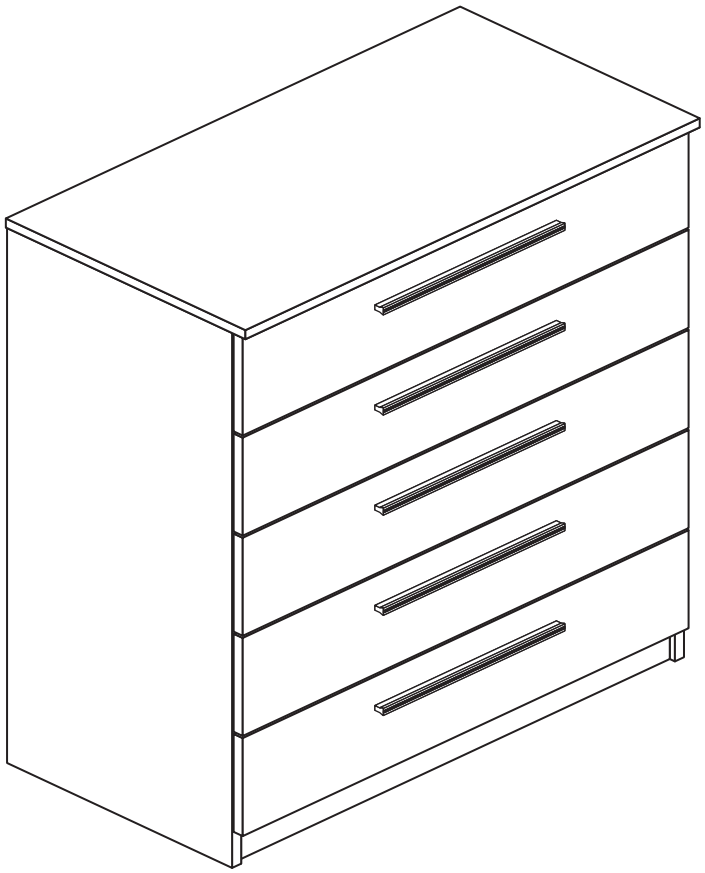

Dimensions
Width - 75.1cm
Depth - 39.6cm
Height - 90.1cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Issue 2 - 02/10/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 31kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

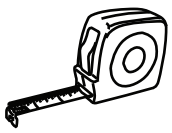

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)



Electric drill (only use when drilling into walls)


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film before use

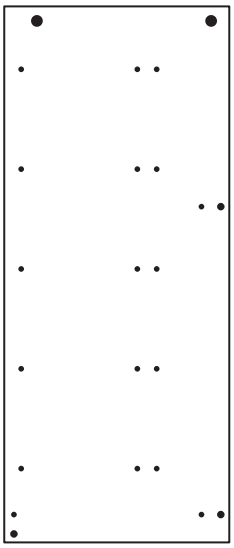


1 Left Side *(DF3867)*
(88.6 x 37.2cm)

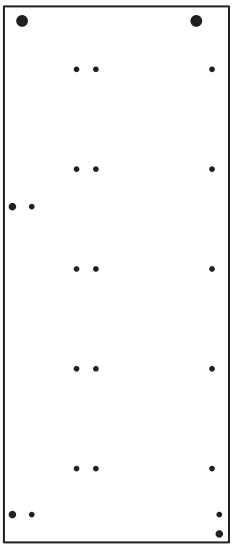


2 Right Side *(DF3868)*
(88.6 x 37.2cm)

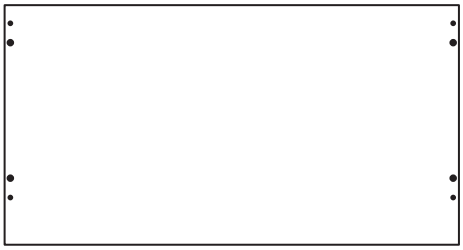

3 Top *(DF3812)*
(75.1 x 39.6cm)



4 Rail *(DF3813)*
(71.7 x 6cm) x 3



5 Drawer Front *(DF3814)*
(73.7 x 16.2cm) x 5



6 Left Drawer Side *(W370-124LH)*
(37 x 12.4cm) x 5




7 Right Drawer Side *(W370-124RH)*
(37 x 12.4cm) x 5



8 Drawer Back *(W684-124)*
(68.4 x 12.4cm) x 5



9 Drawer Base *(T695-367)*
(69.5 x 36.7cm) x 5




10 Back *(X861-743)*
(86.1 x 74.3cm)

Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Metal dowel *(F901)* x 20

B 


Large locking nut *(F900)* x 10

C 

Small locking nut *(F3)* x 10

D 

Wooden dowel *(F22)* x 10

E 

Nail *(F51)* x 25

F 

Knock-in Peg *(F171GY)* x 20

G 


25mm Screw *(F50)* x 15

H 

9mm Screw *(F74)* x 10

I 


9mm Screw (*F73)* x 20

J 

Plastic Nail *(F91)* x 4

K 


Wedgefix *(F639)* x 20

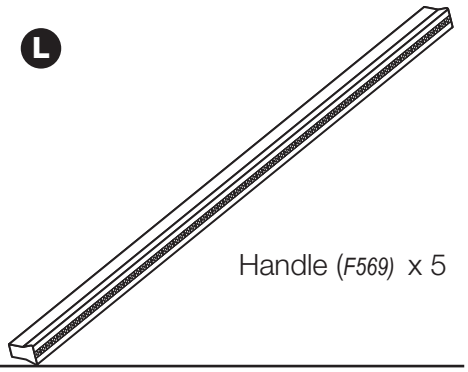L 

Handle (*F569)* x 5


M 

Drawer runner *(F1004)* x 10

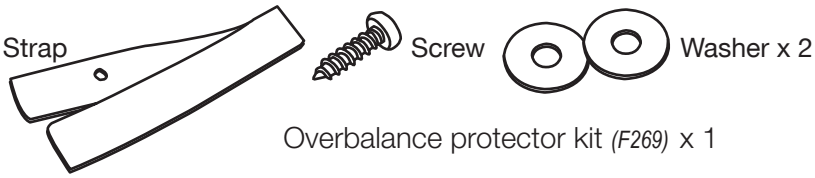N 

Overbalance protector kit *(F269)* x 1

Ruler - Use this ruler to help correctly identify the screws

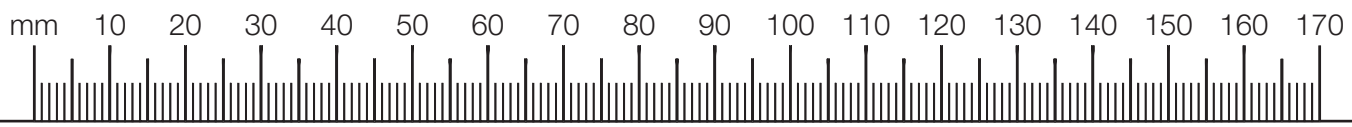


Assembly Instructions

Step 1

Prepare the 5 drawer fronts

Screw 2 metal dowels A into each of the drawer fronts 5.

Note: Tighten the metal dowels up fully against the panels.

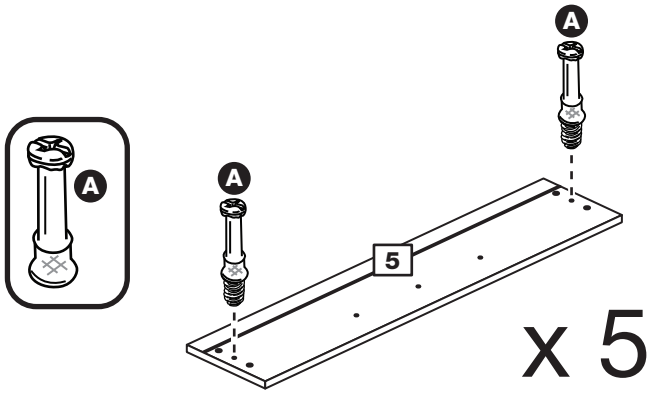


Step 2

Prepare the drawer sides

Insert a small locking nut C into the hole shown on the left drawer side 6 and the right drawer side 7.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

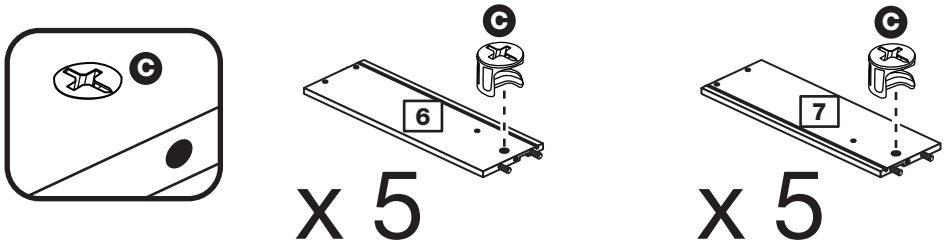


Step 3

Attach the drawer sides to the drawer fronts

Push the left drawer sides 6 and right drawer sides 7 onto the back of the drawer fronts 5.

Turn the small locking nuts C on the left drawer side 6 and right drawer side 7.

Note: Turn the locking nuts C clockwise to secure panels - more than 1/2 a turn.

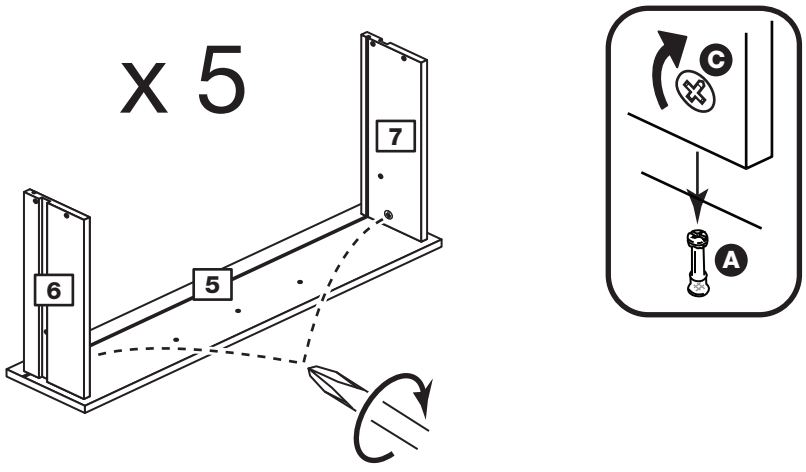


Assembly Instructions

Step 3

Fit the drawer base

Slide the drawer base [9] down the grooves in the drawer sides [6] and [7] and down into the groove in the drawer front [5].

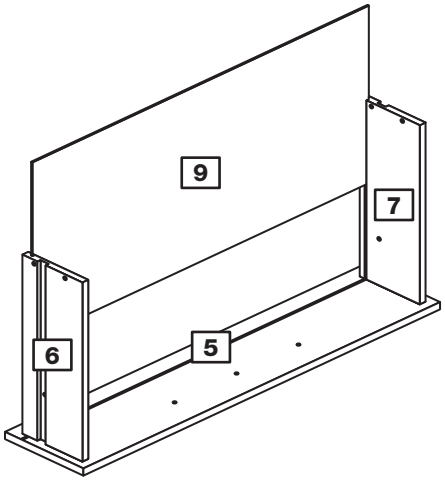


x 5

Step 5

Fit the drawer back

Fit the drawer back [8] between the drawer sides [6] and [7]. Make sure that the drawer base [9] fits into the groove in the drawer back [8].

Hold the drawer back [8] in position and tap the knock-in pegs (F) through the holes in the drawer sides [6] and [7].

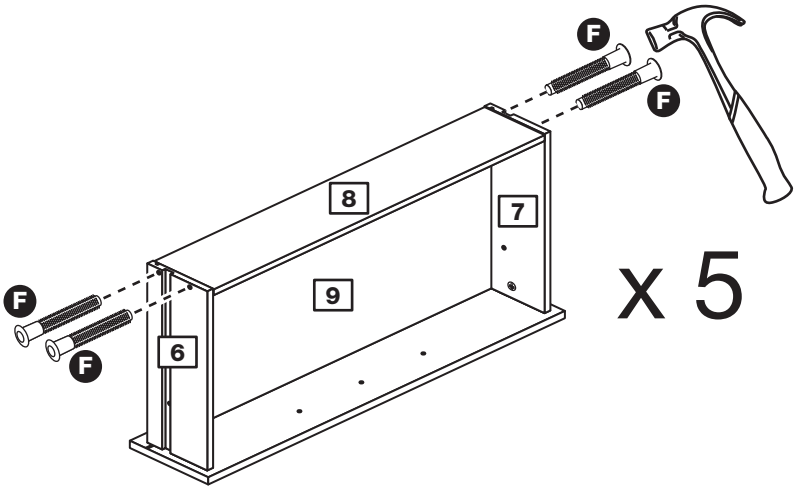


x 5

Step 6

Attach the handles

Attach a handle (L) to each of the drawer fronts [5] using screws (G).

Note: Do not overtighten the screws.

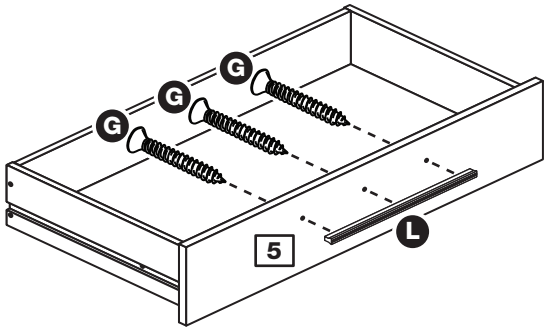


x 5


Step 7

Fit the wedgefixes

Turn the 5 drawer assemblies over and slide 2 wedgefixes (K) into the front and back grooves, as shown, and tighten up the screws.

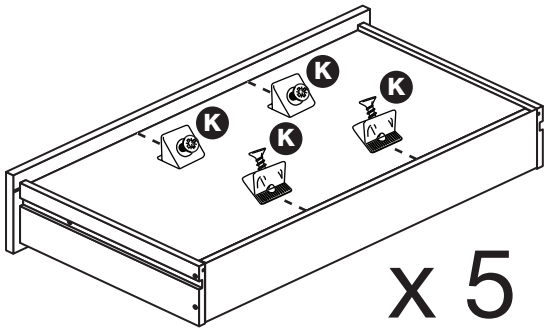

x 5

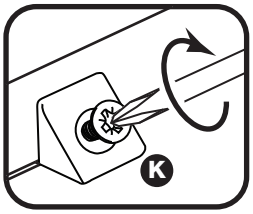

Step 8

Prepare the left side

a: Place 5 runners M on the left side 1 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.


c: Screw 3 metal dowels A into the left side 1.

Insert 2 large locking nuts B into the left side 1.


Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels D into the left side 1.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

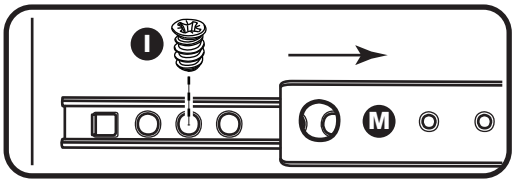


a:

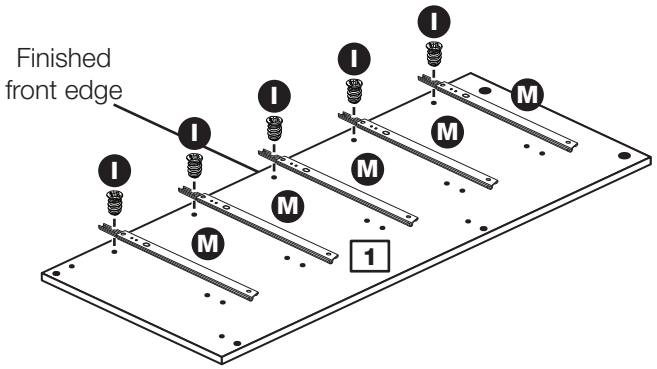

b:

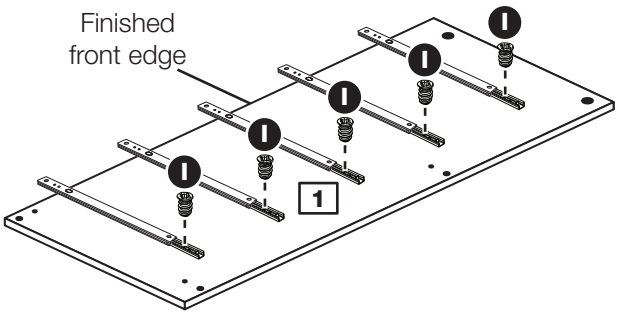

c:

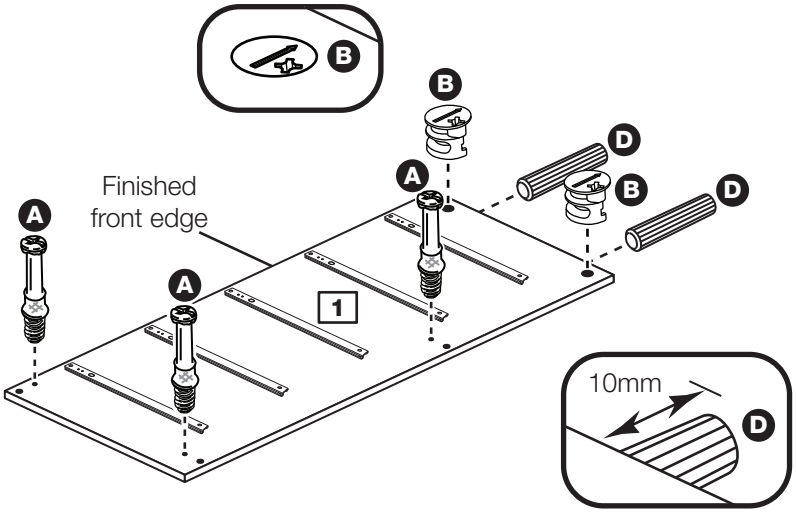

Step 9

Prepare the right side


a: Place 5 runners M on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.


c: Screw 3 metal dowels A into the right side 2.

Insert 2 large locking nuts B into the right side 2.


Tap 2 wooden dowels D into the right side 2.

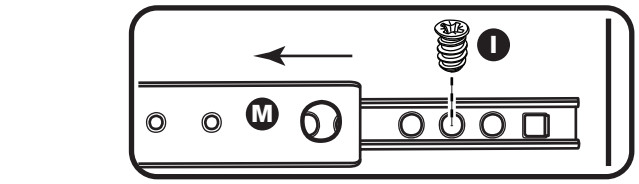


a:

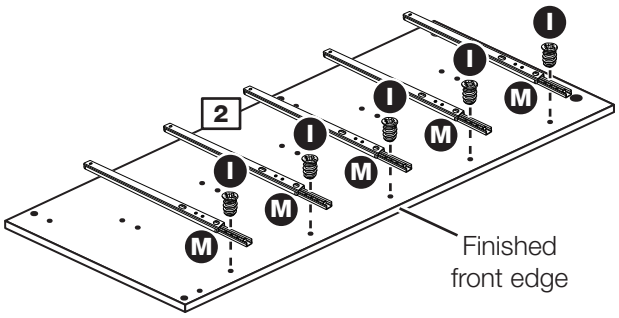

b:

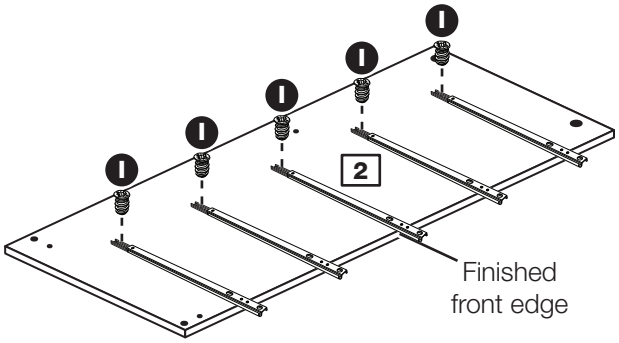

c:

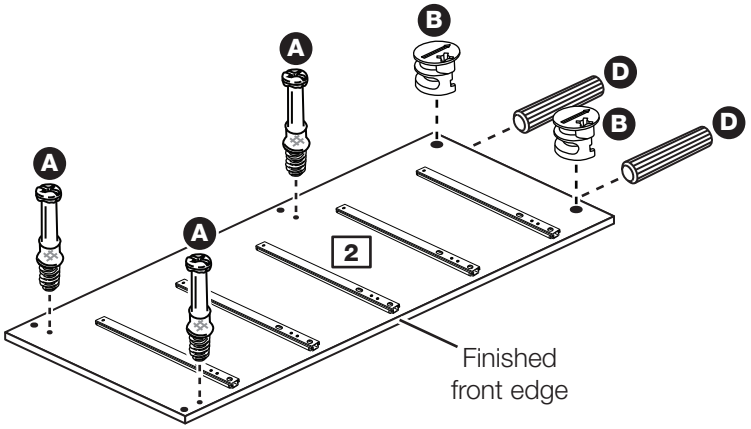


Assembly Instructions

Step 10

Prepare the 3 rails

Insert 2 large locking nuts **B** into each of 3 the rails **4**.

Tap 2 wooden dowels **D** into each of 3 the rails **4**.

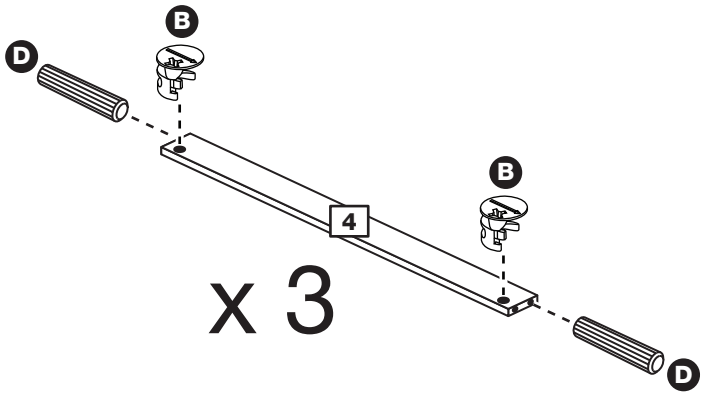


Step 11

Fit the the 3 rails to the right side

Push the 3 rails **4** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails **4**.

Note: Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.

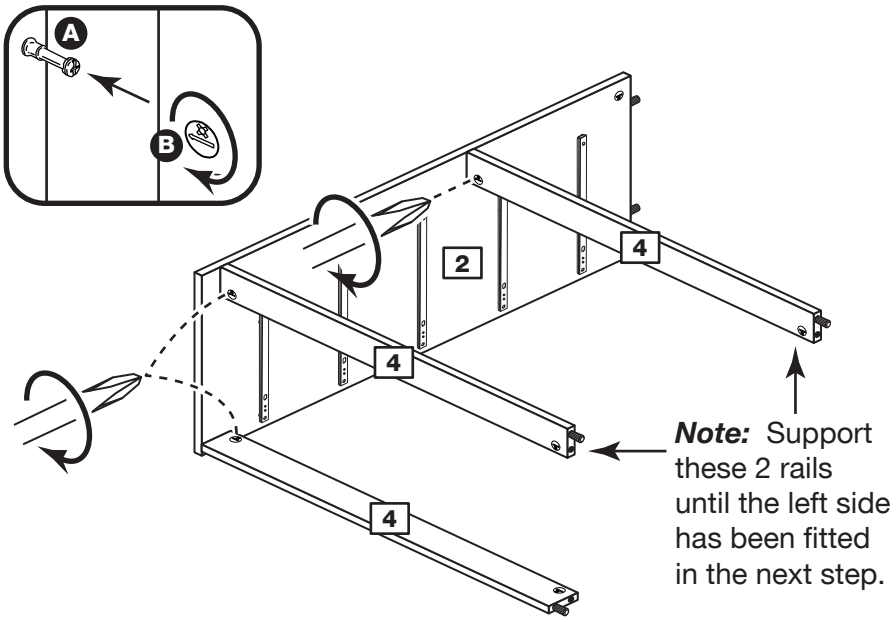


Step 12

Fit the left side

Push the left side **1** onto the rails **4**.


Use a screwdriver to tighten the large locking nut **B** fitted to each of the rails **4**.

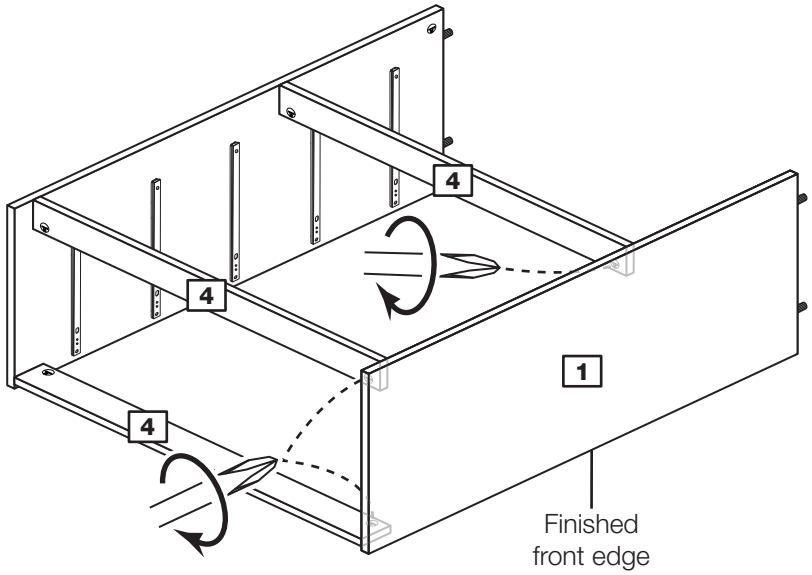

Step 13

Prepare the top

Screw 4 metal dowels (A) into the top [3].

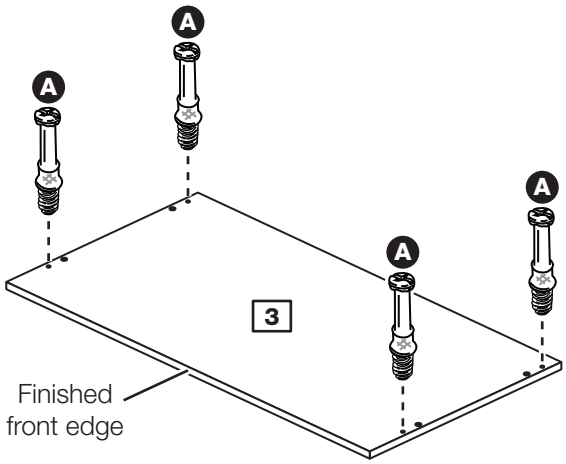


Step 14

Fit the top

Push the top [3] onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts (B) fitted to each of the sides [1] and [2].

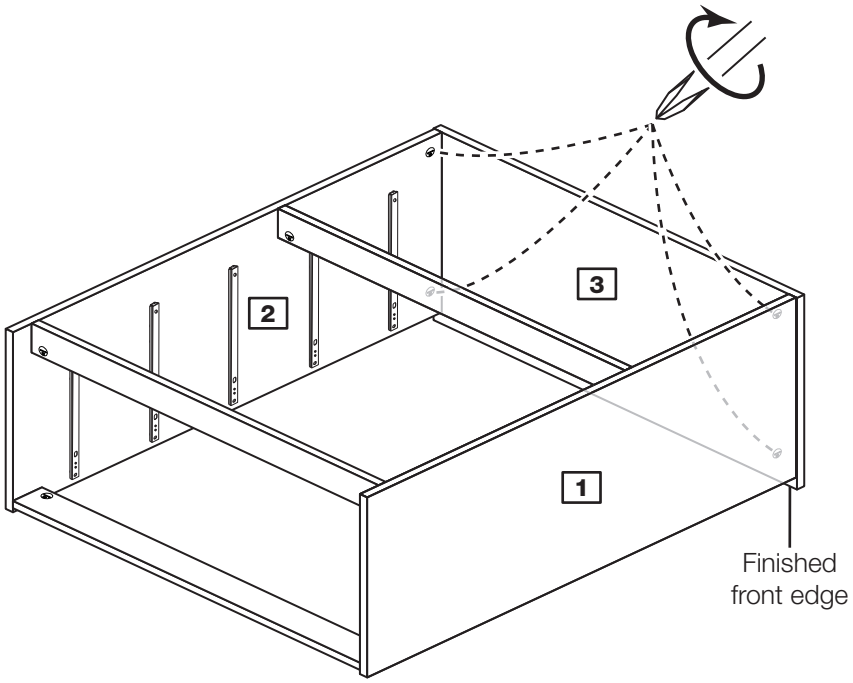

Step 15

Fit the 4 plastic nails

Tap 2 plastic nails (J) into the bottom edge of each of the sides [1] and [2].

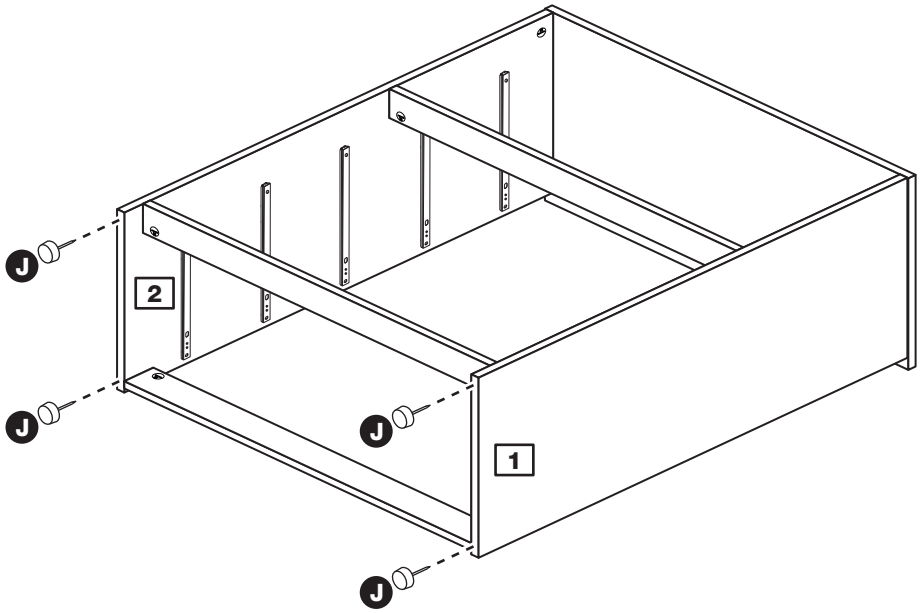

Assembly Instructions

Step 16

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 10 onto the unit.

Nail E around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Carefully stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

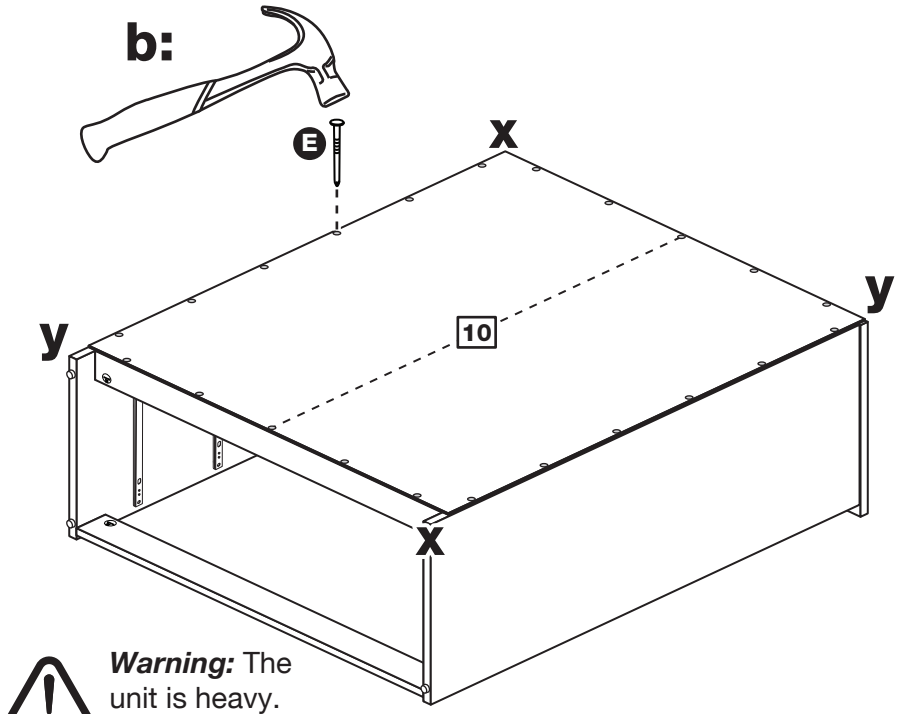

Warning: The unit is heavy. Lift with care.


Step 17


Fit the drawers

Starting with the bottom drawer, slide both the runners M forward and locate the drawer sides 6 and 7 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners M.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

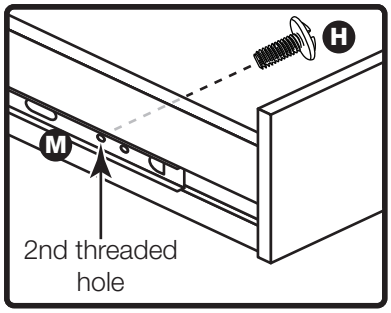

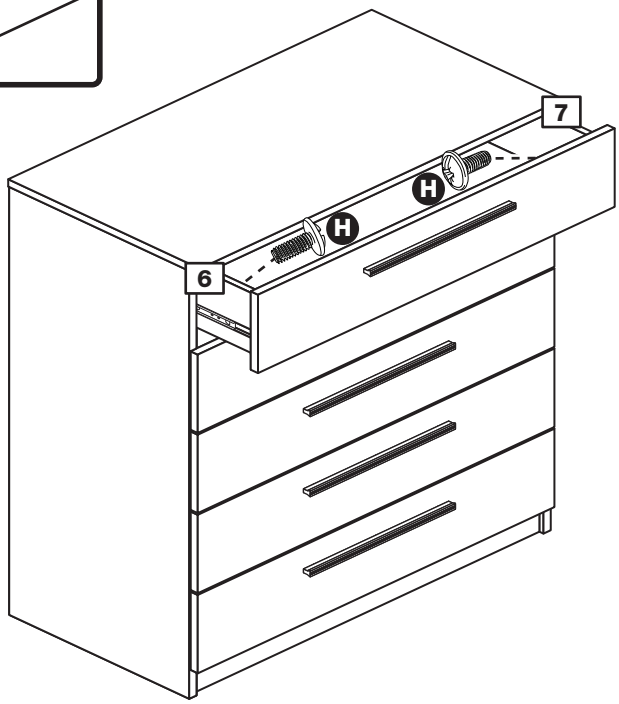

Step 18


Fit the overbalance protector kit


To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit (N) to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Assembly is complete

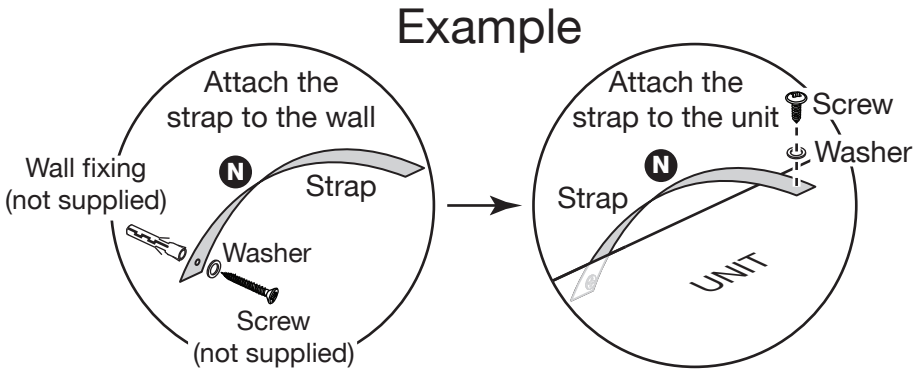

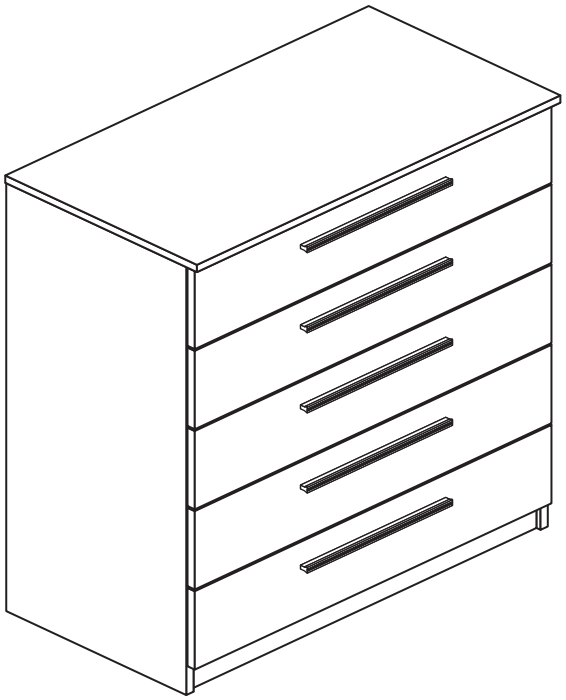

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020