


Marlow - 2 Door Robe

Assembly Instructions - Please keep for future reference

424/2929

404/2260

395/5530

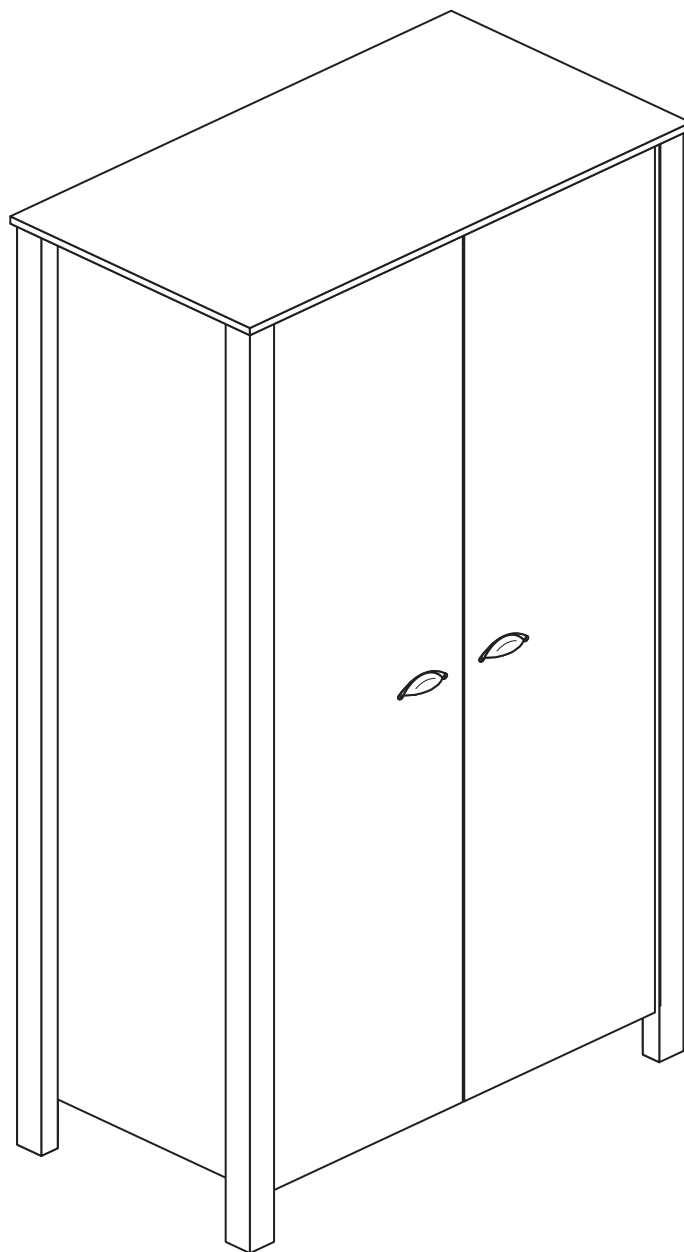

Dimensions

Width - 91.1cm

Depth - 49.5cm

Height - 191.8cm



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 58kgs. Please lift with care.

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

Please check you have all the panels listed below

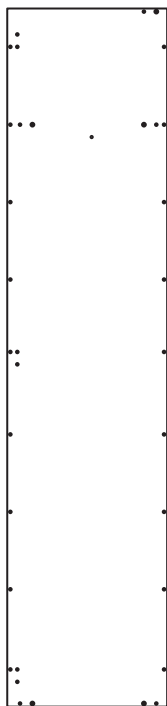

1 Left Side (DF3918)
(180.3 x 41.3cm)

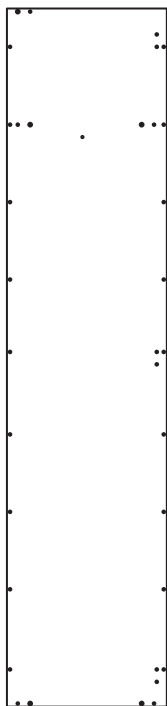


2 Right Side (DF3919)
(180.3 x 41.3cm)



3 Horizontal (DF3930)
(79.7 x 45.9cm) x 2



4 Rail (DF3742)
(79.7 x 11.9cm)

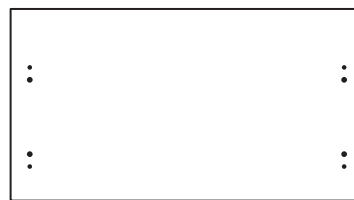


5 Top (DF3625)
(91.1 x 49.5cm)




6 Leg (DF3631)
(190.3 x 5cm) x 4



7 Hanging Rail (FHR791)
(79.1cm long)

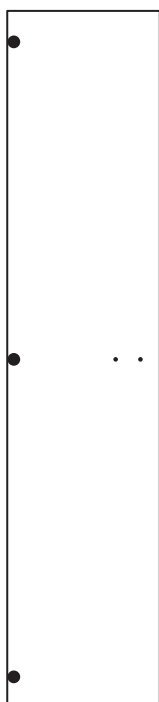

8 Door (DF3920)
(180 x 39.4cm) x 2

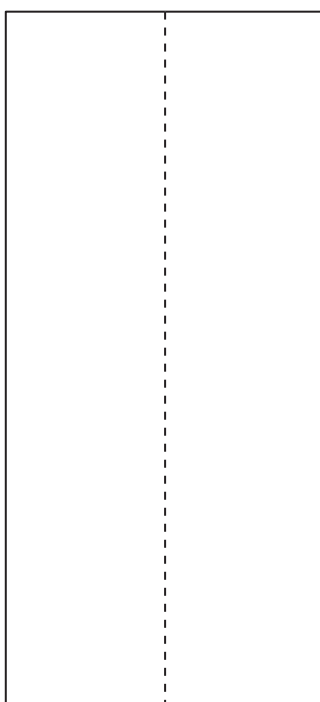

9 Back (X1798-823)
(179.8 x 82.3cm)










Components - Fittings





If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

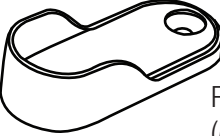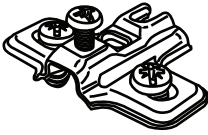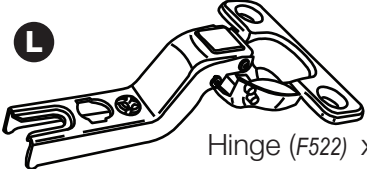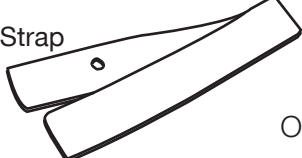A  Metal dowel (F901) x 10	B  Large locking nut (F900) x 10	C  Wooden dowel (F22) x 14
D  Rail Holder (F891) x 2	E  Nail (F51) x 36	F  40mm Screw (F910) x 4
G  38mm Screw (F81) x 36	H  19mm Screw (F461) x 4	I  13mm Screw (F63) x 16
J  Handle (F449) x 2	K  Hinge plate (F523) x 6	L  Hinge (F522) x 6
M   Screw  Washer x 2 Overbalance protector kit (F269) x 1		

Tools required

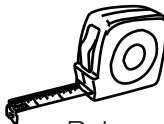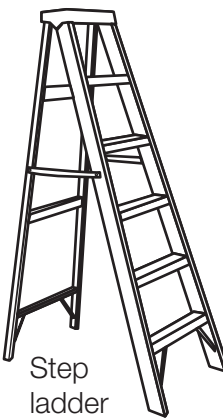 Rule	 Spirit level	 Eye protection (when using a hammer or drill)	 Cross-head screwdriver	 Electric drill (only use when drilling into walls)	 Step ladder
 Square	 Scissors	 Hammer	 Bradawl		

Ruler - Use this ruler to help correctly identify the screws

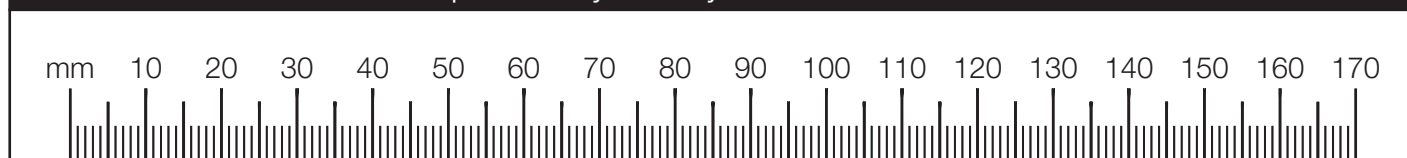

Assembly Instructions


If you have damaged or missing components, call the
Customer Helpline: 03456 400800 quoting the reference
numbers below

Step 1

Fit 2 legs to the left side

Screw 2 legs **6** to the left side **1** using 18 screws **G**.

Note: The top of the legs must be flush with the top of the left side.

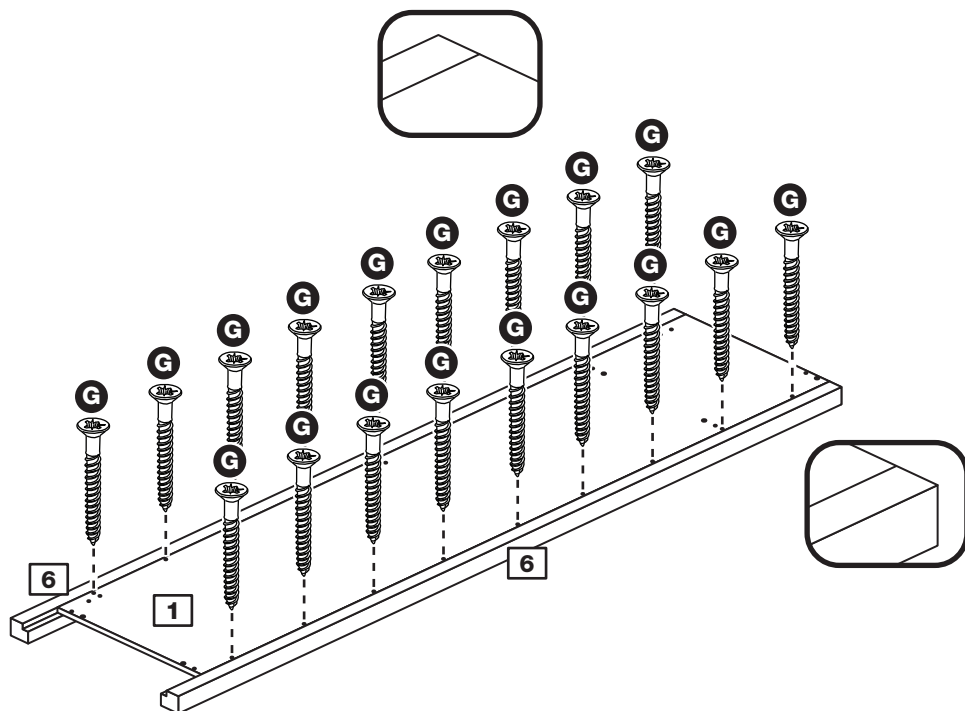


Step 2

Fit 2 legs to the right side

Screw 2 legs **6** to the right side **2** using 18 screws **G**.

Note: The top of the legs must be flush with the top of the right side.

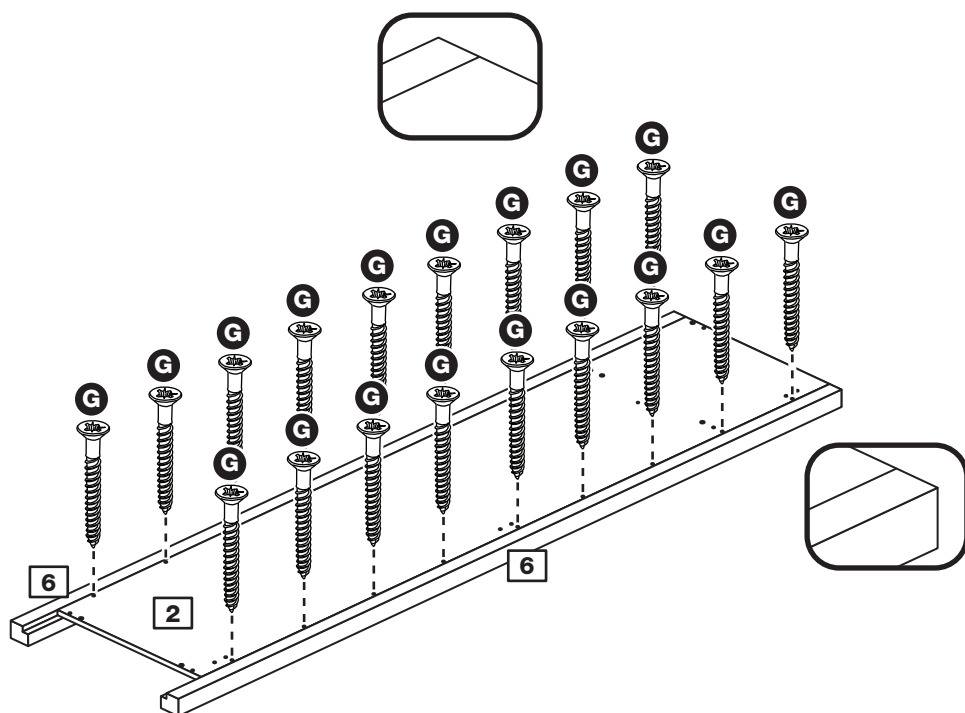

Assembly Instructions

Step 3

Prepare the left side

Screw 5 metal dowels **A** into the left side **1**.



Note: Tighten the metal dowels up fully against the panels.

Tap 2 wooden dowels **C** into the left side **1**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

To fit the rail holder **D**, screw through the top hole with screw **I** and into the mark hole drilled in the left side **1**. Make sure that it is fitted straight, in line with the panel edges and then fit another screw **I** using the lower hole.


Fit 3 hinge plates **K** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

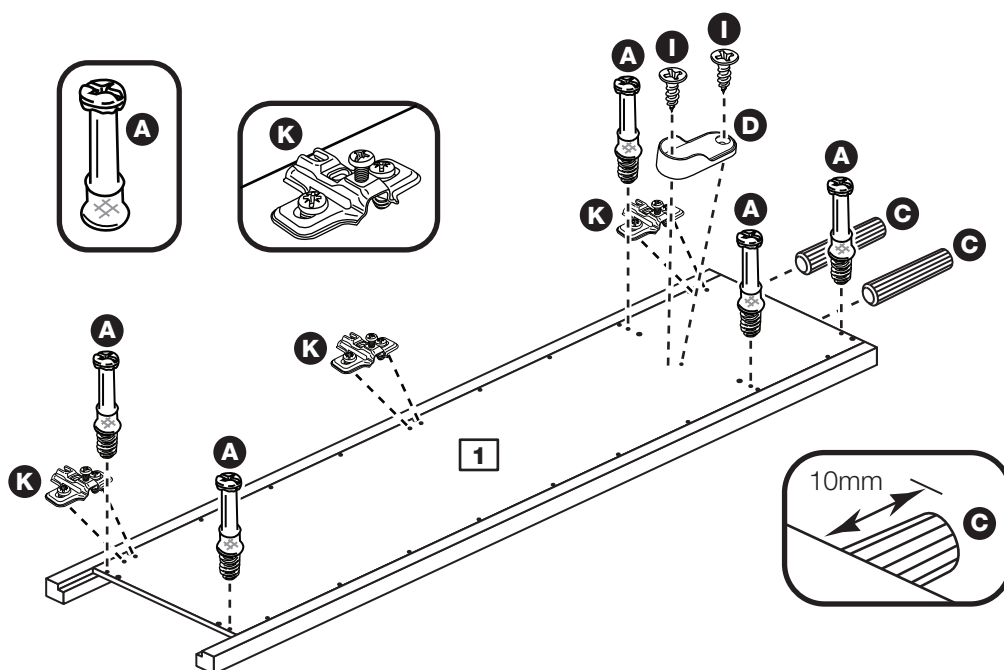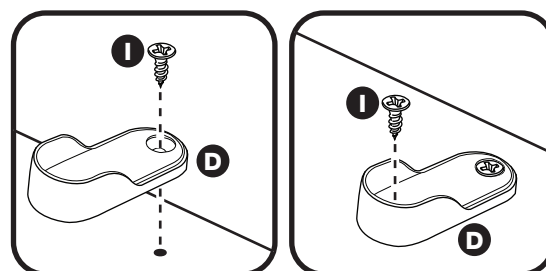

Step 4

Prepare the right side

Use the same fittings you used for the left side to prepare the right side **2**.

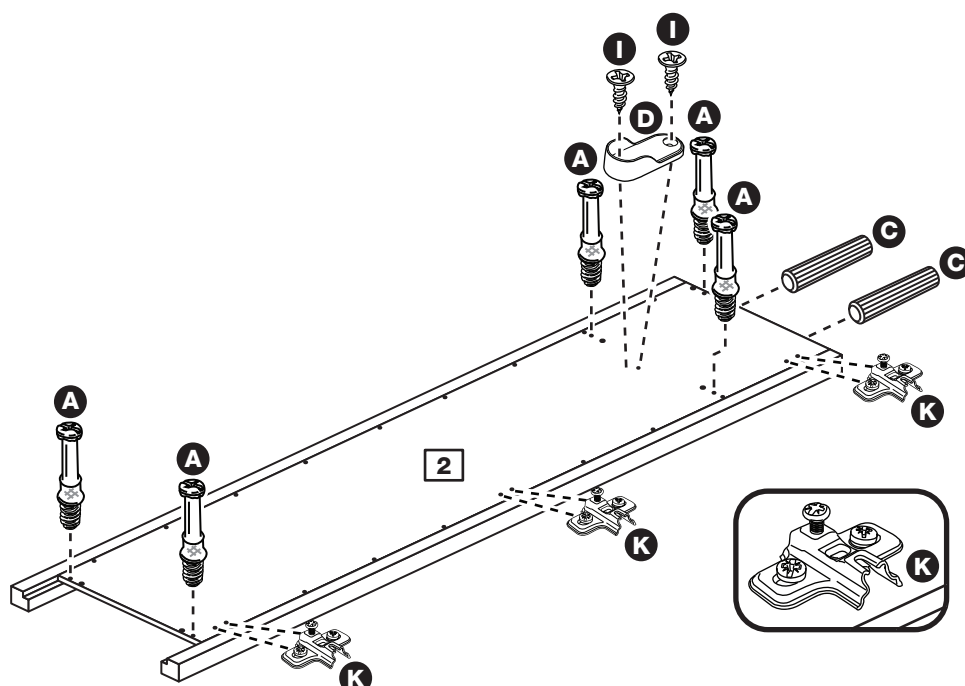

Assembly Instructions


Step 5

Prepare the 2 horizontals

Insert 4 large locking nuts **B** into each of the horizontals **3**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels **C** into each of the horizontals **3**.

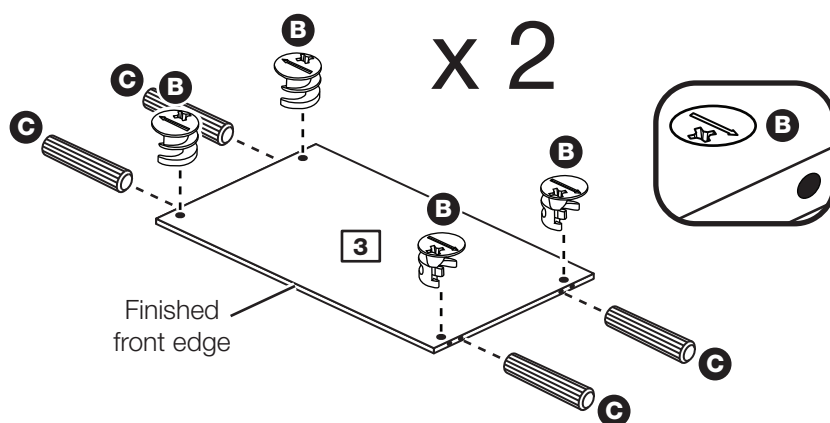


Step 6

Fit the 2 horizontals to the right side

Push the 2 horizontals **3** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to each horizontal **3**.

Note: Turn the large locking nuts **B** as far as they will go - more than 1/2 a turn.

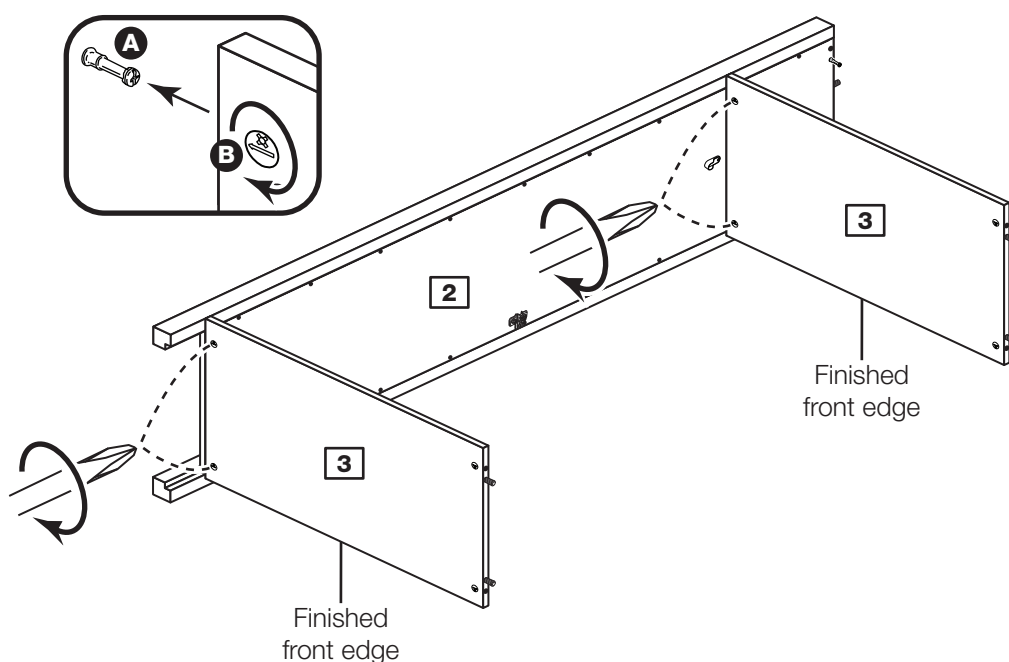


Step 7

Prepare the rail

Insert 2 large locking nuts **B** into the rail **4**.

Tap 2 wooden dowels **C** into the rail **4**.

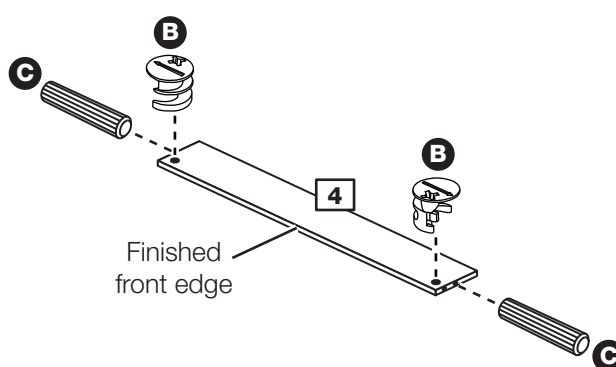

Assembly Instructions


Step 8

Fit the rail

Push the rail **4** onto the right side **2**.

Use a screwdriver to tighten the large locking nut **B** fitted to the rail **4**.

Note: Support the rail until the left side has been fitted in the next step.

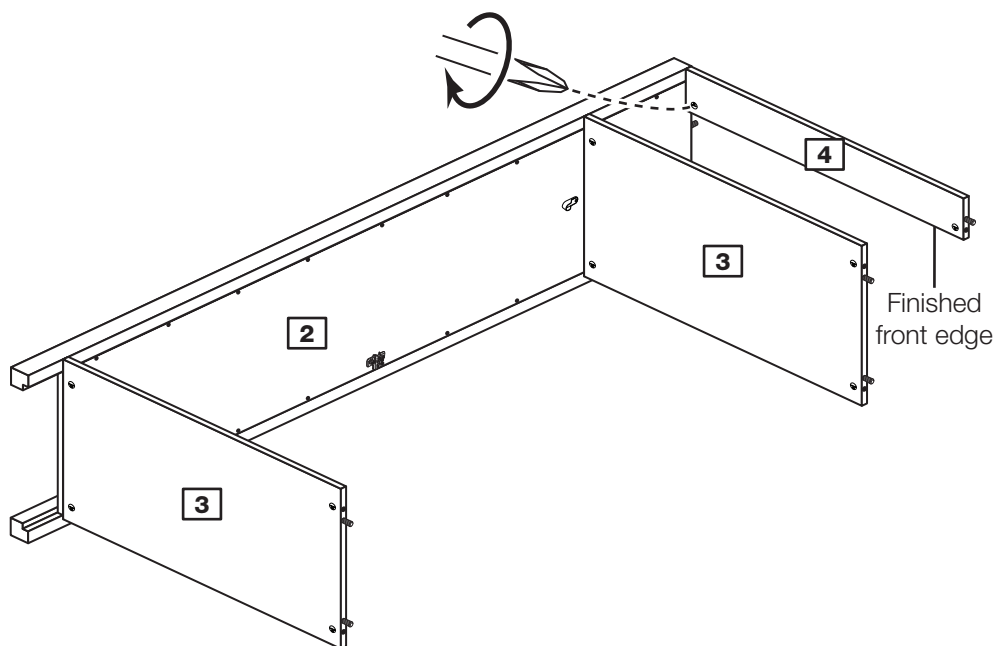


Step 9

Fit the left side

Push the left side onto the assembly.

Use a screwdriver to tighten the 5 large locking nuts **B** fitted to the 2 horizontals **3** and the rail **4**.

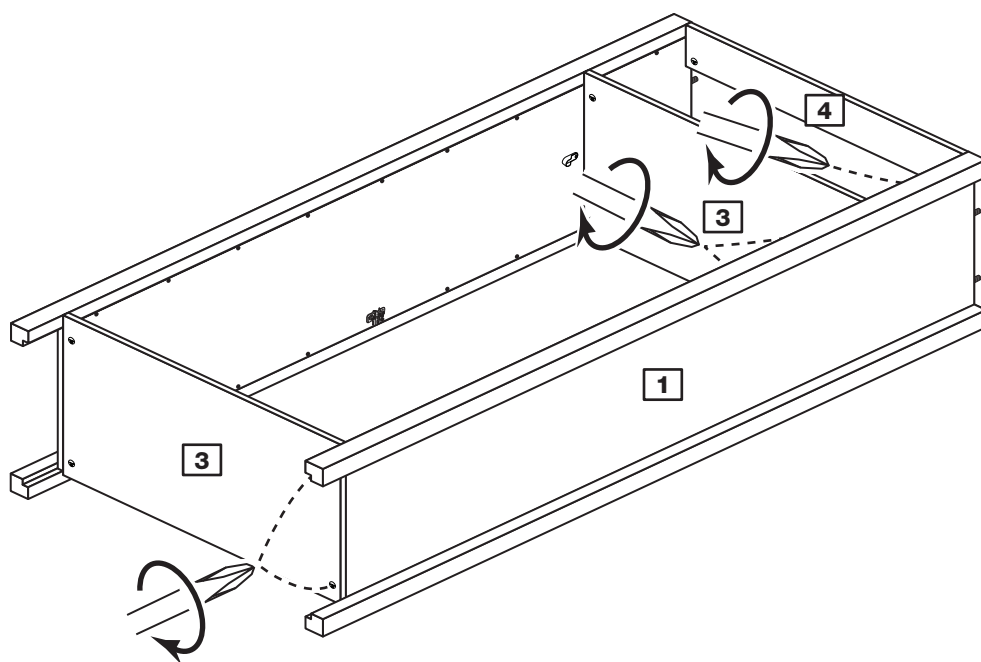


Assembly Instructions

Step 10

Fit the top

Attach the top **5** to the sides **1** and **2** using the 4 screws **F**.

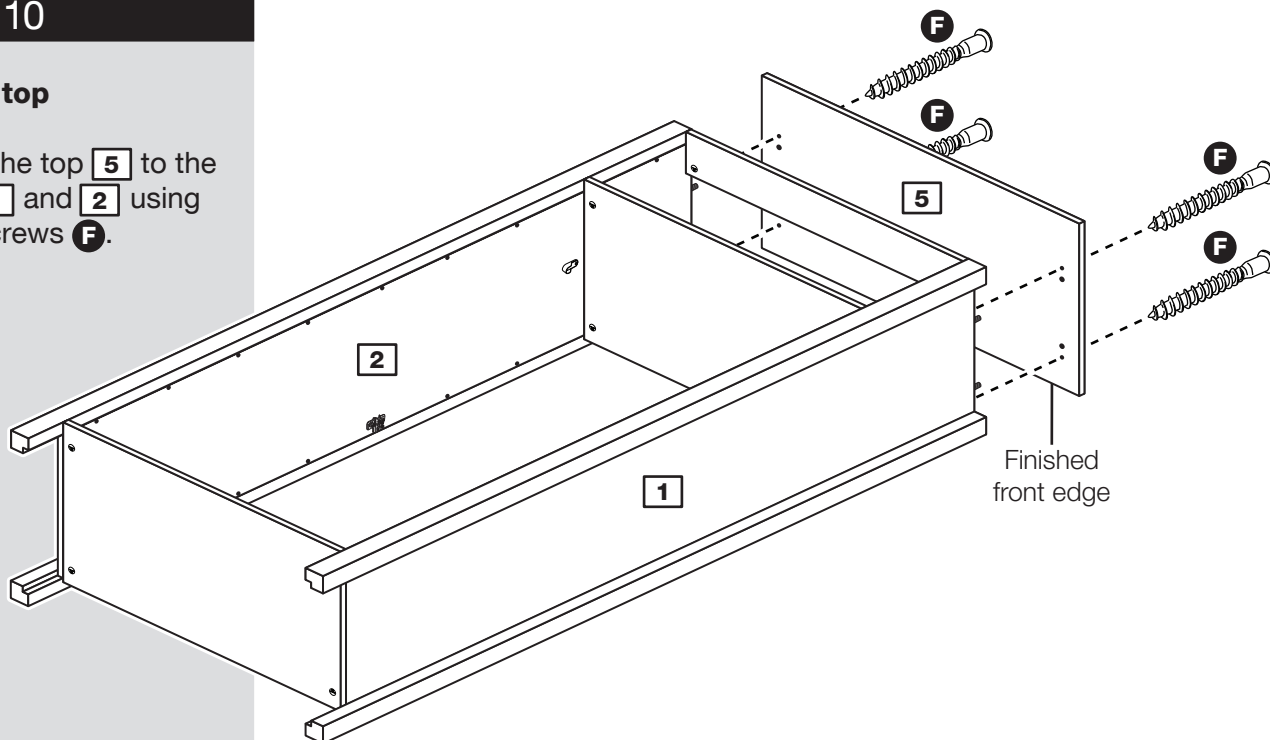

Step 11

Fit the back

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.


b: Place the back **9** onto the unit.

Nail **E** around the outside edges of the back **9**.

Note: Nails should be spaced about 150mm apart.

Carefully stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

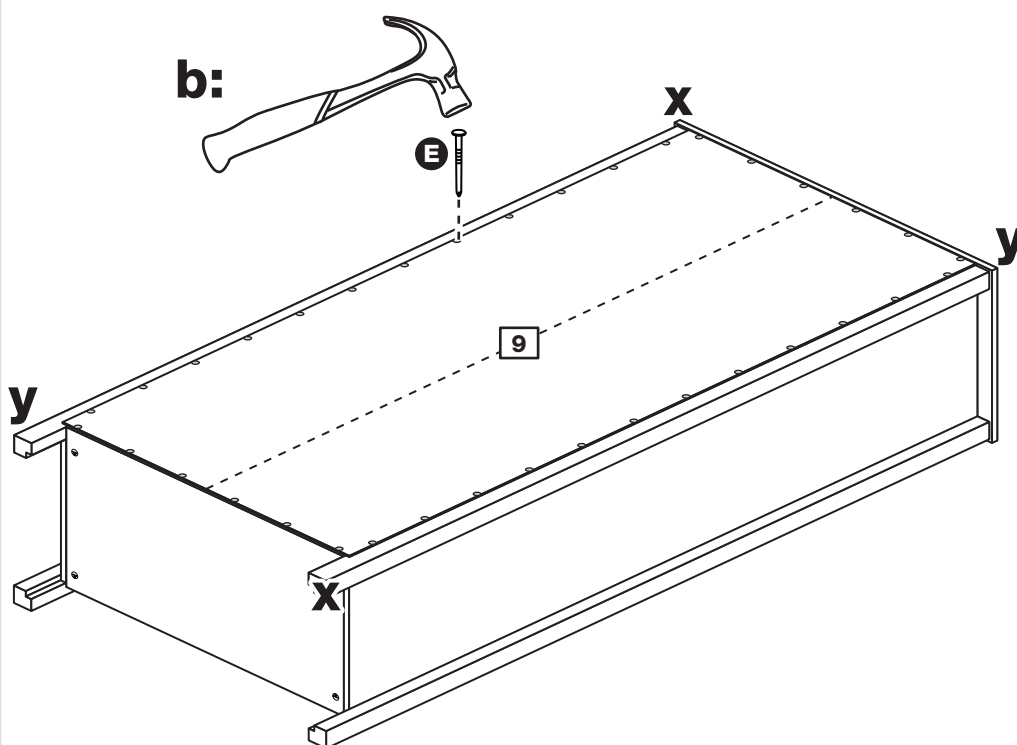



Warning: The unit is heavy. Lift with care.

Assembly Instructions

Step 12

Fit the hanging rail

Push the hanging rail **7** into the rail holders **D** fitted to the side panels.

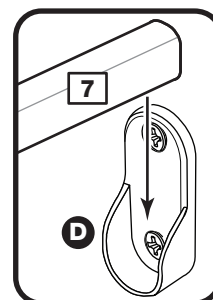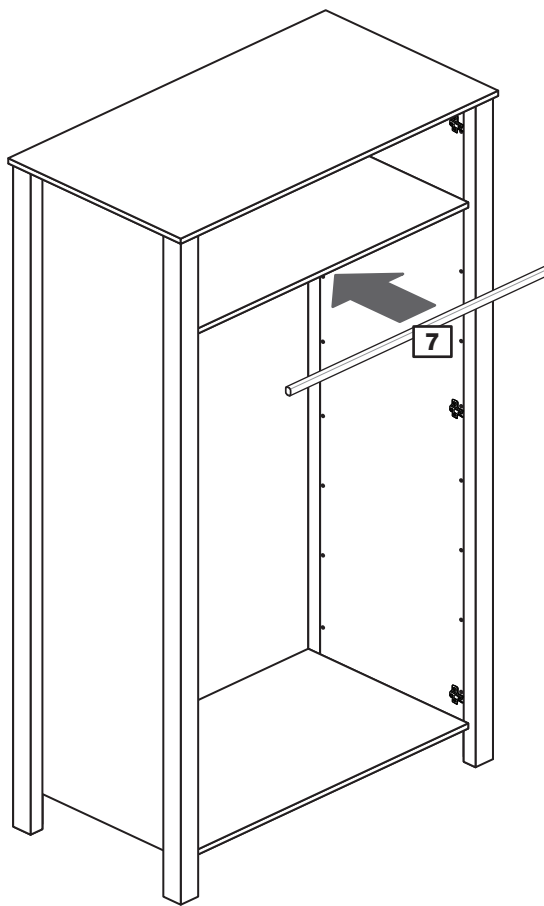



Step 13

Prepare the 2 doors

Push fit 3 hinges **L** into each of the 2 doors **8**.

Secure each hinge with 2 screws **I**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

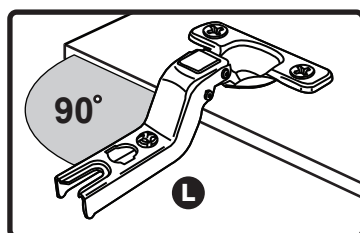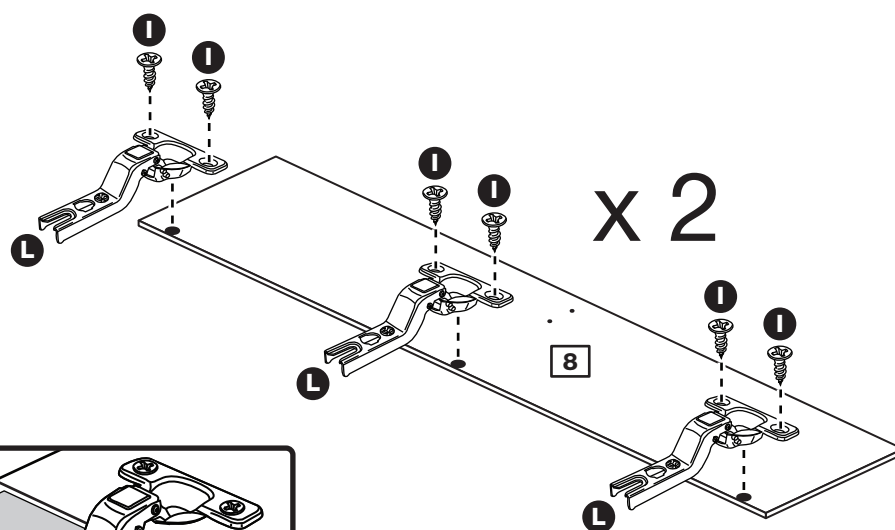

Assembly Instructions

Step 14

Fit doors and handles

Note: The easiest way to attach each door **8** is to fit the top hinge first, then align and fit the other hinges.



a: Push the hinge **L** onto the front part of the hinge plate **K**. The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **L** FLAT against the hinge plate **K** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **L** must be flat against the hinge plate **K** prior to any adjustment.

d: The hinge **L** must NOT be AT AN ANGLE to the hinge plate **K** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **J** to each door **8** using 2 screws **H**.

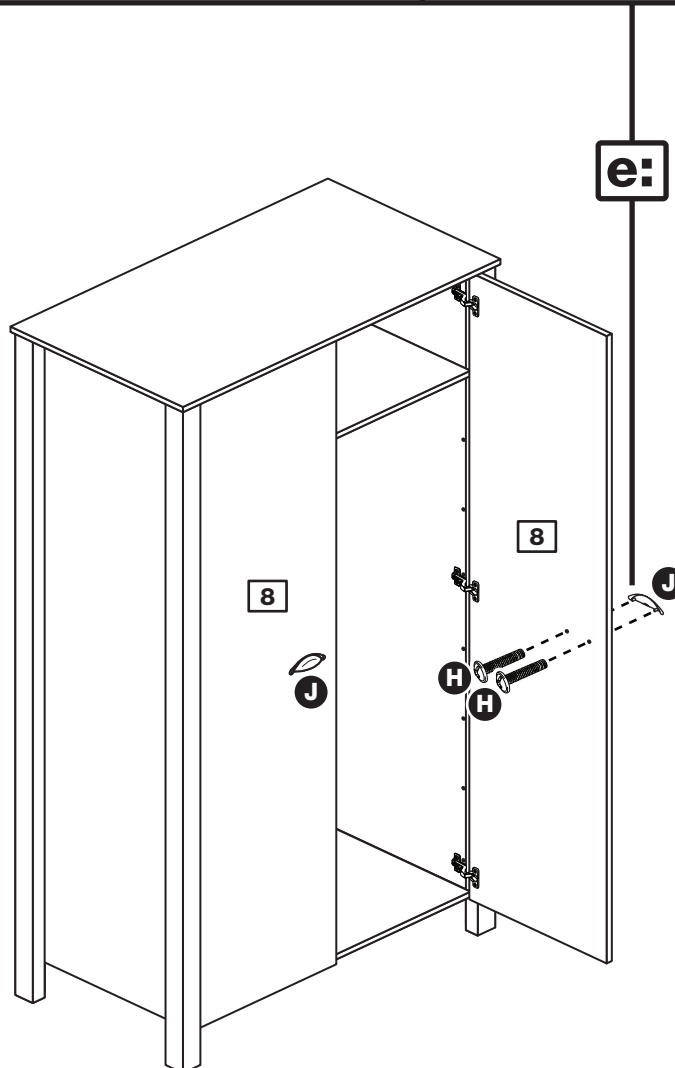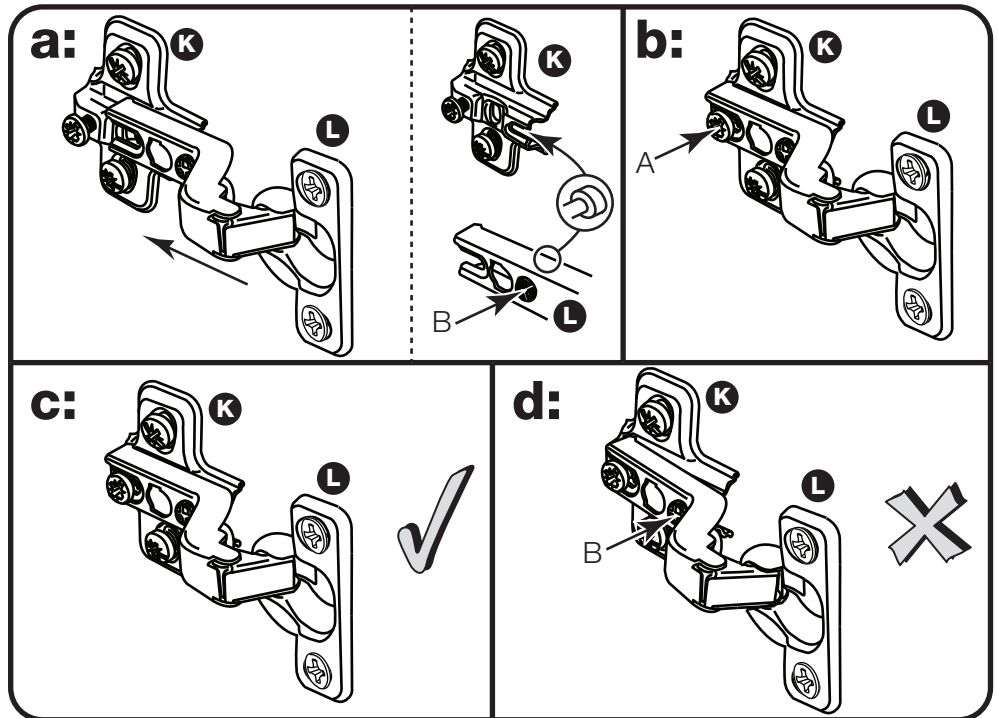

Assembly Instructions

Step 15

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.


Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.

d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.

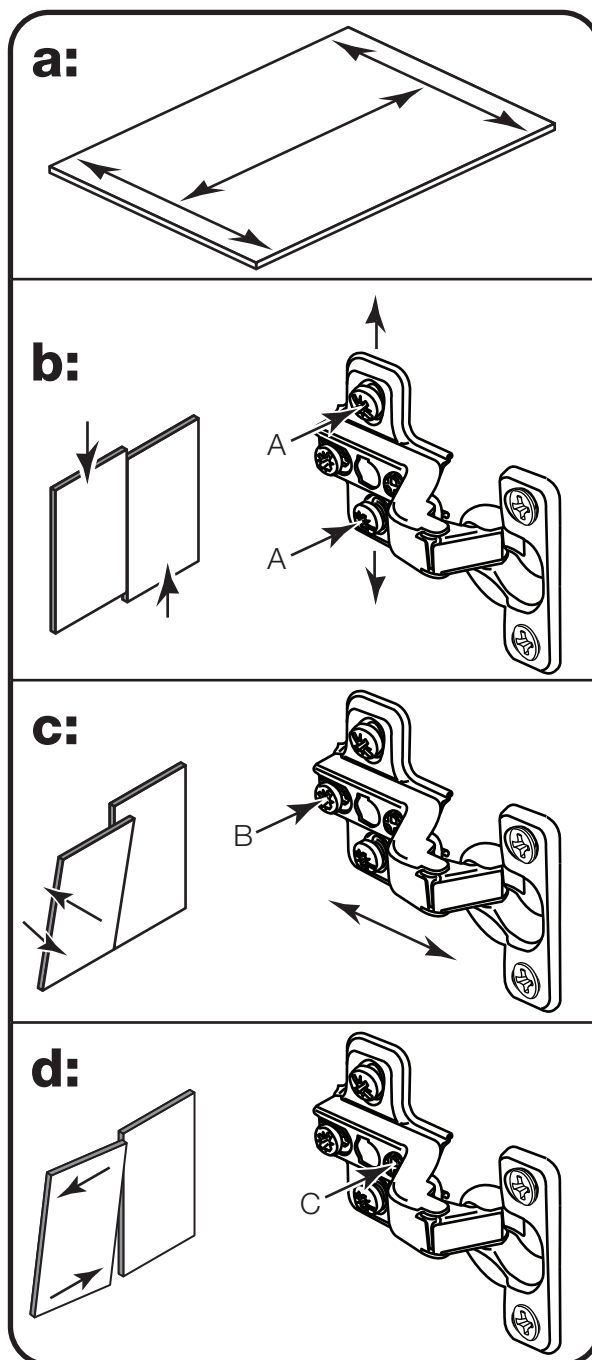

Assembly Instructions

Step 16


Fit the overbalance protector

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit **M** to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

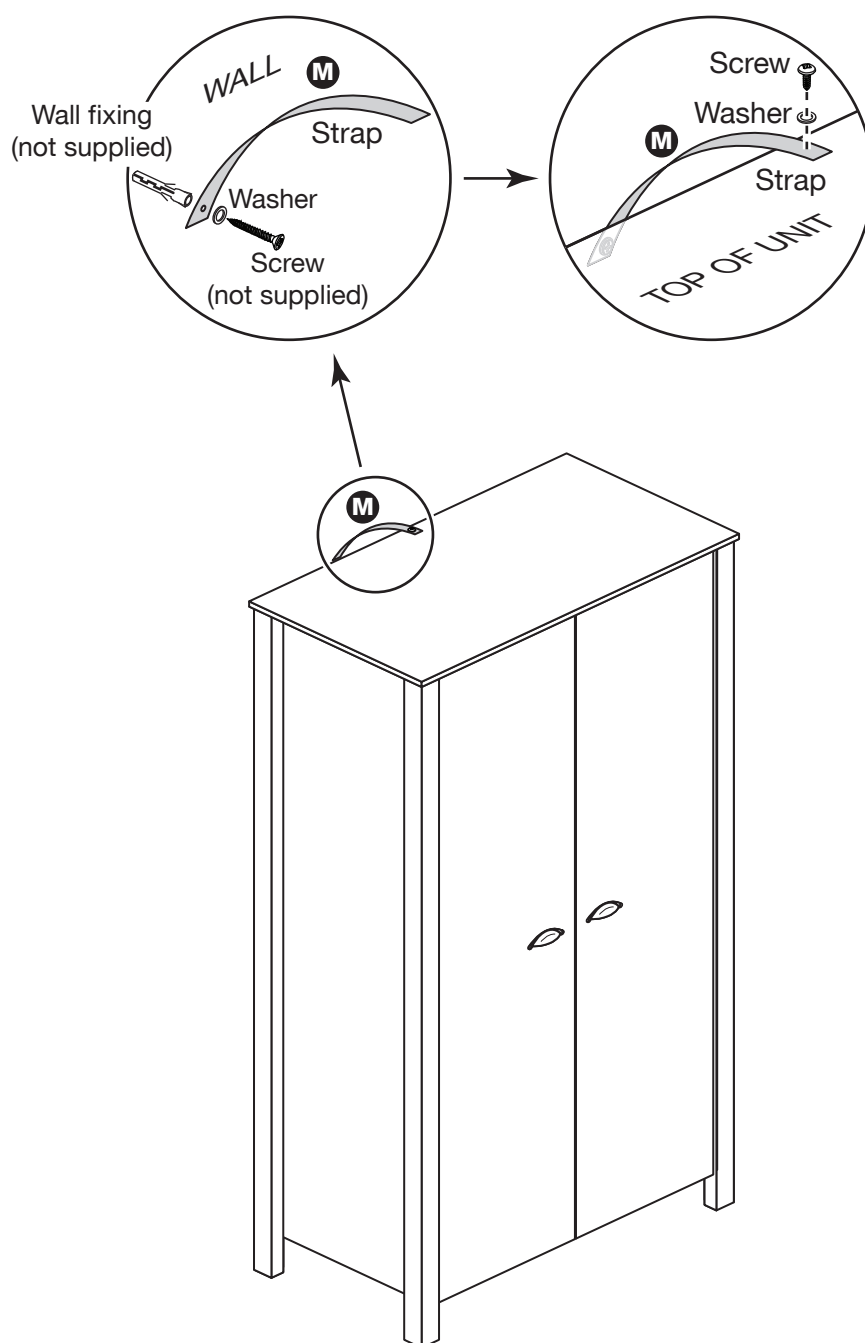

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400800 and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

