

# mason bed

Assembly Instructions – Please keep for future reference

411/8266

418/9790



Dimensions (4'6")	Dimensions (5')
Length - 205.5cm	Length - 215.5cm
Width - 149cm	Width - 164cm
Height - 123cm	Height - 123cm


**Important-Please read these instructions fully before starting assembly**

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6400 800



# Safety and Care Advice

## Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
-  Parts of the assembly will be easier with 2 people. Look out for this logo.
- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.


## Care and maintenance

- only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


# Components-Parts

If you have damaged or missing components,  
call the Customer Helpline: 0345 6400 800


Please check you have all the fittings listed below.

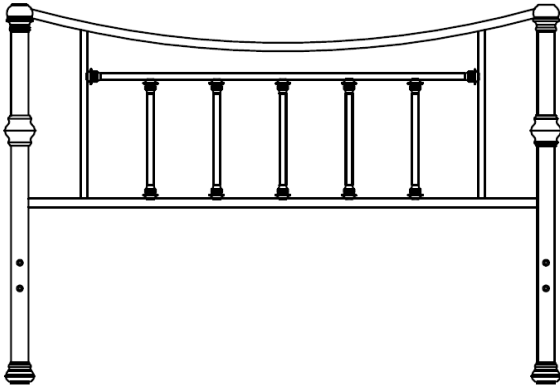


**1** Headboard (149\*123cm - 4'6) (164\*123cm - 5')

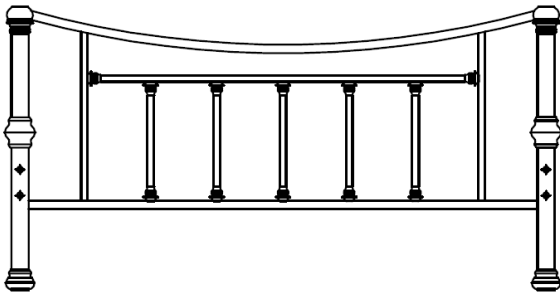


**2** Footboard (149\*95cm - 4'6) (164\*95cm - 5')




**3** Side rail x 2 (192\*5cm - 4'6) (202\*5cm - 5')



**4** Centre support (183\*3cm - 4'6) (188\*3cm - 5')



**5** End support x 2 (136\*4cm - 4'6) (151\*4cm - 5')









**6** Bentwood slat (68cm\*5.6cm x 28 pcs - 4'6") (75.5cm\*5.6cm x 30 pcs - 5')

# Components-Fittings

If you have damaged or missing components, call the Customer Helpline: 0345 6400 800

Please check you have all the fittings listed below.

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


<p><b>A</b></p>  <p>15mm Allen screw X 16</p>	<p><b>B</b></p>  <p>Plain washer X 8</p>	<p><b>C</b></p>  <p>Double plastic cap (14pcs - 4'6") (15pcs - 5')</p>
<p><b>D</b></p>  <p>Single plastic cap (28pcs - 4'6") (30 pcs - 5')</p>	<p><b>E</b></p>  <p>Allen key X 1</p>	<p><b>F</b></p>  <p>Finial X 4</p>

## Tools required



Ruler/tape  
measure

Ruler- Use this ruler to help correctly identify the screws

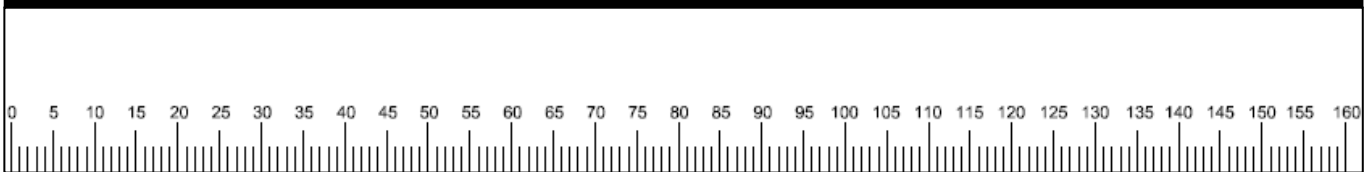


# Assembly Instructions

## Step 1.

### Assembling finials

Assemble finials **F** to headboard **1** and footboard **2**.

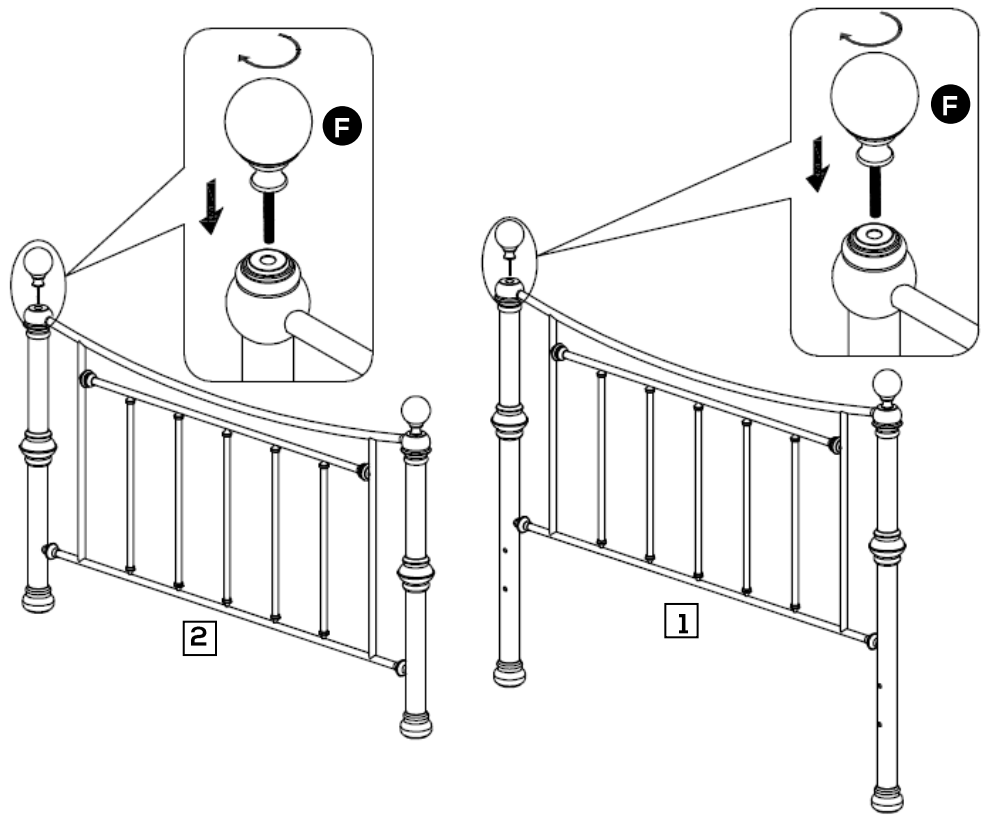


## Step 2.

### Assembling side rails

**a:** Loosely screw fixings **A** into headboard **1** and footboard **2** as shown.

**b:** Hook the side rail **3** brackets over fixings **A** in the headboard **1** and footboard **2**.

Once in position, fully tighten fixings **A**.

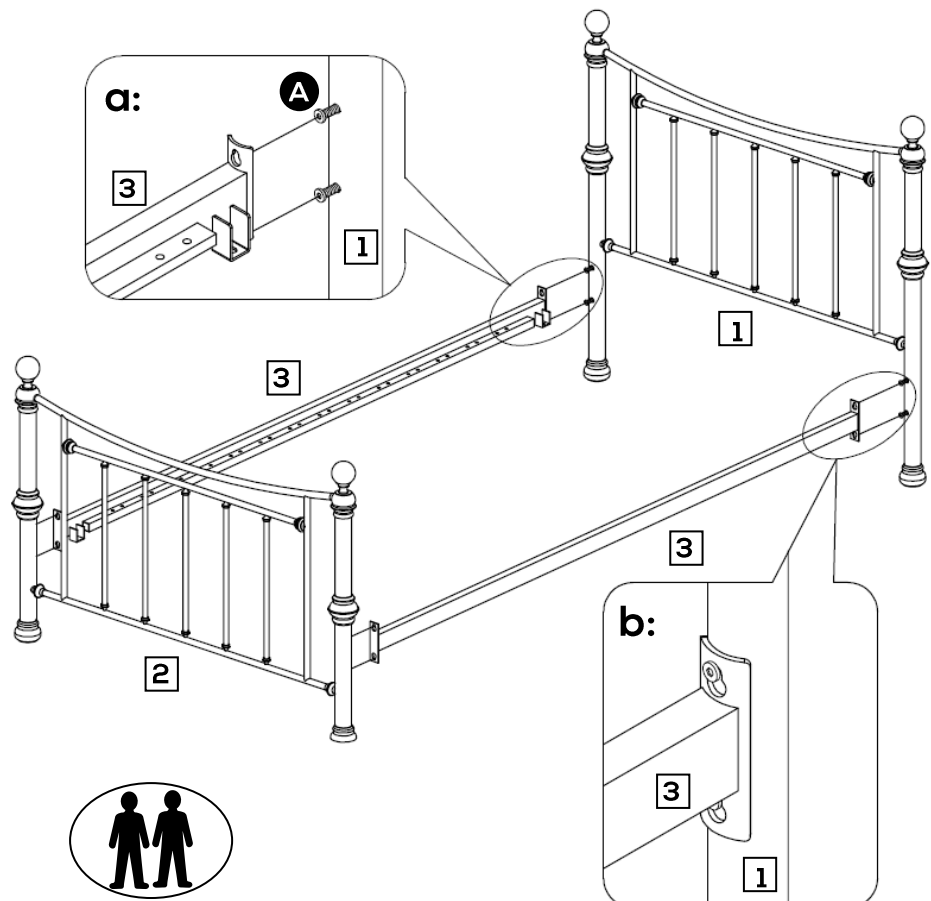

# Assembly Instructions


## Step 3.

### Assembling slat support frame

Assemble end supports **5** to each end of centre support **4** using fixings **A** and **B**.

**Note:** Ensure the holes in each end of end supports **5** are facing down.

Ensure the holes in central support **4** are facing up.

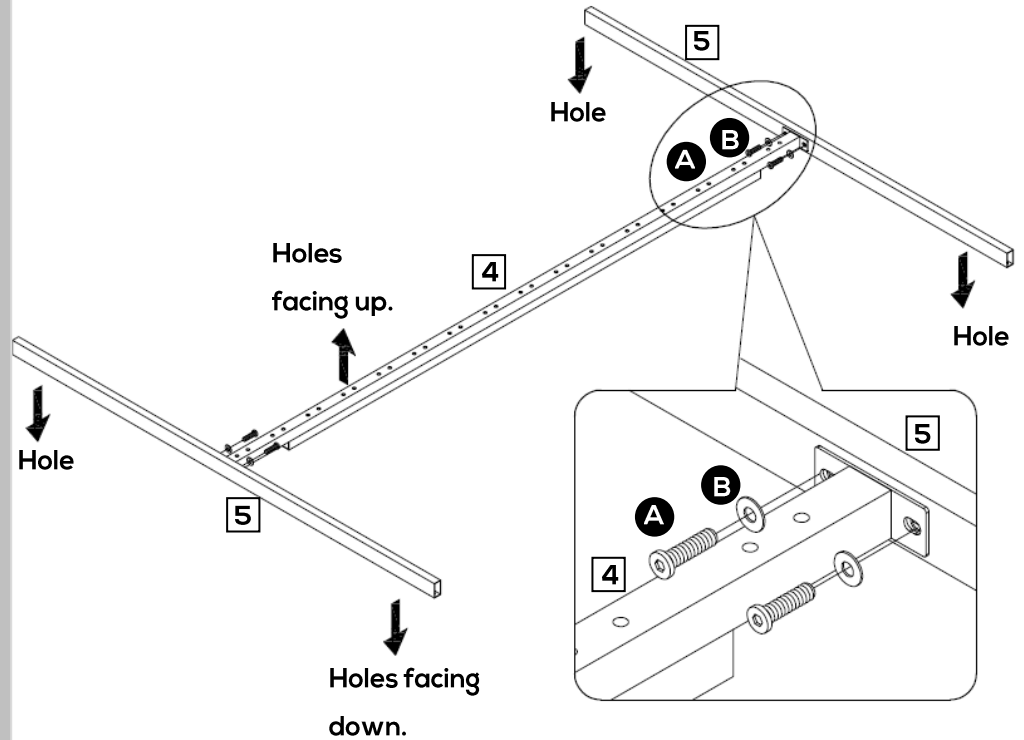


## Step 4.

### Attaching slat support

With help, locate the slat support frame into the brackets on the inside of side rails **3**.

Secure from the underside using fixings **A** and **B**.

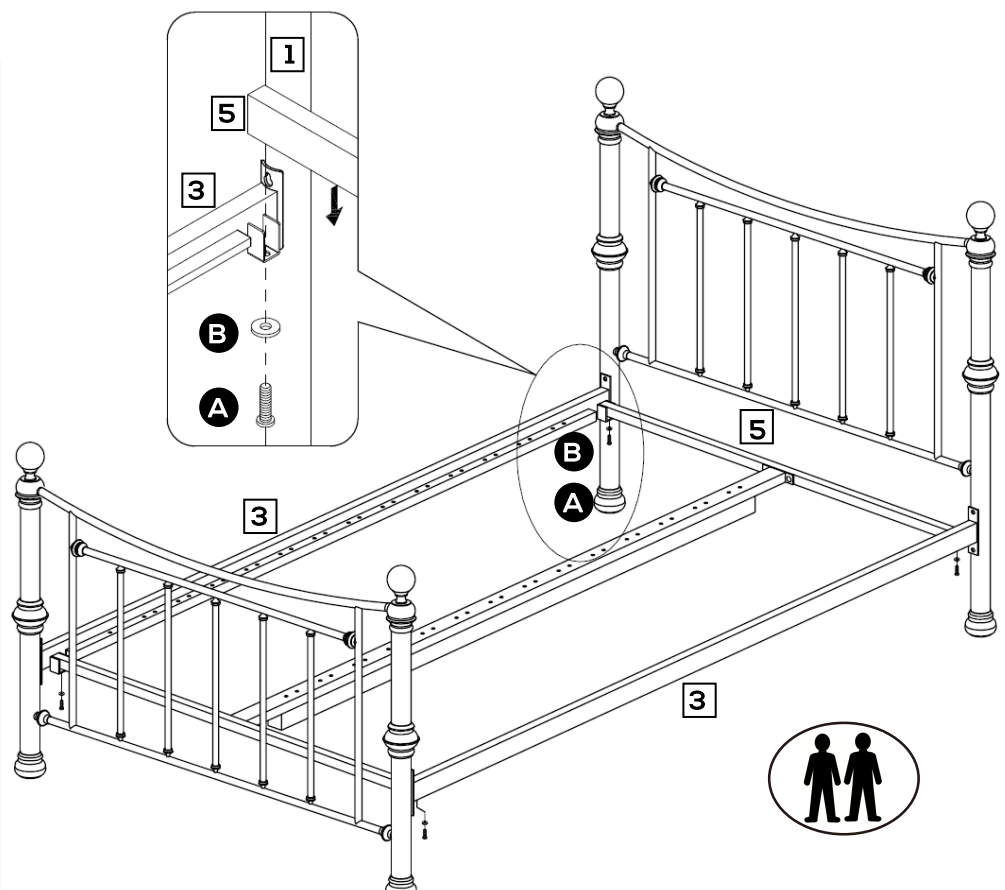


# Assembly Instructions

## Step 5.

### Attaching single slat caps

Assemble single plastic caps **D** onto one end of bentwood slats **6**.

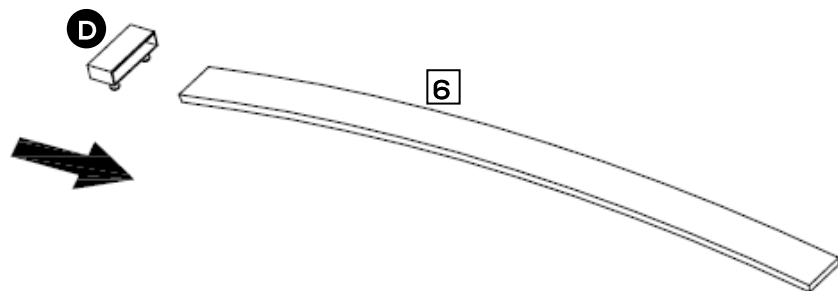


## Step 6.

### Attaching bentwood slats

**a:** Fit bentwood slats **6** into the side rails **3** by locating single plastic brackets **D** into the holes.

**b:** Fit bentwood slats **6** into both sides of double plastic caps **C**, before locating caps **C** into central support **4**.

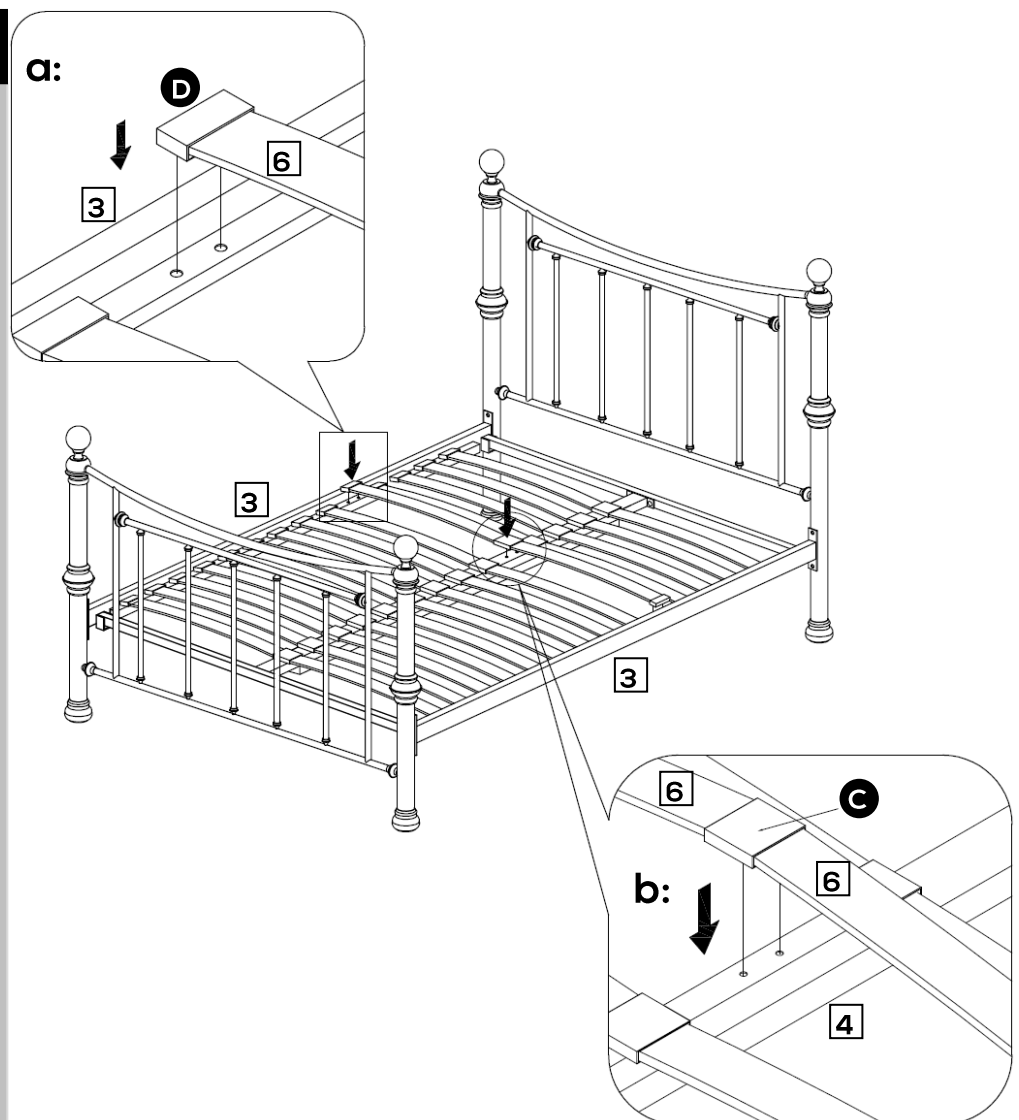

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**  
Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West, Central Milton Keynes, MK9 2NW