
Grafton - 3 Door 2 Drawer Robe

Assembly Instructions - Please keep for future reference

411/2066

425/3705

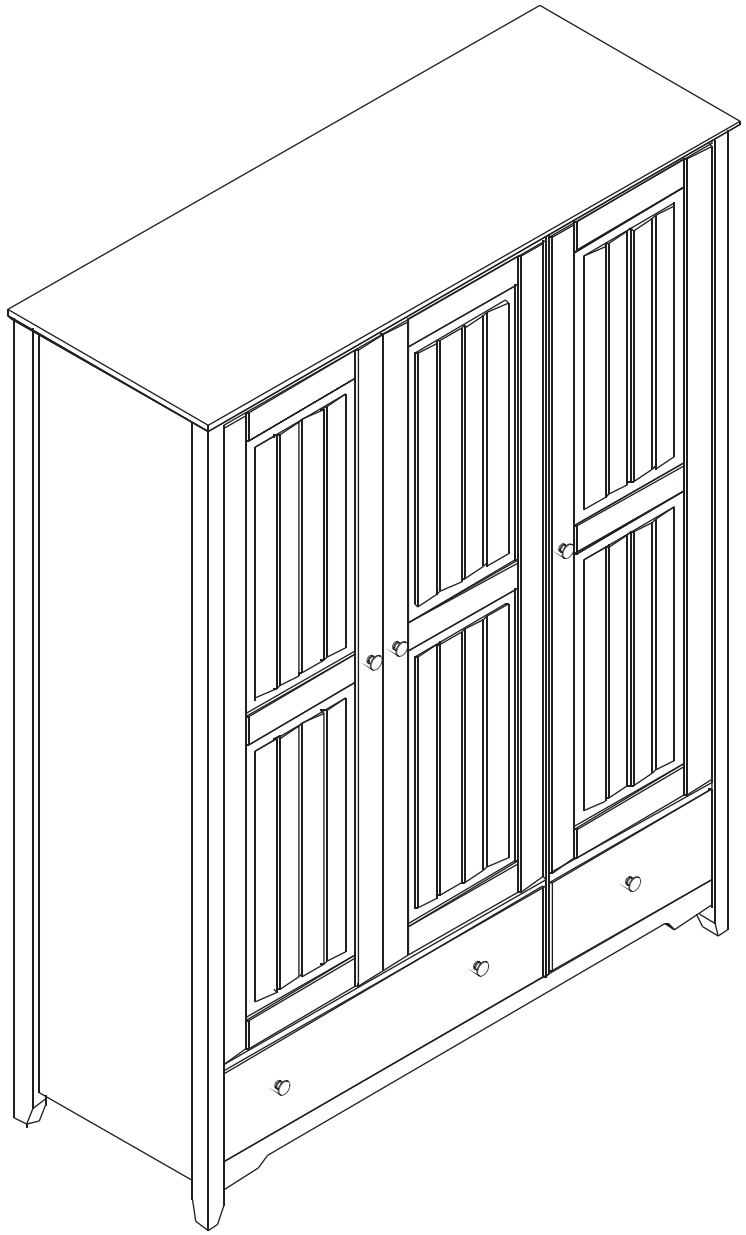

Dimensions

Width - 137.6cm
Depth - 52cm
Height - 181.8cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 31/03/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

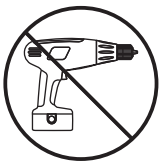

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

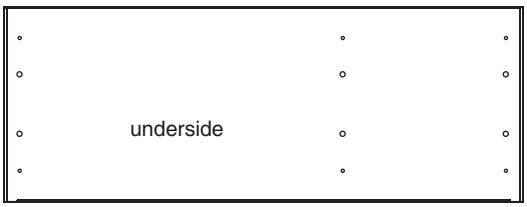


1 Top panel
(137.6 x 52cm)

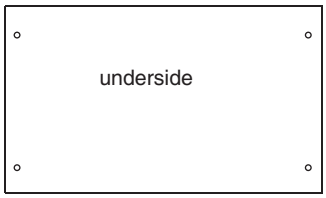


2 Base panel
(84 x 49.7cm)

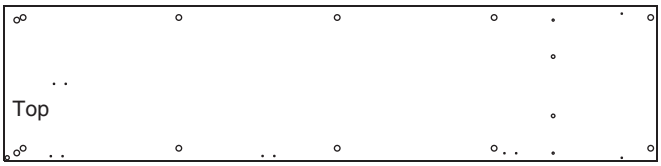

3 Left side panel
(173 x 41.5cm)

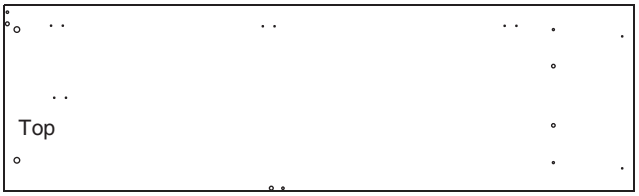


4 Division panel
(167 x 49.7cm)

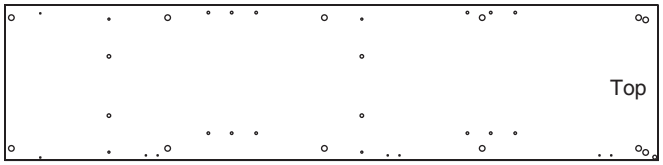


5 Right side panel
(173 x 41.5cm)




6 Right back foot
(180 x 4.5cm)




7 Right front foot
(180 x 4.5cm)




8 Left back foot
(180 x 4.5cm)




9 Left front foot
(180 x 4.5cm)



10 Bottom back rail
(127.6 x 6cm)




11 Bottom front rail
(127.6 x 6cm)




12 Small back rail
(84 x 6cm)




13 Hanging rail
(83.1 x 3.5cm)




14 Top front rail
(84 x 6.5cm)




15 Small front rail
(42.1 x 6.5cm)

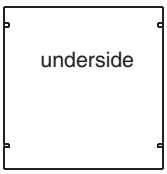

16 Shelf x 2
(42 x 42.9cm)

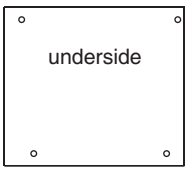


17 Fixed shelf
(42.1 x 47.8cm)

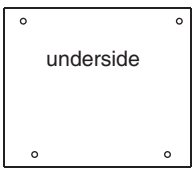

18 Small base panel
(42.1 x 49.7cm)

Components - Panels

Please check you have all the panels listed below

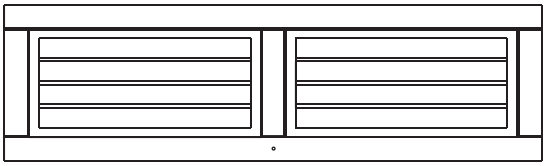

19 Door x 3
(142.5 x 41.5cm)



20 Large drawer front
(83.4 x 20cm)



21 Drawer left side x 2
(45 x 15cm)




22 Drawer right side x 2
(45 x 15cm)



23 Large drawer back
(78.5 x 15cm)



24 Large drawer bottom
(80 x 45cm)




25 Small drawer front
(41.5 x 20cm)



26 Small drawer back
(36.6 x 15cm)



27 Small drawer bottom
(38.1 x 45cm)



28 Small back panel x 2
(174 x 42.7cm)



29 Large back panel
(174 x 43.5cm)



30 Foot
(14.4 x 6.5cm)





















Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

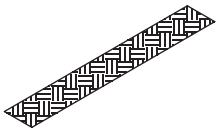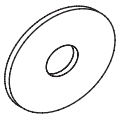A  Metal dowel x 56	**B** Locking nut x 56 	**C**  30mm Screw x 10
D  16mm Screw x 43	**E**  14mm Screw x 22	**F**  Nail x 55
G  22mm Bolt x 06	**H**  Wooden dowel x 49	**I** Wall strap x 01 
J  Washer x 01	**L**  25mm Screw x 02	**M**  Metal door knocker x 02
N  Door hinge x 09	**O**  Hinge plate x 09	**P**  Shelf support pin x 08
Q  Squared washer x 10	**R**  Hanging rail support x 02	**S**  Right runner x 02 pair
T  Left runner x 02 pair	**U**  Handle x 06	**V**  H profile 1670mm x 01


Tools required




Phillips screwdriver (medium & large)

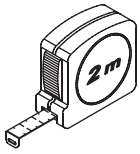

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels Ⓗ into the indicated parts.

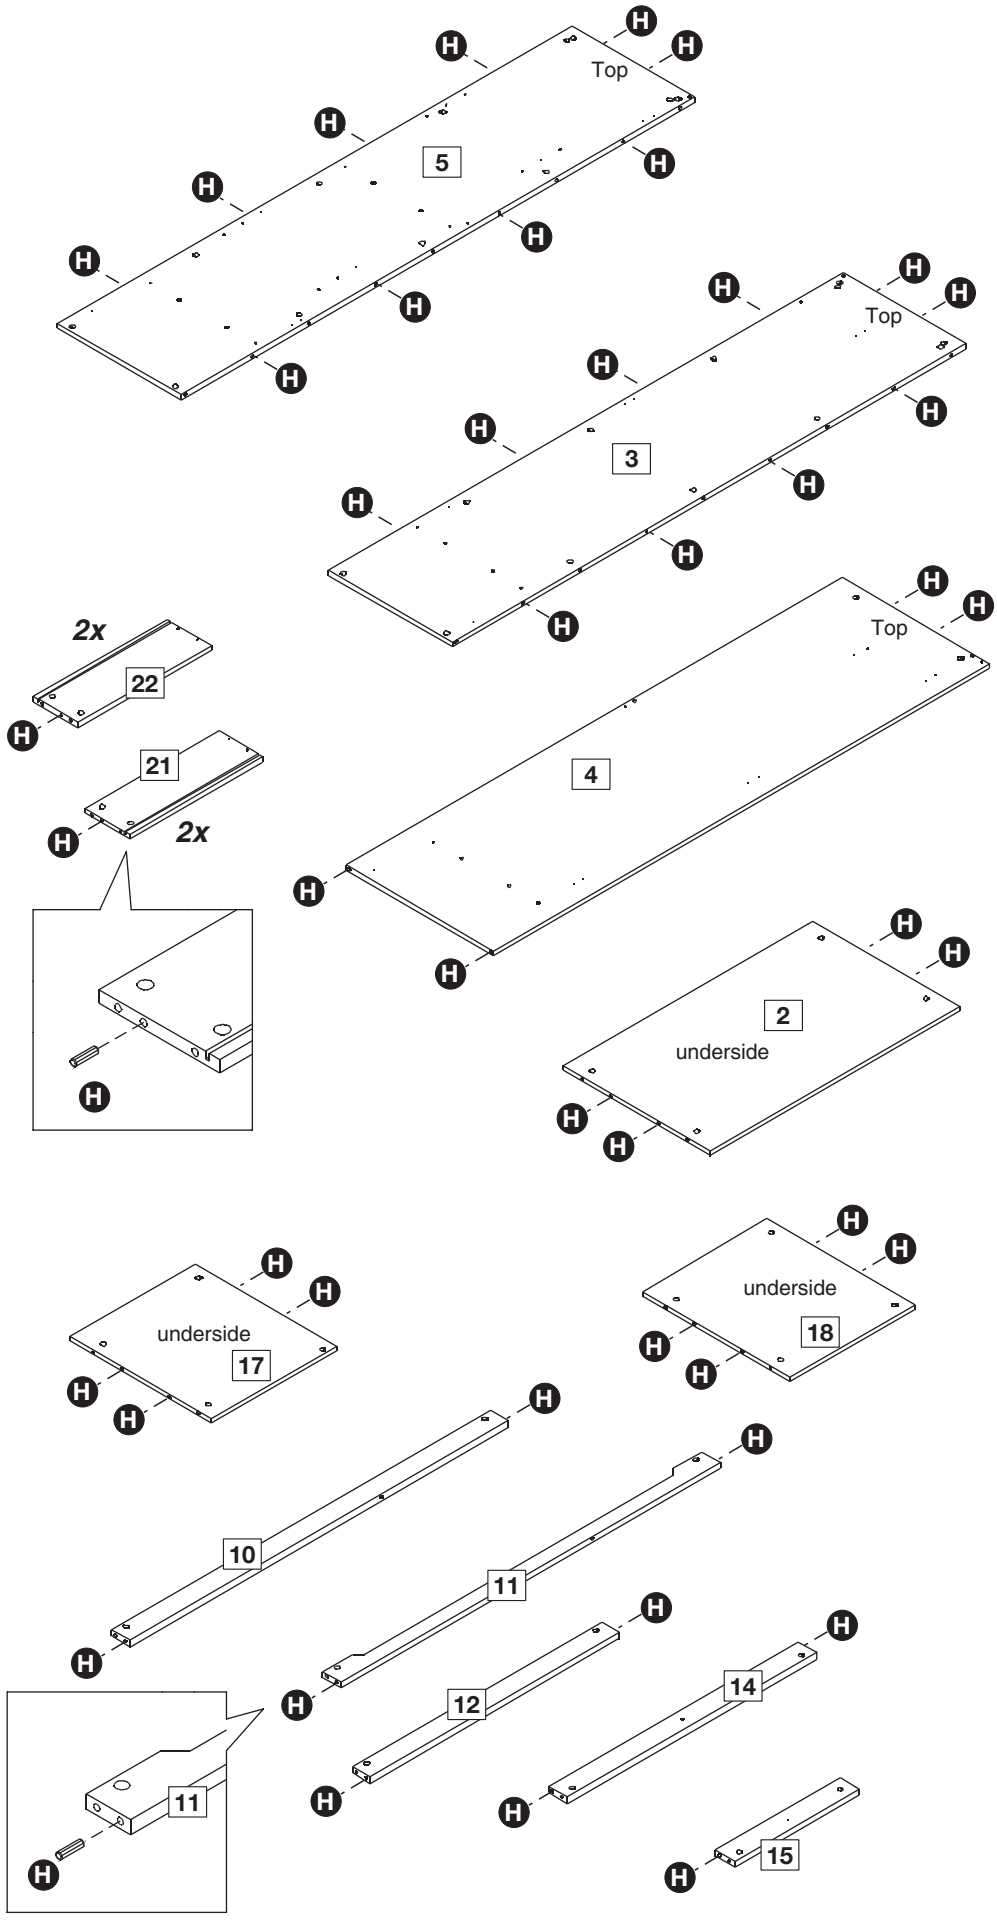

Assembly Instructions

Step **2**


Fitting metal dowels.


Screw metal dowels (A) in the indicated parts.


Note: Insert metal dowels as far as shown.


Do not over tighten.


Continued next page.

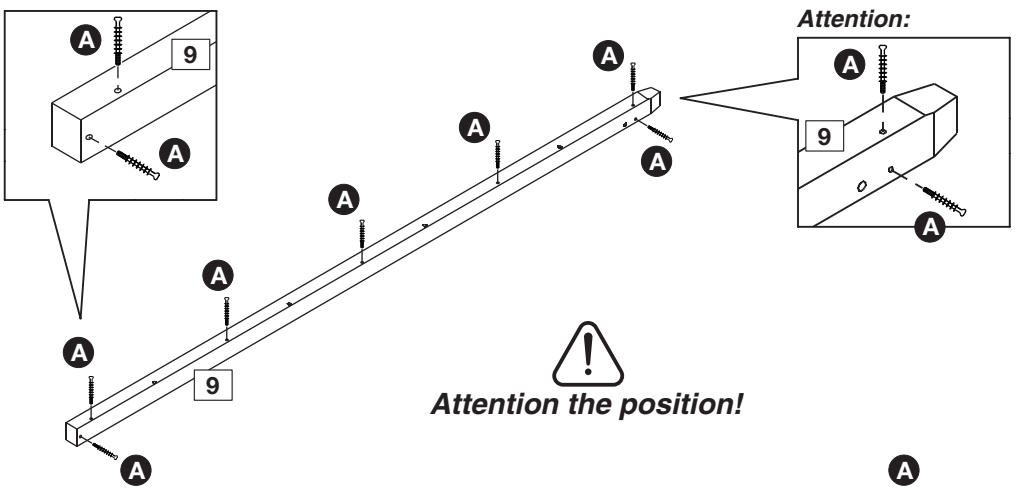

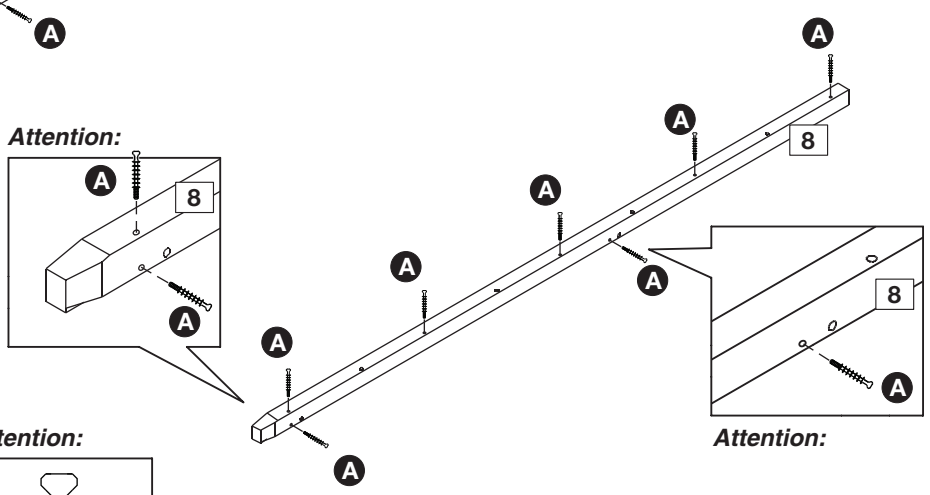

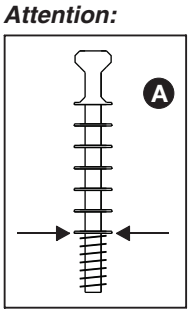

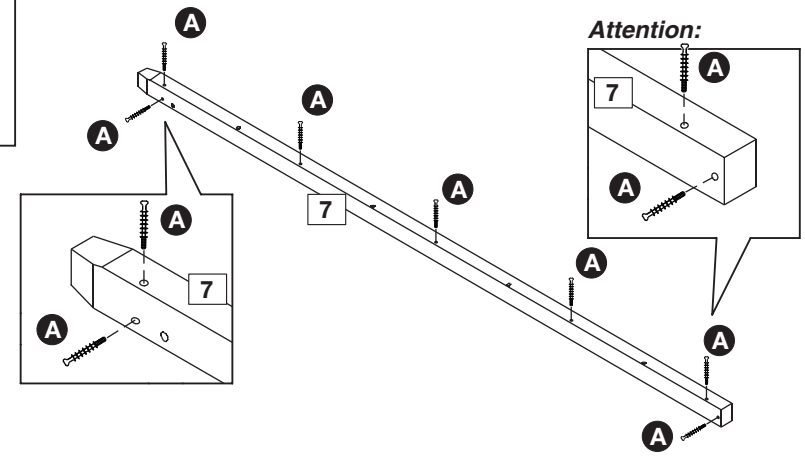

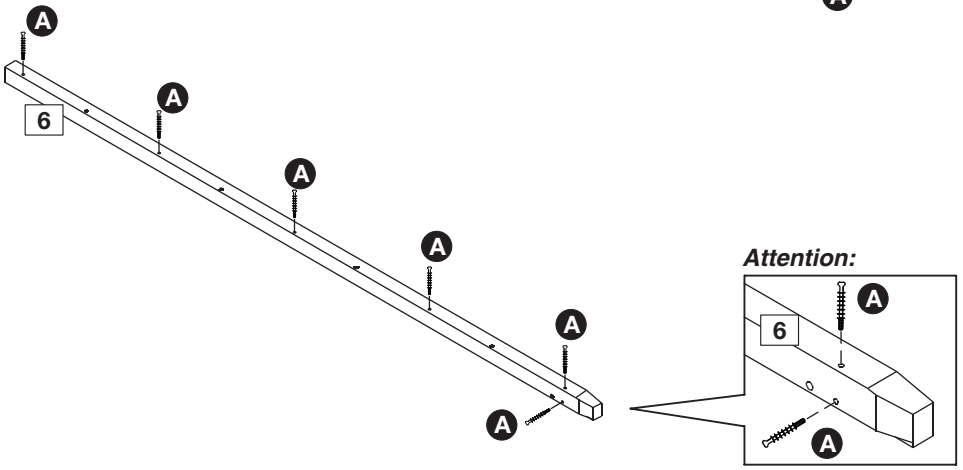


Step 2 - continued

Fitting metal dowels.

Screw metal dowels Ⓐ in the indicated parts.

Note: Insert metal dowels as far as shown.

Do not over tighten.

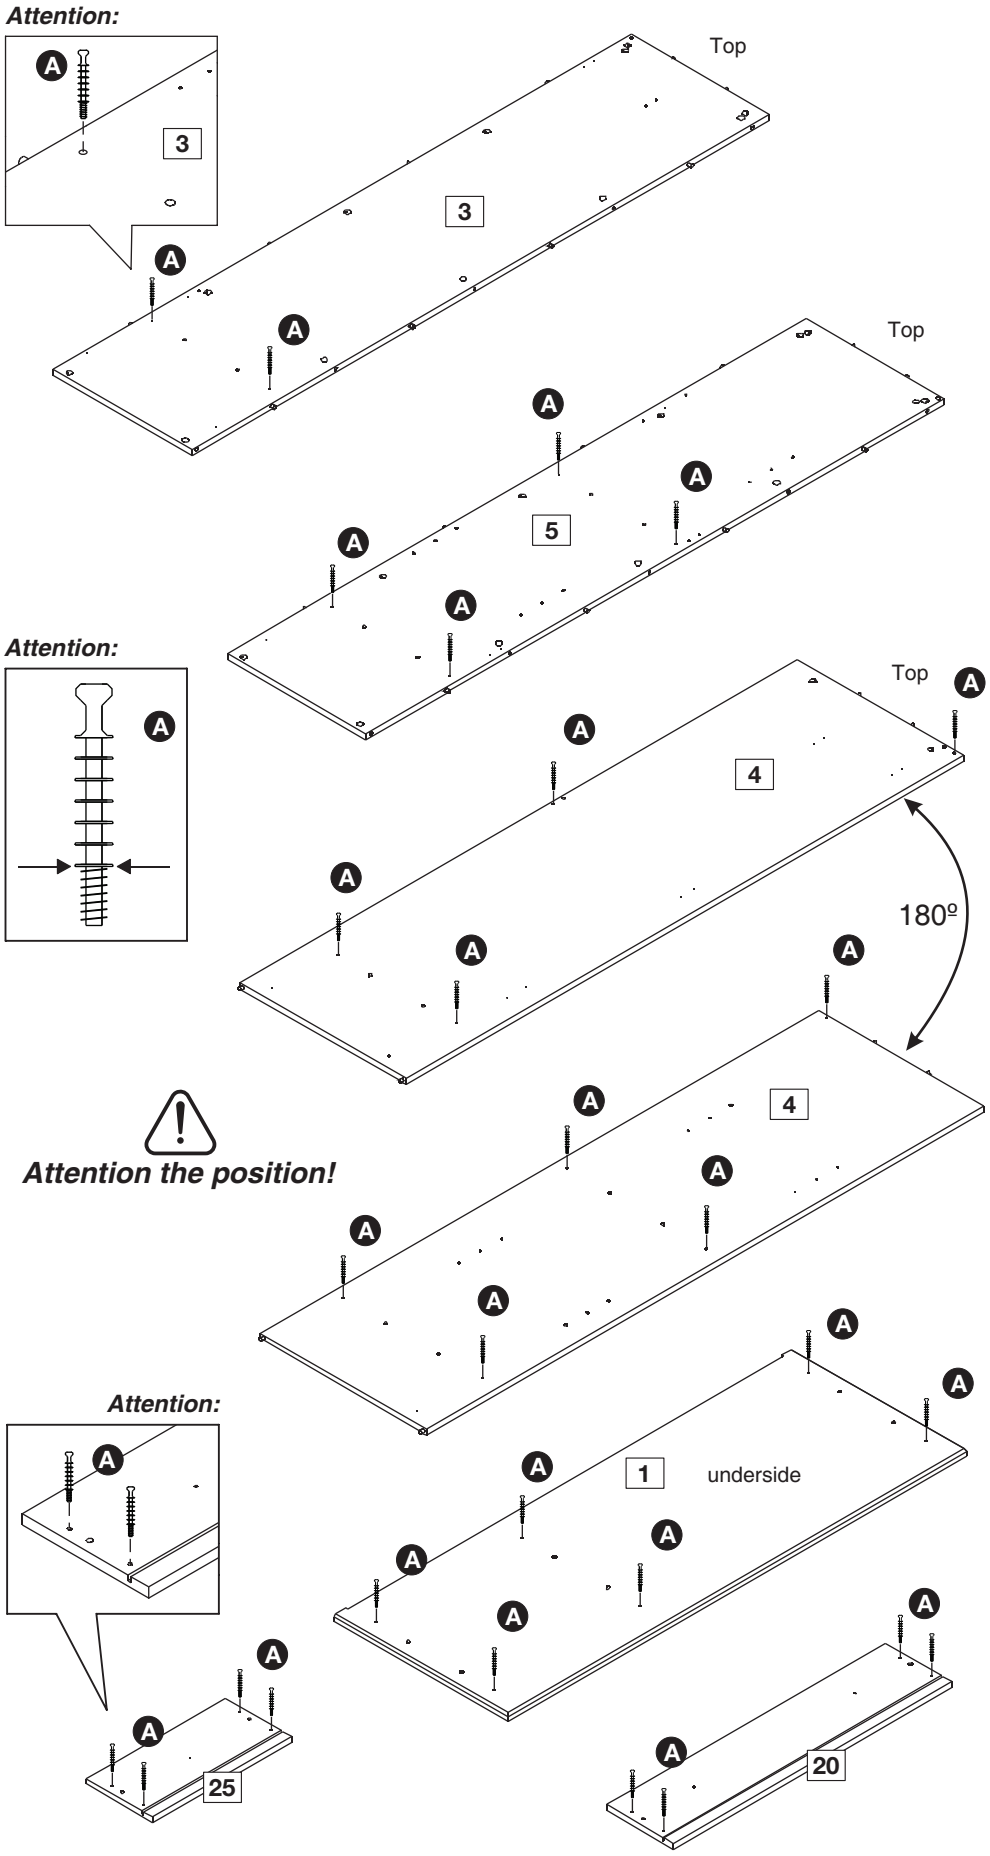

Step **3**

Assembling the sides.


Fit feet 8 and 9 to the left side panel 3 as shown.


Fit feet 6 and 7 to the right side panel 5 as shown.


Insert 20 locking nuts B in the indicated parts.


Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

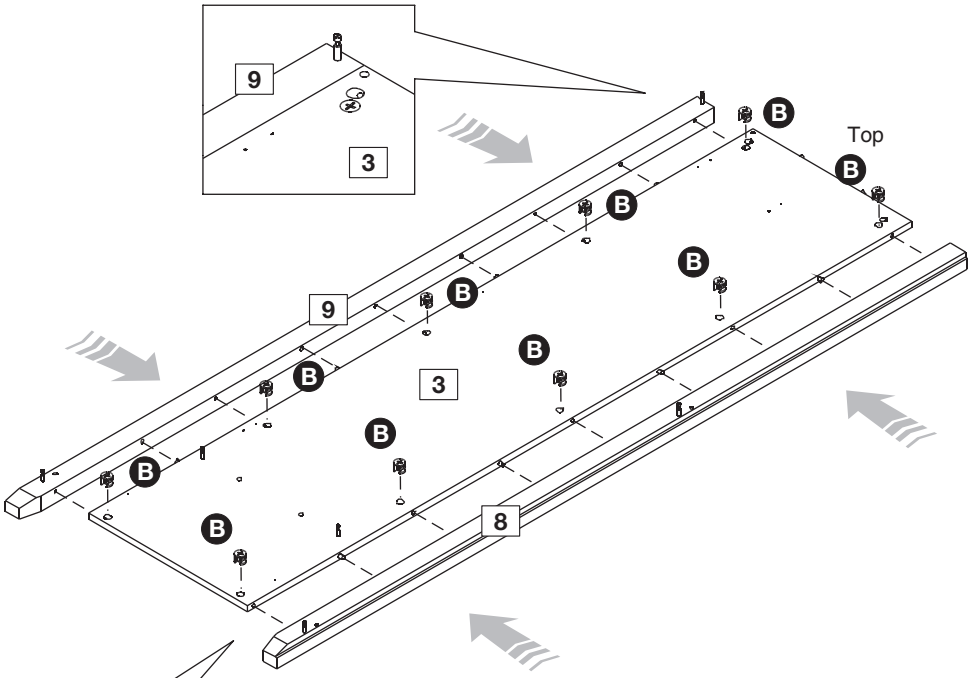


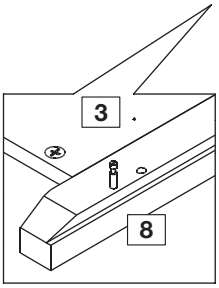

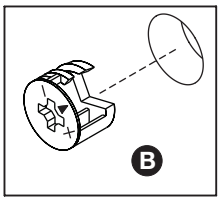

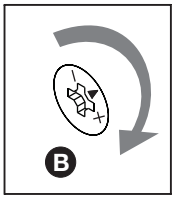

Attention the position!

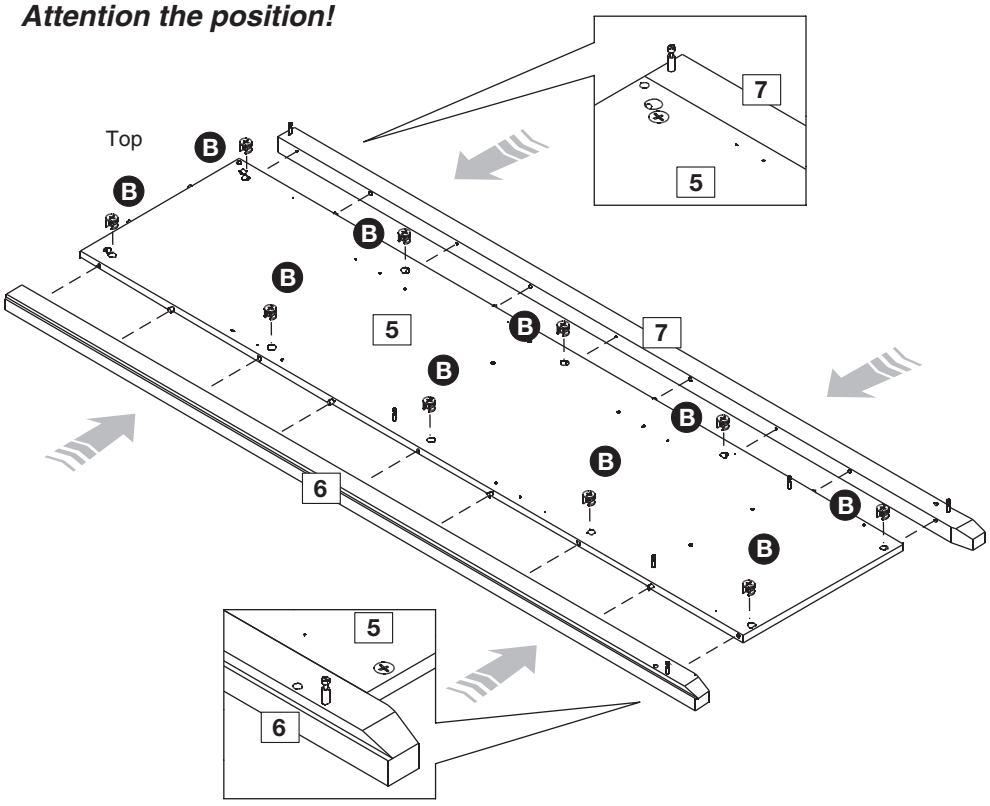


Step 4

Fixing hinge plates.

a: Fix hinge plates Ⓞ into the pre drilled holes on side panels 3 , 5 and division panel 4 using screws Ⓓ.

b: Fix hanging rail supports Ⓡ into the pre drilled holes on the left side panel 3 and division panel 4 using screws Ⓓ.


c: Insert shelf support pins Ⓟ through holes on right side panel 5 and division panel 4 as shown.

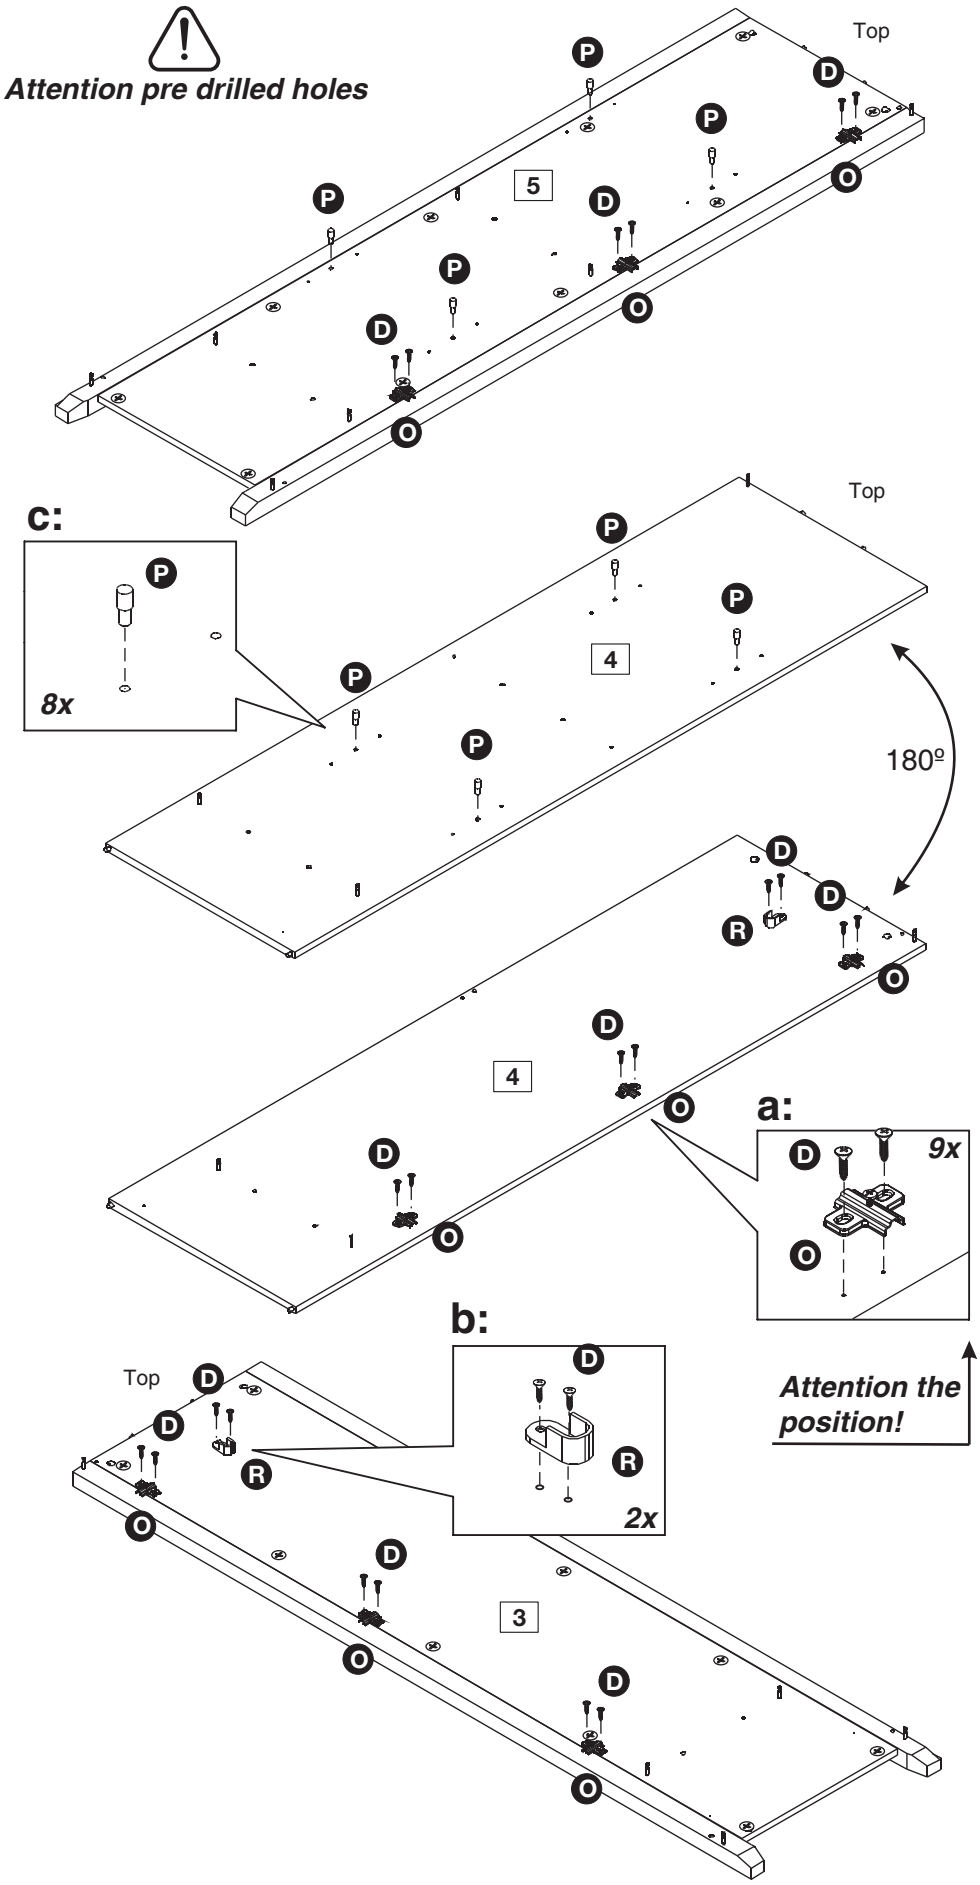


Step 5

Fixing runners.

Attach right runner (S) into the pre drilled holes on the right side panel [5] using screws (E).

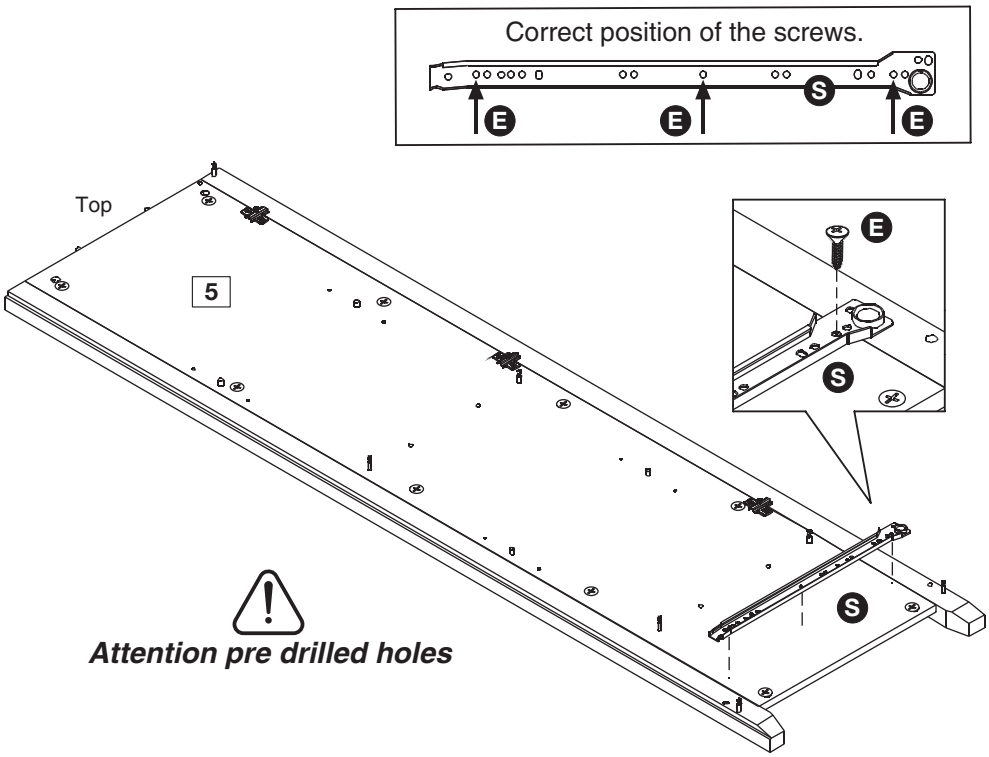

Attach left runner (T) into the pre drilled holes on the left side panel [3] using screws (E).

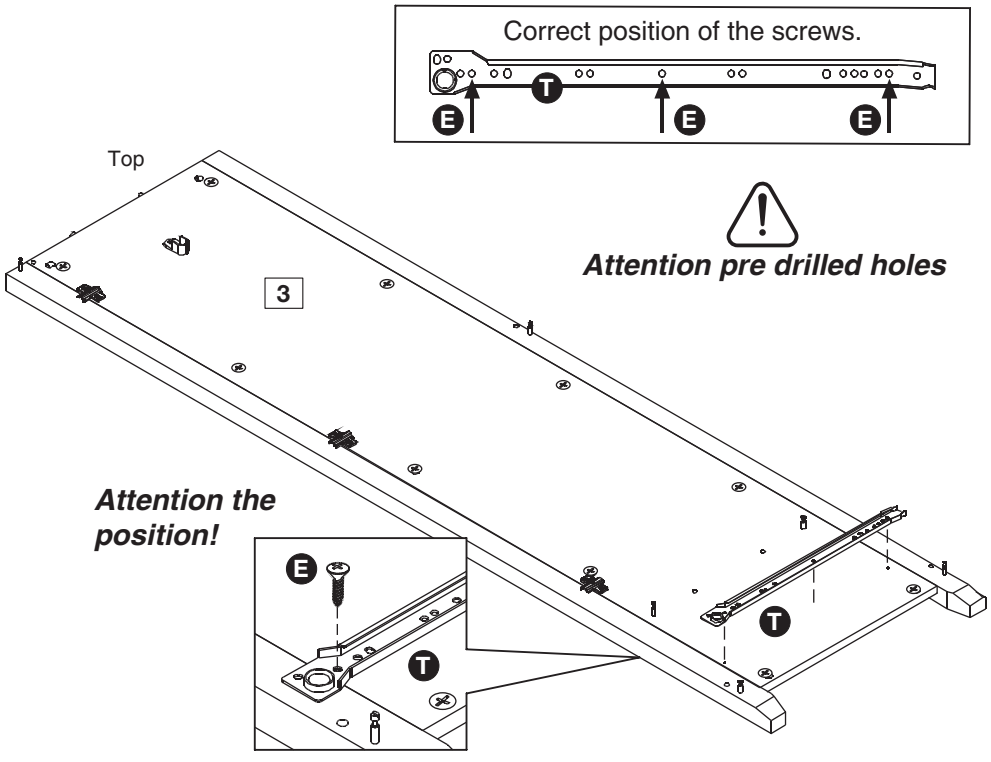



Continued next page.

Step 5 - continued

Fixing runners.

Attach left runner T into the pre drilled holes on the division panel 4 using screws E.

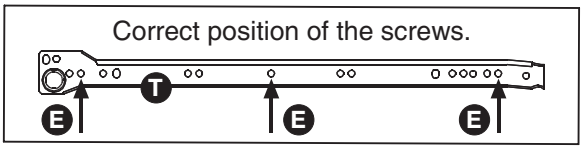

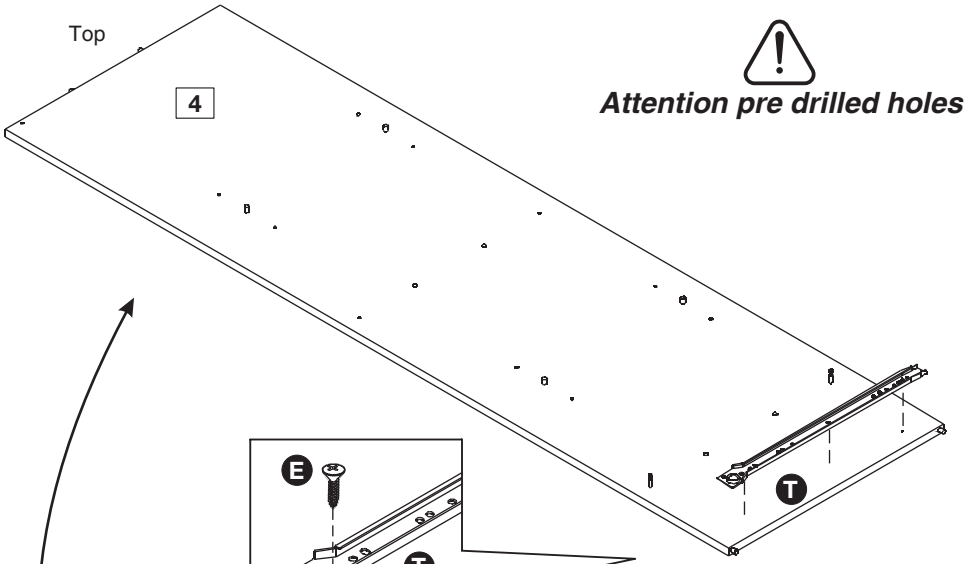



Attention pre drilled holes

Attention the position!

180º

Attach right runner S into the pre drilled holes on the division panel 4 using screws E.

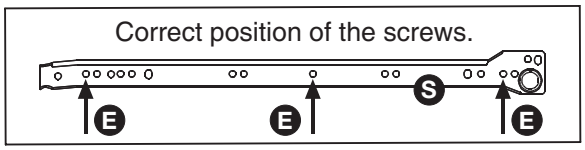

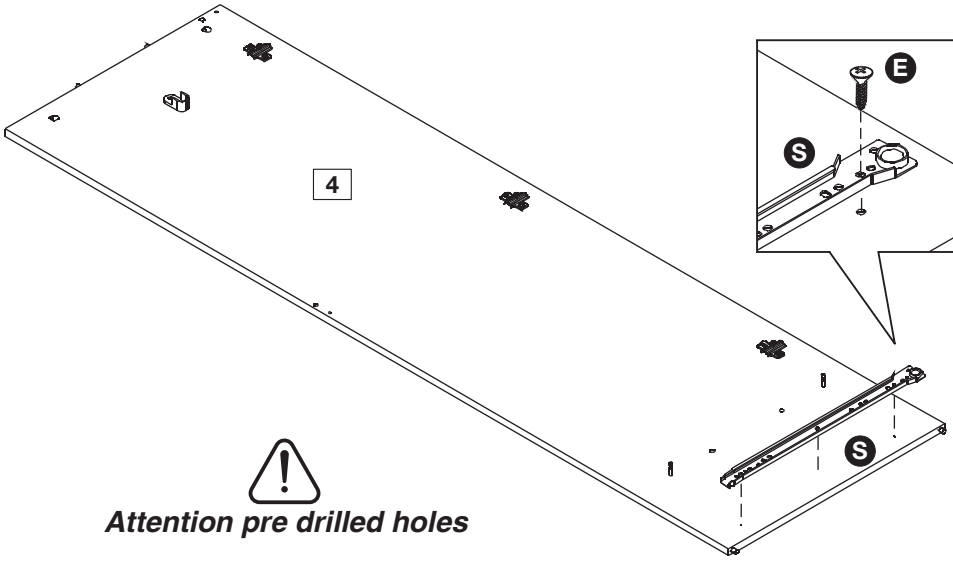


Attention pre drilled holes


Step 6

Fixing door knocker.

Fix metal door knocker Ⓜ into pre drilled holes on base panel 2 and top front rail 14 using screws Ⓓ.

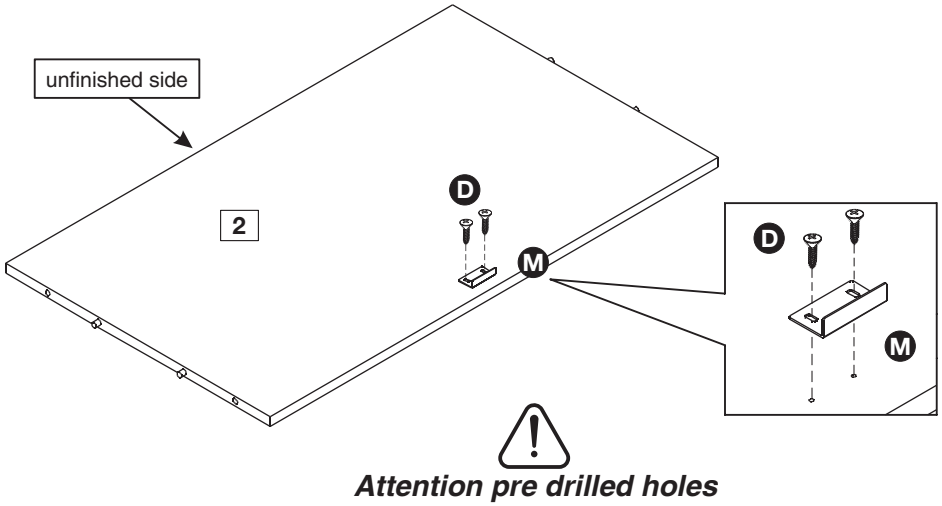

Attention pre drilled holes

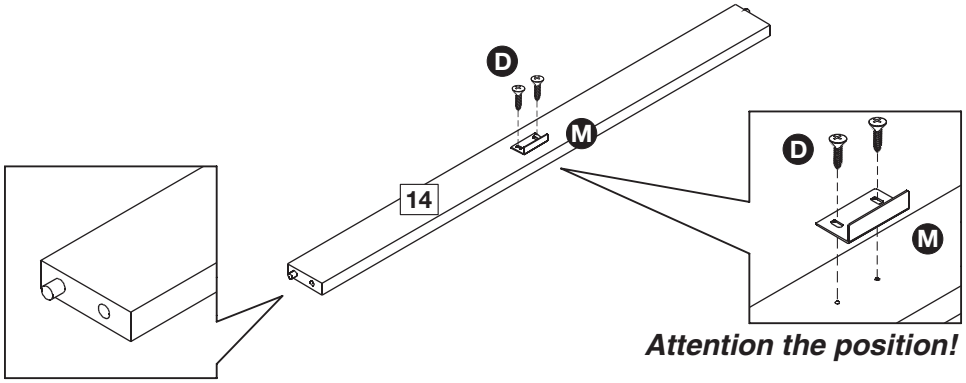

Attention the position!

Step 7


Assembling the cabinet.

Fit parts 2, 10, 11, 12 and 14 to left side panel 3 and division panel 4.

Insert 10 locking nuts Ⓑ in the indicated parts.

Use a screwdriver to turn locking nuts Ⓑ clockwise to lock.

Do not over tighten.

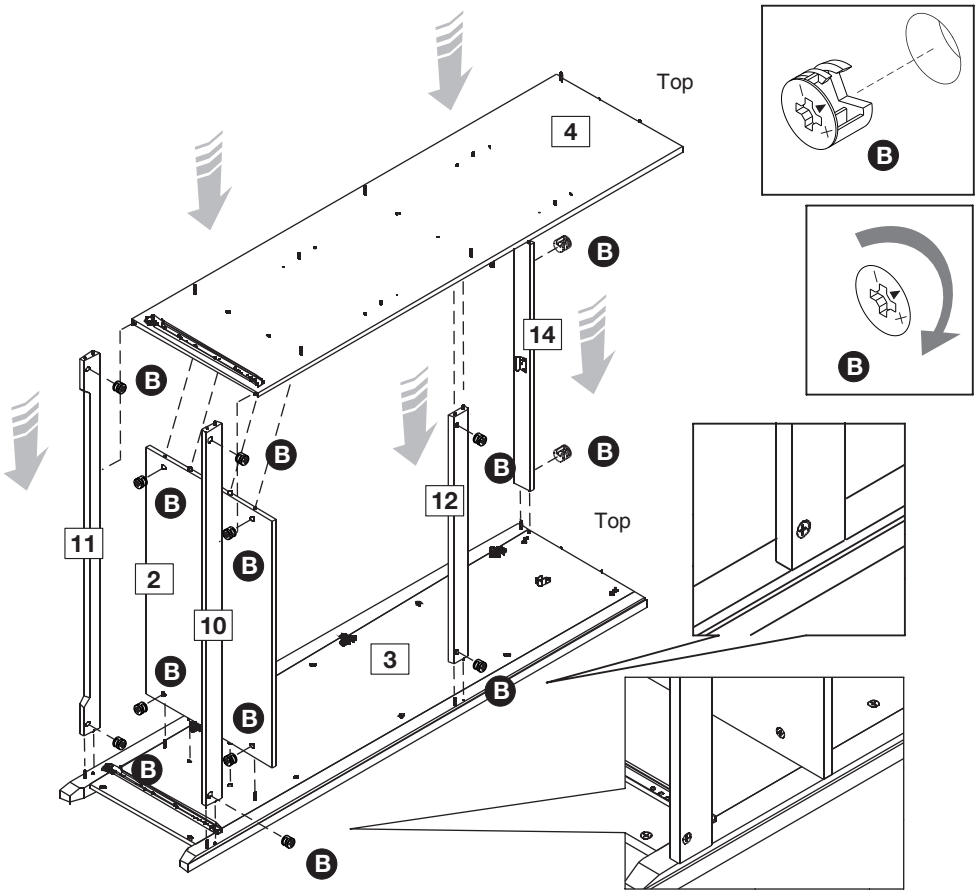

Step **8**


Fixing division panel.

Fit parts 15, 17 and 18 to division panel 4.

Insert 5 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

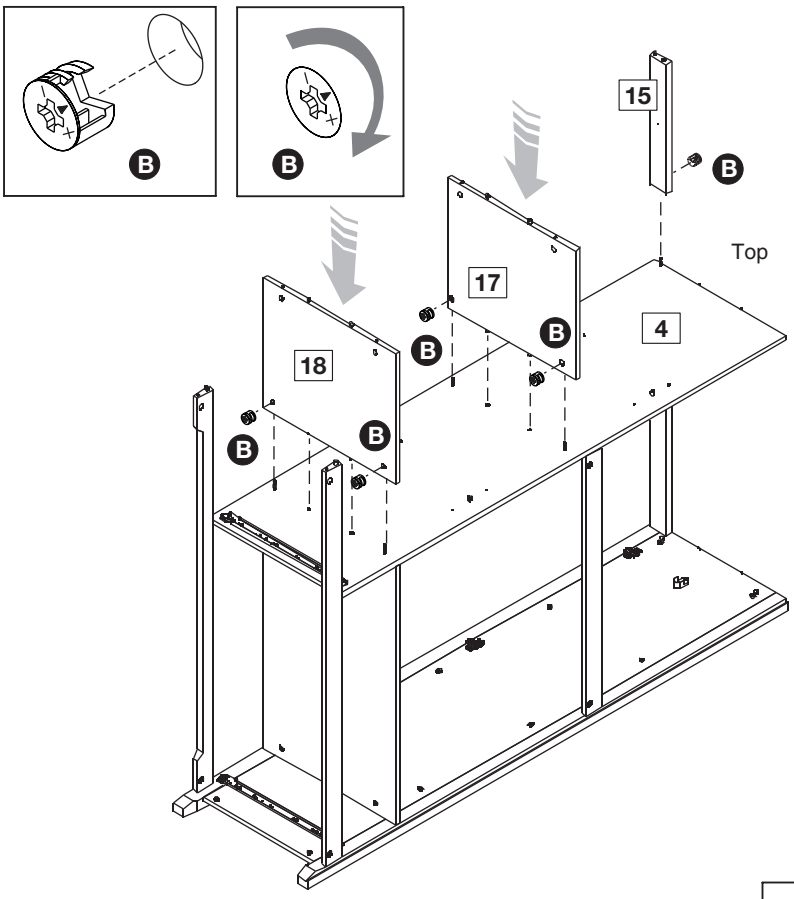

Step **9**


Fixing right side panel.

Fit right side panel 5 on to cabinet.

Insert 7 locking nuts B in the indicated parts.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

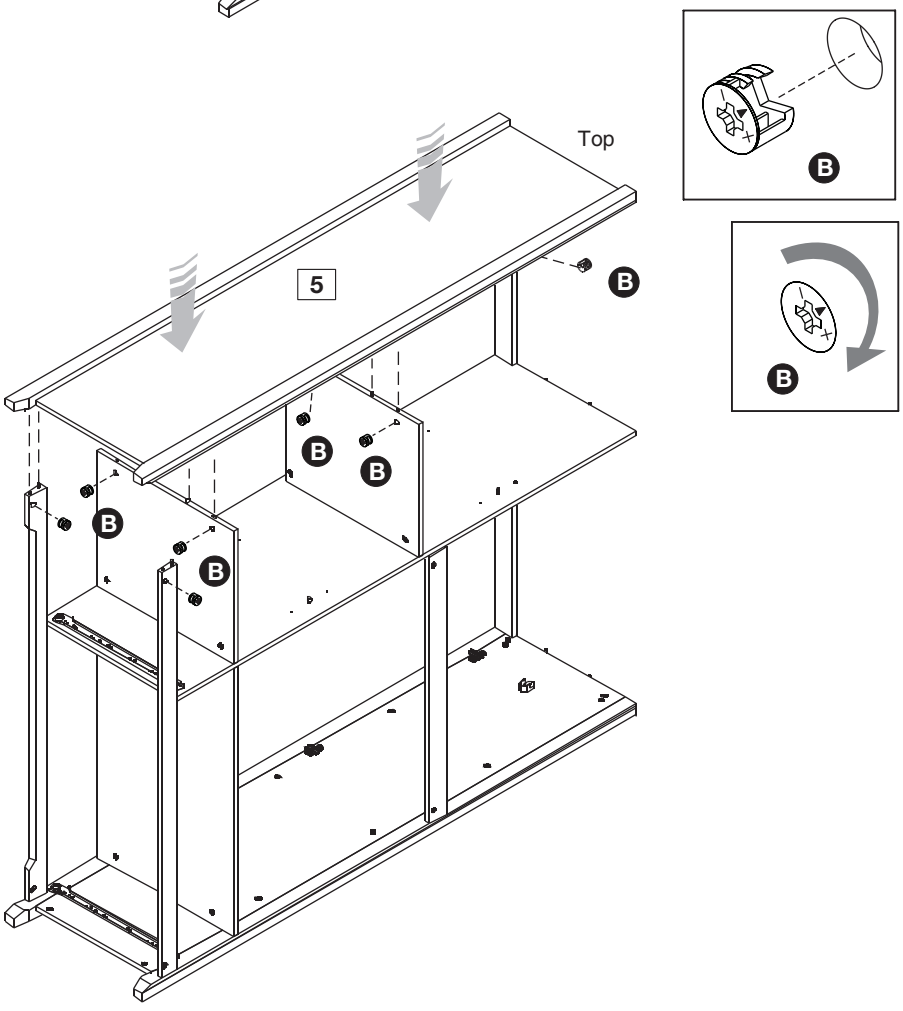

Step 10

Fixing the top panel.

With help, carefully turn the robe with its front facing up.

Fit top panel 1 on to cabinet.


Insert 6 locking nuts B into the panels as shown.

Use a screwdriver to turn locking nuts B clockwise to lock.

Do not over tighten.

Fix top front rail 14 and small front rail 15 using screws L.

Fix foot 30 to the division panel 4 using screws C as shown.

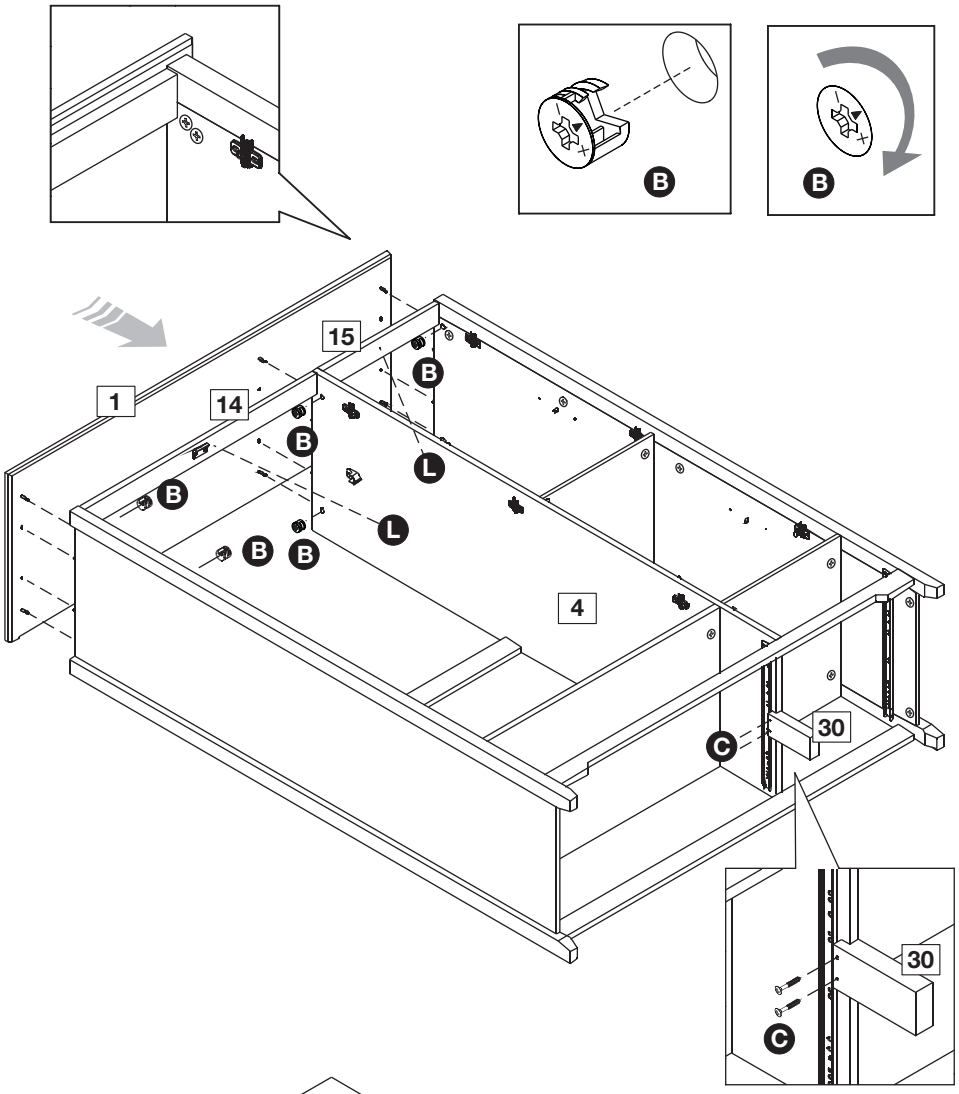

Step 11

Fixing back panel.

With help, carefully stand the product upright.


Important: Cabinet **MUST** be 'square' when back panels are attached.

a: Attach back panel 29 to the cabinet using nails F.

b: Attach small back panel 28 to the left side first, then position H profile V onto back panel (just attach).

c: Carefully slot the second back panel 28 into profile and fix it to the cabinet using nails F.


Continued next page.

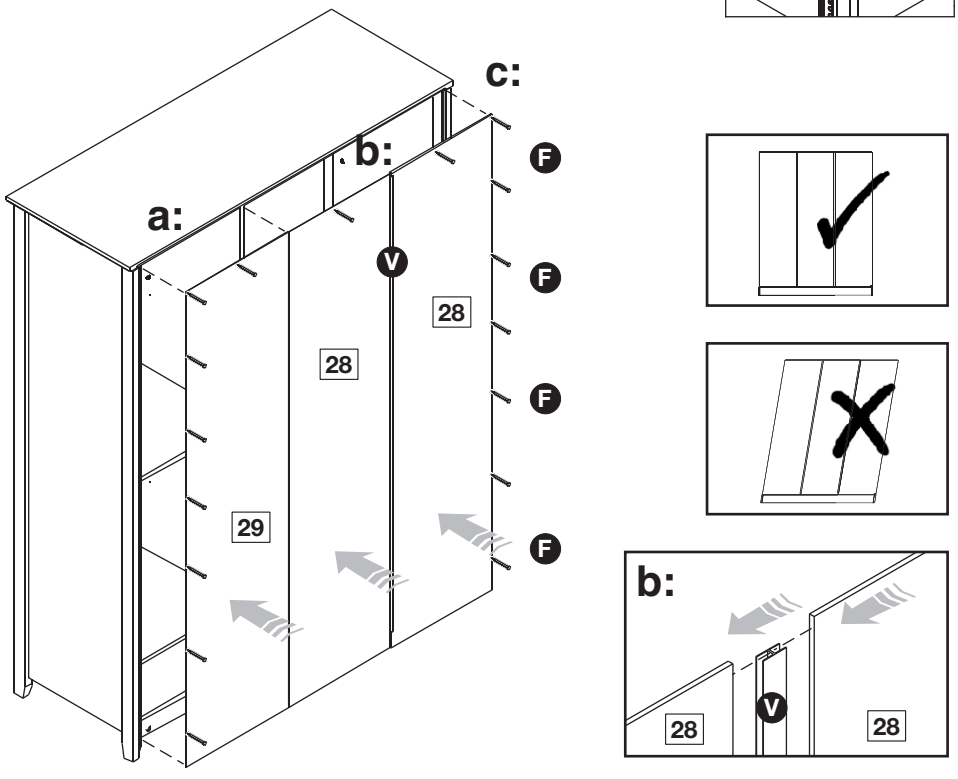


Step 11 - continued

Fix back panel 28 and 29 using squared washer Q and nails F as shown.

Note: Attention to the measures.

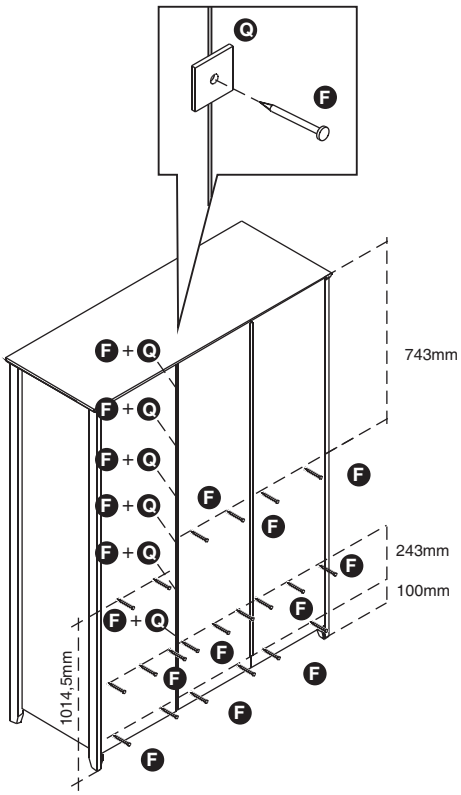


Attention the position!

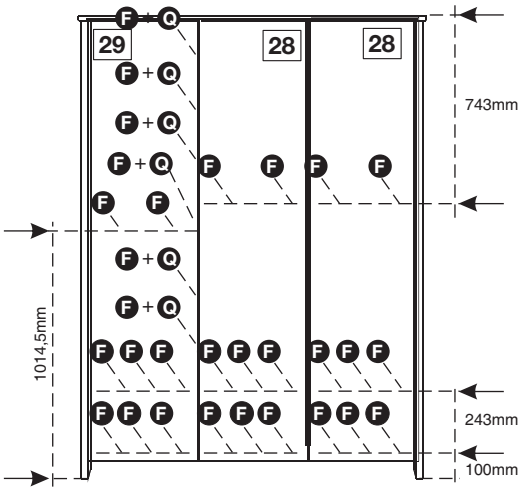

Step 12

Preparing the doors:


Fix door hinges N to the doors 19 using screws D as shown.

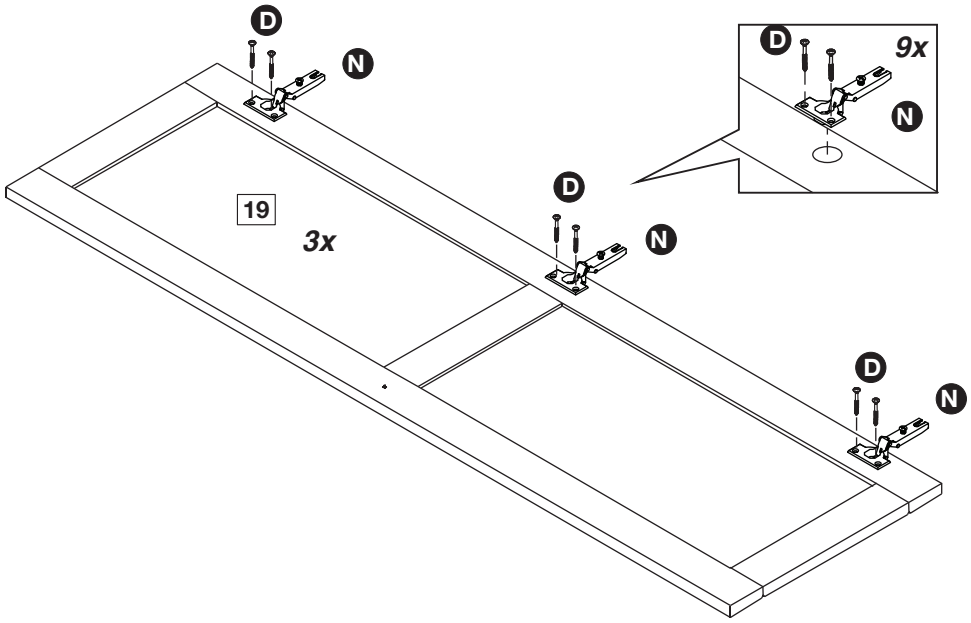

Step **13**

Attach handles.

Using bolts G attach handles U to the doors.

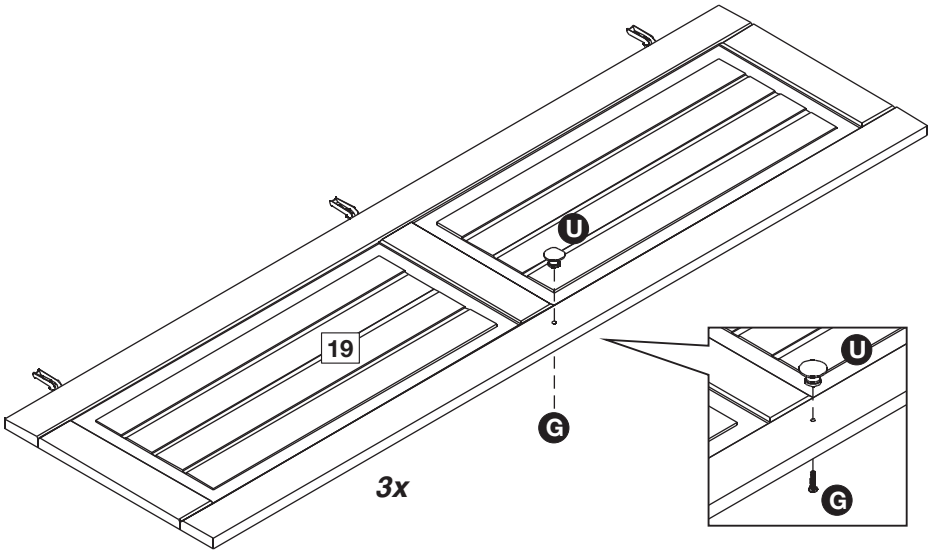

Step **14**


Assembling large drawer:


a: Fit drawer sides 21 and 22 to the large drawer front 20.

Insert 4 locking nuts B into drawer sides where shown.

Use a screwdriver to turn locking nuts B clockwise to lock.


Do not over tighten.

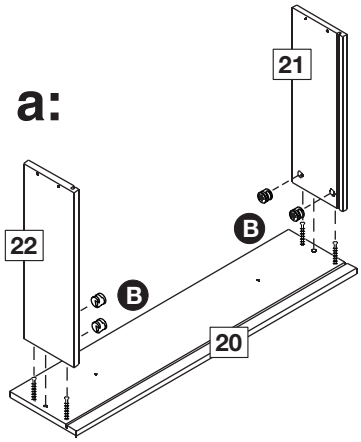

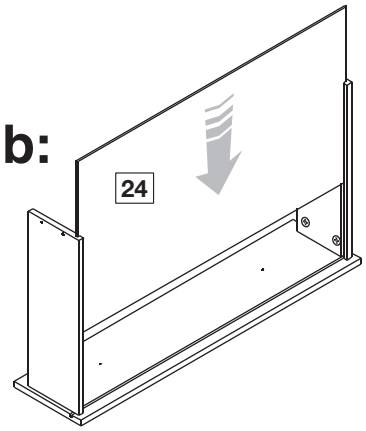



b: Slide large drawer bottom 24 into slots on drawer sides.

c: Position large drawer back 23 in place, press the drawer sides and fix using screws C .

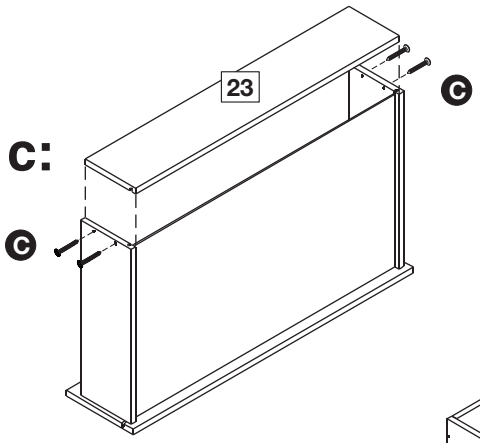

Using bolts G attach handles U to the drawer front.

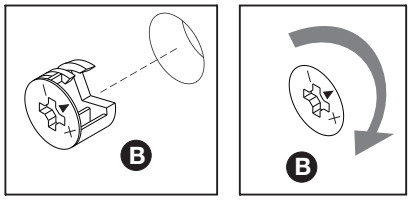

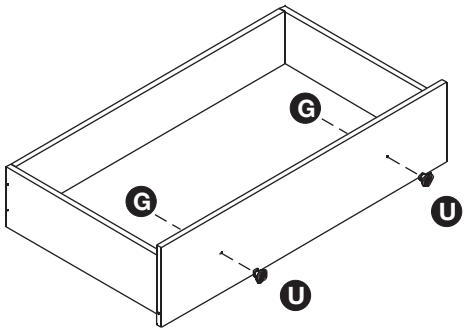


Step 15


Fixing runners.

Attach right runner (S) and left runner (T) in the bottom edge of the drawer using screws (E) as shown.

Make sure runners are correctly positioned according to the diagram prior to fixing.

Correct position of the screws.

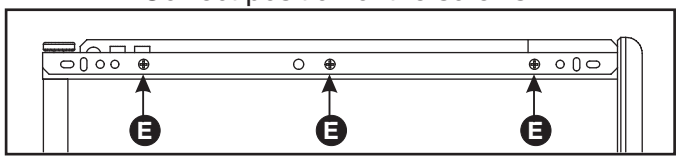

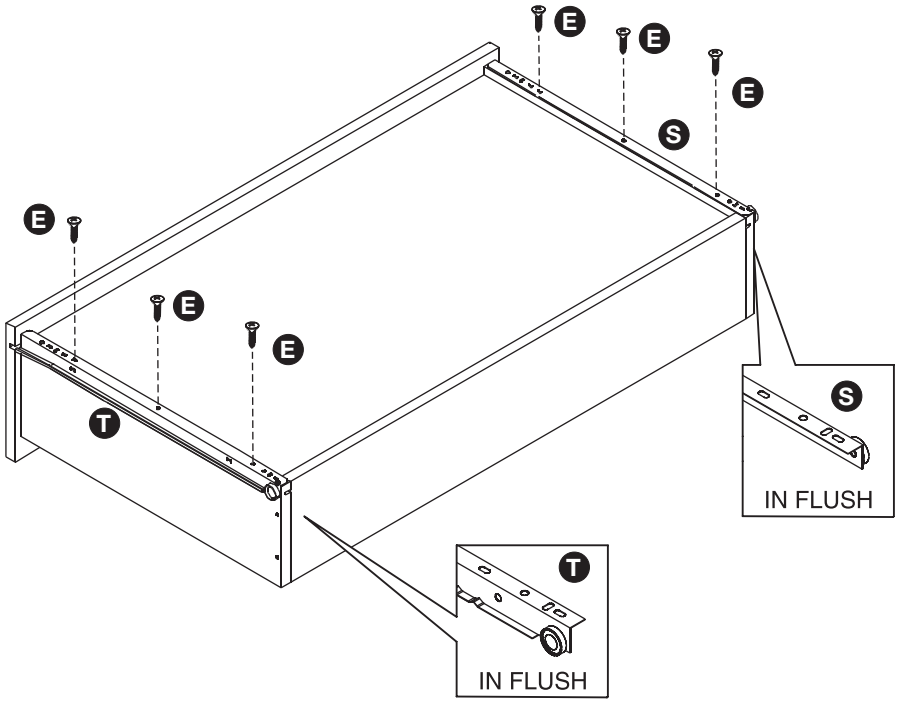

Step 16

Assembling small drawer:

a: Fit drawer sides 21 and 22 to the small drawer front 25 .

Insert 4 locking nuts (B) into drawer sides where shown.


Use a screwdriver to turn locking nuts (B) clockwise to lock.

Do not over tighten.

b: Slide small drawer bottom 27 into slots on drawer sides.

c: Position small drawer back 26 in place, press the drawer sides and fix using screws (C) .

Using bolts (G) attach handle (U) to the drawer front.

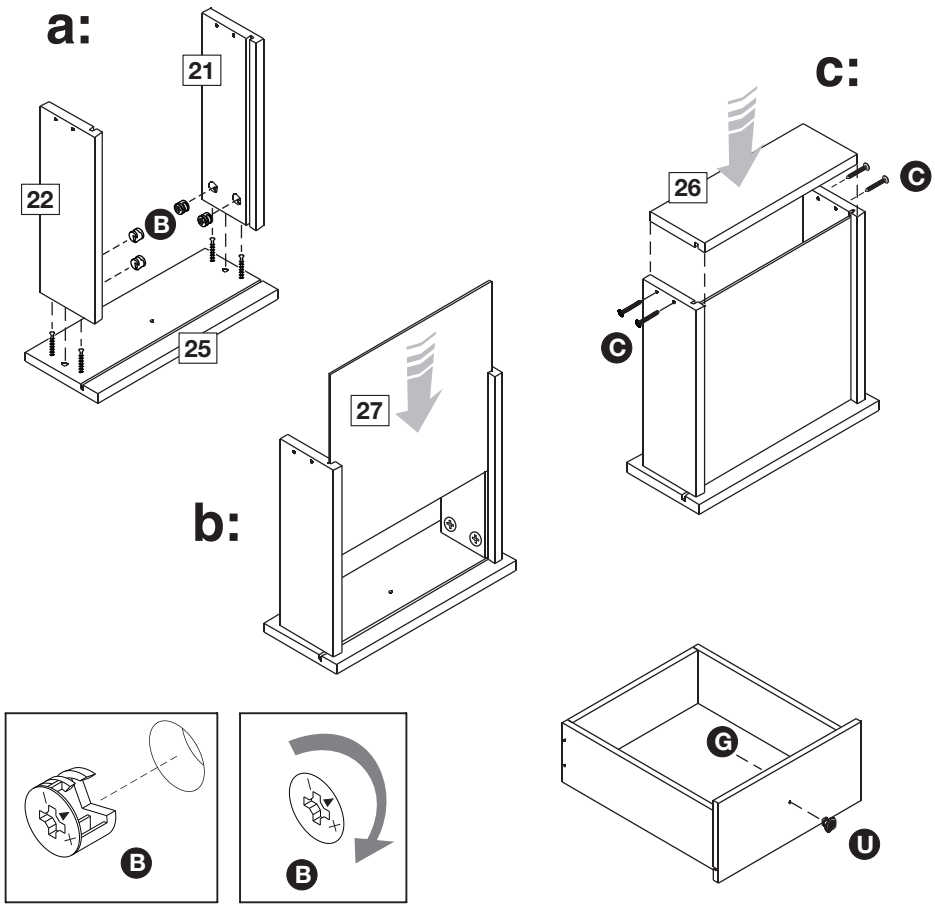


Step **17**

Fixing runners.

Attach right runner Ⓢ and left runner Ⓣ in the bottom edge of the drawers using screws Ⓔ as shown.

Make sure runners are correctly positioned according to the diagram prior to fixing.

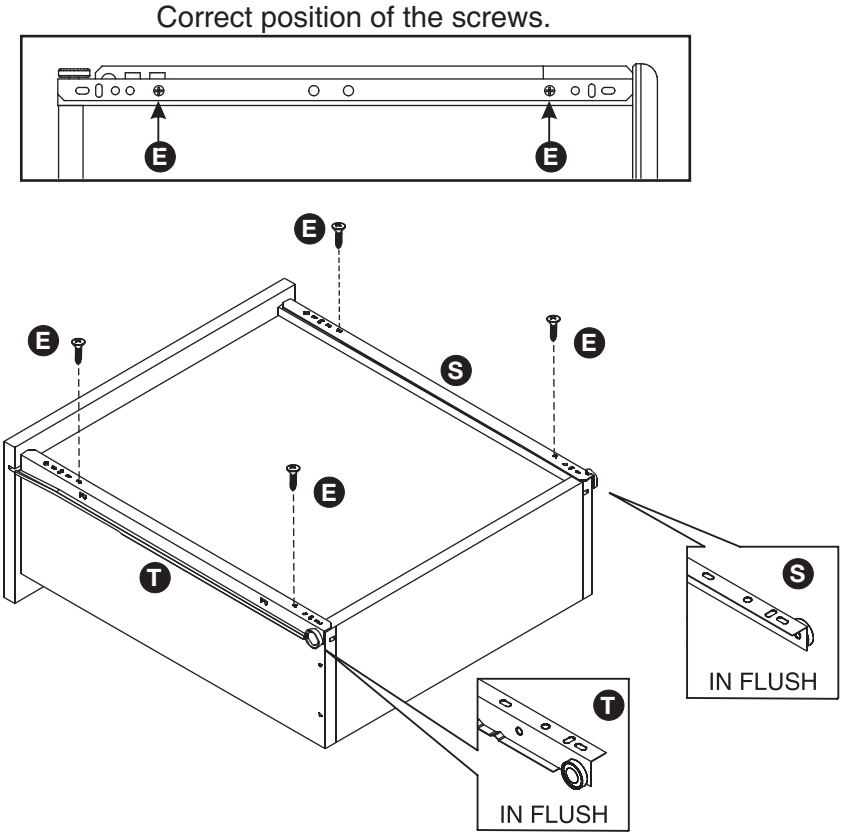


Step **18**

Hanging doors.

With help, slot doors hinges Ⓝ onto hinges plates Ⓞ and tighten screws. Hinge plates must be inserted in the screw in the back of the hinge.

Continued next page.

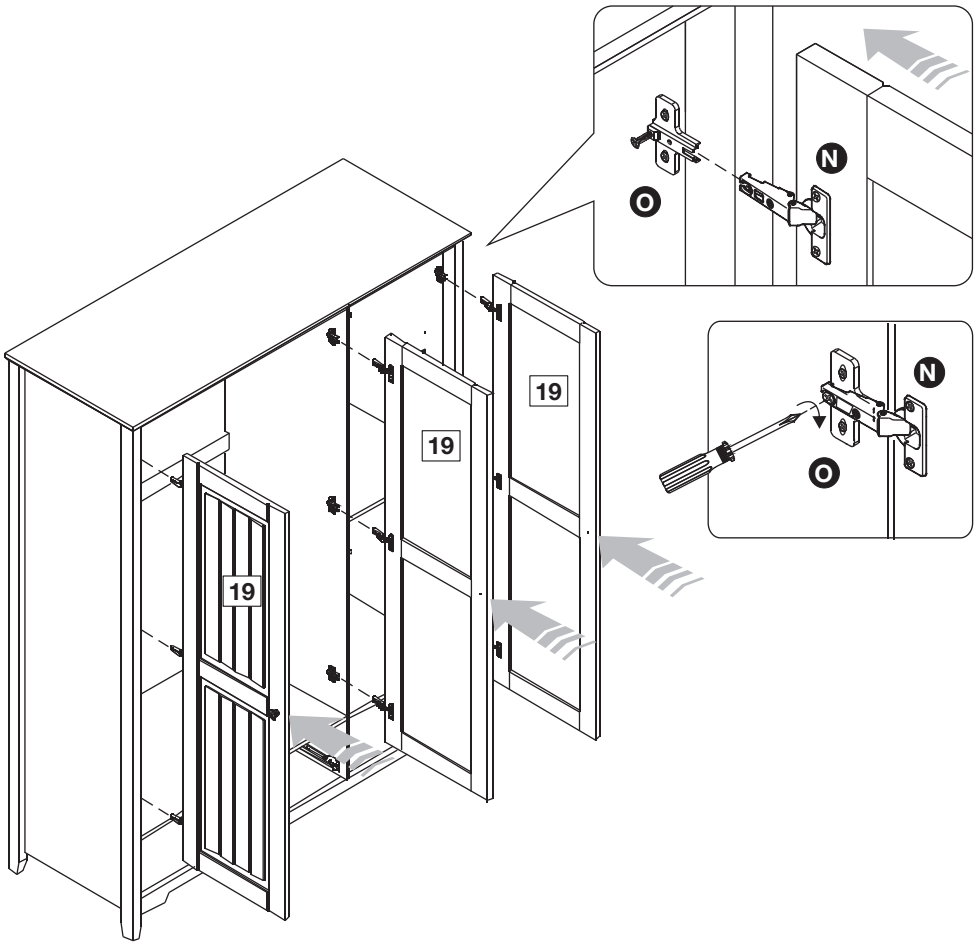


Step **19** - continued

Hinge adjustment


a: To move doors up or down: loosen screws shown and move doors to suit.

Re-tighten screws.

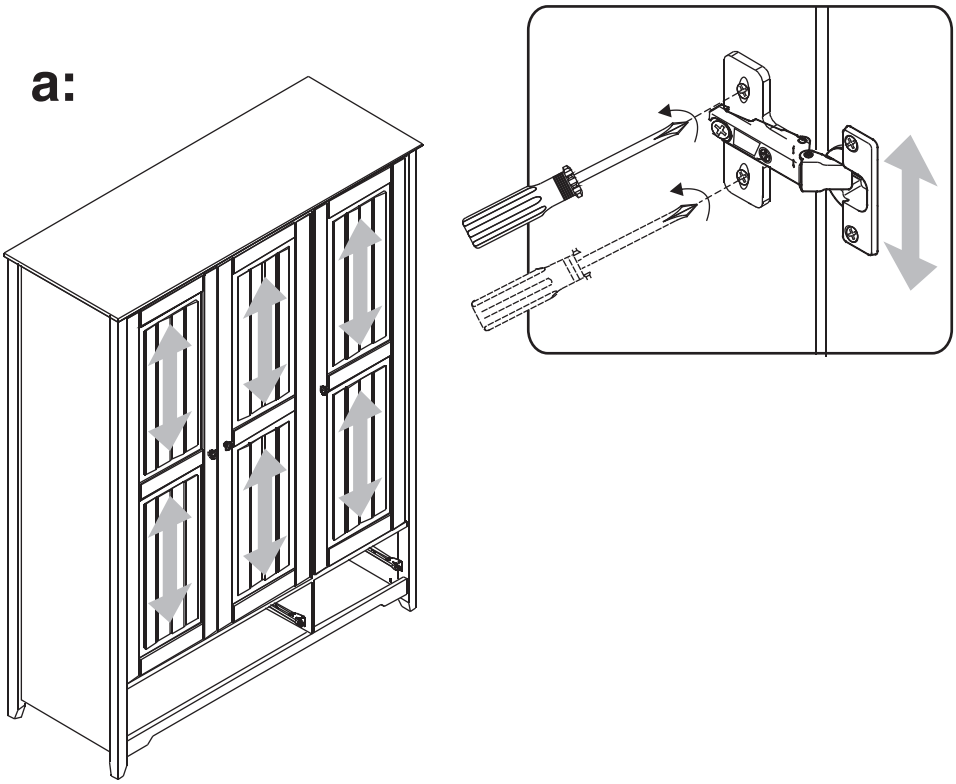

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

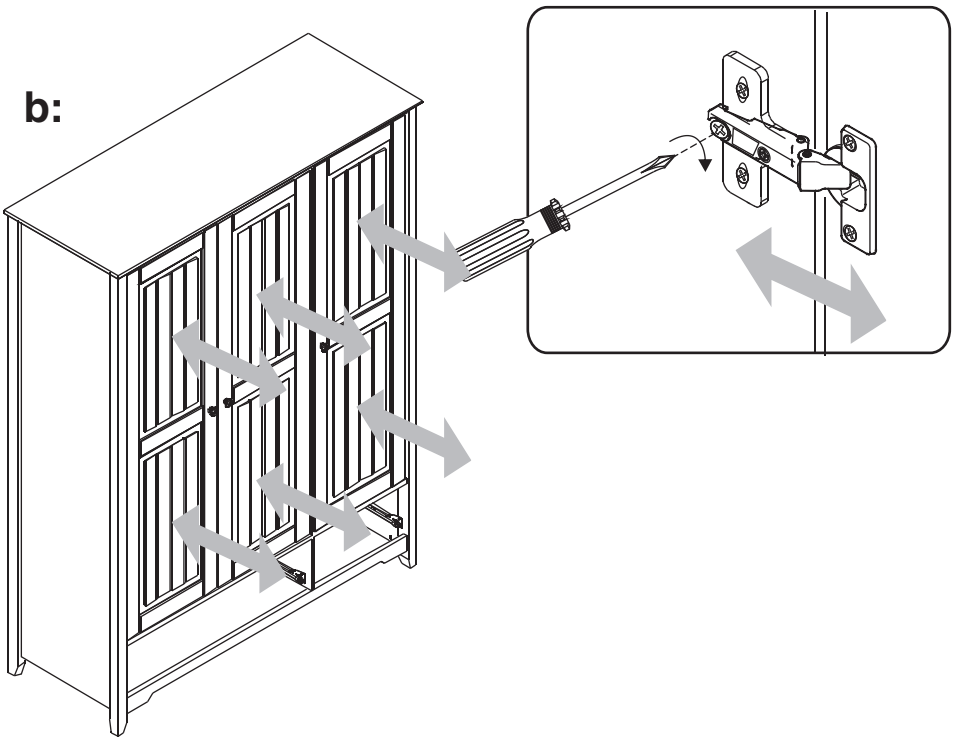


Continued next page.

Step **19** - continued

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.


c:

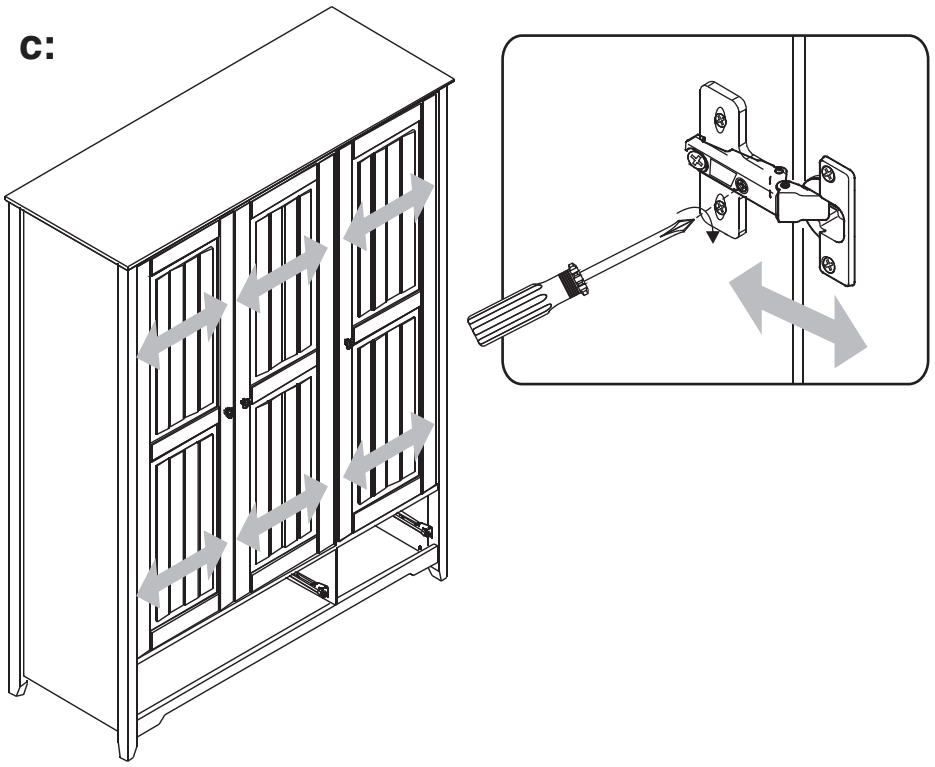

Step **20**


Place hanging rail 13 into the supports within the cabinet as shown.

Place shelves 16 in place on the shelf support pins P.

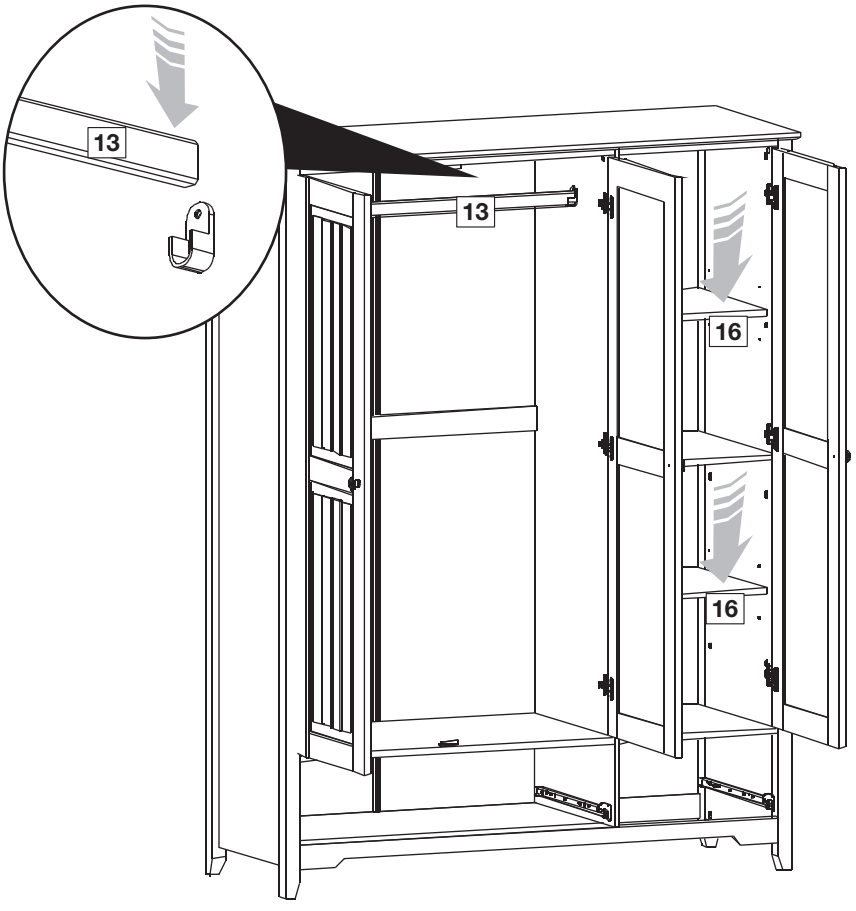

Step **21**

Hook the wheels of the runners on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

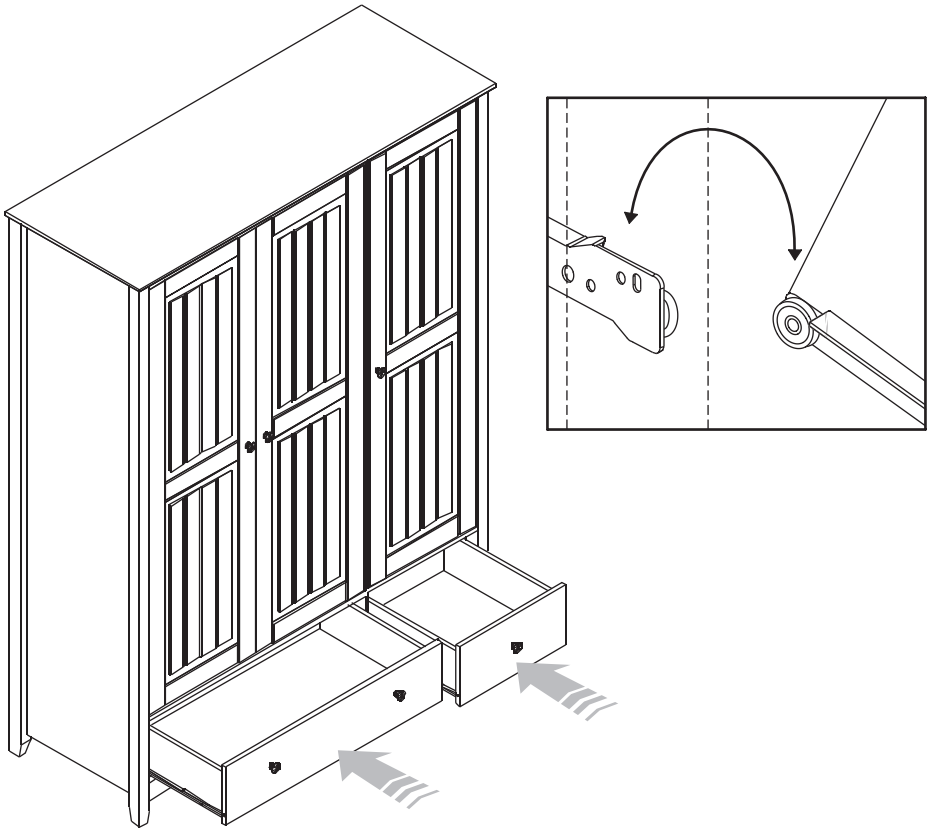


Step **22**


Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **I** to top of furniture using washer **J** and screw **D**. With help, move furniture into position.

Assembly is complete.

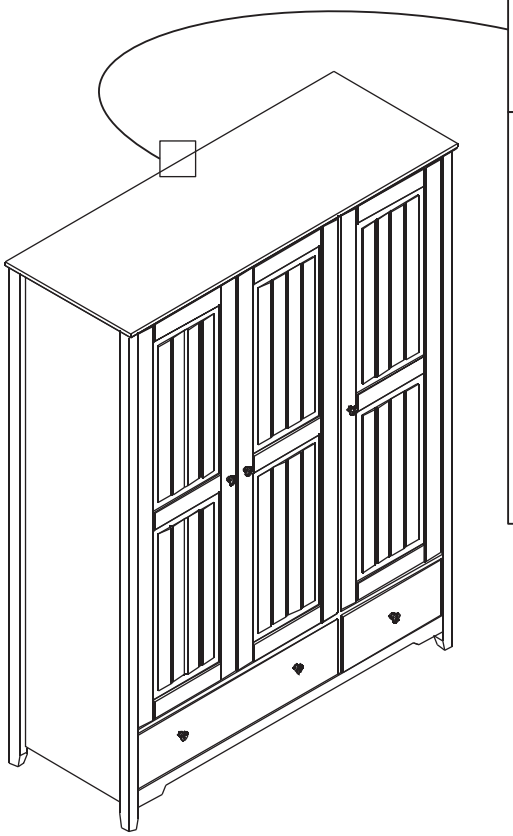

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

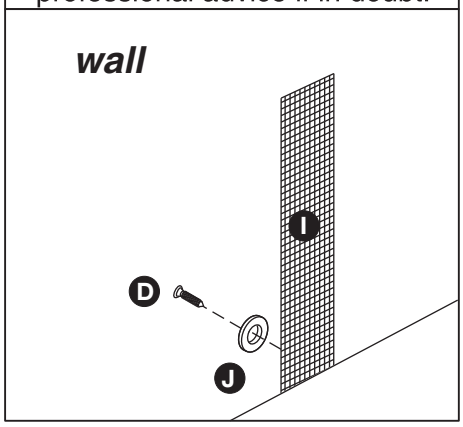


If you need help or have damage or missing parts, call the **Customer Helpline: 03456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

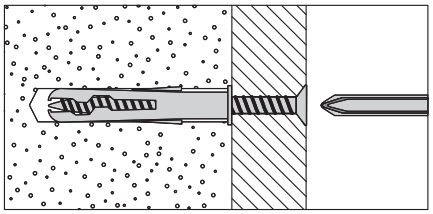


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

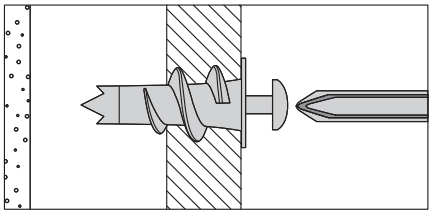


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

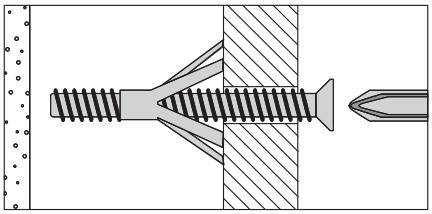


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

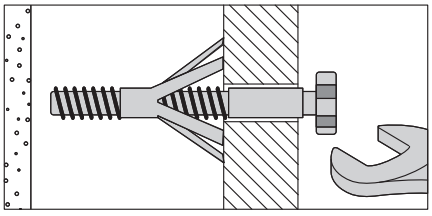


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

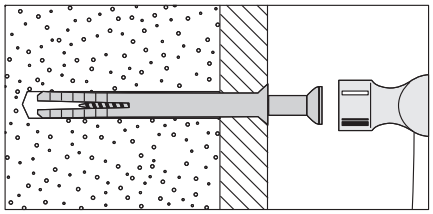

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

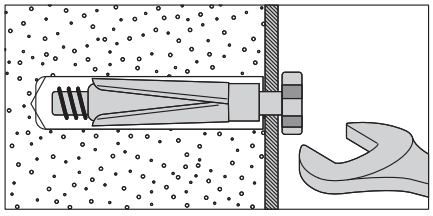

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.