
Washington - 02BS

Assembly Instructions - Please keep for future reference

392/3342

427/1433

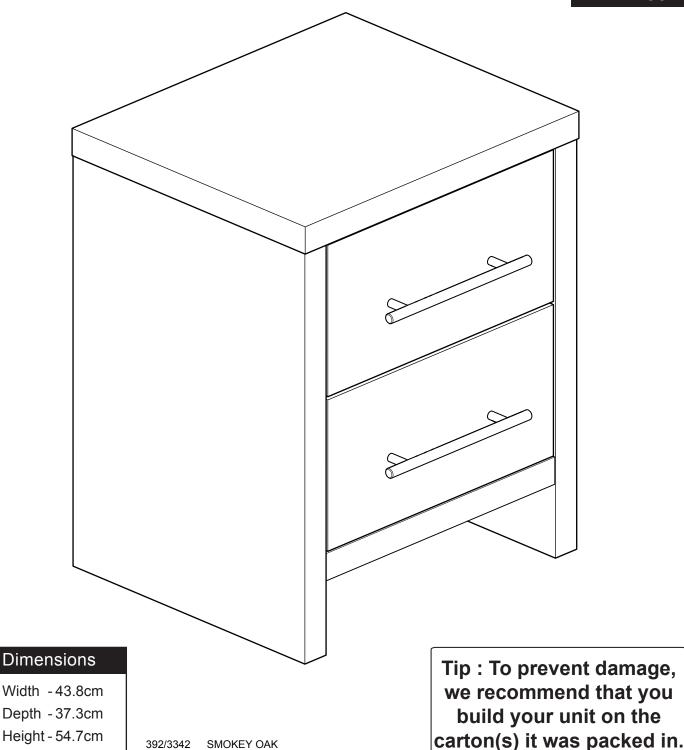

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number) Alternatively, call the Spares Helpline on: 0370 112 1928

392/3342

427/1433

For any other queries please contact the Customer Helpline on: 0345 640 2020

SMOKEY OAK WARM OAK





Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/ drivers for inserting screws,

as this could damage the unit.
Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below•

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.


Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fi ttings are tightend properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels For damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@clickSpares.co.uk

Please check you have all the panels listed below

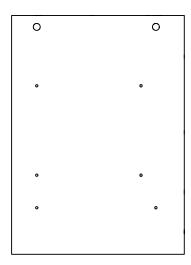


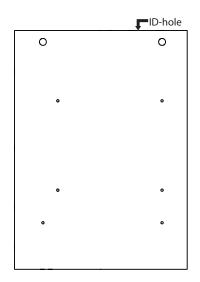


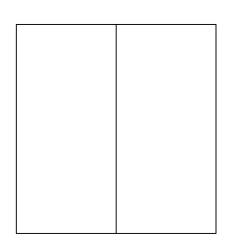


- 1 Left side (37.1 x 51.3cm) P2018
- 2 Right side (37.1 x 51.3cm) P2093

3 Foldy back (42.9 x 44.9cm) B03609

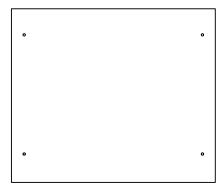


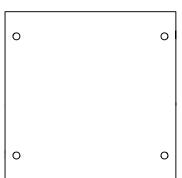

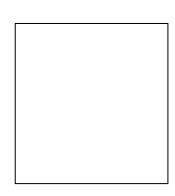

- **4** Top (43.8 x 37.3cm) P1830
- **5** Bottom (36.7 x 37cm) P1831

6 Drawer bottom x 2 (32.8 x 34.4cm) BO3607



Drawer front x 2 (36.1 x 18.9cm) P4648





0

- 8 Left drawer x 2 (35 x 14cm) LA1614
- 9 Drawer back x 2 (317 x 14cm) LA1618
- 10 Right drawer x 2 (35 x 14cm) LA1615




Components - Fittings For damaged or missing parts, please visit: Help@clickSpares.co.uk

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	FK1011		FK1010		FK1012
	FKIUII	B 12mm	FKIUIU	6 15mm	FKIUIZ
Locking screw x 12 (5x24mm)		Locking nut x 4 (12x10mm)		Large locking nut x 8 (15x12mm)	
	FK1301		FK1311	6	FK1985
Fixing screw drawer x 24 (6.3)	x10mm)	Screw x 28 (3x15mm)		Screw x 4 (4x25mm)	
©	FK1515	•	GR1855		FK1234
Nail x 12		Drawer handle x 2		Peg, brown x 1	
	FK1250	K	FK1415	0	FA1510
Drawer base support x 4		Nail holder x 1		Glue x 1	
PM	/11515 LA		PM1515 LB	PM	11515 RA
		N 0		0	
		N o s c c c c c c c c c c c c c c c c c c			
Runner left part A x 2				O	
Runner left part A x 2	3 ∕⁄1515 RB			O	
Runner left part A x 2	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P **** *** *** *** *** ***	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P Runner left part A x 2	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P Runner left part A x 2	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P Runner left part A x 2	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P **** *** *** *** *** ***	3 ∕⁄1515 RB			O	
Runner left part A x 2 PM P **** *** *** *** *** ***	3 ∕⁄1515 RB			O	

Tools required





Small hammer



Ruler/tape measure



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (30mm screw shown).


Step 1

a: Screw 24mm locking screw A into left side 1.


Note: Insert 24mm locking screw A as far as shown. Do not over tighten.

Insert large locking nuts into left side 1.

Make sure the 'arrow' on locking nuts **©** points towards the hole in the edge of left side 1.

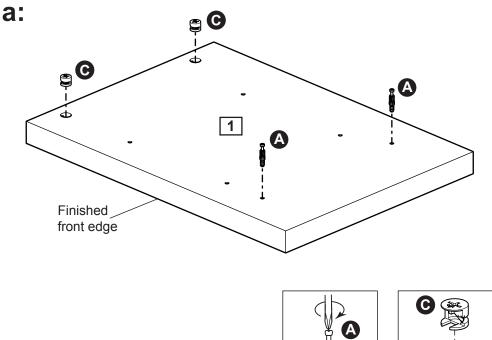



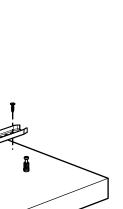



Attaching runners

b: Fix runner left part A M on left side 1 as shown usesing fixing screw drawer **D** into left side 1.

Note: look carreful for the right postion.

Insert 15mm screw (E) as shown into left side 1 to fix runner left part A M.

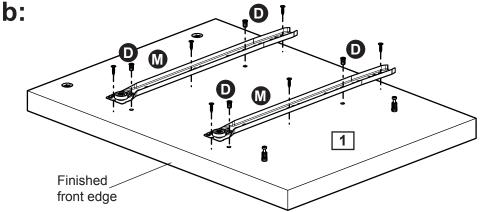




Step 2

a: Screw 24mm locking screw **A** into right side 2.

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**

Insert large locking nuts (sinto right side 2).

Make sure the 'arrow' on locking nuts points towards the hole in the edge of right side 2.

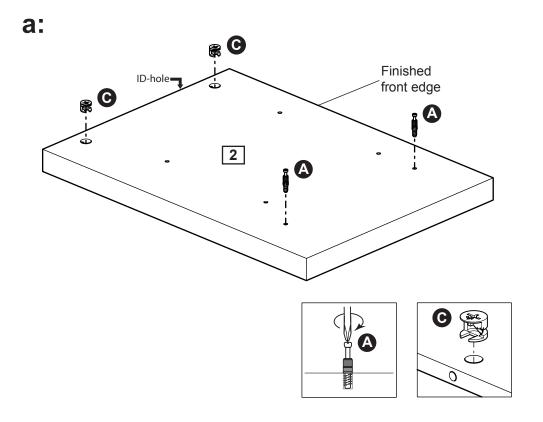



Attaching runners

b: Fix runner right part A on right side 2 as shown usesing fixing screw drawer on into right side 2.

Note: look carreful for the right postion.

Insert 15mm screw **(E)** as shown into right side **(2)** to fix runner right part A **(0)**.

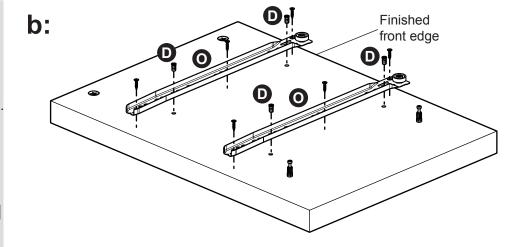



Step 3

Screw 24mm locking screw A into top 4.

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**

Step 4

Insert large locking nuts (sinto bottom [5].


Make sure the 'arrow' on locking nuts points towards the hole in the edge of bottom 5.

Step 5

Attaching panels

Position left side 1 and right side 2 onto bottom 5.

Use a screwdriver to turn locking nuts **©** clockwise to lock.

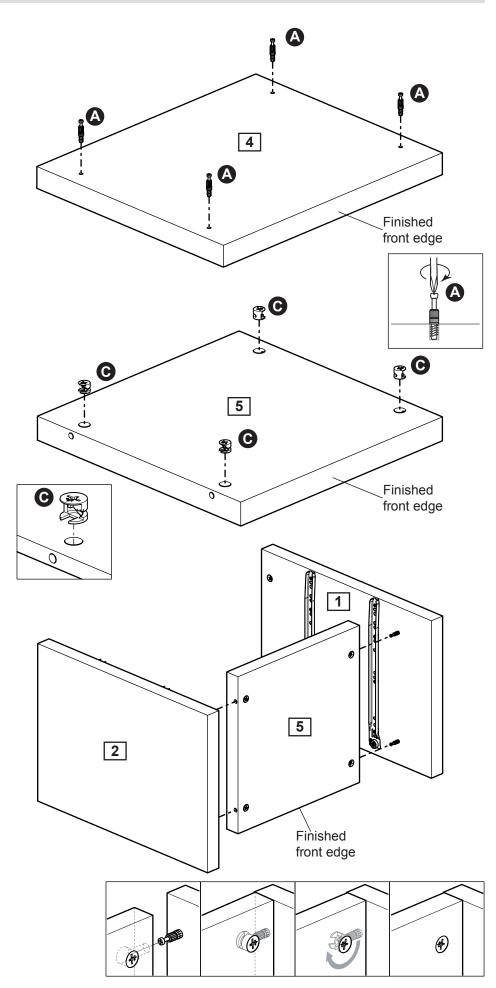

Step 6

Attaching panels

Position top 4 onto left side 1 and right side 2.

Use a screwdriver to turn locking nuts **©** clockwise to lock.

Step 7


Fitting back panel

Attach foldy back 3 to the back with the coloured surface facing the inside using nails 6.
Use nail holder 6 to hold the nails 6 vertical and at correct distance as you secure the foldy back 3.
Nails 6 should be spaced about 150mm apart.



Important:

Furniture MUST be 'square' when back is attached.

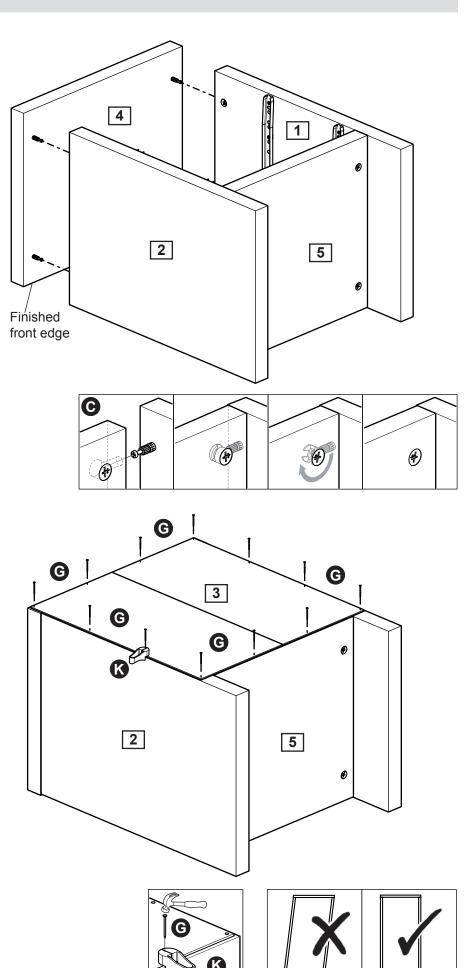

Step 8

Preparing drawer


Insert locking nuts **B** into left drawer side **B** and right drawer side **10**.


Make sure the 'arrow' on locking nuts **B** points towards the hole in the edge of **B** and **10**.

Put drop of glue **Q** into the 3 holes of left drawer side 8 and right drawer side 10.

Attach left drawer side 8 and right drawer side 10 onto drawer back 9.

Insert drawer bottom 6.

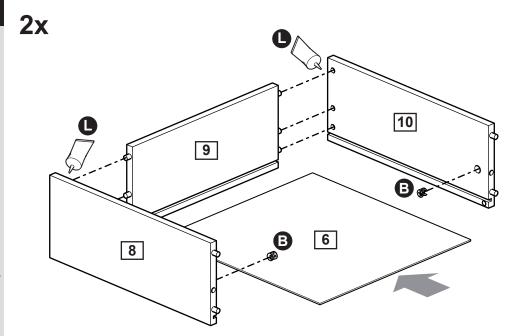







Step 9

Screw 24mm locking screw **A** into drawer front 7.

Note: Insert 24mm locking screw **A** as far as shown. **Do not over tighten.**



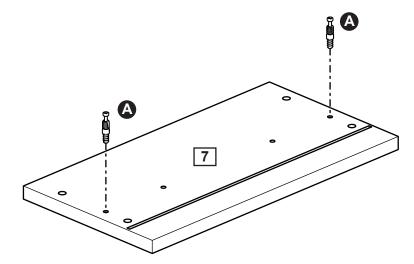




Step 10

Position drawer front 7 onto drawer.

Use a screwdriver to turn locking nuts **B** clockwise to lock.

Note: look carefully to the positions of drawer front 7.

Fix drawer handle **H** onto drawer front 7 using screw **F**.

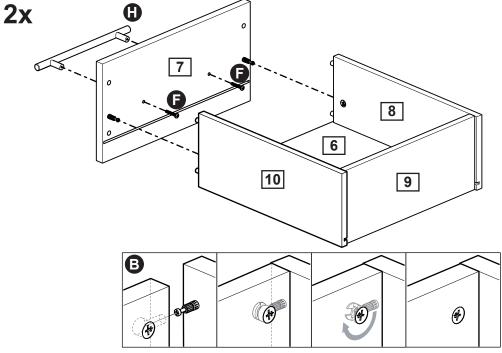

Step 11


a: Turn over drawer.

Fix runner left part B N on left drawer side 8 as shown using screw **E**.

Fix runner right part B P on right drawer side 10 as shown using screw **E**.

b: Fix runner left part B N and runner right part B P using screw **E**.

Slide drawer base support in corner as shown and fix them, using the attached screw.

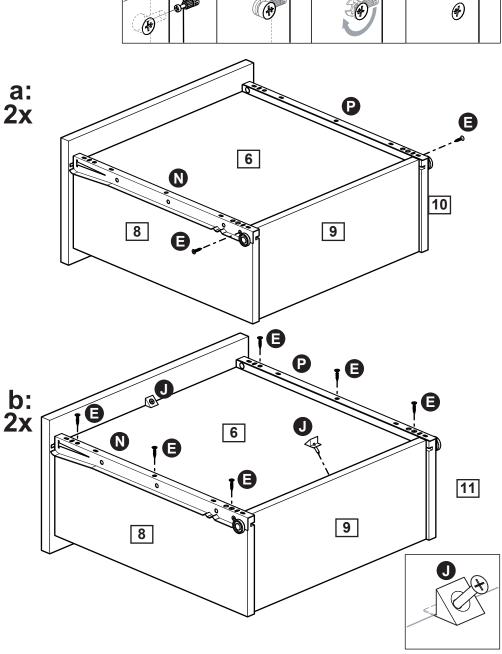

Step 12

Inserting drawers


as shown.

For adjusting the drawers see 'adjustment' on page 'drawer adjustment'.

Step 13

Use peg ① to square your furniture. Knock peg ① in, as far as you require, under the end of the side of the forniture. Then snap off flush with the side.

Assembly is complete.

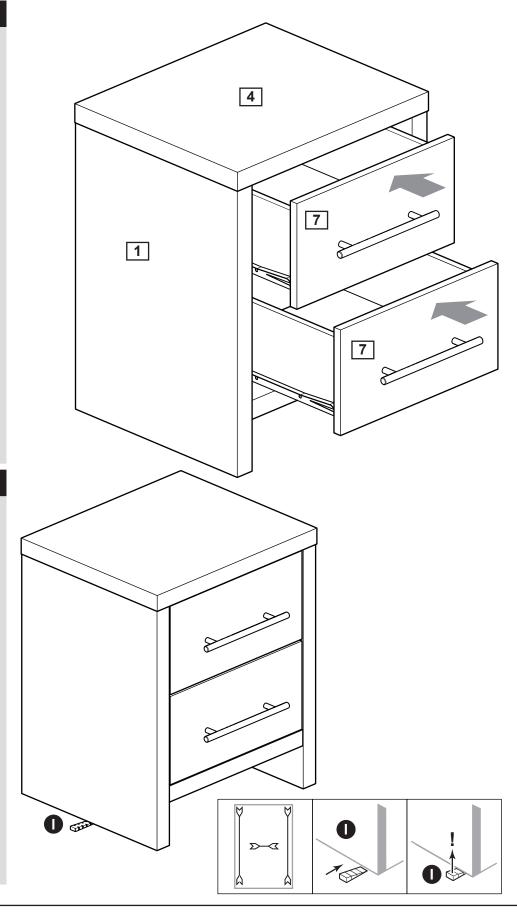

If you need help or have damaged or missing parts, call the ${\bf Customer\ Helpline:}$

Argos 03456 400 800

A Guide to - Drawer adjustment

Adjustment

Note: Each drawer can be adjust for approximately 1mm up or down on each site of the drawer.

Remove drawer, adjust the wheel from runner left part A and runner right part A as shown.

Insert drawer.

Repeat above steps until the desired result is achieved.

