Luxford Bed

Assembly Instructions – Please keep for future reference

455/6550

457/1583

483/1426



Dimensions (4'6)	Dimensions (5')	Dimensions (6')
Length - 210cm	Length - 220cm	Length - 220cm
Width - 160cm	Width - 175cm	Width - 205cm
Height - 141.5cm	Height - 141.5cm	Height - 141. 5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline**: **0345 6400 800**

Issue 1 -05/11/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

Check you have all the components and tools listed on pages 2, 3 and 4.

Remove all fittings from the plastic bags and separate them into their groups.

Keep children and animals away from the work area, small parts could choke if swallowed.

Make sure you have enough space to layout the parts before starting.

Assemble the item as close to its final position (in the same room) as possible.

Assemble on a soft level surface to avoid damaging the unit or your floor.

Assembly requires 2 people.

Do not fully tighten bolts until the whole bed is assembled. Do not overtihgten the nuts to avoid causing damage to the threads.



We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers and Allen keys.

Dispose of all packaging carefully and responsibly.

Cleaning Guidance

Minor stains and spillages should be removed immediately from cushion fabric, by wiping over lightly with a damp cloth and mild soapy water.

Light marking can also be removed using this method.

To remove more stubborn stains or marking, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on and inconspicuous area of the fabric.

Care and maintenance

Only clean using a damp cloth and mild detergent,do no use bleach or abrasive cleaners.


From time to time check that there are no loose screws on this unit.

This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400 800**


Please check you have all the parts listed below

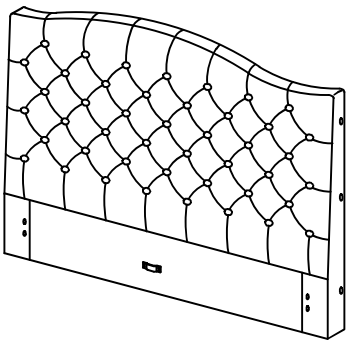


1 Headboard
(150 x 123cm - 4'6)
(165 x 123cm - 5')
(195 x 123cm - 6')

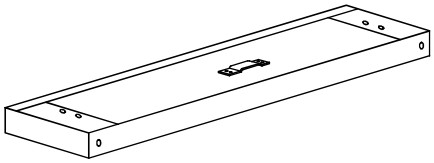


2 Footboard
(150 x 25.5cm - 4'6)
(165 x 25.5cm - 5')
(195 x 25.5cm - 6')

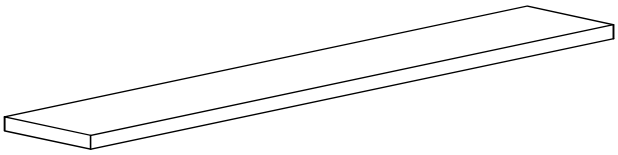


3 Side Rail x2
(192 x 25.5cm - 4'6)
(202 x 25.5cm - 5')
(202 x 25.5cm - 6')




4 Headboard Wing Left (19.5 x 118.5cm)



5 Headboard Wing Right (19.5 x 118.5cm)




6 Centre Support
(3.8 x 192cm - 4'6")
(3.8 x 202cm - 5')
(3.8 x 202cm - 6')




8 Connector x2
(4.5 x 64.1cm - 4'6")
(4.5 x 71.6cm - 5')
(4.5 x 86.6cm - 6')



7 Bentwood Slat
(6.3 x 68.1cm - 4'6") x24
(6.3 x 75.6cm - 5') x26
(6.3 x 90.6cm - 6') x26



10 Feet x4 (7.5 x 18cm)






9 Support Leg x3 (3.8 x 27.4cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0345 6400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are req ired.

A  50mm M6 Bolt x6	B  40mm M8 Bolt x8	C  Plastic Washer x4
D  M6 Flat washer x6	E  16mm M3.5 Wood screw x8	F  Single Slat Cap 4'6" x24 5' & 6' x26
G  Double Slat Cap 4'6" x12 5' & 6' x13	H  38mm M4 Wood Screw x8	J  Wood Dowels x4
K  4mm Allen Key x 1 5mm Allen Key x 1		


Tools required

 Ruler/tape measure

 Phillips screwdriver (Not supplied)

 PLIERS (Not supplied)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching feet

a: Screw feet 10 into the underside of the headboard 1


Ensure plastic washers C are located as shown.

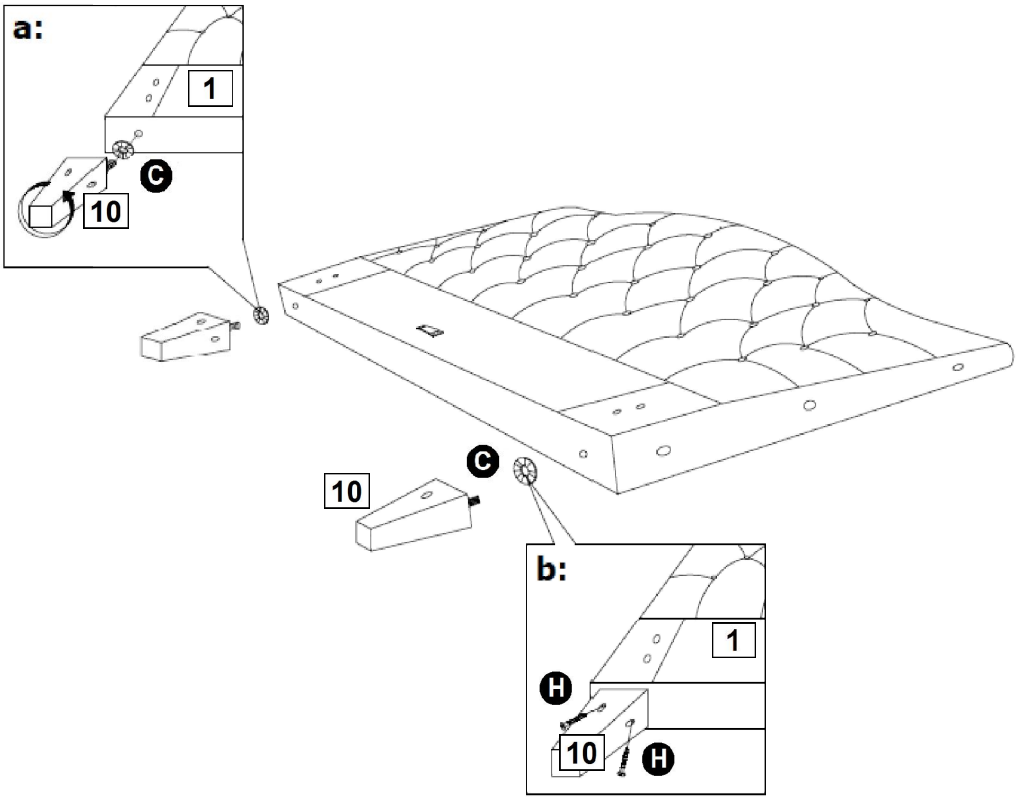

b: Tighten the feet until the two fixing holes are located as shown.

Secure using screws H

c: Repeat **a:** and **b:** to fit feet 10 to footboard 2

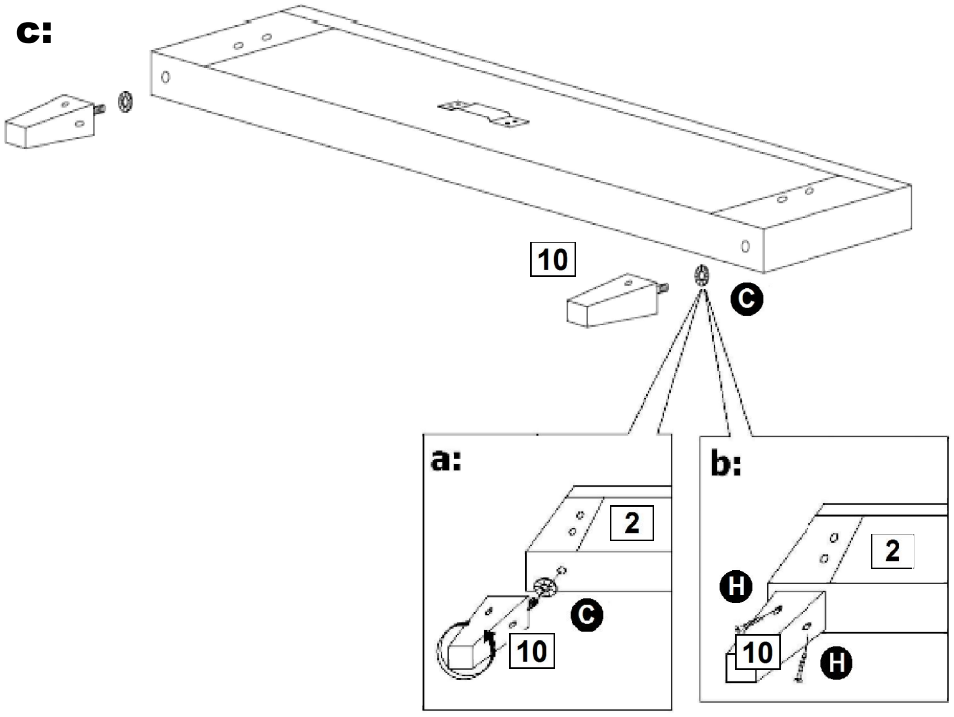


Step 2

Preparing headboard and footboard


Carefully lay headboard 1 and footboard 2 flat on the floor.

Loosely fit bolts B into headboard 1 and footboard 2 as shown.

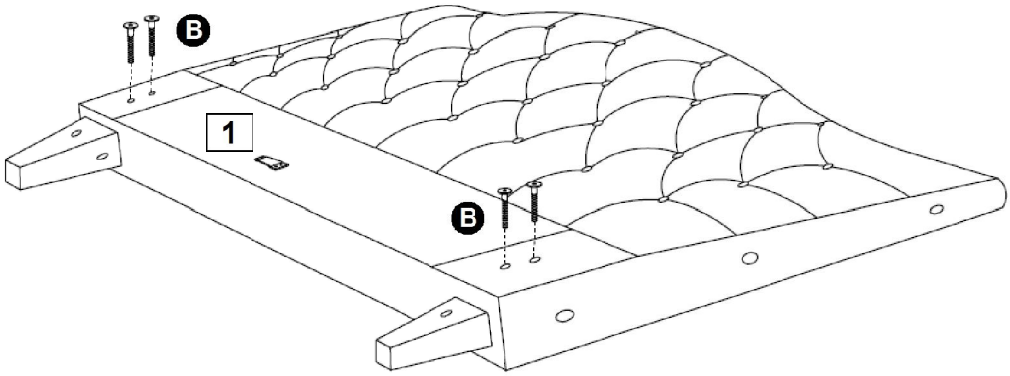

Warning

The headboard and footboard are heavy. Lift with care.

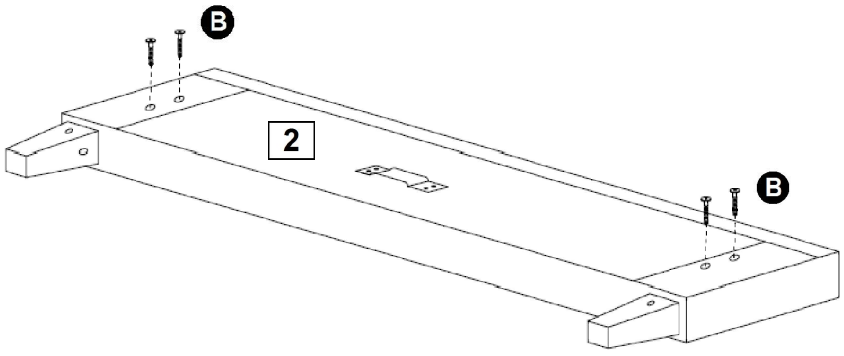

Assembly Instructions

Step 3


Assembling headboard and footboard

With help, raise the headboard 1 into the standing position.

Hang the metal brackets on the end of the side rails 3 , over the bolts in the headboard 1

Note: Do not fully tighten bolts B at this stage. Finger tighten only.

Repeat to assemble footboard 2

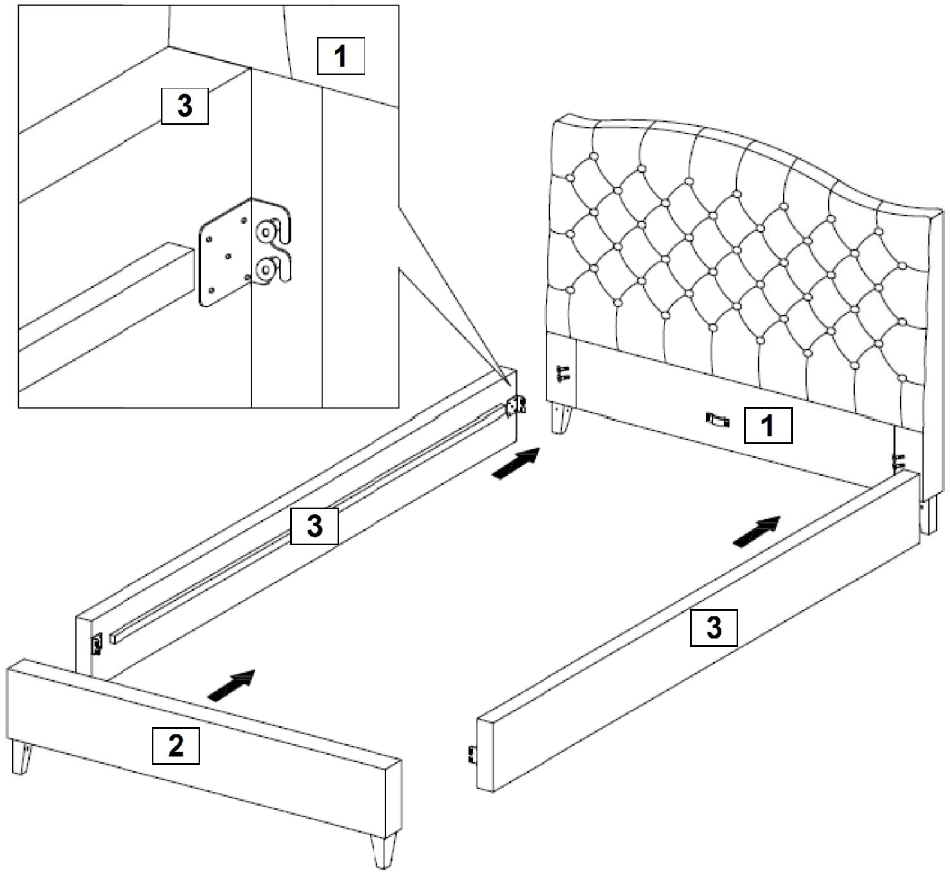


Step 4

Assembling headboard wings

Fit wood dowels J into headboard wings 4 and 5 as shown.

Peel back the velcro covers on each side of the back of headboard 1

Assemble headboard wings 4 and 5 to headboard 1 using fixings A and D

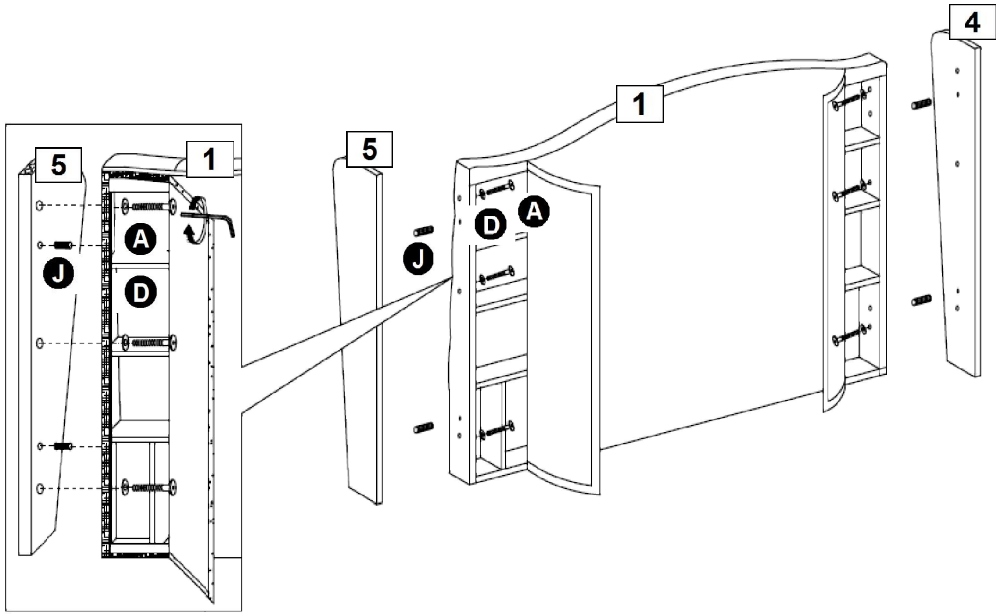


Assembly Instructions

Step 5

Preparing Central Support

Screw support legs 9 into central support 6

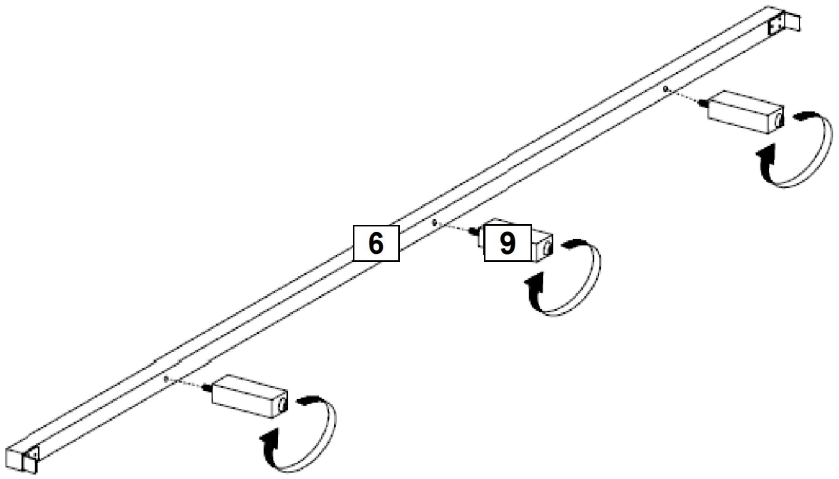


Step 6

Assembling Base Frame

a: Locate central support 6 into the corresponding brackets on the inside of headboard 1 and footboard 2

b: Assemble connectors 8 in between side rails 3 and central support 6 using screws E as shown.

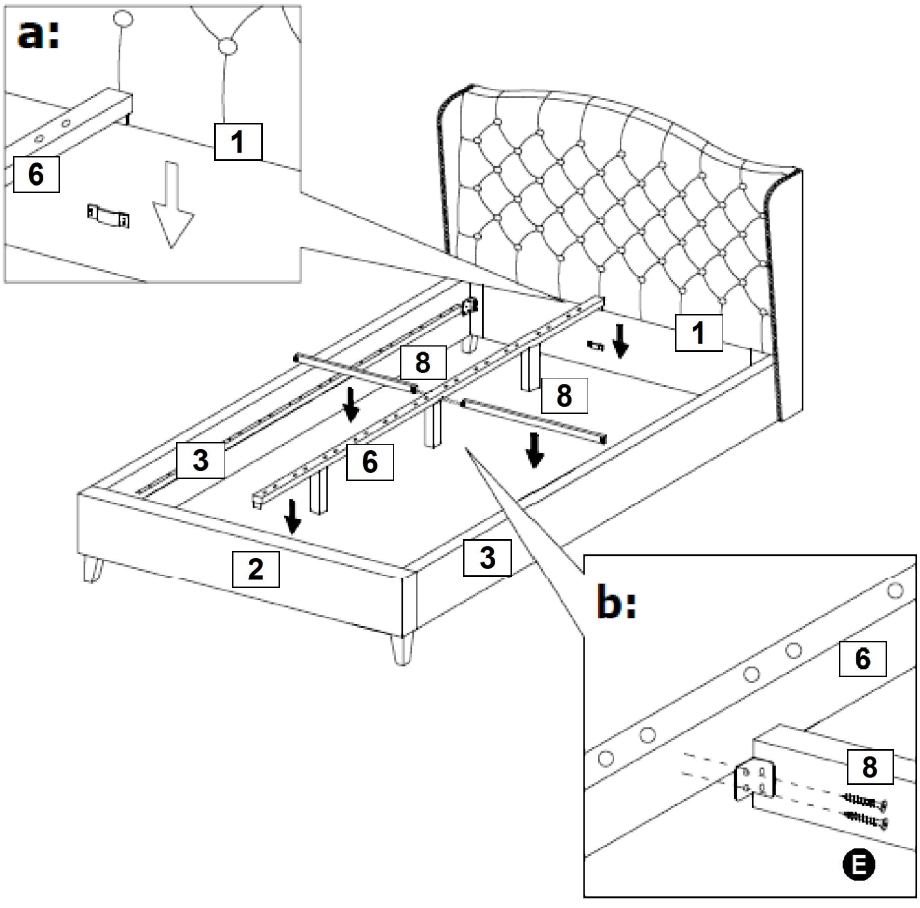


Assembly Instructions

Step 7

Attaching Single Slat Caps

Assemble single slat caps (F) onto one end of bentwood slats 7

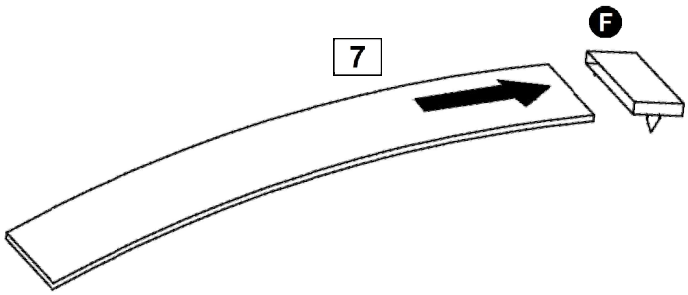


Step 8

Attaching Slats

a: Locate bentwood slats 7 into side rails 3 by firmly pushing single slat caps (F) into the holes

b: Fit bentwood slats 7 into both sides of double slat caps (G), before firmly pushing the slat caps into central support 6

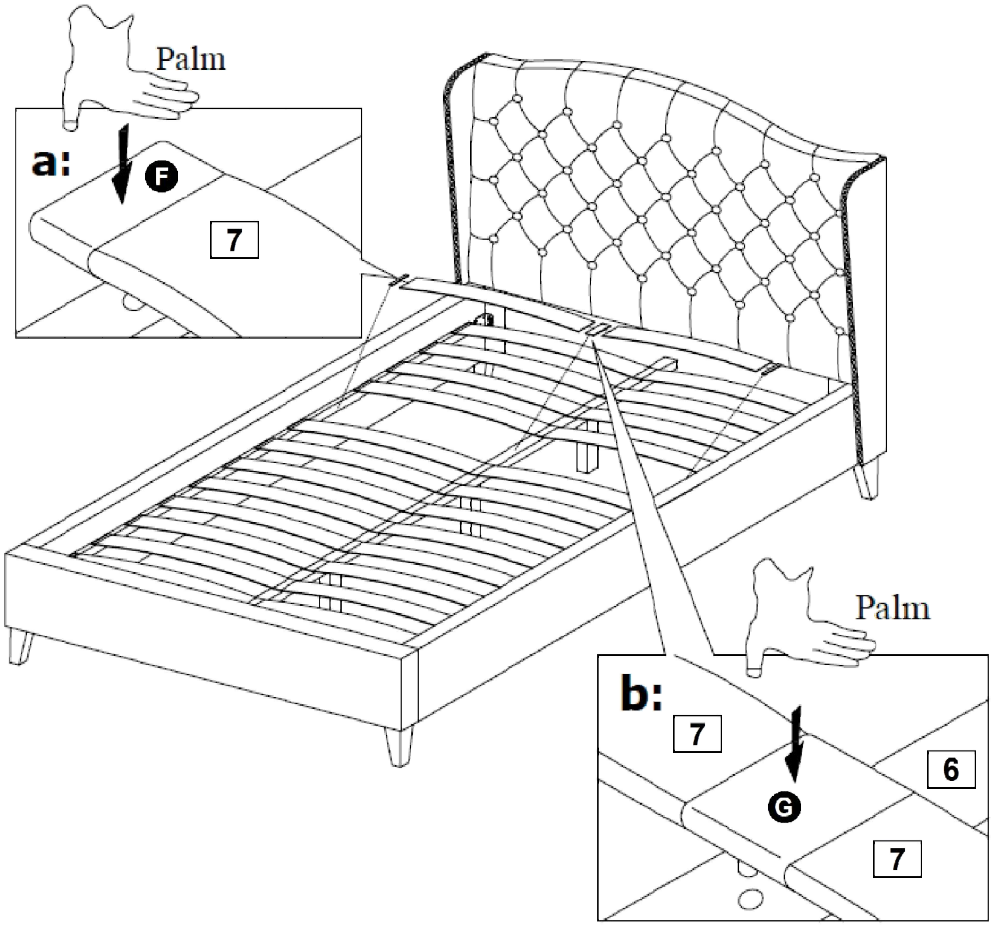

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**
Home Retail Group. 489-499 Avebury Boulevard. Saxon Gate West. Central Milton Keynes. MK9 2NW