
Venice - Large Corner TV Unit

Assembly Instructions - Please keep for future reference

450/9071

459/9641

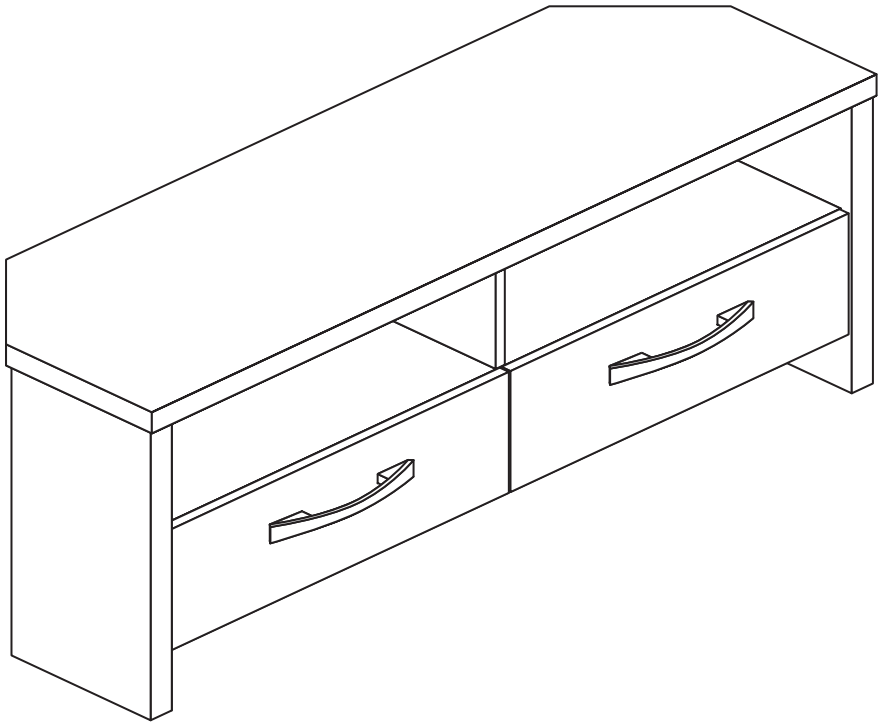

Dimensions
Width - 119.8cm
Depth - 39.19cm
Height - 51.2cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Issue 1 - 13/10/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 25kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

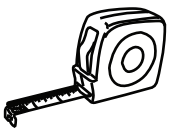

Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

When applicable, remove any protective film before use

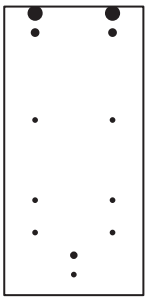


1 Side *(DF5748)*
(47.7 x 23mm) x 2

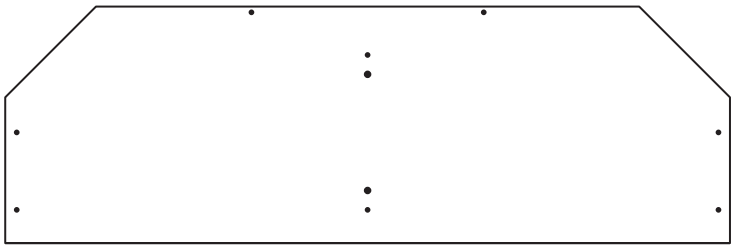


2 Top *(DF5746)*
(119.8 x 39.1cm)




4 Top Divider *(DF5755)*
(18 x 35.1cm)

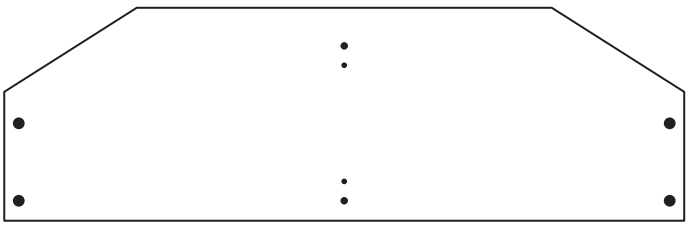


3 Horizontal *(DF5751)*
(112.4 x 35.2cm) x 2




5 Lower Divider *(DF5753)*
(17.1 x 35.1cm)

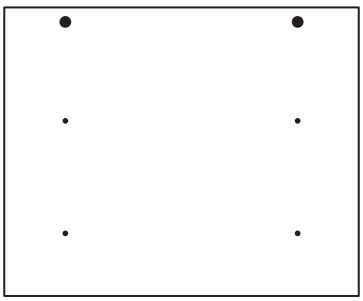


6 Back *(DF5749)*
(47.7 x 58.6cm)



7 Plinth *(DF5750)*
(112.4 x 9.6cm)

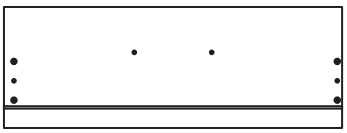


8 Left Drawer Front *(DF5752)*
(55.9 x 20cm)

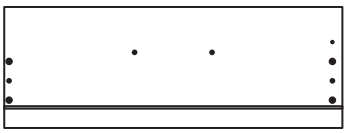

9 Right Drawer Front *(DF5754)*
(55.9 x 20cm)



10 Left Drawer Side *(W210-124LH)*
(21 x 12.4cm) x 2



11 Right Drawer Side *(W210-124RH)*
(21 x 12.4cm) x 2



12 Drawer Back *(W522-124)*
(52.2 x 12.4mm) x 2




13 Drawer Base *(T533-207)*
(53.3 x 20.7mm) x 2

Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 


Metal dowel *(F901)* x 18

B 

Small locking nut *(F3)* x 4

C 

Large locking nut *(F900)* x 14

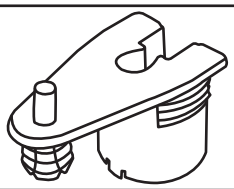D 


Hollow core locking nut *(F892)* x 4

E 


Small metal dowel *(F893)* x 4

F 

Knock-in Peg *(F171GY)* x 8

G 

Large wooden dowel *(F40)* x 2

H 

Wooden dowel *(F22)* x 6

I 

Wedgefix *(F639)* x 4

J 

45mm Screw *(F65)* x 4

K 

40mm Screw *(F910)* x 4

L 


19mm Screw (*F461)* x 4

M 

9mm Screw (*F73)* x 8

N 

9mm Screw *(F74)* x 4

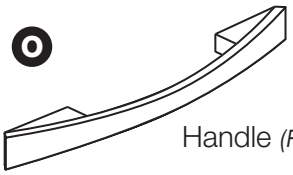
O 

Handle *(FBARH128)* x 2

P 

Drawer runner *(F307)* x 4

Ruler - Use this ruler to help correctly identify the screws

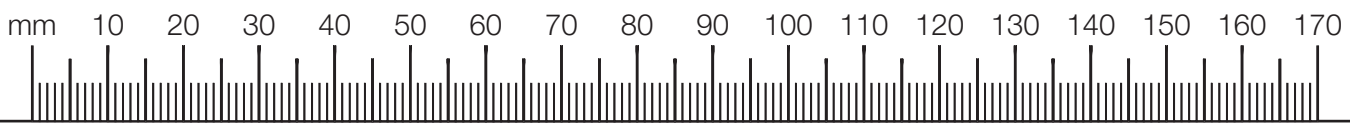

Assembly Instructions


Step 1

Prepare the 2 drawer fronts

Screw 2 metal dowels (A) into each of the drawer fronts [8] and [9].

Note: Tighten the metal dowels up fully against the panels.

Note: The right drawer front has a small identification hole.

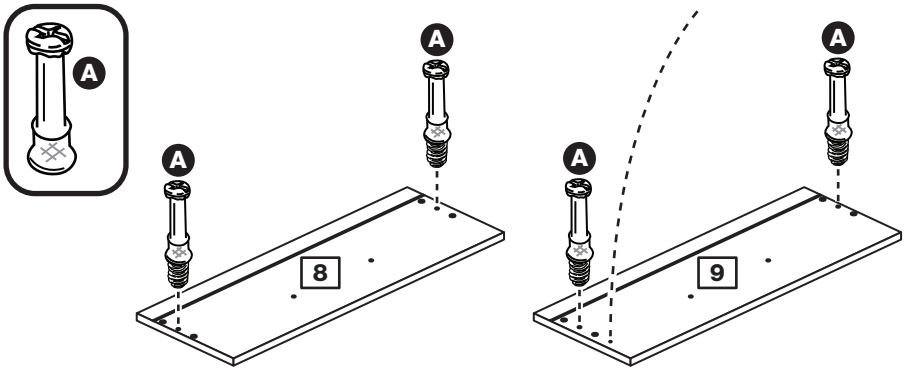


Step 2

Prepare the drawer sides

Insert a small locking nut (B) into the hole shown on the left drawer side [10] and the right drawer side [11].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

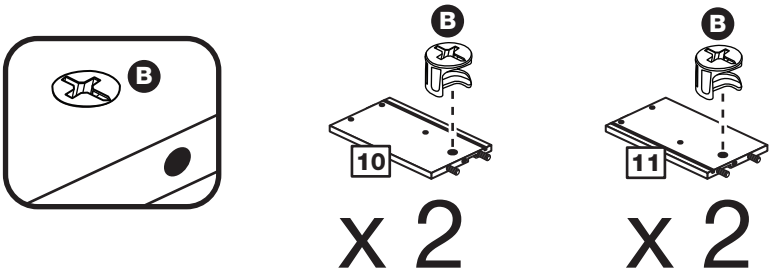


Step 3

Attach the drawer sides to the drawer frontS

Push a left drawer side [10] and a right drawer side [11] onto the back of each drawer front [8] and [9].

Turn the small locking nuts (B) on the left drawer side [10] and right drawer side [11].

Note: Turn the locking nuts (B) clockwise to secure panels - more than 1/2 a turn.

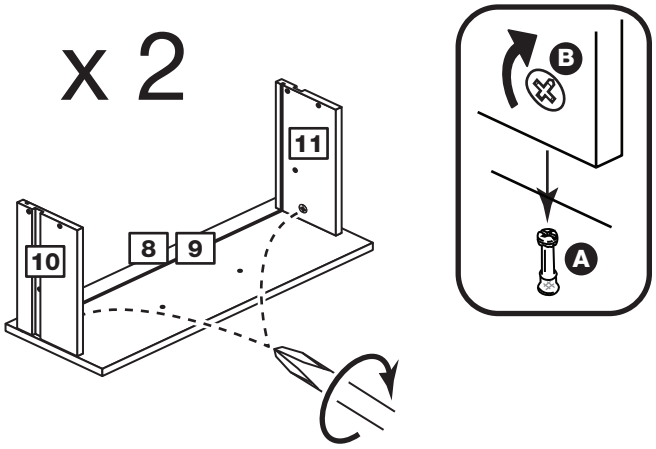


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 13 down the grooves in the drawer sides 10 and 11 and down into the groove in the drawer front 8 and 9.

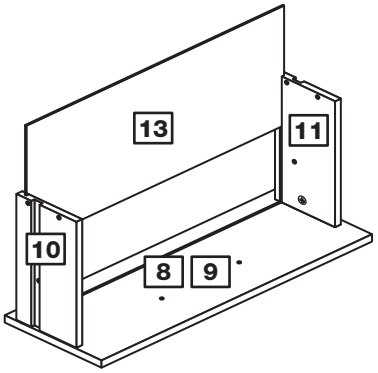

x 2


Step 5

Fit the drawer back

Fit the drawer back 12 between the drawer sides 10 and 11.

Make sure that the drawer base 13 fits into the groove in the drawer back 12.

Hold the drawer back 12 in position and tap the knock-in pegs F through the holes in the drawer sides 10 and 11.

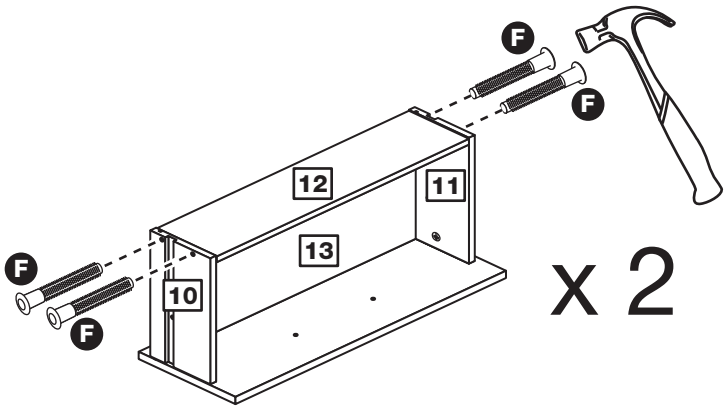


x 2

Step 6

Attach the handles

Attach a handle O to each of the drawer fronts 8 and 9 using screws L.

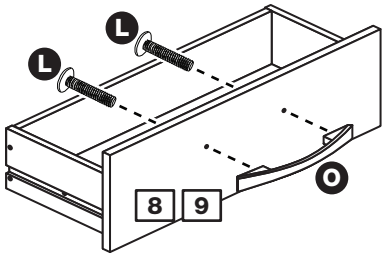


x 2


Step 7

Fit the wedgefixes

Turn the 2 drawer assemblies over and slide 4 wedgefixes I into the front and back grooves, as shown, and tighten up the screws.

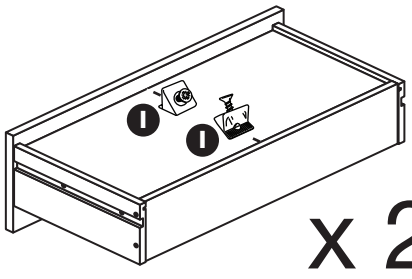

x 2

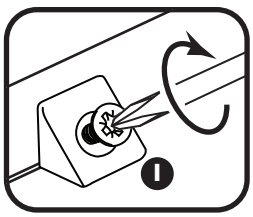

Assembly Instructions


Step 8

Prepare the top

Screw 4 metal dowels **A** into the top **2**.

Screw 4 small metal dowels **E** into the holes on the top **2**.

Note: Tighten metal dowels up fully against the panels.

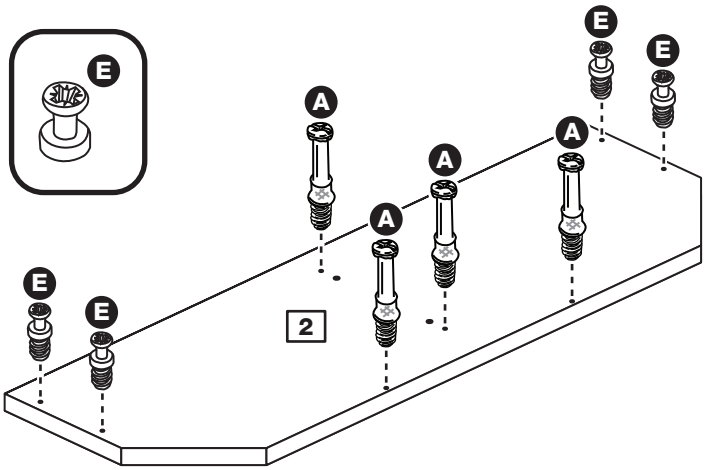

Step 9


Prepare the top divider

Insert 2 large locking nuts **C** into the top divider **4**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Tap 2 wooden dowels **H** into the top divider **4**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

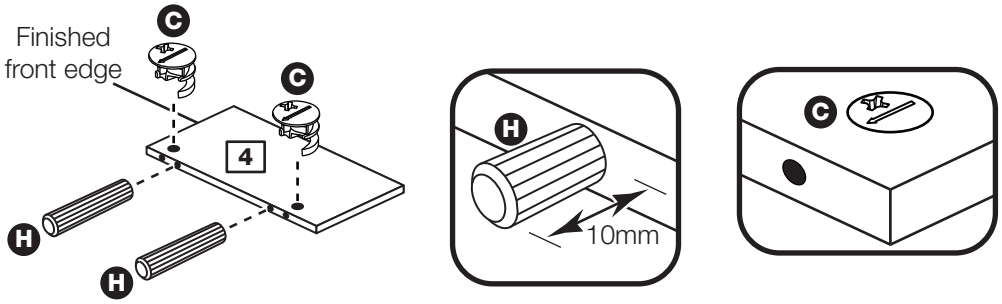


Step 10

Fit the top divider to the top

Push the top divider **4** onto the top **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the top divider **4**.

Note: Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

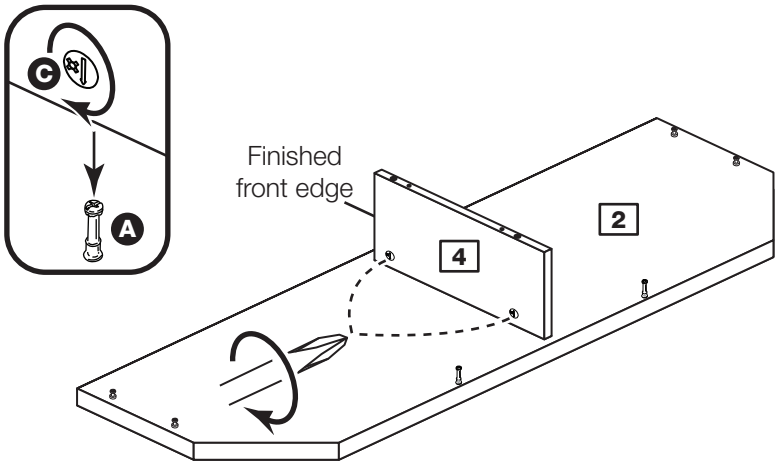


Assembly Instructions

Step 11

Prepare the 2 horizontals


Insert 4 large locking nuts C into each of the 2 horizontals 3.

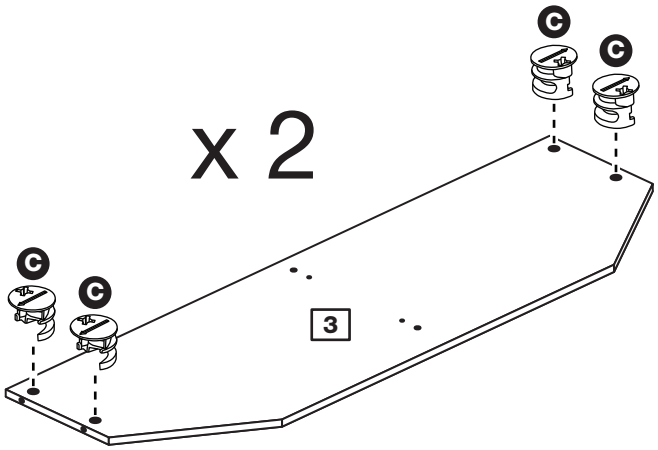

Step 12

Fit a horizontal


Attach a horizontal 3 to the top divider 4 using 2 screws K.

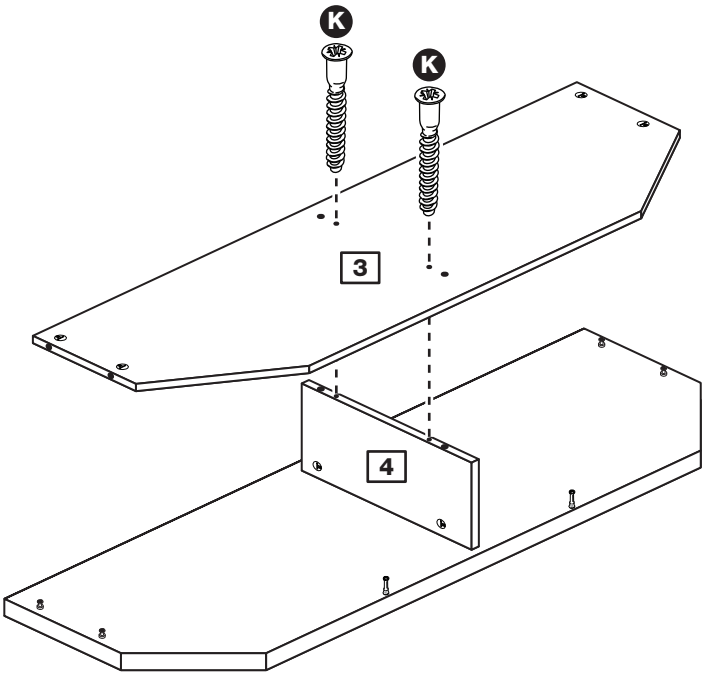

Step 13

Fit the 2 large wooden dowels

Gently tap the 2 large wooden dowels G through the horizontal 3 and into the top divider 4 until they ''bottom out".

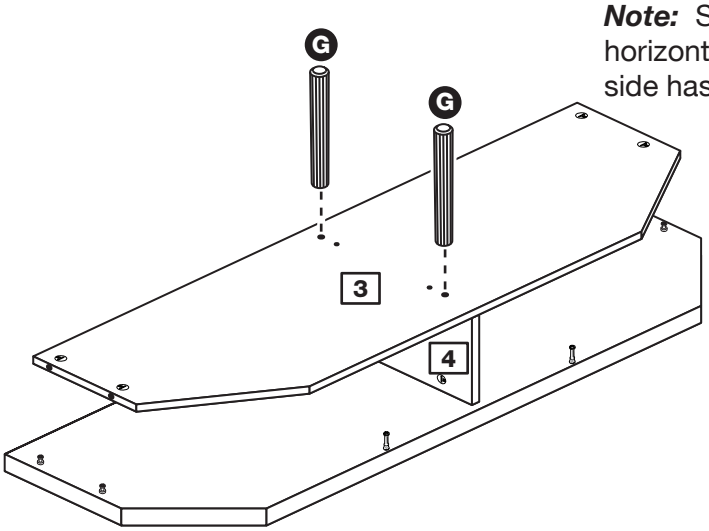

Note: Support the horizontal until the right side has been fitted.

Step 14

Prepare the right side

a: Place a runner (P) onto one of the sides [1]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (M).


b: Slide the runner (P) back the other way and fit the 2nd screw (M) into the corresponding hole in the side [1].

c: Screw 5 metal dowels (B) into the side [1].


Push 2 hollow core locking nuts (D) into the side [1], making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut (D).


Note: The pin should be tapped in flush with the top surface of the hollow core locking nut (D).

a:

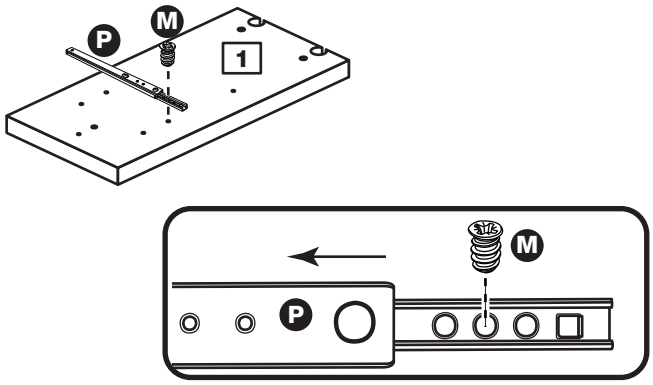


b:

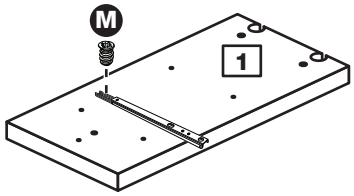

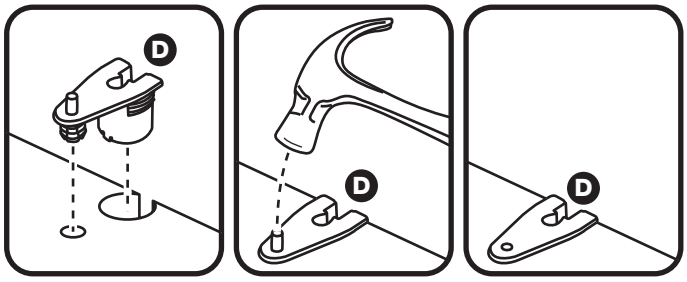

c:

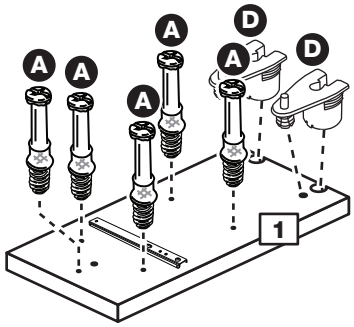

Step 15


Fit the right side

Push the right side 1 onto the top 2 and the horizontal 3.

The 2 small metal dowels E fitted to the top 2 must slide into the top of the 2 hollow core locking nuts D fitted to the right side 1.

Insert a screwdriver into the 2 hollow core locking nuts D and turn the nuts inside as far as they will go.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the horizontal 3.

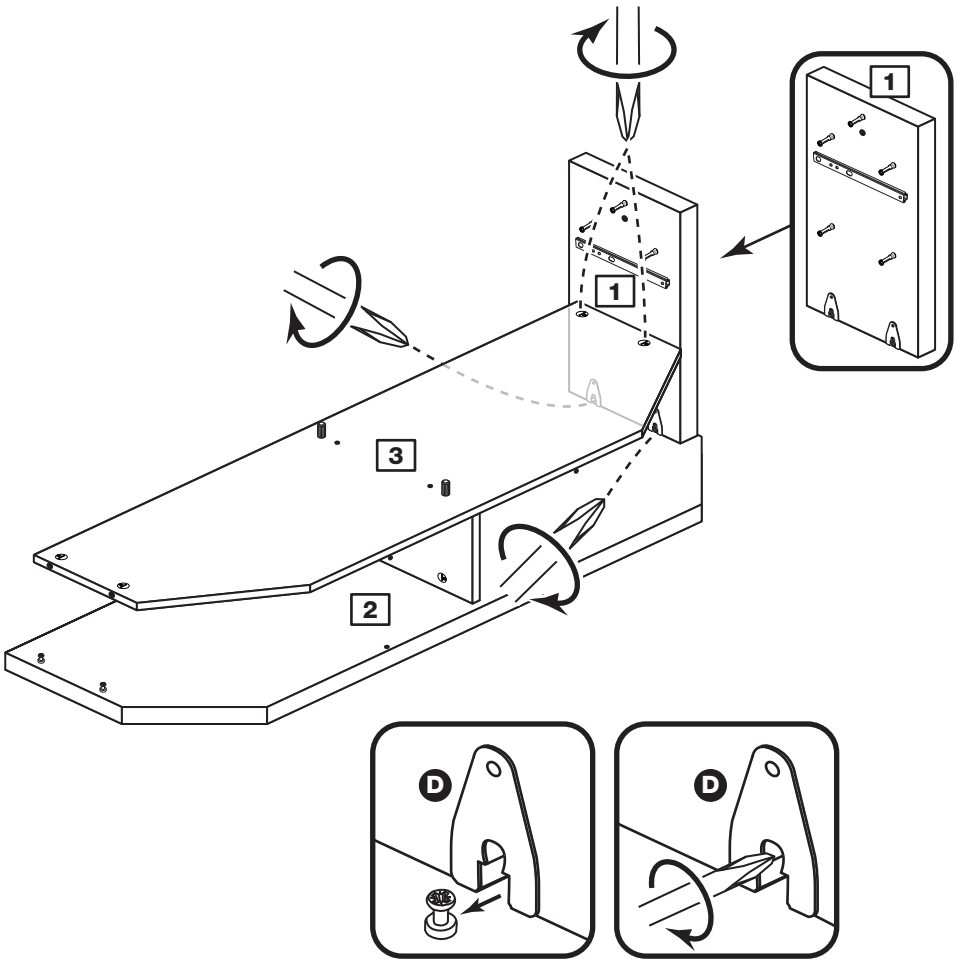

Step 16

Prepare the lower divider

a: Place a runner (P) onto the lower divider [5]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (M).


b: Slide the runner (P) back the other way and use the 2nd hole from the back to fit the 2nd screw (M).


c: Tap 2 wooden dowels (H) into the lower divider [5].


Turn the divider over


d: Place a runner (M) onto the lower divider [5]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (M).


e: Slide the runner (P) back the other way and use the 2nd hole from the back to fit the 2nd screw (M).

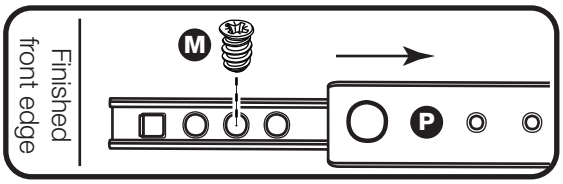

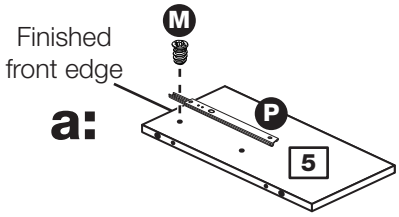


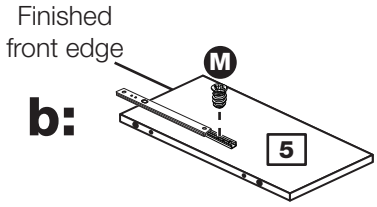


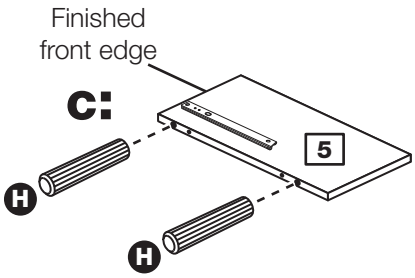


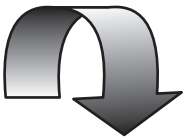

Turn the divider over

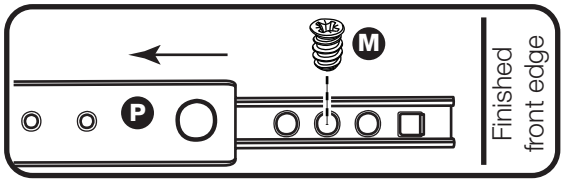

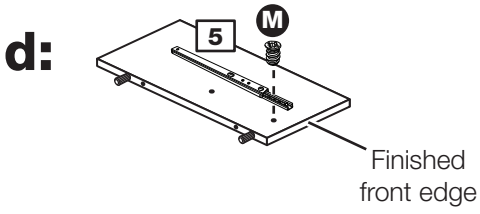


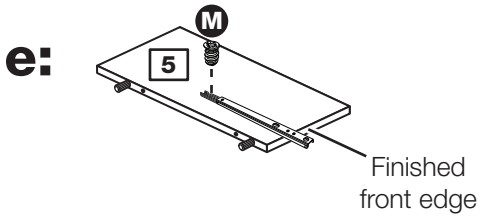

Step 17

Fit the lower divider

Push the lower divider [5] down onto the horizontal [3].

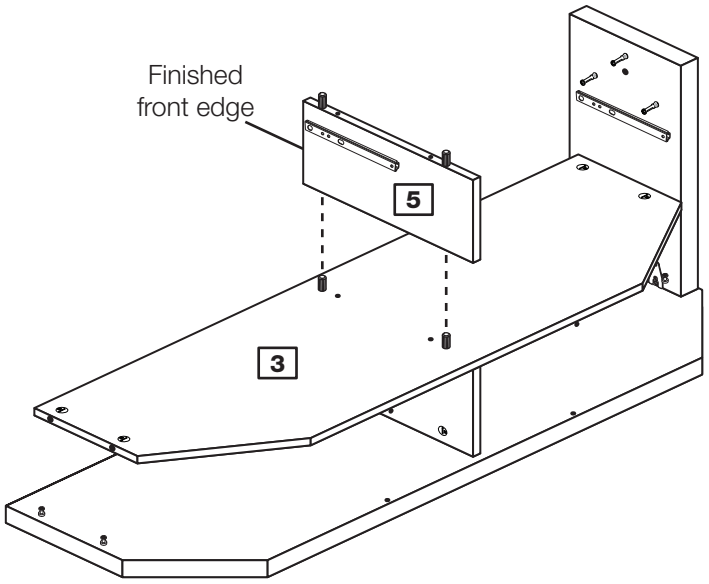


Step 18

Fit the other horizontal

Fit the horizontal [3] to the right side [1] and the lower divider [5].

Attach the horizontal [3] to the lower divider [5] using 2 screws (K).

Use a screwdriver to tighten the 2 large locking nuts (C) fitted to the horizontal [3].

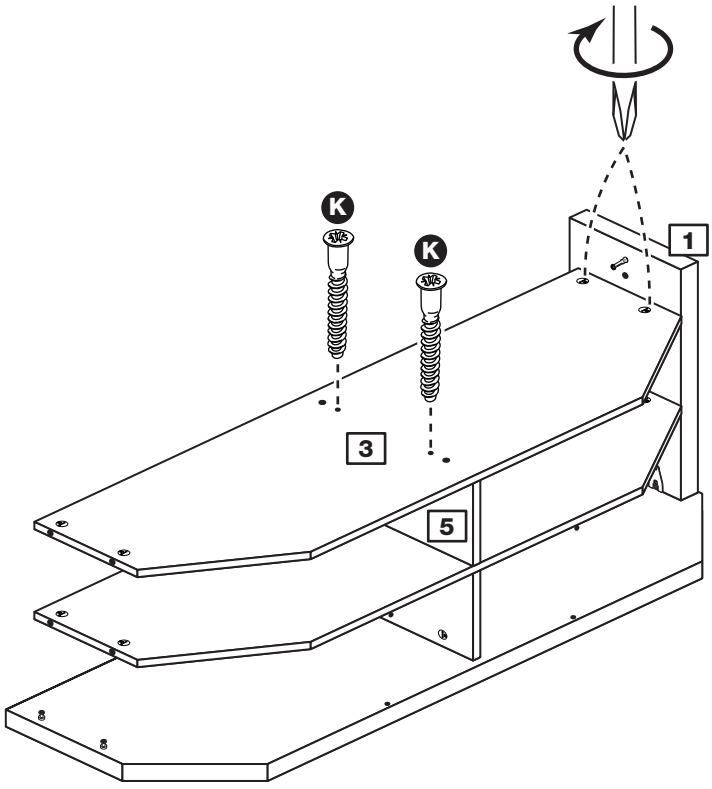


Step 19

Prepare the plinth

Insert 2 large locking nuts C into the plinth 7.

Tap 2 wooden dowels H into the plinth 7.

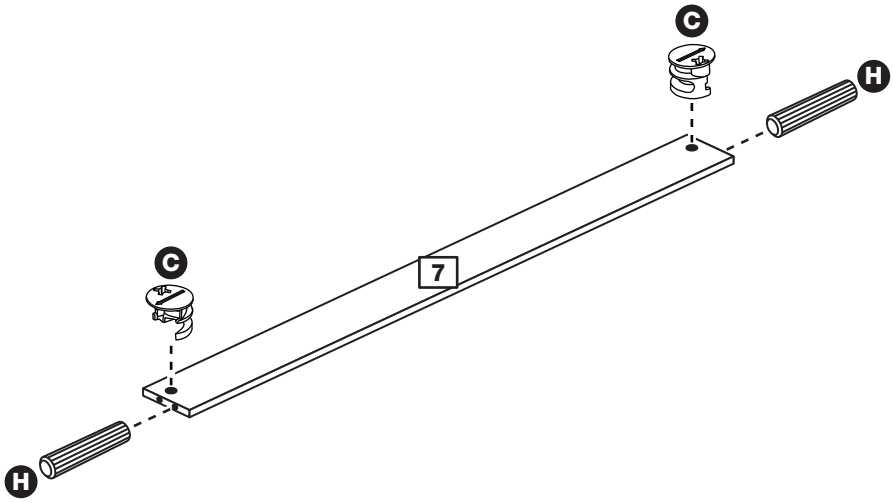


Step 20

Fit the plinth

Push the plinth 7 onto the right side 1.

Use a screwdriver to tighten the large locking nut C fitted to the plinth 7.

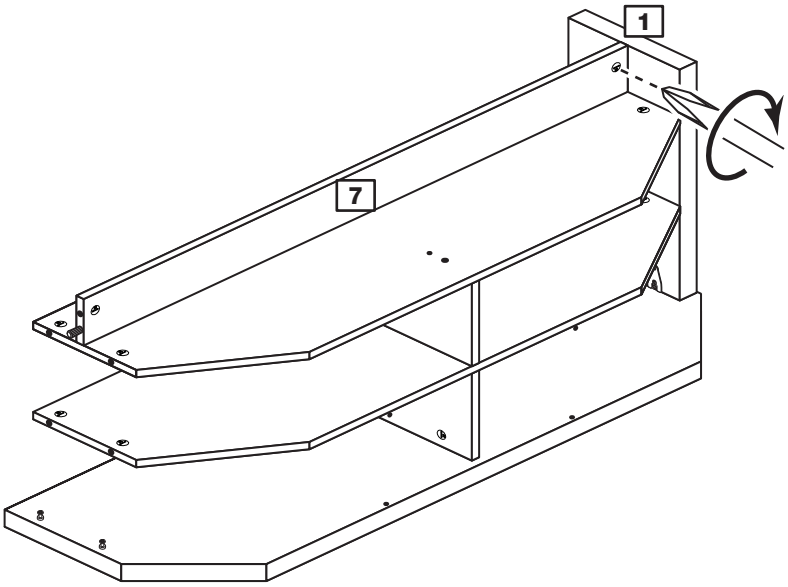

Step 21

Prepare the left side


a: Place a runner (P) onto one of the sides [1]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (M).

b: Slide the runner (P) back the other way and fit the 2nd screw (M) into the corresponding hole in the side [1].


c: Screw 5 metal dowels (A) into the side [1].

Push 2 hollow core locking nuts (D) into the side [1], making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut (D).


Note: The pin should be tapped in flush with the top surface of the hollow core locking nut (D).

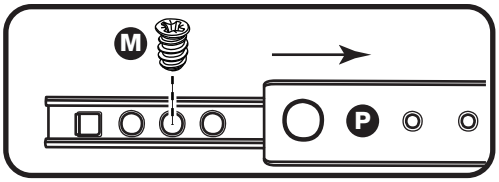


a:

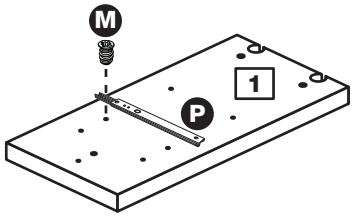


b:

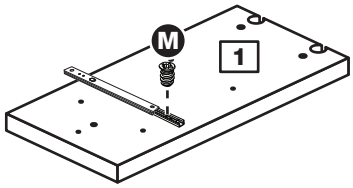

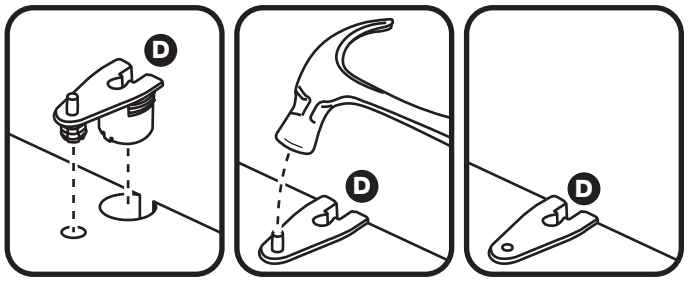

c:

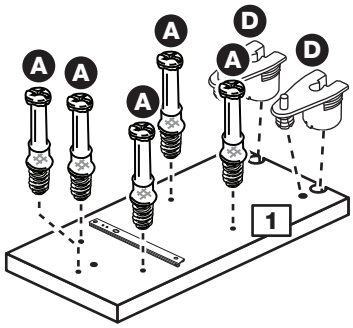


Step 22

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to turn the nuts inside the 2 hollow core locking nuts D fitted to the left side 1.


Use a screwdriver to tighten the 5 large locking nuts C fitted to the horizontals 3 and the plinth 7.

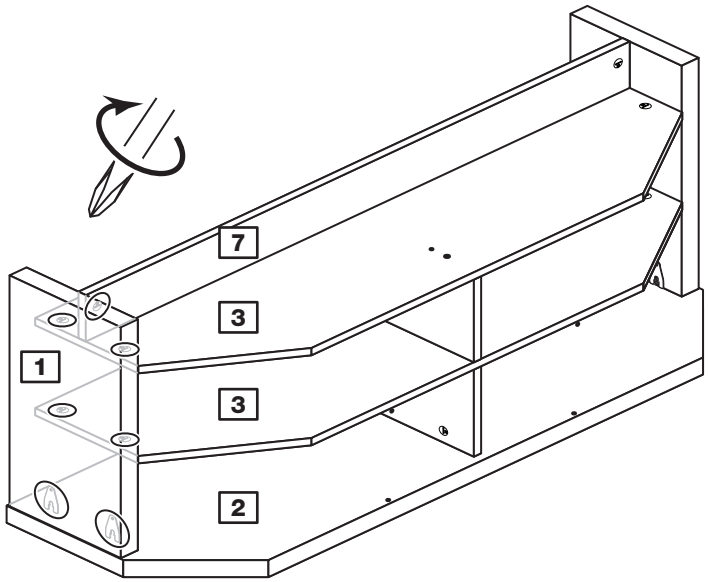

Step 23

Prepare the back

Insert 2 large locking nuts C into each of the back 6.

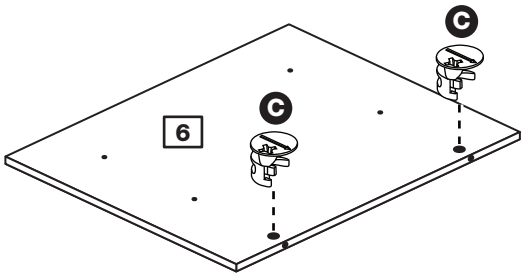


Step 24

Fit the back

Push the back 6 down onto the top 2.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the back 6.

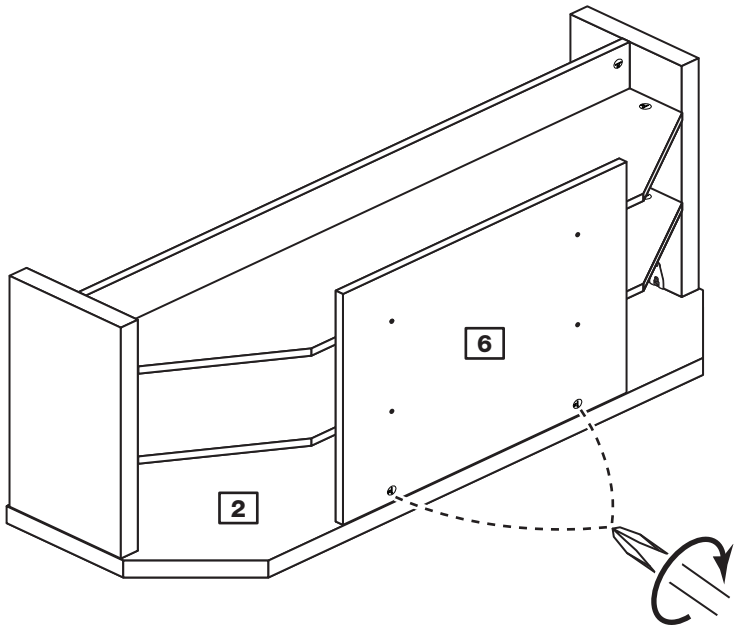


Step 25

Secure the back

Secure the back 6 to the 2 horizontals 3 using 4 screws J.

Carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

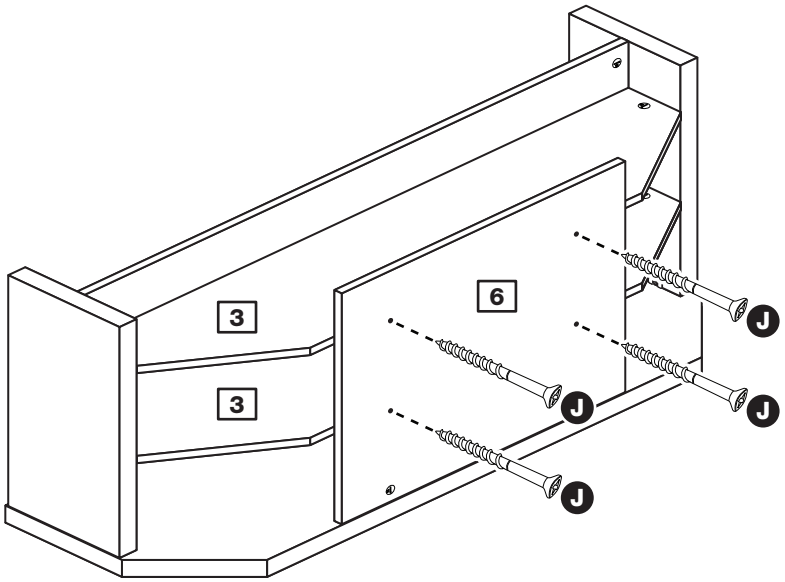

Step 26

Fit the drawers


Slide both the runners P forward and locate the drawer sides 10 and 11 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners P.


Working from the inside of the drawer, insert 2 screws N through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws N.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Remember: The right drawer front has a small identification hole (refer back to Step 1).

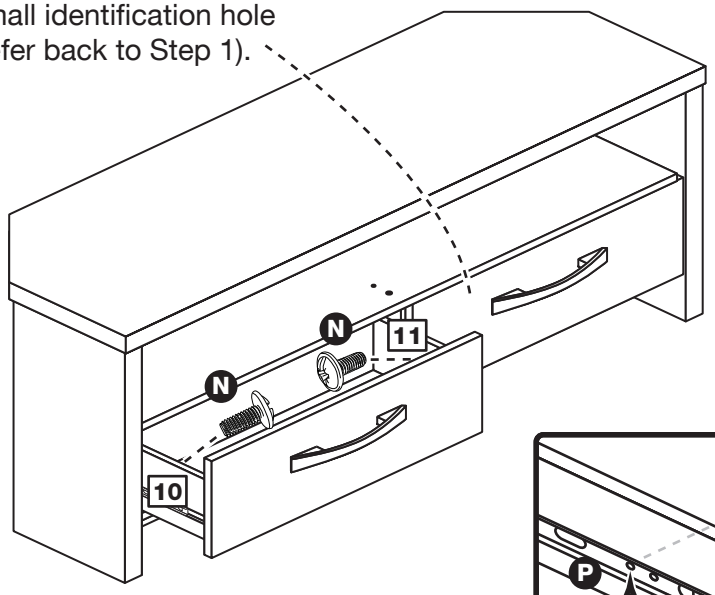

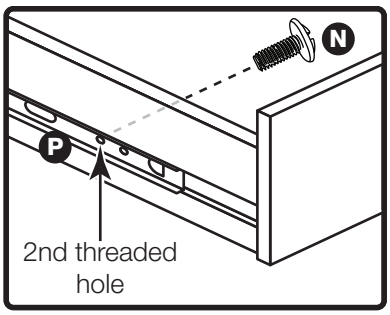

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020