
Mia Hearts / Stars Workdesk

Assembly Instructions - Please keep for future reference


Hearts 3196399

Stars 4619129

Hearts

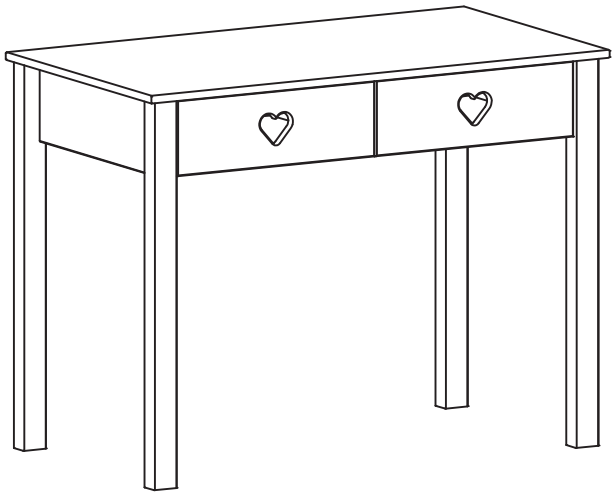

Stars

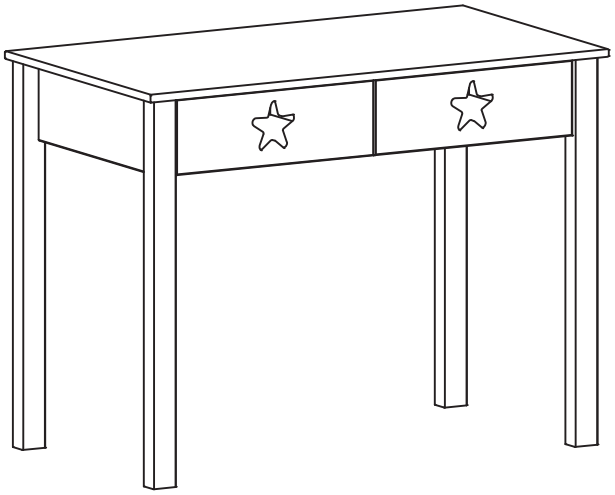

Dimensions

Width : 100.0 cm
Depth : 55.0 cm
Height: 76.0 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 03456 400 800**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

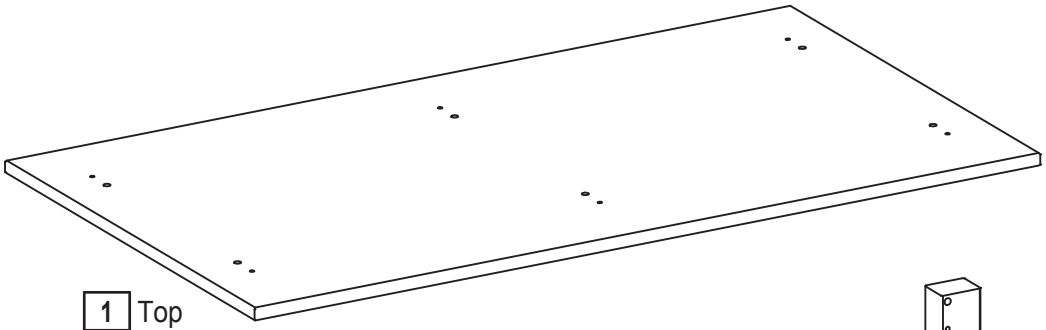

1 Top
(100 cm x 55 cm)

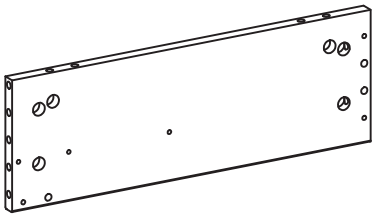

2 Side, left
(15,5 cm x 45,6 cm)

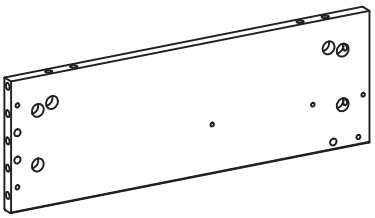


3 Side, right
(15,5 cm x 45,6 cm)




4 Leg, left x 2
(74,5 cm x 5,0 cm)




5 Leg, right x 2
(74,5 cm x 5,0 cm)

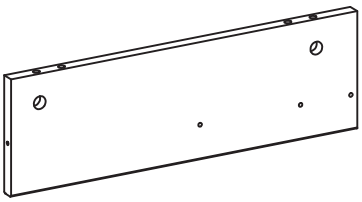


6 Divider
(13,8 cm x 44,1 cm)

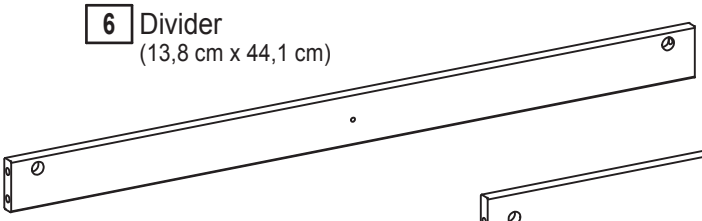


7 Front rail
(87 cm x 6 cm)

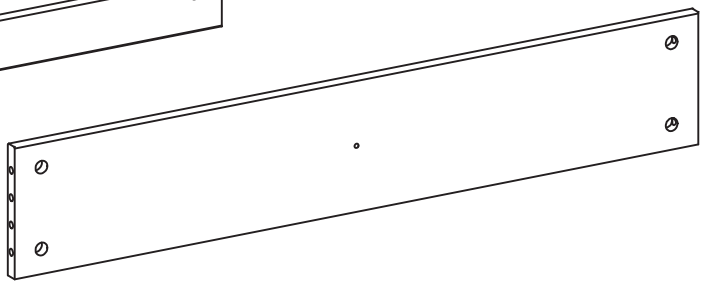


8 Back rail
(87 cm x 15,5 cm)

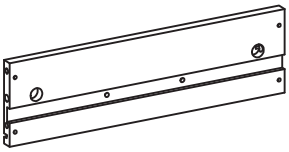


10 Drawer side, right/left x 4
(35 cm x 9,8 cm)

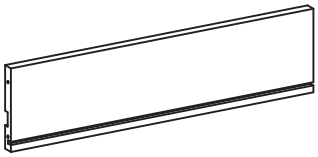

11 Drawer back x 2
(38,5 cm x 9,8 cm)

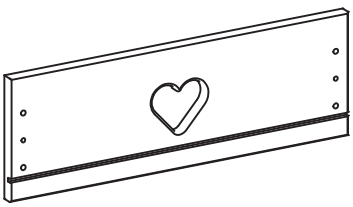

9 Drawer front x 2
(43,1 cm x 14,5 cm)


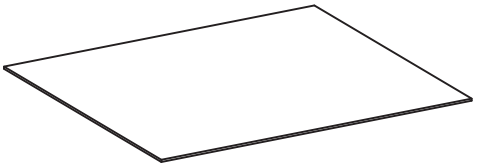


12 Drawer bottom x 2
(39,5 cm x 34,7 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

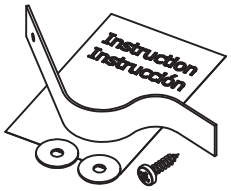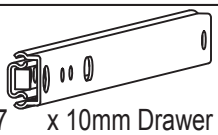Aa  ø8 x 40mm Wooden dowel x 24	**Ab**  ø6 x 30mm Wooden dowel x 8	**Bp**  ø3 x 35mm Screw x 8
Ca  ø15 x 10.5mm Cam x 24	**Cp**  ø5 x 11, cc34mm Bolt x 24	**Dj**  ø5 x 38mm Screw x 2
Fh  Wall strap and instruction x 1	**Fi**  Back fitting w. ø3.5 x 15mm Screw x 4	**Hk**  M4 x 9mm Screw x 4
	Kb  ø5.8 x 8mm Screw x 6	**Kf**  ø5.8 x 19mm Screw x6
Nu  ø10 x 9mm Spacer x 6	**Sk**  245 x 17 x 10mm Drawer runner x 4	

Tools required



Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Assembly of the desk.

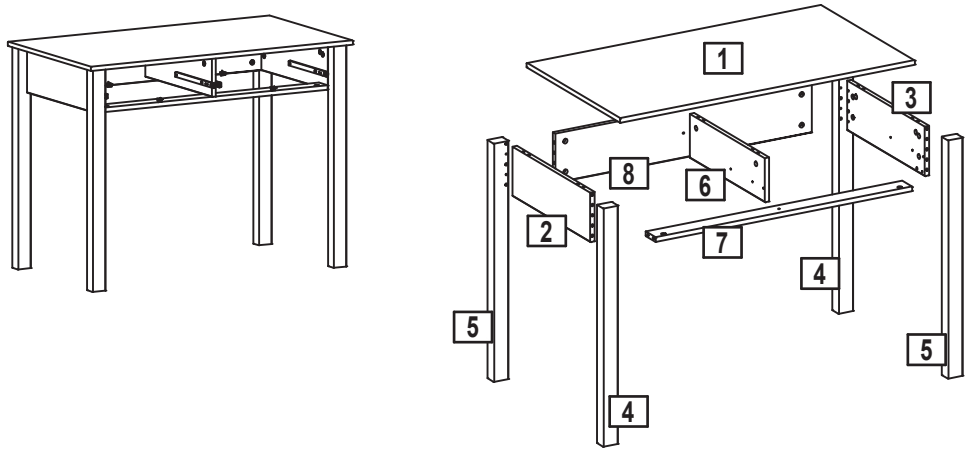


Step 1.1

Knock the dowels Aa into the holes indicated on the sides 2 and 3 using a small hammer.

Aa



ø8 x 40mm Wooden dowel x 16

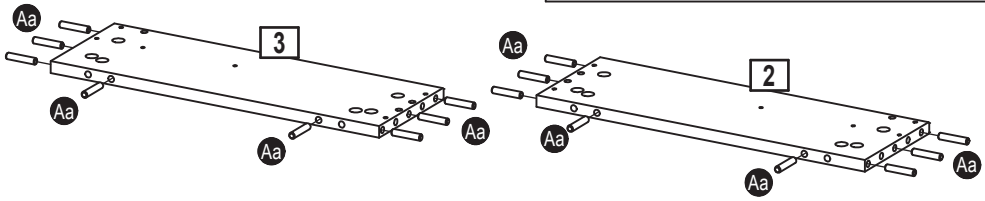


Step 1.2

Screw the bolts Cp into the holes indicated on the legs 4 and 5.

Cp



ø5 x 11, cc34mm Bolt x 8

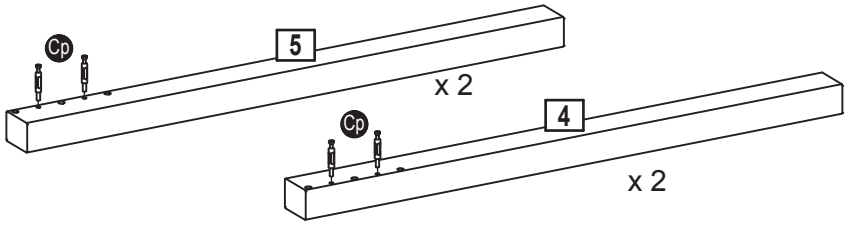

Step 1.3

Place the legs 4 and 5 onto the sides 2 and 3.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the legs 4/5.

Turn the cams Ca to the right to fix the legs 4 and 5.

Ca




ø15 x 10.5mm Cam x 8

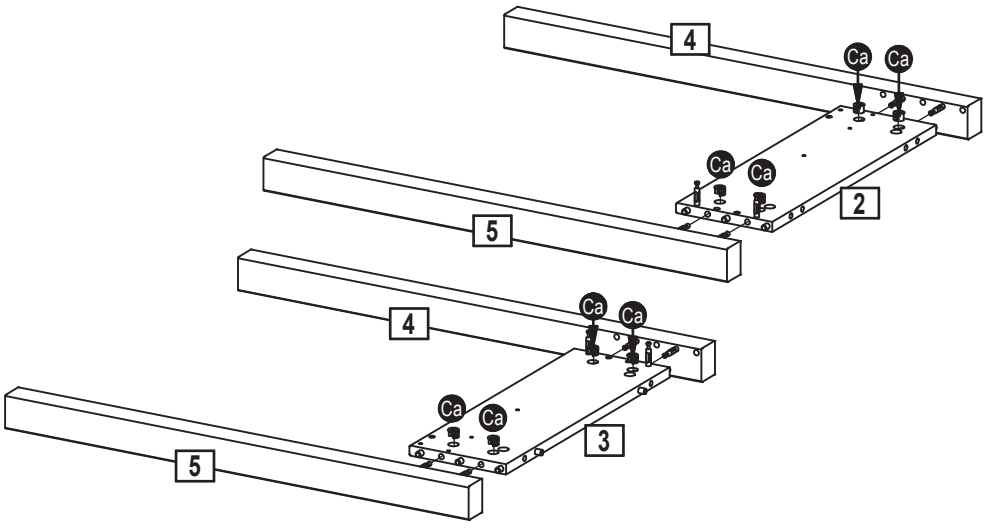

Assembly Instructions

Step 1.4

Screw the bolts Cp into the holes indicated on the sides 2 and 3.

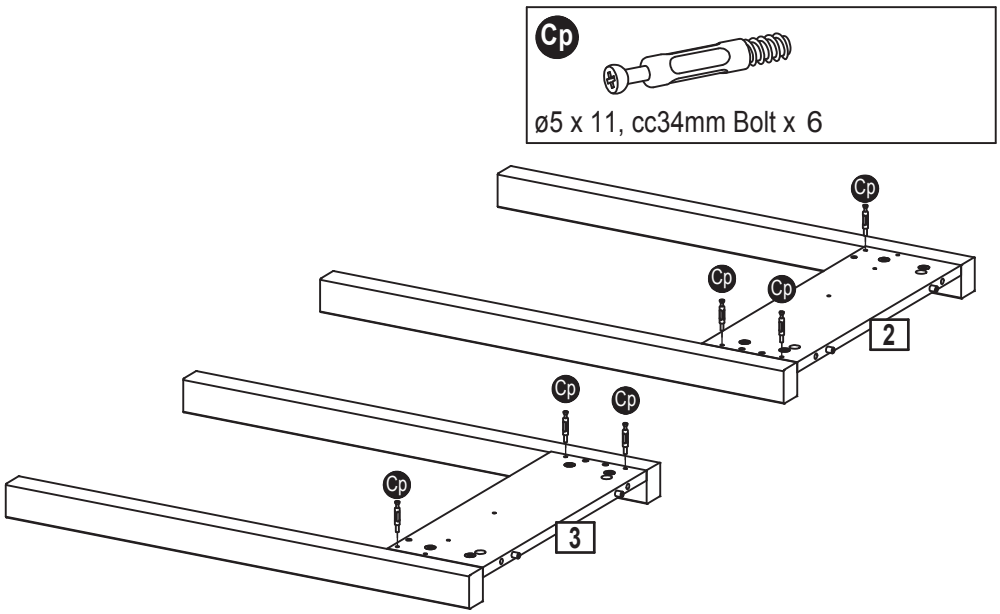



Step 1.5


Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes. See details.

Place the Spacers Nu as shown, and fix the front end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes number 2 and 8 as indicated.

See details.

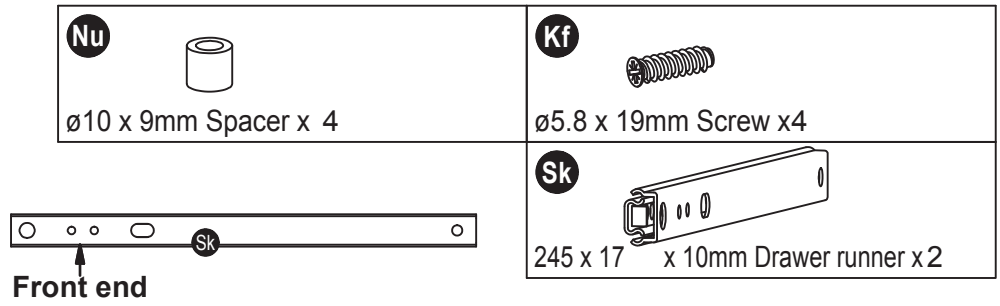

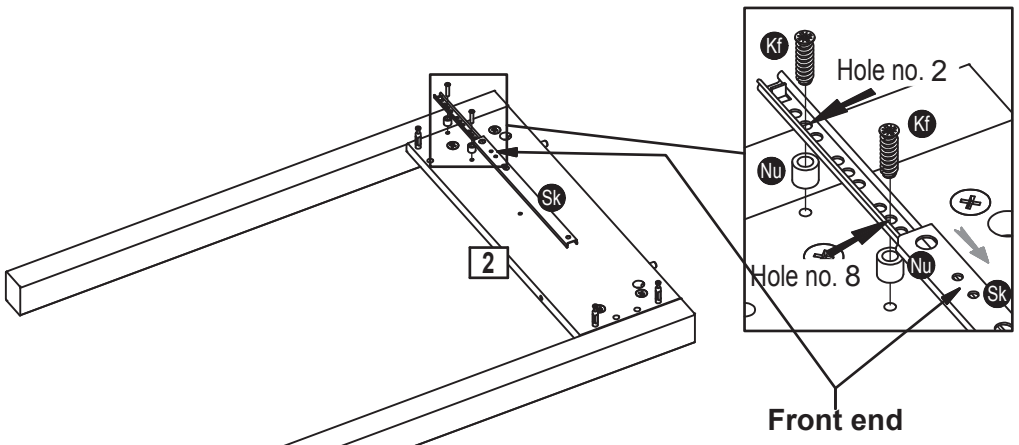

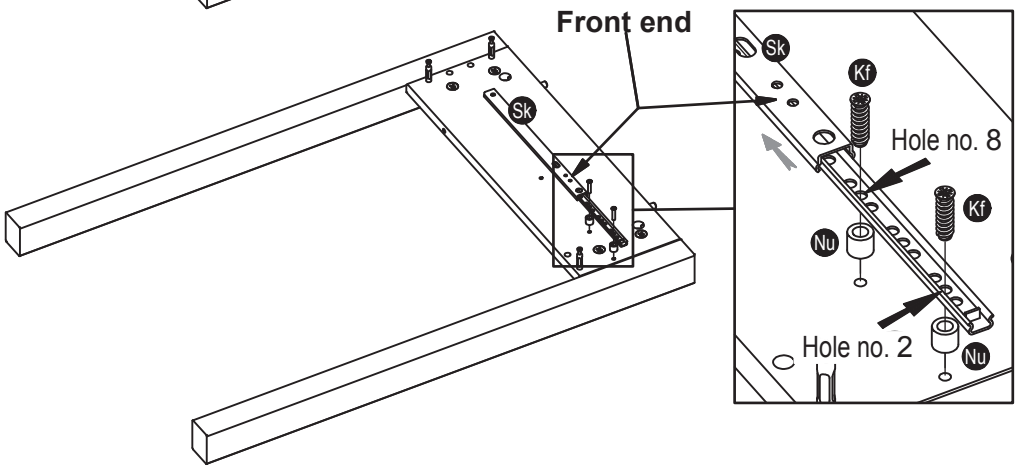

Assembly Instructions


Step 1.6

Slide the top of the drawer runners Sk forwards.

Place the Spacers Nu as shown, and fix the back end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes indicated.

See details.

Kf	Nu
	
ø5.8 x 19mm Screw x2	ø10 x 9mm Spacer x 2

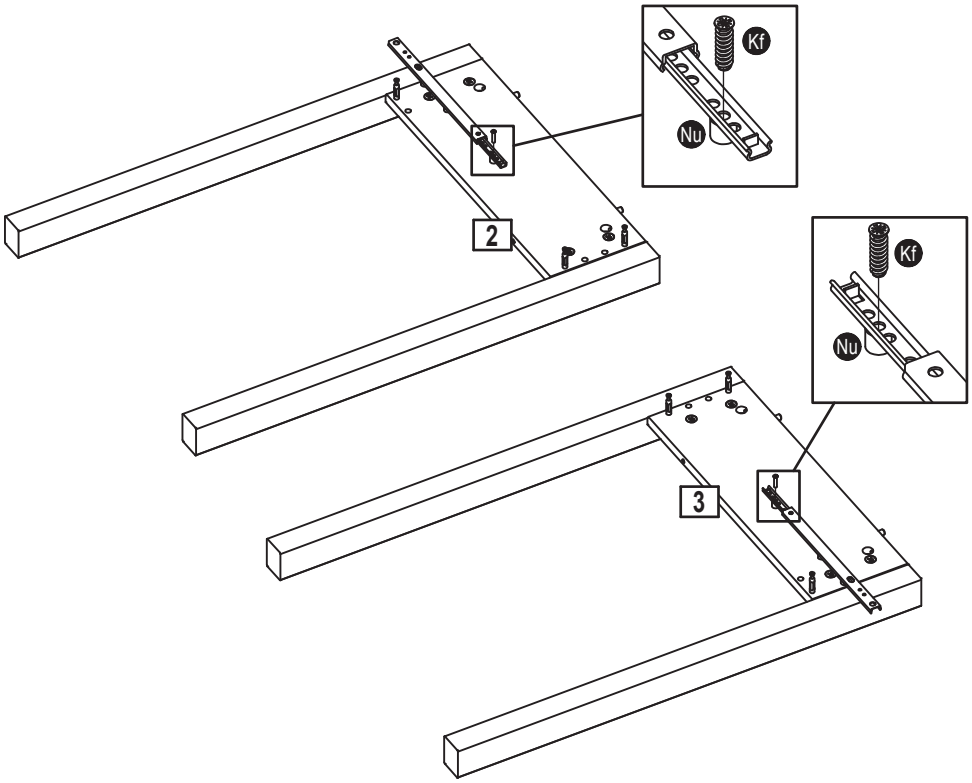


Step 1.7

Knock the dowels Aa into the holes indicated on the back rail 8, the front rail 7 and the divider 6 using a small hammer.

Aa

ø8 x 40mm Wooden dowel x 8

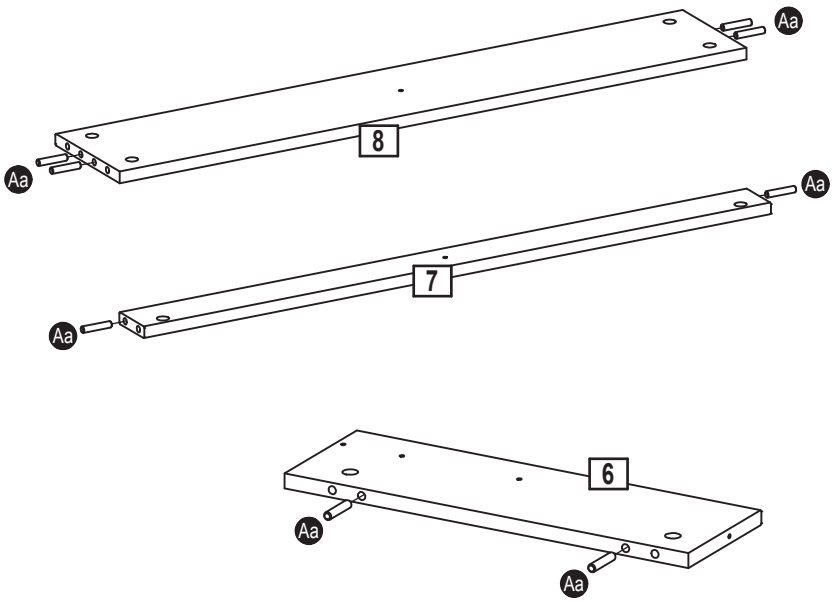

Assembly Instructions

Step 1.8

Slide the top of the drawer runner Sk backwards. Identify the front end of the drawer runner Sk by the two M4 holes.


Fix the front end of the drawer runner Sk to the divider 6 using screws Kb through the holes number 2 and 8 as indicated.

Kb ø5.8 x 8mm Screw x 2

Sk 245 x 17 x 10mm Drawer runner x 1



Front end

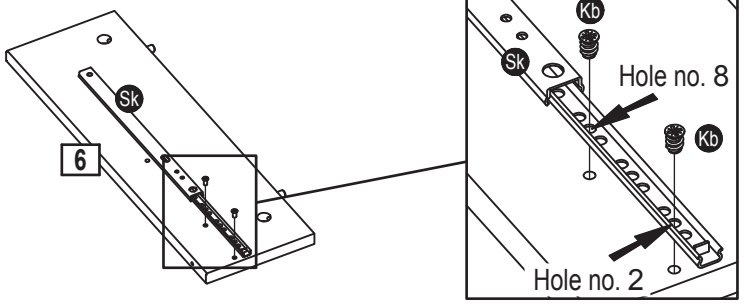


Step 1.9

Slide the top of the drawer runner Sk forwards.

Fix the back end of the drawer runner Sk to the divider 6 using screw Kb through the hole indicated.

Kb ø5.8 x 8mm Screw x 4

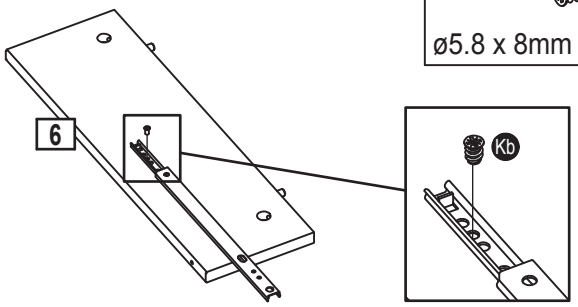

Step 1.10


Turn the divider 6 upside down.

Slide the top of the drawer runner Sk forwards.

Fix the front end of the drawer runner Sk to the divider 6 using screws Kb through the holes number 2 and 8 as indicated.

Kb ø5.8 x 8mm Screw x 2

Sk 245 x 17 x 10mm Drawer runner x 1

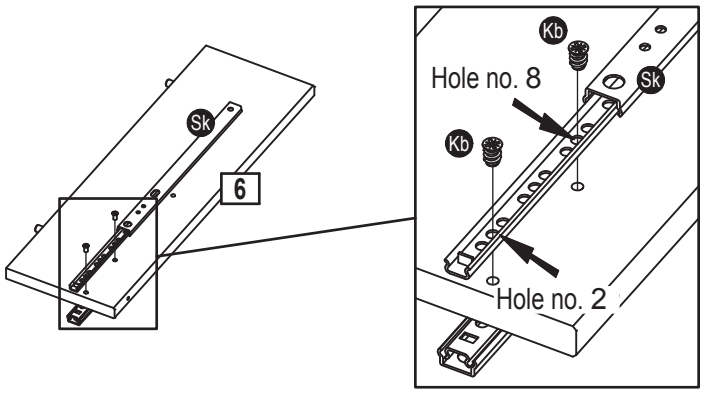


Step 1.11

Slide the top of the drawer runner Sk forwards.

Fix the back end of the drawer runner Sk to the divider 6 using screw Kb through the hole indicated.

Kb ø5.8 x 8mm Screw x 1

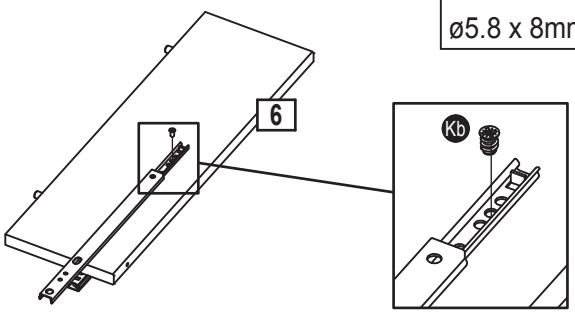


Assembly Instructions


Step 1.12

Screw the bolts Cp into the holes indicated on the top 1.

Cp



ø5 x 11, cc34mm Bolt x 6

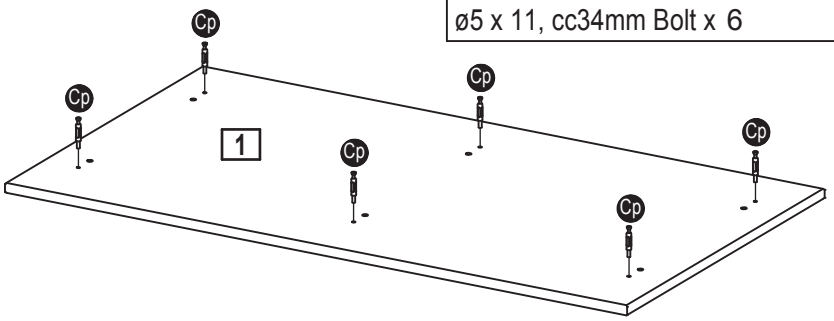

Step 1.13

Place the divider 6 onto the top 1.


Push cams Ca into the holes indicated on the divider 6. Arrows pointing towards the top 1.


Turn the cams Ca to the right to fix the divider 6.

Ca



ø15 x 10.5mm Cam x 2

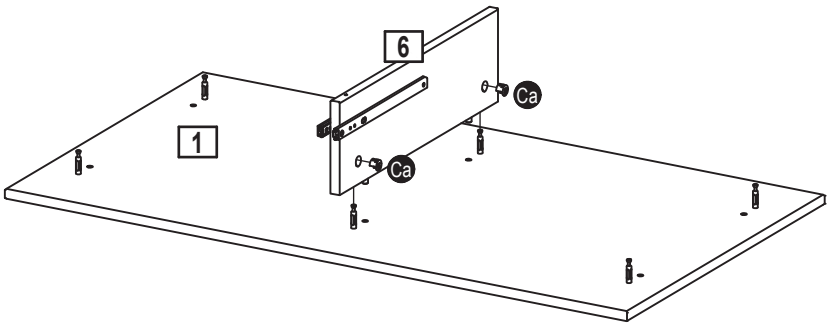

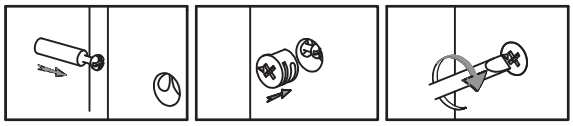

Step 1.14

Place the sides 2 and 3 onto the back rail 8 and the front rail 7.


Push cams Ca into the holes indicated on the back rail 8 and the front rail 7.
Arrows pointing towards the sides 2/3.

Turn the cams Ca to the right to fix the sides 2 and 3.

Ca



ø15 x 10.5mm Cam x 6

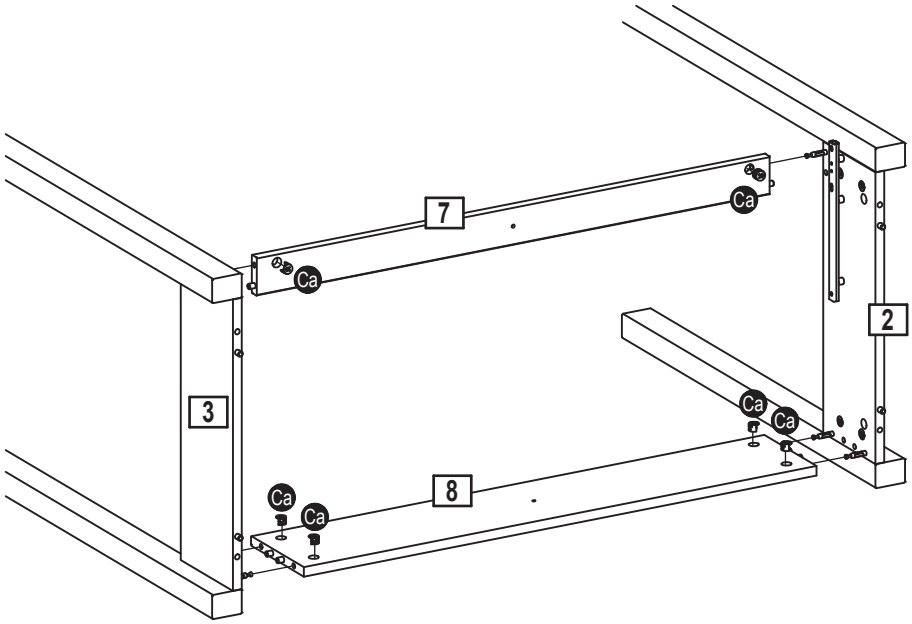

Assembly Instructions

Step 1.15

Place the sides 2 and 3 onto the top 1.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm Cam x 4

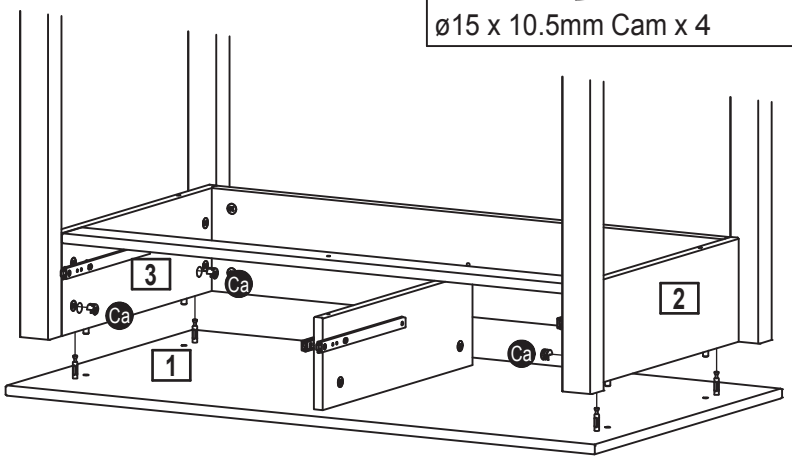


Step 1.16

Fix the back rail 8 and the front rail 7 to the divider 6 as shown, using screws Dj.

Dj



ø5 x 38mm Screw x 2

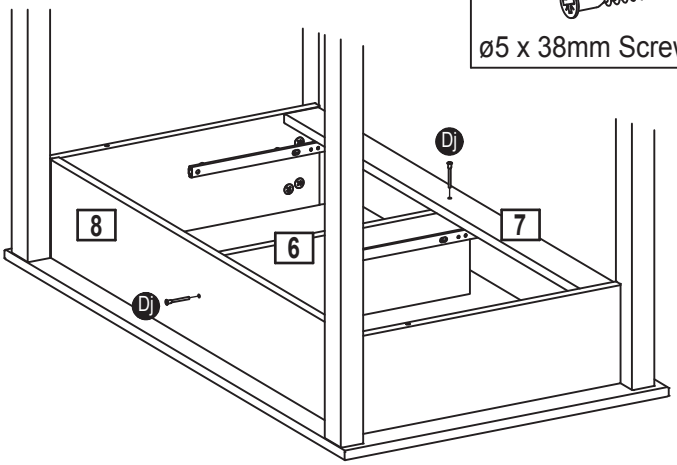


Step 1.17

Important!
The work desk is heavy.
Lift with care.


Its recommended that the work desk is fixed to the wall.

Use the fittings Fh. Follow the instructions included with the fittings.

Fh

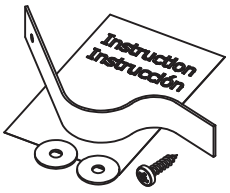


Wall strap and instruction x 1

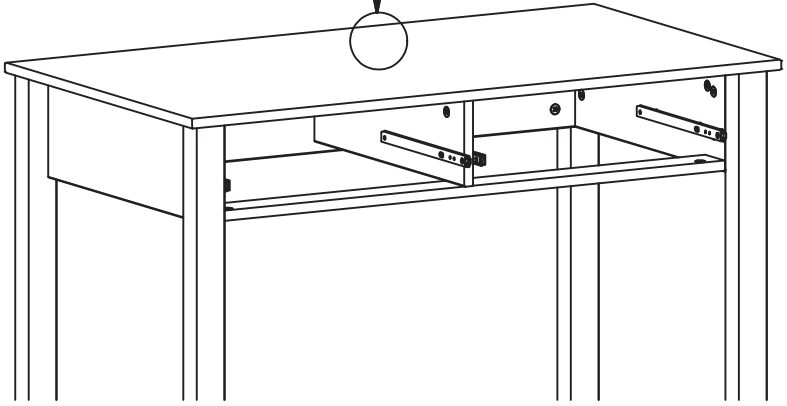


Assembly Instructions

Step 2

Assembly of the drawers.

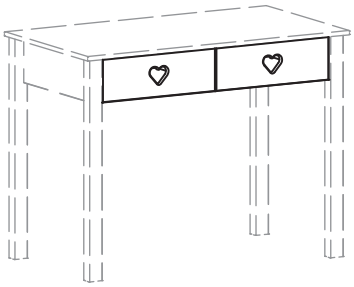

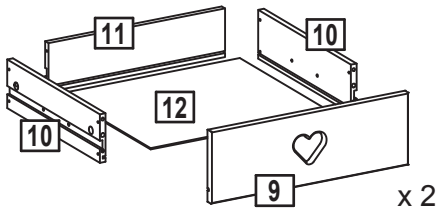

x 2


Step 2.1

Fix the drawer sides 10 to the drawer back 11 as shown, using screws Bp.

Bp



ø3 x 35mm Screw x 8

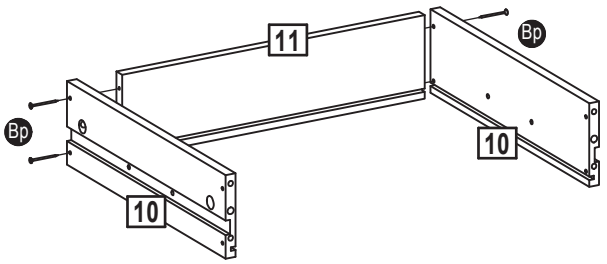

x 2


Step 2.2

Knock the dowels Ab into the holes indicated on the drawer sides 10 using a smal hammer.

Ab




ø6 x 30mm Wooden dowel x 12

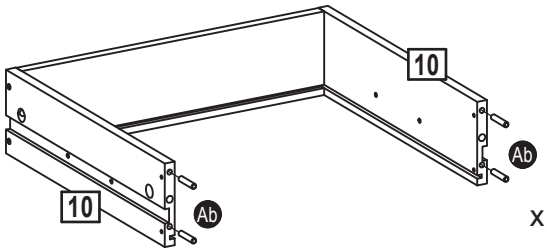

x 2

Step 2.3

Slide the drawer bottom 12 into the drawer sides 10.

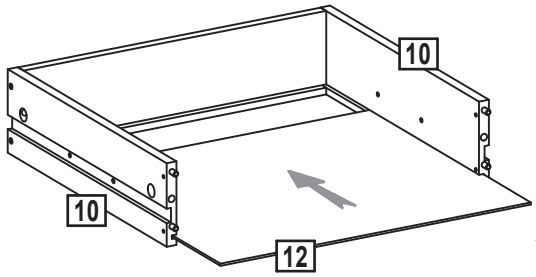

x 2


Step 2.4

Screw the bolts Cp into the holes indicated on the drawer front 9.

Cp



ø5 x 11, cc34mm Bolt x 6

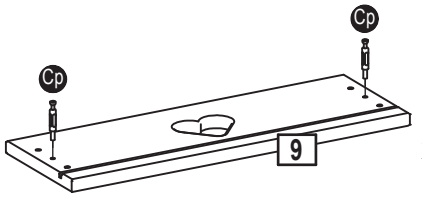

x 2

Assembly Instructions

Step 2.5


Push the drawer front [9] onto the drawer sides [10].

Place cams (Ca) into the holes indicated. Arrow pointing towards the front. Turn the cams (Ca) to the right to fix the front.

(Ca)



ø15 x 10.5mm Cam x 4

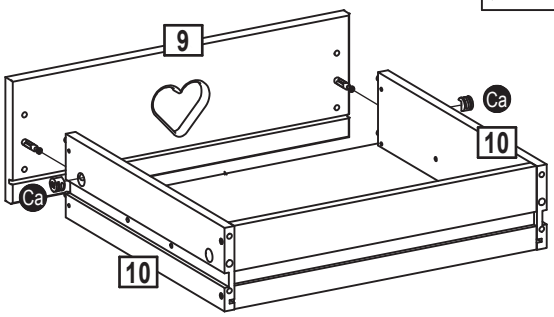

x 2


Step 2.6

Important!
Make sure the angle between the drawer front [9] and the drawer sides [10] is 90° before the drawer bottom [12] is fixed using (Fi) as shown.
To adjust the angle between the sides and the front push the fitting (Fi) sidewards.


(Fi)



Back fitting w. ø3.5 x 15mm Screw x 4

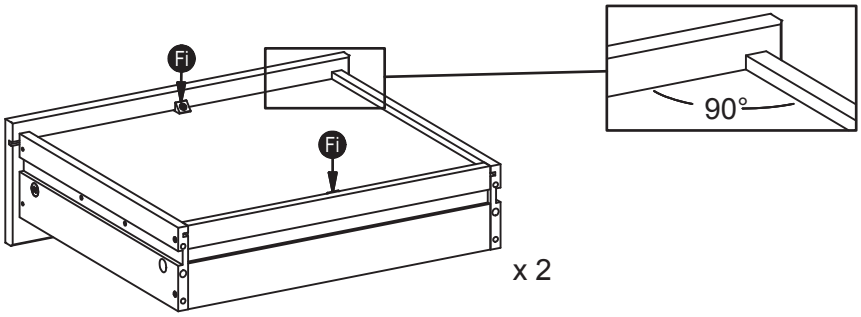

x 2

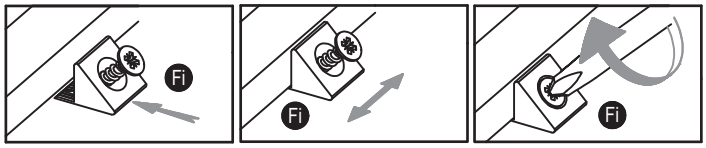

Step 2.7


Pull out the drawer runners. Slide the drawers onto the runners.

Fix drawers to the drawer runners using screws (Hk).

(Hk)




M4 x 9mm Screw x 4

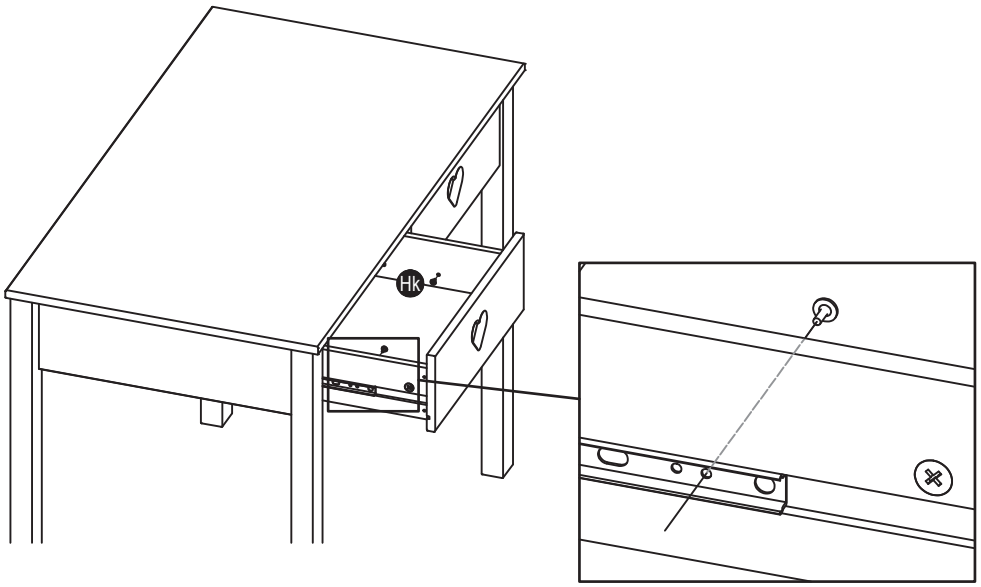

A Guide to

Wall Mounting & Fixings

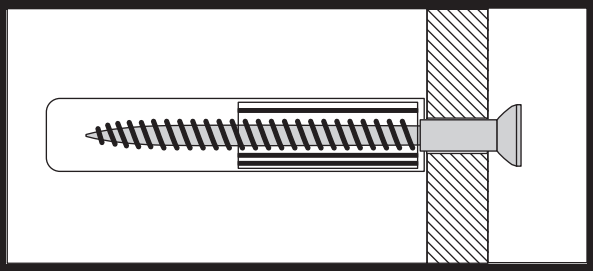

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

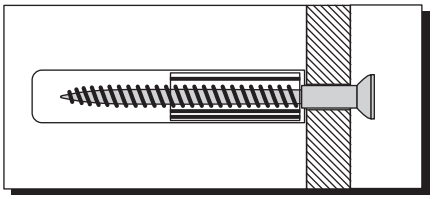


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

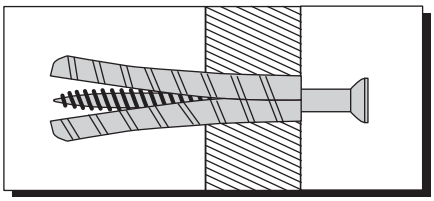


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

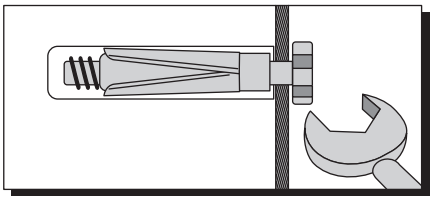


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

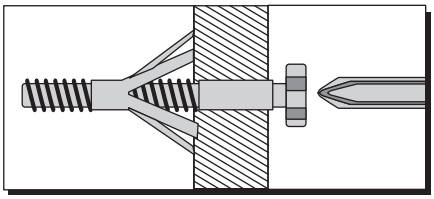


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

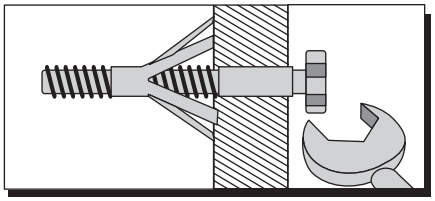

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

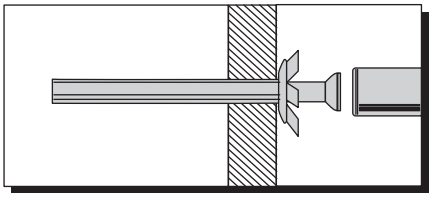

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.