
Mia 4 Poster Bed

Assembly Instructions - Please keep for future reference

White 2627436

Pink 2557386

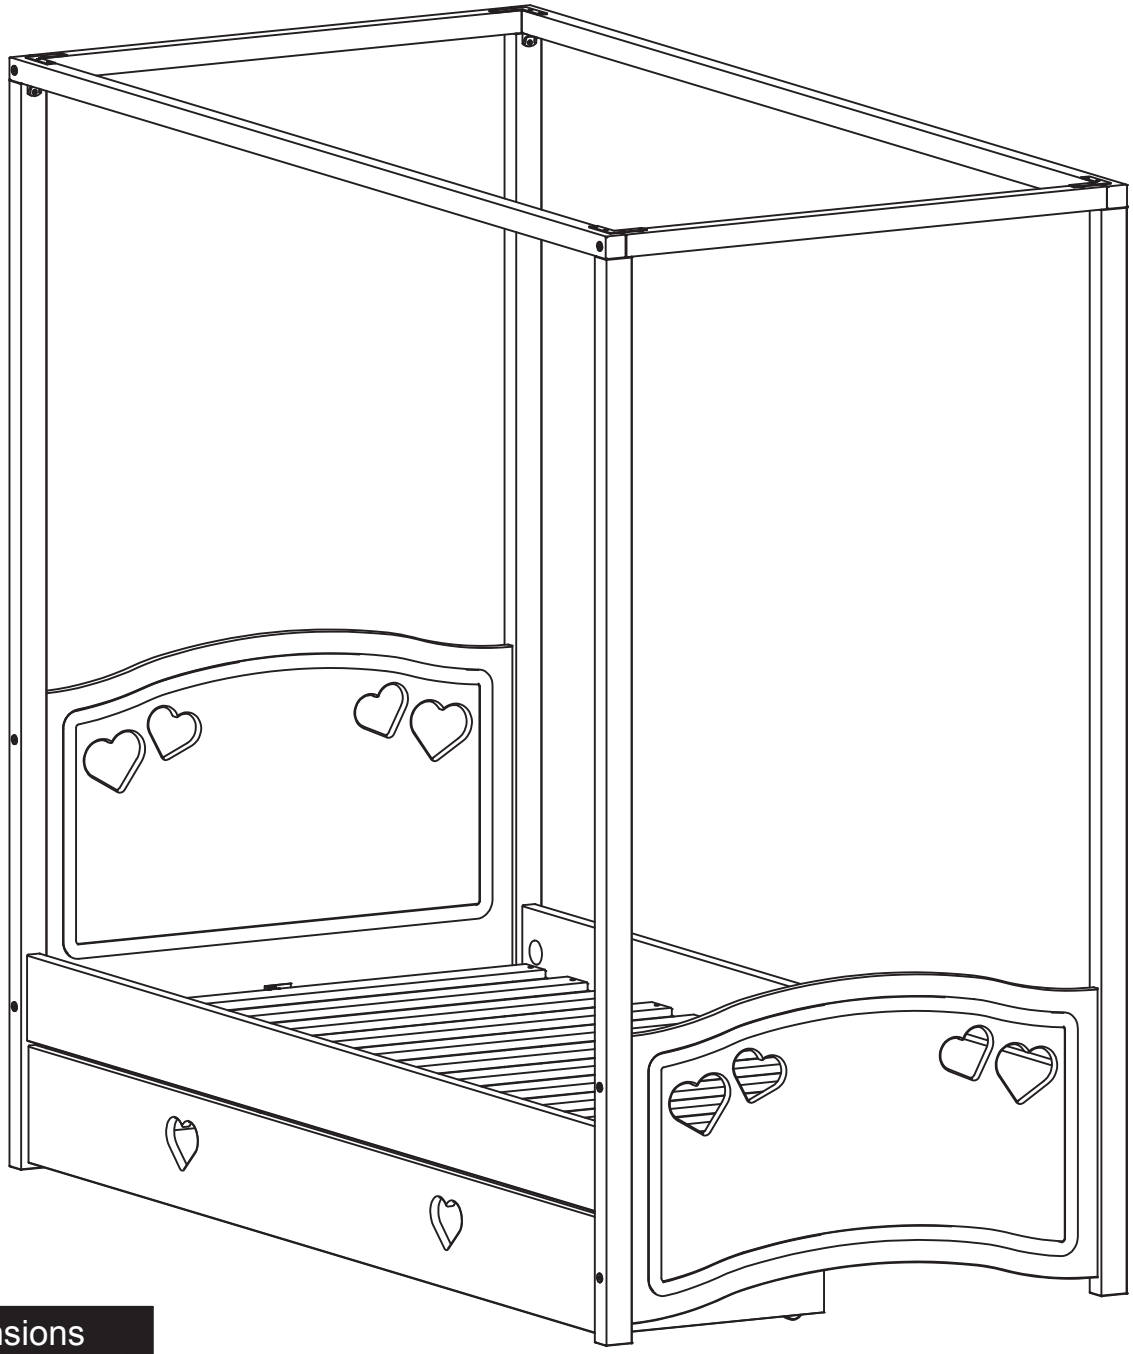

Dimensions

Width : 197.3 cm
Depth : 99.5 cm
Height: 186.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note !


- **This childs bed conforms to BS 8509:2008 +A1:2011.**
- **Age recommendation: from 3 year to 12 years.**
- **Mattress in size 90x190 cm to be used with this bed.**
- **Children are likely to play, bounce ,jump and climb on beds, therefore the childs bed should not be placed too close to other furniture or windows, and should be placed either tight to any wall or have a gap 300mm between the wall and the side of bed.**
- **Any additional or replacement parts are obtained from the manufacturer or distributor.**

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**









Please check you have all the panels listed below

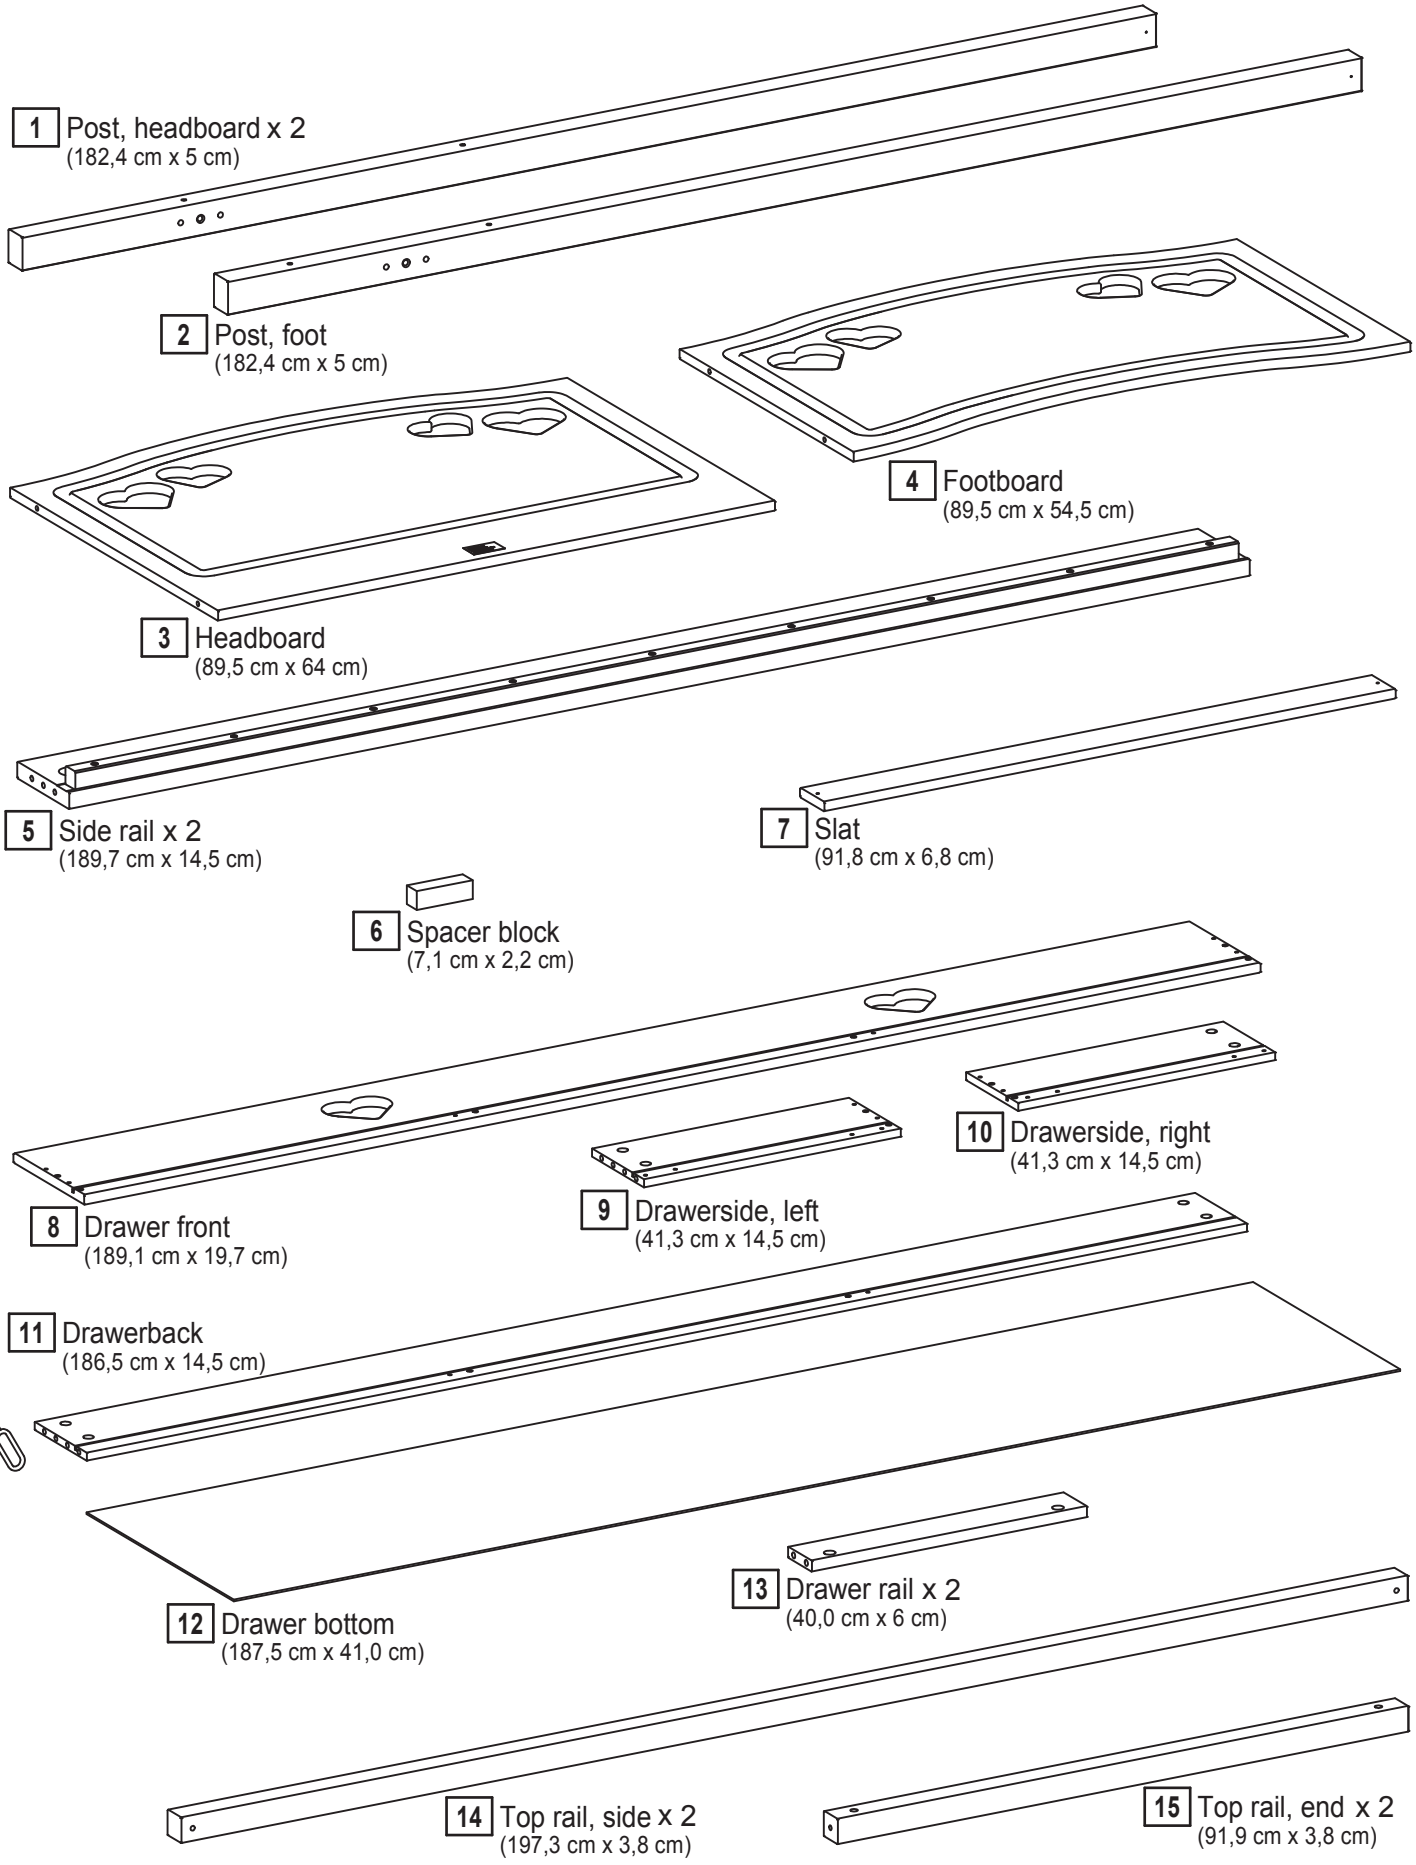

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

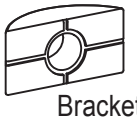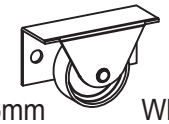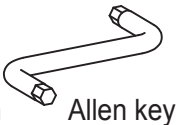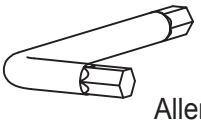Aa  ø7.8 x 40mm Wooden dowel x 20	**Bo**  ø3 x 12mm Screw x 24	**Bv**  ø3,5 x 30mm Screw x 28
Ca  ø15 x 10.5mm Cam x 12	**Cb**  ø5 x 8, cc34mm Bolt x 12	**Ec**  ø35mm Cap x 4
Fm  ø35mm Bracket x 4	**Hg**  M6 x 70mm Threaded rod x 4	**Hw**  M6 x 80mm Bolt x 12
Ke  ø6.1 x 11.5mm Screw x 8	**Na**  M6 x 10mm Nut x 4	**Ne**  M6 x 20mm Bushing x 4
Nf  M6, ø10 x 12.5mm barrel nut x 12	**Ta**  ø35mm Wheel x 4	**Vn**  Angle 23 x 23 x 24mm x 4
Vq  70 x 70 x 16mm Corner angle x 4	**Ya**  4mm Allen key x 1	**Yb**  10/13mm Wrench x 1
Yc  6mm Allen key x 1		


Tools required


Phillips screwdriver (Medium & large)


Hammer


Flatblade screwdriver (Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Assembly of the bed.

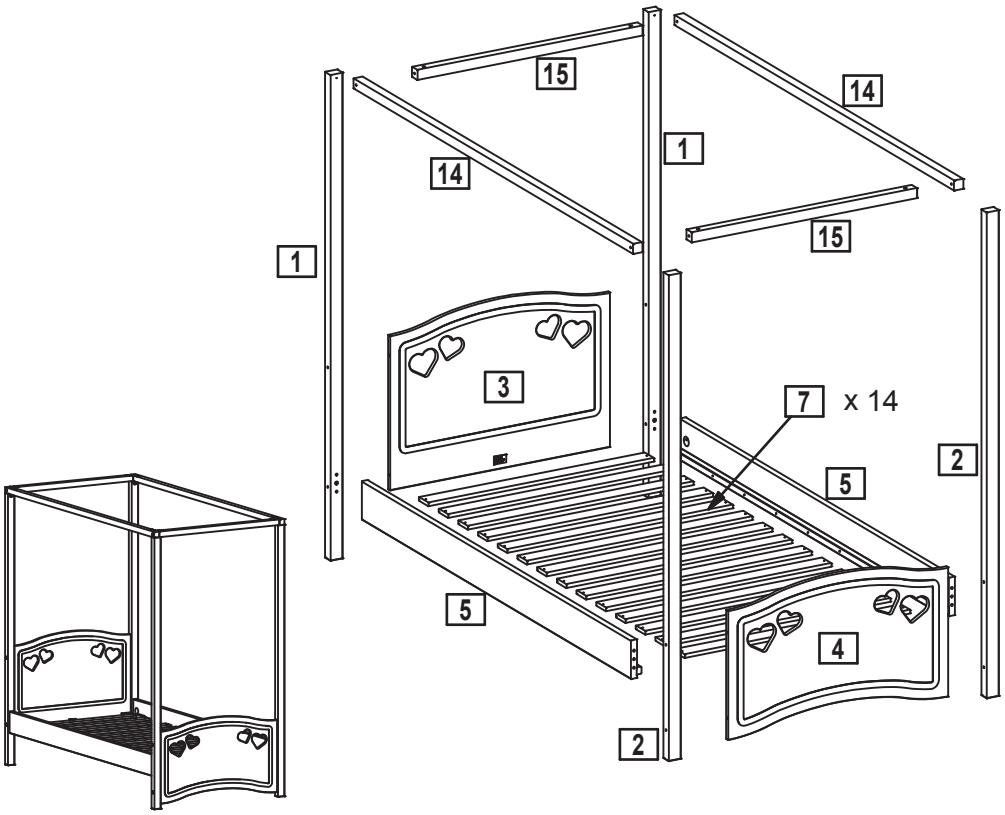

Step 1.1

Knock the dowels Aa into the holes indicated on the side rails 5 using a small hammer.

Aa
ø7.8 x 40mm Wooden dowel x 8

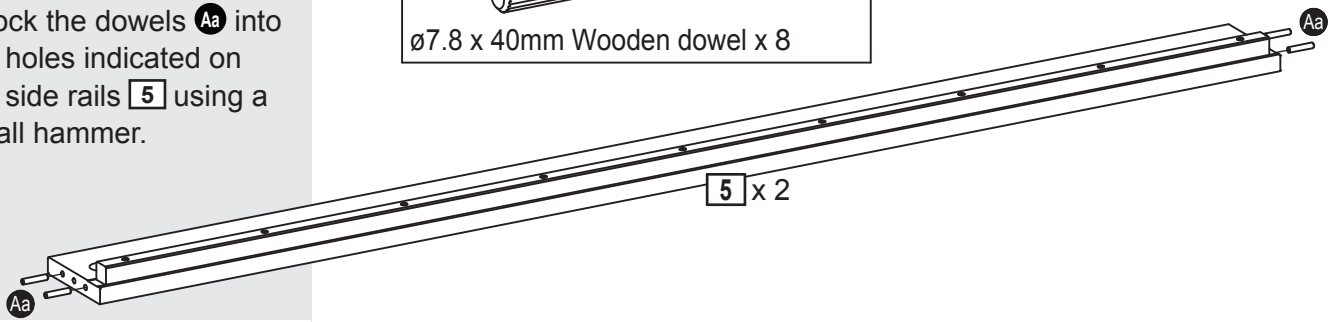


Step 1.2

Screw the bushings Ne into the holes indicated on the posts 1 and 2.

Use the allen key Yc.


Ne	Yc
M6 x 20mm Bushing x 4	6mm Allen key x 1

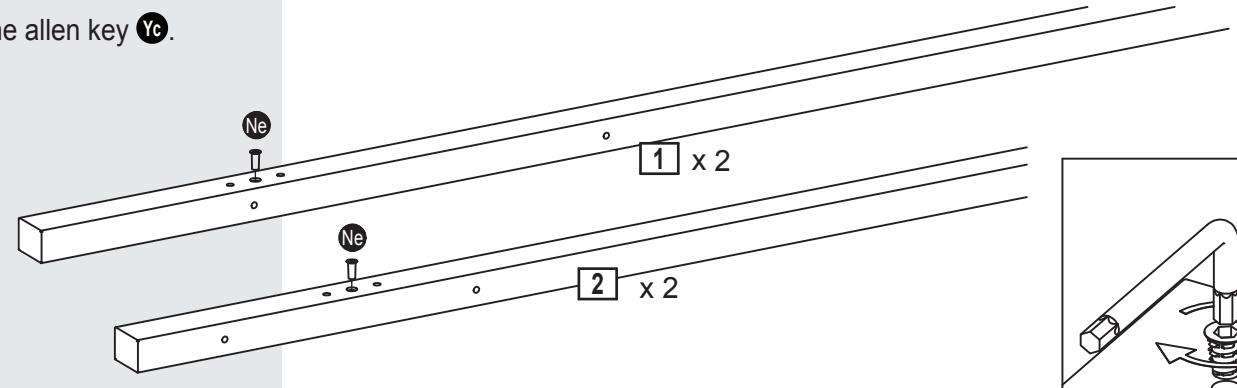


Assembly Instructions

Step 1.3

Fix the posts 1 onto the headboard 3 using bolts Hw into the barrel nuts Nf. Note - the holes in the posts for the siderails must point downwards.

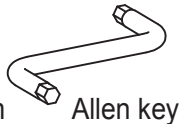
Hw  M6 x 80mm Bolt x 8	Nf  M6, ø10 x 12.5mm barrel nut x 8
Ya  4mm Allen key x 1	

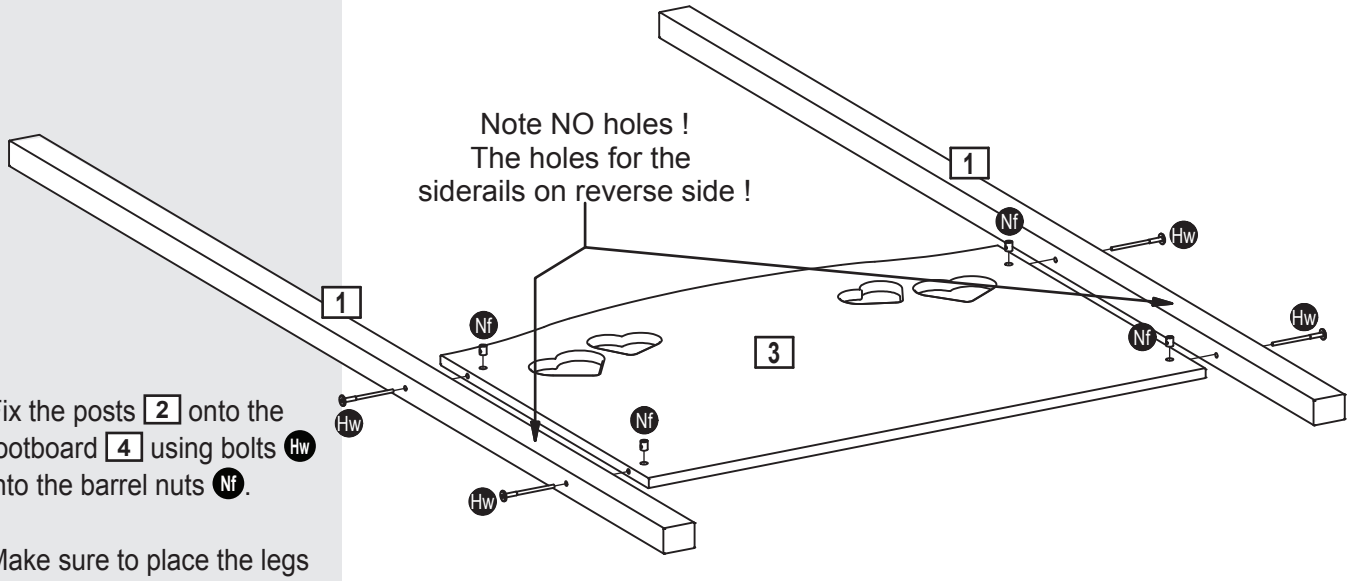


Fix the posts 2 onto the footboard 4 using bolts Hw into the barrel nuts Nf.

Make sure to place the legs 2 onto the footboard 4 exactly as shown. Note the holes for the siderails must point upwards.

Use the allen key Ya.

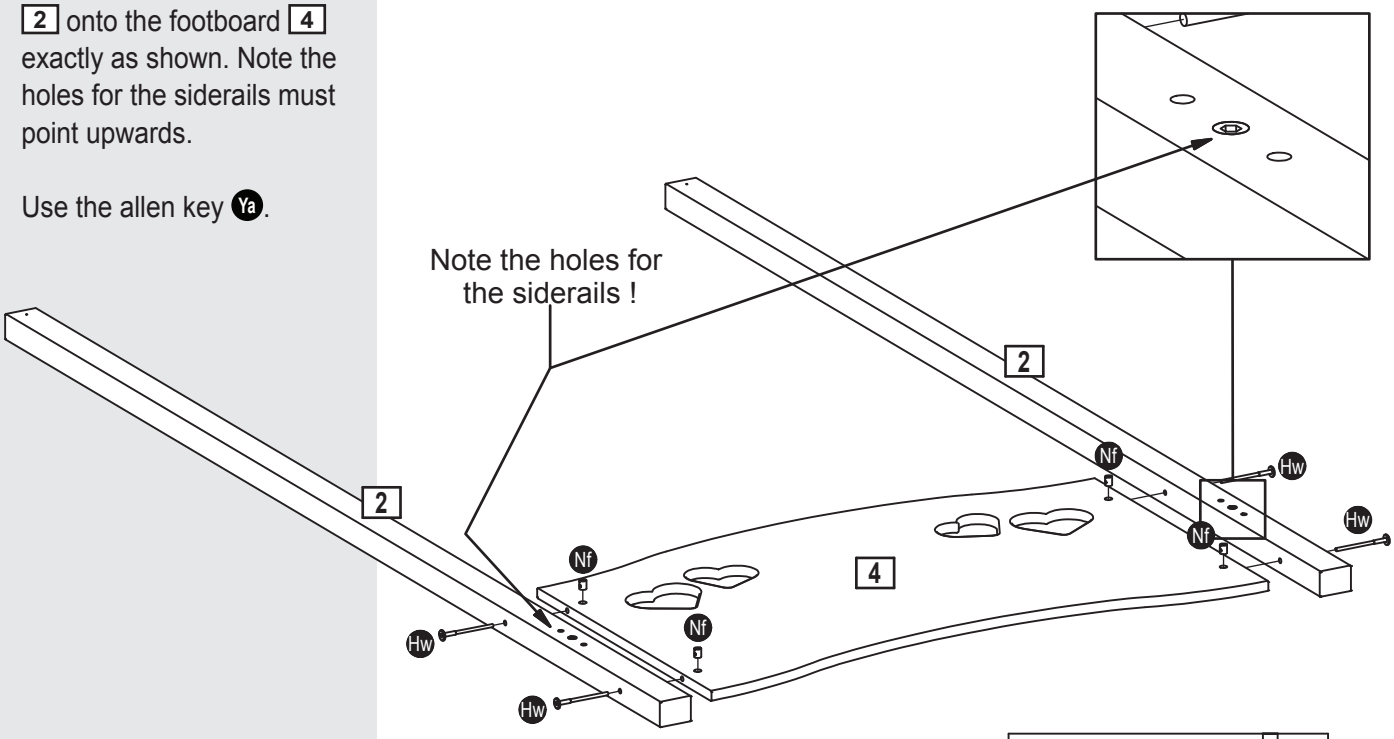

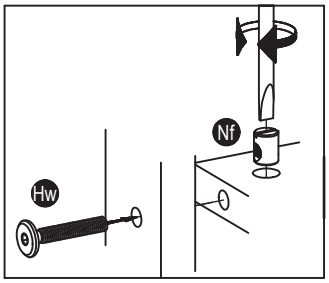


Assembly Instructions

Step 1.4

Screw the threaded rods Hg into the bushings Ne in the posts 1 and 2.

Fix the angles Vn to the posts 1 and 2 using screws Bo into the holes indicated.

Bo  ø3 x 12mm Screw x 4	Hg  M6 x 70mm Threaded rod x 4
Vn  Angle 23 x 23 x 24mm x 4	

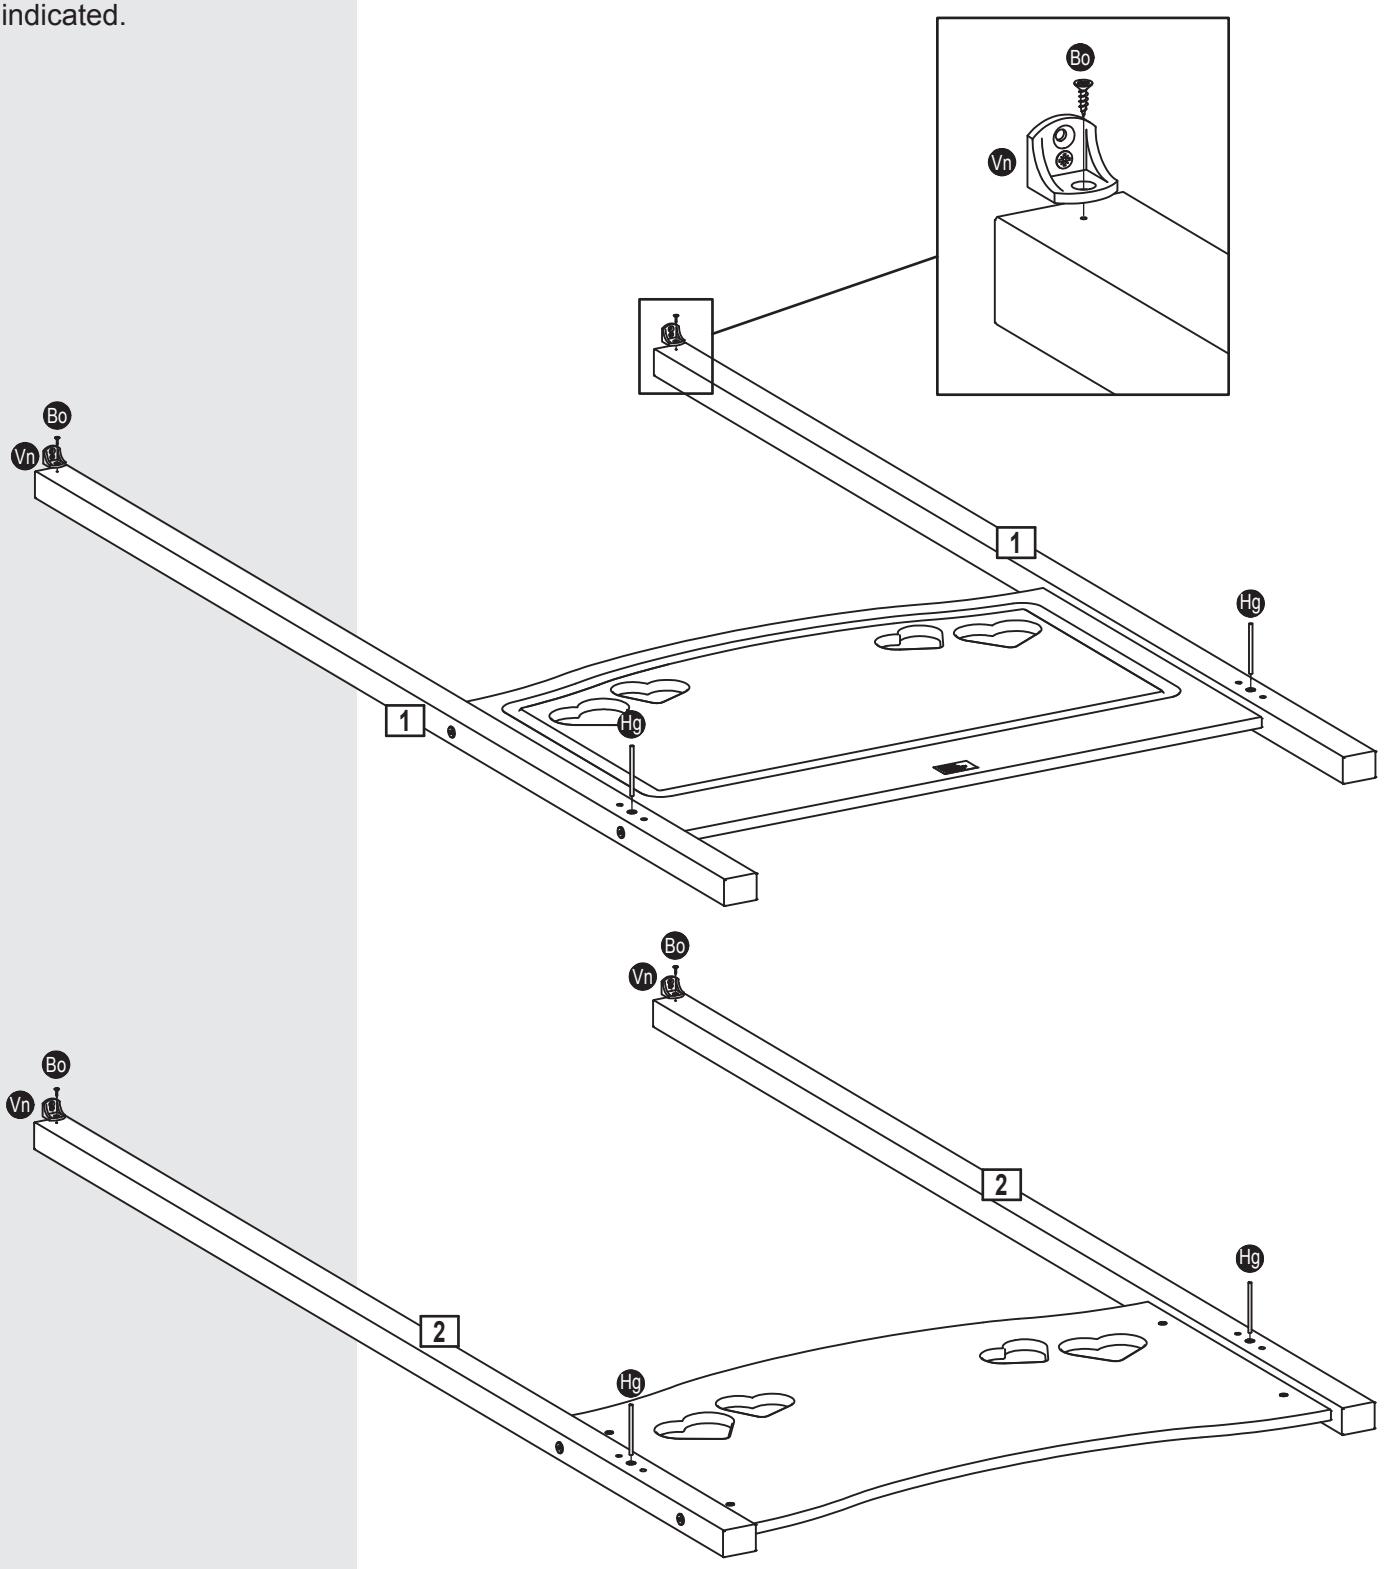



Assembly Instructions


Step 1.5

Place the side rails [5] onto the headboard posts [1].

Push the brackets (Fm) and the nuts (Na) into the holes indicated on the side rails [5] and onto the threaded rods (Hg).

Tighten the nuts (Na) using the wrench (Fm).

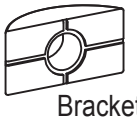(Fm)  ø35mm Bracket x 2	(Na)  M6 x 10mm Nut x 2
	(Yb)  10/13mm Wrench x 1

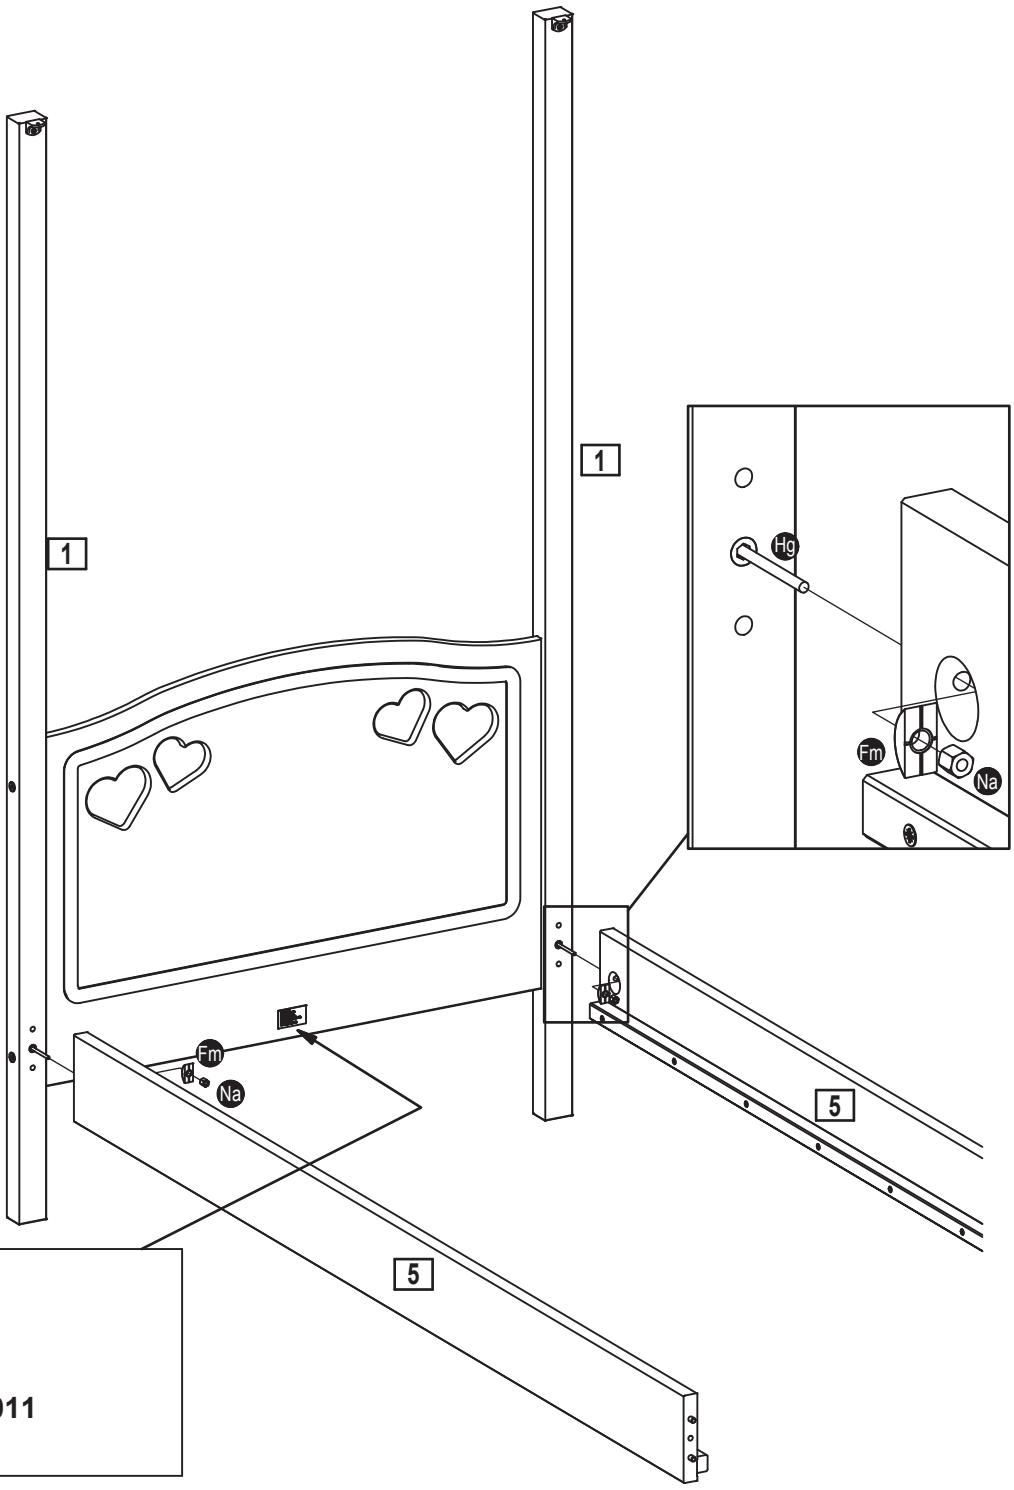

Produced by:
NJA Furniture A/S
DK-7700 Thisted
Safety requirements:
EN BS 8509:2008+A1:2011
Prod. wk/year: xx/201x

Assembly Instructions




Step 1.6


Place the footboard posts [2] onto the side rails [5].


Push the brackets (Fm) and the nuts (Na) into the holes indicated on the side rails [5] and onto the threaded rods (Hg).

Tighten the nuts (Na) using the wrench (Fm).

Insert the caps (Ec) into the holes indicated on the side rails [5].

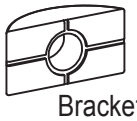(Ec)  ø35mm Cap x 4	(Fm)  ø35mm Bracket x 2
(Na)  M6 x 10mm Nut x 2	(Yb)  10/13mm Wrench x 1

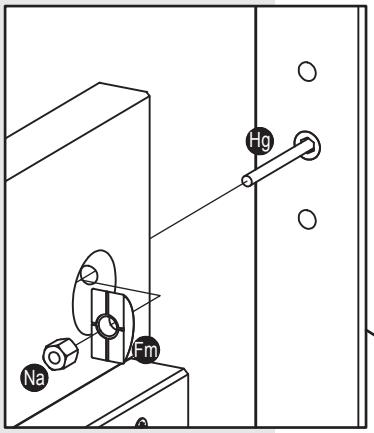

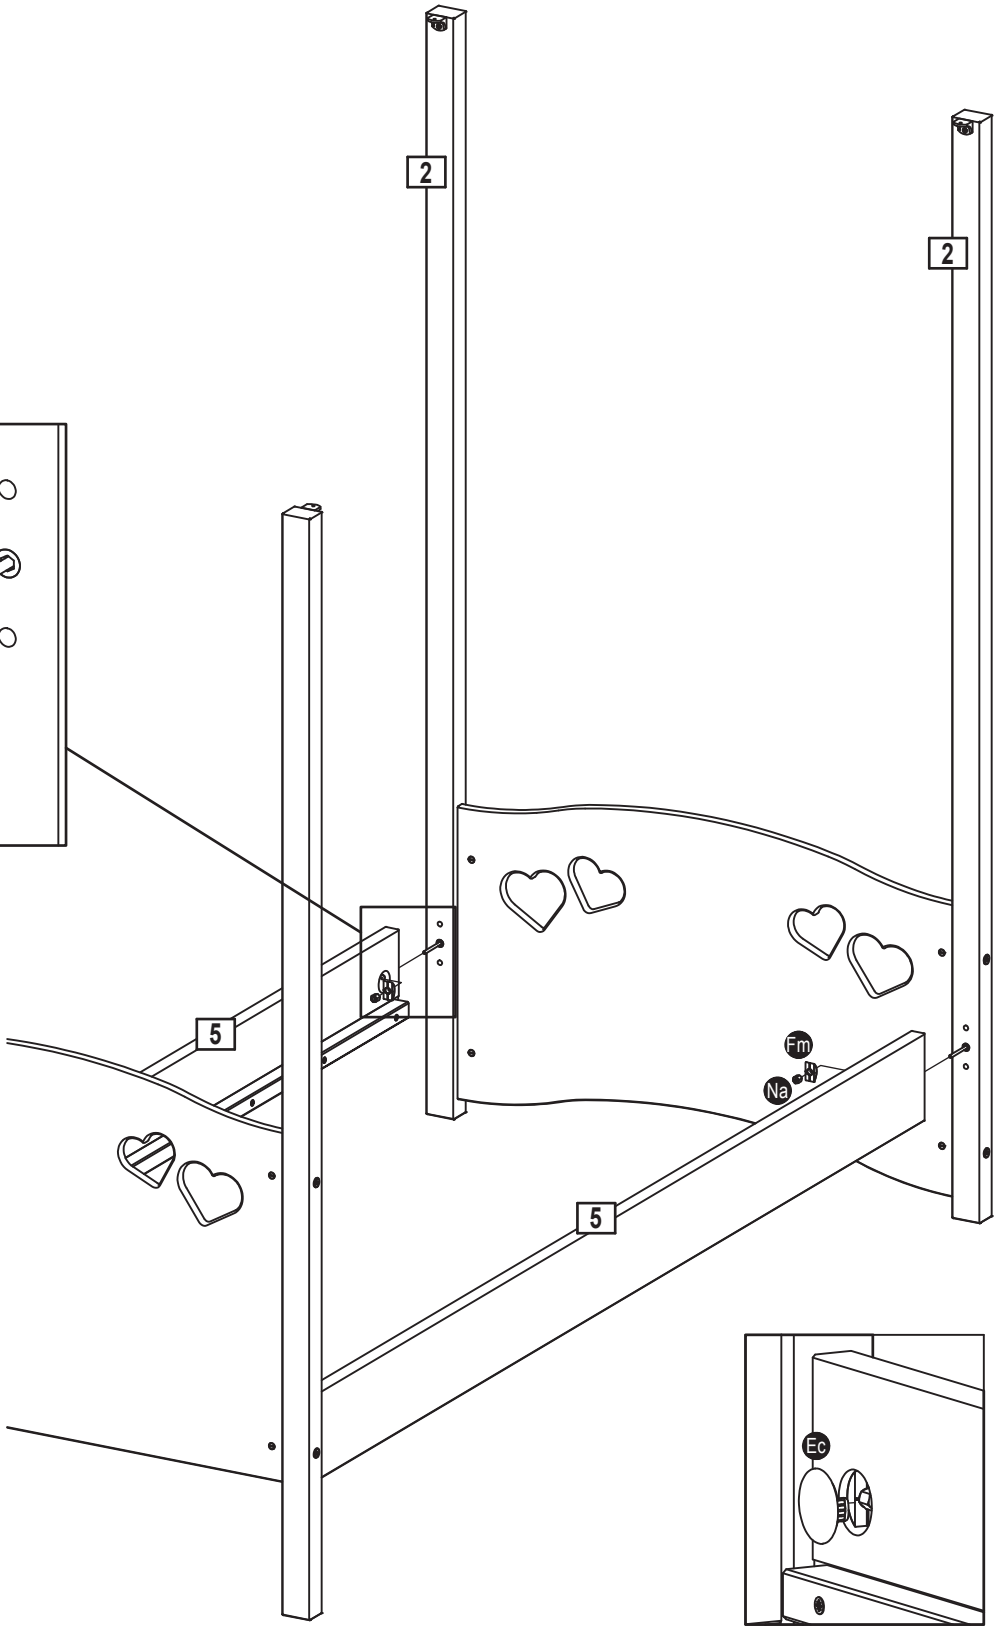



Assembly Instructions

Step 1.7

Fix the top rails (side) 14 to the toprails (end) 15 using bolts Hw into the barrel nuts Nf.


Use the allen key Ya.

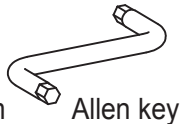
Hw  M6 x 80mm Bolt x 4	Nf  M6, ø10 x 12.5mm barrel nut x 4
Ya  4mm Allen key x 1	

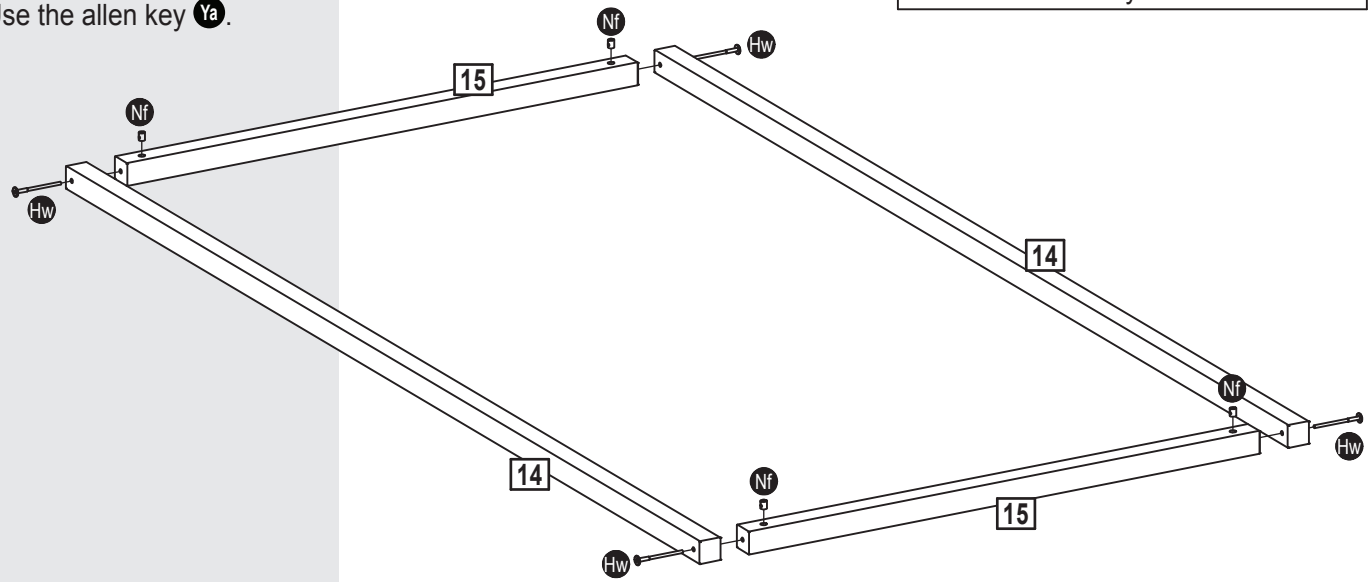

Step 1.8


Fix the corner angles Vq to the upper side of the top frame using screws Bo.

Bo  ø3 x 12mm Screw x 16	Vq  70 x 70 x 16mm Corner angle x 4

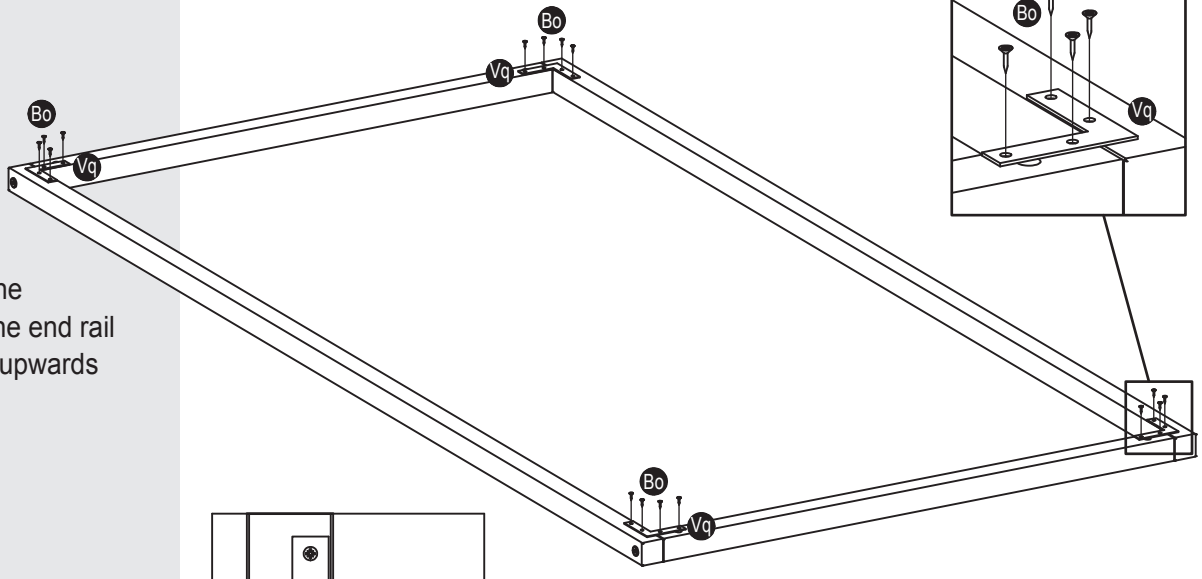

Note !

The holes for the barrel nuts in the end rail 15 must point upwards

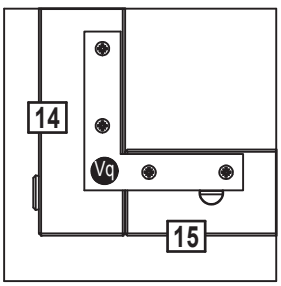

Assembly Instructions

Step 1.9


Place the top frame on the top of the posts.

Fix it using screws Bo through the angles Vn.

Bo



ø3 x 12mm Screw x 4

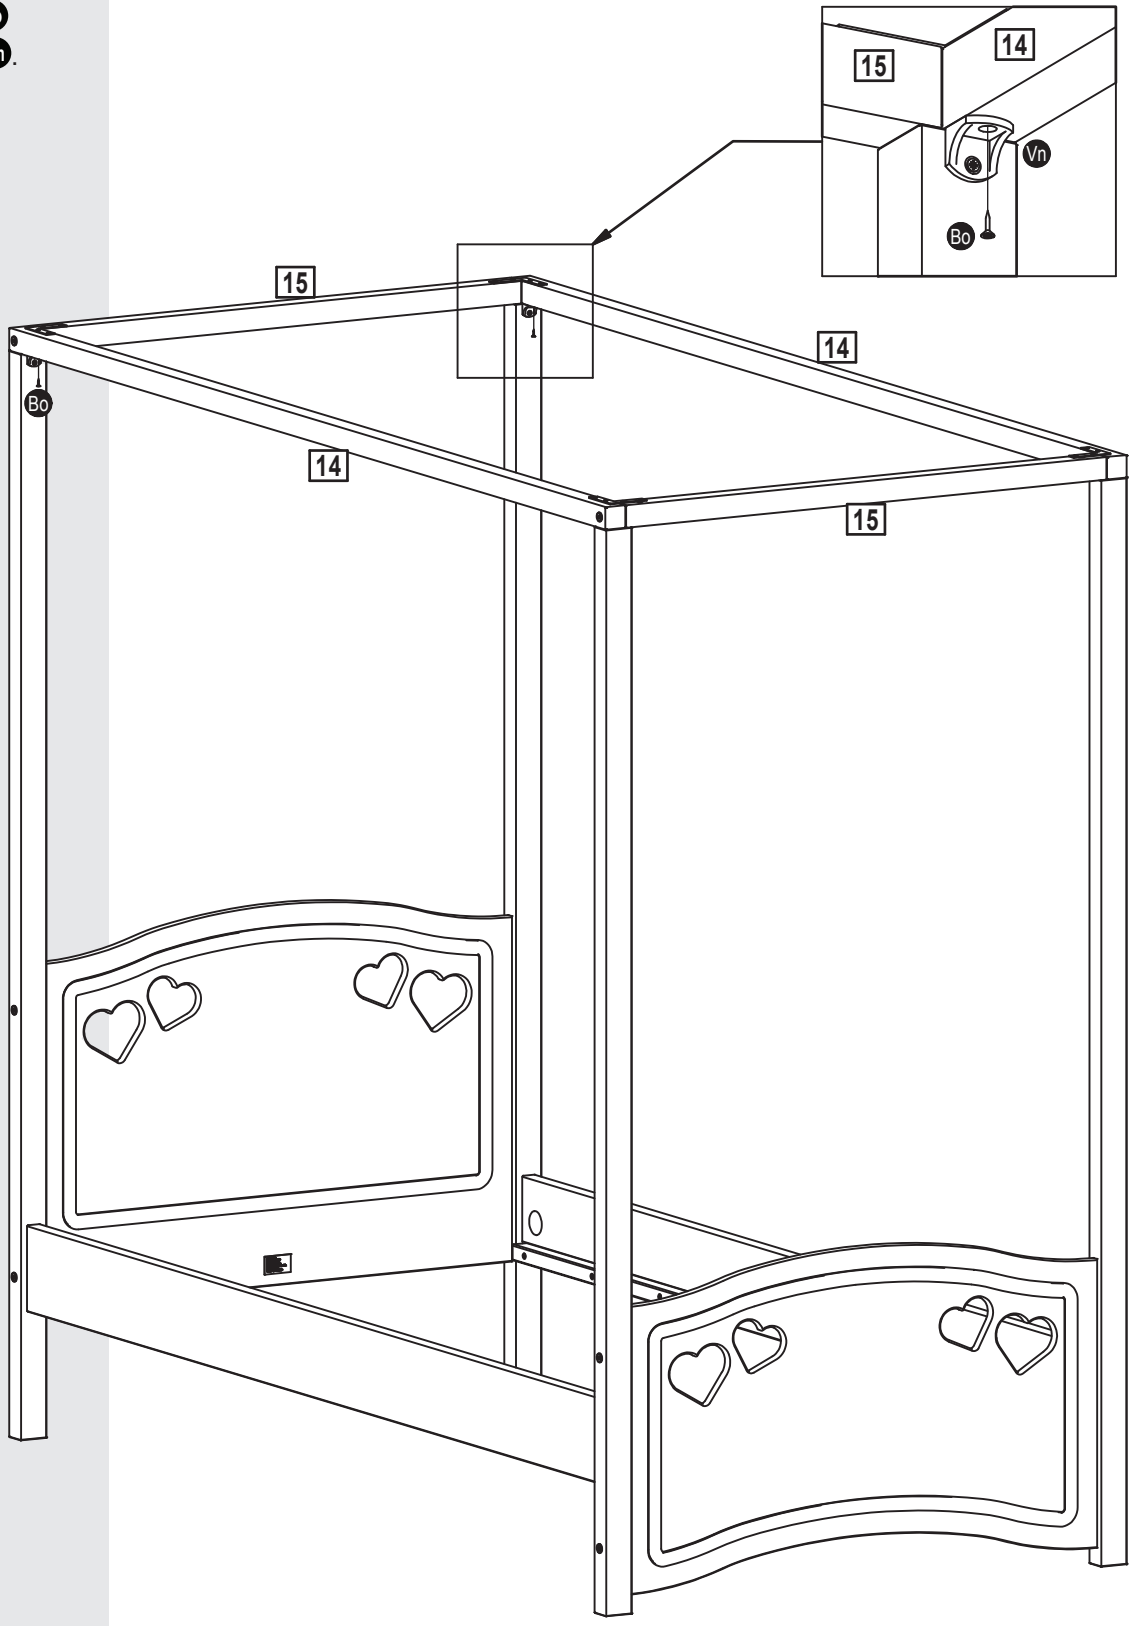


Assembly Instructions

Step 1.10

Fix the first of the slats 7 to the slatholders using screws Bv.

The slats 7 must be distributed evenly in the bedframe. To get the distance right use the spacer block 6 as shown.

See detail.

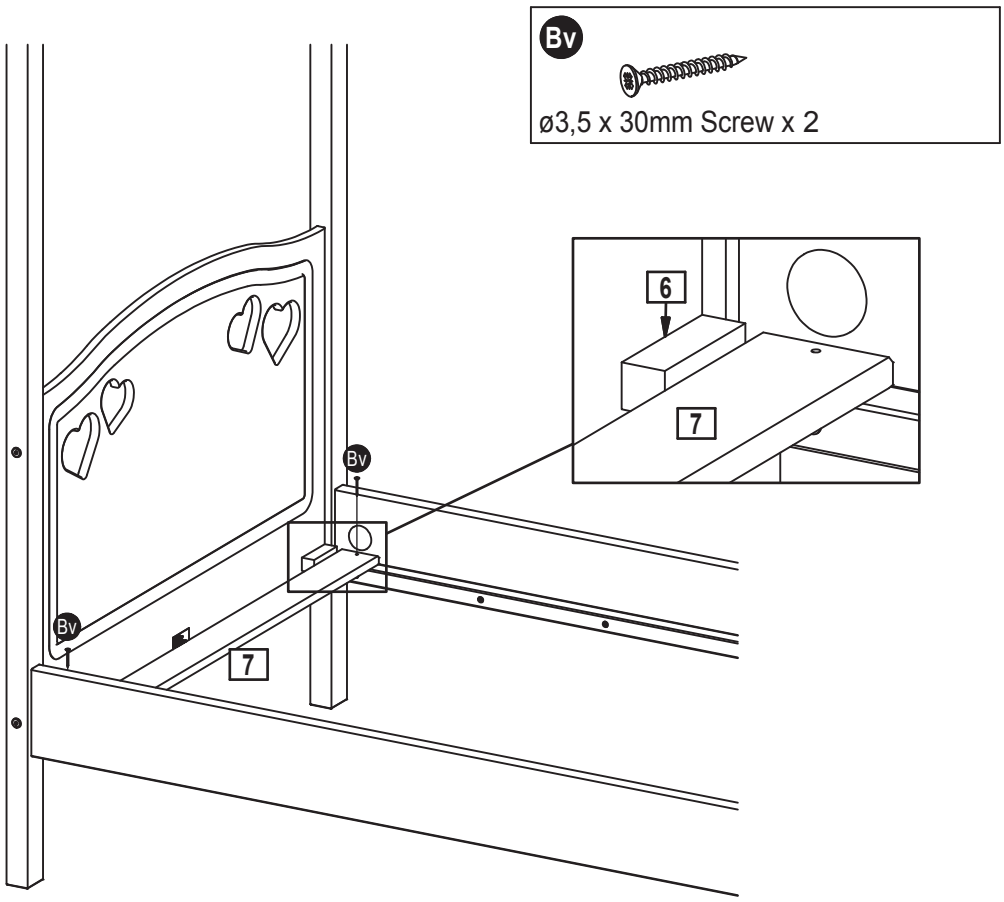


Step 1.11

Fix the second of the slats 7 to the slatholders using screws Bv.

To get the distance right use the spacer block 6 as shown.

See detail.

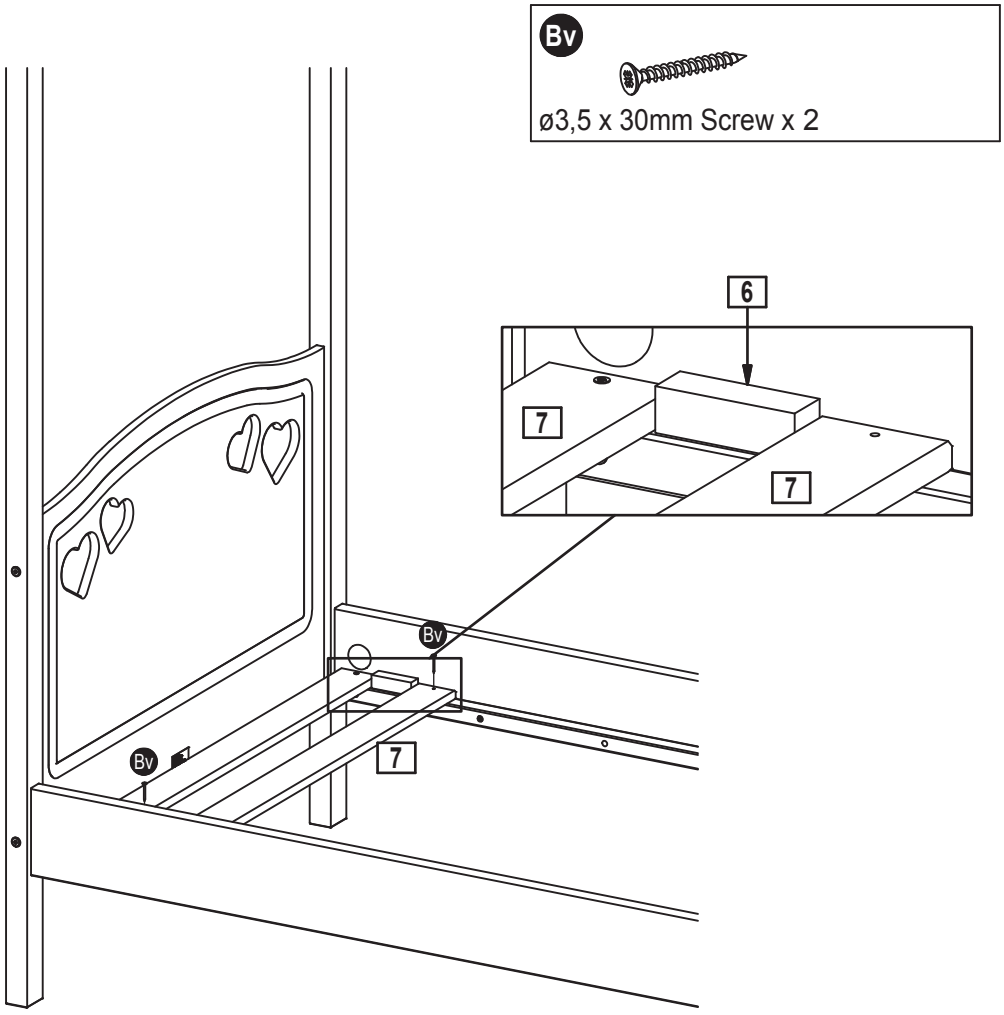

Assembly Instructions

Step 1.12

Fix the rest of the slats 7 using screws Bv.


To get the distance right use the spacer block 6 as shown.

See detail.

Bv




ø3,5 x 30mm Screw x 24

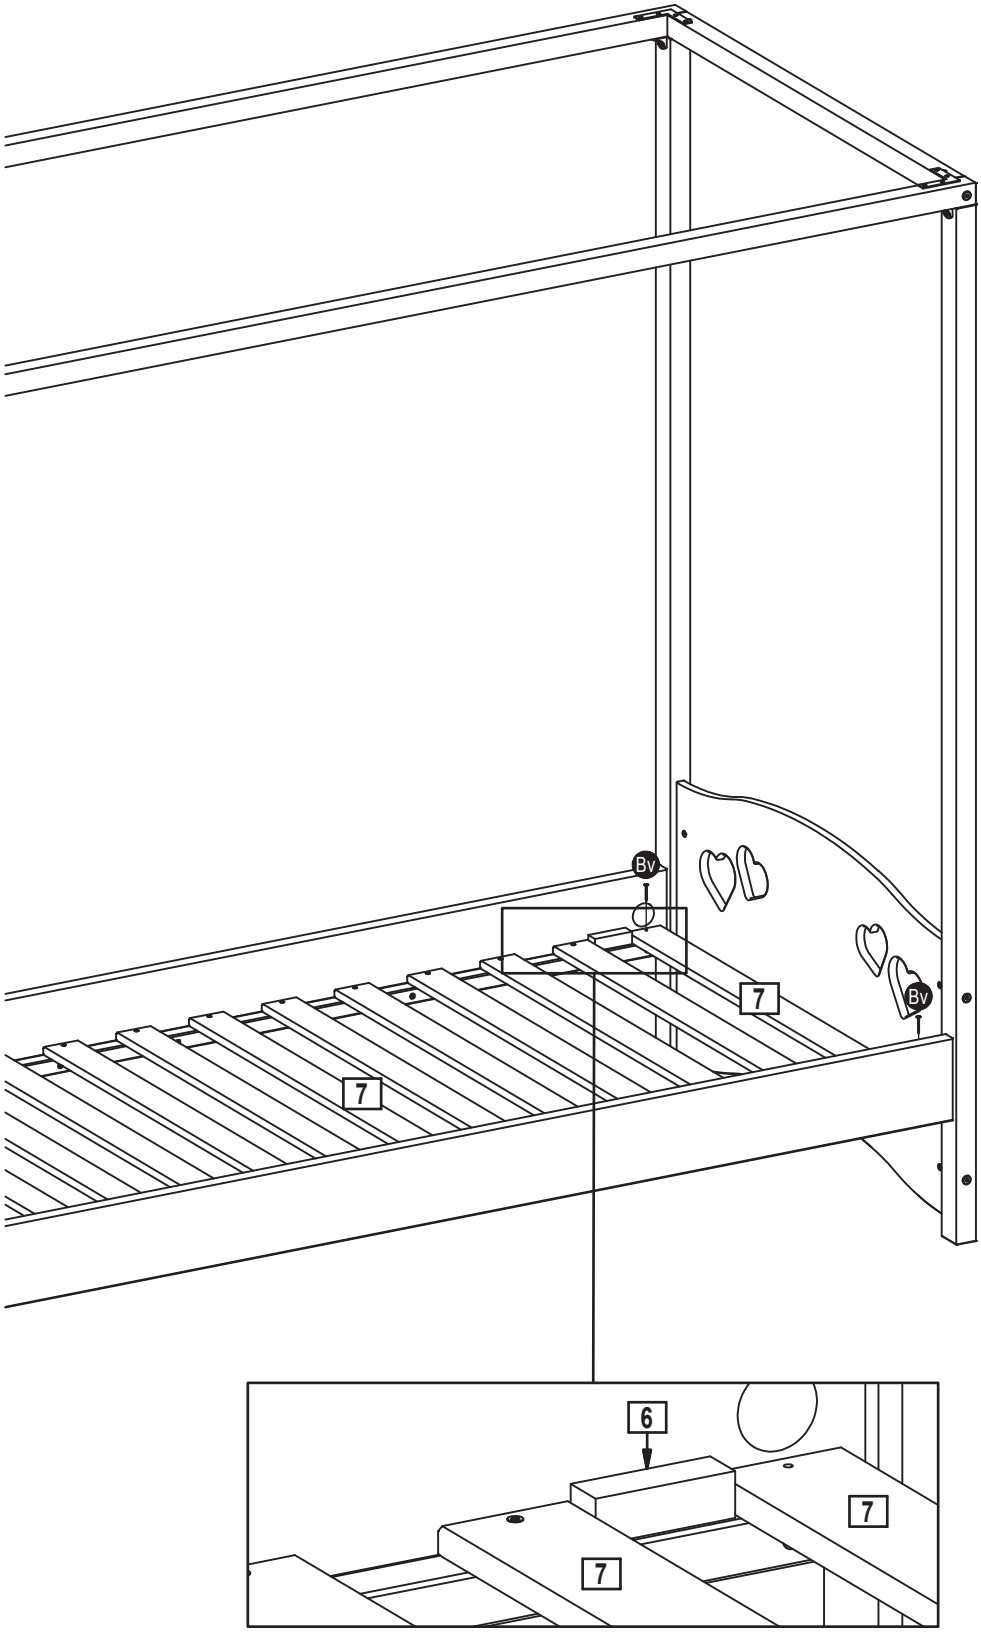


Assembly Instructions

Step 2

Assembly of the drawer.

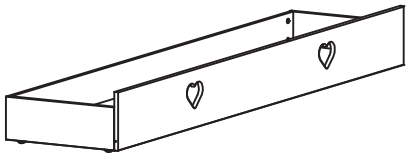

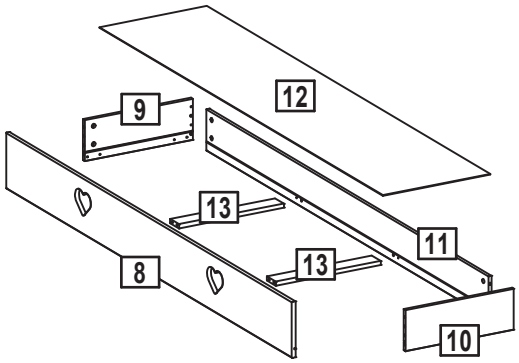


Step 2.1

Screw the bolts Cb into the holes indicated on the drawer back 11 and the drawer sides 9 and 10.

Knock the dowels Aa into the holes indicated on the drawer back 11, the drawer sides 9 and 10 and the

drawer rails 13 using a smal hammer.

Aa	Cb
ø7.8 x 40mm Wooden dowel x 12	ø5 x 8, cc34mm Bolt x 6

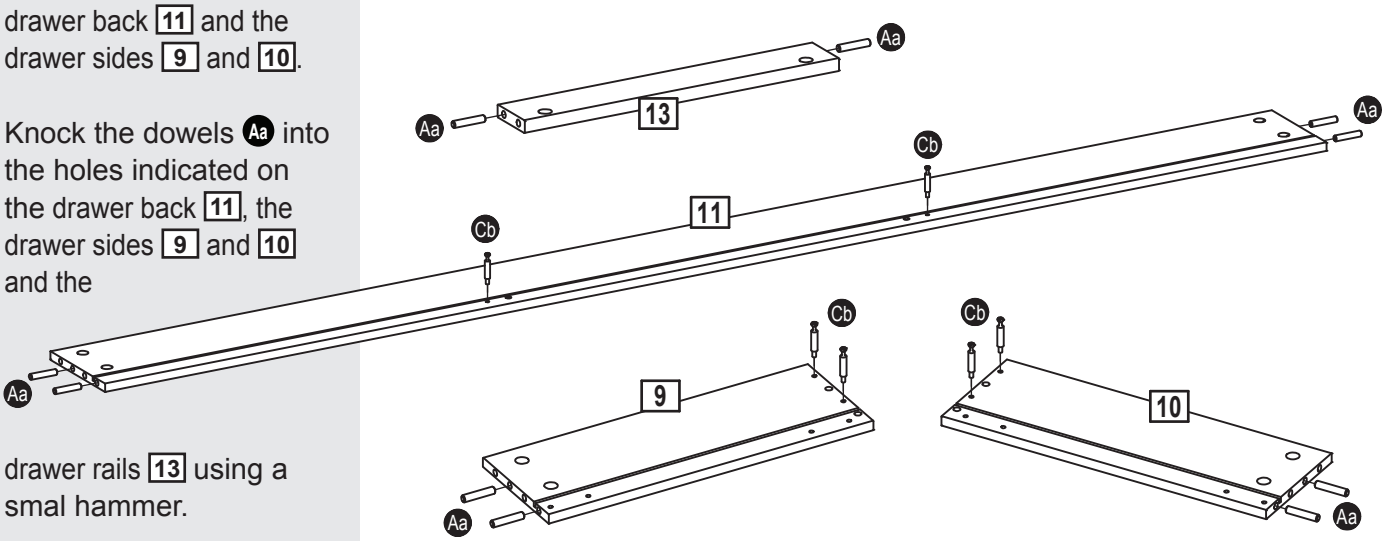


Step 2.2

Fix the wheels Ta onto the drawer sides 9 and 10 using screws Ke.

See detail.


Ke	Ta
ø6.1 x 11.5mm Screw8x	ø35mm Wheel x 4

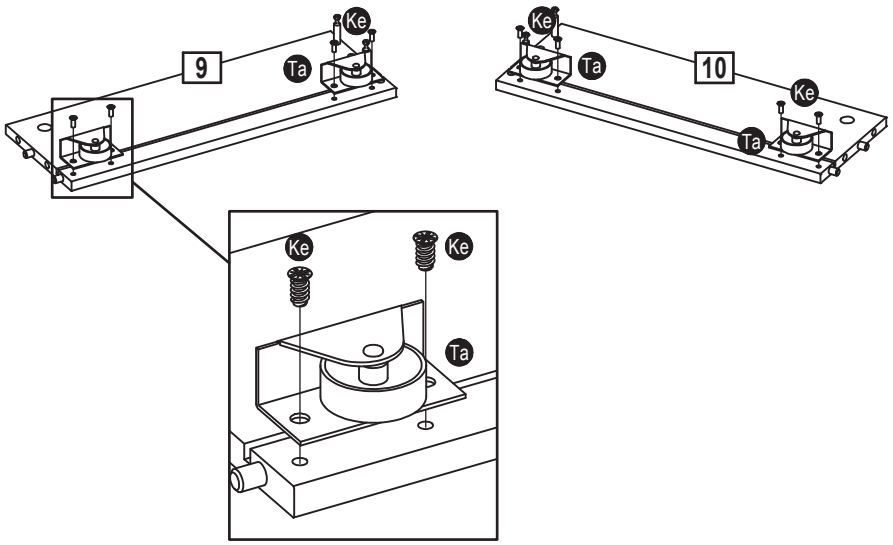

Assembly Instructions

Step 2.3


Screw the bolts Cb into the holes indicated on the drawer front 8.

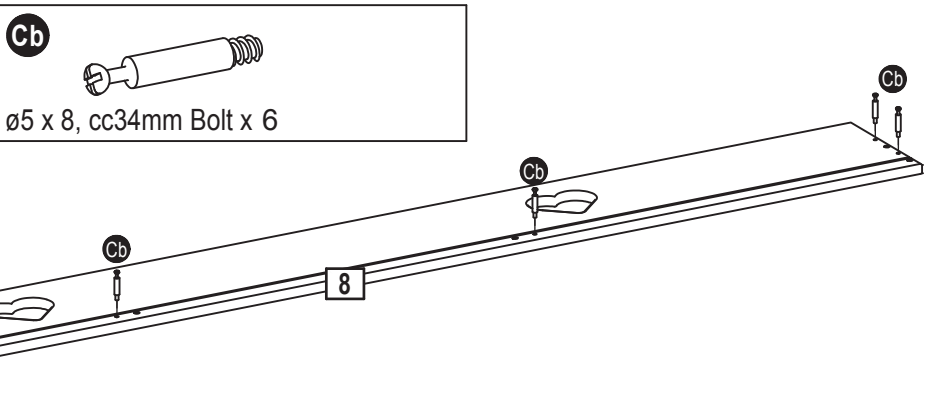

Step 2.4


Push the drawer sides 9 and 10 and the drawer rails 13 onto the drawer back 11.

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the drawer back.

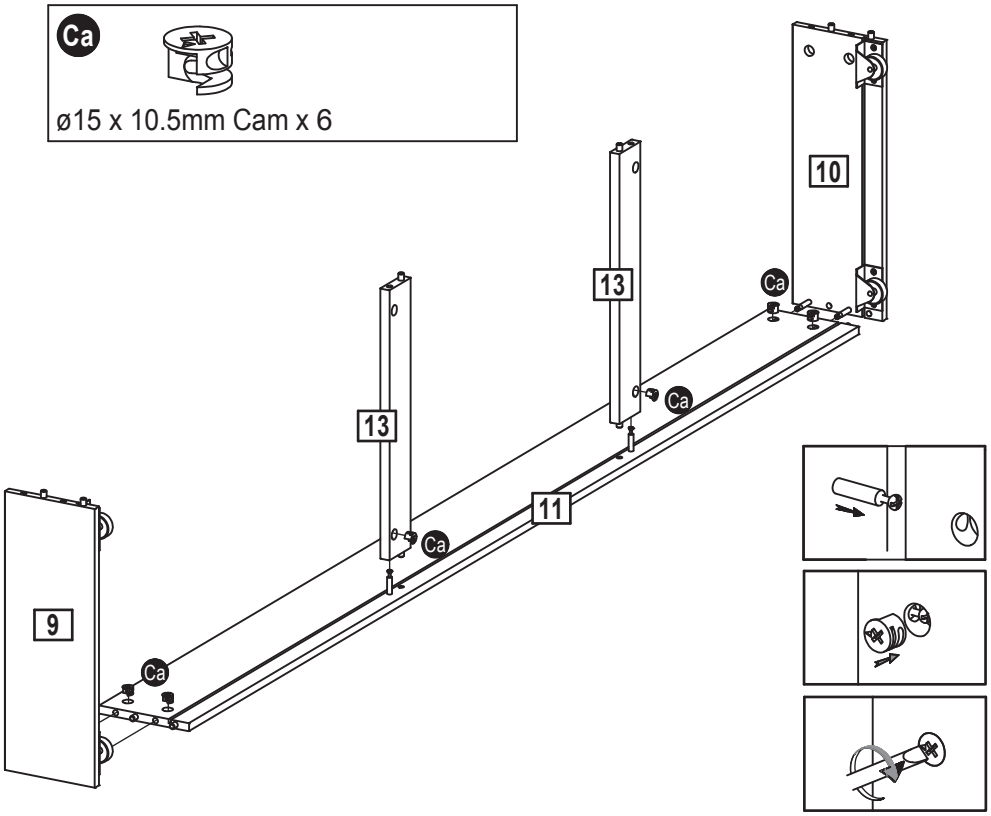

Step 2.5

Slide the drawer bottom 12 into the drawer sides 9 and 10.

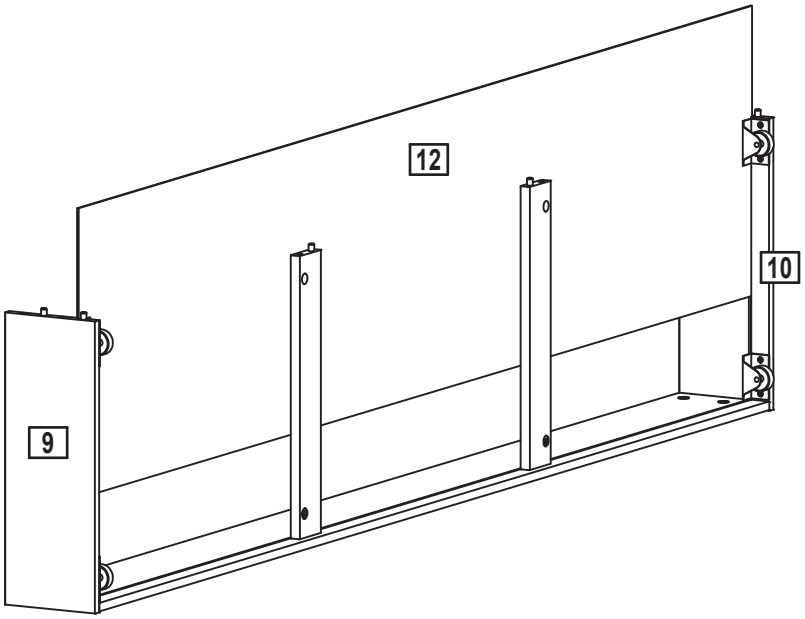

Step 2.6


Push the drawer front 8 onto the drawer sides 9 and 10 and the drawer rails 13 .

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 6

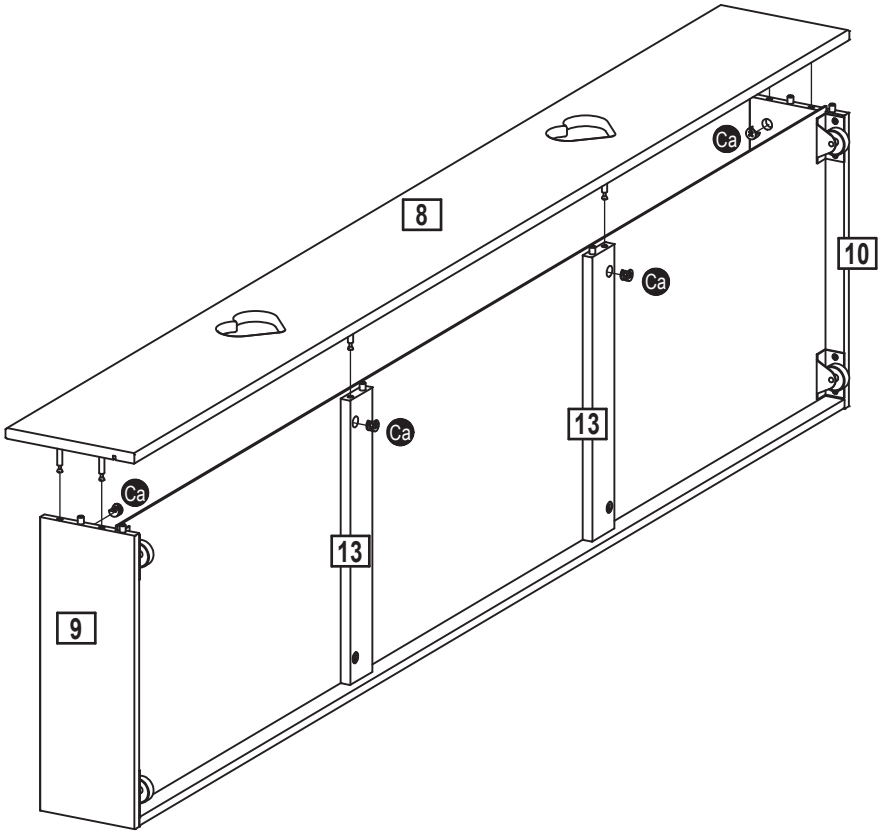

Step 2.7

Place the drawer.

