
Ketton - 4FT6 Bed

Assembly Instructions - Please keep for future reference | 4817378

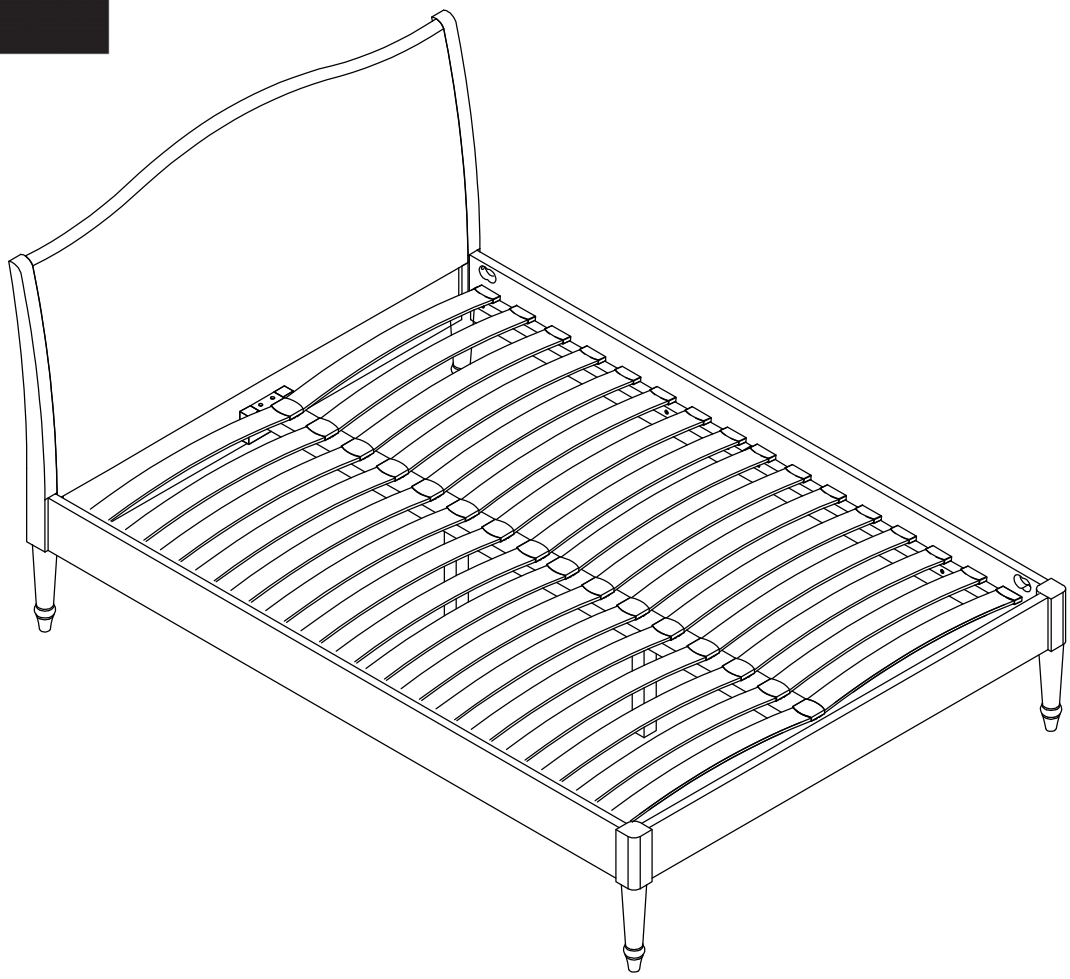

Dimensions

Width - 144cm

Depth - 206.6cm

Height - 110cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** 03456 400800

Issue 1 - 20/10/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.
- Improper use of electrical tools will crack the components.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:** 03456 400800

Please check you have all the panels listed below

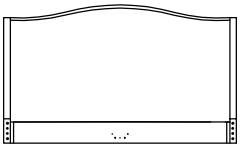

1 Headboard x1 **(144 x 85x12.5cm)**



2 Footboard x1 **(144 x 40 x 6cm)**



3 Bed side x2 **(189 x 15 x 5.5 cm)**



4 Middle Bar x1 **(192.5 x 7 x 2.5 cm)**



5 Bed slats x36 **(68.2 x 5.3 x 0.9 cm)**



6 "U" Block x2 **(13 x 5 x 2.5 cm)**



7 Middle foot x2 **(28.5 x 4 x 4 cm)**










8 Foot x2 **(25 x 5.8 x 5.8 cm)**



Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

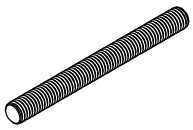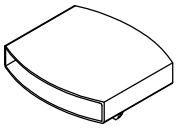A  Bolt x8 (M6 x 80 mm)	B  Half round blockx8 (M6x30x2m)	C  Allen key x1(4mm)	D  Screw x10(Ø4x35mm)	E  Nut x8 (M8x12x6mm)
F  Dowel x8(Ø10x40mm)	G  Dowel x4(Ø8x30mm)	H  Spanner x1(12mm)	I  Plastic midd caps x18	J  Plastic end caps x36
K  Screw x2(Ø6x40mm)				

Tools required

 Flatblade screwdriver (medium)	 Philips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1


Attach the legs 8 onto

the headboard 1 by screwing the bolts on legs 8

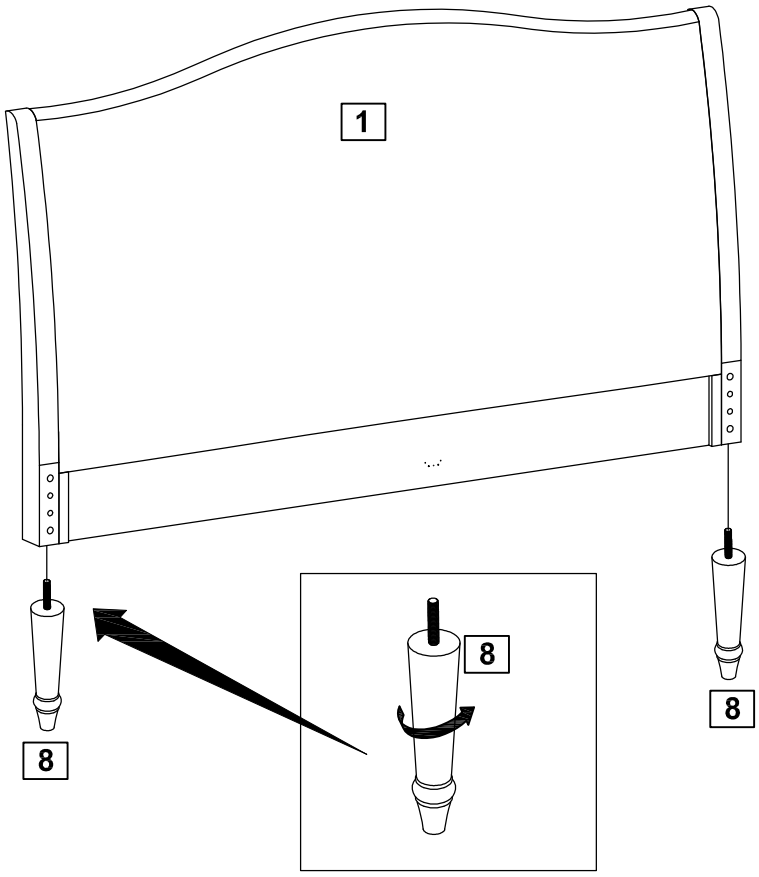

Step 2


Insert dowels G into "U" block 6 as shown.

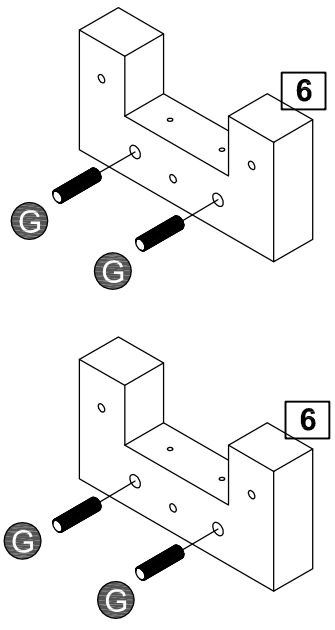

Assembly Instructions


Step 3

Attach "U" block 6 onto the headboard 1 with screws D as shown.

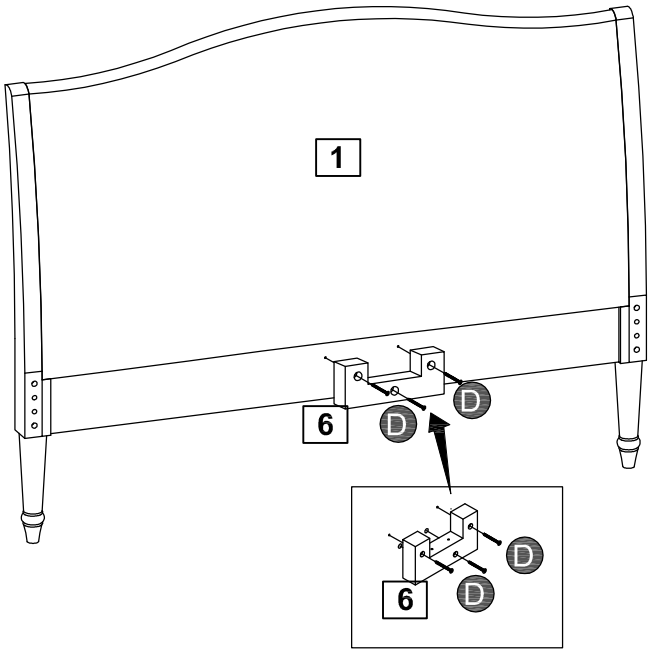

Step 4

Screw the bolts A into the headboard 1 by hand.

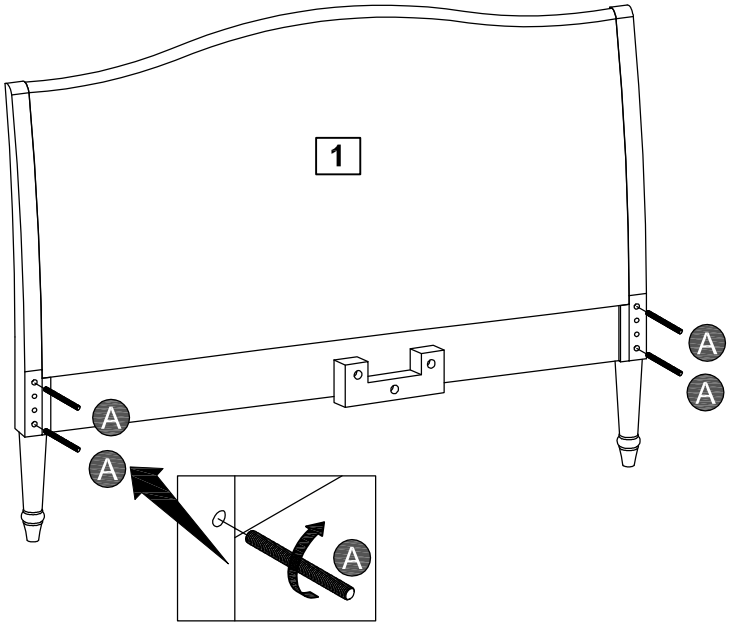


Assembly Instructions

Step 5


Screw the bolts (A) into the footboard [2] by hand.

Attach "U" block [6] onto the footboard [2] with screws (D) as shown.

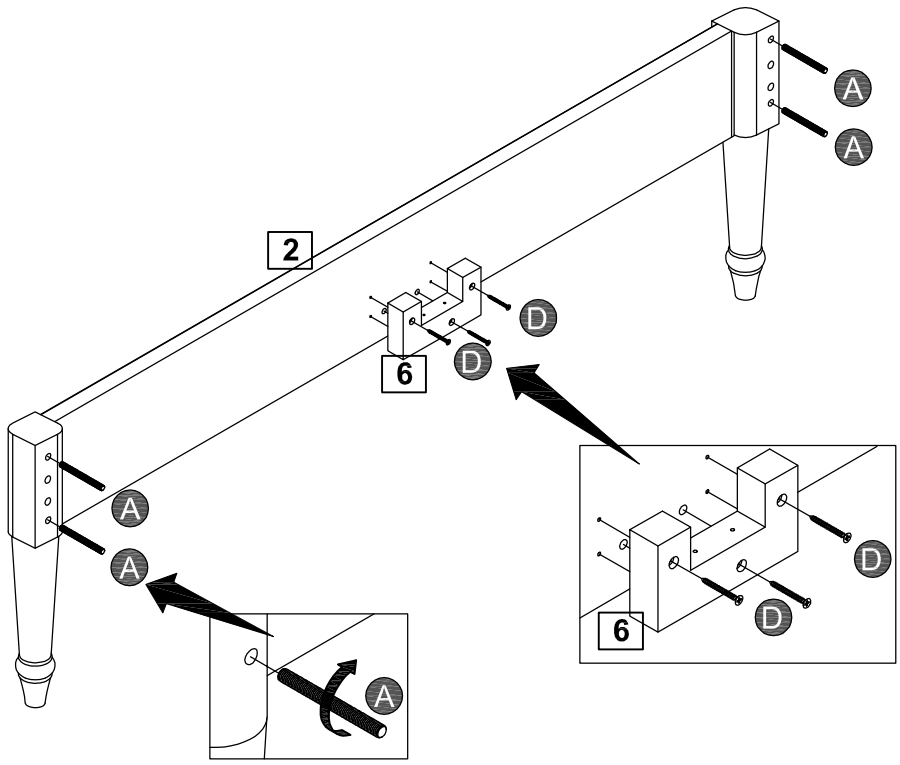

Step 6


Insert dowels (F) into the ends of the bed side [3].

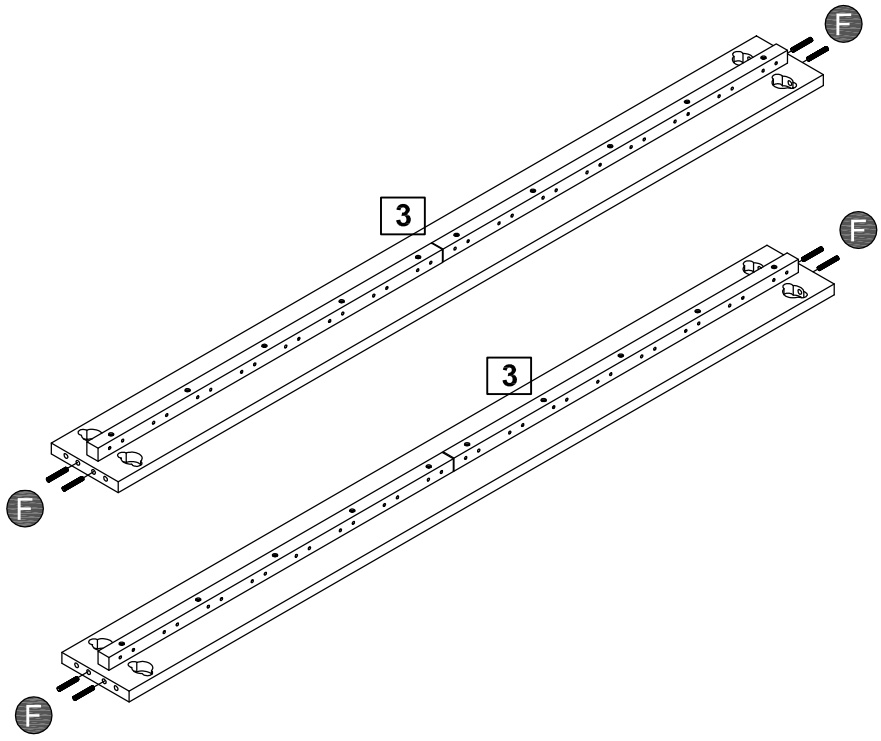

Assembly Instructions


Step 7

Attach bed sides 3 onto headboard 1 and footboard 2 by using hardware B E ; use spanner H to fix tightly nut E.

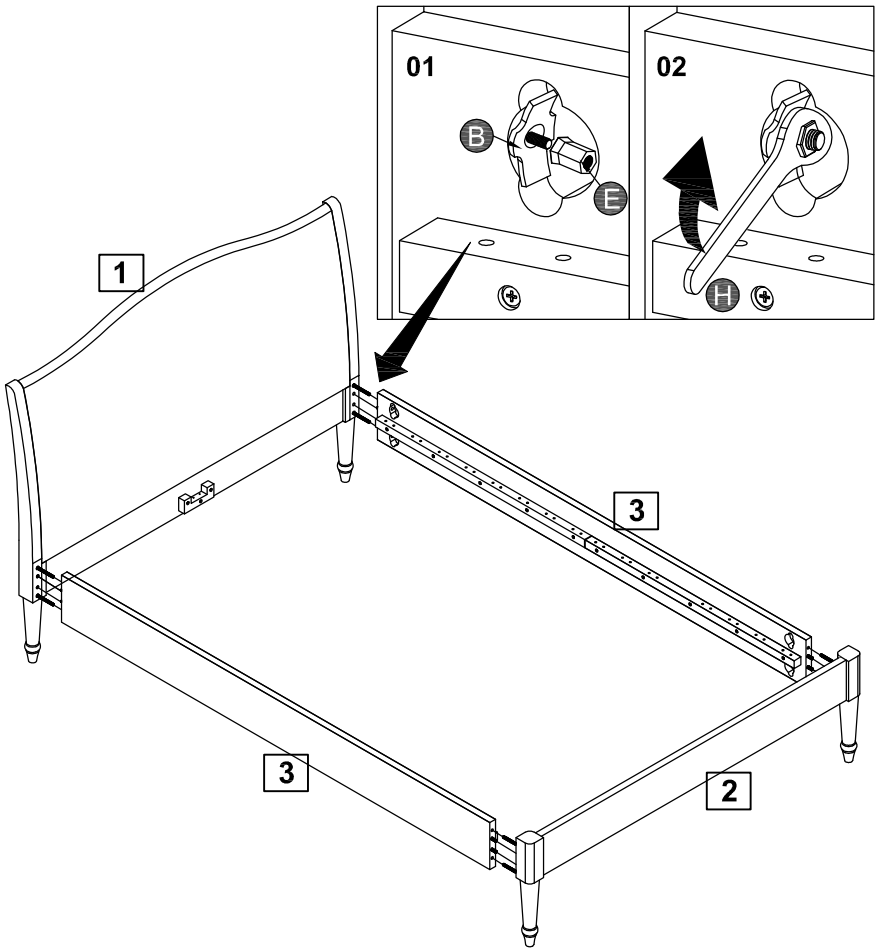

Step 8


Attach middle bar 4 onto middle foot 7 with screws K using allen key C.

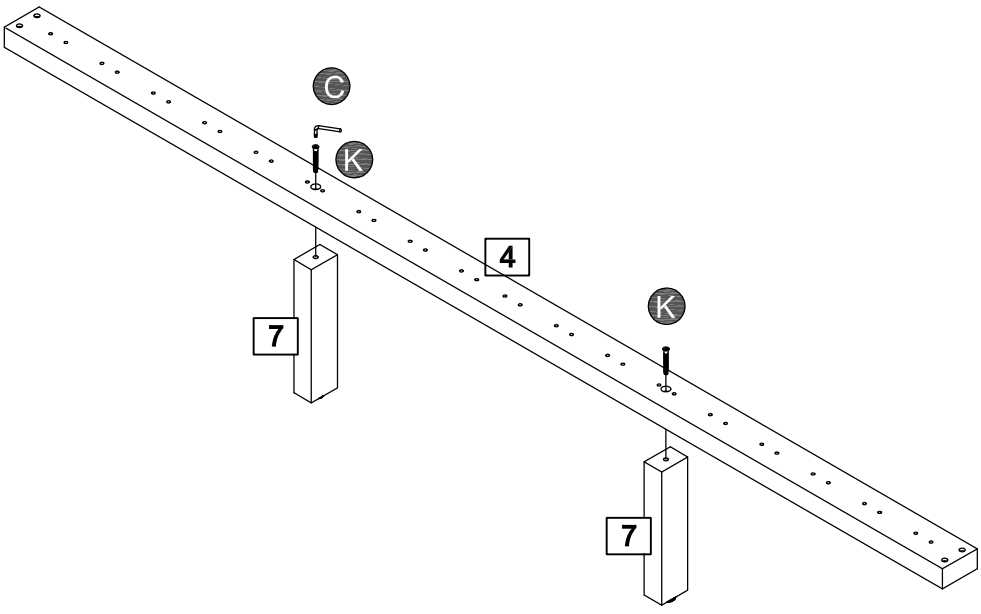

Assembly Instructions


Step 9

Put middle bar 4 on the "U" block 6, use screws D to fix them.

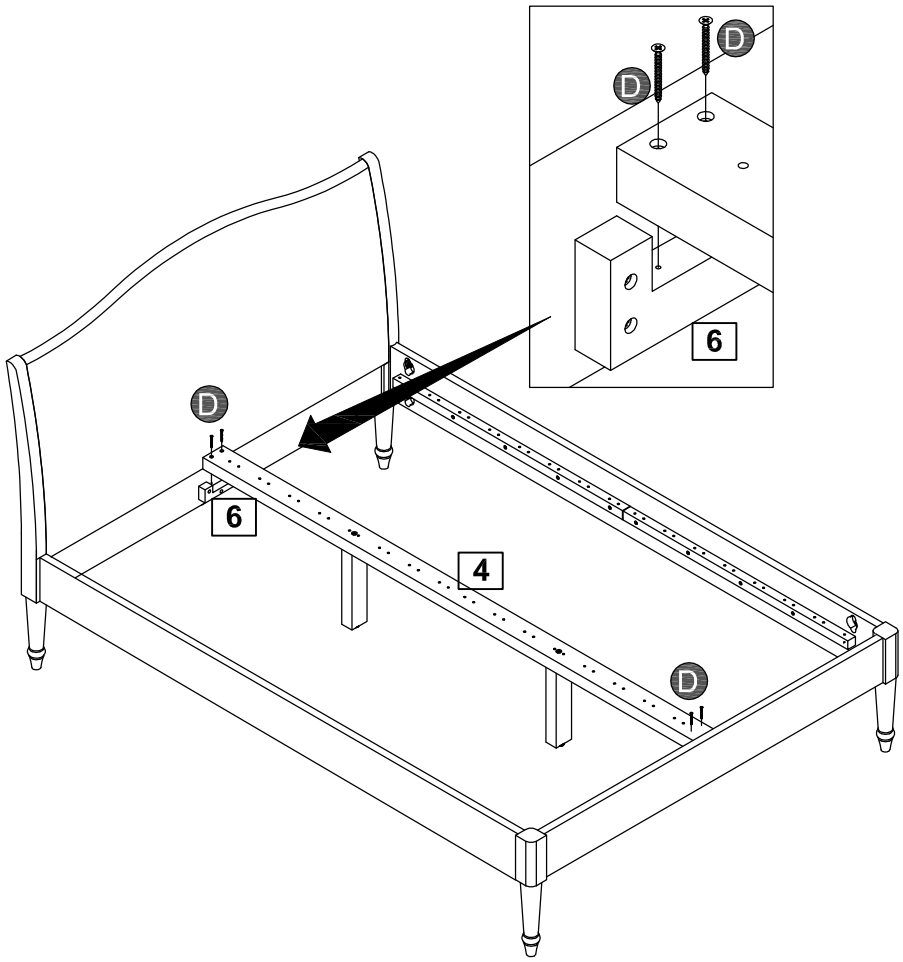

Step 10


Place the plastic middle caps I and the plastic end caps J onto the slats 5 as shown.

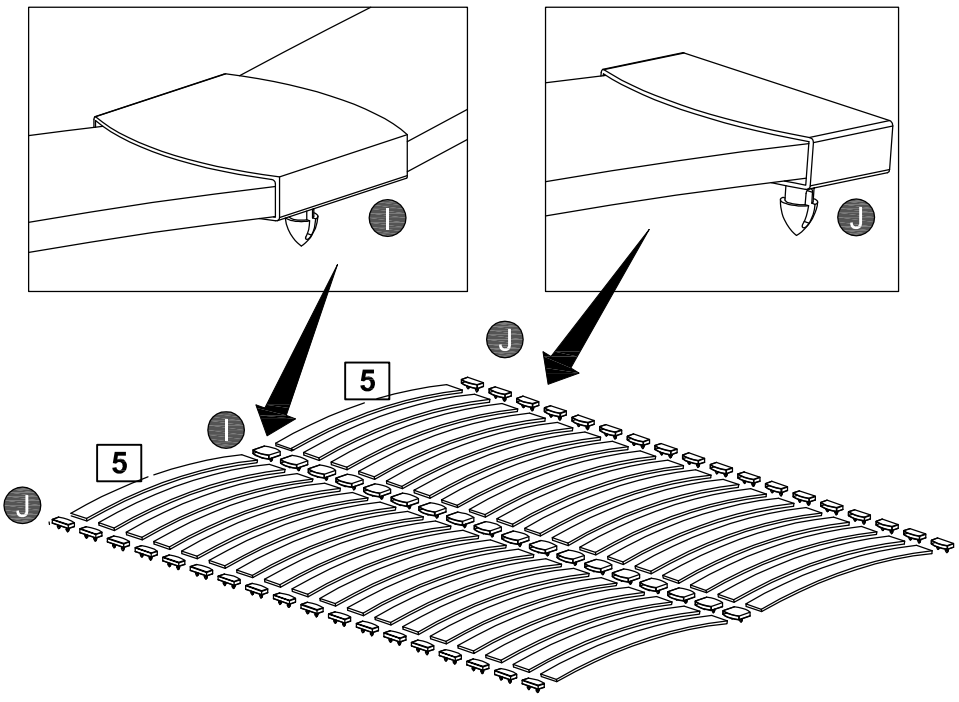

Assembly Instructions

Step 11

Inset plastic midd caps I and plastic end caps J onto bed side 3 and middle bar 4 as shown.

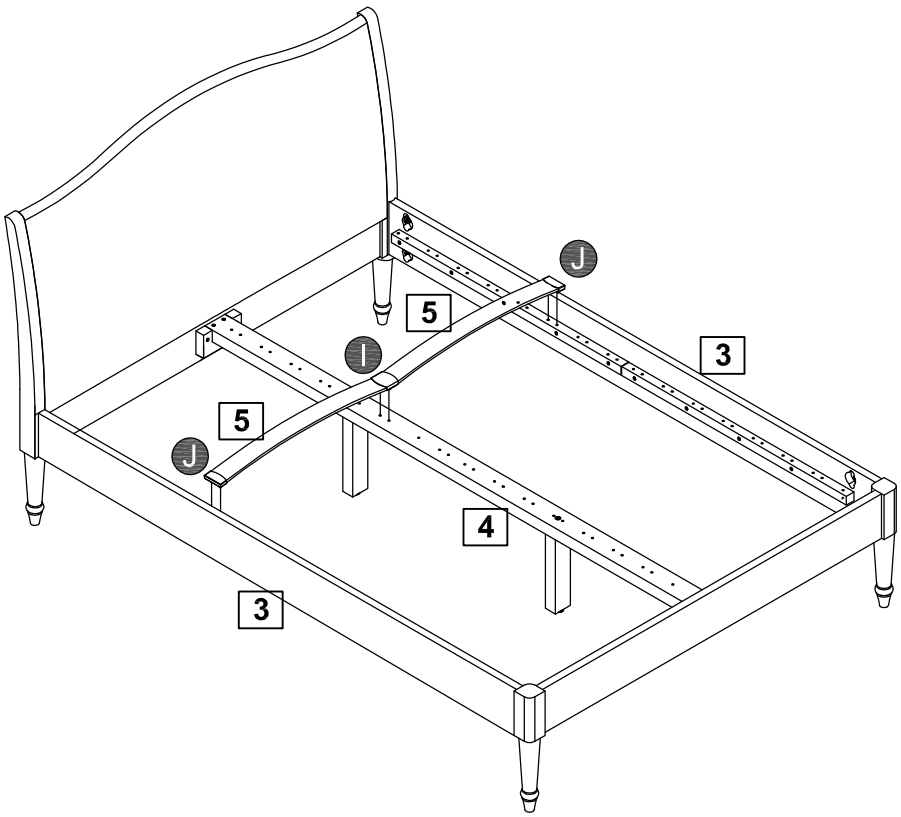

Step 12

Assembly is complete!

