
09H Newbridge 5FT

Assembly Instructions - Please keep for future reference

4830544
4837248

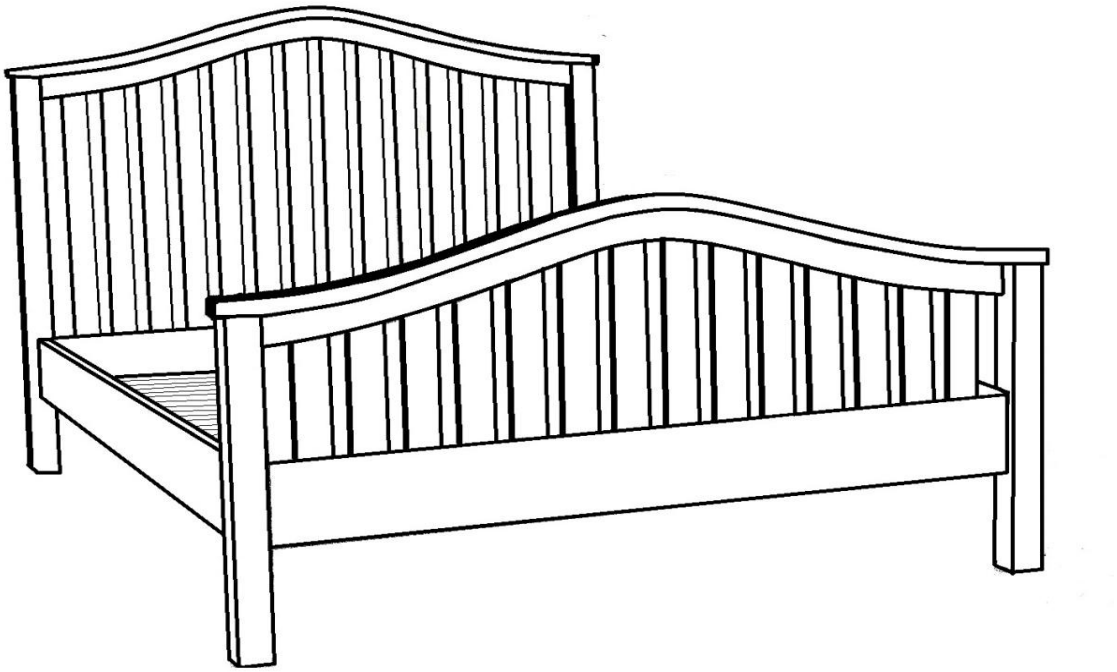

Dimensions
Width - 164 cm
Depth - 214 cm
Height - 120 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the
Customer Helpline: 03456 400800

Issue 1-16/11-15

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• During assembly do not stand or put weight on the product, this could cause demage.



• Remove all fittings from the plastic bags and separate them into their groups.

• Assemble the item as close to its final position (in the same room) as possible.

• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Improper use of elecrical tools will crack the components.

• Make sure you have enough space to layout the parts before starting.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

•Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

•From time to time check that there are no loose screws on this unit.

•This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.


• Regularly check and ensure that all bolts and fittings are tightend properly.

***Note** : if requires the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Please check you have all the panels listed below

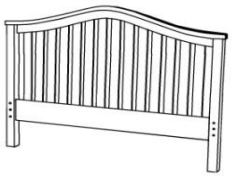


1 Headboard x1 (164x120x6 cm)

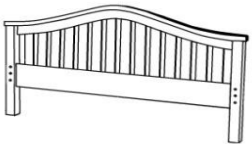


2 Footboard x1 (164x77,5x6 cm)



3 Bed slats x15 (151,8x7x1,7 cm)

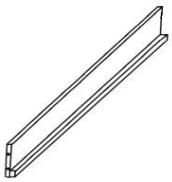

4 Bed side x2 (202x15x2 cm)

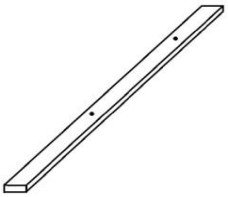

5 Middle Bar x1 (204x6x3 cm)



6 Middle foot x2 (20x6x3 cm)

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Dowel x12 (10x36 mm)

B



Screw x4 (M6x40 mm)

C



Half moon x4

D



Middle Bar block x2

E



Middle Bar block x2

F



Screw x30 (3,5x35 mm)

G




Screw x14 (3,5x20 mm)

H



Screw x2 (4,5x50 mm)

I




Allen key x1 (4mm)

J




Spacer block x2 (6,1x2,1x2,1 cm)

Tools required




Flatblade screwdriver (medium)




Phillips screwdriver (medium & large)

Ruler - Use this ruler to help correctly identify the screws

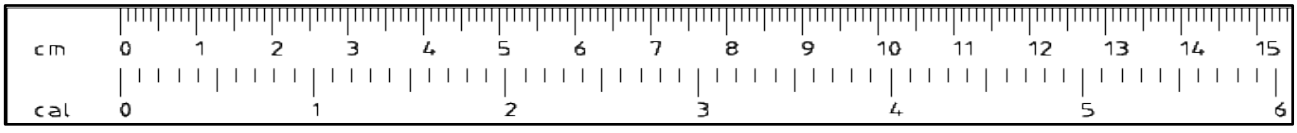

Step 1


Insert screws **G** into Middle Bar block **E** as shown.

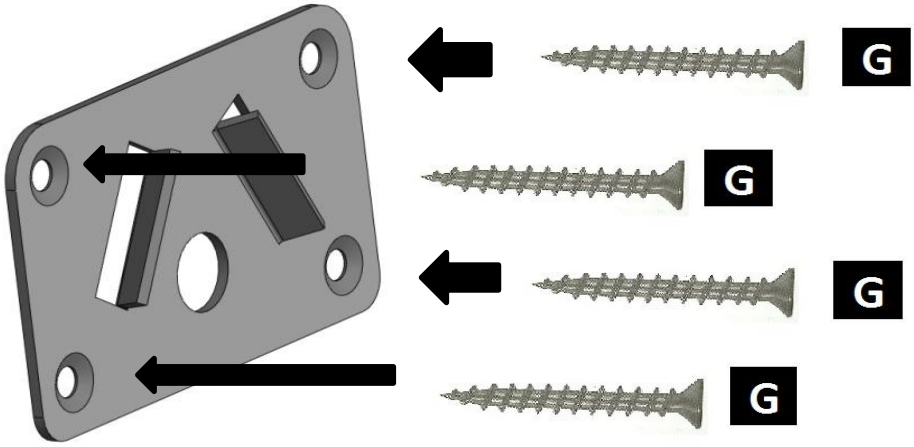



Step 2

Screw dowels **A** into the headboard **1** by hand.

Attach Middle Bar block **E** onto the headboard **1** with screws **G** as shown. Use Phillips screwdriver.

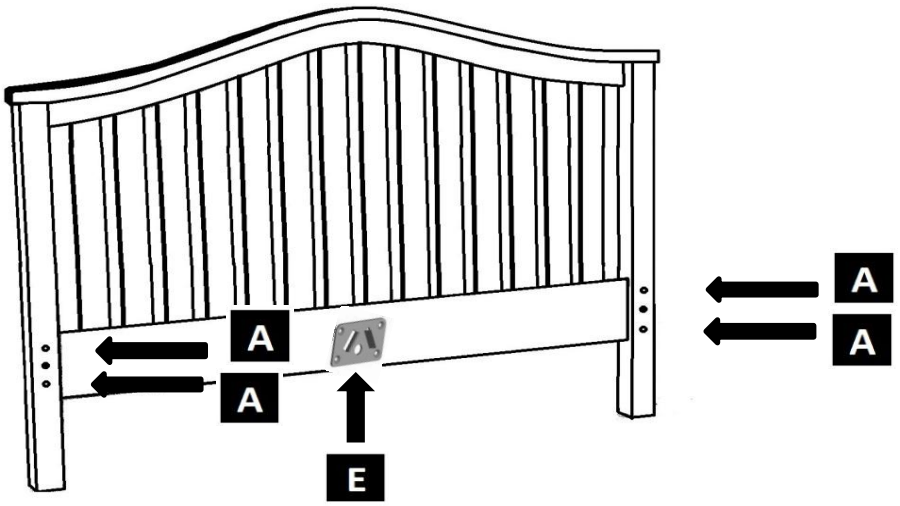


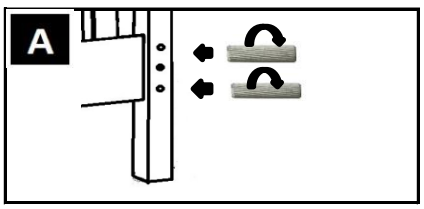


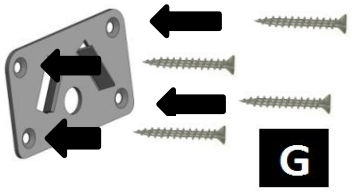


Step 3

Screw dowels **A** into the footboard **2** by hand.
Attach Middle Bar block **E** onto the footboard **2**
with screws **G** as shown.

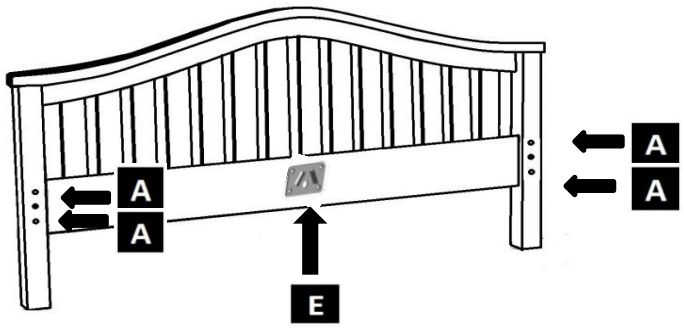

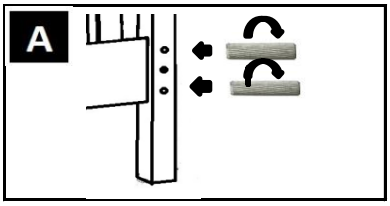


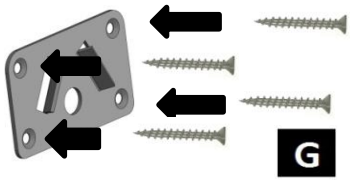

Step 4


Attach Bed sides **4** onto headboard **1** and footboard **2**
by using hardware **B** **C** ; use allen key **I** to fix screws **B**



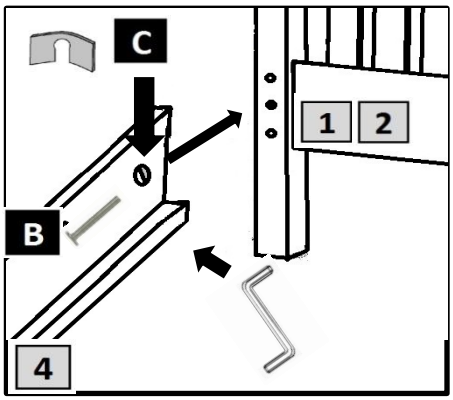


Step 5

Insert Dowels **A** into Middle foot **6** as shown.
Attach Middle bar **5** onto middle foot **6** with screws **H** using Phillips screwdriver.

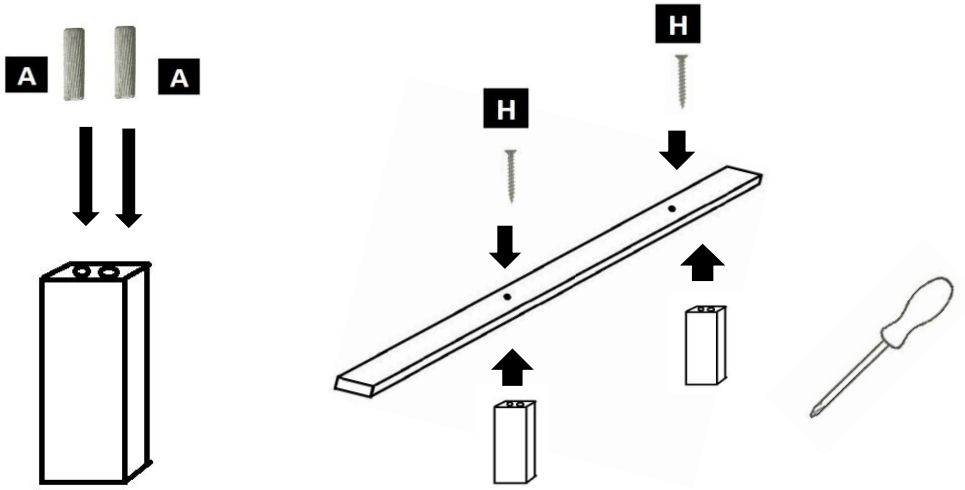


Step 6

Attach Middle bar block **D** onto the ends of the Middle bar **5** with screws **G** as shown.

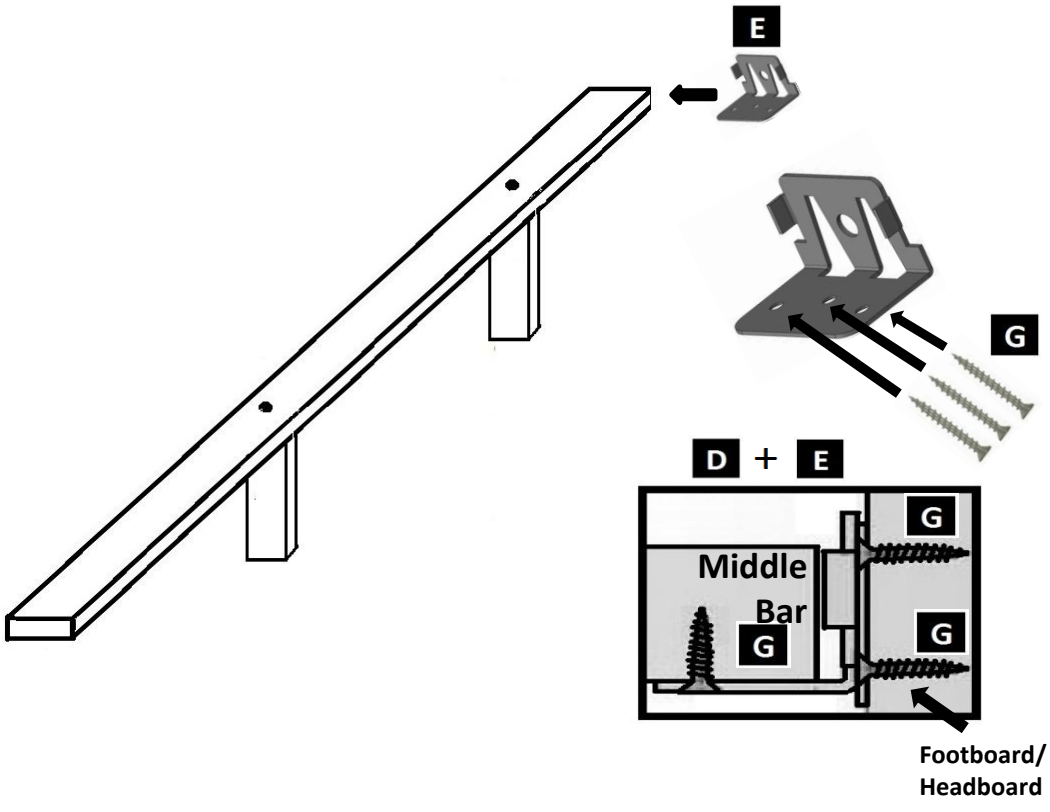

Step 7


Put Middle bar [5] with Middle bar block [D] on the Middle bar block [E] inserting on the headboard [1] and footboard [2] .

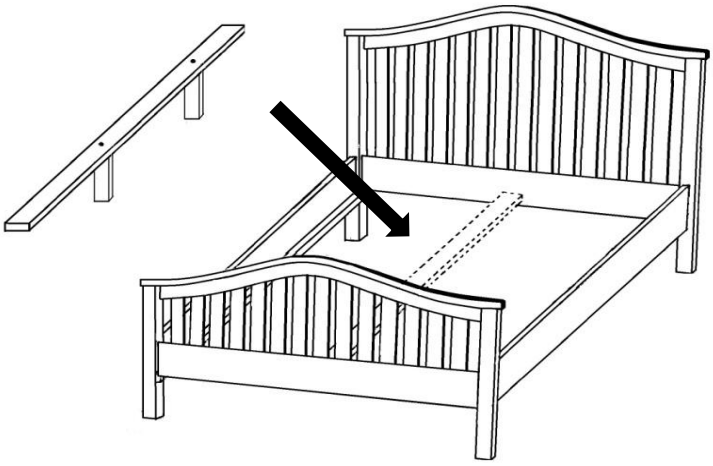

Step 8


Inset Bed slats [3] onto middle bar [5] as shown.

Use spacer block [J] to measure the distance between bed slats.

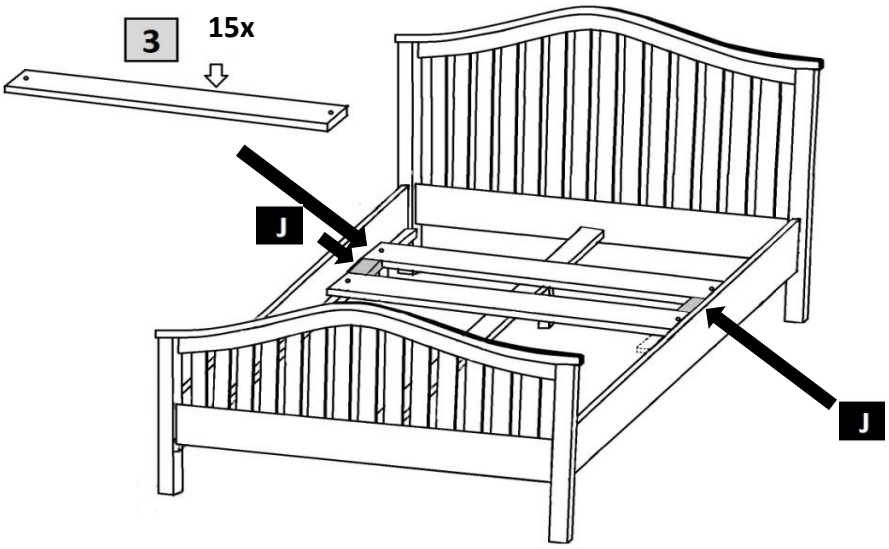

Step 9

Insert screws **F** onto Bed slats **3** and screw using Phillips screwdriver.

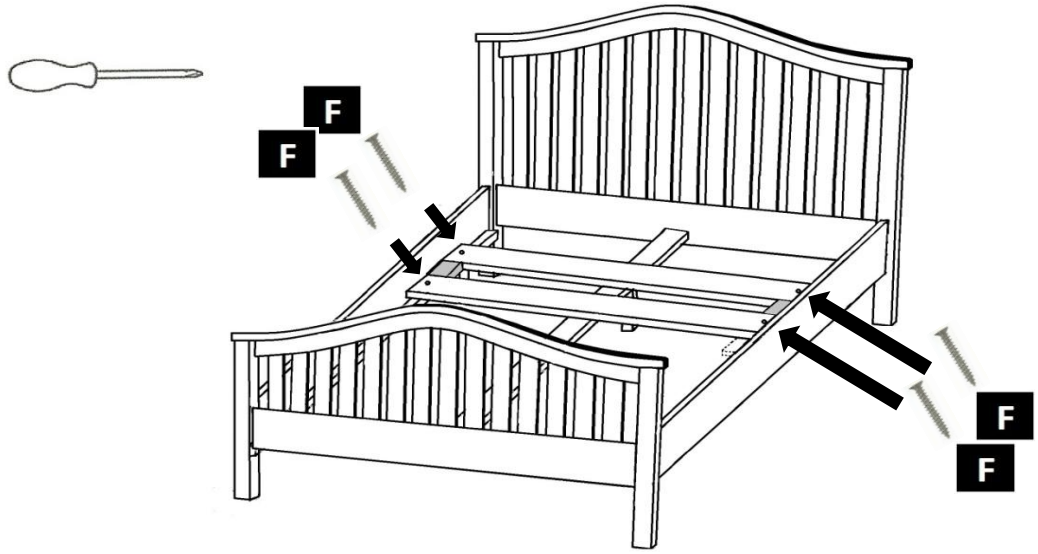

Step 10

Assembly is complete!

