
Canterbury 3 DR 3 DRW MIR ROBE

Assembly Instructions - Please keep for future reference

483/6469

498/1912

499/9760

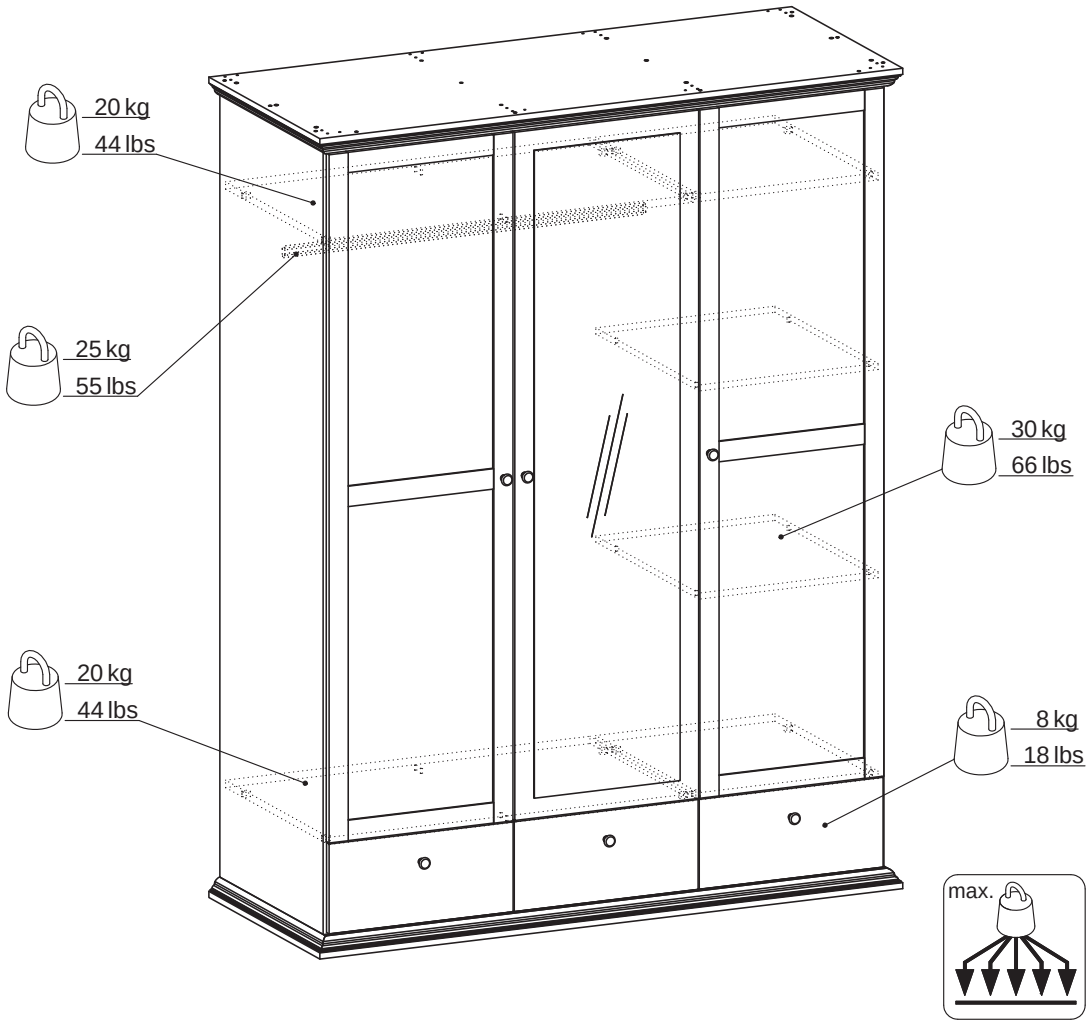

Dimensions

Width - 152.8cm
Depth - 62.7cm
Height - 202.1cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

71939 Version E Date 14/06/2016

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.


• Make sure you have enough space to lay out the parts before starting.

• During assembly, do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

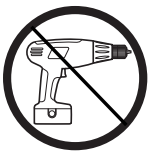

• We do not recommend the use of power drivers for inserting screws, as this could damage the unit. Only use hand screw drivers.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure that all bolts and fittings are tightend properly.

Safety


• The provided tip-over restraint must be installed in order to optimize user safety.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**

Please check you have all the panels listed below

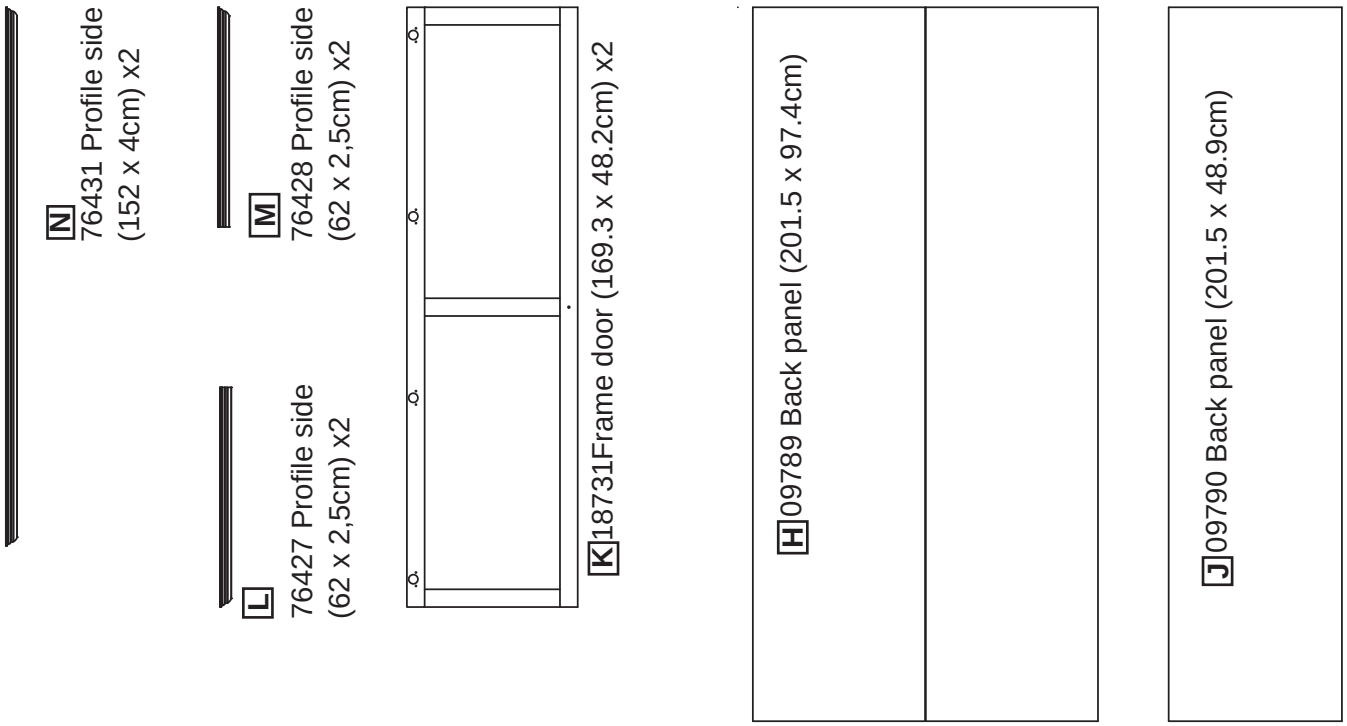





C
02748 Drawer back
(42.1 x 14cm) x3




B
00487 Right drawer side
(43.5 x 14cm) x3




A
00486 Left drawer side
(43.5 x 14cm) x3

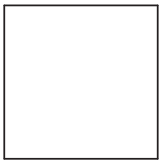


D
06294 Drawer bottom
(43.3 x 43.3cm) x3

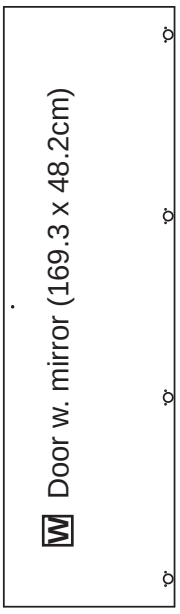


W Door w. mirror (169.3 x 48.2cm)



E Drawer front
(48.2 x 22.1cm) x3

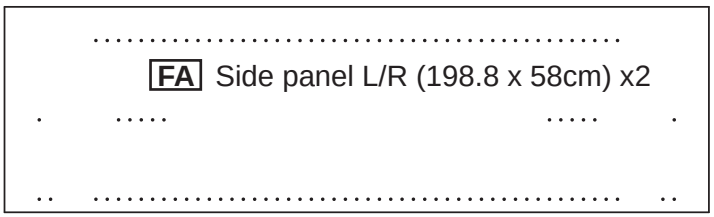



FA Side panel L/R (198.8 x 58cm) x2




GA Small divider panel (25 x 57.8cm)

IC Bottom / top panel (152,8 x 62.4cm) x2

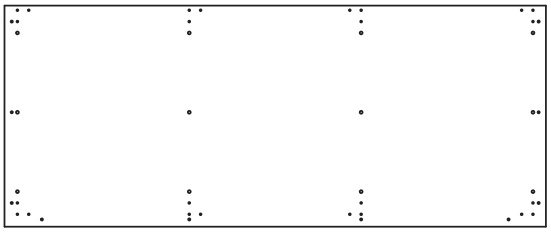

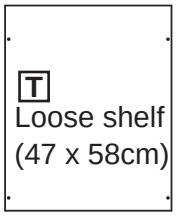



T
Loose shelf
(47 x 58cm) x2

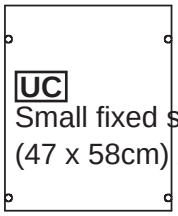

UC
Small fixed shelf
(47 x 58cm) x2

GB Large divider panel (198.8 x 58cm)

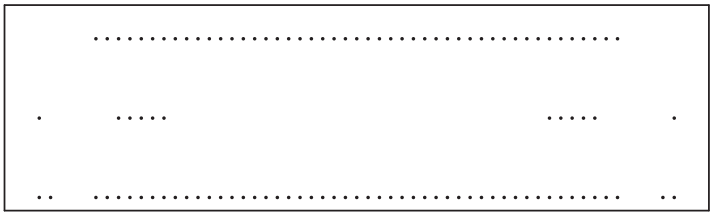










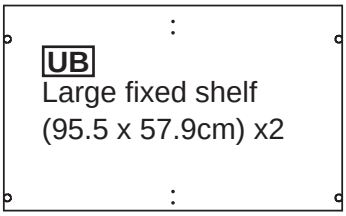


UB
Large fixed shelf
(95.5 x 57.9cm) x2


Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

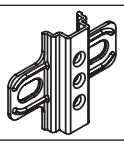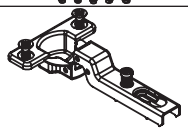
10601  Holder x2	**11011**  Drawer support x6	**11042**  Shelf support x8	**11229**  Bracket x16
11230  Screw (ø5 x 7mm) x16	**20203**  Dowel (ø5x30mm) x16	**20228**  Drawer fastener x12	**23006**  Nails x3
23010  Big nail x18	**25215**  Flat head screw (ø3x12mm) x2	**25233**  Flat head screw (ø3.5x15mm) x6	**25610**  Connector bolt (ø7x50mm) x21
26020  Flat head screw (ø5.8x9mm) x12	**26033**  Flat head screw (ø6.3x27mm) x20	**26071**  Screw (ø7x8mm) x24	**26211**  Machine screw (M4x7mm) x12
26221  Machine screw (M4x15mm) x12	**26232**  Machine screw (M4x23mm) x6	**31513**  Cam bolt x8	**31687**  Cam x8
33204  Wedges x4	**50491**  Hinge plate x12	**52291**  Hinge x12	**63008**  Floor glider x8
81040  Handle x6	**94009**  Strap x2	**96203**  Stop x6	**97642**  Allen key x1
41434  Drawer runner x6		**72509**  Hanger x1	


Tools required


Cross head screwdriver (medium & large)



wooden block



Hammer


Flathead screwdriver (medium)



Books X6


Eye protection (when using a hammer or glue)


Ruler

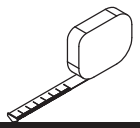
Tape measure

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowles

Insert dowels **20203** into outer holes on the ends of panel **FA** + **GB**

Place cam **31687** into the holes on top of small divider panel **GA**.

Arrow facing the edge of the panel.

Fittings you will need for this step:

Cam
 # 31687 X2



Dowel
 # 20203 X16



Step 2

Attaching hanger holder


Attach holder **10601** with flat head screw **25215** on side panel **FA** and divider panel **GB**.


Fittings you will need for this step:

Flat head screw
 # 2215 X2



Holder
 # 10601 X2



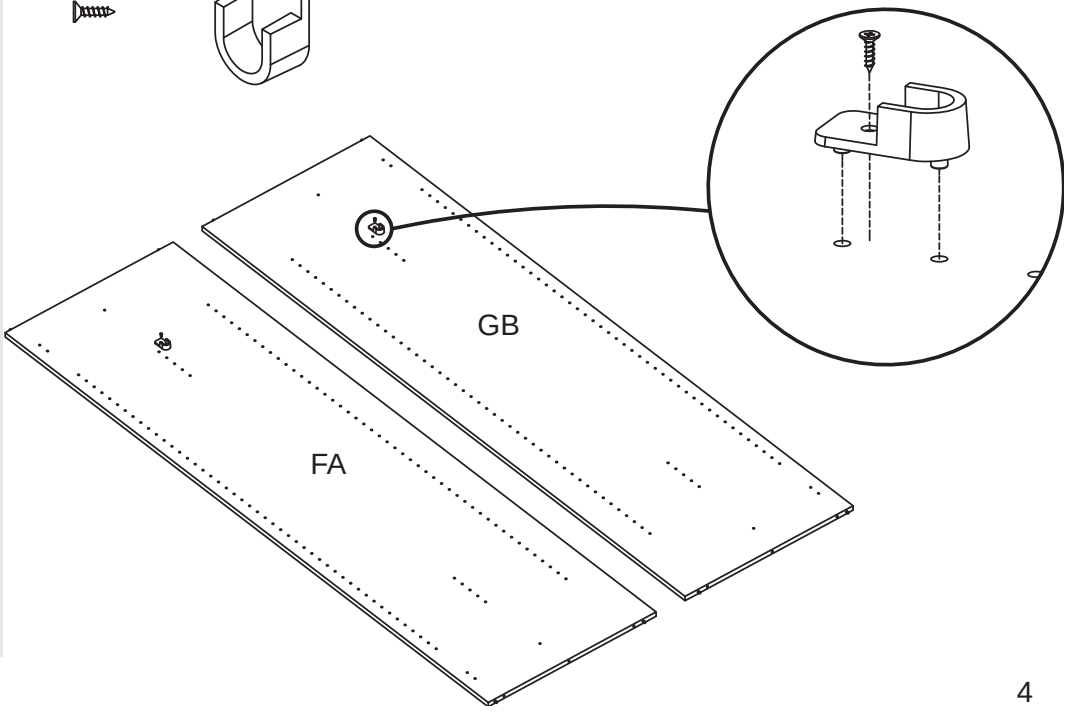

Assembly Instructions


Step 3


Attaching hinge plate


Fixing each hingplate **50491** with screw 2x **26071**.

Insert machine screw **26211** in center of hinge plate.

Fittings you will need for this step:

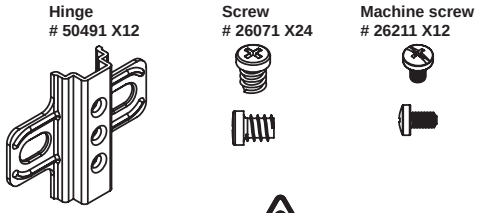

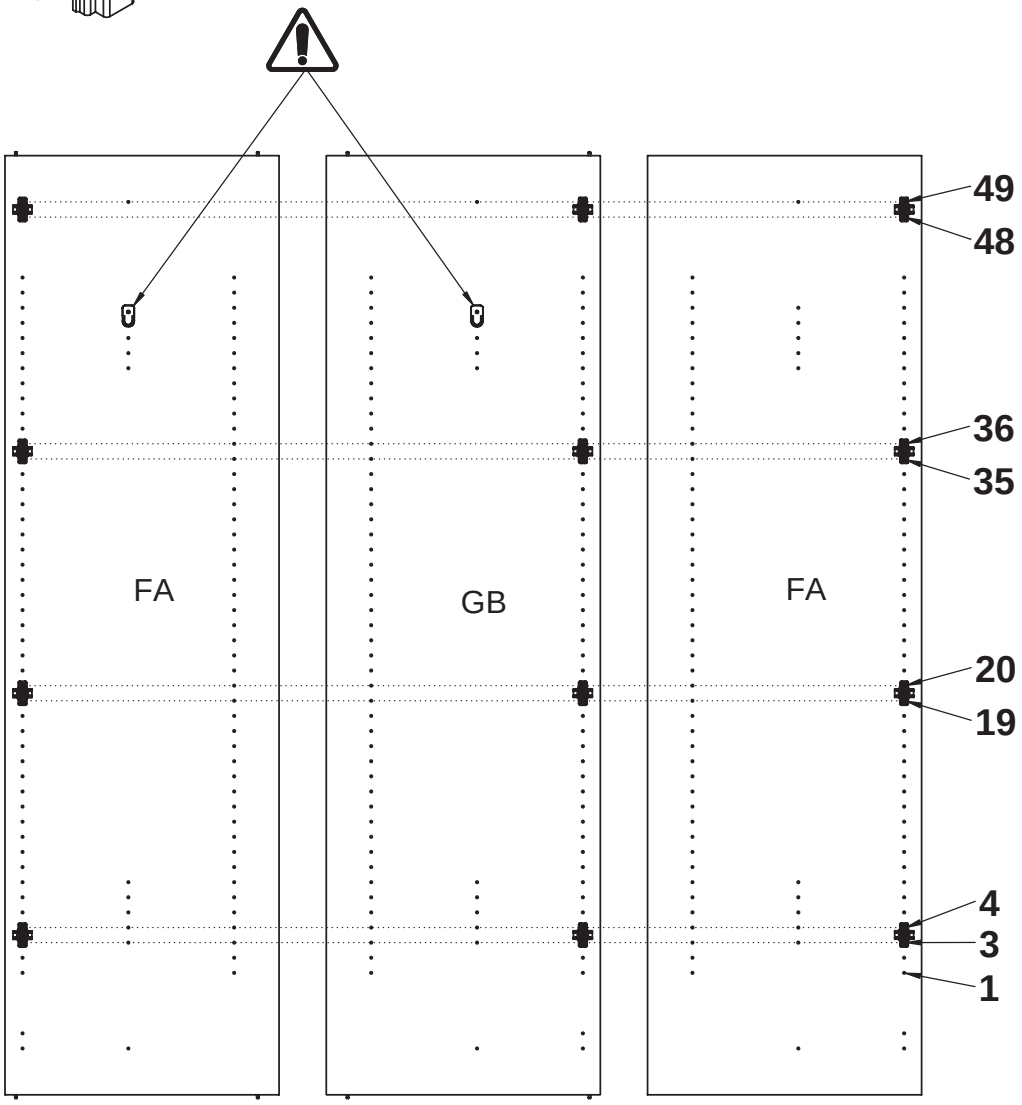

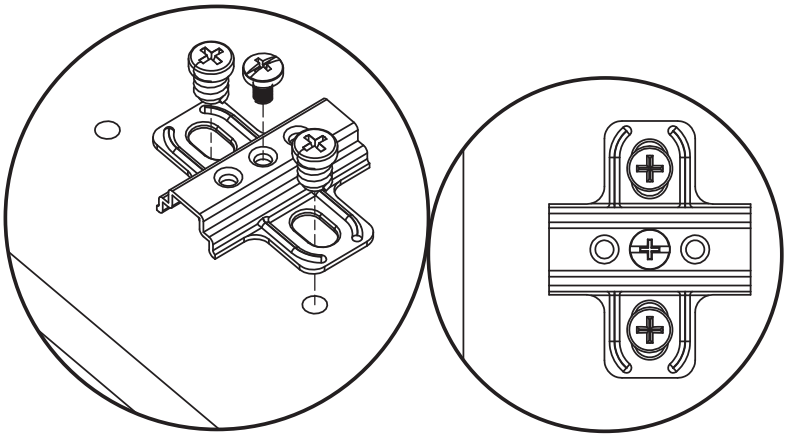


Assembly Instructions

Step 4

Attach screw **11230** as shown.

Fittings you will need for this step:

Screw
 # 11230 X8

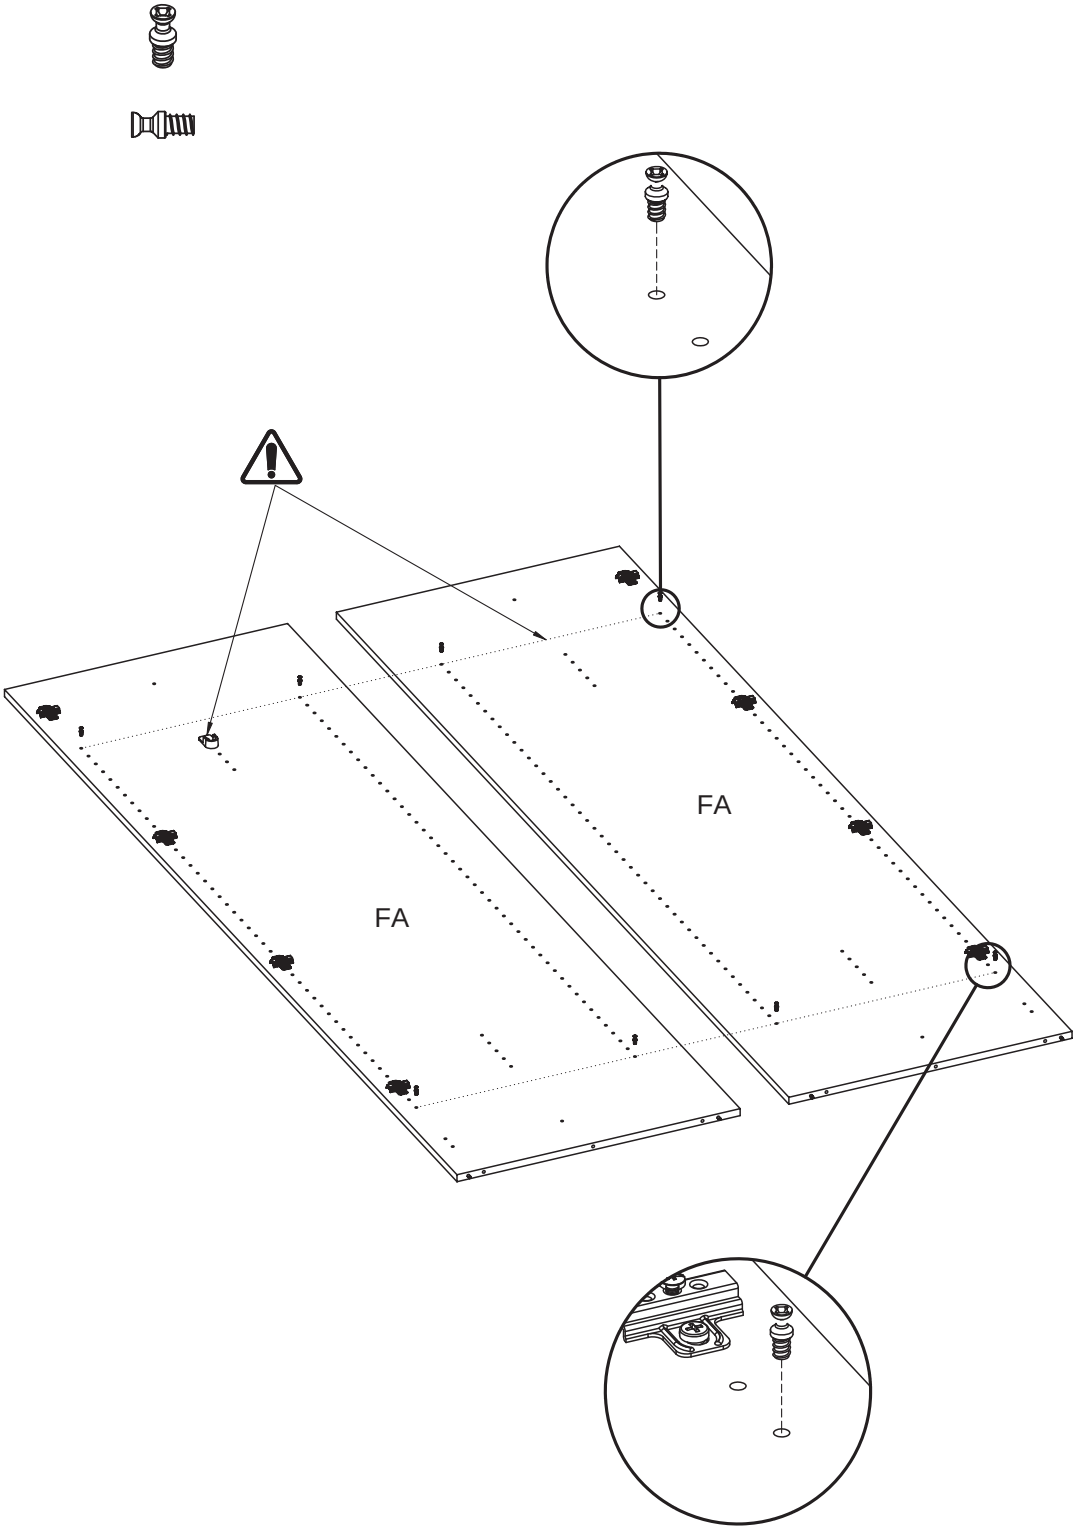

Assembly Instructions

Step 5

Place drawer runners

1.

Extend drawer glide **41434** .

2.

Attach drawer glide at the front of side panel **FA** .

Place screw **26020** through the correct hole at the front of the drawer glide, into the holes on the side panel **FA**.

Tighten screw but do not overtighten.

3.

Open slide until 3 holes is visible at back of drawer glide.

4.

Place screw **26020** through the correct holes at the back of the drawer glide, into the holes on the panel **FA** .

Tighten screw but do not overtighten.


5.


Attach the flat head screw **25233** into the correct holes of the drawer glide, into the side panel **FA** .

Tighten screw but do not overtighten.

Repeat these **5** steps for the remaining runners.

Fittings you will need for this step:

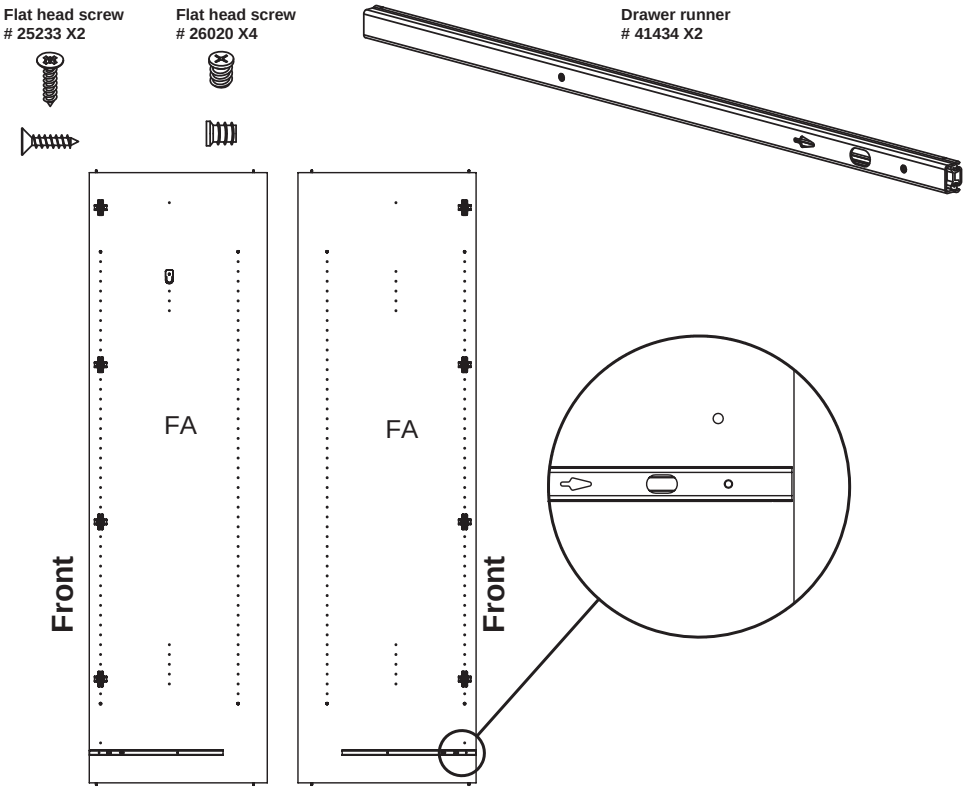

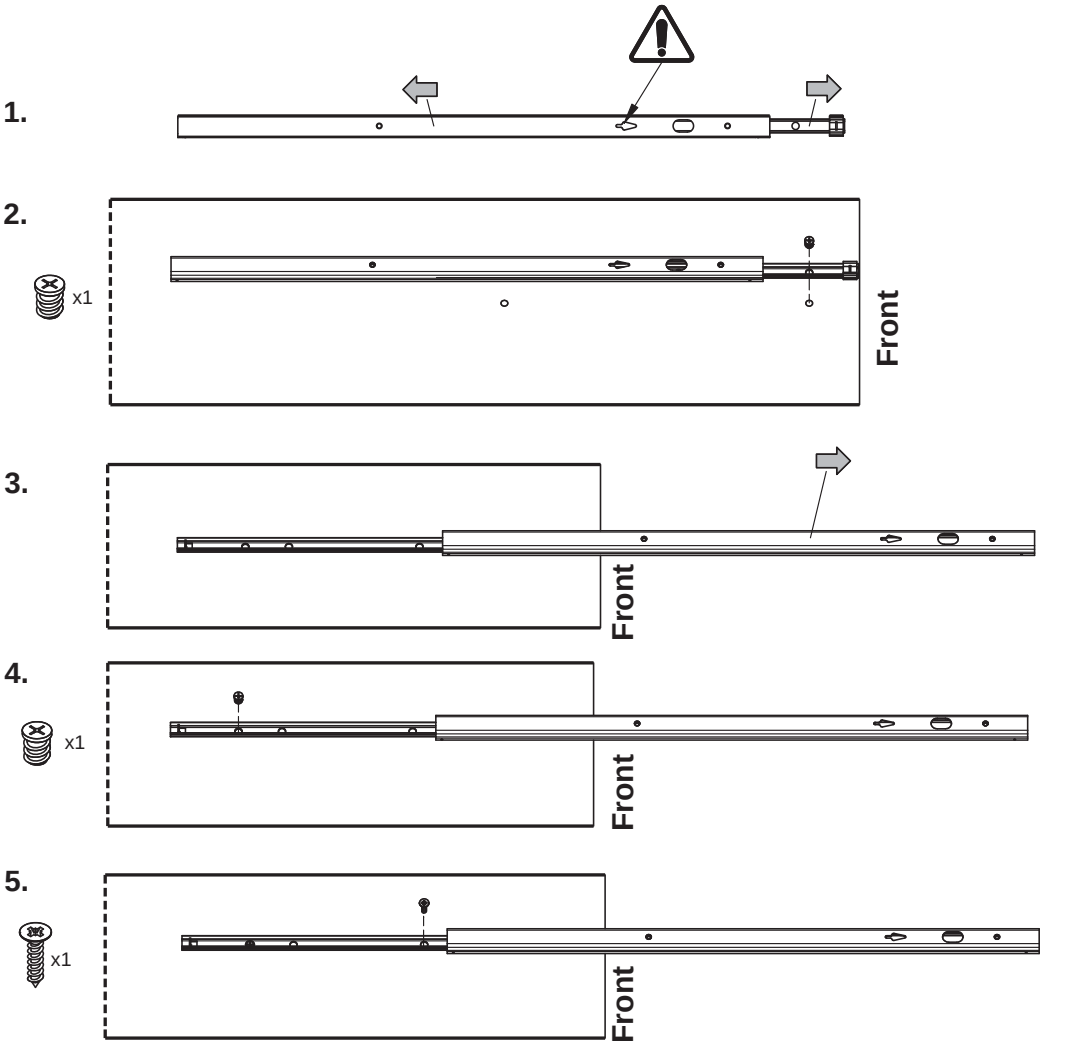

Assembly Instructions

Step 6

Drawer supporter


Attach the screw **11230** on both sides of the large divider panel **GB**.

Fittings you will need for this step:



Screw
 # 11230 X8



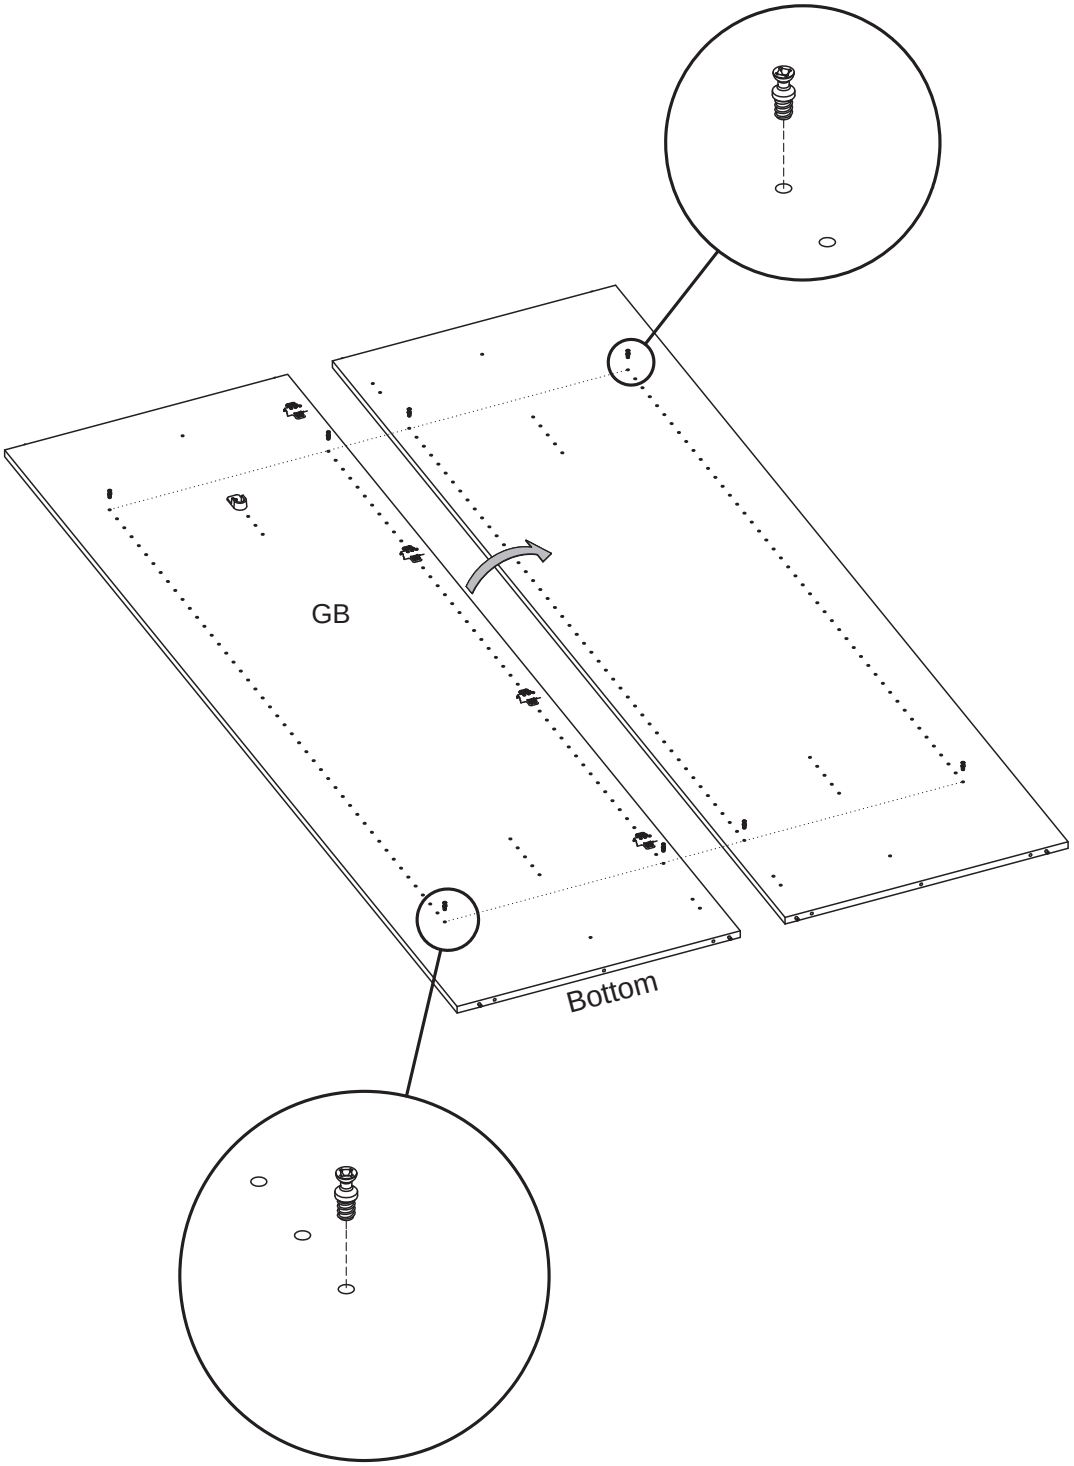

Assembly Instructions

Step 7

Place drawer runners

1.

Extend drawer glide **41434** .

2.

Attach drawer glide at the front of small divider panel **GA**.

Place screw **26020** through the correct hole at the front of the drawer glide, into the holes on the small divider panel **GA**.

Tighten screw but do not overtighten.

3.

Open slide until 3 holes is visible at back of drawer glide.

4.

Place screw **26020** through the correct holes at the back of the drawer glide, into the holes on small divider panel **GA**.

Tighten screw but do not overtighten.


5.

Attach the flat head screw **25233** into the correct holes of the drawer glide, into the small divider panel **GA**.

Tighten screw but do not overtighten.

Repeat these **5** steps for the remaining runners on the other side of small divider panel **GA** and on both sides of large divider panel **GB**.

Fittings you will need for this step:

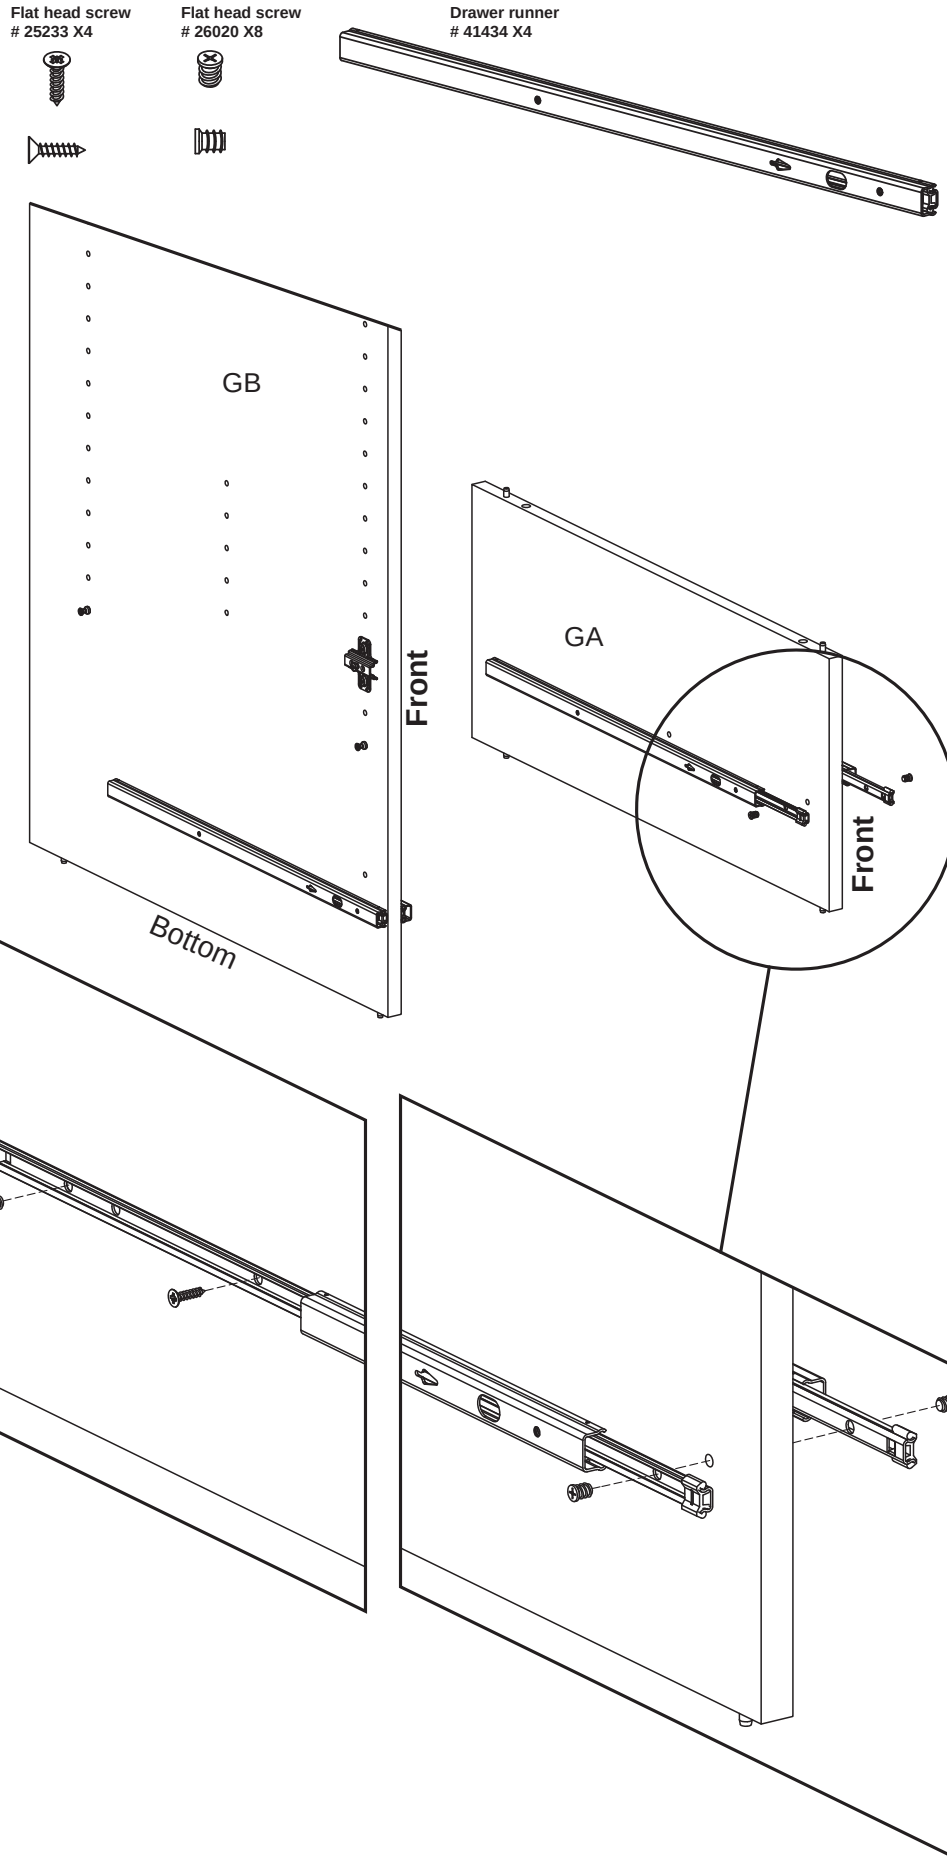

Assembly Instructions

Step 8

Gathering profiles

Insert wedges **33204** into slots on the angle ends of side and front profiles **L** + **N** + **M**.

Use a hammer.

Fittings you will need for this step:




Step 9

Attaching panels

Attach the gathering profiles as shown.

Place bottom **IC** as shown, insert flat head screw **26033**.

Fittings you will need for this step:

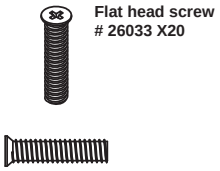

Assembly Instructions

Step 10


Place brackets

Place the bracket **11229** in the fixed shelf **UB** and **UC**.

Fittings you will need for this step:

Bracket
 # 11229 X16



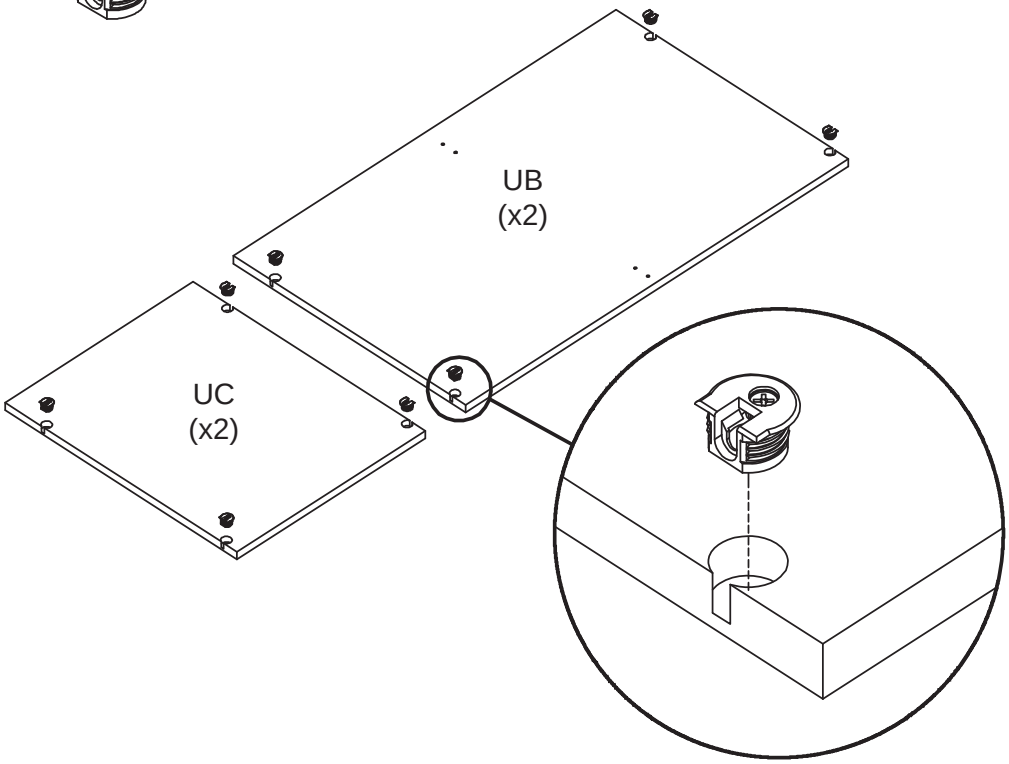

Step 11


Insert cam bolt


Insert the cam bolts **31513** into the fixed shelf panel **UB**.

Cam bolts must be screwed down flush.

Fittings you will need for this step:

Cam bolt
 # 31513 X2

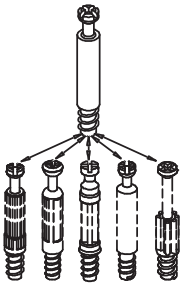

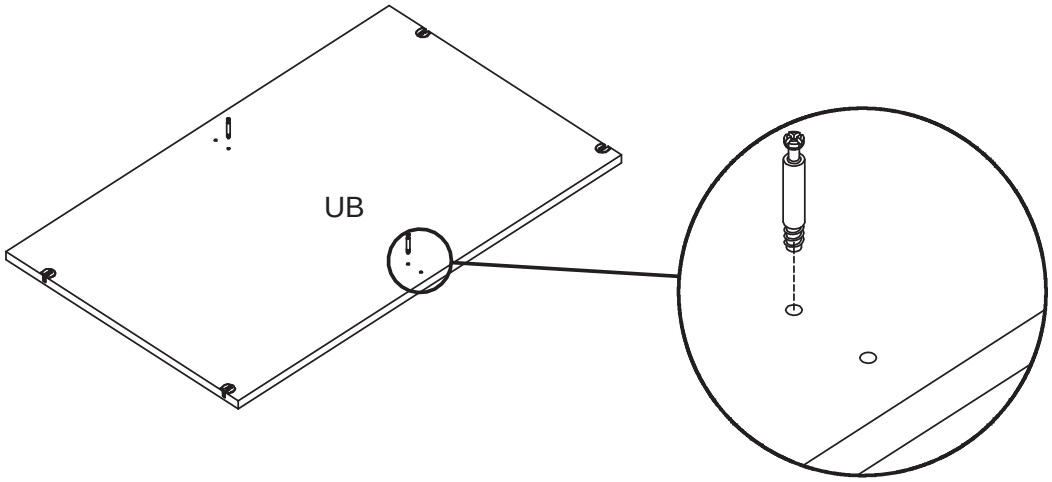

Assembly Instructions

Step 12

Attaching top and bottom panel


Lay down the cabinet facing the front to the floor. Using books supplying side panels.

Attach the top and bottom panel **IC** by inserting connector bolt **25610** into the holes.

Tighten the screws with the allen key **97642**.

Using books, supporting side panels and divider panel.

Fittings you will need for this step:

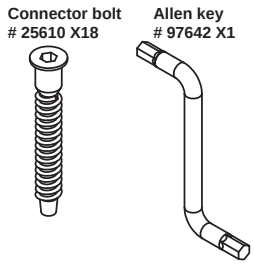


Assembly Instructions

Step 13

Attaching divider panel

Attach the divider panel **GA** by inserting dowel pins and cam bolts into the holes.

Tighten the cams.

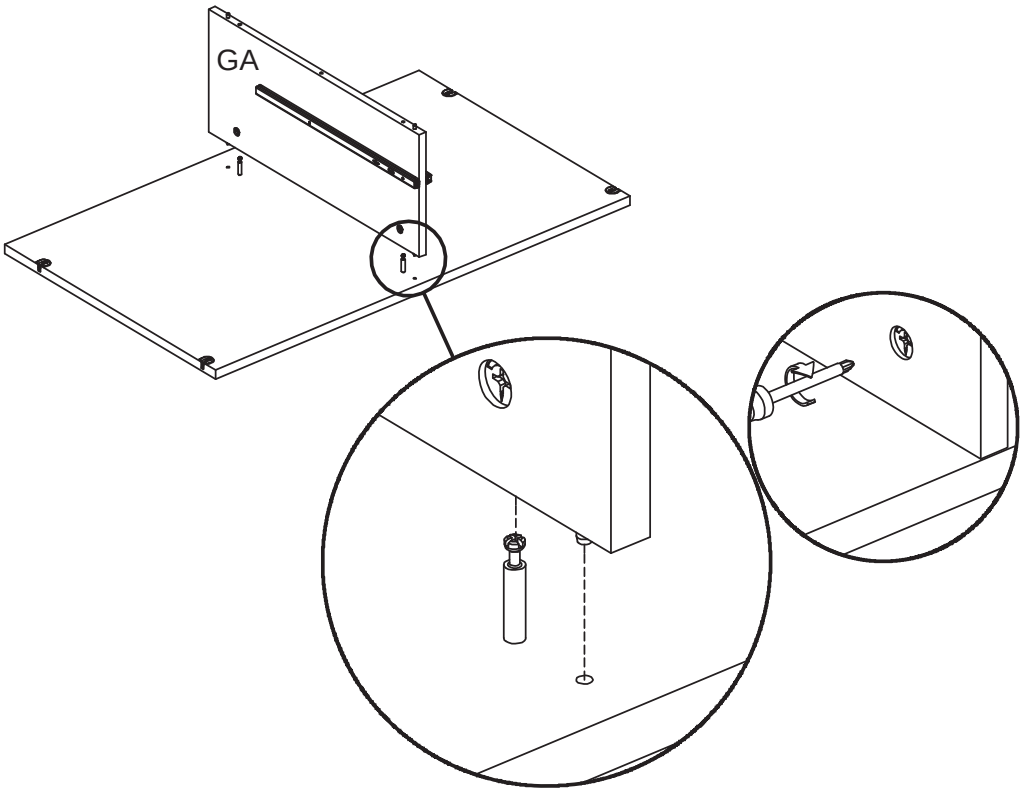


Step 14

Attaching shelf

Place shelf **UB** as picture and slide down over screw.

Then tighten.

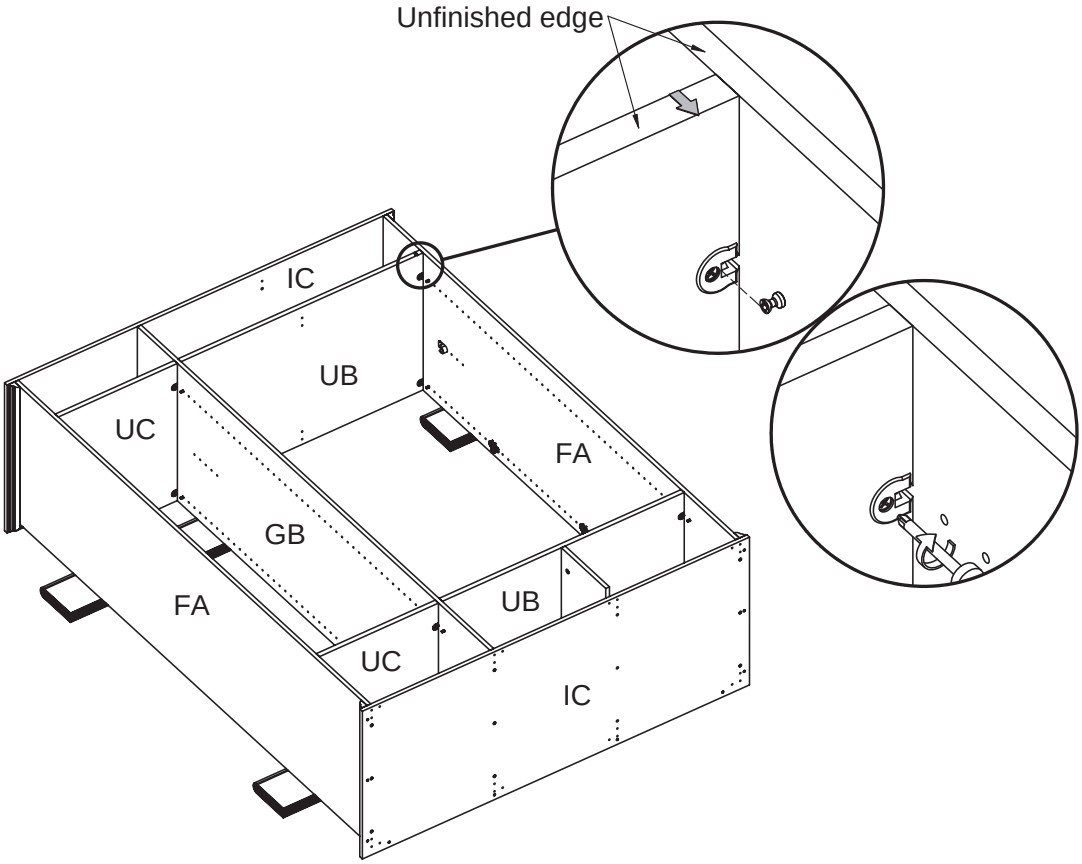

Assembly Instructions


Step 15

Attaching divider panel

Attach the divider panel **GA** by inserting connector bolt **25610** into the holes of bottom panel **IC**.

Tighten the connector bolt with the allen key.

Fittings you will need for this step:

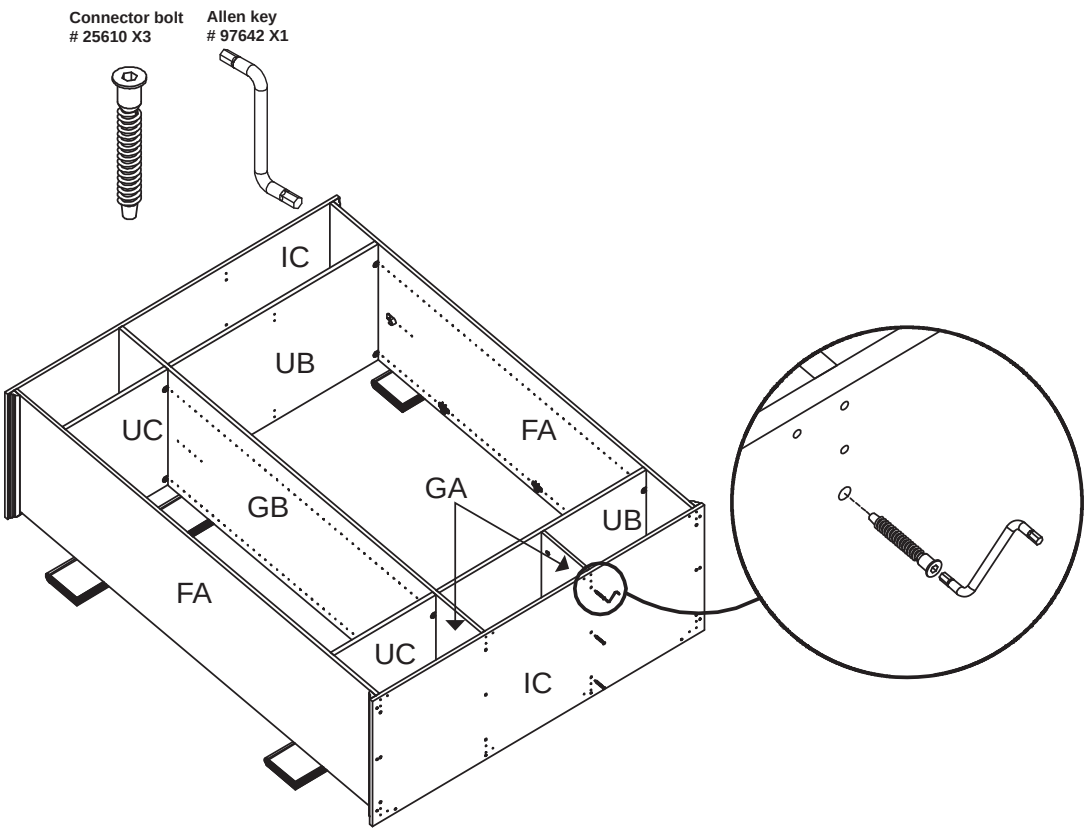


Step 16

Attaching nails

By using a hammer place the big nails **23010** in center of divider panel **GB**.

⚠ See warning with gap between nail and middle panel.

Fittings you will need for this step:

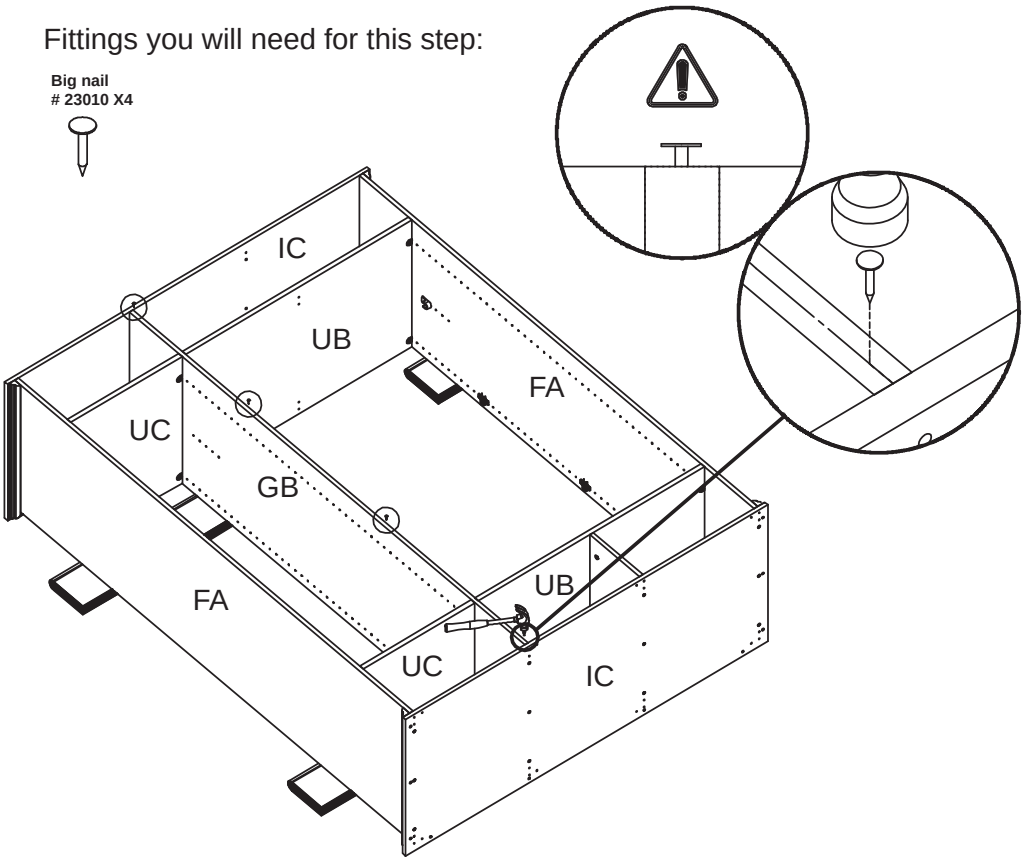

Assembly Instructions

Step 17

Fixing back panel

Slide the back panels **J** and **H** as shown, so that they meet in the center of panel **GB**


Fix the back panels with nails **23006** and **23010**.

Using nails **23006** to fix back panel.

⚠ Important:
The unit **MUST** be square when the back is attached.


Fittings you will need for this step:


Nail
 # 23006 X3

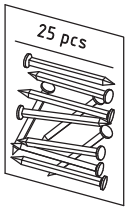


Big nail
 # 23010 X14



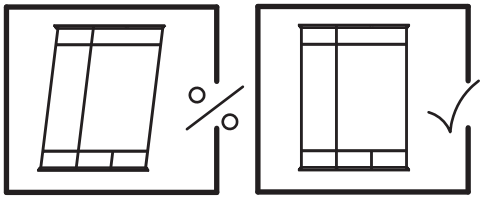

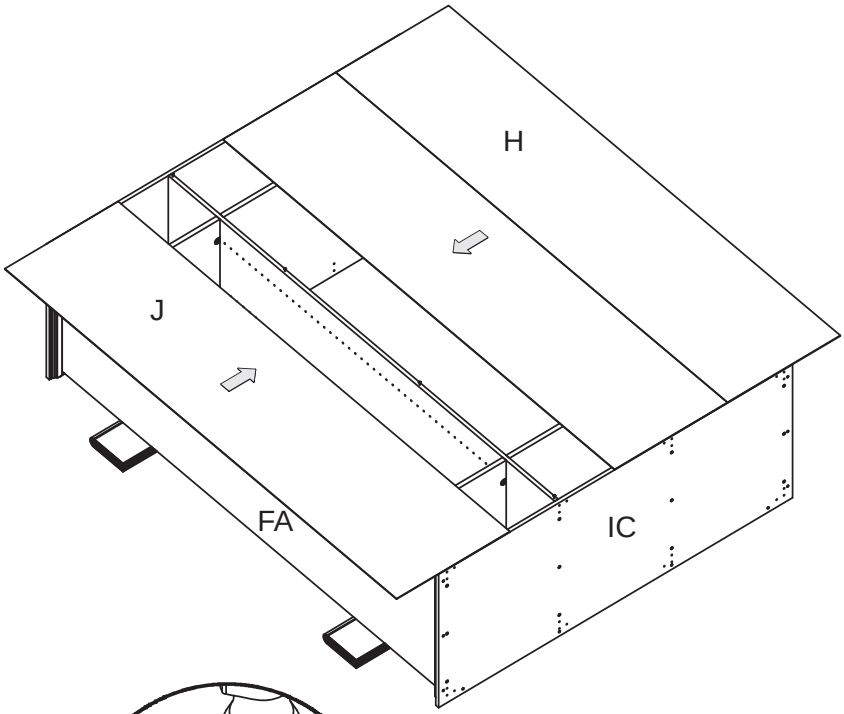

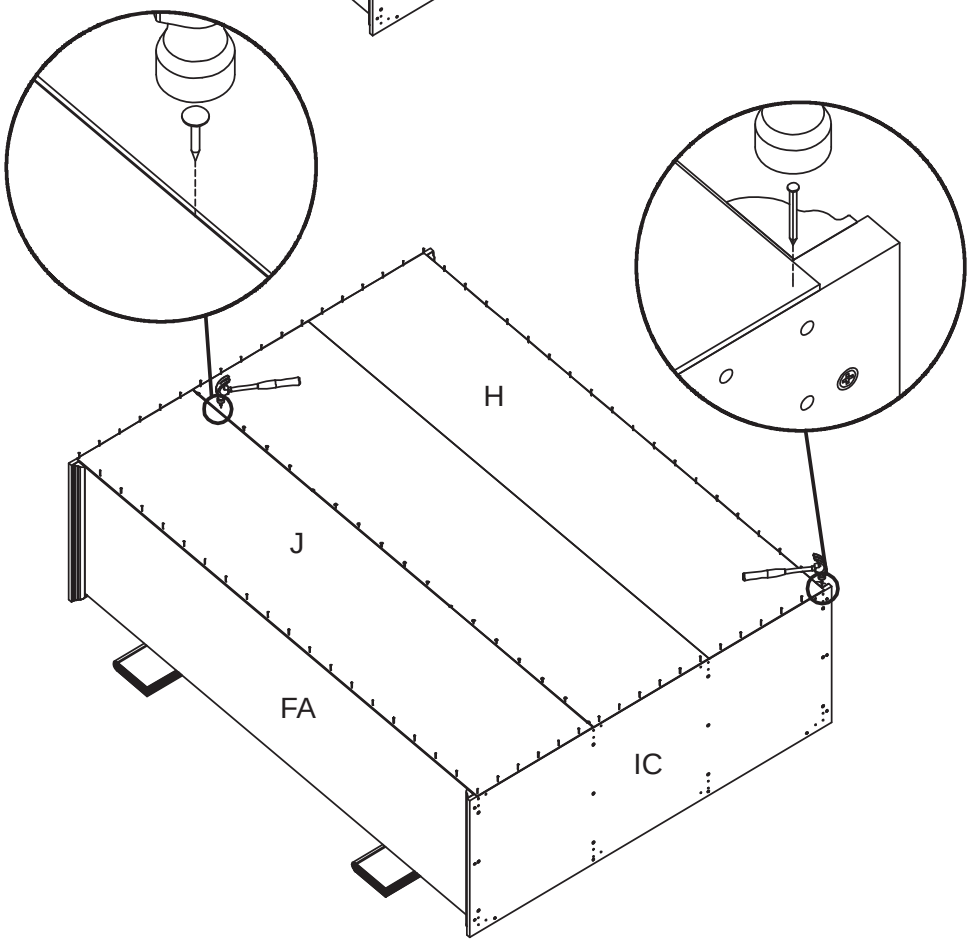


Assembly Instructions

Step 18

Attaching back panels

Place the floor gliders **63008** in the holes of bottom panel **IA**. Use a wooden block between hammer and floor glider.

Fittings you will need for this step:

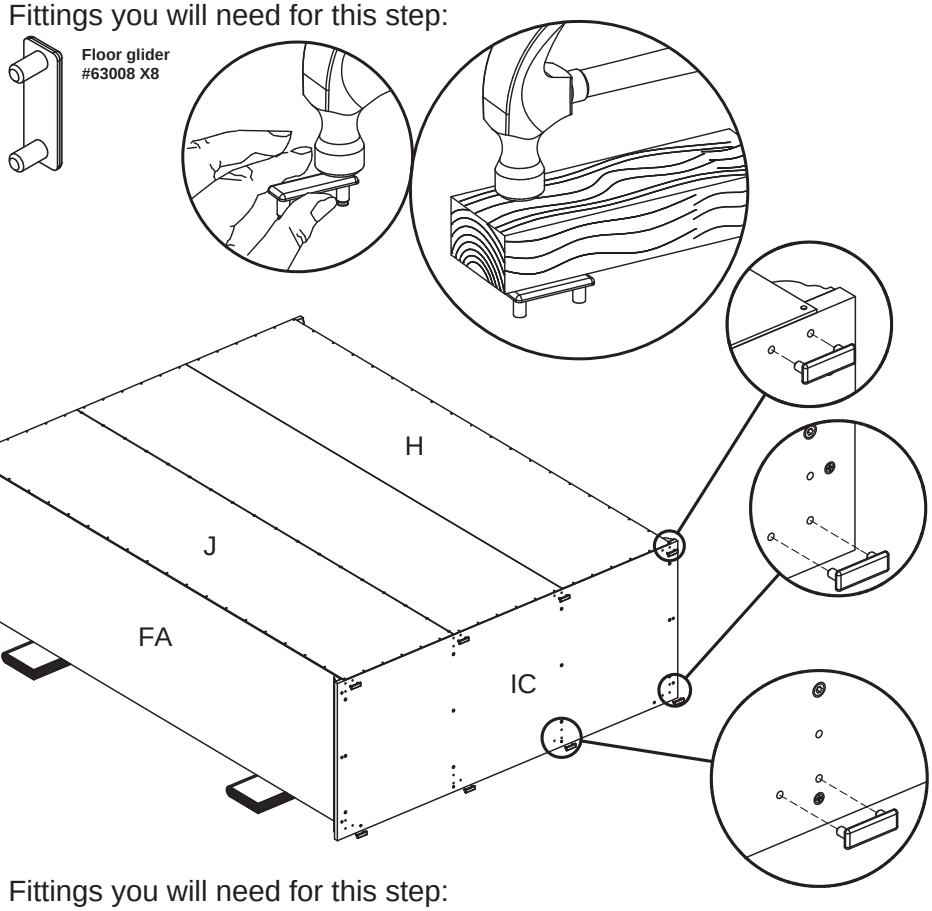


Step 19


Fixing to wall

Fix unit to wall with strap **94009**.

⚠ The screw supplied together with the anti-topple bracket is to be used only for fixing the anti-topple bracket to the furniture. In addition to this you will need to choose a screw or fitting which is suitable for securing the bracket to the kind of wall you have. If you are unsure about what type of screw to use contact your local hardware store.

Fittings you will need for this step:

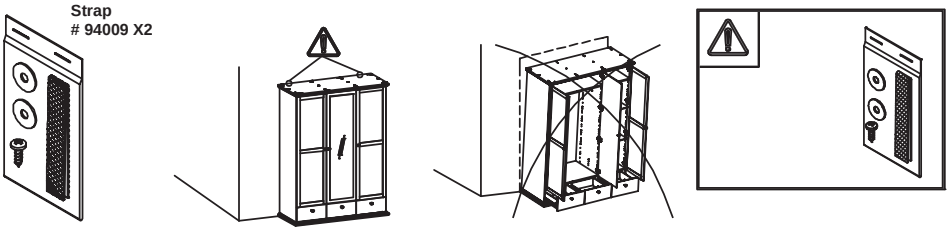

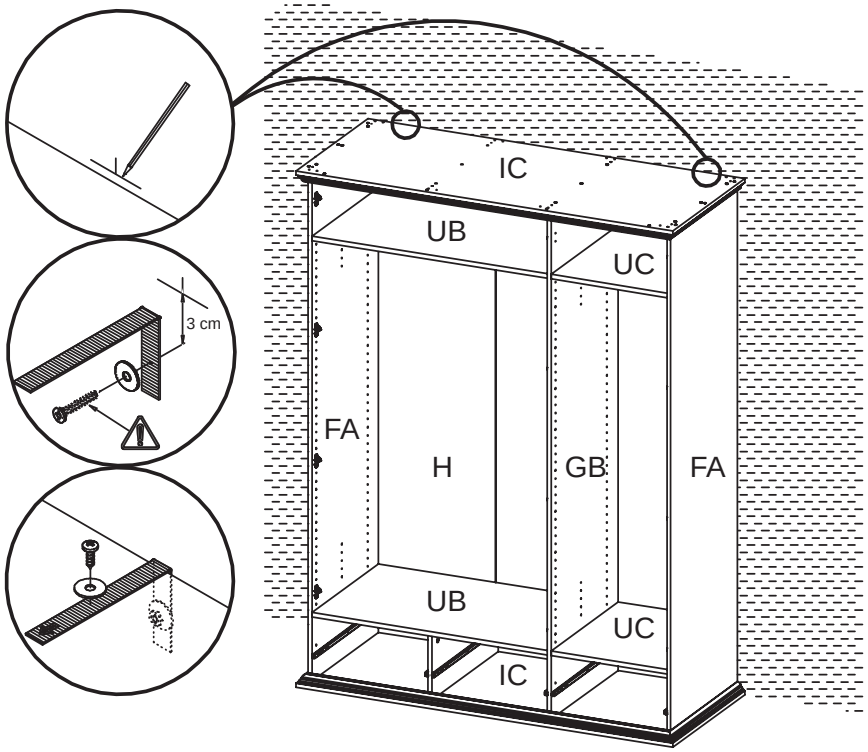


Assembly Instructions


Step 20

Insert hanger

Insert hanger **72509**

Fittings you will need for this step:

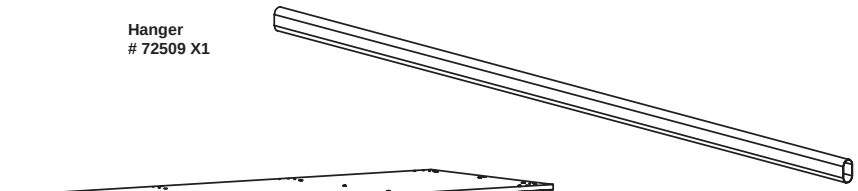

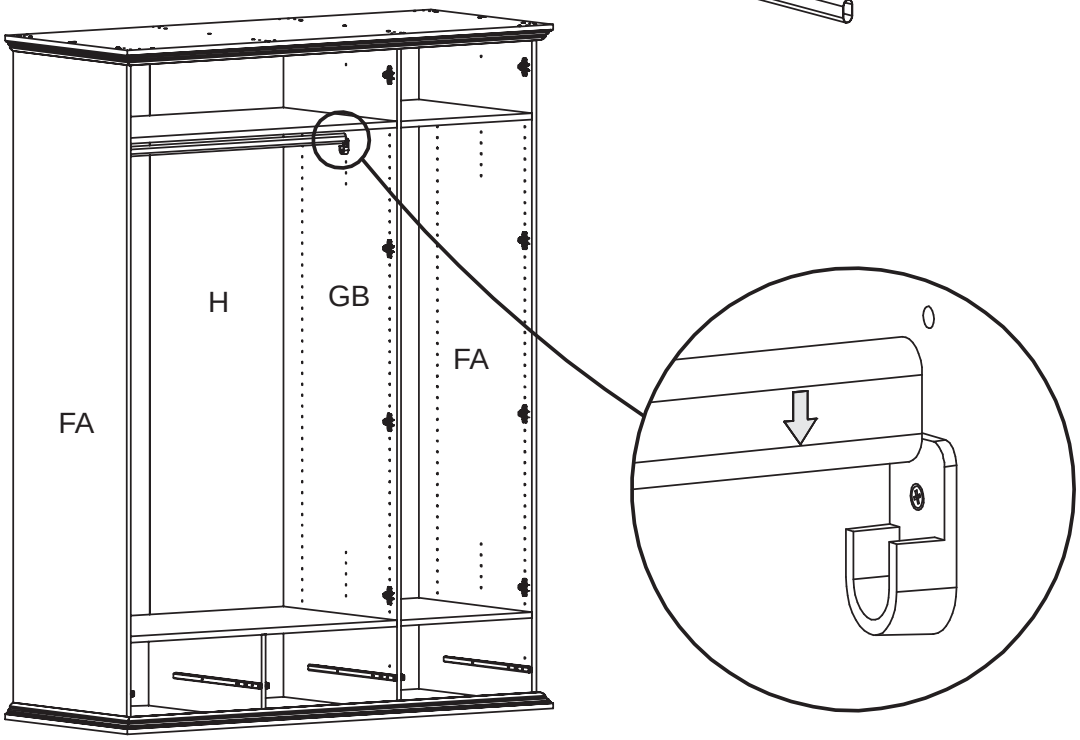

Step 21


Attach the drawer support

Press the shelf support **11042** in holes of side panels **FA**.

Press down the loose shelf panel **T** x2.

Fittings you will need for this step:



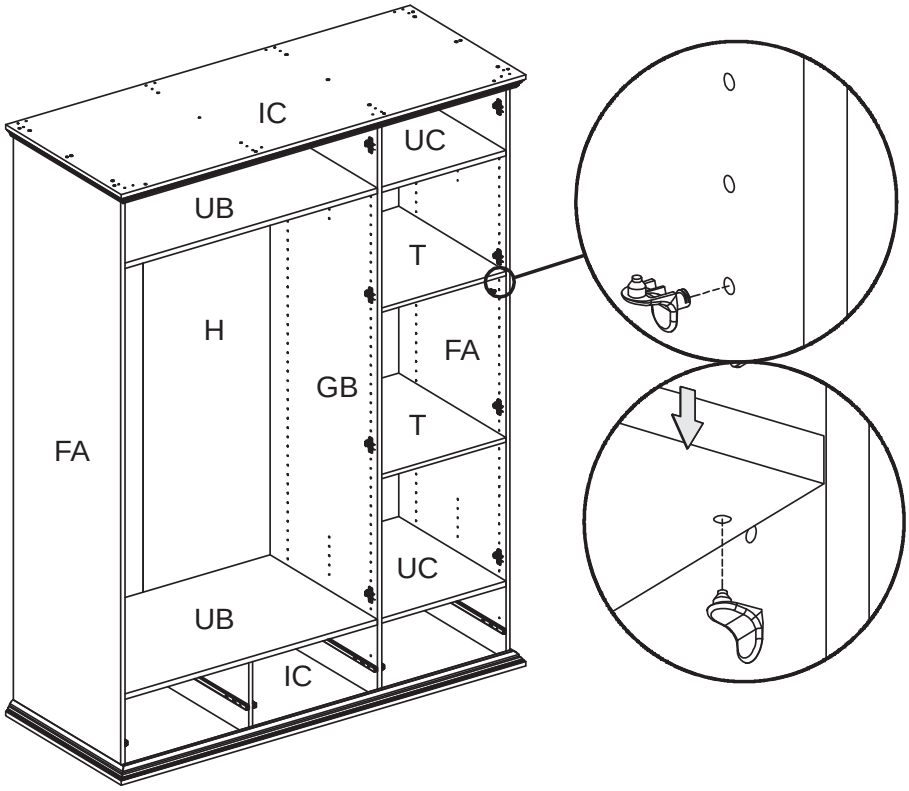


Assembly Instructions


Step 22

Insert stop **96203** on one shelf **UB** and divider panel **GB** .

Fittings you will need for this step:



Stop
#96203 X4

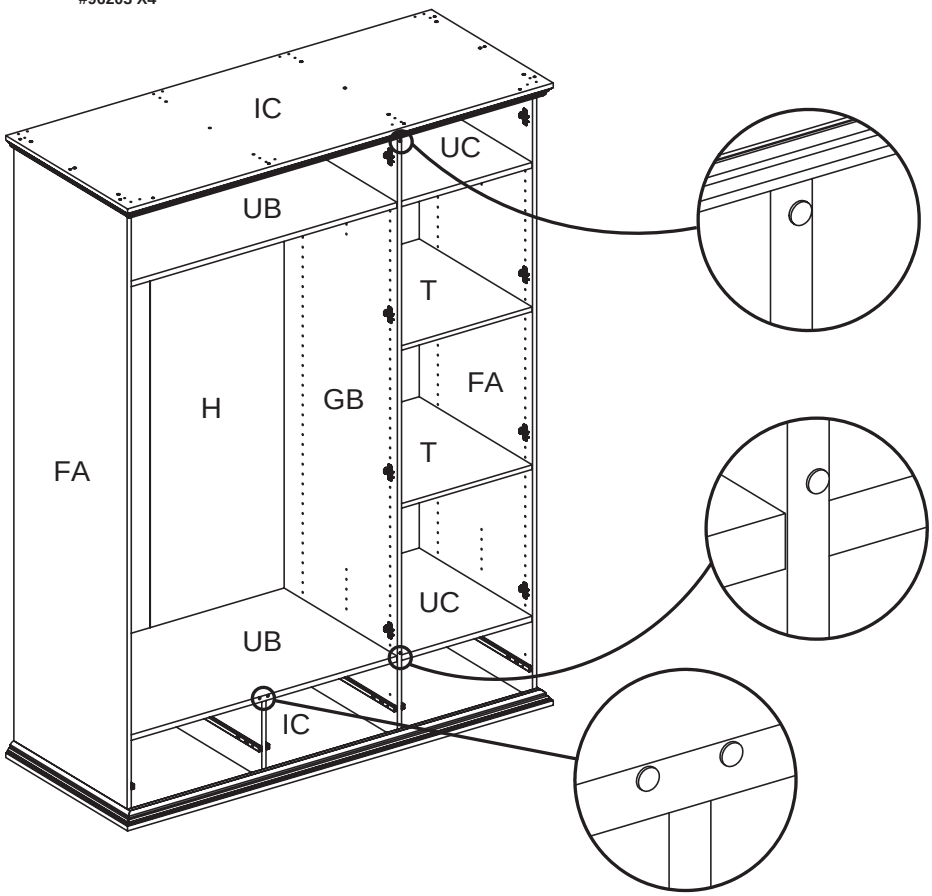


Step 23


Attach hinge

Press hinge **52291** into the large holes on door **W** and **K**. Drive the pre-attached screws into the holes on doors.

Fittings you will need for this step:

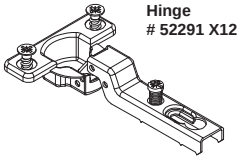

Hinge
 # 52291 X12

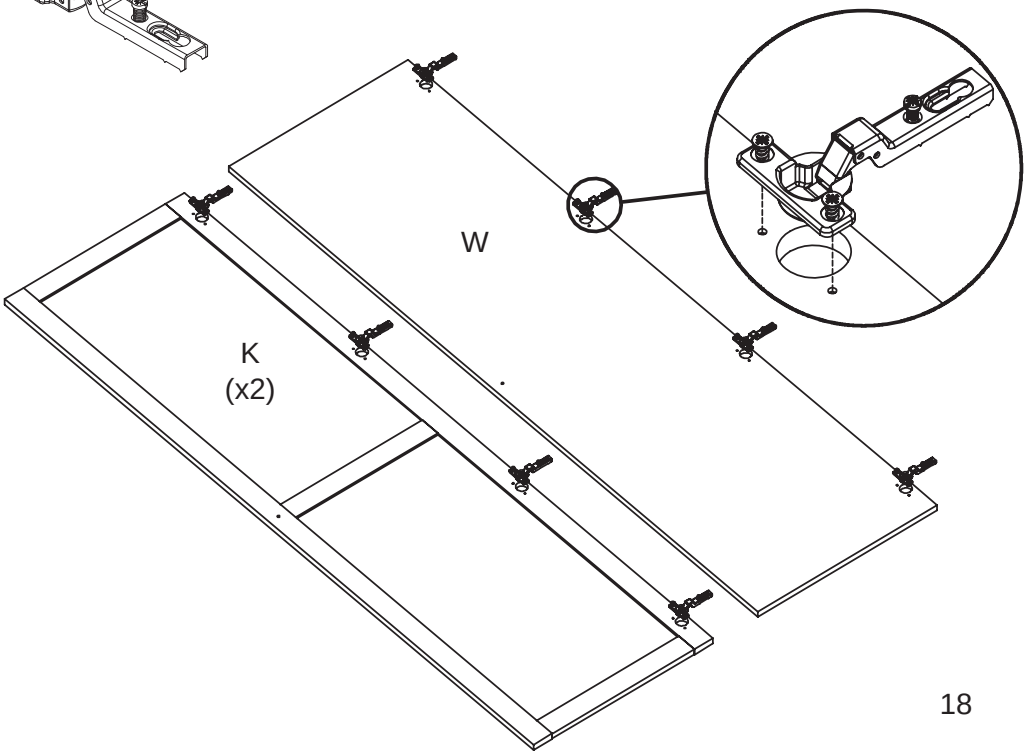

Assembly Instructions


Step 24

Attach frame door

Slide the pivoting part of the two hinges over the hinge plates. Tighten the screw on the hinge plate until the door is supported by the hinges. The door can be adjusted in and out by pulling or pushing the door then retightening this screw

To adjust the door hinges up and down: Loosen the two large screws on the hinge plate to adjust the door up and down, then retighten.

To adjust the doors left or right, rotate the small screw on the hinge in or out.

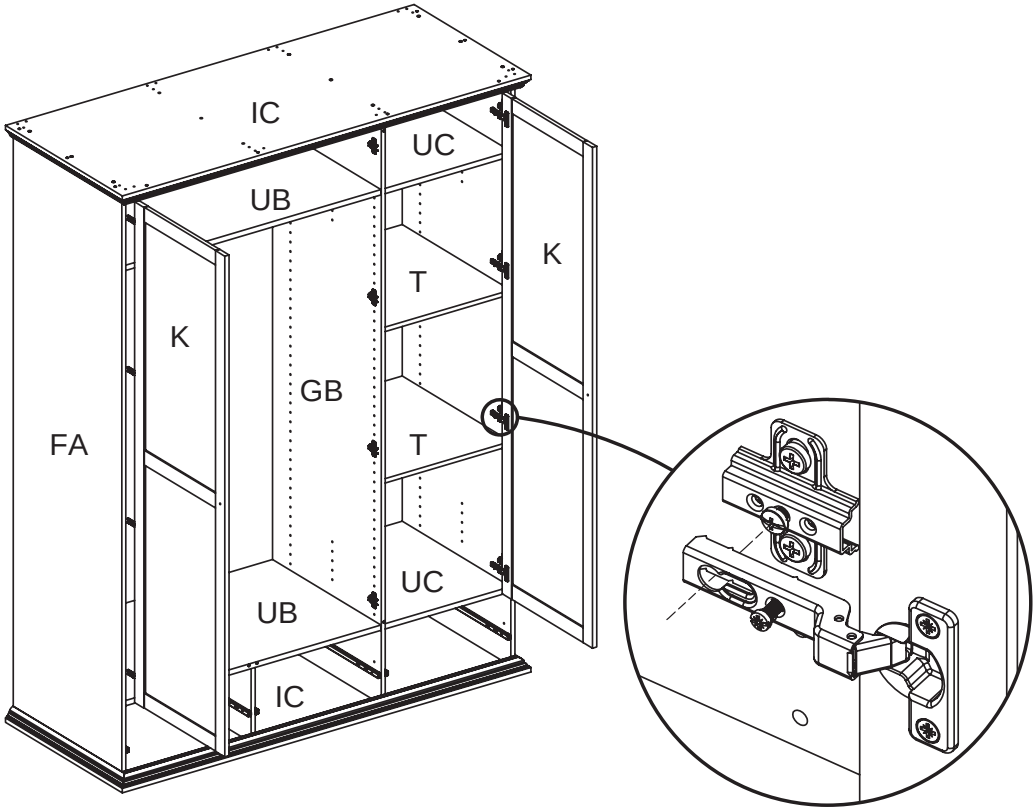


Step 25

Attach door handle

Pass screw **26232** through the door then into the handle **81040** and tighten.

Fittings you will need for this step:



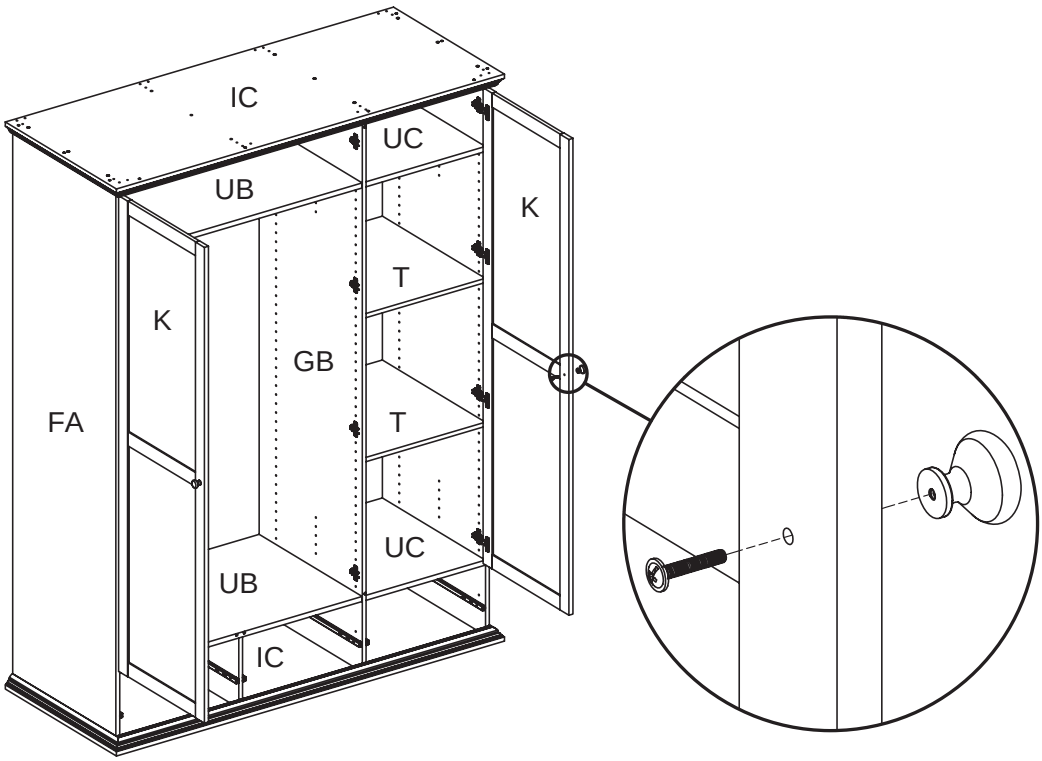

Assembly Instructions


Step 26

Attach mirror door

Slide the pivoting part of the two hinges over the hinge plates. Tighten the screw on the hinge plate until the door is supported by the hinges. The door can be adjusted in and out by pulling or pushing the door then retightening this screw

To adjust the door hinges up and down: Loosen the two large screws on the hinge plate to adjust the door up and down, then retighten.

To adjust the doors left or right, rotate the small screw on the hinge in or out.

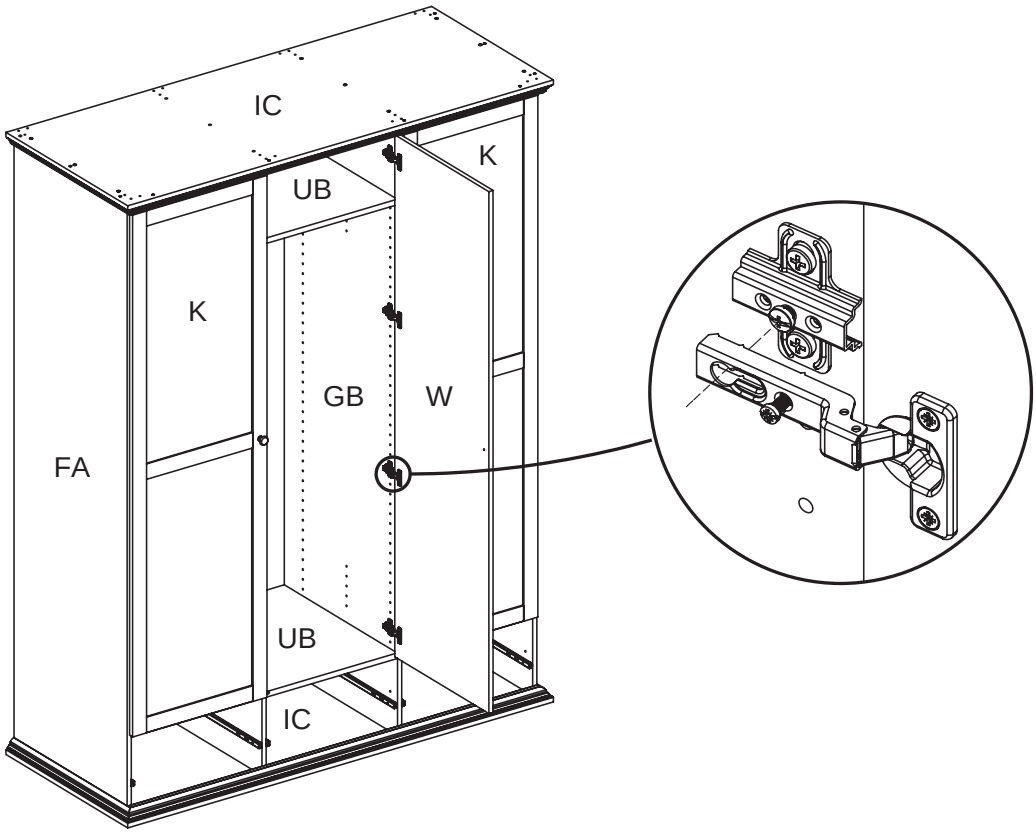


Step 27

Attach door handle

Pass machine screw **26232** through the door then into the handle **81040** and tighten.

Fittings you will need for this step:

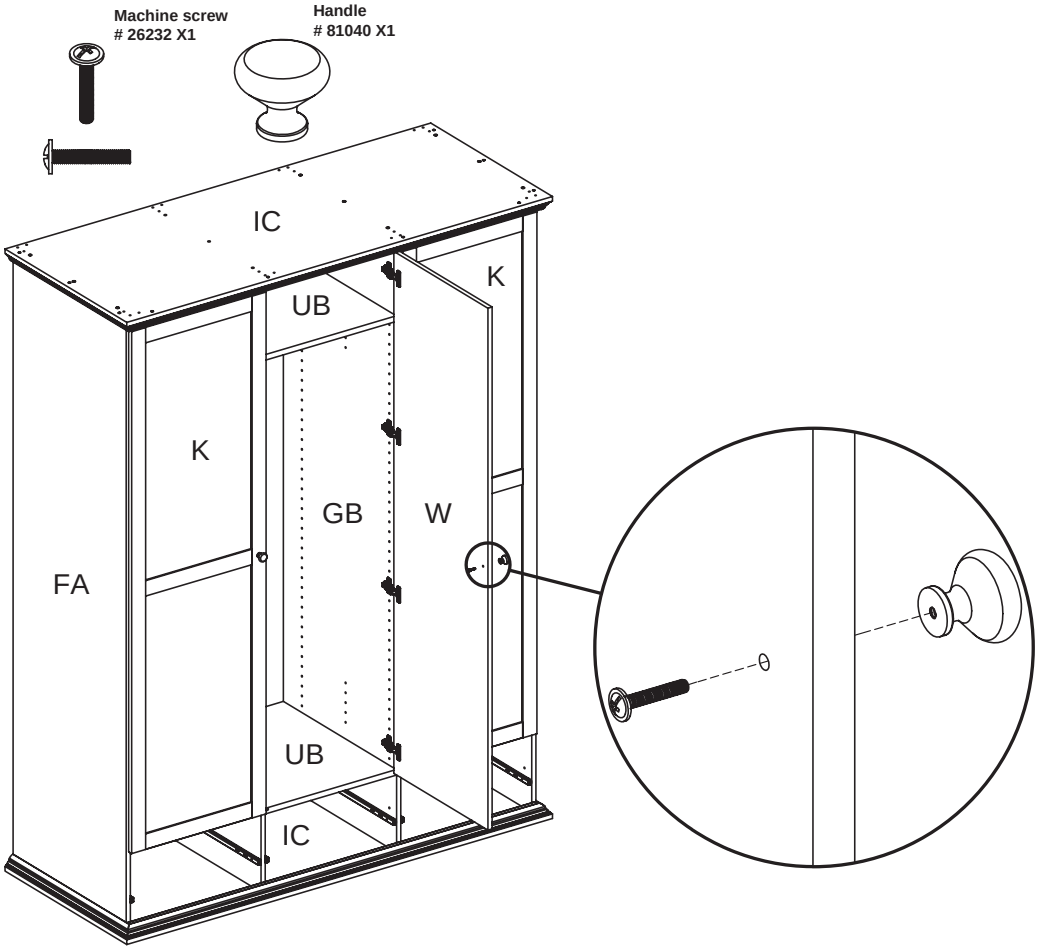

Assembly Instructions

Step 28


Attaching drawers

Attach cam **31687** into the holes in left and right drawer side **B** +**A**. Arrow facing the edge of the panel.

Screw the cam bolt **31513** in the drawer front **E**.

Cam bolt must be screwed down flush.

Fittings you will need for this step:

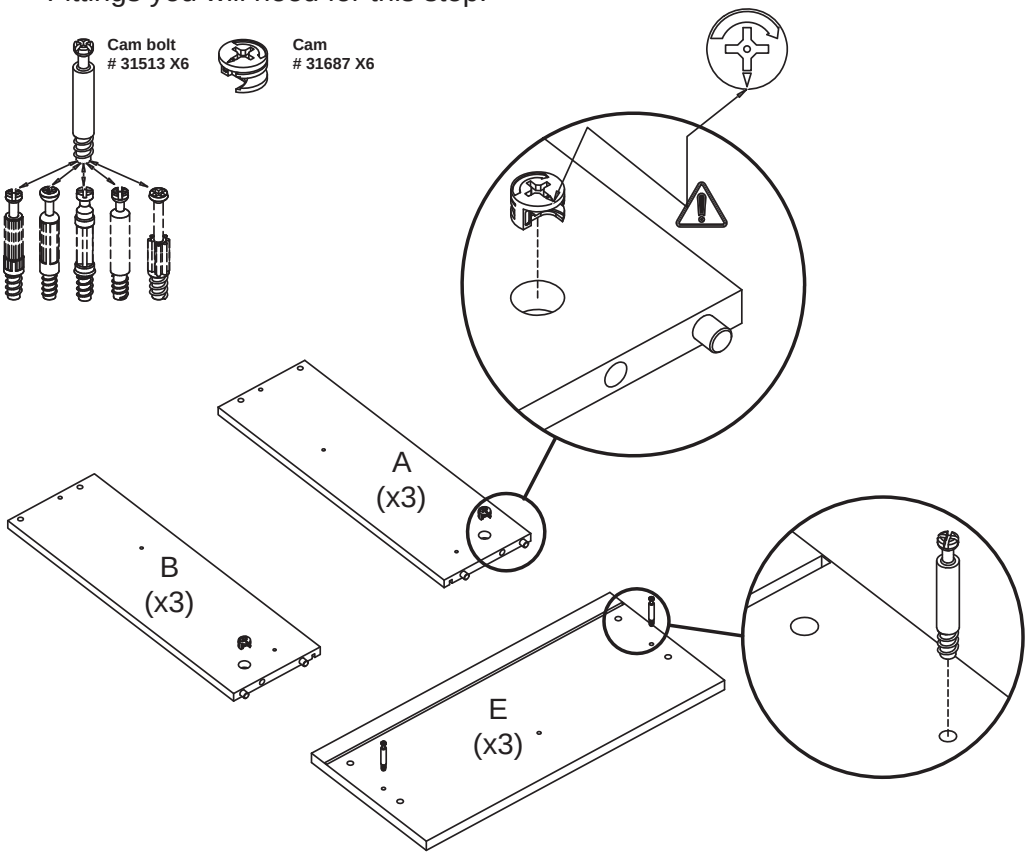

Step 29


Attaching drawer

Align holes at back of the drawer sides **B** + **A** with the holes on the drawer back **C**.

Make sure the groove is facing inside of the drawer.

Tap drawer fasteners **20228** into place with a hammer.

Fittings you will need for this step:

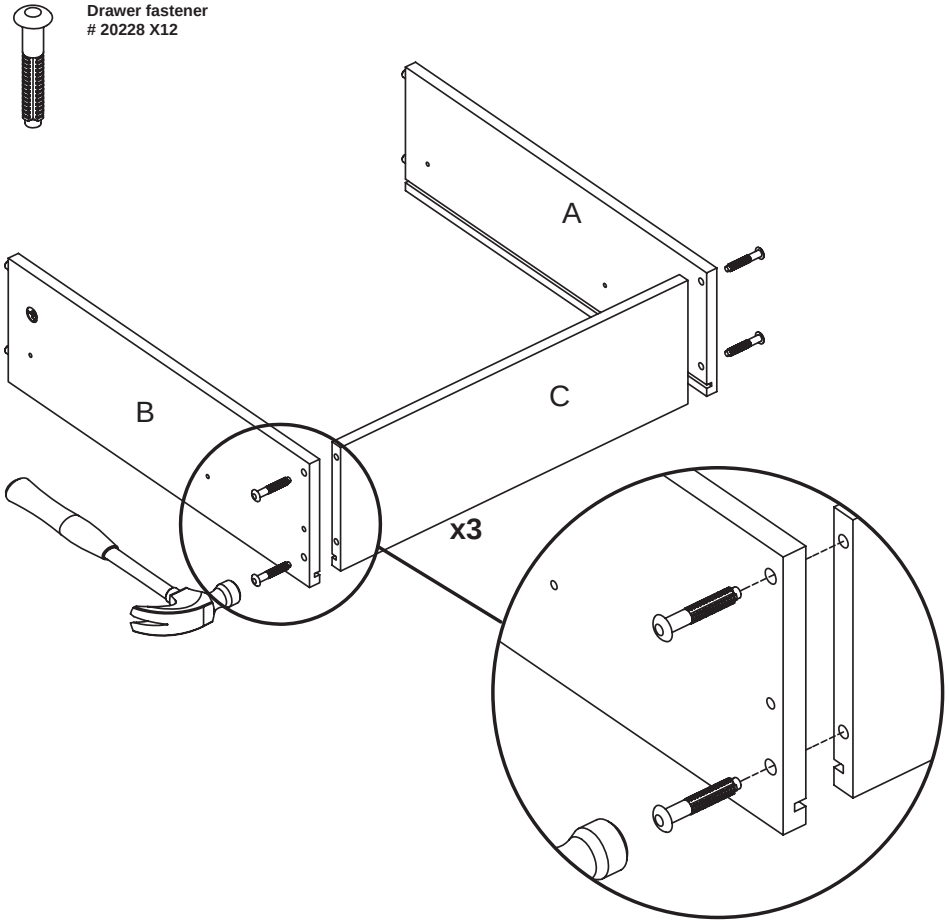


Assembly Instructions

Step 30

Attaching drawer bottom

Press the drawer bottom D smoothly in the grooves (finished side up).

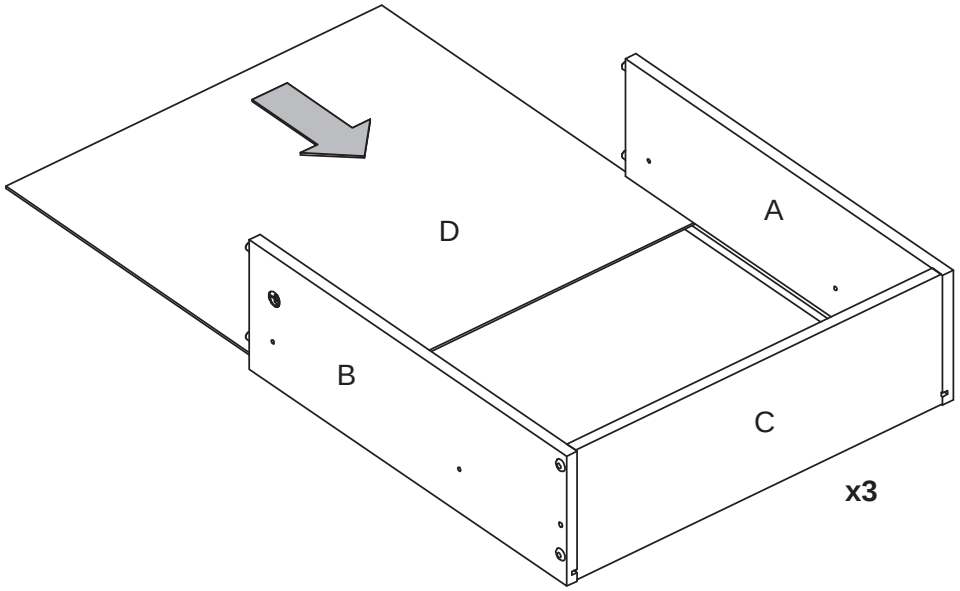


Step 31

Attaching drawer front

Attach the drawer front E by placing dowels and cam bolt in the correct holes. See the detail drawing.

Tighten the cams.

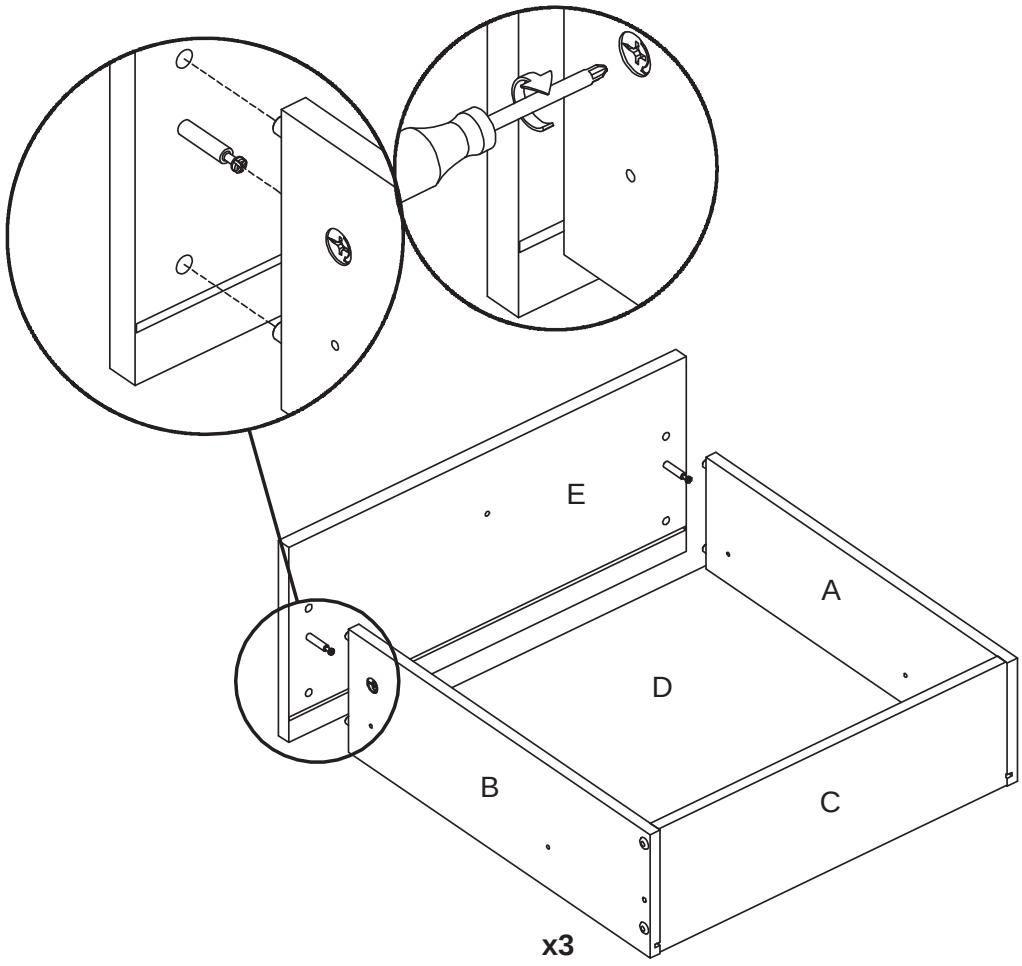


Assembly Instructions

Step 32

Attaching the drawer

Attach the handle **81040** in front of the drawer front **E**. Use machine screw **26232** to tighten the handle.

Fittings you will need for this step:

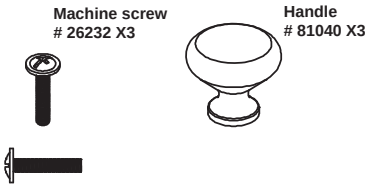


Step 33

Attaching the drawer

Attach the drawer support **11011** into holes on side panel **B** + **A**.

Fittings you will need for this step:



Assembly Instructions

Step 34

Insert stop


Insert stop **96203** on one shelf **UB** .

Pulling out the runners

Pull out all the runners, before placing drawers.

Fittings you will need for this step:

Stop
#96203 X2

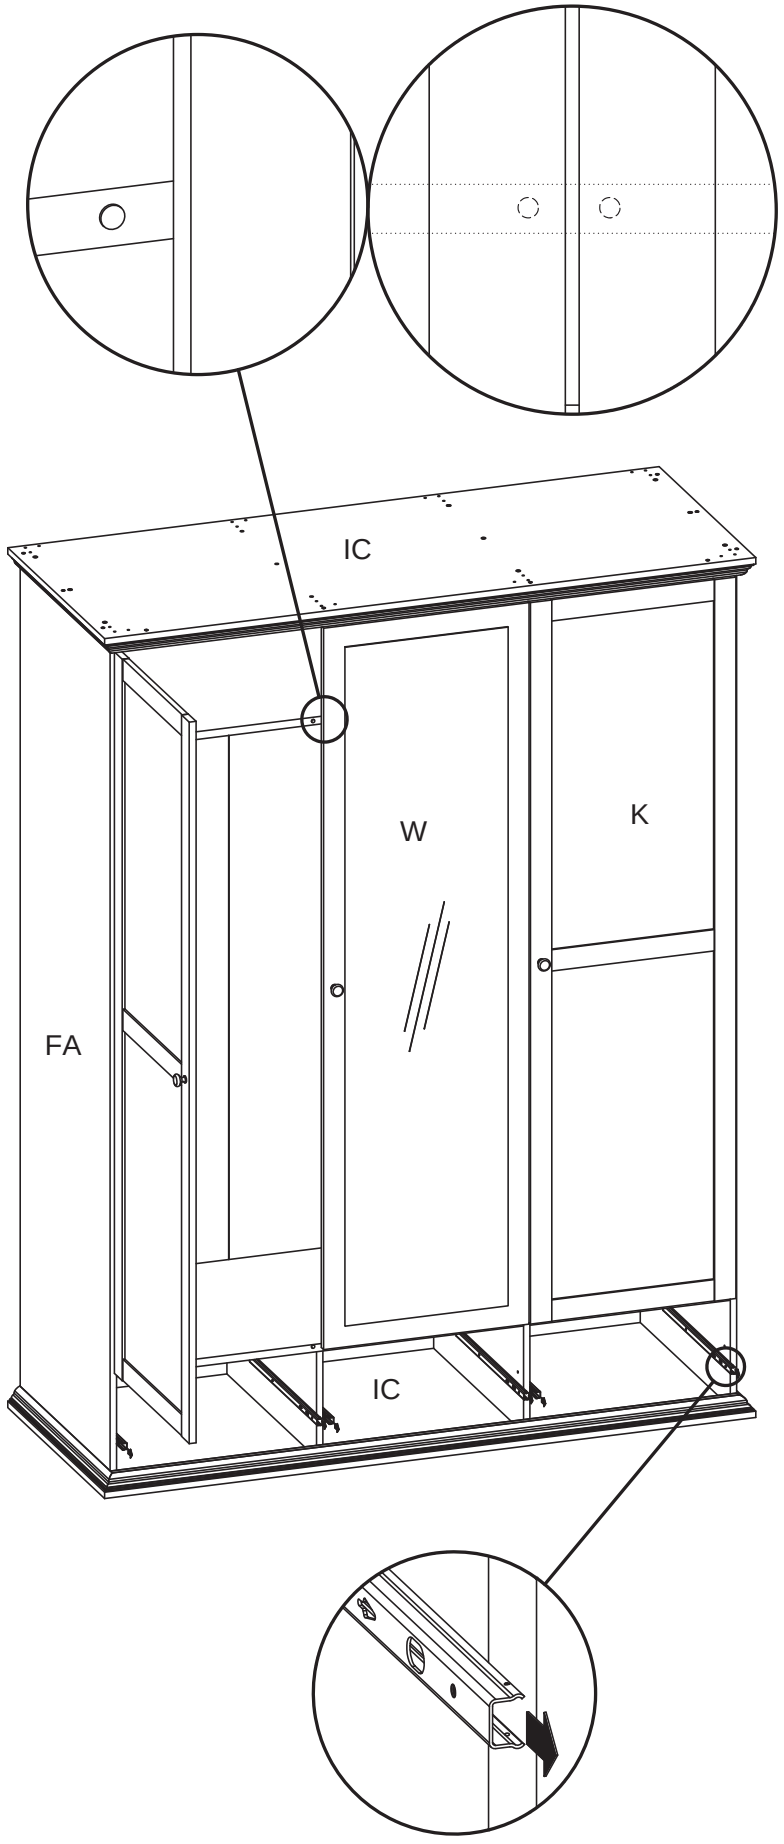

Assembly Instructions

Step 35

Attaching the drawers

1.

Place the drawer between 2 rails.

See picture.

2.

Adjust front of drawer up and down. Tight up and fix drawer to the rail useing machine screw **26221** from inside the drawer in both sides.

3.

Adjust back of drawer up and down. Tight up and fix drawer to the rail useing machine screw **26221** from inside the drawer in both sides.


Repeat these step for each of the remaining drawers.

Assembly is complete.


Fittings you will need for this step:



Machine screw
 # 26221 X12

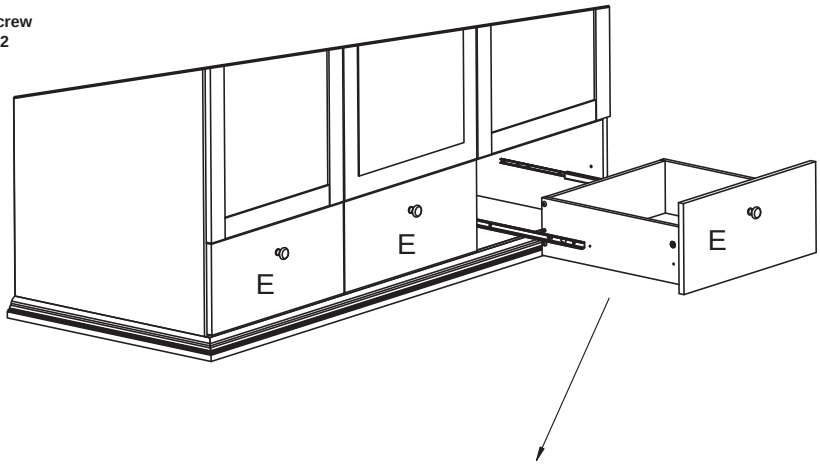

1.

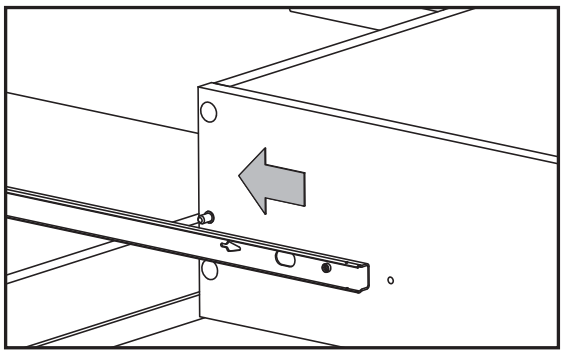


Drawer back

2.



x2

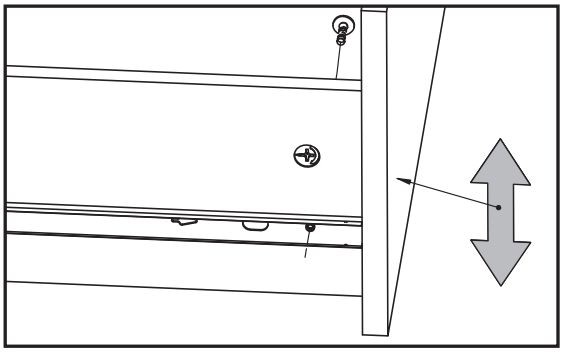


Drawer front

3.





x2

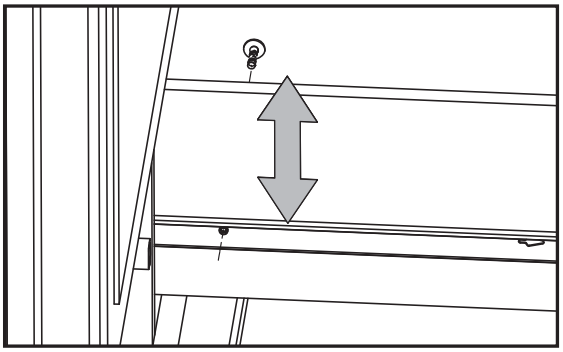


Drawer back


If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

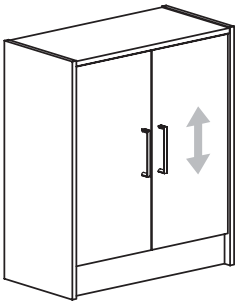

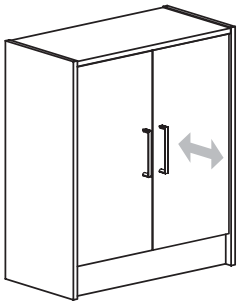


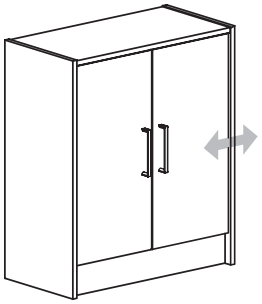


1.

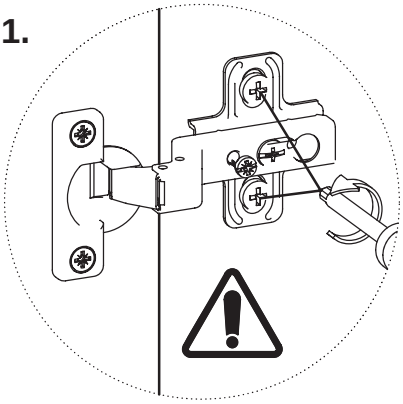


1.

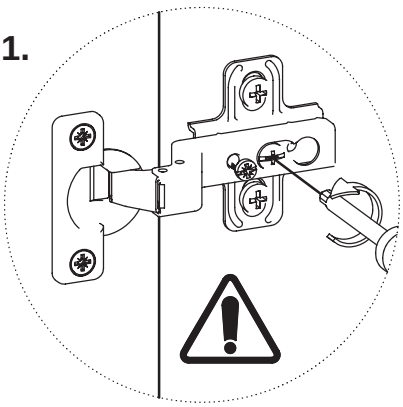


1.

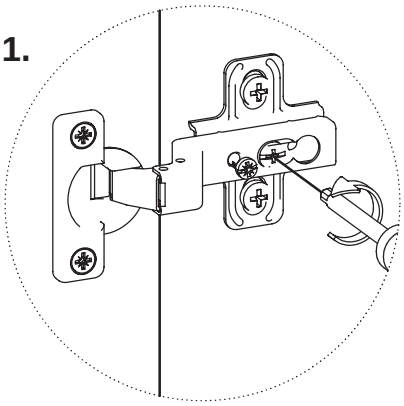


2.

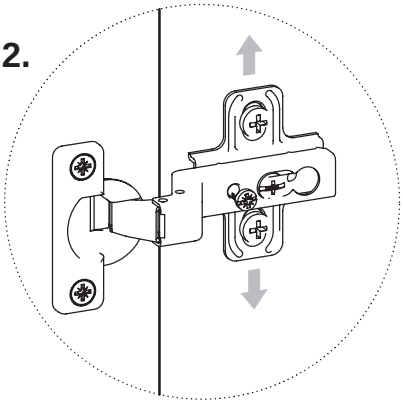


2.

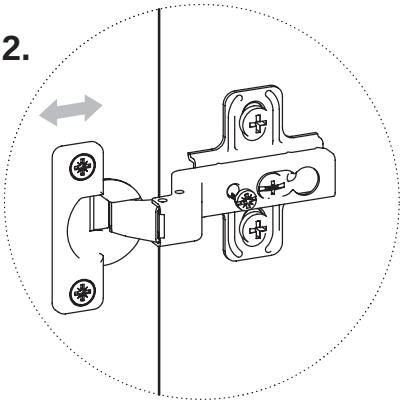


2.

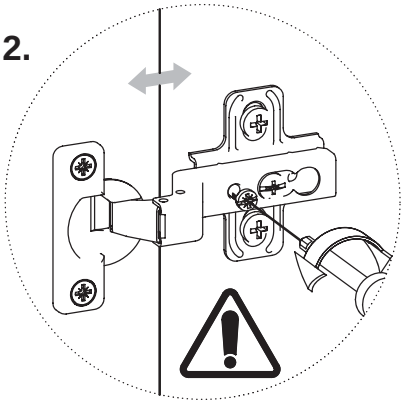

3.

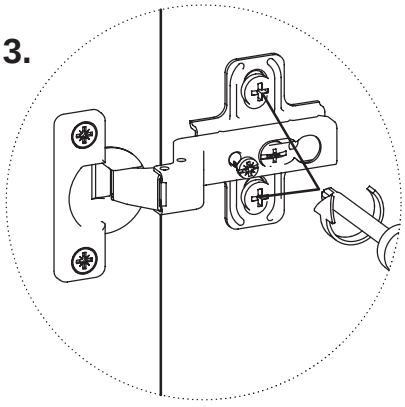

3.

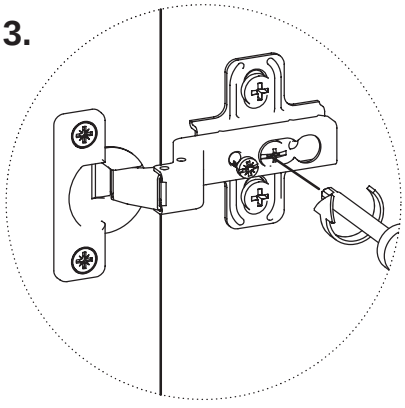

3.

