
Boltzero Bunk Bed

Assembly Instructions - Please keep for future reference

428/3256

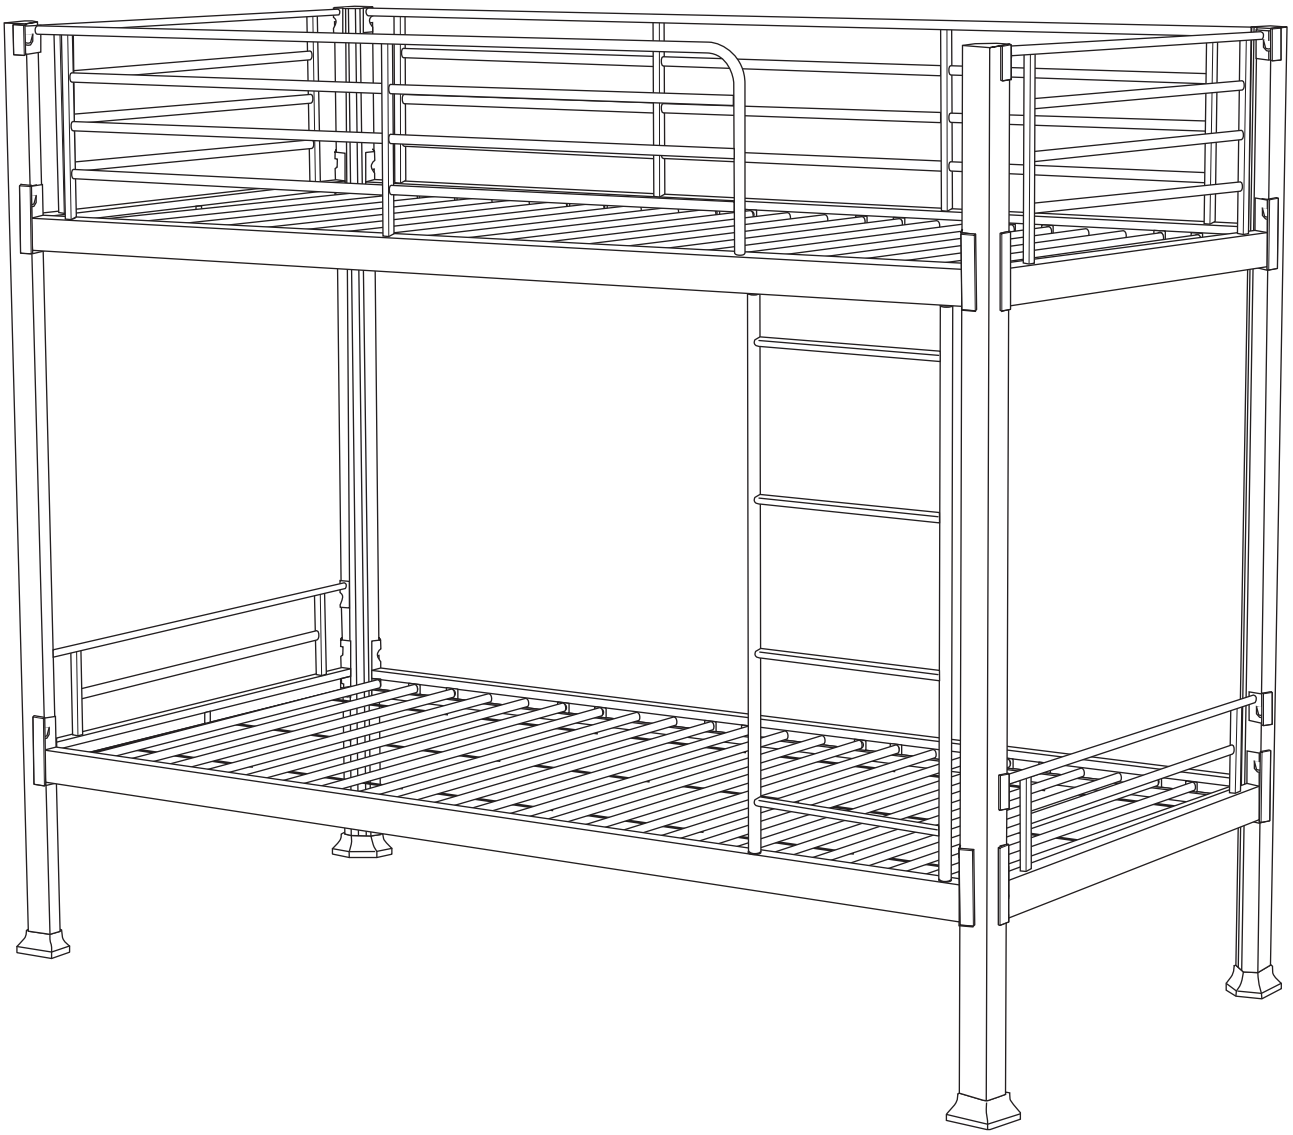

Dimensions

Width - 2010mm
Depth - 990mm
Height - 1630mm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 1 - 31/07/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• Unit weight: 41kgs.

Warnings

• **READ CAREFULLY - RETAIN FOR FUTURE REFERENCE**

• **WARNING:** High beds and upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls.

• **WARNING:** Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags.

• **WARNING:** Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75mm or shall be more than 230mm.

• **WARNING:** Do not use the bunk bed/high bed if any structural part is broken or missing.

• Always follow the manufacturer's instructions.

• The recommended size of the mattress is L1900 x W900mm.

• Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.

• Assembly instructions including a list of the parts supplied and details of any tools required to assemble the bed are included in the pack.

• The maximum thickness of the mattress is 190mm. Mattress maximum thickness marking on the product are found on the post.

• Check regularly that all assembly fastenings are properly tightened.

• **THIS BED COMPLIES WITH EN747-1:2012+EN747-2:2012**

Manufacturer: BL Packaging Co. Ltd.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**


Please check you have all the parts listed below

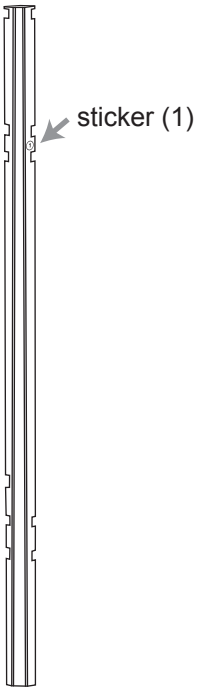


1 Back Left End Post

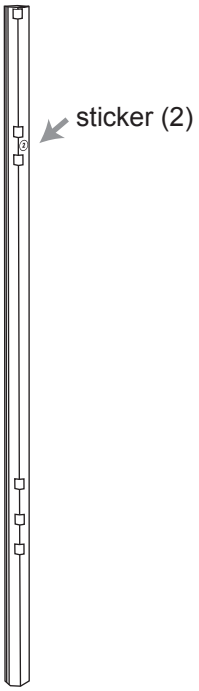


2 Front Left/Back Right End Post

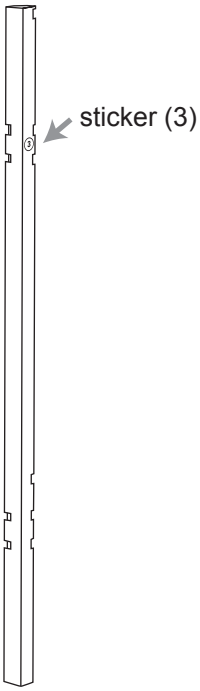


3 Front Right End Post

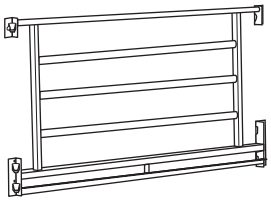


4 Upper Side Rail x 2

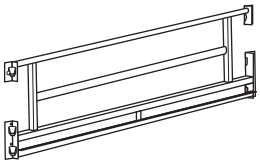


5 Lower Side Rail x 2

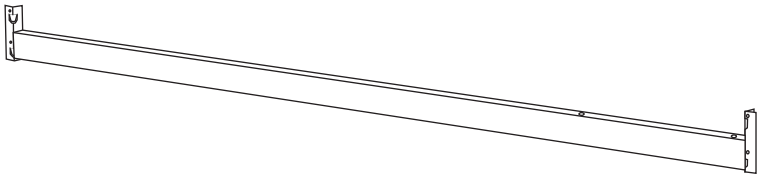

6 Lower Front Rail

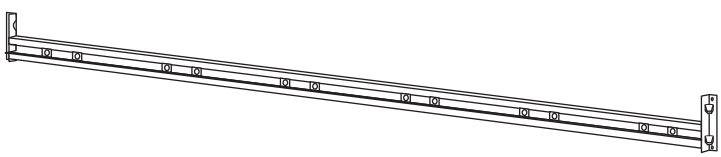


7 Lower Back Rail

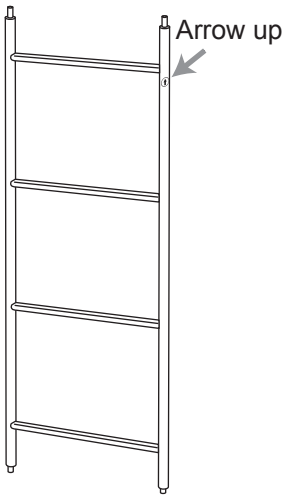


8 Ladder

Components - Parts (cont.)


Please check you have all the parts listed below

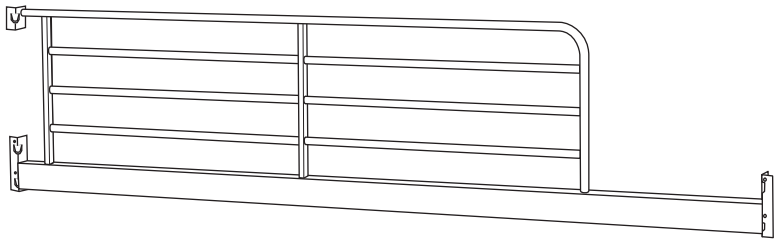

9 Upper Front Safety Rail

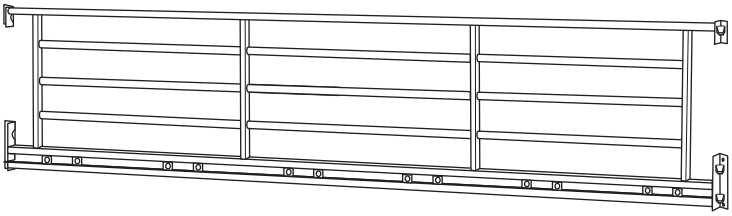

10 Upper Back Safety Rail








11 Slat x 12


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Footing x 4	**B**  Long Cap x 16	**C**  Short Cap x 11
D  Washer x 4	**E**  Short Stiap x 1	**F**  Metal Slats Pusher x 1

Tools required




Rubber Mallet (Not Provided)


Assembly Instructions

Step 1

Attaching footings

Attach footings Ⓐ to end posts 1 , 2 and 3 as shown.

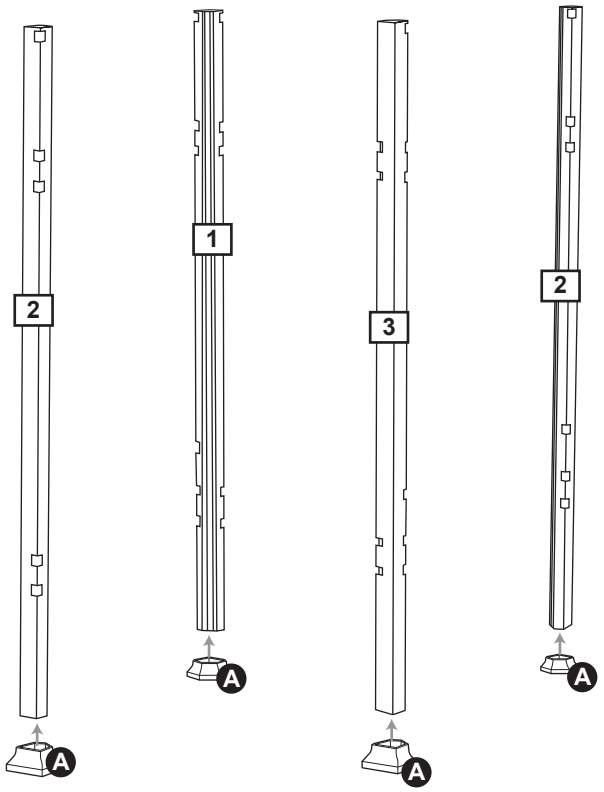


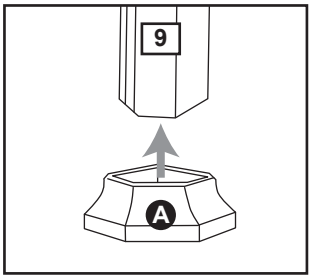


Step 2

Attaching lower side rails

With the help of an assistant holding the end posts, attach the lower side rails 5 to the end posts as shown. Insert into holes on the end posts first then push down the siderails to lock.

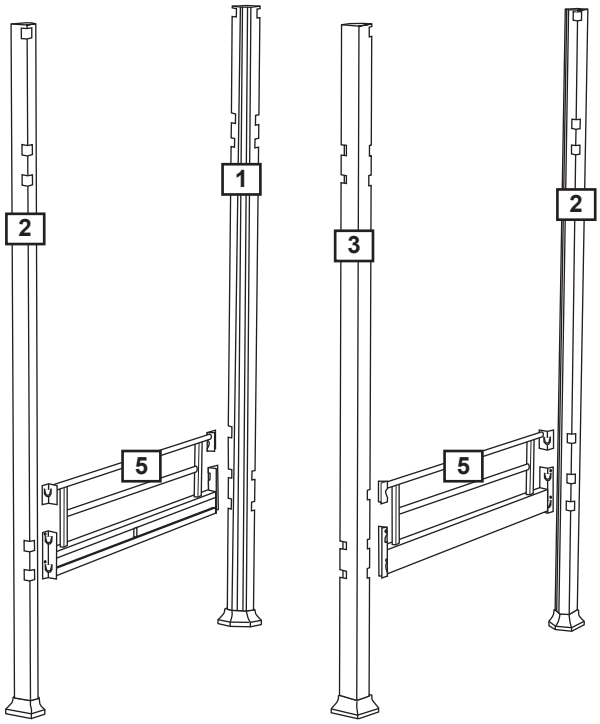


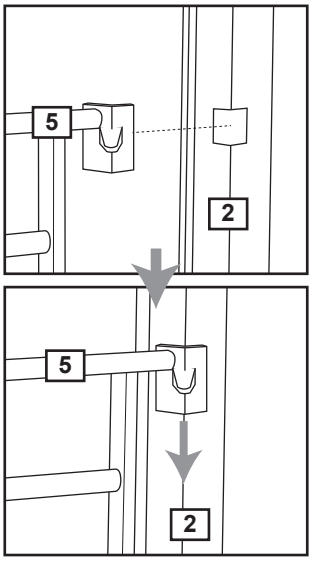

Step 3

Attaching upper side rails


Attach the upper side rails 4 to the end posts as shown. Insert into holes on the end posts first then push down the rails to lock.

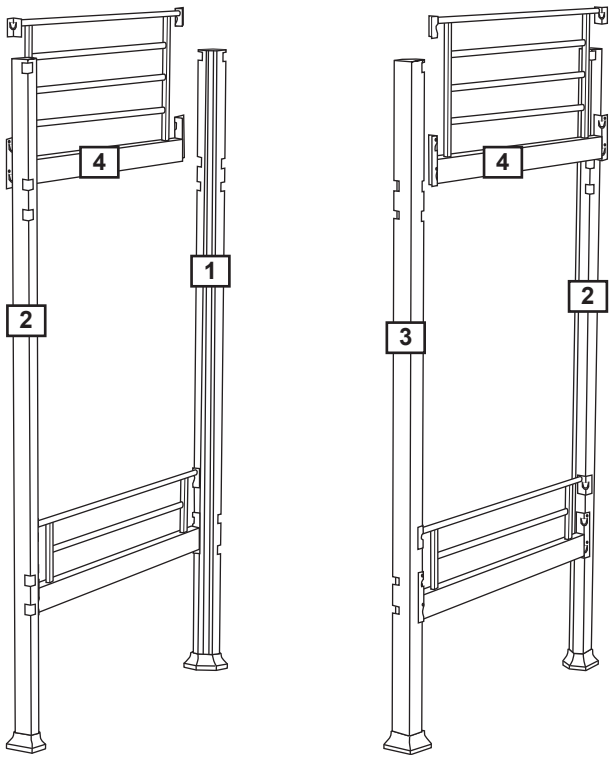

Step 4

Attaching lower rails

Attach the lower front rail 6 and lower back rail 7 to the end posts 1 and 2 as shown. Insert into holes on the end posts first then push down the rails to lock.

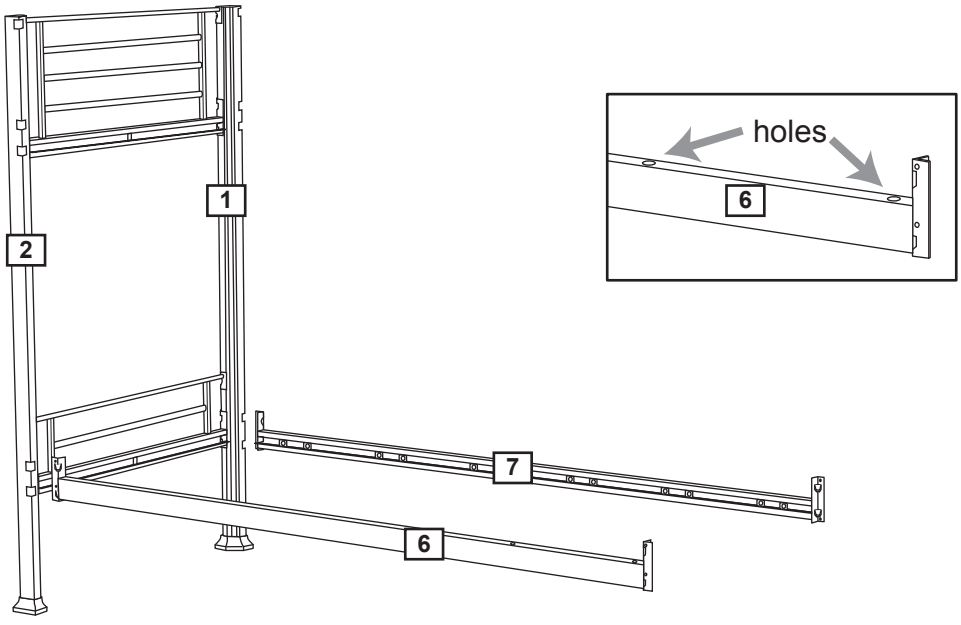


Assembly Instructions

Step 5

Attaching right hand end panel


Attach the lower front rail [6] and lower back rail [7] to the other end posts [2] and [3] as shown. Insert into holes on the end posts first then push down the rails to lock.

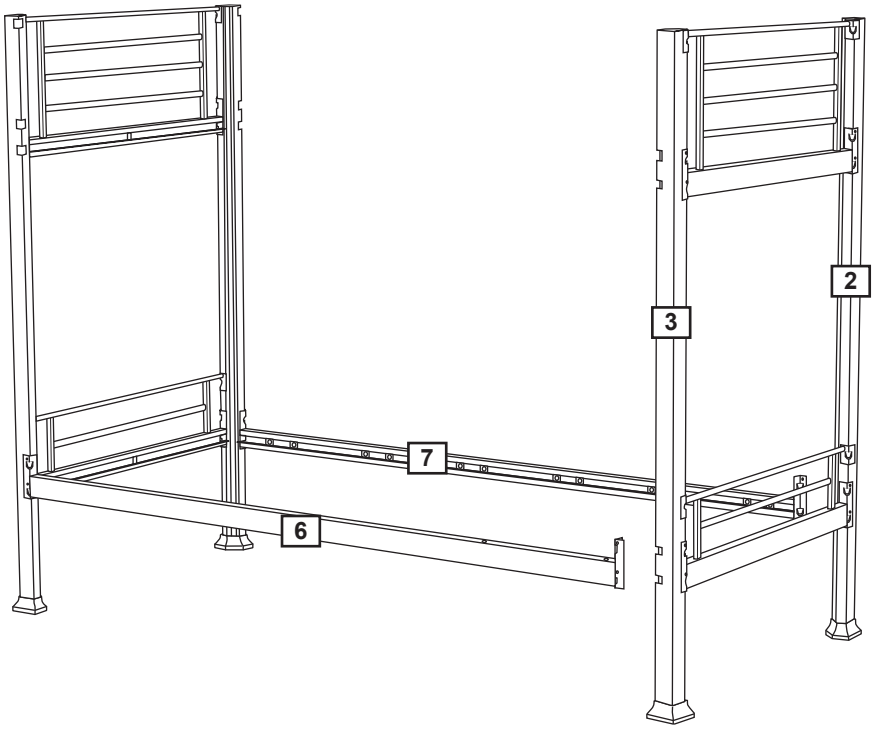

Step 6

Attaching upper back safety rail

Attach the upper back safety rail [10] to the end posts [1] and [2] as shown. Insert into holes on the end posts first then push down the rails to lock.

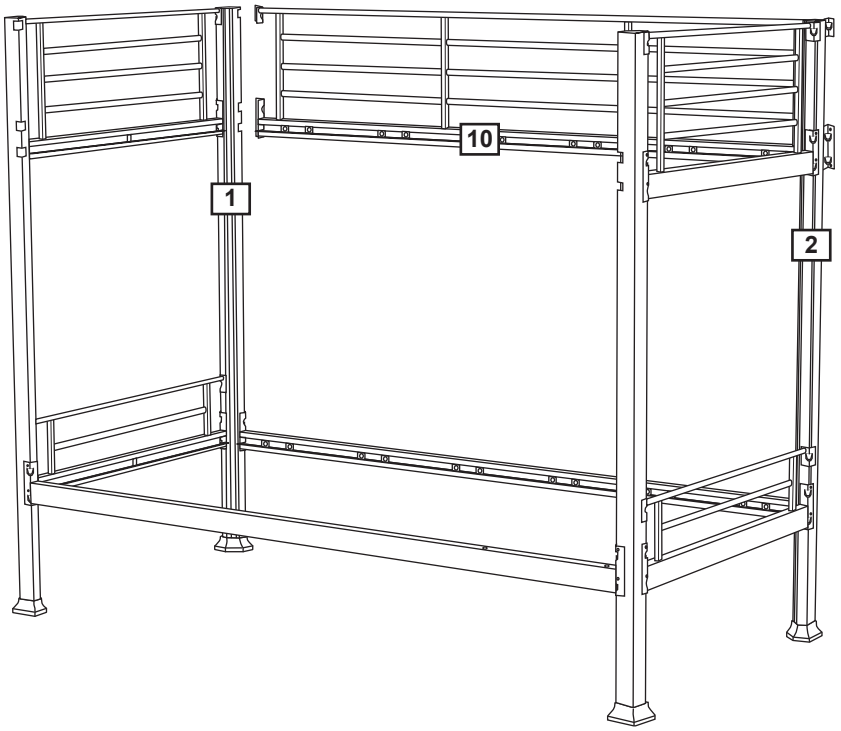



Step 7

Attaching ladder

Attach the ladder 8 into holes on washers D and the lower front rail 6 as shown.

Note: Make sure to position the ladder with the arrow sticker on the ladder pointing up.

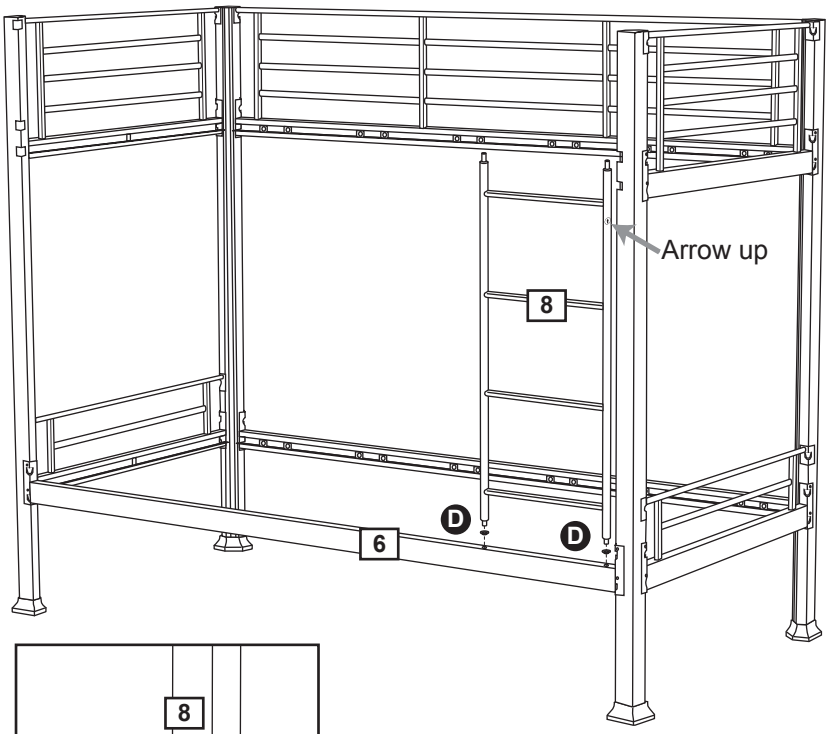


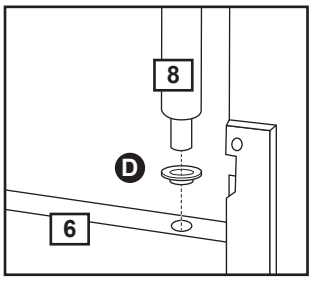



Step 8

Attaching upper front safety rail

Position the upper front safety rail 9 and hold to align and insert the ladder 8 and washers D into holes as shown. Before fully inserting the ladder, insert the upper front safety rails into holes on the end posts 2 and 3. Then push down the rails to lock.

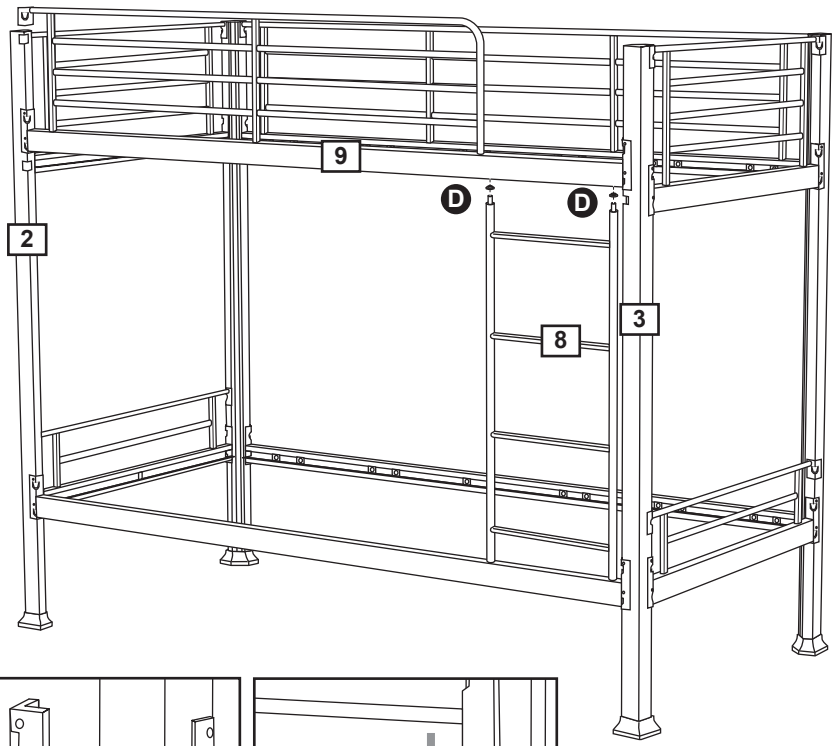

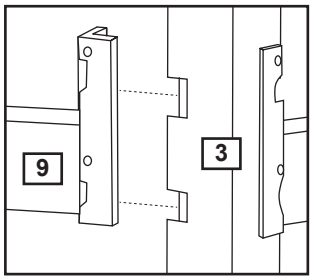

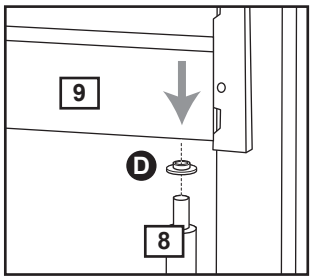

Assembly Instructions


Step 9


Attaching upper slats


Note: Before attaching the slats 11 , carefully make adjustments to ensure the bed frame is straight.

Note: Position the horizontal rail below when attaching the slats onto the bed.

Starting on one end, attach the slats 11 one by one into upper rails (9) and (10). Push to insert the button on the slats into the hole on the rails as shown. Make sure it is lock when you hear the 'click' sound. Insert one end of the slats first before inserting and locking the other end.

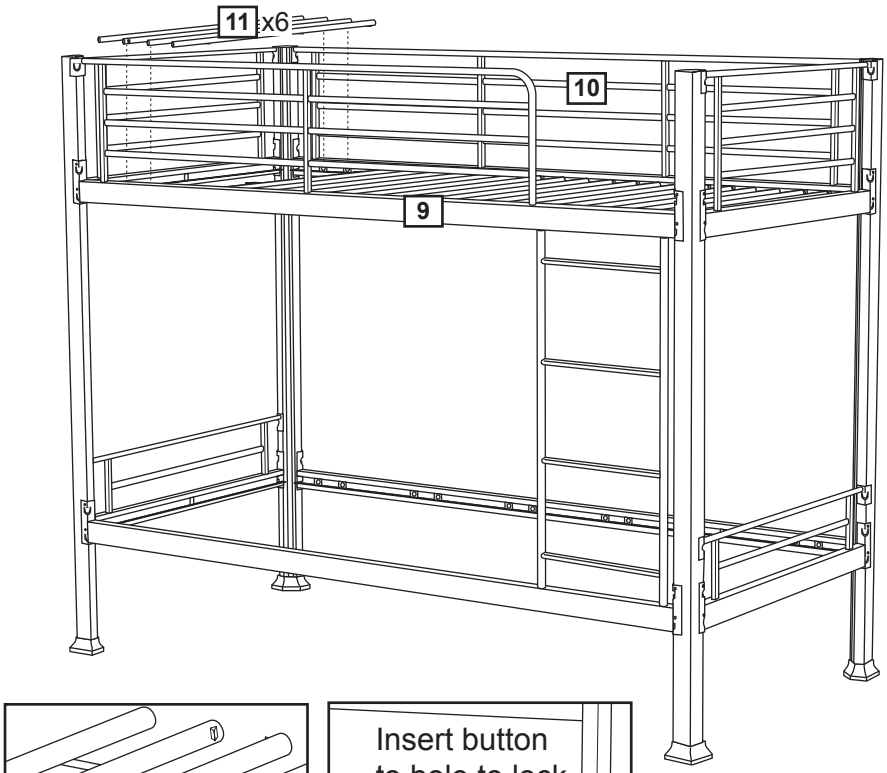

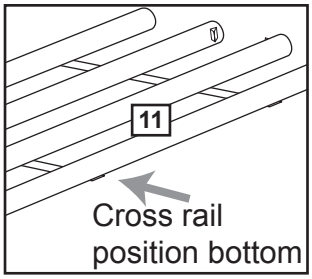


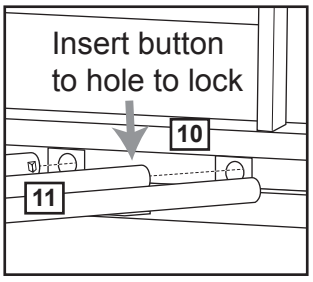

Step 10

Attaching lower slats

Repeat step 9 to attach the other slats 11 into holes on lower rails 6 and 7 .

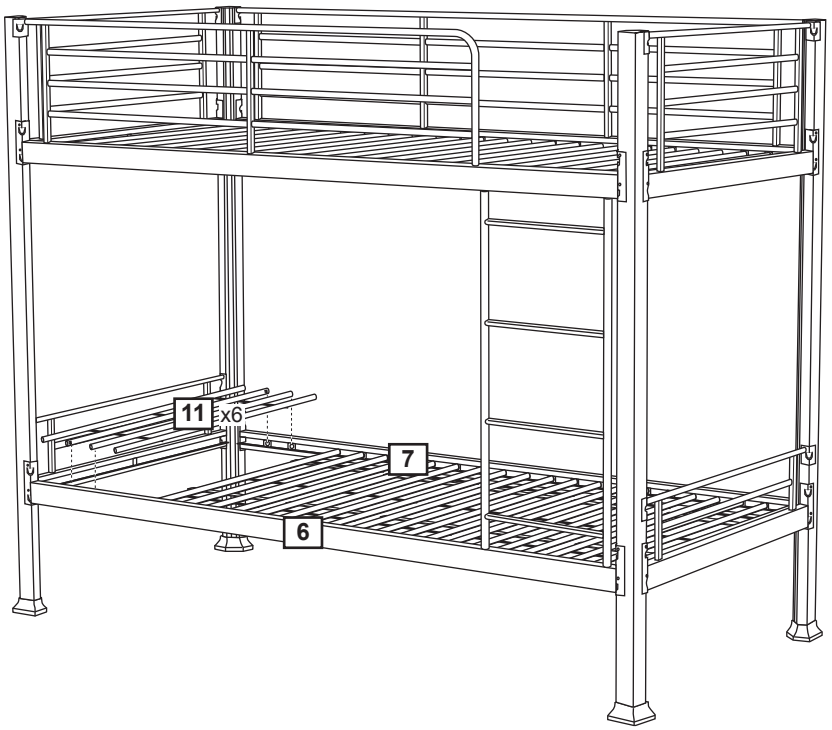



Assembly Instructions

Step 11

Attaching caps

Attach long caps B and short caps C into holes on the end posts as shown. Insert and lock it carefully into holes by using a rubber mallet.

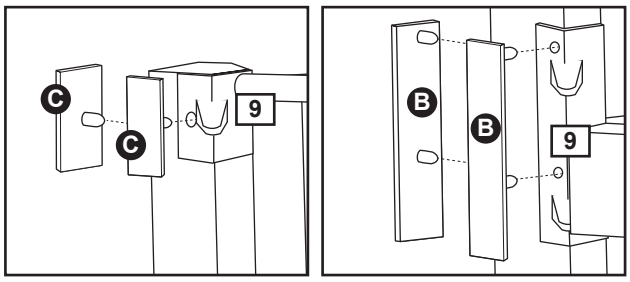

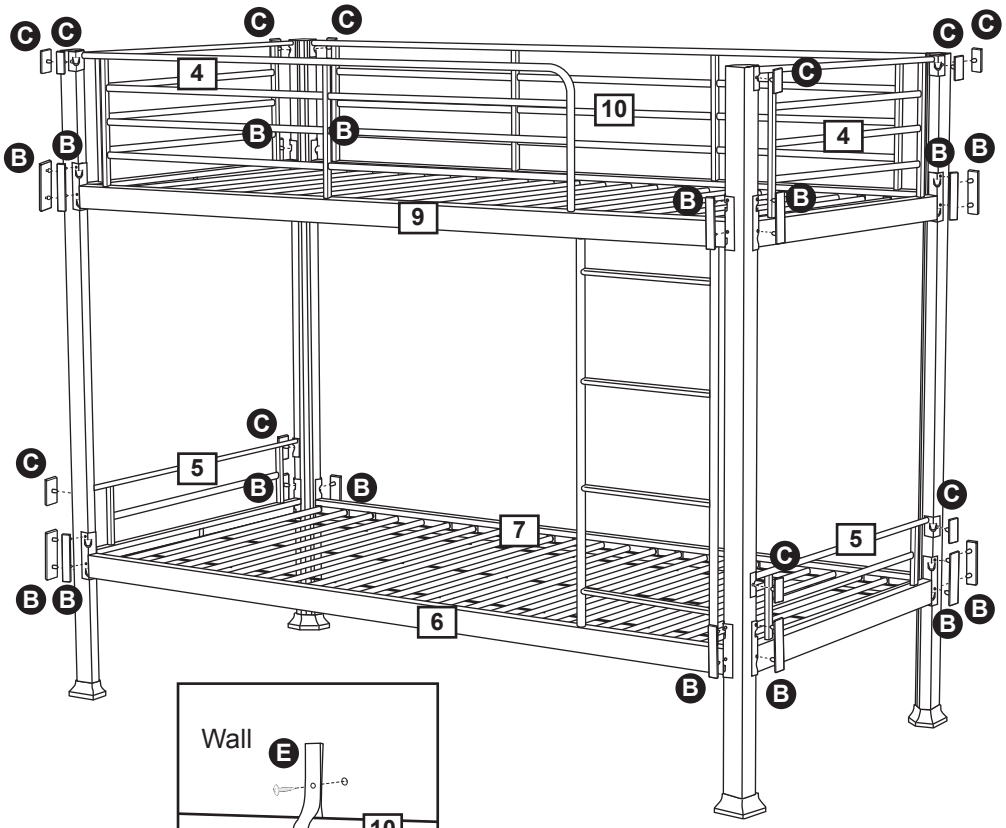

Step 12


Fixing to wall

This unit must be fixed to a wall.

Move the bunk bed into position on the wall. Position the short strap E to the top post of upper back safety rail 10 to mark fixing holes on the wall. Remove the wall strap then drill holes and insert appropriate wall plugs. Reposition short strap E and fix using appropriate screws.

Warning:
Before drilling, check wall for hidden pipes and cables. Consult a qualified specialist if unsure.

Assembly is complete.

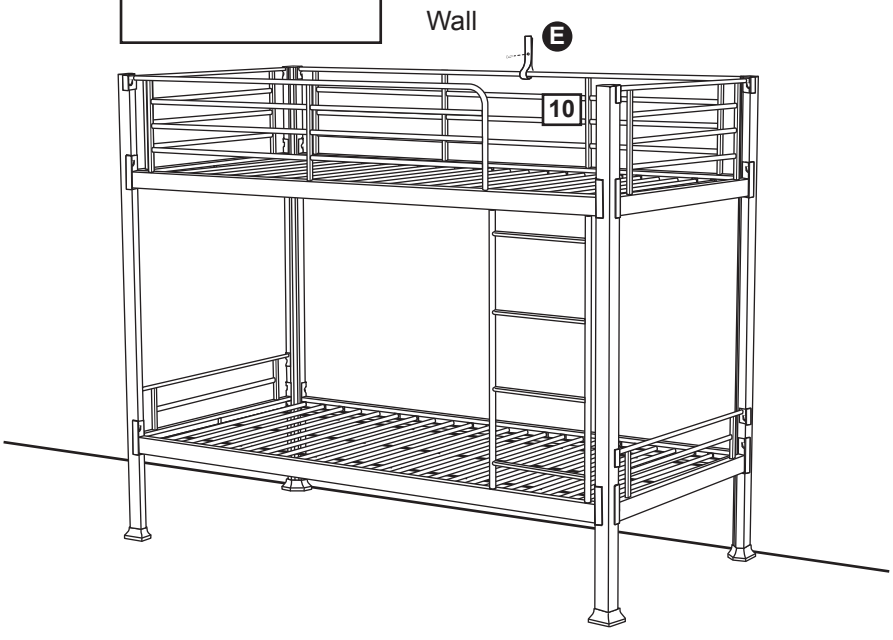

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

A Guide to - **Wall Mounting** & **Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fxings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. **Consult a qualifed tradesperson if you are unsure**.

Hints:

1: ***General rule***: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well ftted and are a tight ft in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "**General Purpose**" **wall plug**

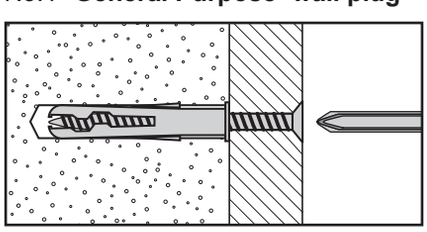


Generally aerated blocks should not be used to support heavy loads, use a specialist ftting in this case. For light loads, general purpose wall plugs can be used.

No.2 "**Plasterboard**" **wall plug**

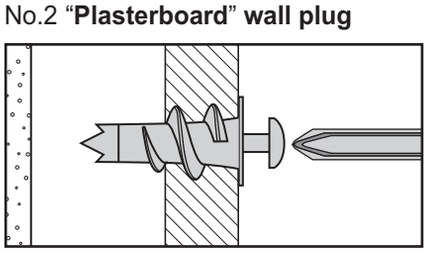


For use when attaching light loads on to plasterboard partitions.

No.3 "**Cavity Fixing**" **wall plug**

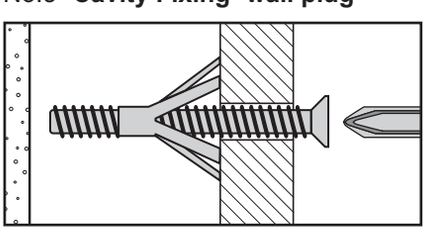


For use with plasterboard partitions or hollow wooden doors.

No.4 "**Cavity Fixing-Heavy Duty**" **wall plug**

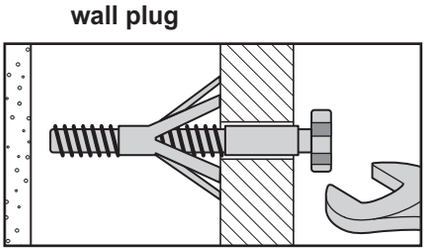


For use when ftting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "**Hammer Fixing**" **wall plug**

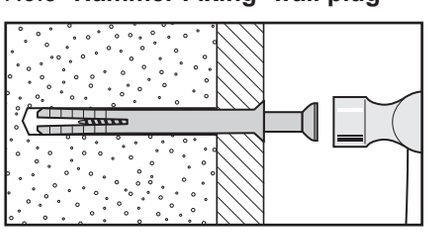

For use with walls stuck with plasterboard. The hammer fxing allows it to be fxed to the wall rather than the plasterboard. Always check the fxing is secure to the retaining wall.

No.6 "**Shield Anchor**" **wall plug Heavy loads**

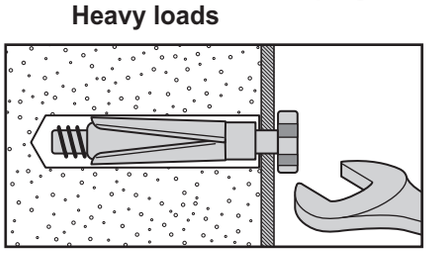

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance


Safety: Always check the ftting and location to ensure your safety in and around the home.

Fitting: From time to time check the ftting to ensure the wall plugs or screws do not become loose.

Revision 2 - 7/10/09

Guide to Disassembling the Slats

Tools required



Metal Slats Pusher (Provided)
Please keep this tool for future use.

Use the metal slats pusher to remove the slats as shown in the diagram. Insert it into the front/back/safety rails then pull it until the slats is detached.

