
Capella - 5 Drawer Chest

Assembly Instructions - Please keep for future reference

262/0804
266/7788
267/5660
254/9703
227/4061
247/7284
266/5735
274/3877

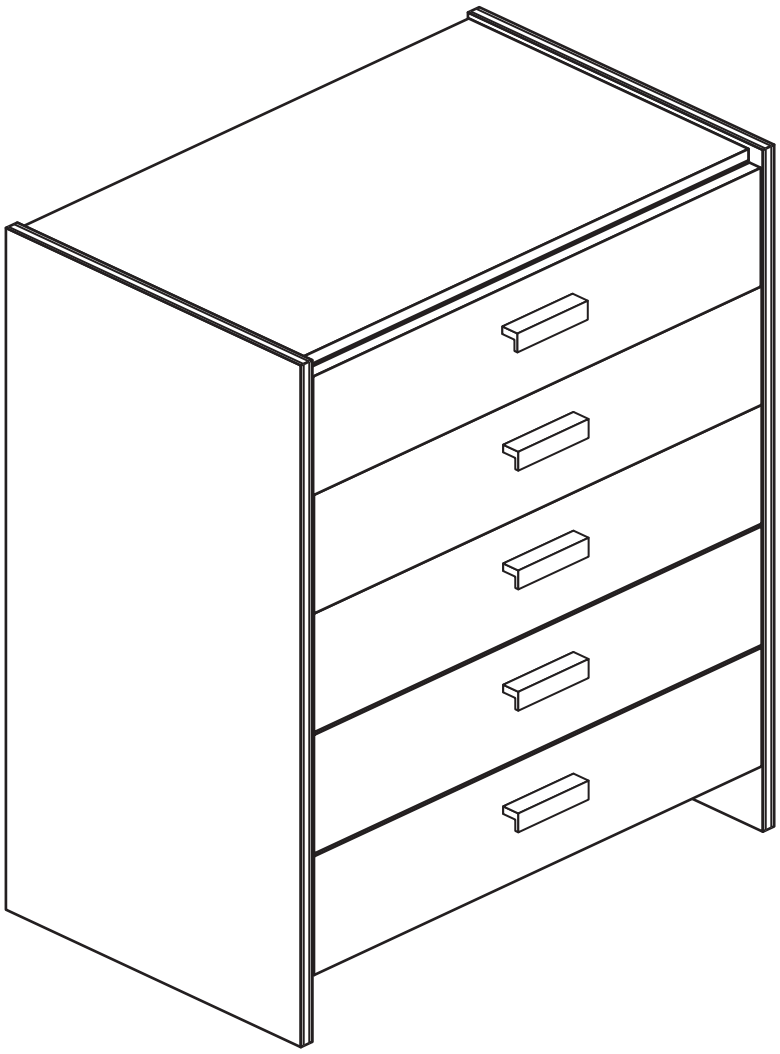

Dimensions
Width - 63cm
Depth - 39cm
Height - 90.4cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 7 - 21/05/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 27kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

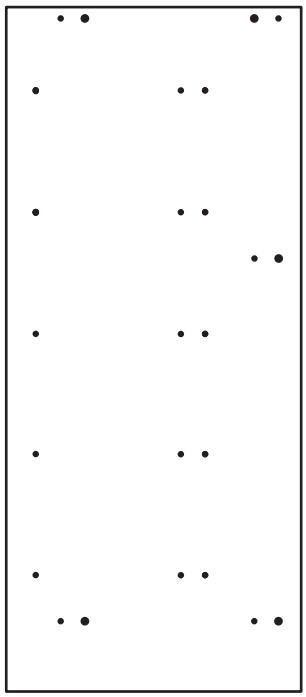


1 Left Side *(D1011A)*
(904 x 390mm)

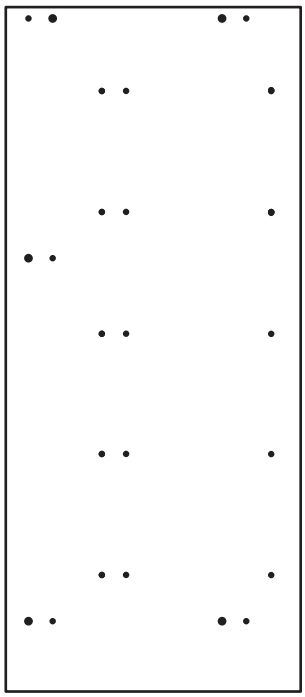


2 Right Side *(D1012A)*
(904 x 390mm)



3 Top *(D1008A)*
(596 x 369mm)



4 Rail *(D1009A)*
(596 x 103mm) x 3

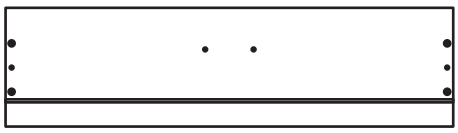

5 Drawer Front *(D1010A)*
(592 x 157mm) x 5




6 Left Drawer Side *(W370-124LH)*
(370 x 124mm) x 5




7 Right Drawer Side *(W370-124RH)*
(370 x 124mm) x 5



8 Drawer Back *(W564 - 124)*
(564 x 124mm) x 5



9 Drawer Base *(T575 - 367)*
(575 x 367mm) x 5

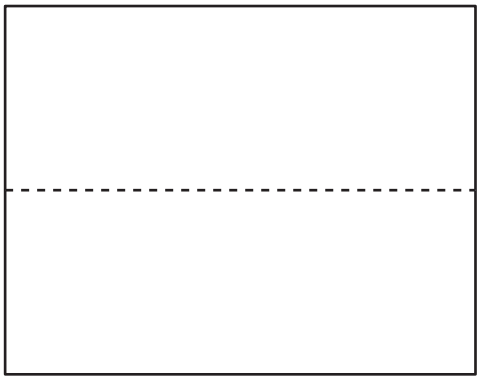


10 Back *(X828A)*
(622 x 807mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 10

B 

Metal dowel *(F901)* x 20

C 

Nail *(F51)* x 16

D 

Large locking nut *(F900)* x 10

E 

Small locking nut *(F3)* x 10

F 

Knock-in Peg *(F171)* x 20

G 

25mm Screw (*F50)* x 10

H 


9mm Screw *(F74)* x 10

I 

9mm Screw (*F73)* x 20

J 


Drawer runner *(F1004)* x 10

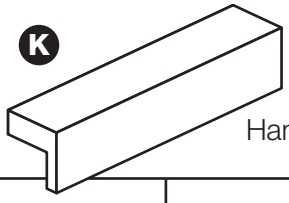K 

Handle *(F930)* x 5

L 


13mm Screw *(F79)* x 1

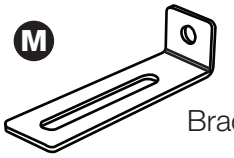M 

Bracket (*F327)* x 1


N 

Wedgefix *(F639)* x 20

O 

Plastic Nail *(F91)* x 4

Tools required

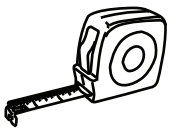

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

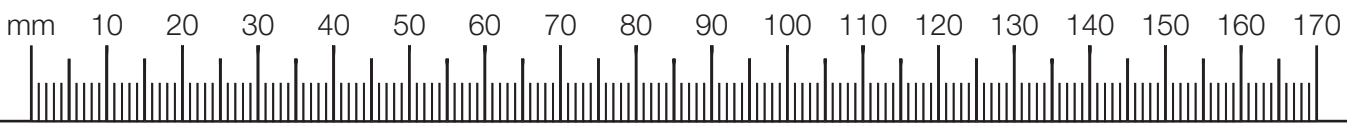

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 5.

Note: Tighten the metal dowels up fully against the panels.

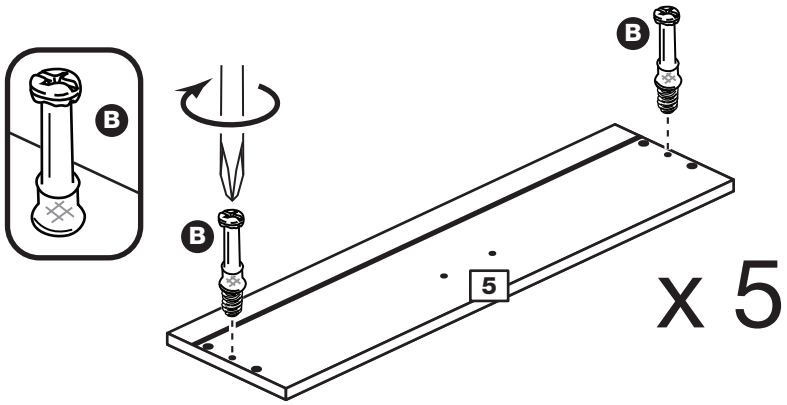


Step 2

Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 6 and right drawer side 7.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

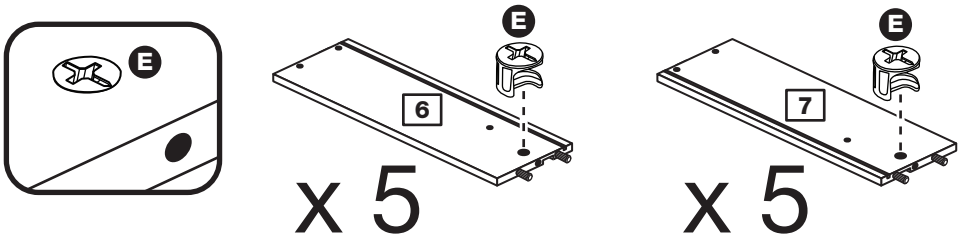

Step 3


Attach the drawer sides to the drawer fronts

Push the left drawer sides 6 and right drawer sides 7 onto the back of the drawer fronts 5.

Turn the small locking nuts E on the left drawer side 6 and right drawer side 7.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

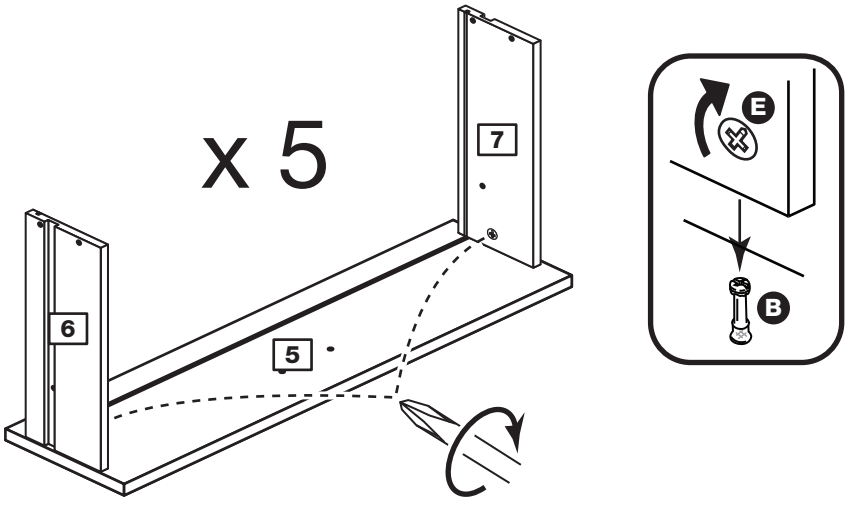


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 9 down the grooves in the drawer sides 6 and 7 and down into the groove in the drawer front 5.

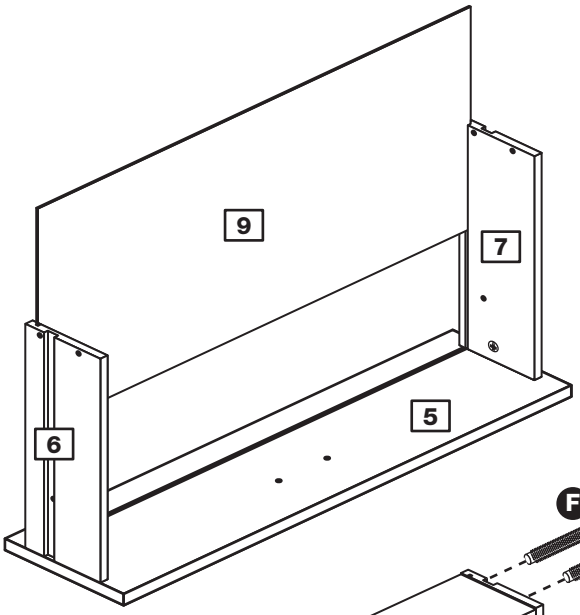

x 5


Step 5

Fit the drawer back

Fit the drawer back 8 between the drawer sides 6 and 7.

Make sure that the drawer base 9 fits into the groove in the drawer back 8.

Hold the drawer back 8 in position and tap the knock-in pegs F through the holes in the drawer sides 6 and 7.

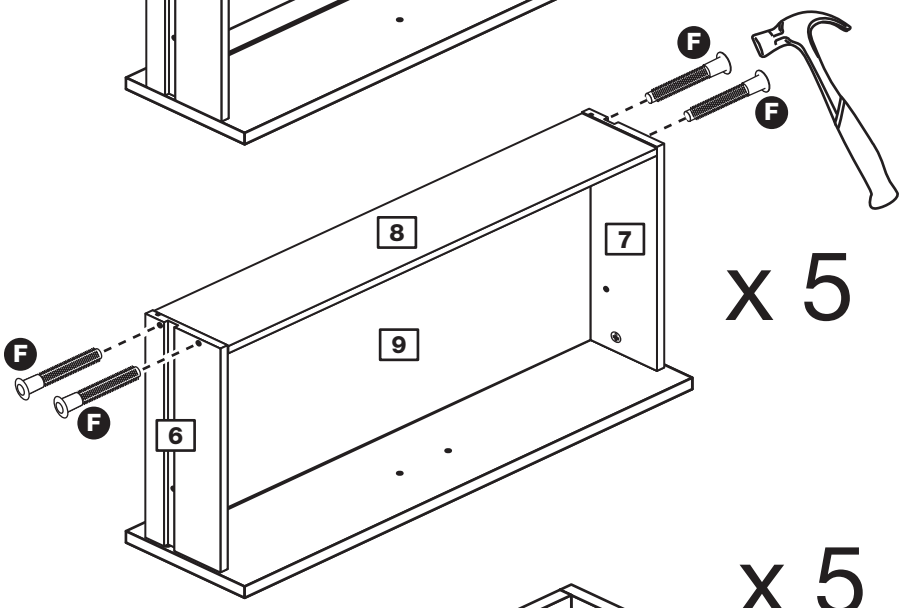


x 5

Step 6

Attach the handle

Attach a handle K to each drawer front 5 using 2 screws G.

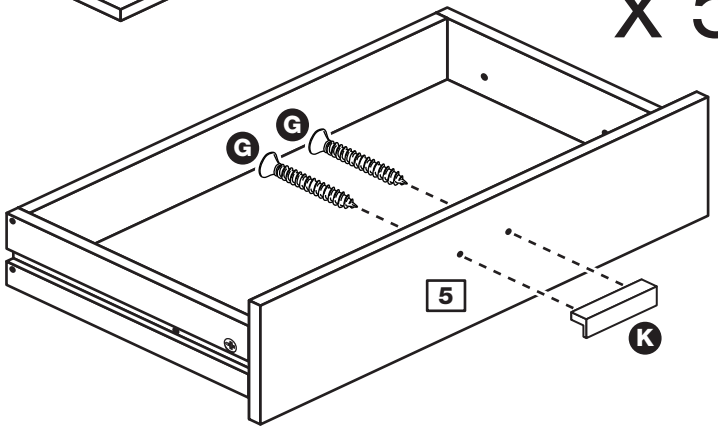


x 5

Step 7

Fit the wedgefixes

Turn the large drawer assemblies over and slide 4 wedgefixes N into the front and back grooves, as shown, and tighten up the screws.

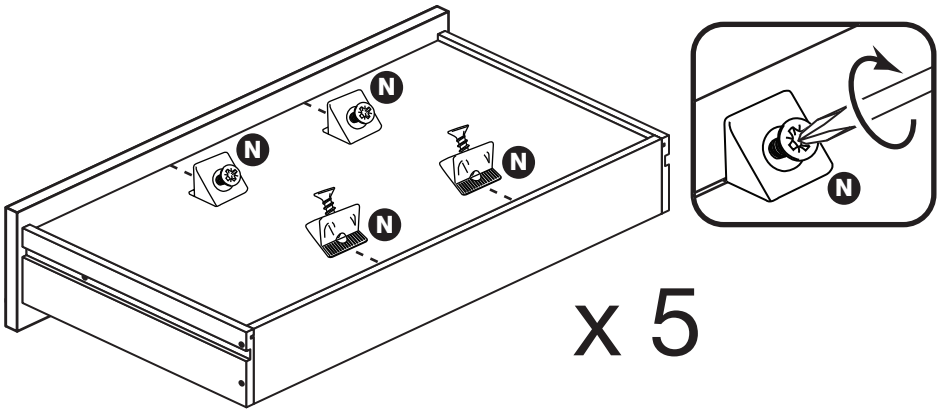


x 5

Step 8


Prepare the left side

a: Place 5 runners J on the left side 1 . Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

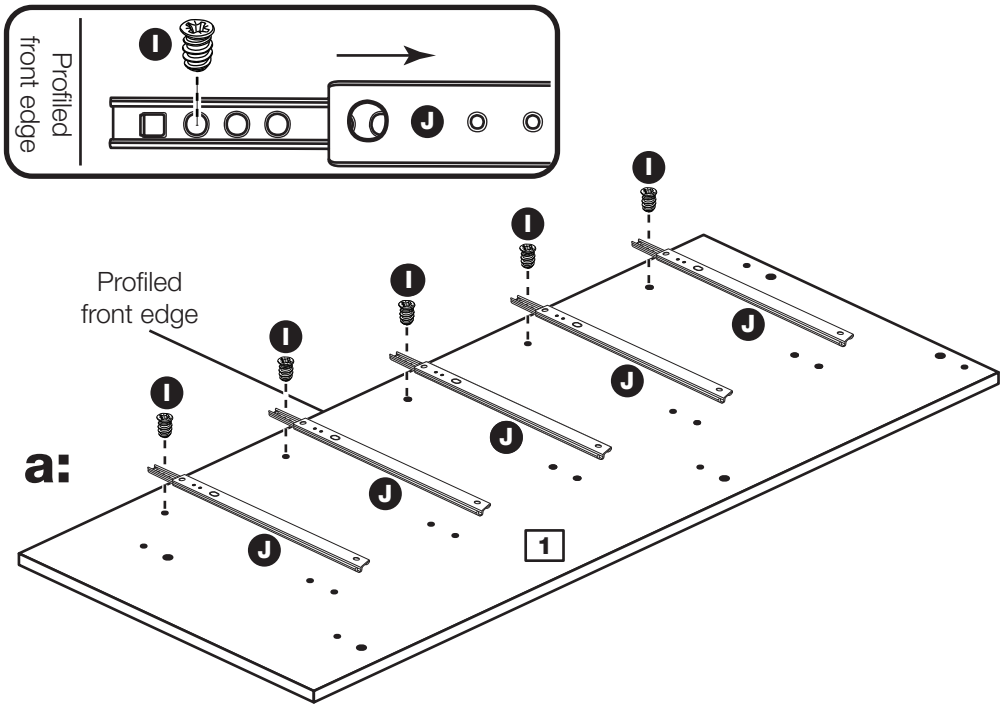


b: Slide the runner back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.

Tap 2 plastic nails O into the bottom edge of the side 1.

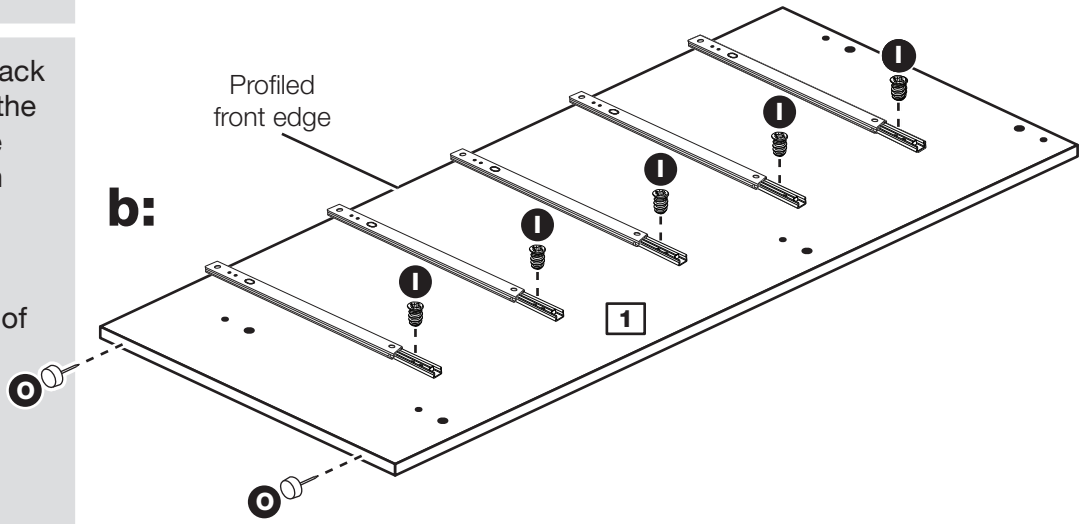


c: Screw 5 metal dowels B into the left side 1.

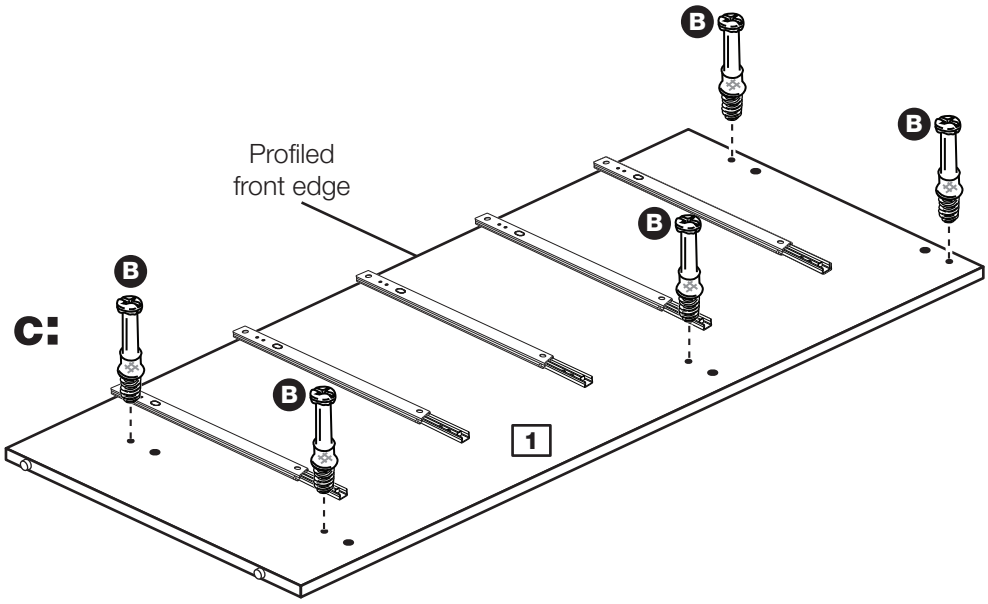

Step 9


Prepare the right side

a: Place 5 runners J on the right side 2. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

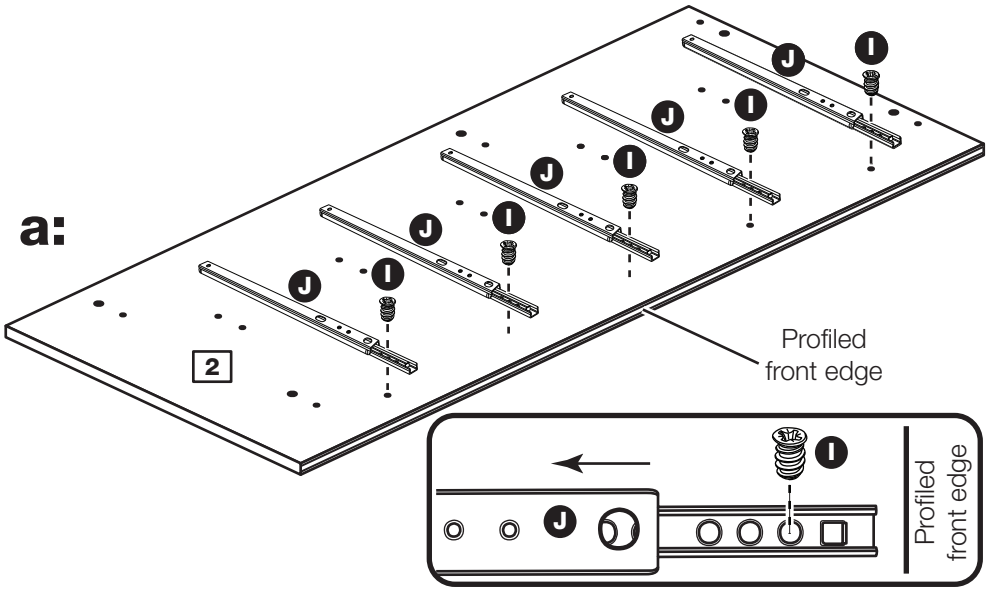


b: Slide the runner back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.

Tap 2 plastic nails O into the bottom edge of the side 2.

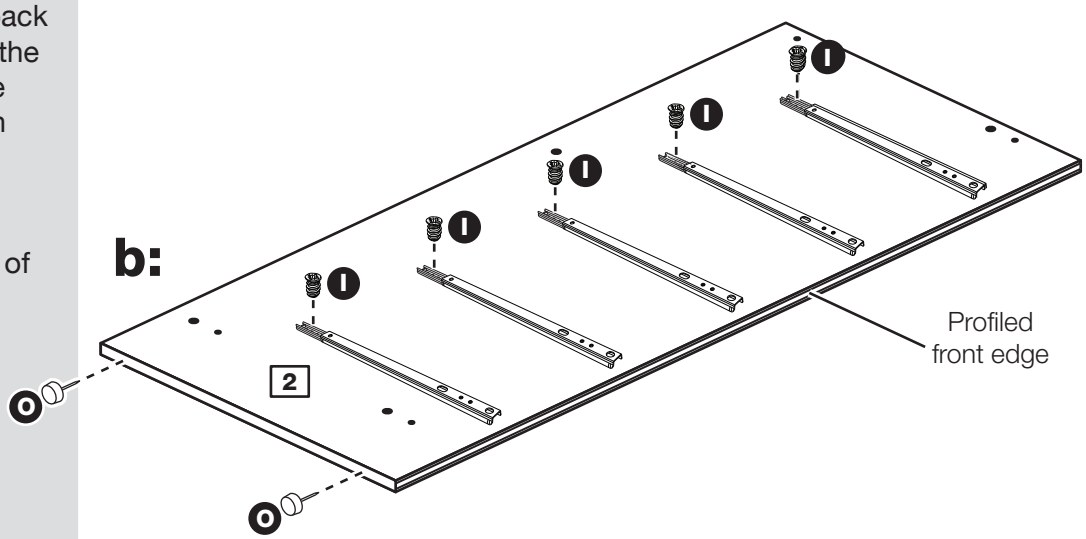

c: Screw 5 metal dowels B into the right side 2.

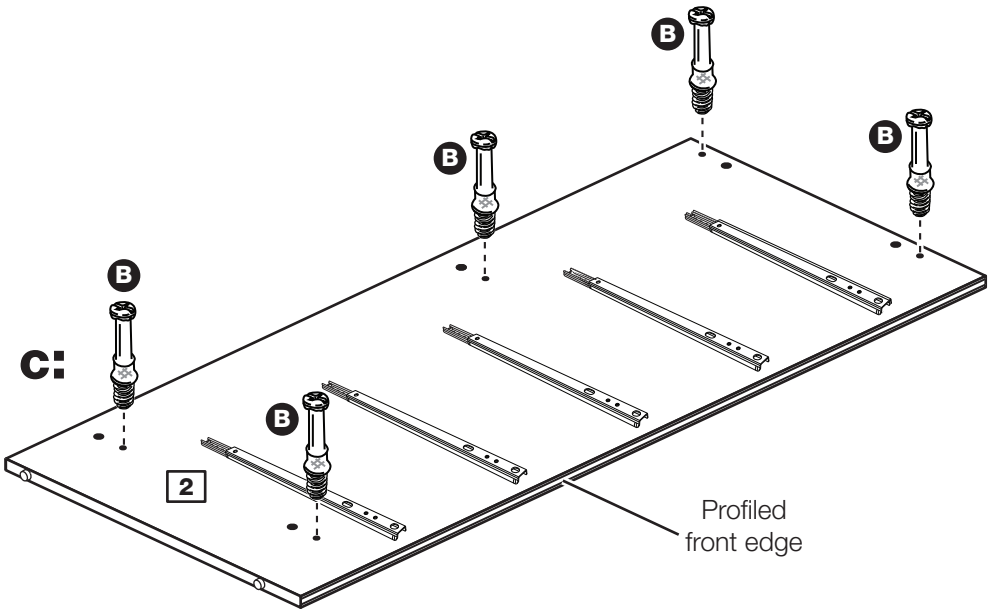

Assembly Instructions

Step 9

Prepare10the top


Tap 4 wooden dowels (A) into the top [3] as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts (D) into the top [3] as shown.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Fit bracket (M) to the underside of the top [3] using screw (L) so it is flush with the back edge.

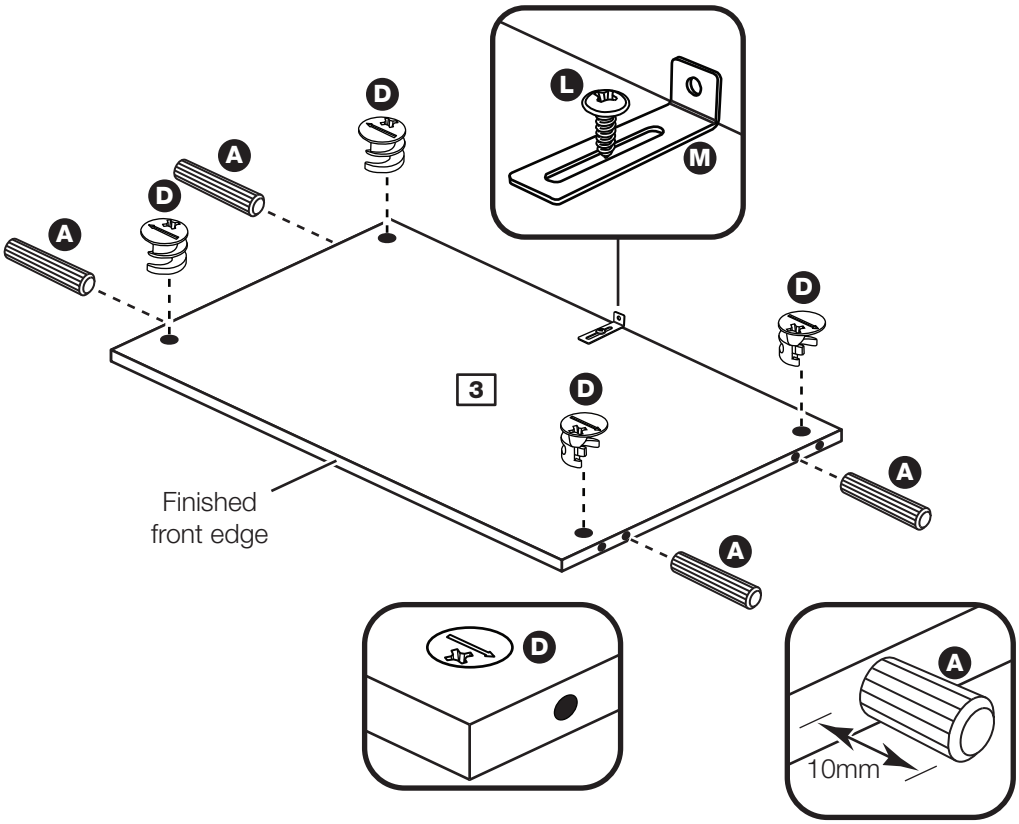

Step 11

Join the right side and top

Push the top [3] onto the right side [2] as shown.

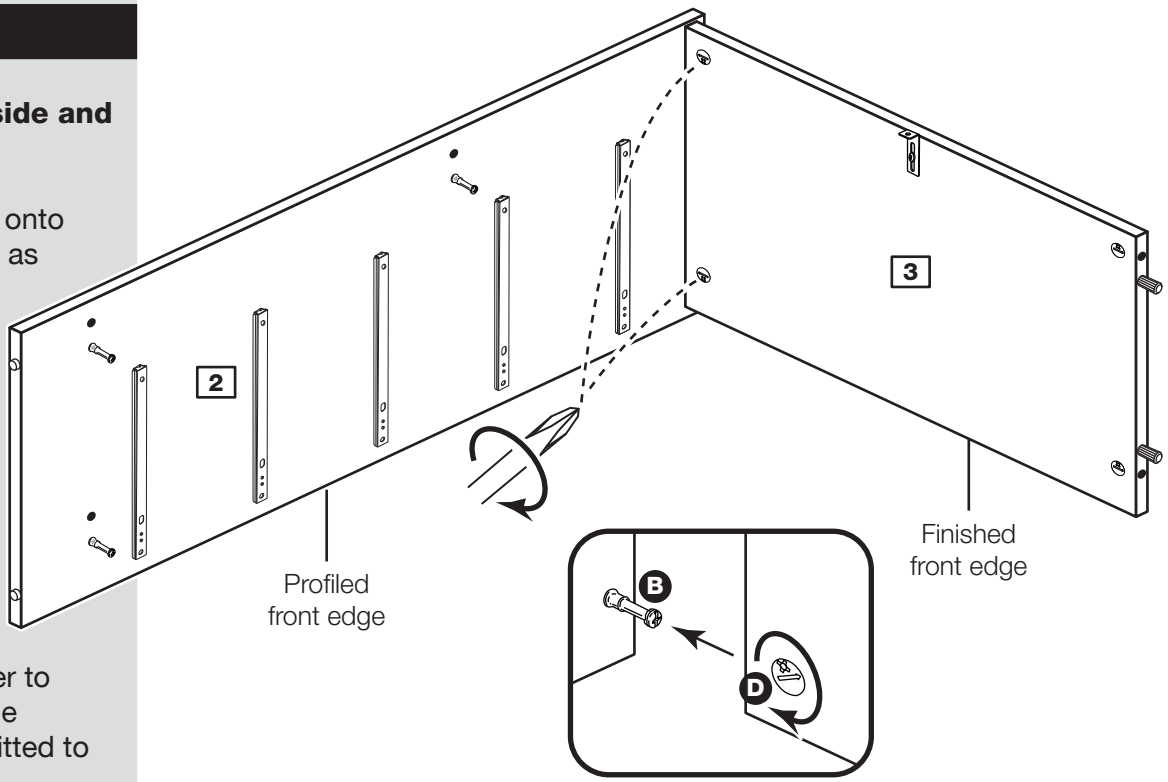

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].


Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

Step 12

Prepare the rails

Tap 2 wooden dowels A into each of the rails 4.

Insert 2 large locking nuts D into each of the rails 4.

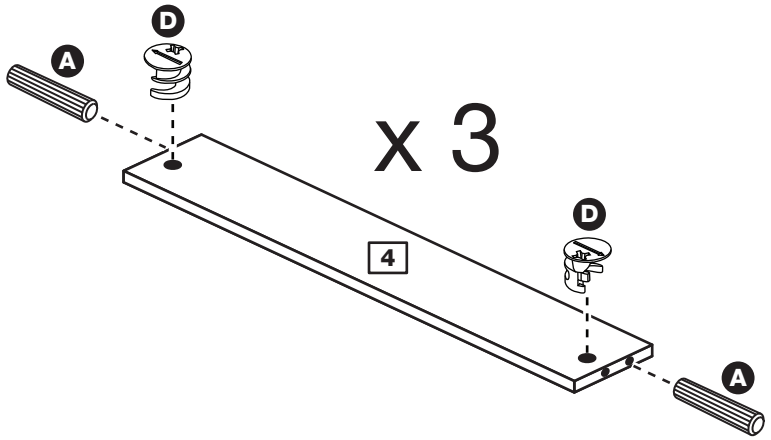


Step 13

Fit the rails

Push the rails 4 onto the right side 2 as shown.

Use a screwdriver to tighten the 3 large locking nuts D fitted to the rails 4.

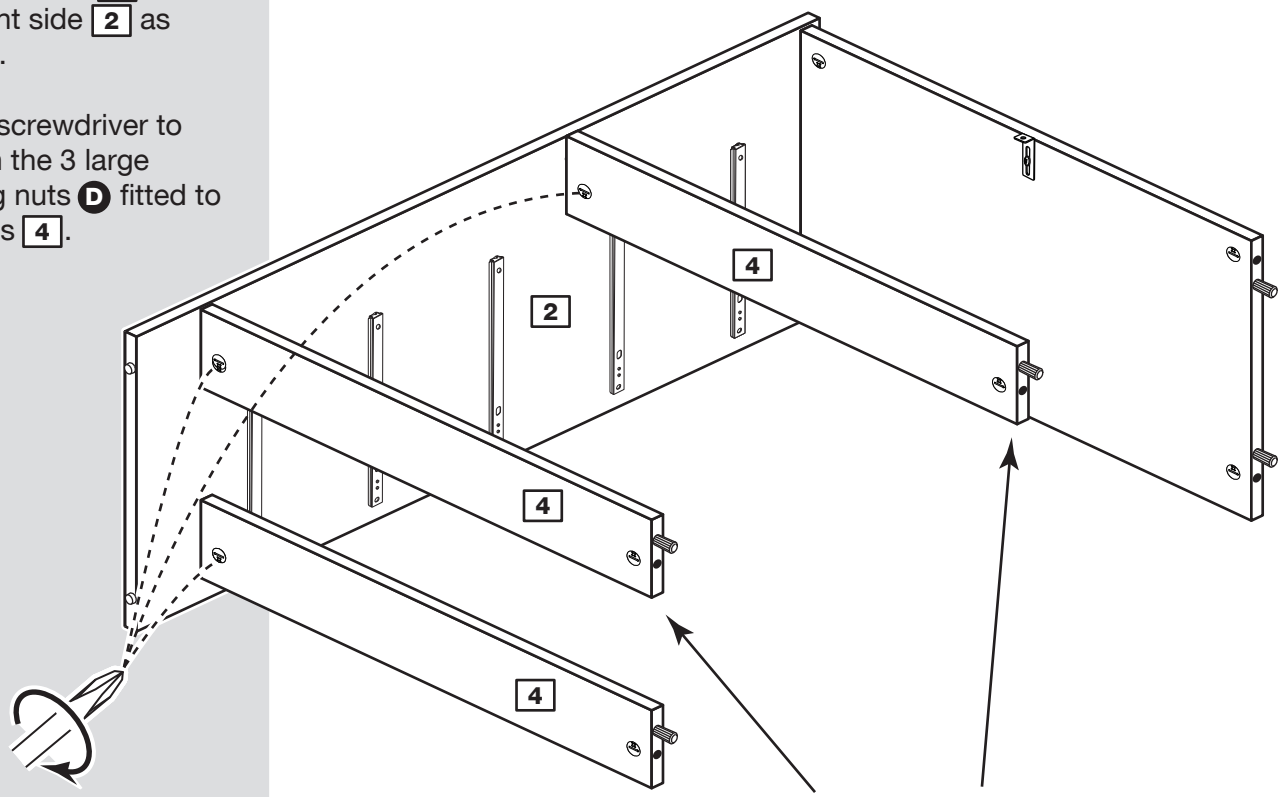


Note: Support these rails until the left side has been fitted in the next step.

Step 14

Fit the left side

Push the left side 1 onto the assembly.

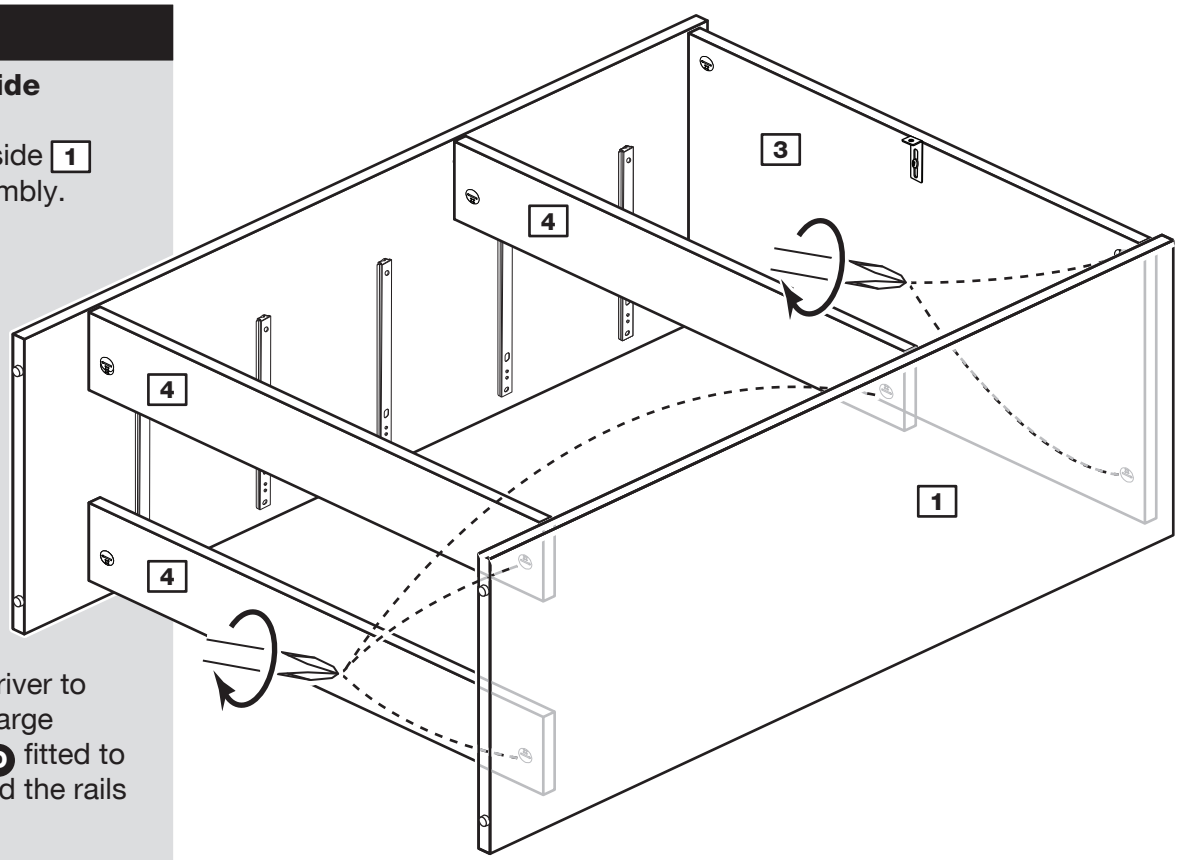

Use a screwdriver to tighten the 5 large locking nuts D fitted to the top 3 and the rails 4 .


Step 15

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit. Nail C around the outside edges of the back 10.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

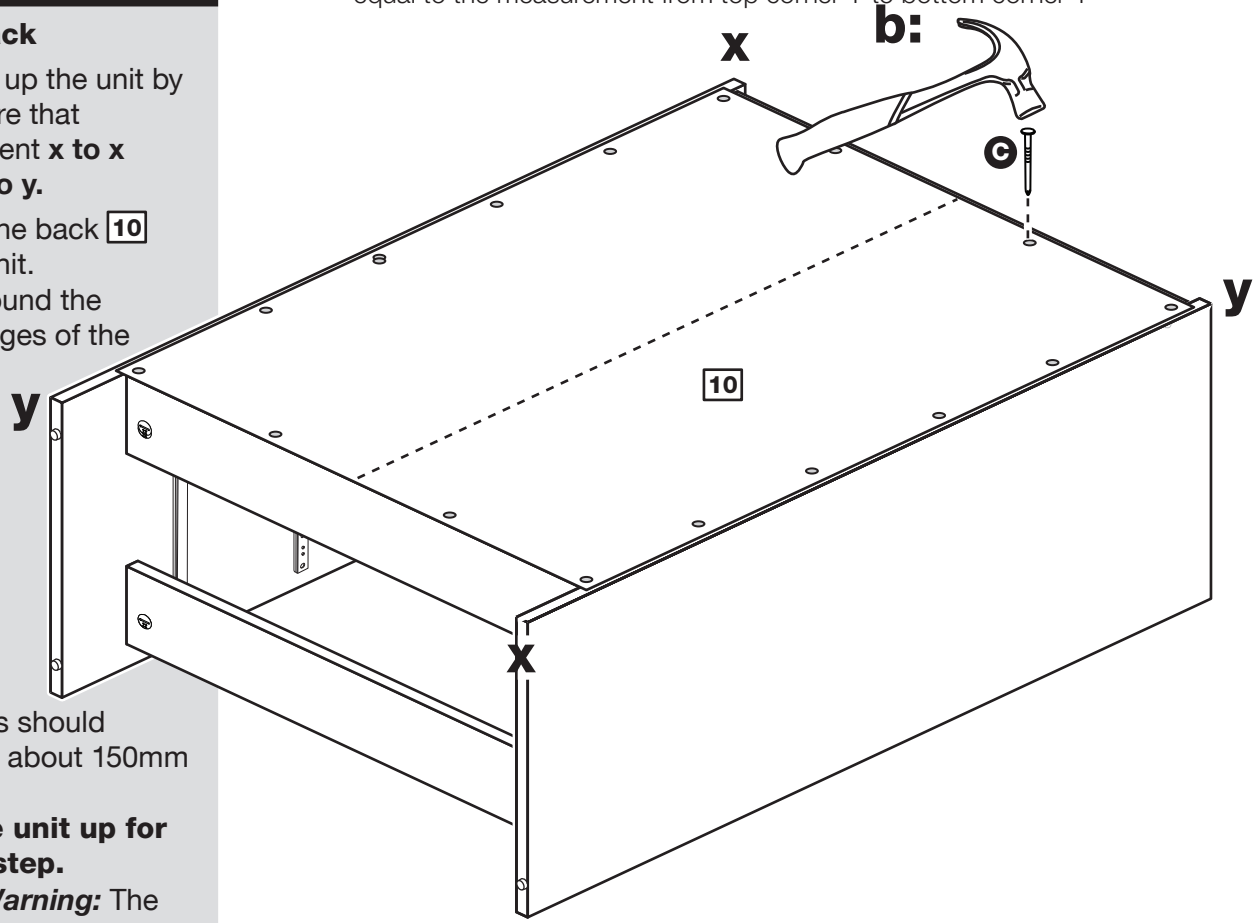

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

Step 16

Fit the drawers


Starting with the bottom drawer, slide both the runners J forward and locate the drawer sides 6 and 7 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.


Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Warning: The unit is heavy. Lift with care.

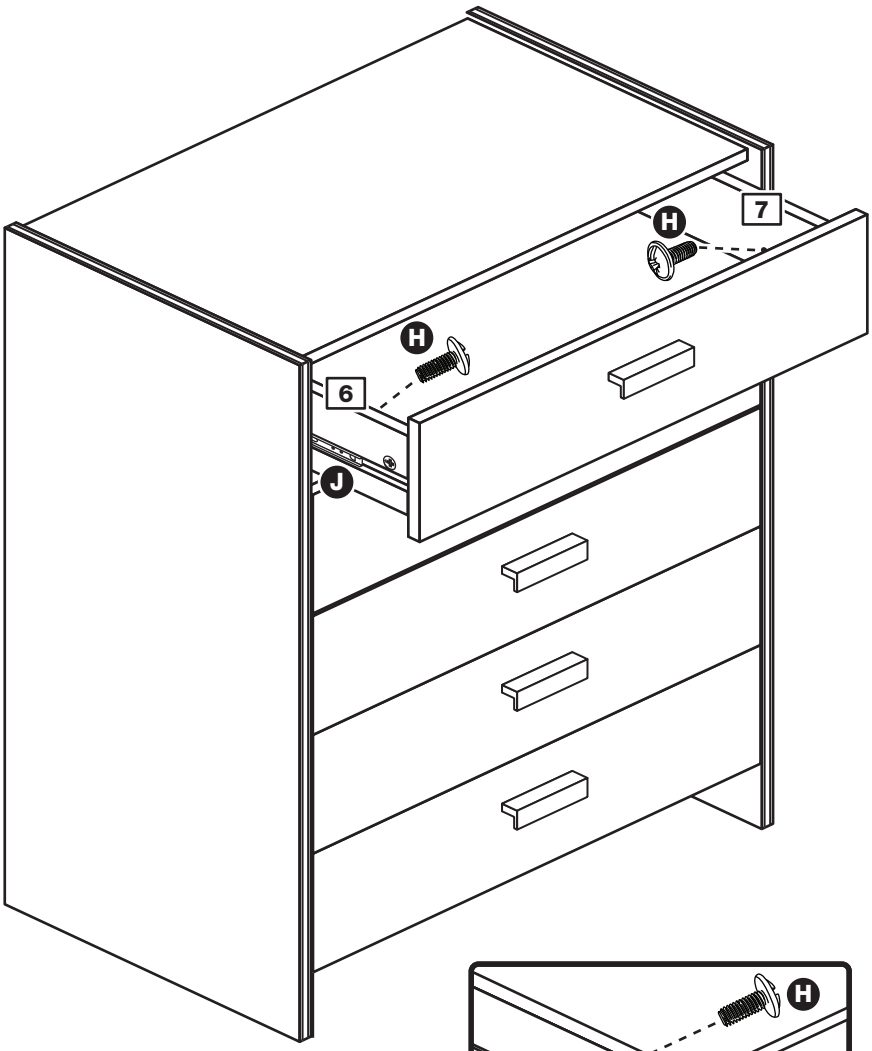

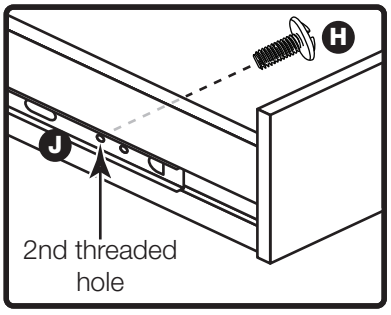

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW