
kent panel 6ft bed

Assembly Instructions - Please keep for future reference | 538/9300

Heart of House

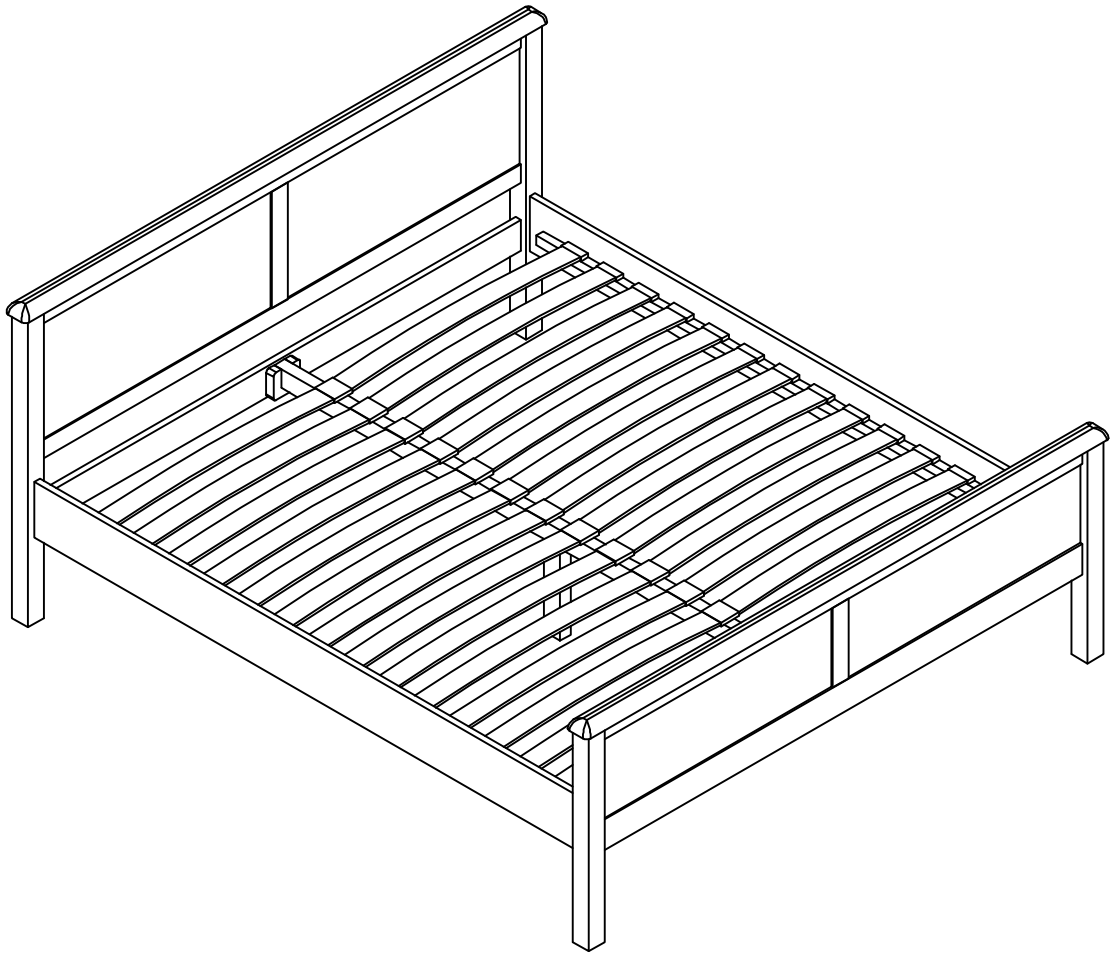

Dimensions

Width - 219cm
Depth - 197cm
Height - 103,3cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800

issue 1 - 9/3/16

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

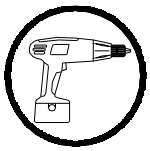

- To redure the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the
Customer Helpline: Argos = 0345 6400800


Please check you have all the panels listed below

1 Headboard (197x8x103,3 cm)

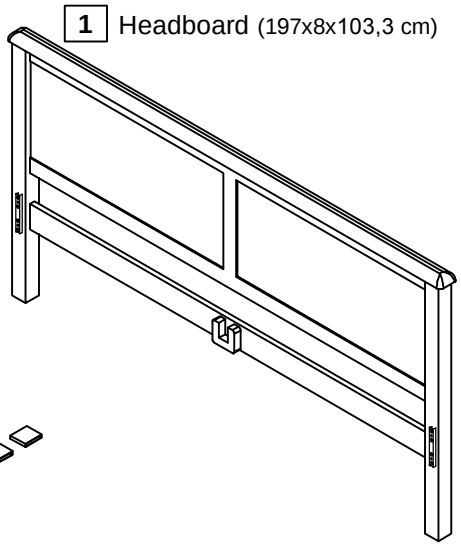


3 Side rail (205x4.5x18 cm)

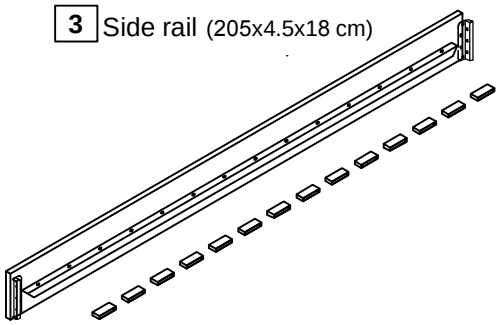

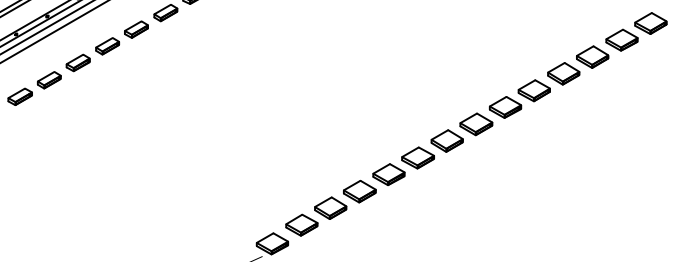


7 center cap x 14 (7.5x6.7x2.4 cm)

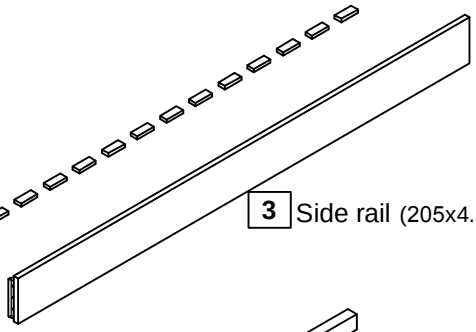


3 Side rail (205x4.5x18 cm)

6 end cap x 28 (7.5x3.2x2.4 cm)

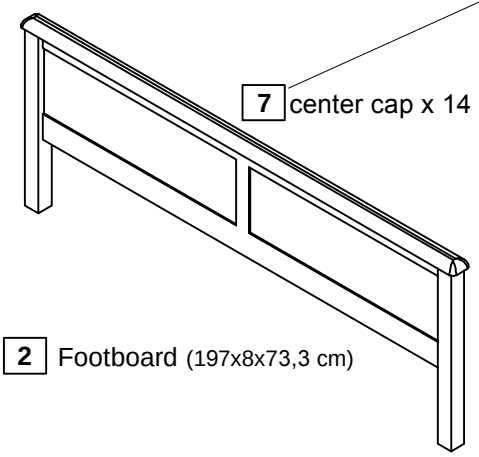


2 Footboard (197x8x73,3 cm)

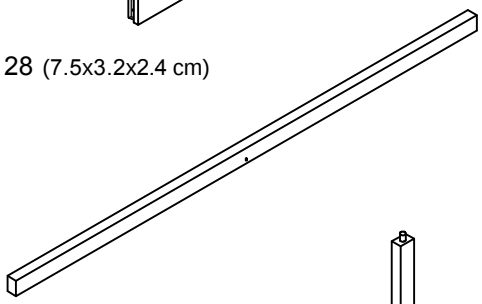


4 Center rail (209x4x6 cm)

5 Support center rail (31x4x6 cm)

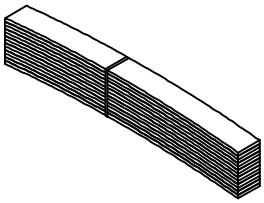

8 Slat x 14 (91x7x460 cm)

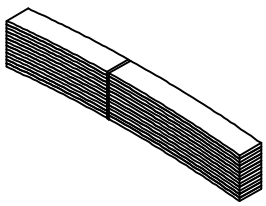


8 Slat x 14 (91x7x460 cm)

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A 	**B** 	**C** 
Bolts x 8	Screw 25mm x 1	Allen Key x 1

Tools required


Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)

7mm Suitable drill bit (for use with wall plug)

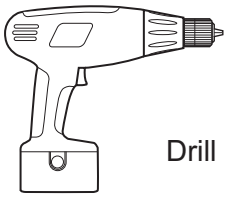

Drill



Small hammer


Ruler/tape measure

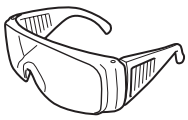
Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (15 mm screw shown).


Assembly Instructions

Step 1

Fitting sideframes to headboard and footboard.

Position the headboard [1] and footboard [2] to the end of the siderails [3]. Fit them together, using bolts (A) and allen key (C) as shown.

Perform this step on all four corners.

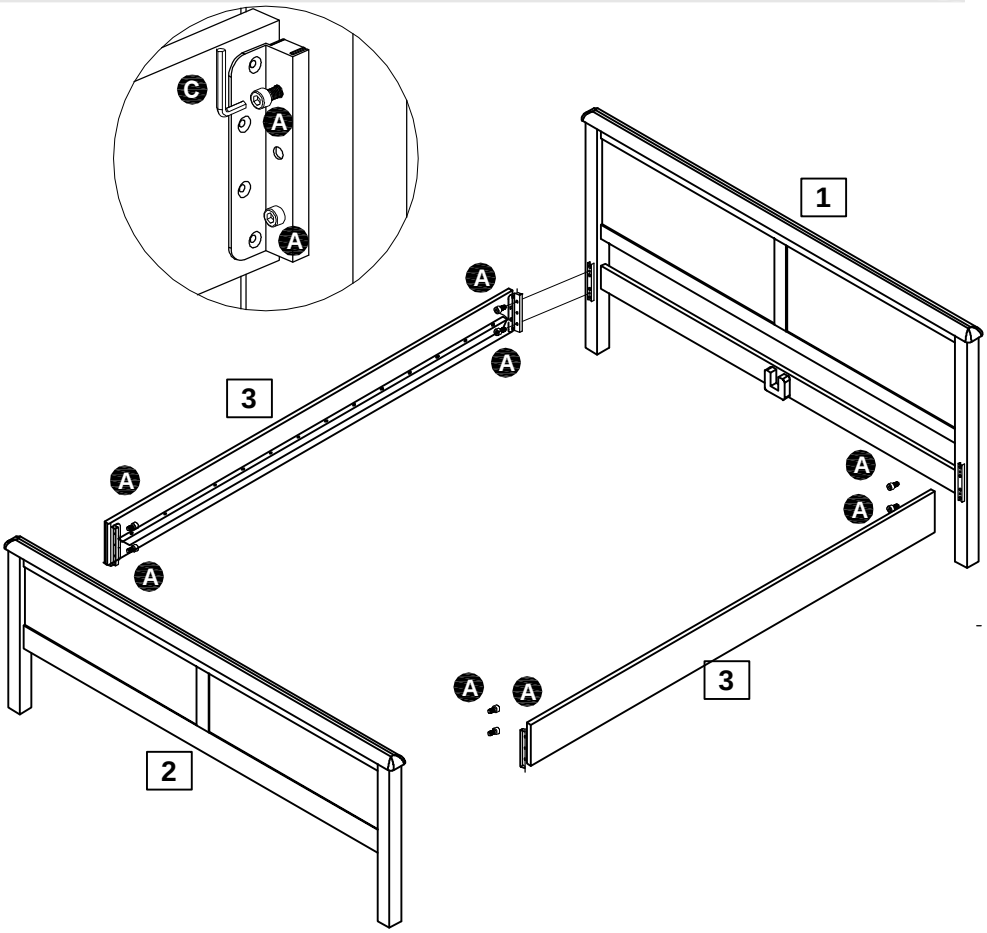


Step 2

Fitting the support center rail to the center rail.

Insert the support center rail [5] into center rail [4]. Fit them together, using screw (B) .Tighten the screw with the philips head screwdiver.


The support center rail [5] have adjustable feet.

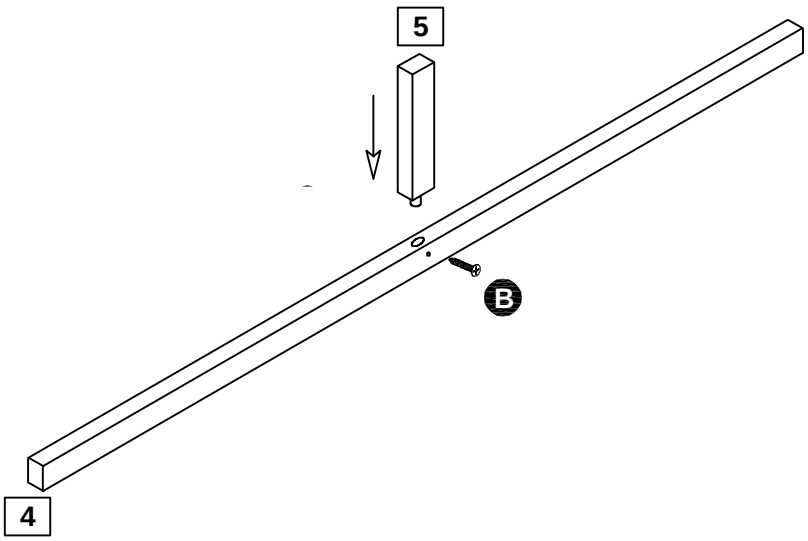

Step 3

Assembling the center rail.


Place the center rail 4 on the bed frame.

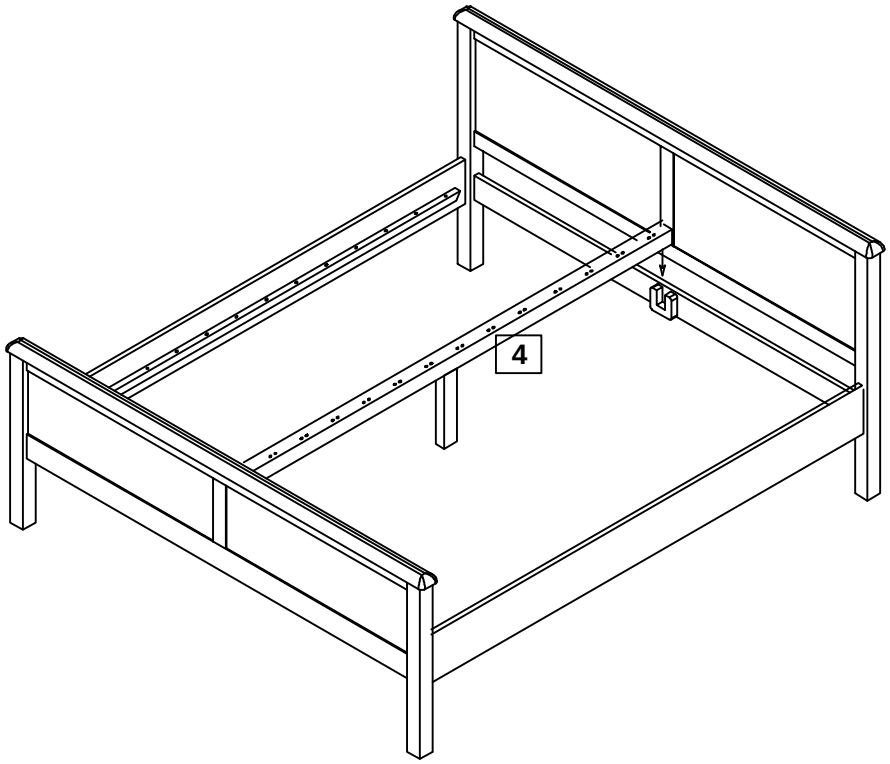

Step 4

Fixing the slats.


Insert the slat 8 on the center cap 6 and end cap 7 . This step on all 28 slats.

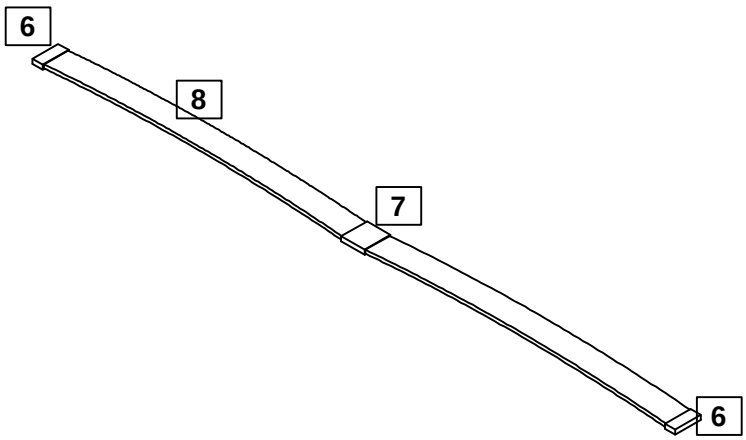

Assembly Instructions


Step 5

Place the slats on the bed frame.

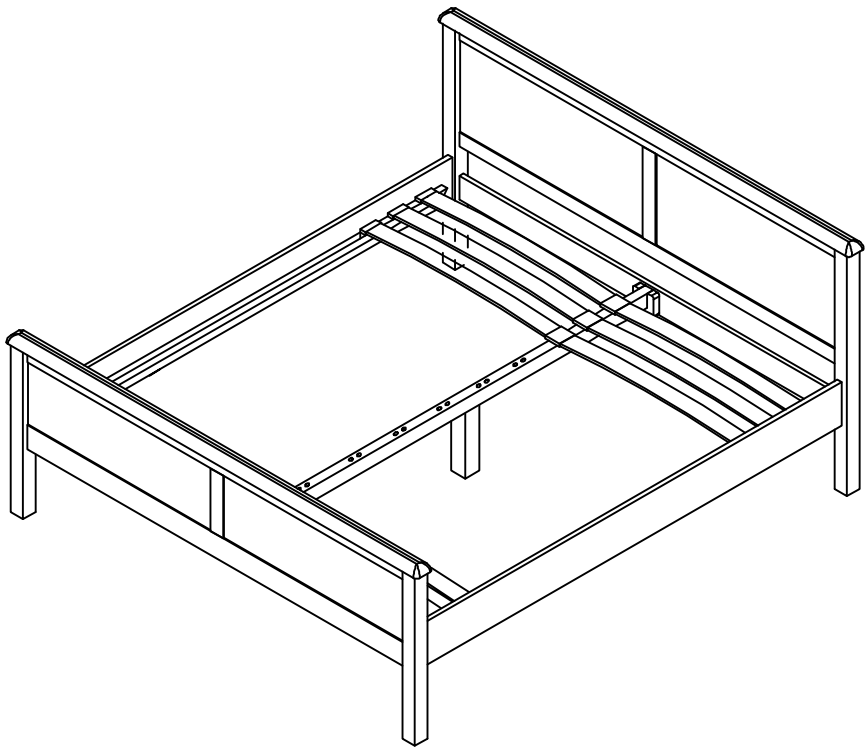

Step 6

Assembly is complete.

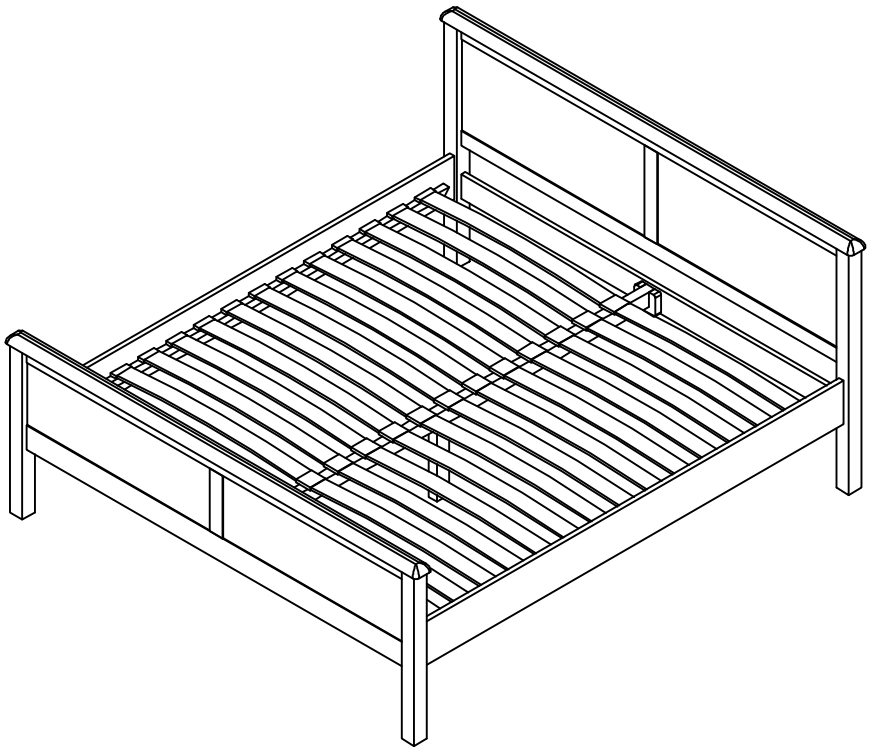

If you need help or have damaged or missing parts, call the **Customer Helpline: Homebase = 0845 0778888**