
# Brianna 4ft6 bed frame

**Assembly Instructions - Please keep for future reference** | **556/9742**

THE COLLECTION BY ARGOS

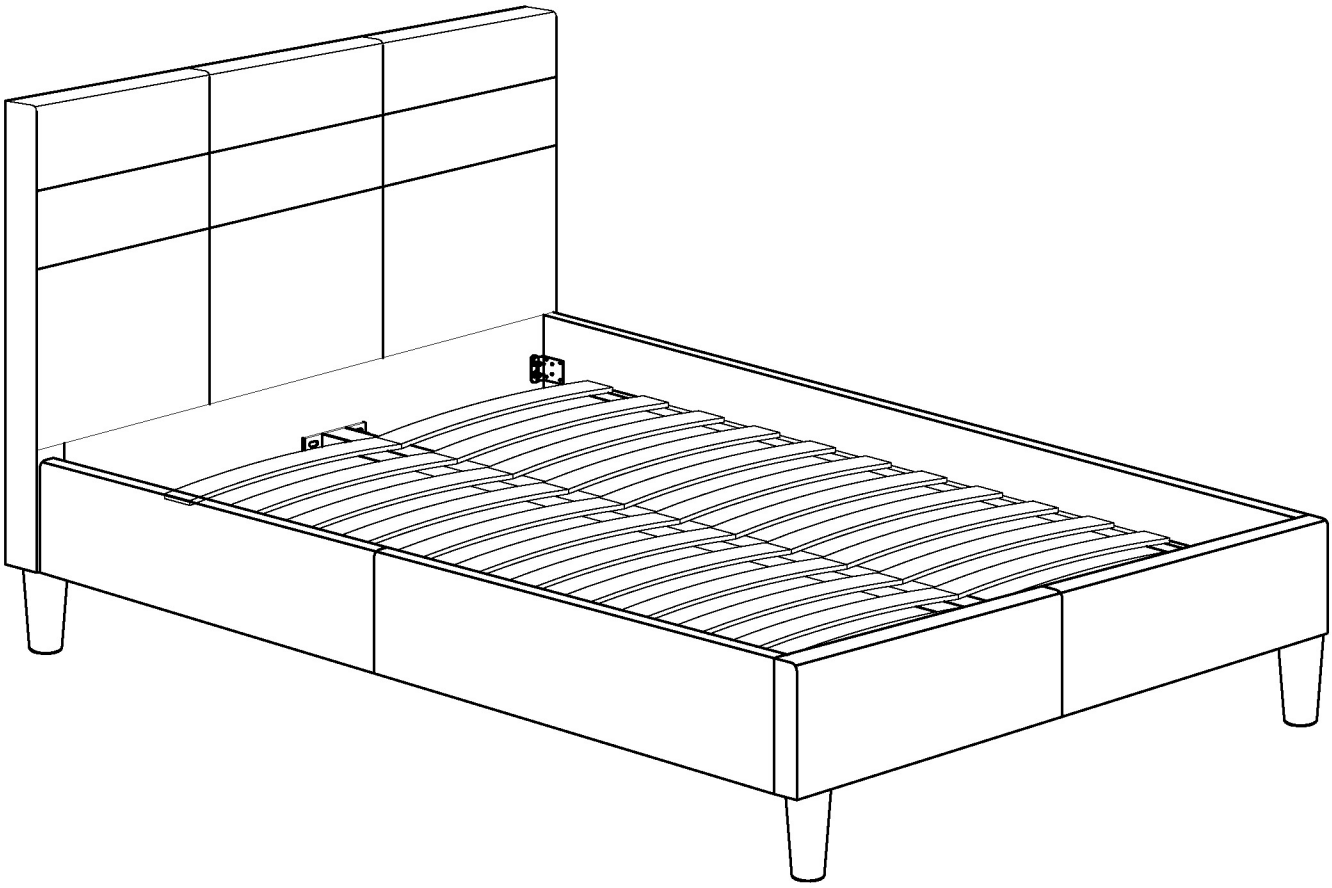

## Dimensions

Width x Depth x Height
207.5cm x 144.5cm x 102.5cm (Double)

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline:
Argos = 0345 6400800

Issue 1 -07/04/16

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product,this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose bolts or screws o. n this unit

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

• Assemble all parts and bolts loosely during assembly,only once the product is complete should you fully tighten the bolts.


• Regularly check and ensure that all bolts and fittings are tightend properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800


## Please check you have all the parts listed below

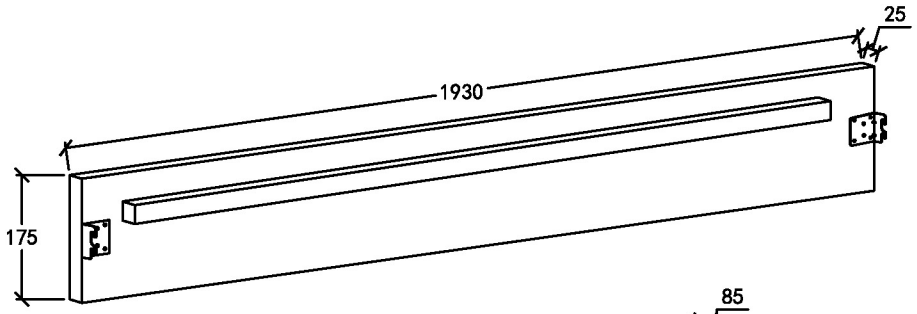



1 Side rail x 2

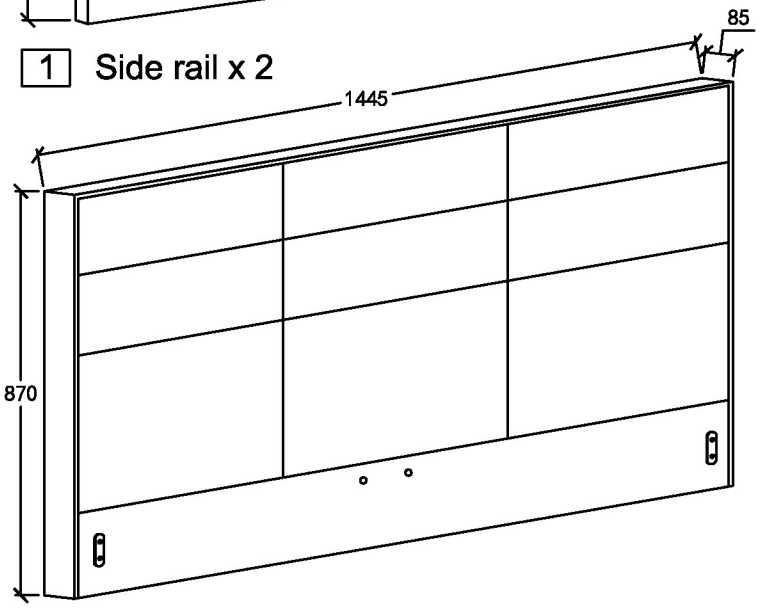



2 Headboard

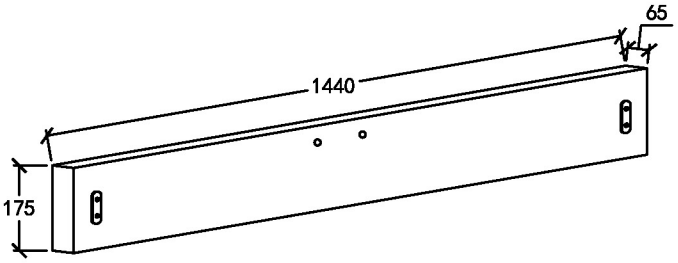


3 Footboard

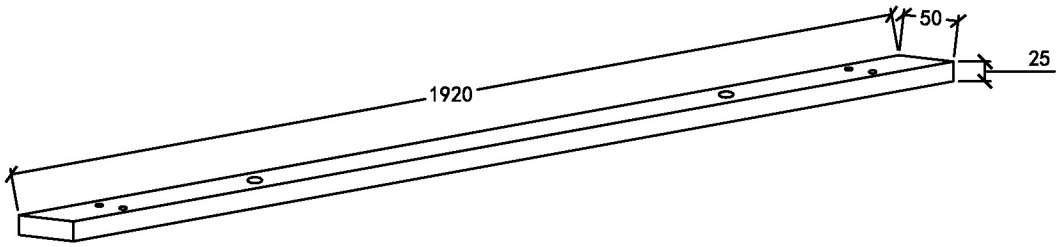


4 Central support rail





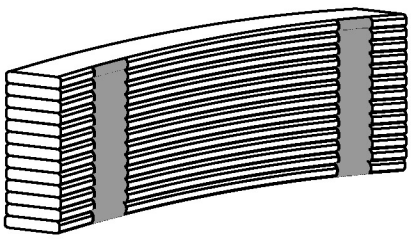


5 Slats x 2


# Components - Fittings

## Please check you have all the parts listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

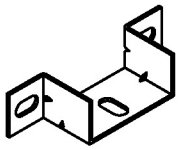
| | | |
|---|---|---|
| Ⓐ M8 Bolts (18mm) - 8 Pcs  | Ⓑ M5 Allen key - 1Pc  | Ⓒ M8 Bolts (25mm) - 4 Pcs  |
| Ⓓ M8 Bolts (20mm) - 2 Pcs  | Ⓔ M8 Bolts (40mm) - 2 Pcs  | Ⓕ M6 Plastic nuts (13mm) - 8 Pcs  |
| Ⓖ M6 Bolts (35mm) - 4 Pcs  | Ⓗ M6 Bolts (40mm) - 4 Pcs  | Ⓘ Flat Washers(M8)-8 Pcs  |
| Ⓙ Bracket - 2 Pcs  | Ⓚ Support legs - 2 Pcs  | Ⓛ Feet - 4 Pcs  |
| Ⓜ Felt pads - 4 Pcs  | | |

## Tools required



Phillips screwdriver

## Ruler - Use this ruler to help correctly identify the screws



# Assembly Instructions


## Step 1

**Attaching feet**

Attaching 2 x feet Ⓛ to the underside of the headboard [2] .Sticked the felt pads Ⓜ under the feet.

Repeat on the underside of the footboard [3] .

**a:**

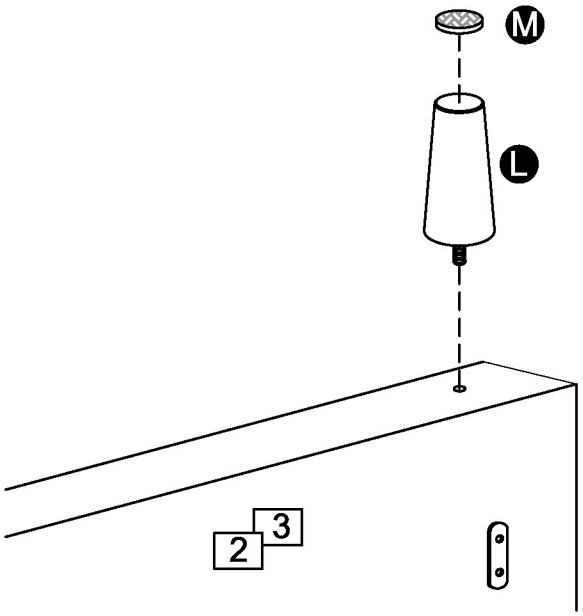



## Step 2

**Attaching side rails**

a: Attach 2 bolts Ⓐ to the headboard [2] and footboard [3] using the Allen key Ⓑ provided.

**Do not fully tighten at this stage.**


**a:**

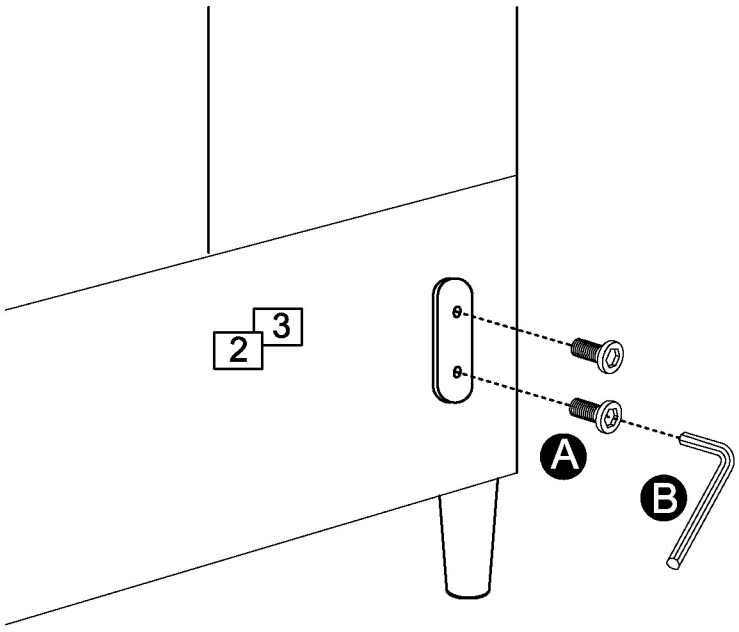

# Assembly Instructions

b: Secure the plastic nuts Ⓕ to the left side rail [1] using bolt Ⓗ as shown.

b:

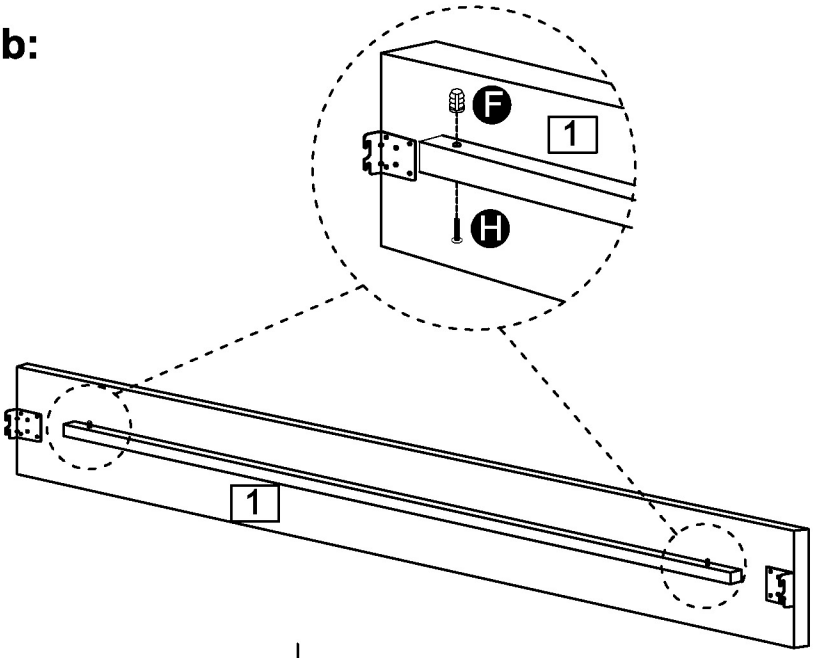




c:Position side rail [1] adjacent to headboard [2] & [3] so that the holes in the headboard line up with the bracket on the side rail.

Secure in place by 2 bolts Ⓐ using the Allen key Ⓑ provided.

**Do not fully tighten at this stage.**

c:

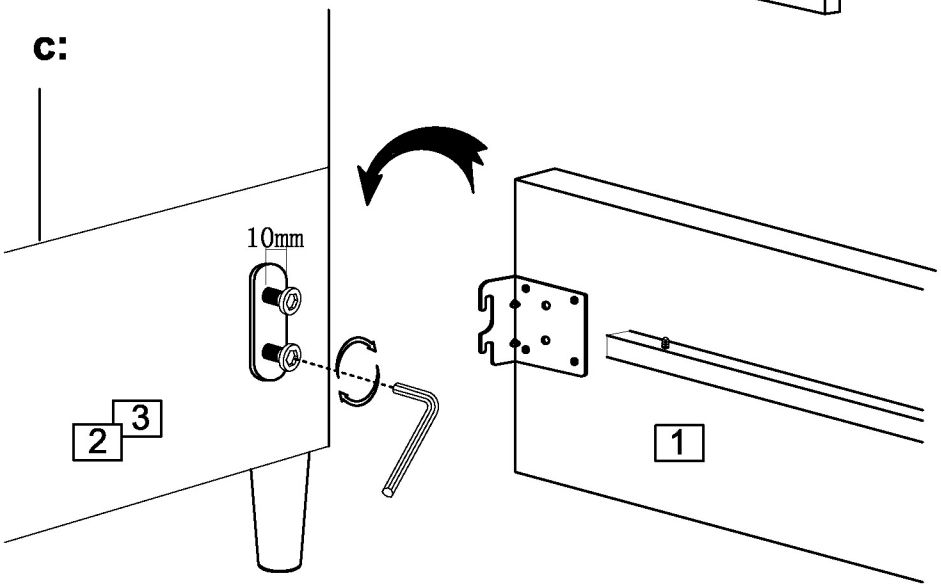
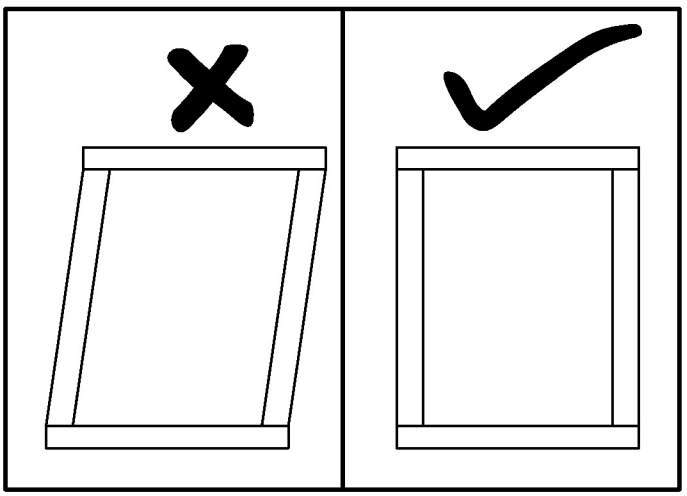
# Assembly Instructions


## Step 3

**Central support assembly**

**a:** Secure the plastic nuts Ⓕ to both sides central support using bolt Ⓖ as shown.

**b:** Attach bolts Ⓓ and washers Ⓘ to the central support 4.

**c:** Insert the feet Ⓚ into the holes on the central support rail and secure using bolts Ⓔ. and washers Ⓘ.

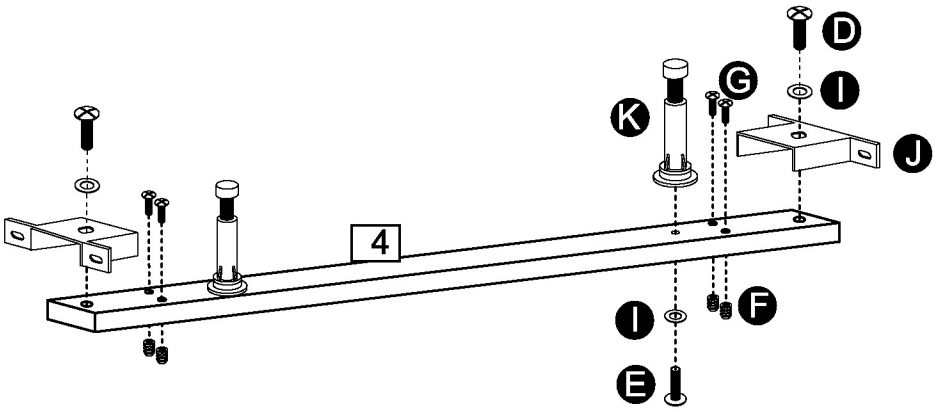




## Step 4

**Attach central support**

**d:** Secure the central support rail 4 to the headboard 2 using bolt Ⓒ and washer Ⓘ.

Repeat at the footboard.

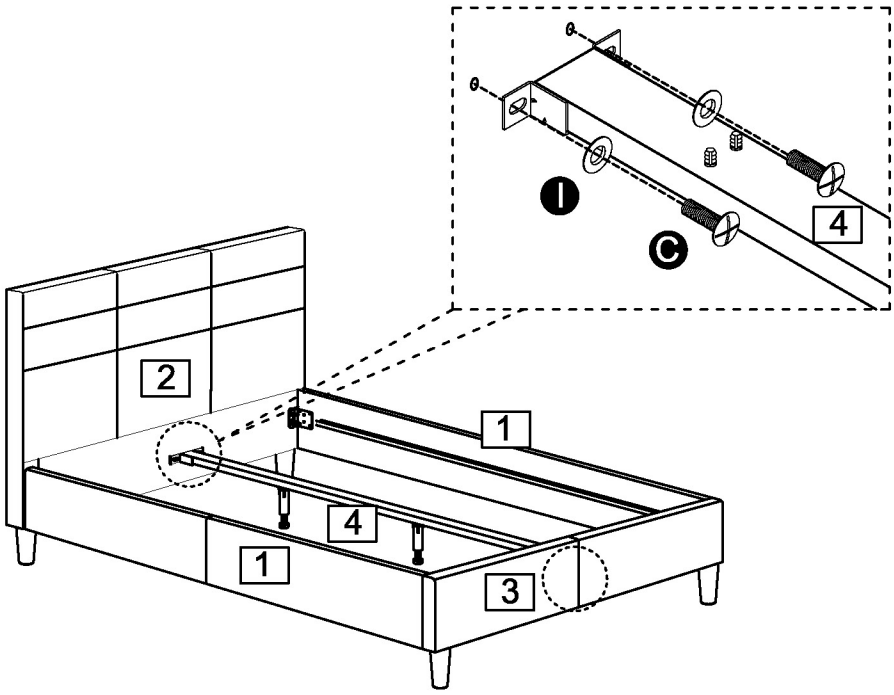

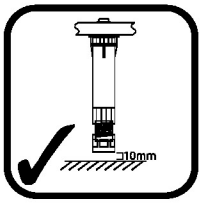


## Warning

adjust the feet so that they are not in contact with the floor when the mattress is in place. There should be a 10mm (½ inch) gap.

# Assembly Instructions

## Step 5

**Place slats**


a:Place slats [5] at the end of the side rail [1] central support rail [4]. Use the plastic nut (F) as stopper.

**b:** Roll over the slat and attach to the front of the side rail [1] central support rail [4]. Use the plastic nut (F) as stopper.


**After all the parts are positioned you can now fully tighten all bolts fixed on previous steps.**

**Assembly is complete.**

**a:**

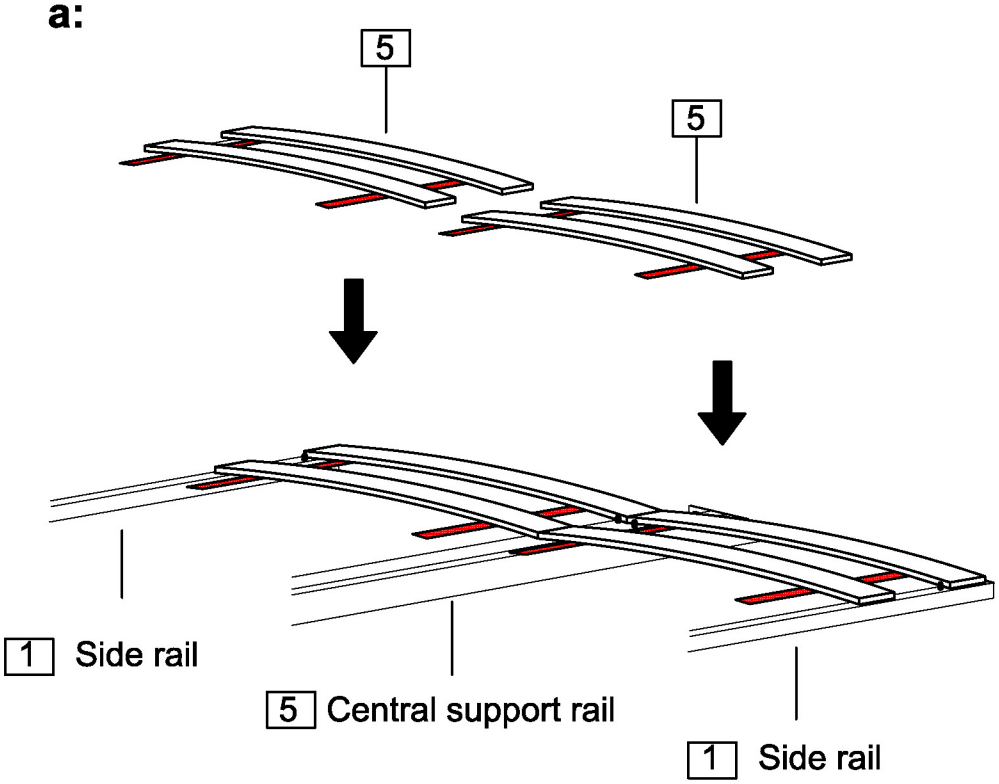


**b:**

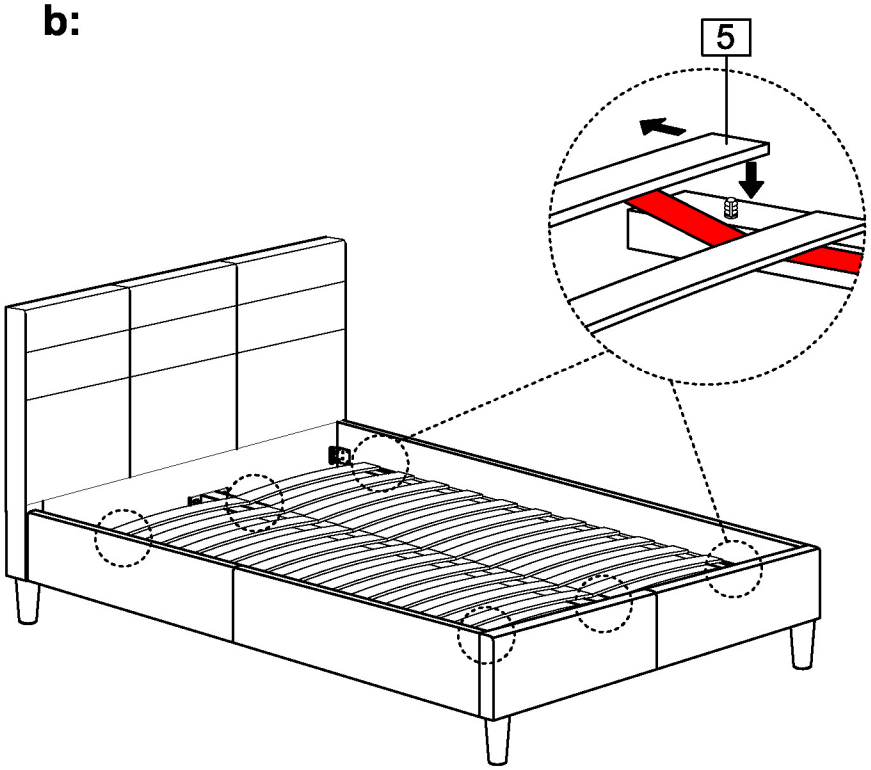


If you need help or have damaged or missing parts, call the Customer Helpline:
Argos = 0345 6400800