
Valencia - 1000mm Base Cabinet

Assembly Instructions - Please keep for future reference

hygena

Cabinet	656/5790
Black Door Pack	633/2882
Cream Door Pack	633/2710
Grey Door Pack	656/5295
Plum Door Pack	656/4540
White Door Pack	633/2806

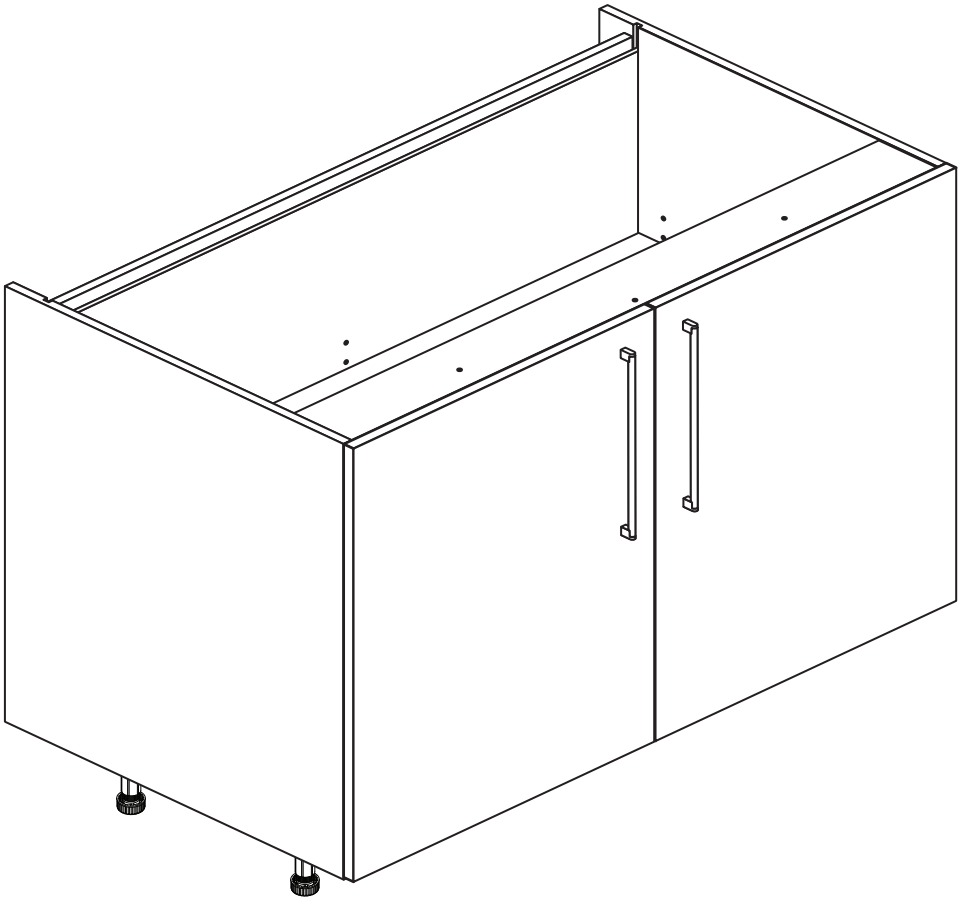

Dimensions

Width - 100cm

Depth - 59cm

Height - 87cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 16/08/11

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 26kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2, 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.


Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Tools required

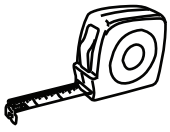


Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)




Electric drill

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

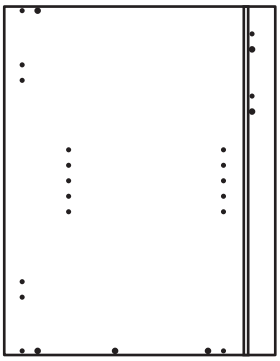


1 Left Side *(DPF068A)*
(720 x 560mm)

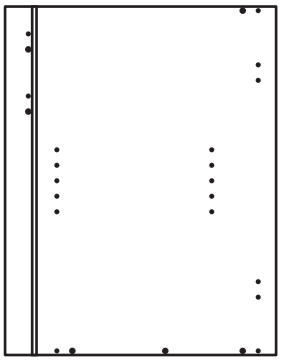


2 Right Side *(DPF069A)*
(720 x 560mm)

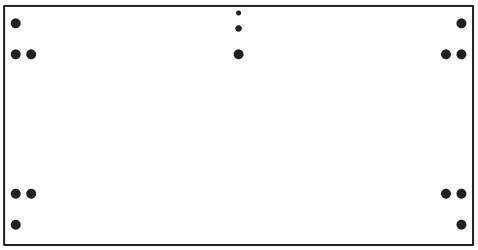


3 Base *(DPF082A)*
(969 x 494mm)




4 Cross Rail *(DPF084A)*
(969 x 96mm) x 2



5 Loose Shelf *(DPF083A)*
(968 x 431mm)

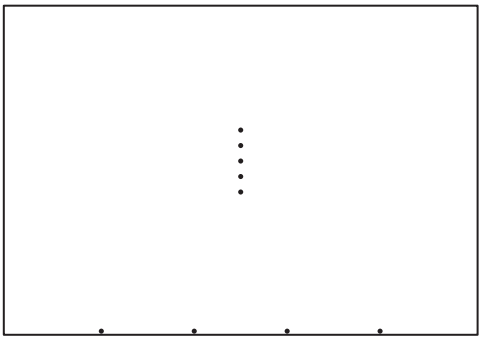

6 Back *(DPF085A)*
(979 x 680mm)

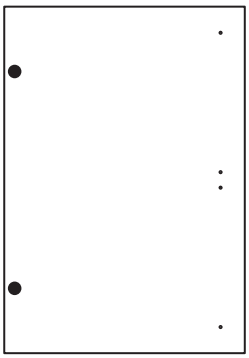

The front surface of this door is protected with a peel-off film

7 Valencia Door *(DPF147B)*
(497 x 716mm) x 2




8 Muntin Rail *(DPF086A)*
(36 x 688mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 12

B 

Metal dowel *(F901)* x 8

C 

Large locking nut *(F900)* x 8

D 


13mm Screw *(F63)* x 8

E 

13mm Screw *(F79)* x 6

F 


25mm Screw (*F50)* x 6

G 


Connecting Sleeve *(F432)* x 2

H 


19mm Connecting bolt (*F461)* x 2

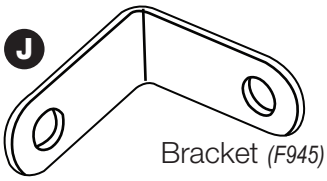J 


Bracket *(F945)* x 4

K 


Shelf support *(F110)* x 6

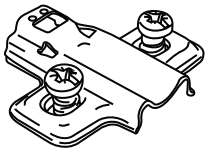L 

Hinge Plate (*F117)* x 4

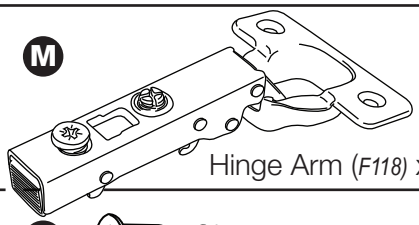M 


Hinge Arm (*F118)* x 4

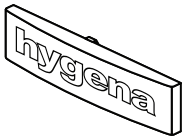N 

Hinge Cover (*F119)* x 4

O 


40mm Screw *(F910)* x 2

Pa 


Handle *(F214)* x 2

Pb 


25mm Screw *(F132)* x 4

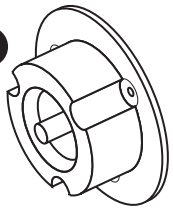Ia 


Leg Socket (*F120)* x 5

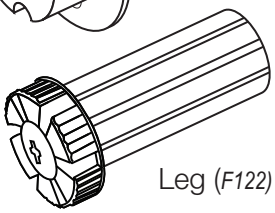Ib 

Leg (*F122)* x 5

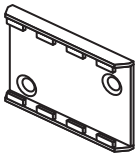Ic 

Leg Bracket (*F127)* x 3

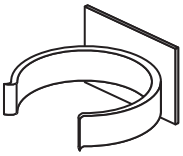
Id 

Leg Clip (*F128)* x 3

Ie 

16mm Screw (*F129)* x 21

Ruler - Use this ruler to help correctly identify the screws

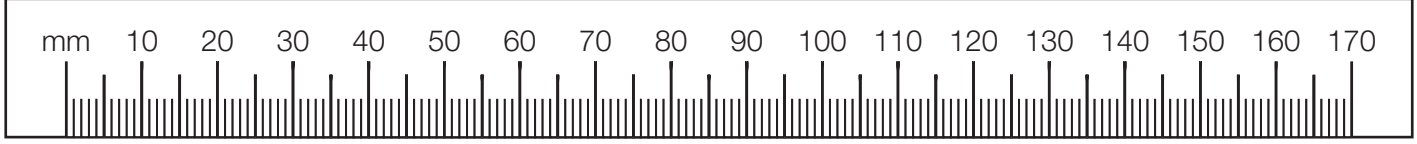

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the left side

Screw a metal dowel (B) into one of the holes shown on the left side [1].

Note: Tighten metal dowels up fully against the panels.

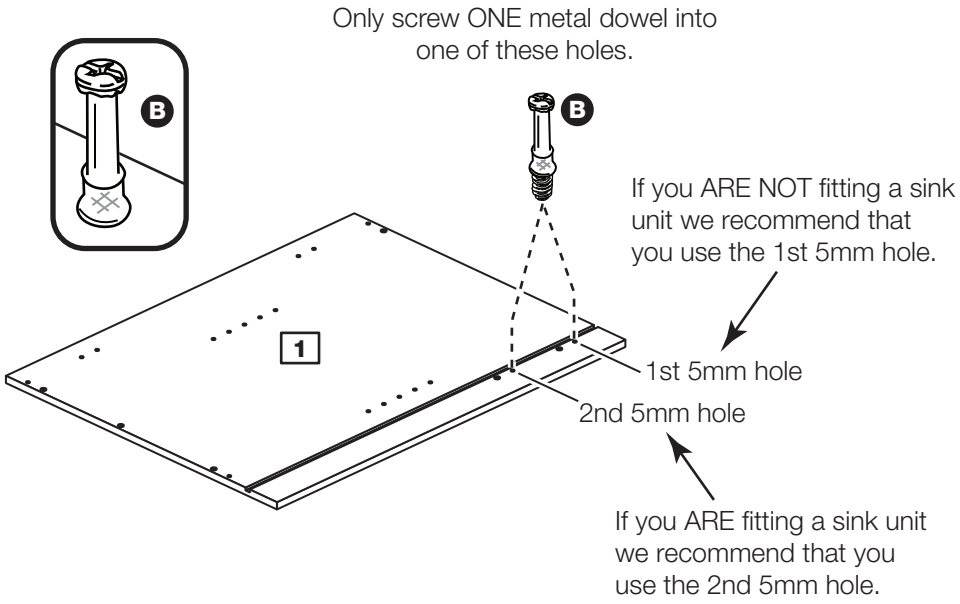

Step 2

Prepare the left side

Fit 2 hinge plates (L) onto the left side [1], orientated as shown.

Screw 3 metal dowels (B) into the holes shown on the left side [1].


Fit a bracket (J) flush to the top edge of the left side [1], about 150mm in from the groove, see diagram.

Secure the bracket (J) using screw (E).

Fit another bracket (J) flush to the back edge of the left side [1], about 5mm down from the top edge, see diagram.

Secure the bracket (J) using screw (E).

Note: The brackets must be flush with the top/back edge of the panel.

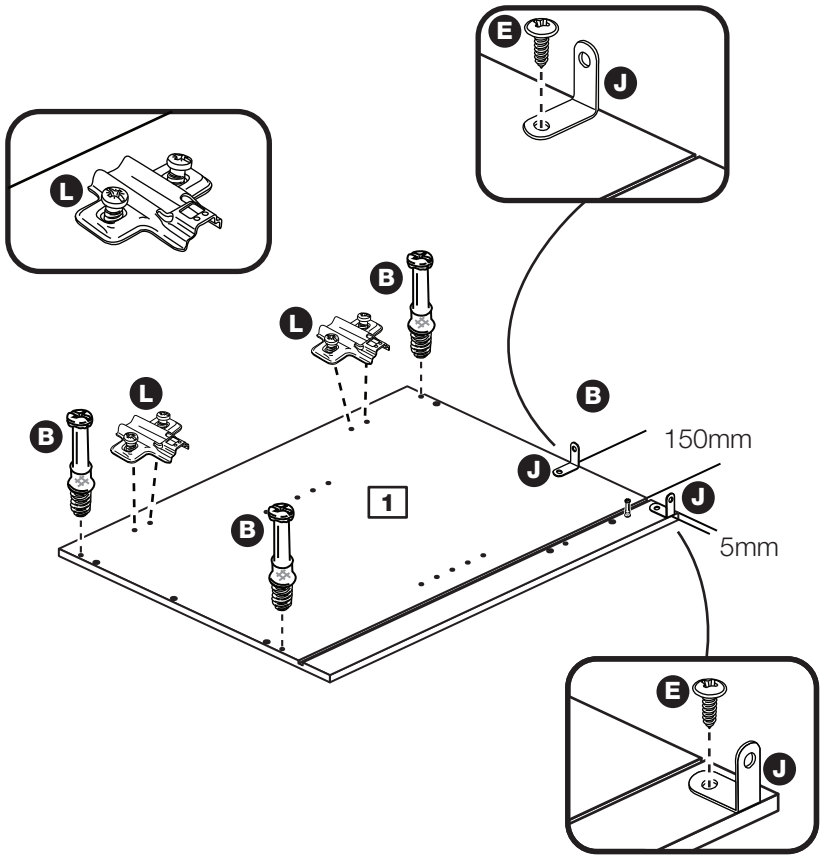


Step 3

Prepare the right side

Screw a metal dowel (B) into one of the holes shown on the right side [2].

Use the same hole that you used for the left side in step 1.

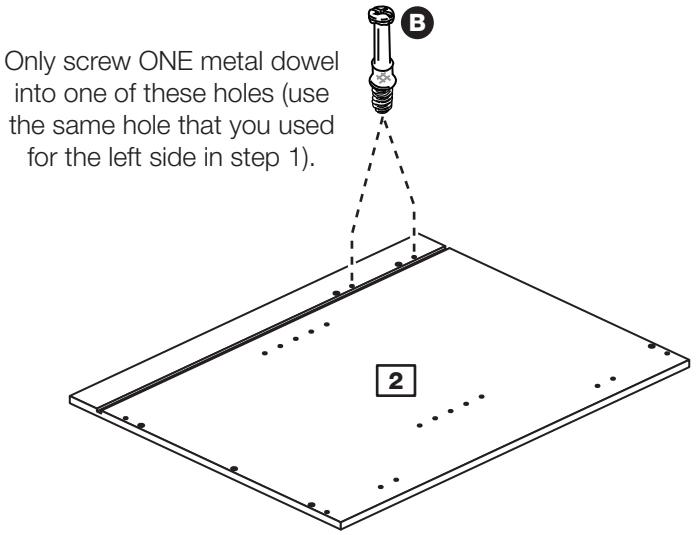

Step 4

Prepare the right side

Fit 2 hinge plates (L) onto the right side [2], orientated as shown.


Screw 3 metal dowels (B) into the holes shown on the right side [2].

Fit a bracket (J) flush to the top edge of the right side [2], about 150mm in from the groove, see diagram.

Secure the bracket (J) using screw (E).

Fit another bracket (J) flush to the back edge of the right side [2], about 5mm down from the top edge, see diagram.

Secure the bracket (J) using screw (E).

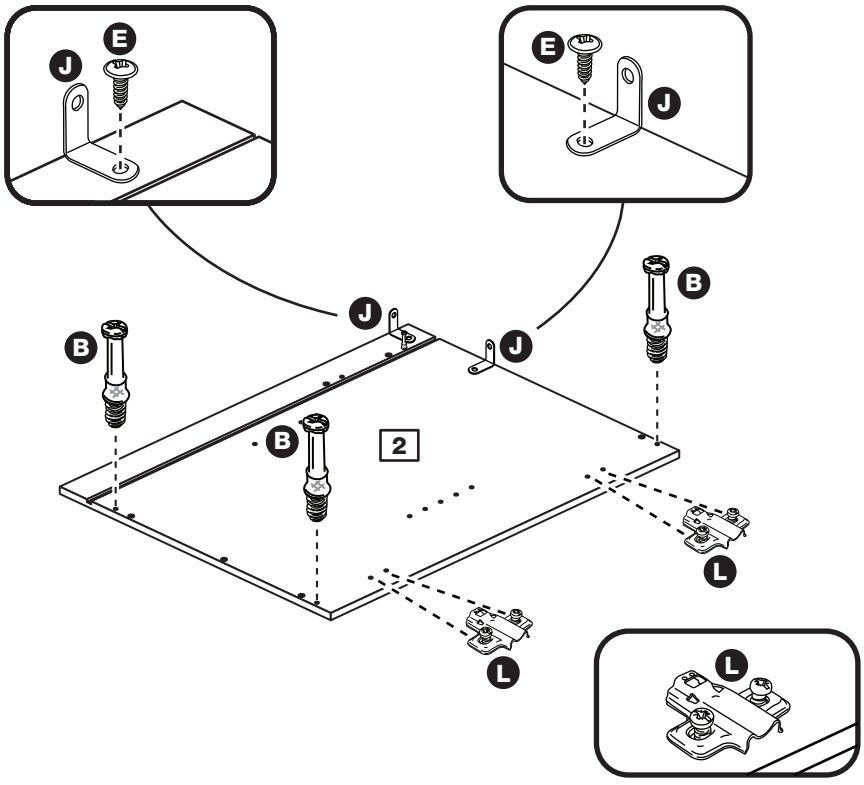

Assembly Instructions

Step 5


Prepare the base

Insert 4 large locking nuts C into the base 3 as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Tap 6 wooden dowels A into the base 3 as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

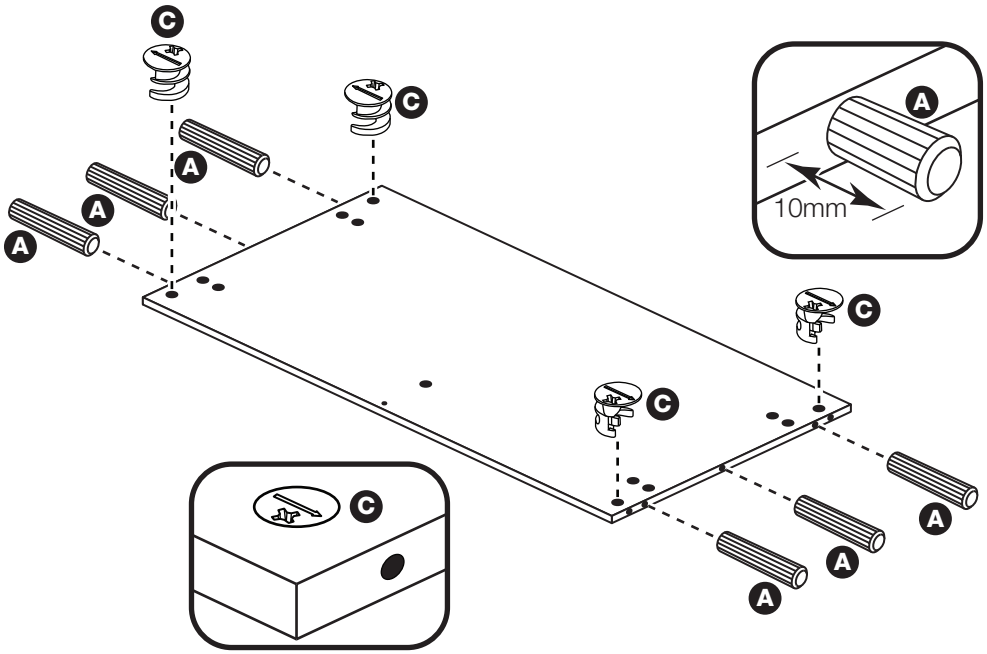

Step 6


Fit the legs to the base


a: Push the leg sockets Ia into the holes in the base 3 as shown.

b: Secure each leg socket Ia with 3 screws Ie.

c: Tap in the centre plug on each leg socket Ia.

d: Push the leg Ib into the leg socket Ia.

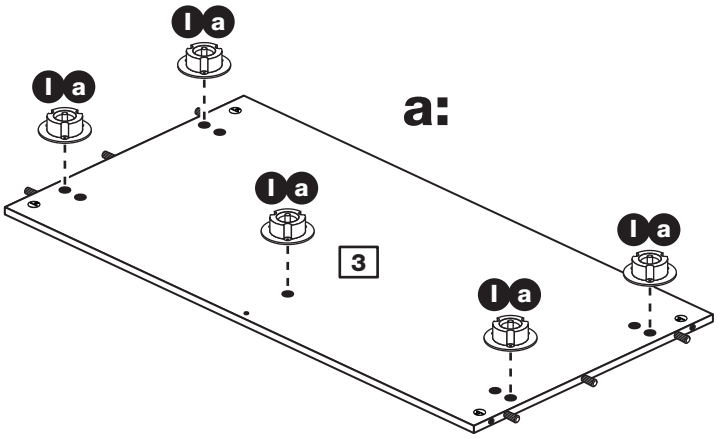

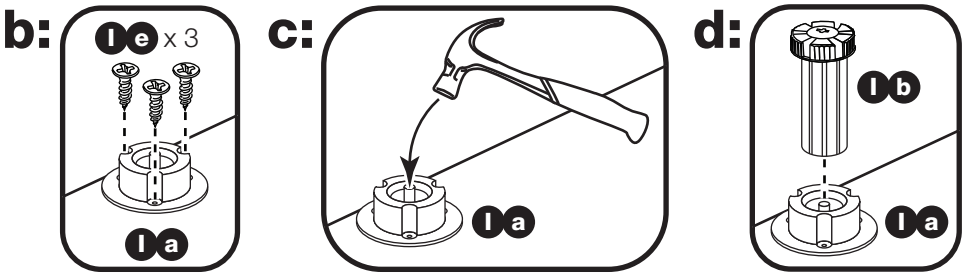

Assembly Instructions


Step 7

Join the right side and base

Push the base [3] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts C fitted to the base [3].

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

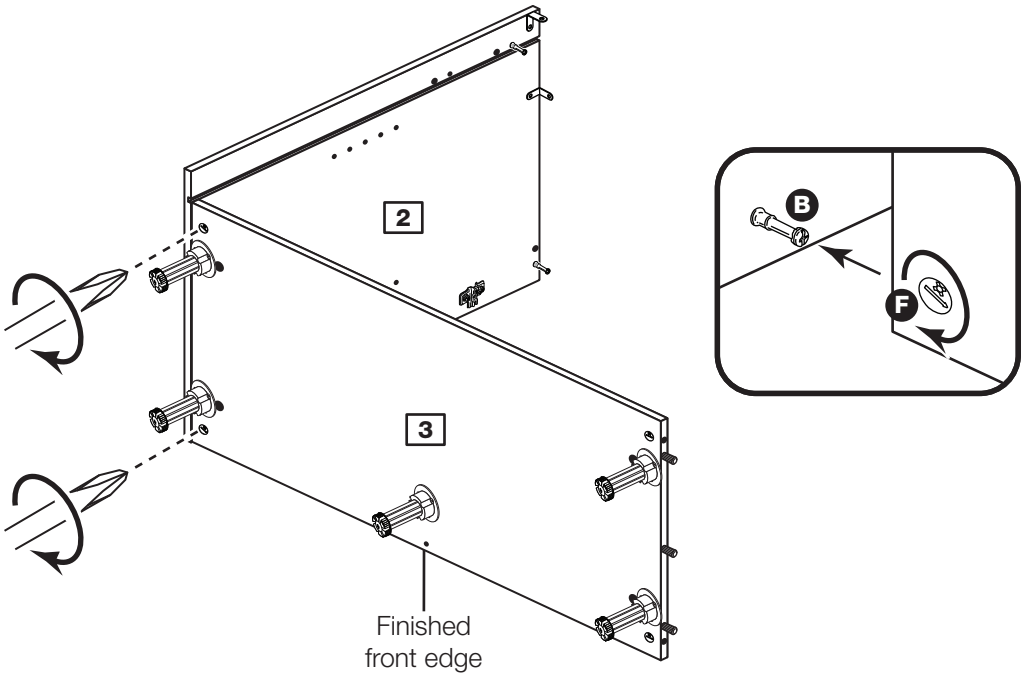


Step 8

Prepare the 2 cross rails

Insert 2 large locking nuts C into the cross rails [4] as shown.

Tap 2 wooden dowels A into the cross rails [4] as shown.

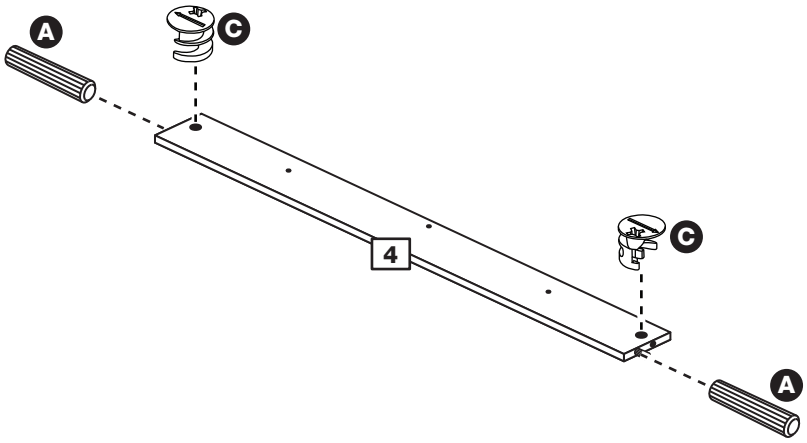


Step 9

Fit a cross rail

Push a cross rail [4] onto the right side [2] as shown.

Use a screwdriver to tighten the large locking nut C fitted to the cross rail [4].


Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

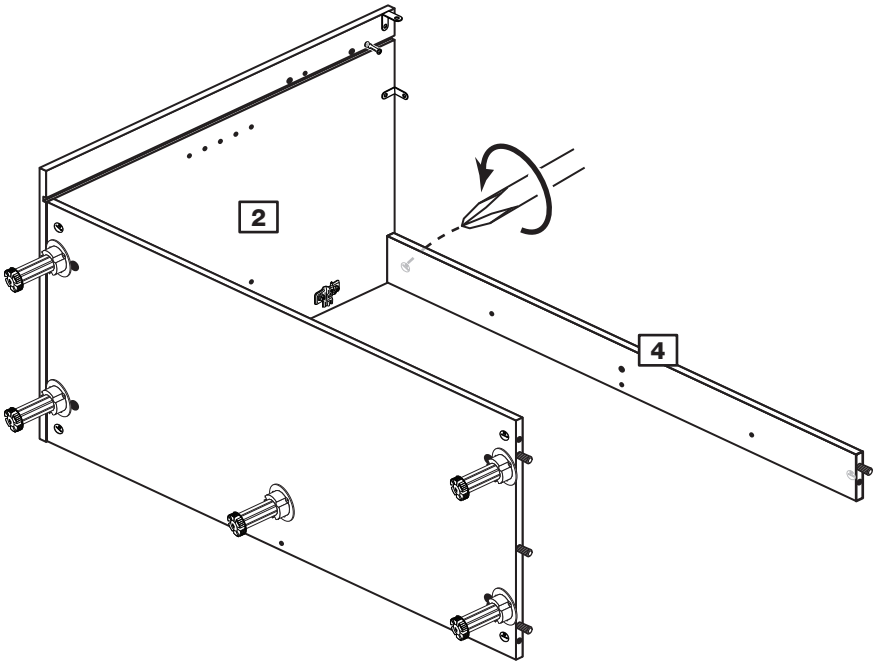

Step 10

Prepare the muntin rail


Tap 2 wooden dowels A into the muntin rail 8 as shown.

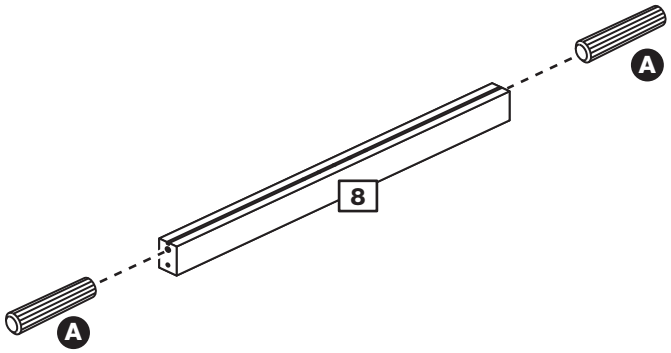

Step 11

Fit the muntin rail

Attach the muntin rail 8 to the base 3 and cross rail 4 and secure with 2 screws O

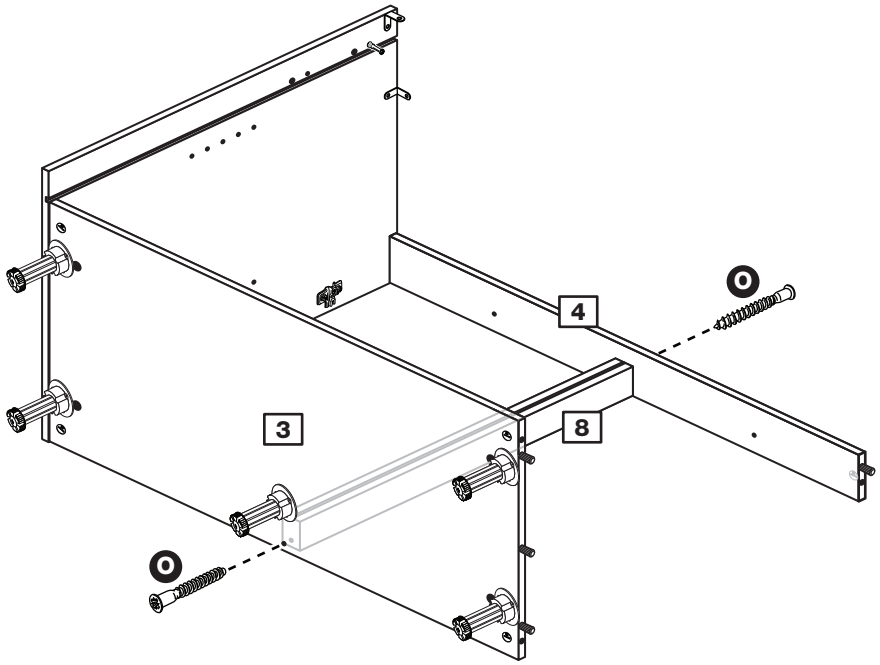


Step 12

Fit a cross rail

Push a cross rail 4 onto the right side 2 as shown.

Use a screwdriver to tighten the large locking nut C fitted to the cross rail 4.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

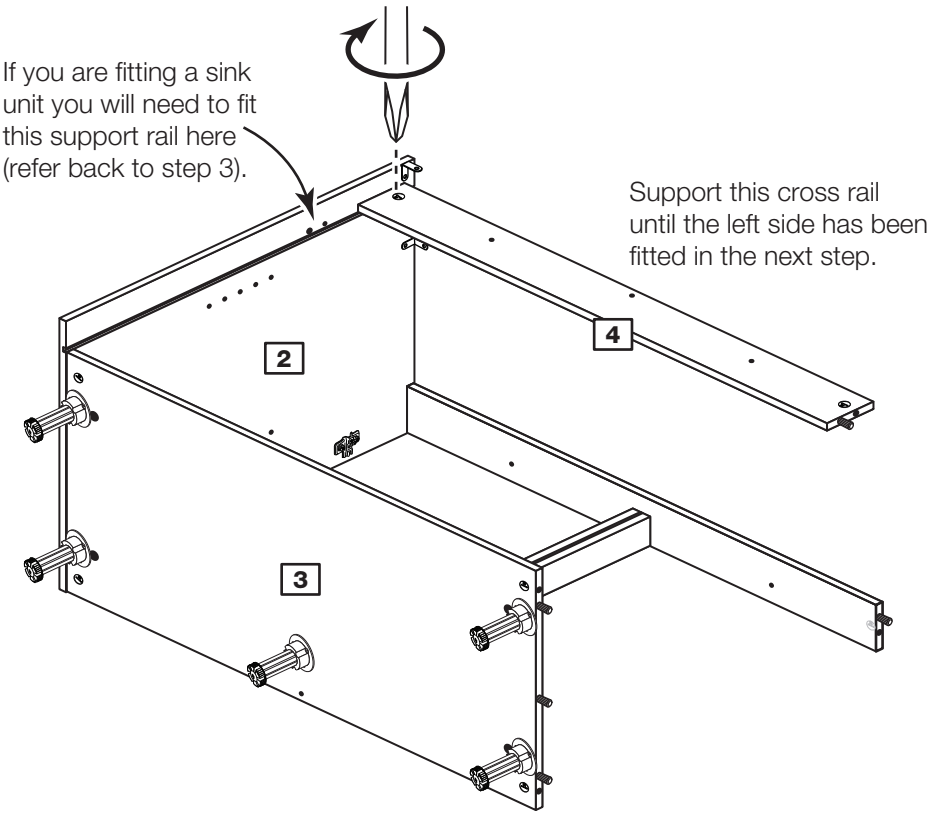


Step 13

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the large locking nut C fitted to the 2 cross rails 4 and the 2 fitted to the base 3.


Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

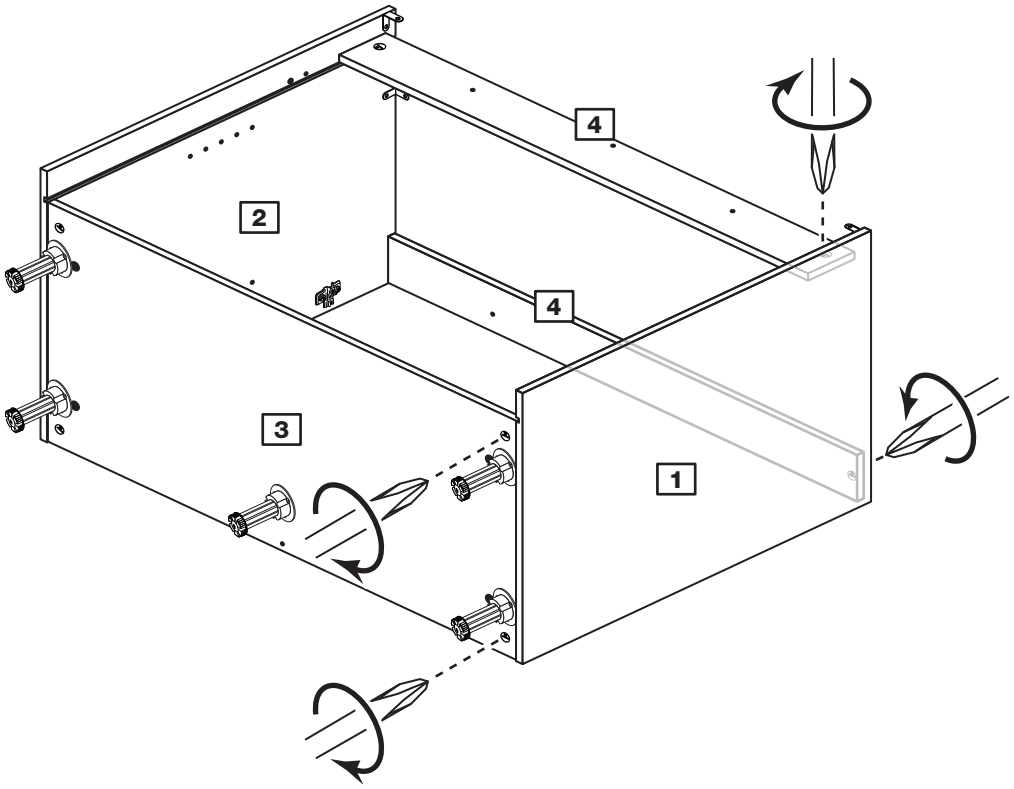

Step 14

Fit the back

Slide the back 6 along the grooves in the side panels 1 and 2.

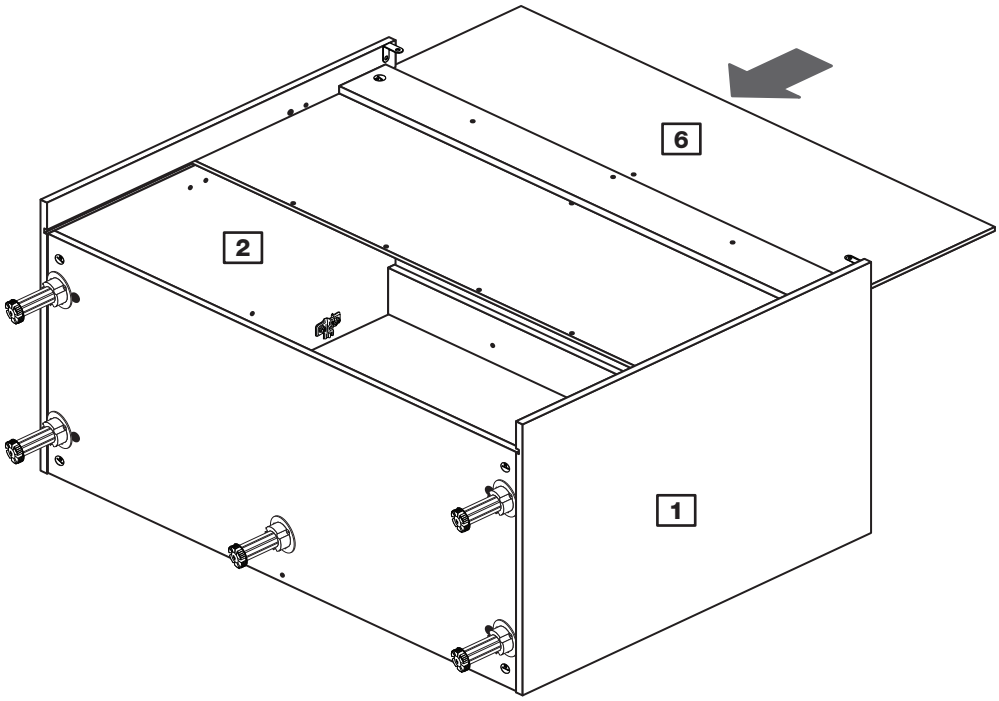


Step 15

Secure the back

The bottom edge of the back 6 must be flush with the bottom edge of the base 3.

Secure the back 6 to the back edge of the base 3 using 4 screws F.

Stand the unit up for the next stage.

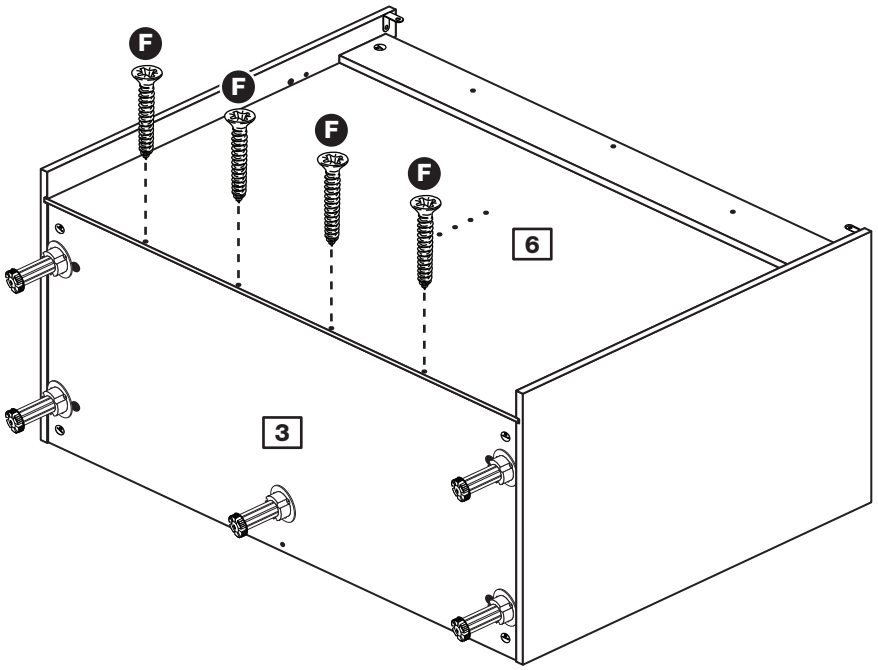


Step 16

Secure the unit to the wall

Using the brackets F fitted to the back edge of the sides 1 and 2 screw the unit to the wall.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the Unit to the wall.

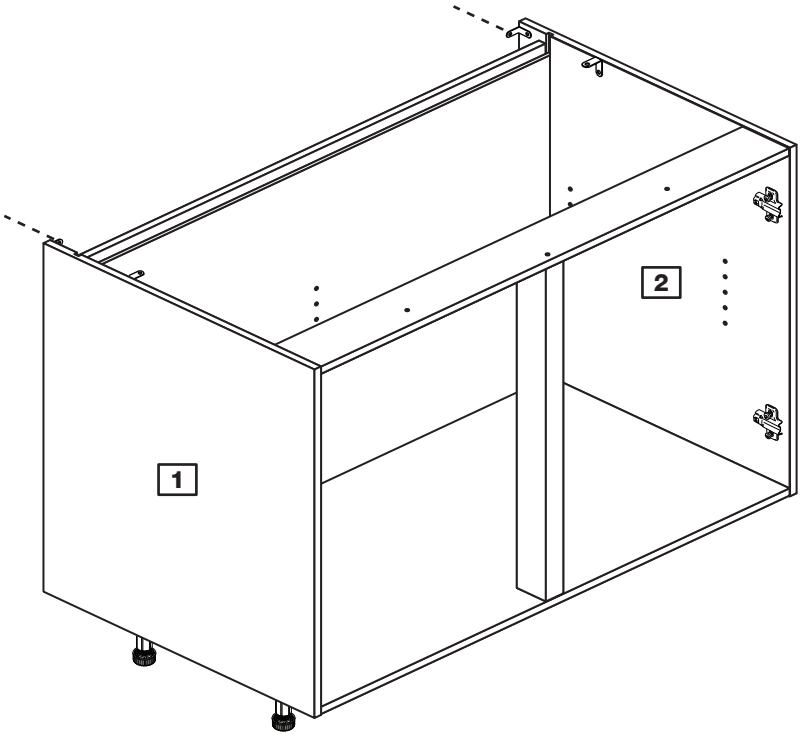

Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Step 17

Joining units together

Fittings have been supplied so you are able to join units together.


Make sure that your first unit is level.


Push the other unit up against first unit and ensure both units are level.


Check that the ends are flush and in line, then clamp them together.

Using a 5mm drill bit, drill 2 holes (approximate positions shown circled) in the side panel into the adjoining side panel of the other unit.

Push the connecting sleeves G into the holes and then screw the connecting bolts H in from the other side.

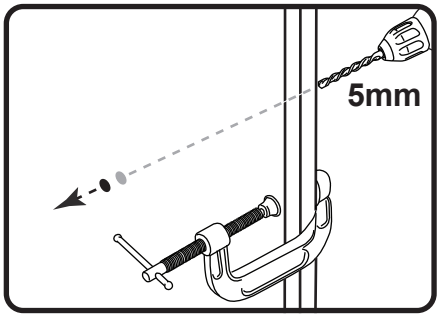

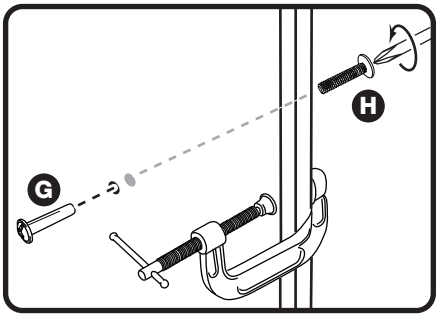

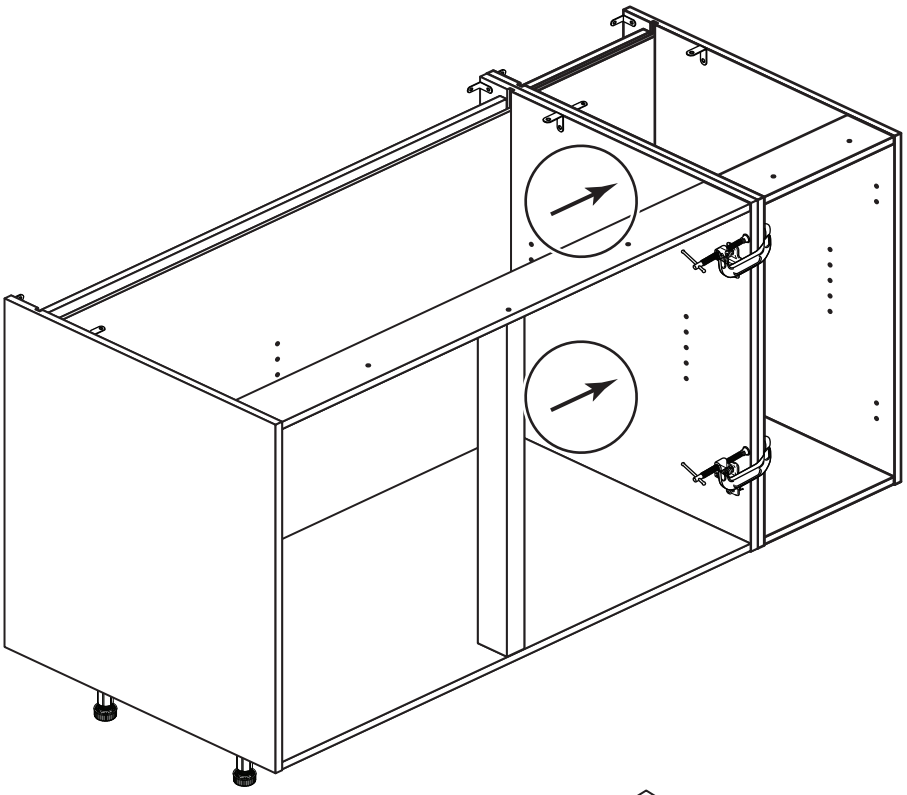


Step 18

Fit the loose shelf

Insert 6 shelf studs K at the required height. 2 in each side 1 and 2, 1 in the back 6 and 1 in the munting 8.

Lower the loose shelf 5 down onto the shelf studs K.

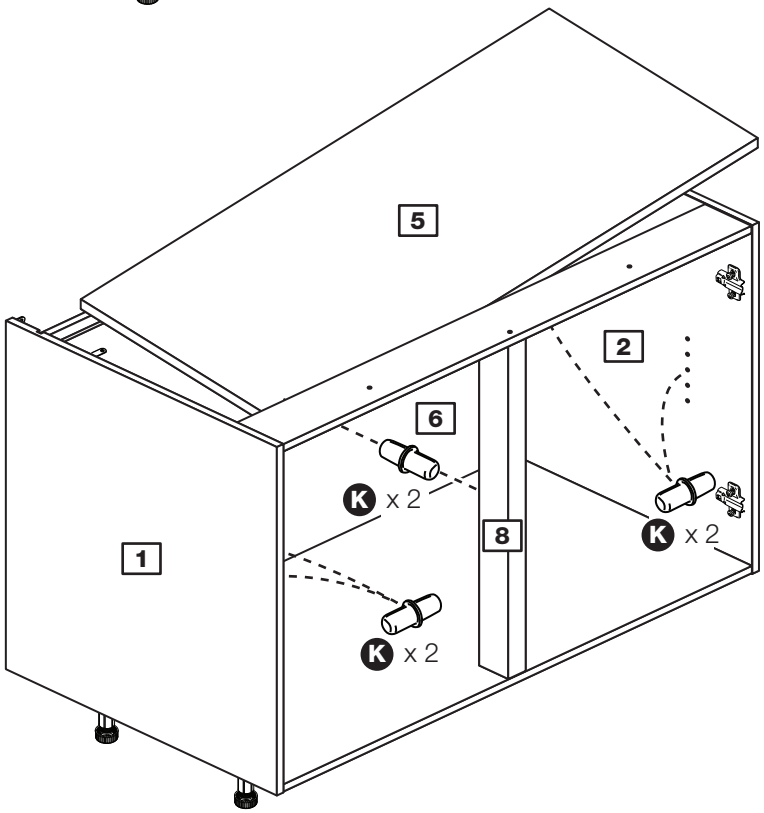


Step 19

Fit the unit to worktop

To fit the unit to the worktop use 2 screws (F) to screw up through the holes in the cross rail [4] as shown.

Then use 2 screws (E) to screw up through the brackets (J) as shown.

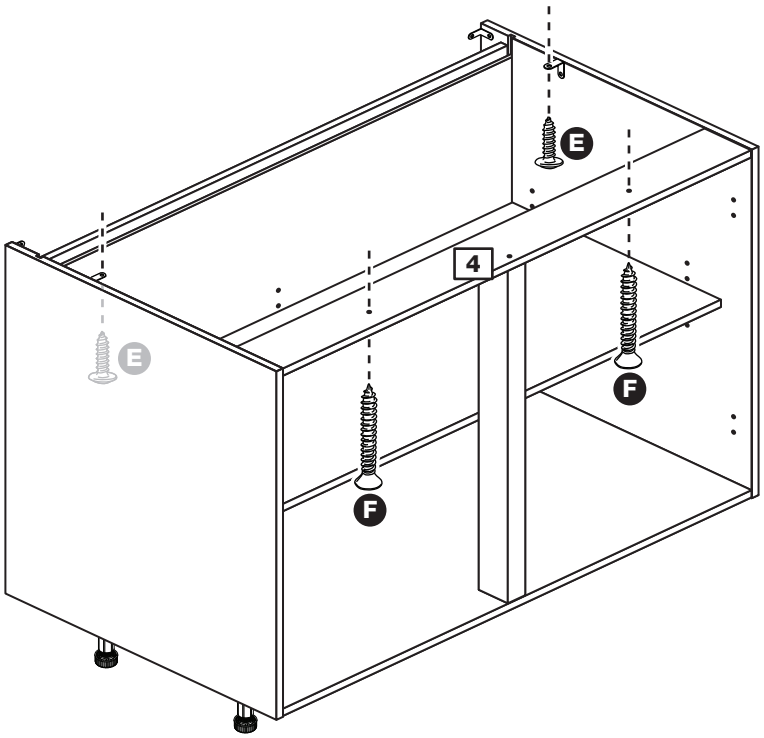


Step 20

Prepare the doors

Push fit 2 hinges (M) into each door [7].

Secure each hinge with 2 screws (D).

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the front edge of the door.

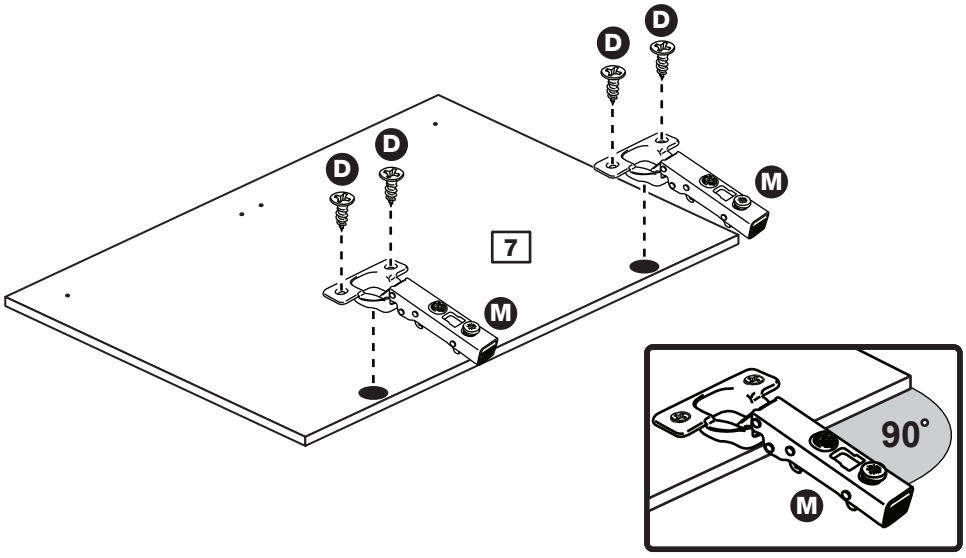

Step 21

Drill the handle holes in the doors

Important: Please follow these instructions carefully.

Lay the doors [7] down onto a smooth surface.

Important: Carefully choose which holes you need to drill.

Check that the holes and hinges are in the same place as the diagrams.


Note: We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.


Using the pilot hole in the rear face of the door [7], drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door [7] over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.

Note: Drill bits are not provided.

PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY TO CHOOSE WHICH 2 HOLES YOU WILL NEED TO DRILL

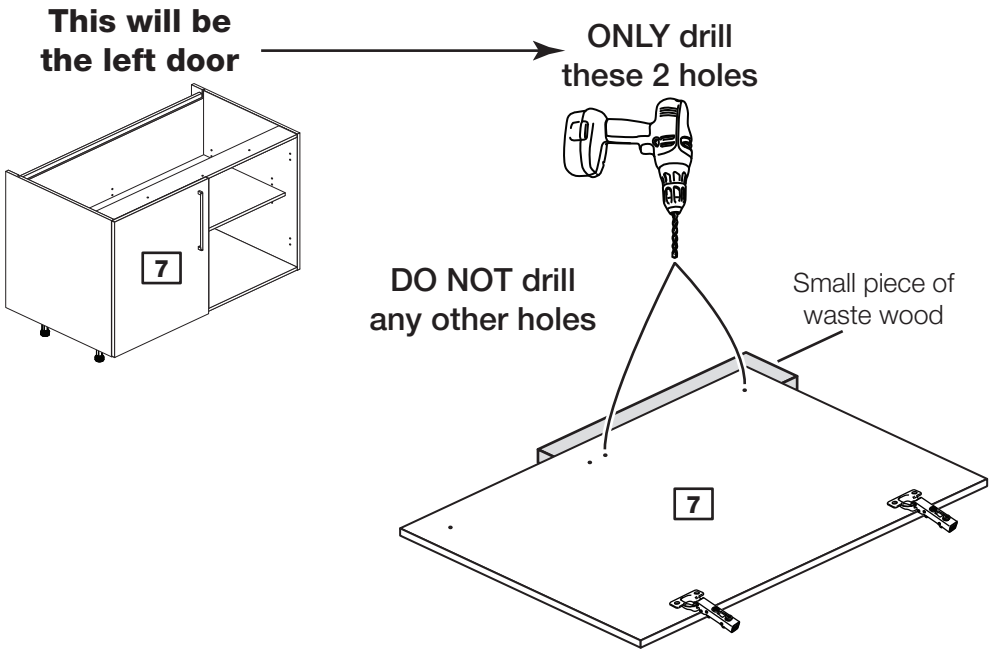

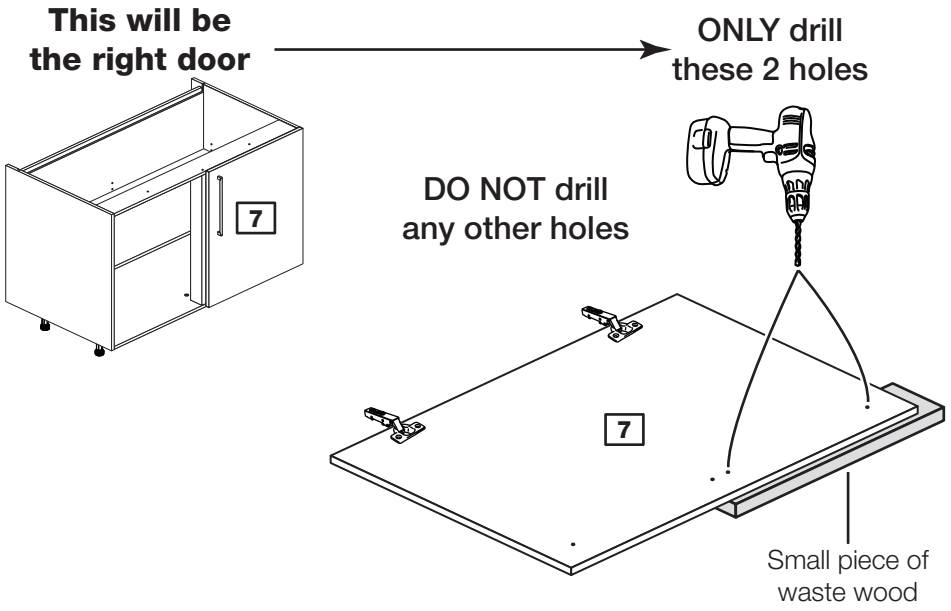

Step 22

Fit doors and handles

2 people are needed here


Note: The easiest way to attach the door 7 is to fit the top hinge first, then align and fit the other hinge.


a: Push the hooks on the hinge arm M underneath the front of the hinge plate L.

b: Press the front of the hinge arm M against the hinge plate L until it clicks into place.

c: If you need to seperate the hinge arm M from the hinge plate, L press the button at the end of the hinge arm and lift it off of the hinge plate.

d: Attach a handle Pa to each door 7 using the screws Pb packed with them.

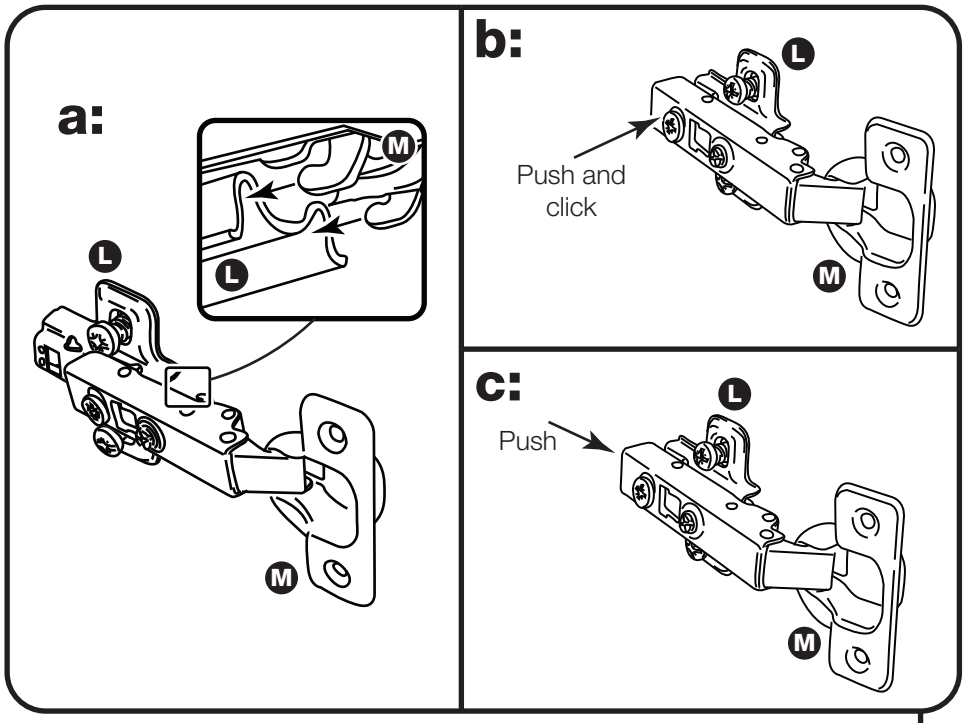

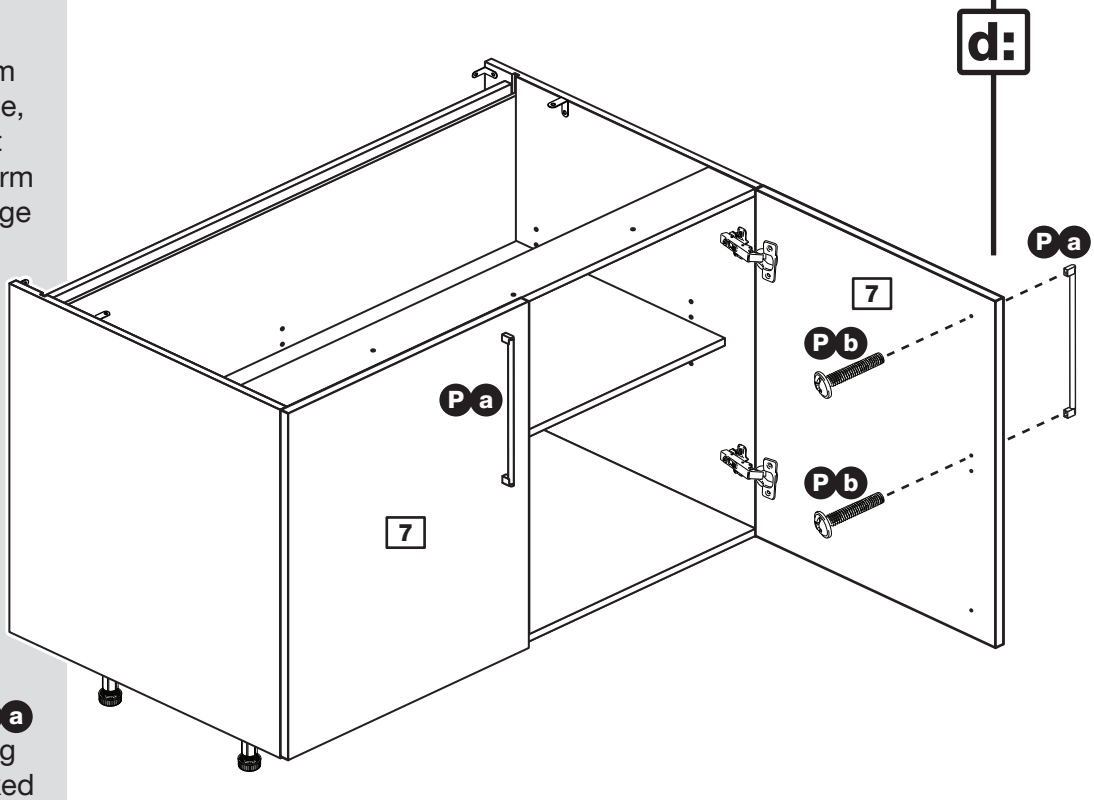


Step 23

Adjust the door if needed

a: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

b: Forward and Back adjustment.
Loosen screw B on hinge arm and move door in or out as required.
Retighten screw B.


c: Sideways adjustment.
To move door ‘out’ loosen screw C.
To move door ‘in’ tighten screw C

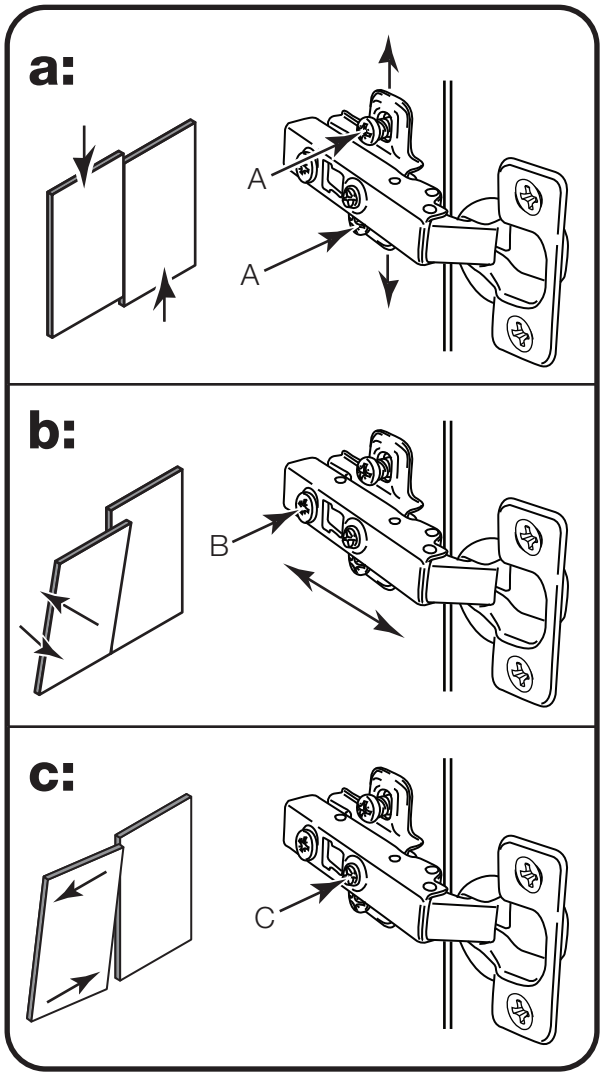

Step 24

Fit the hinge covers

Push the hinge covers (N) onto the hinge arms (M).

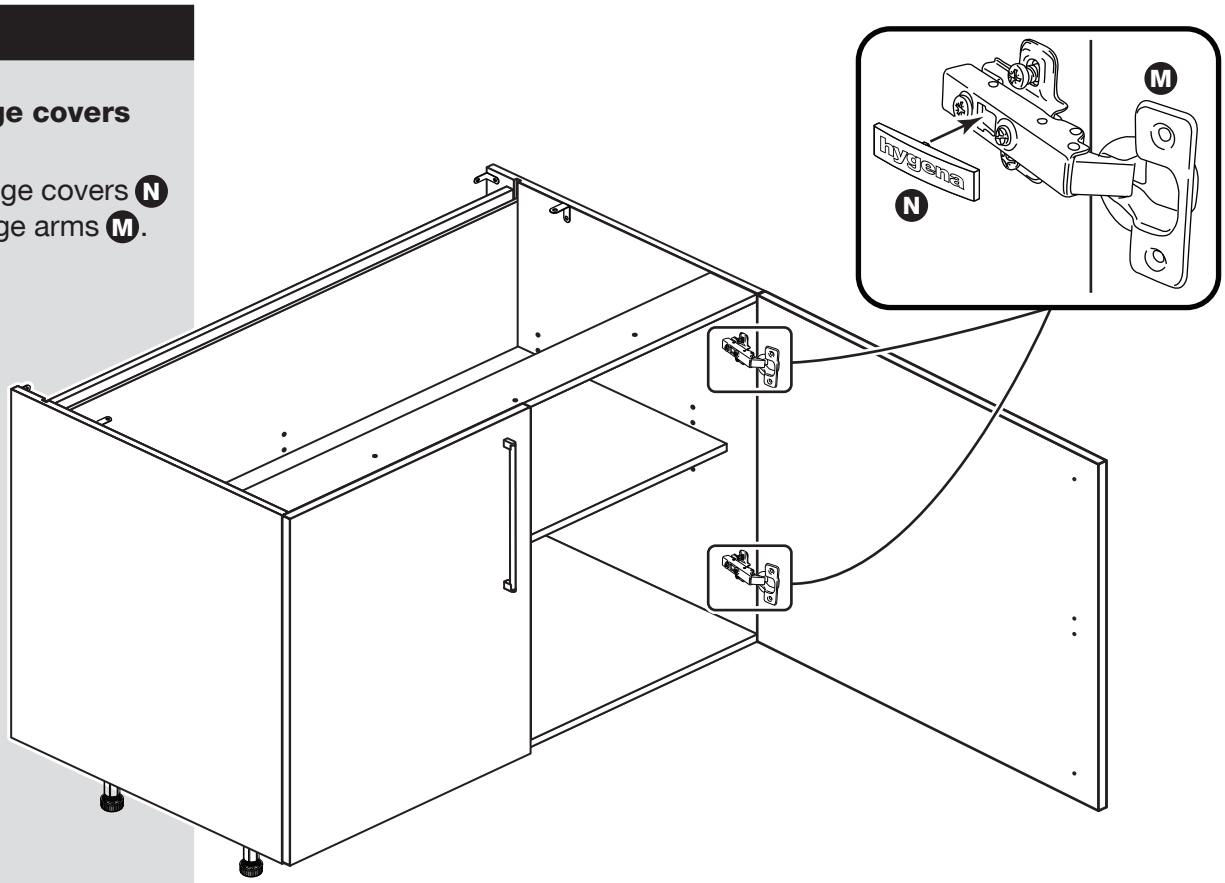

Step 25

Fit the plinth

After cutting the plinth to the required length, offer the plinth up to the unit and using a pencil, mark the position of the unit's legs (1b) on the back of the plinth.


Position the leg bracket (1c) so it is in the centre of the pencil mark and half way up the plinth.


Fix the leg bracket (1c) to the back of the plinth using 2 screws (1e).

Slide the leg clip (1d) into the leg bracket (1c).

Offer the plinth up to the unit and push the leg clips (1d) onto the legs (1b).

Black Plinth Pack	608/2345
Cream Plinth Pack	608/2369
Grey Plinth Pack	608/3784
Plum Plinth Pack	608/3791
White Plinth Pack	608/2352

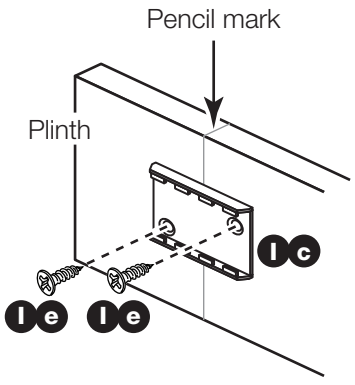

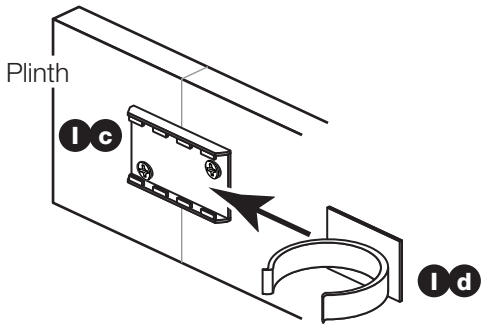

Step 26

Fit other products to the unit

To fit other products to this unit e.g. worktops etc., please follow the instructions packed with them.

We recommend that you consult a qualified joiner or kitchen fitter.

Assembly is complete

Warning: The unit is heavy. Lift with care.

