
FLIP UP STORAGE DESK OAK

Assembly Instructions - Please keep for future reference | 615/1795

HOME BY ARGOS

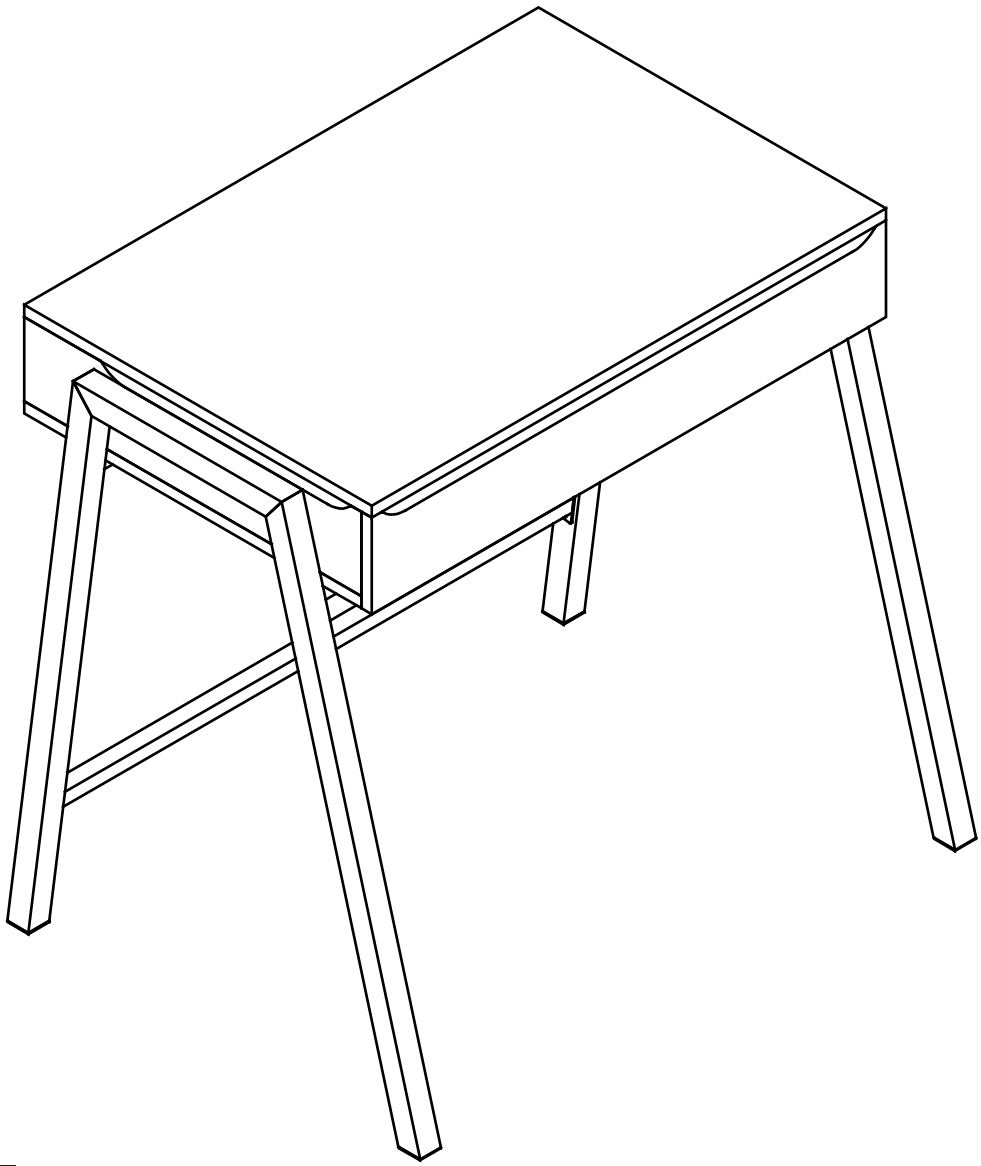

Dimensions

Width - 80cm
Depth - 60cm
Height - 75cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800

Issue 1 - 12/05/16

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:** 0345 6400800


Please check you have all the panels listed below

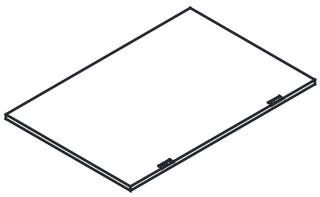


1 Top panel x1

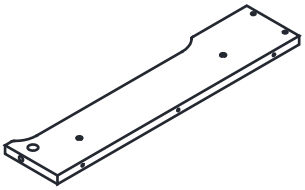


2 Left side panel x1

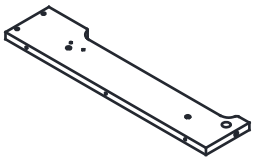


3 Right side panel x1

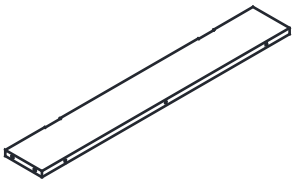


4 Back panel x1

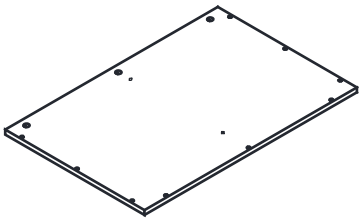


5 Bottom panel x1

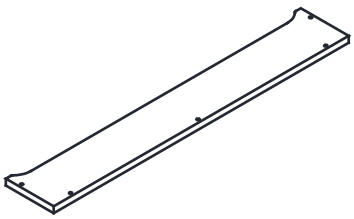


6 Front panel x1

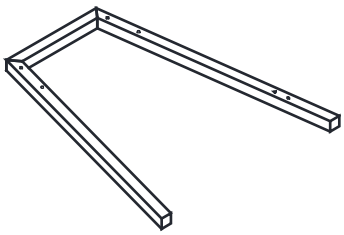


7 Left leg x1

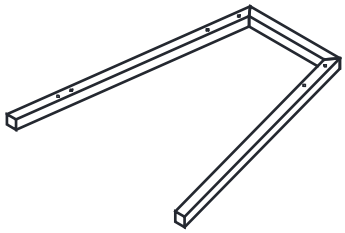

8 Right leg x1

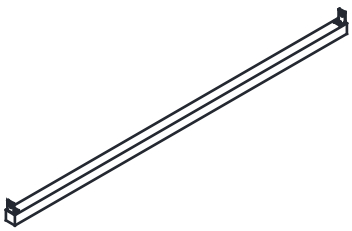

9 Upper rod x2




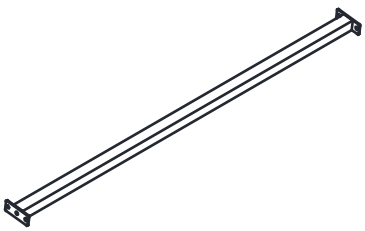


10 Lower rod x1


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

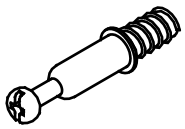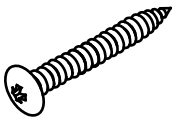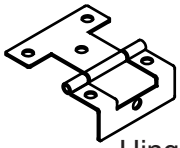A  Cam pillar x6	**B**  Cam nut x6	**C**  Dowel x3	**D**  30mm Screw x2
E  25mm Screw x13	**F**  12mm Screw x8	**G**  12mm Screw x16	**H**  Hinge x2
I  Hinge x1	**J**  Felt Pads x2		

Ruler - Use this ruler to help correctly identify the screws






The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1


Attaching side panels


Attach left panel 2 and right panel 3 to back panel 4 by using cam pillar A cam nut B and dowel C as shown. Fasten cam nut B as shown.

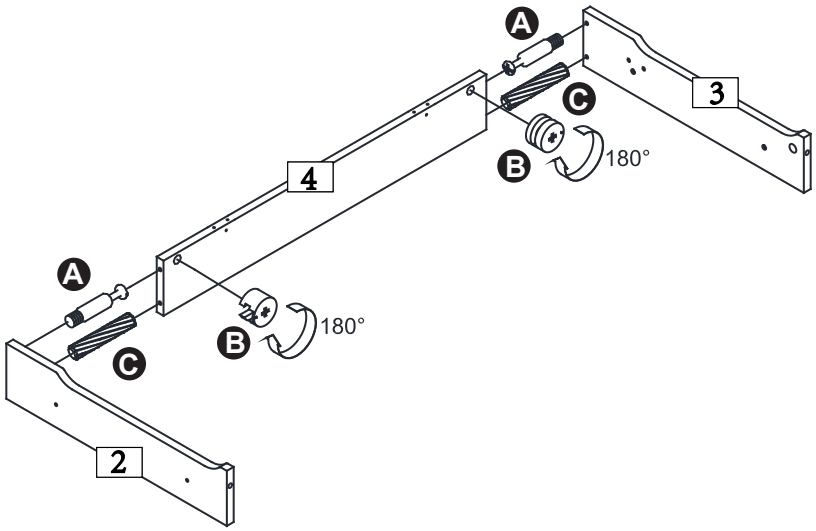

Step 2

Turn Step 1 upside down prepare for step 3.

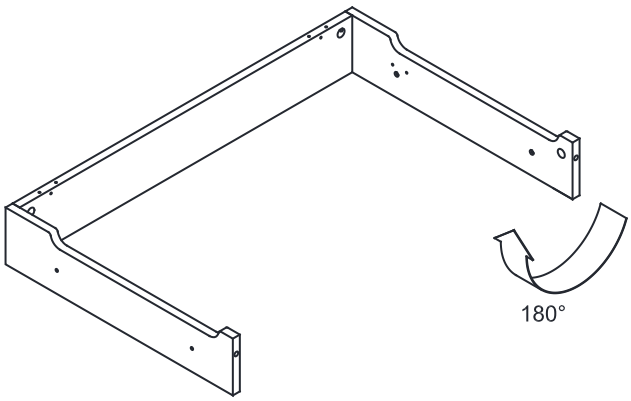

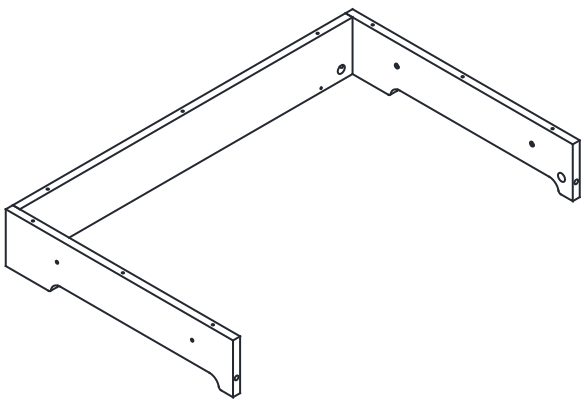


Assembly Instructions

Step 3

Attaching bottom panel


Attach bottom panel 5 to side panels by using screws E as shown.

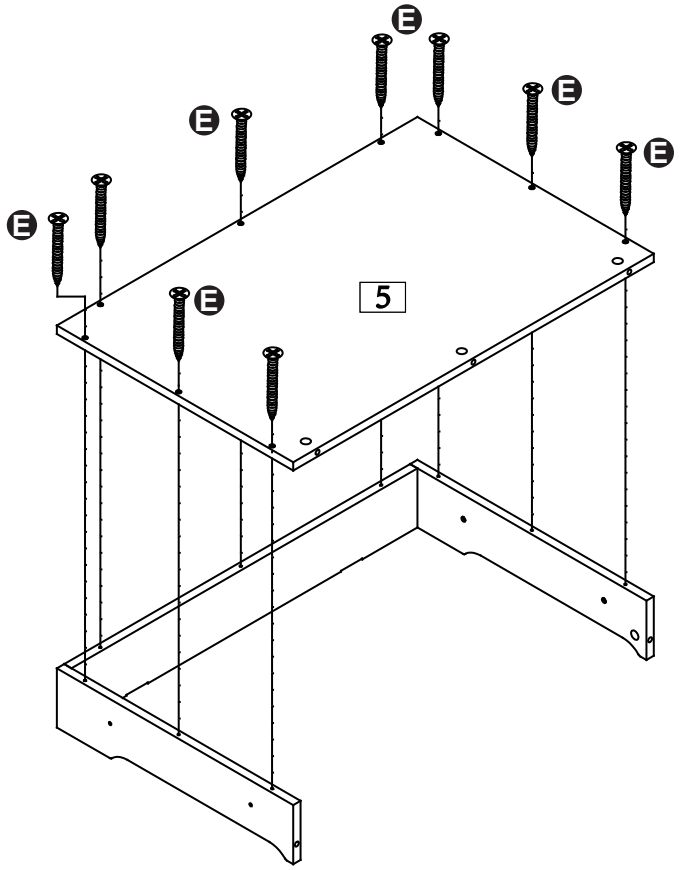

Step 4

Preparing front panel

Fasten cam pillars A and insert dowel C to front panel 6 as shown.

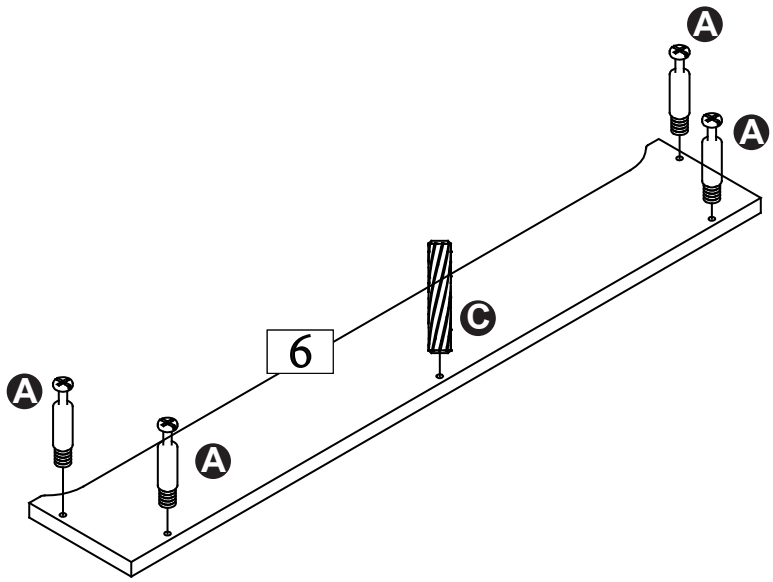


Assembly Instructions

Step 5

Attaching front panel


Attach front panel 6 to compartment as shown Fasten cam nut B as shown.

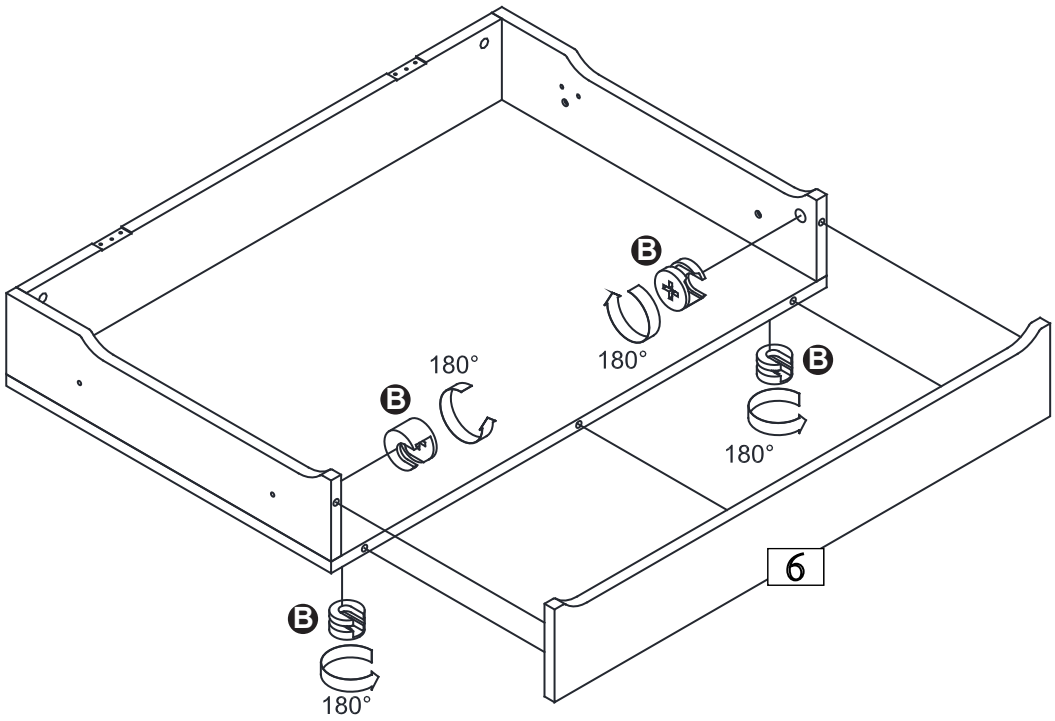

Step 6

Attaching connecting rods

Attach upper rods 9 and lower rod 10 to left leg 7 by using screw F as shown.

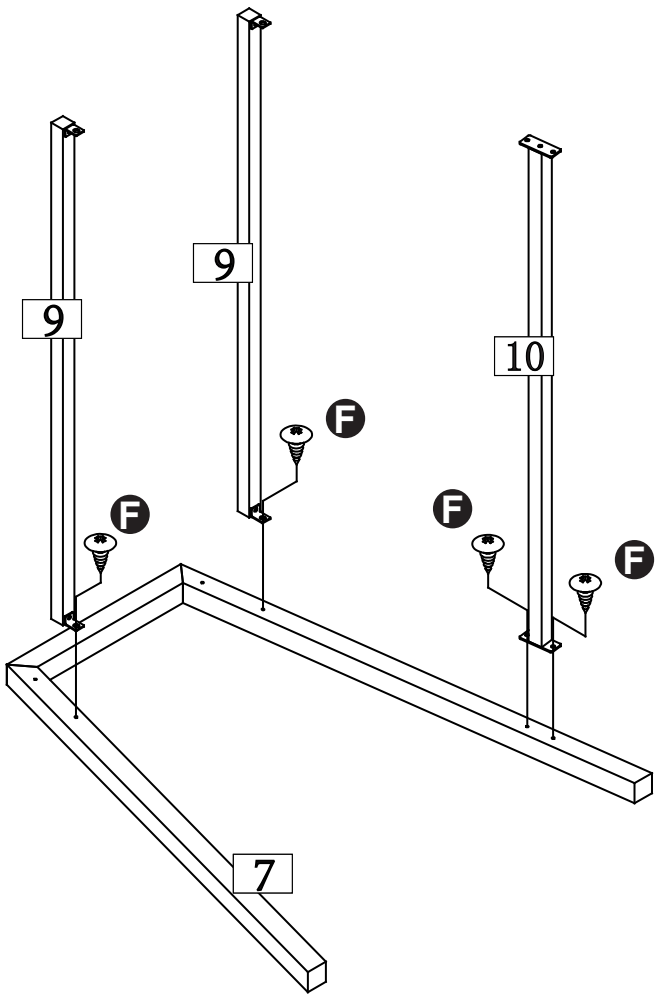


Assembly Instructions

Step 7

Attaching leg

Attach Step 6 to right leg [8] by using screw (F) as shown.

Note. For steps 6 and 7 do not fully tigthen all screws; this makes step 8 more easy to assemble.

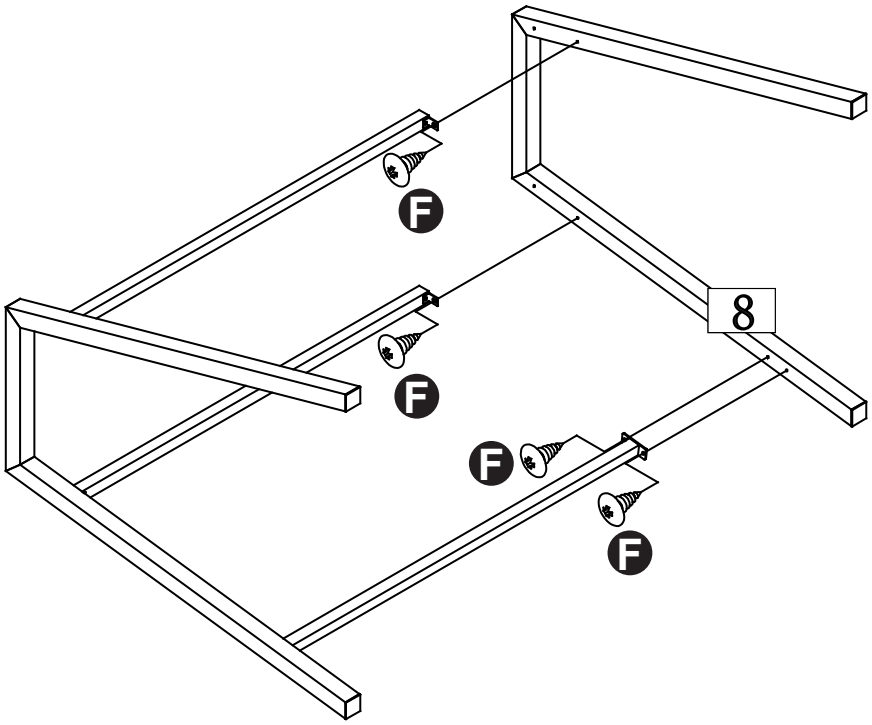


Step 8

Attaching compartment to metal frame

Attach compartment to metal frame by using screw (E) as shown.

From underneath fix frame to storage compartment using screws (D).

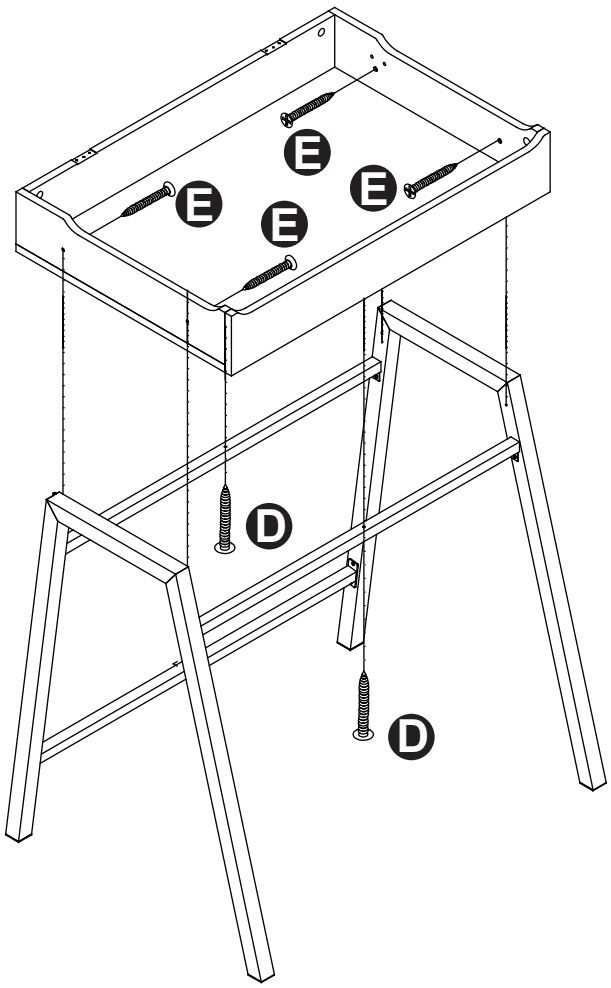


Assembly Instructions

Step 9

Preparing top panel


Fasten hinge H to top panel 1 by using screw G as shown.

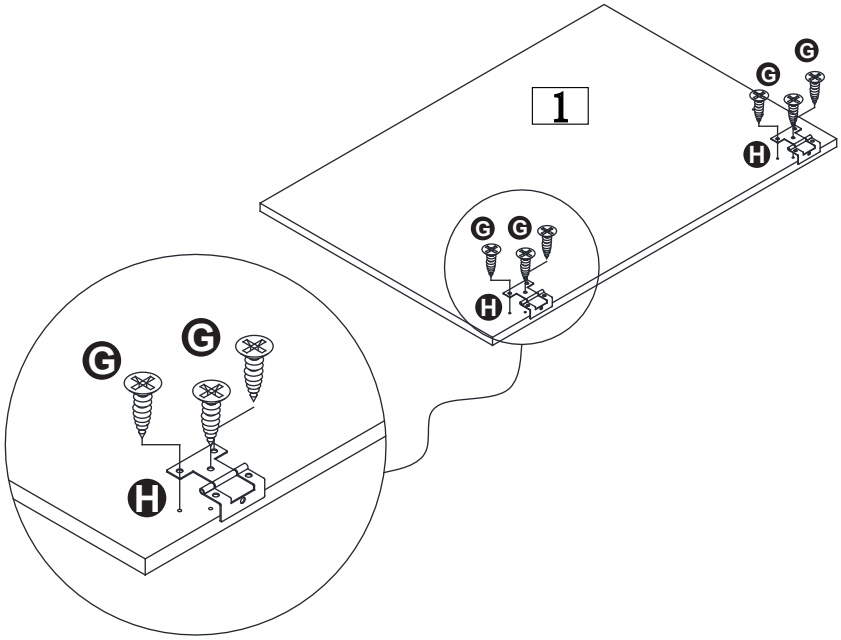

Step 10

Attaching top panel

Attach top panel 1 to compartment by using screw G as shown.

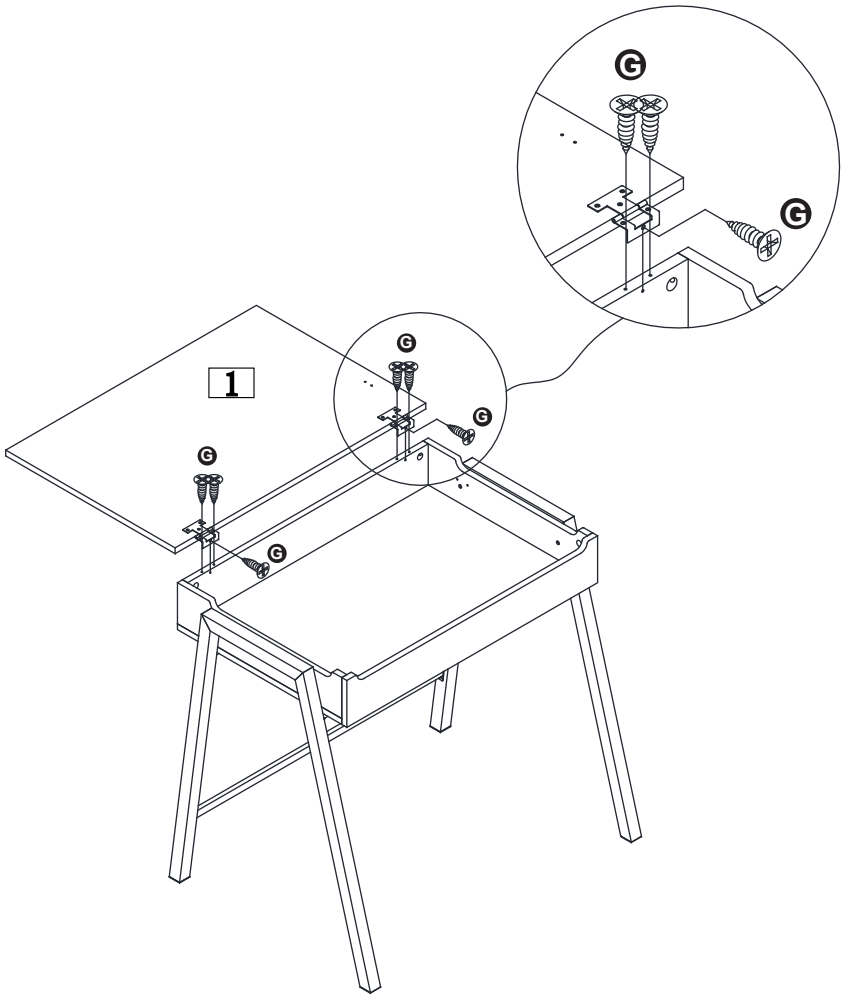


Assembly Instructions

Step 11

Attaching sprung hinge


Attach hinge Ⓘ to compartment and top panel [1] by using screw Ⓖ as shown.
Attach felt pads Ⓙ where indicated.

Finally — re-check all fixing screws to ensure they are fully tightened.

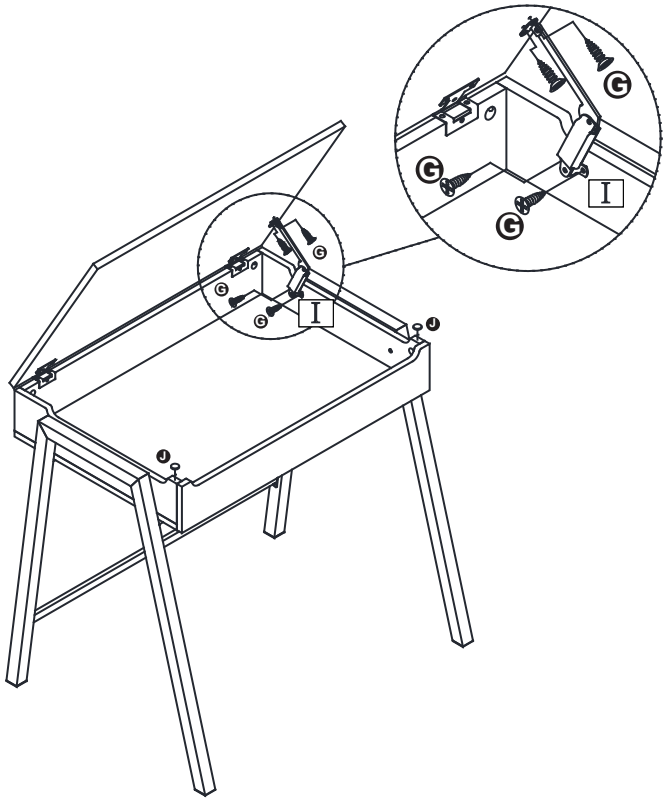

Step 12

Assembly is complete.

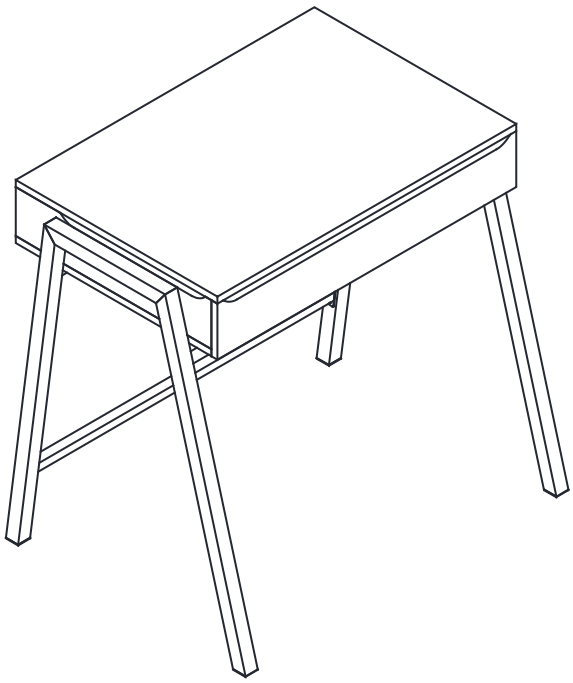

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 6400800