
Scandinavia - 3 Drw Bedside Chest

Assembly Instructions - Please keep for future reference

630/2001

658/1561

615/6903

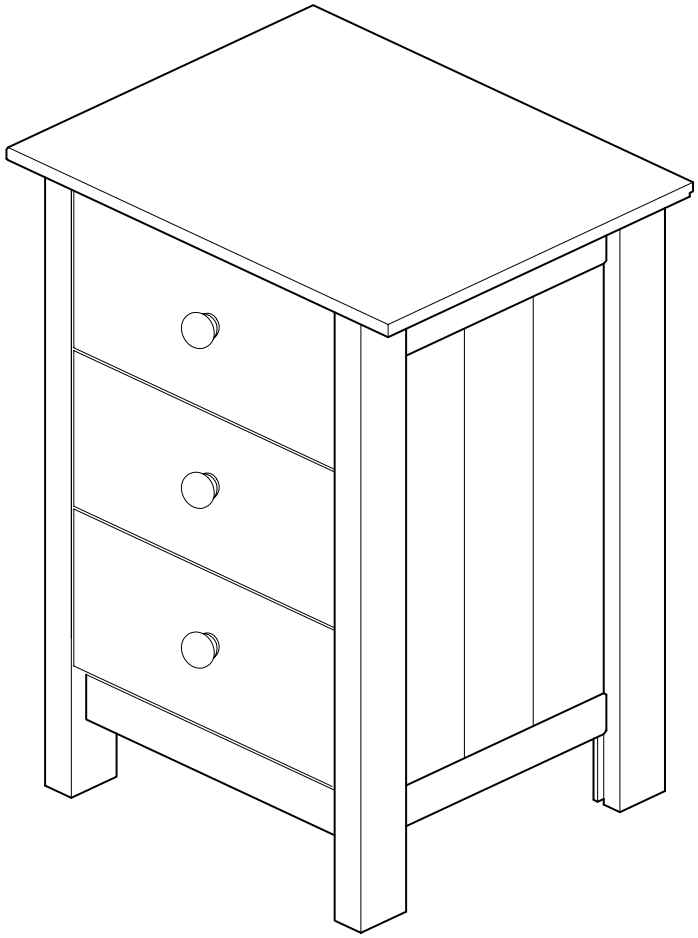

Dimensions

Width - 42.8cm
Depth - 40cm
Height - 61cm

Important - Please read these instructions fully before starting assembly


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 01/04/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

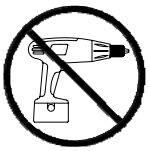

- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

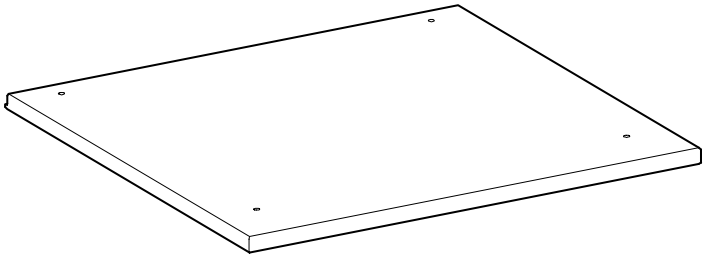


1 Top (42.8 x 40cm)

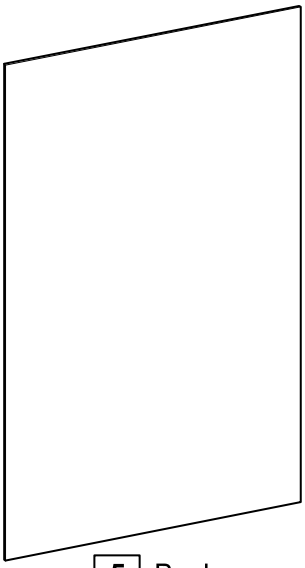


5 Back
(52 x 33.6cm)

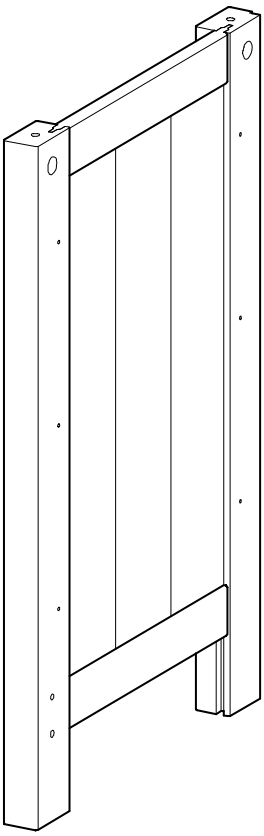


2 Left side
(59.6 x 37cm)

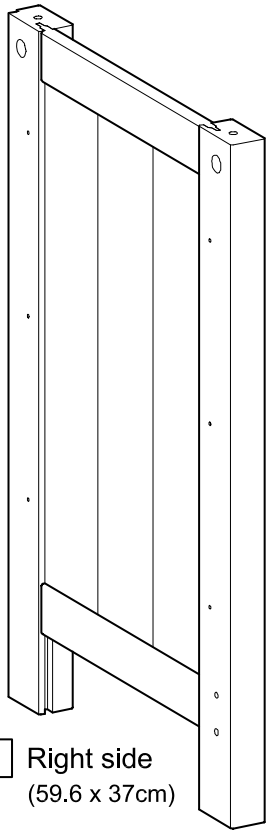


3 Right side
(59.6 x 37cm)

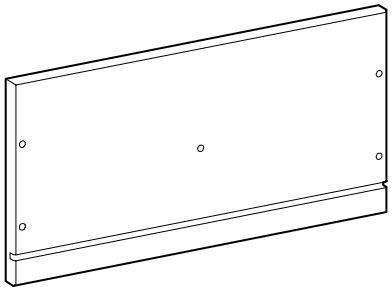


6 Drawer front x 3 (31.4 x 15.7cm)

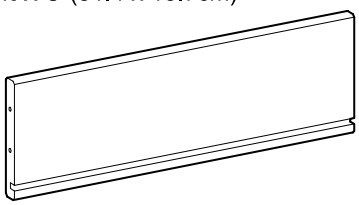


7 Drawer back x 3 (28.6 x 9cm)

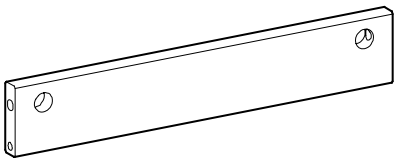


4 Plinth (31.8 x 5.5cm)

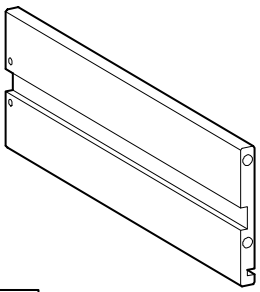

8 Left drawer side x 3
(34.2 x 10.7cm)

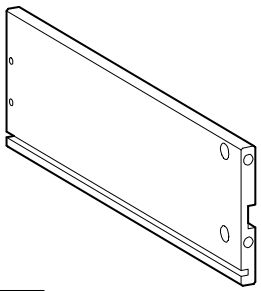

9 Right drawer side x 3
(34.2 x 10.7cm)

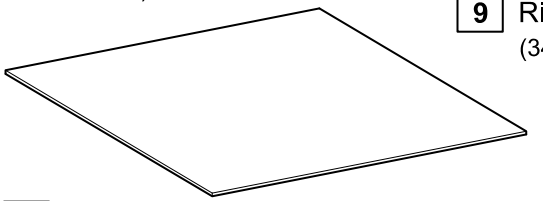


10 Drawer bottom x 3 (33.9 x 29.7cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A

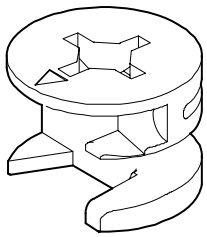

Large cam x 6

B

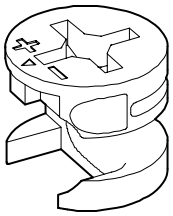


Small cam x 12

C



Locking pin x 18

D




16mm Nail x 20

E




35mm Screw x 15

F




30mm Dowel x 2

G

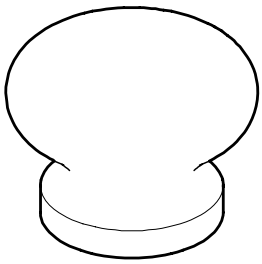


Knob x 3

H

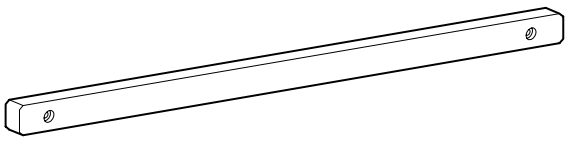


340mm Wooden runner x 6

I




20mm Screw x 12

Tools required




Philips screwdriver (medium & large)




Flatblade screwdriver (medium)


Suitable drill bit (for use with wall plug)

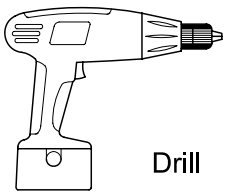


Drill



Small hammer




Ruler/tape measure

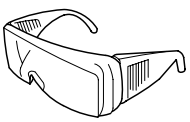


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Components - Key Diagram

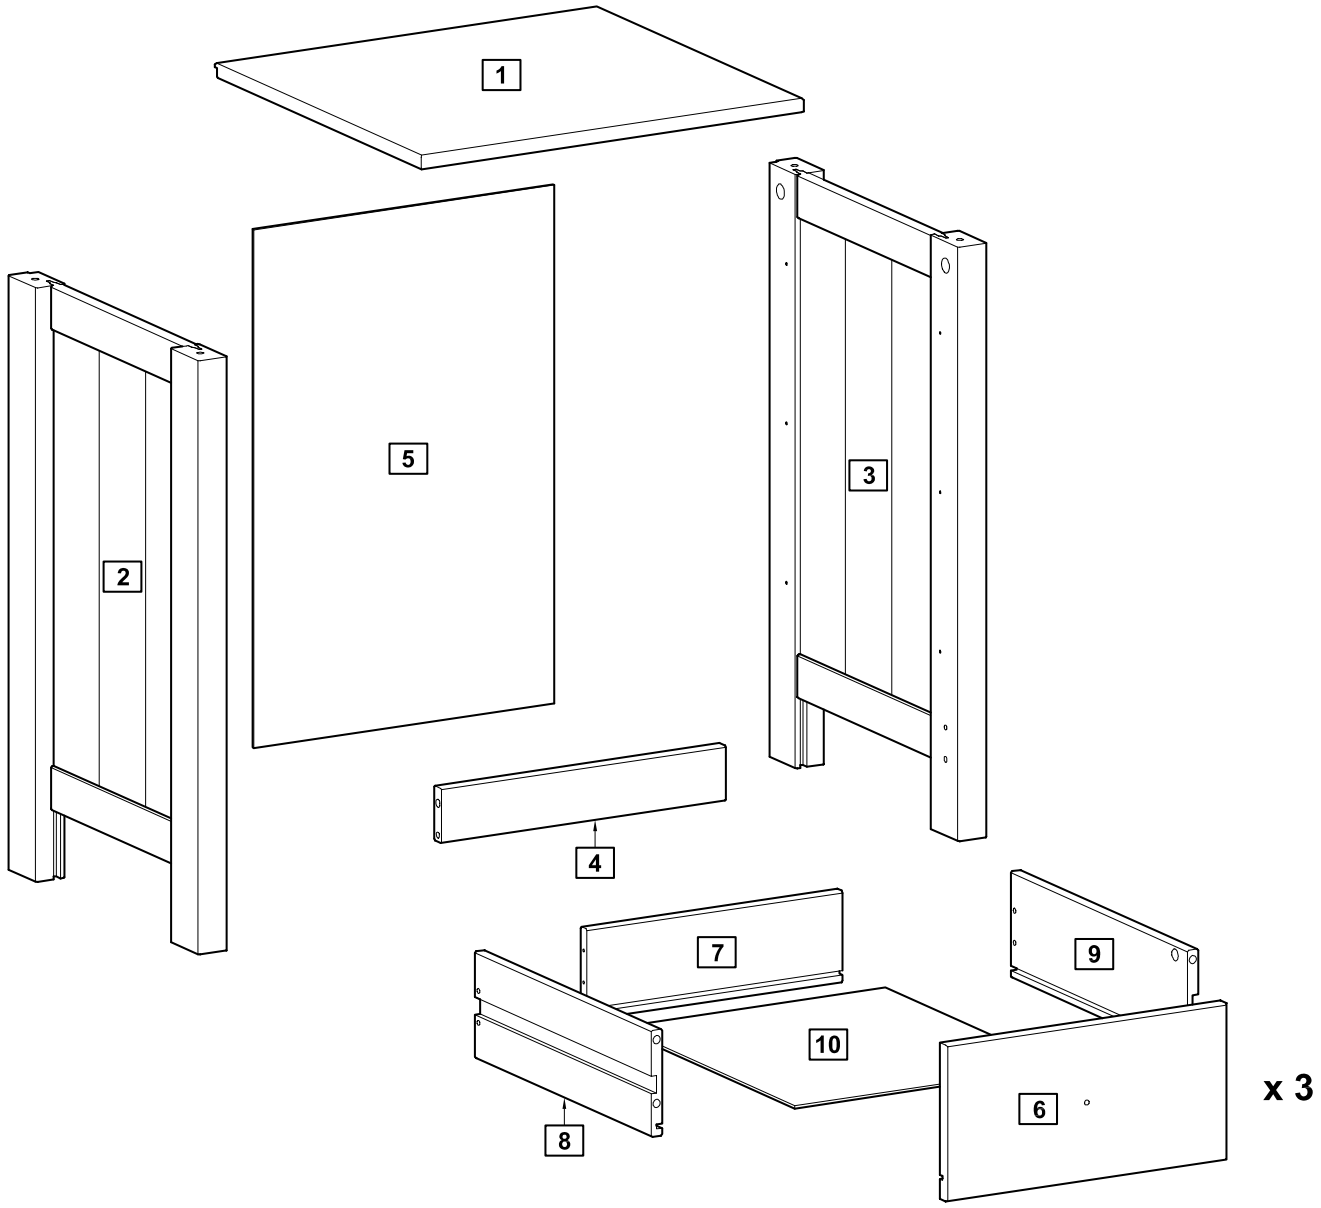


Function of Cam and Locking Pin

Step 1:
Fix the locking pin to the wooden panel.

Step 2:
Push the wooden panel with the attached locking pin onto the other wooden panel.

Step 3:
Place the cam into the hole, arrow pointing towards the locking pin.

Step 4:
Tighten: Turn the cam to the right.

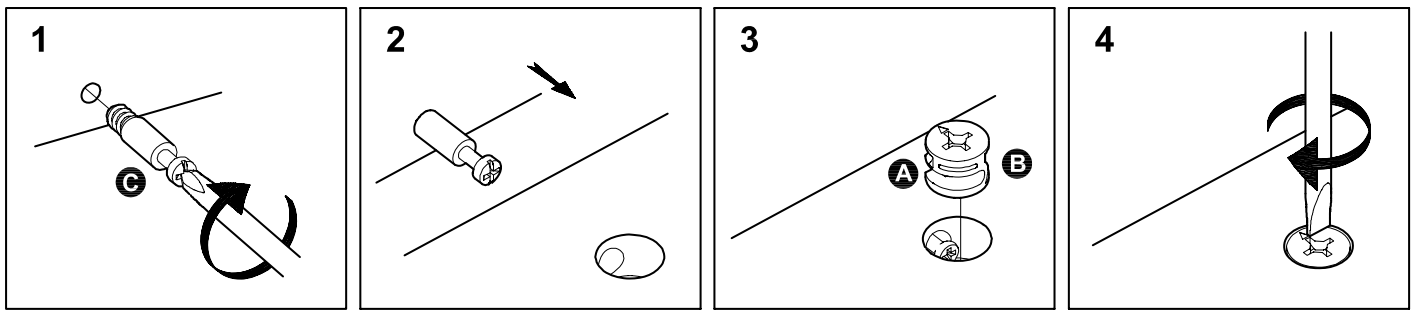


Assembly Instructions

Step 1

Inserting the dowels to the plinth.

Insert the dowels Ⓕ into the holes indicated on the plinth [4].

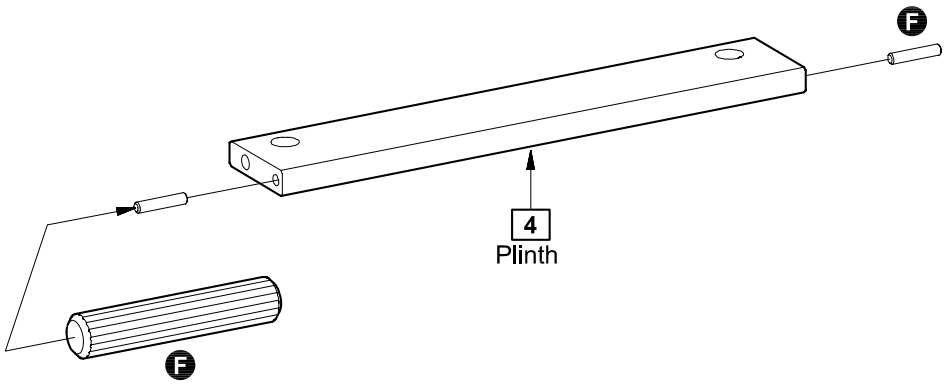



Step 2

Mounting the locking pins to the sides.

Screw the locking pins Ⓒ into the holes indicated on the sides [2] and [3].

Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

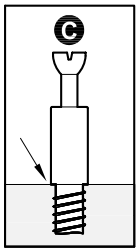


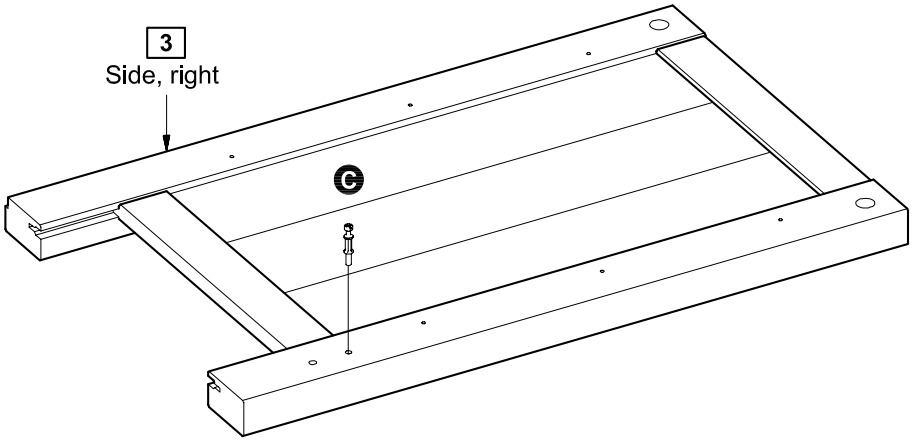



Step 3

Attaching the wooden runners to the sides.

Fix the wood runners H to the sides 2 and 3, using screws I through the holes indicated.

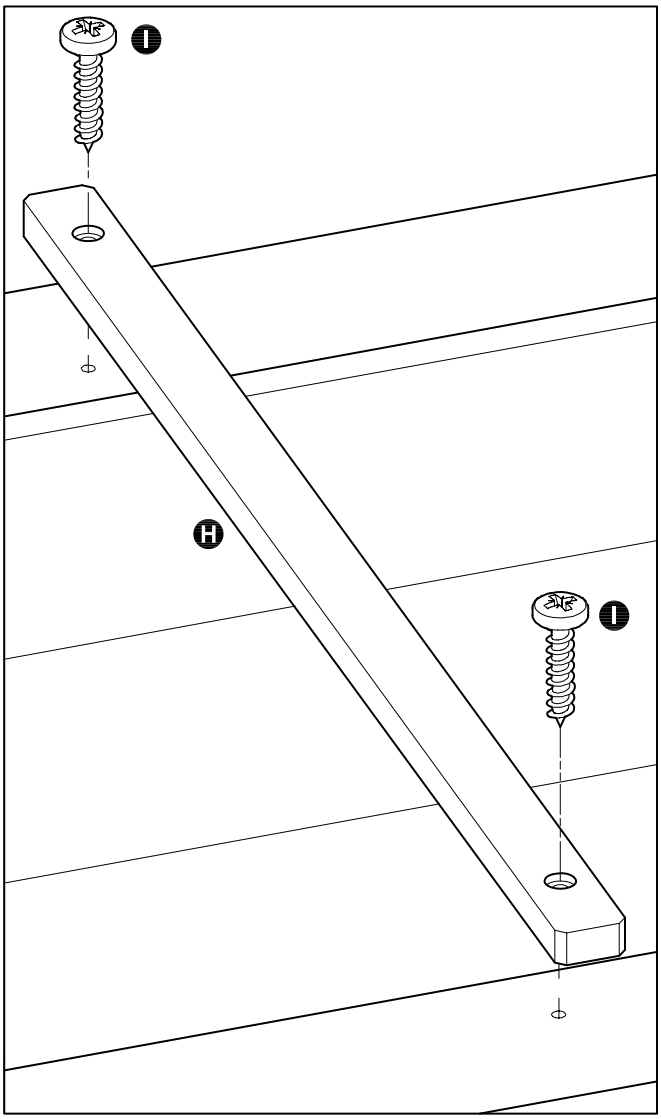

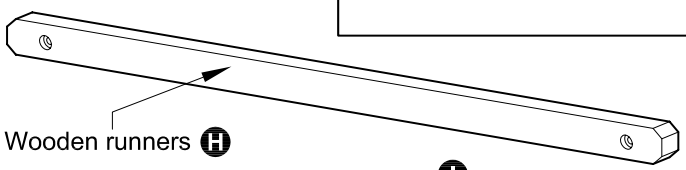

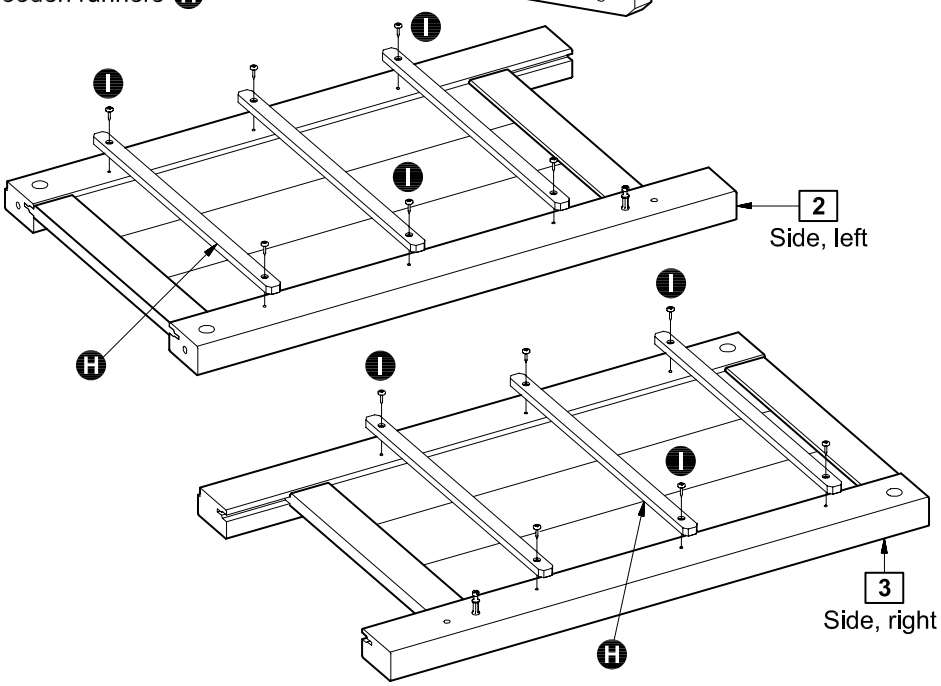

Step 4


Adding the plinth to the right hand side.

Fit the plinth 4 onto the side 3.

See page 4 "Function of cam and locking pin".

Place the large cam A into the hole indicated, arrow pointing towards the side / locking pin.

To tighten cams: Turn to the right using a screwdriver.

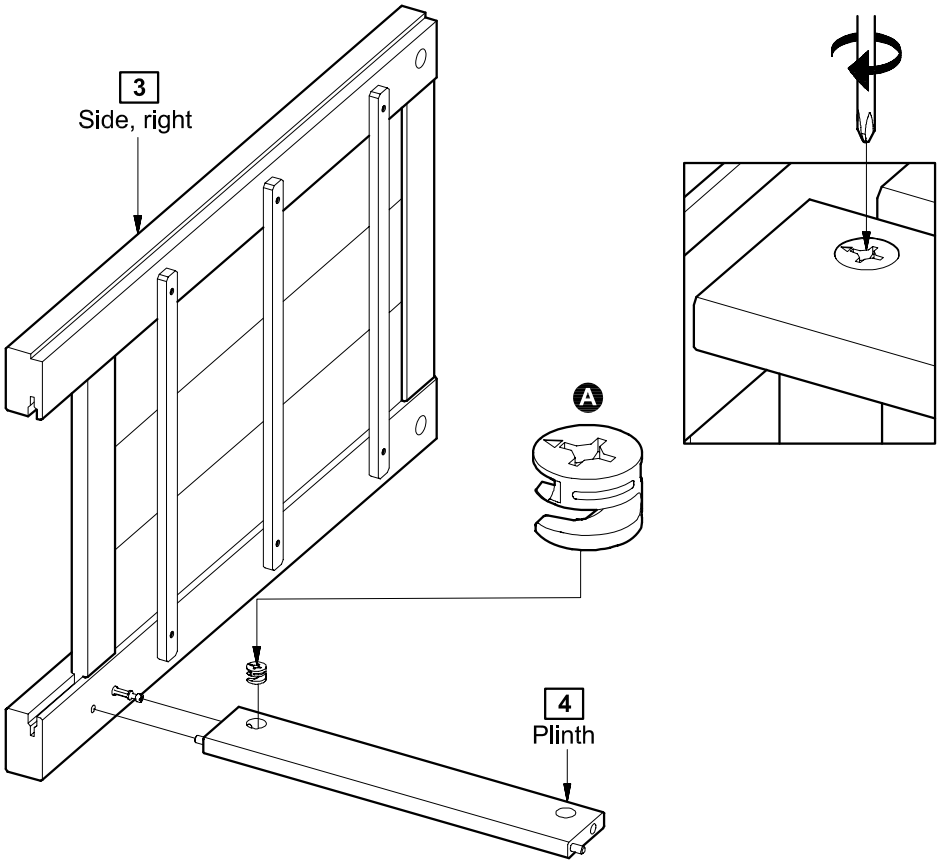

Step 5


Assembling the left hand side to the plinth.

Fit the side 2 onto the plinth 4.

See page 4 "Function of cam and locking pin".

Place the large cam A into the hole indicated, arrow pointing towards the side / locking pin.

To tighten cams: Turn to the right using a screwdriver.

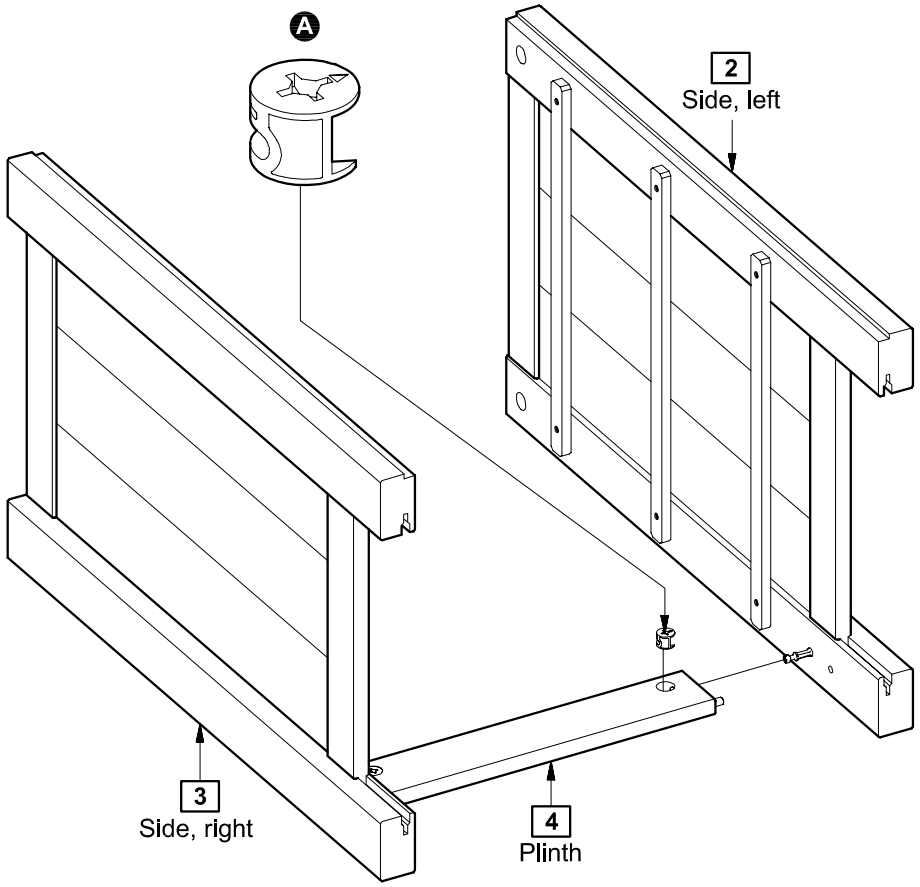


Step 6

Mounting the locking pins to the top.

Screw the locking pins C into the holes indicated on the top 1.

Note: Insert locking pins C as far as shown. **Do not over tighten.**

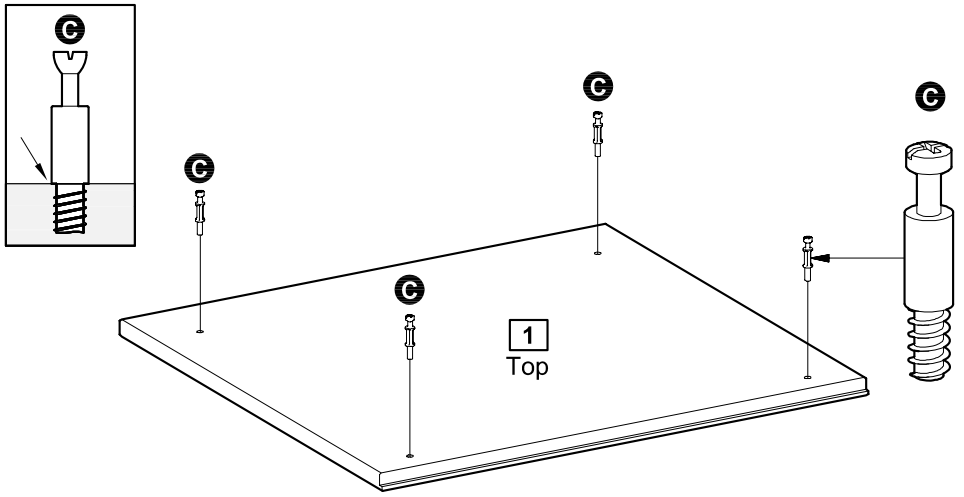

Step 7


Assembling the top to the sides.

Lower the top 1 onto the sides 2 and 3.

See page 4 "Function of cam and locking pin".

Place the large cams A into the holes indicated, arrows pointing towards the locking pins.

To tighten cams: Turn to the right using a screwdriver.

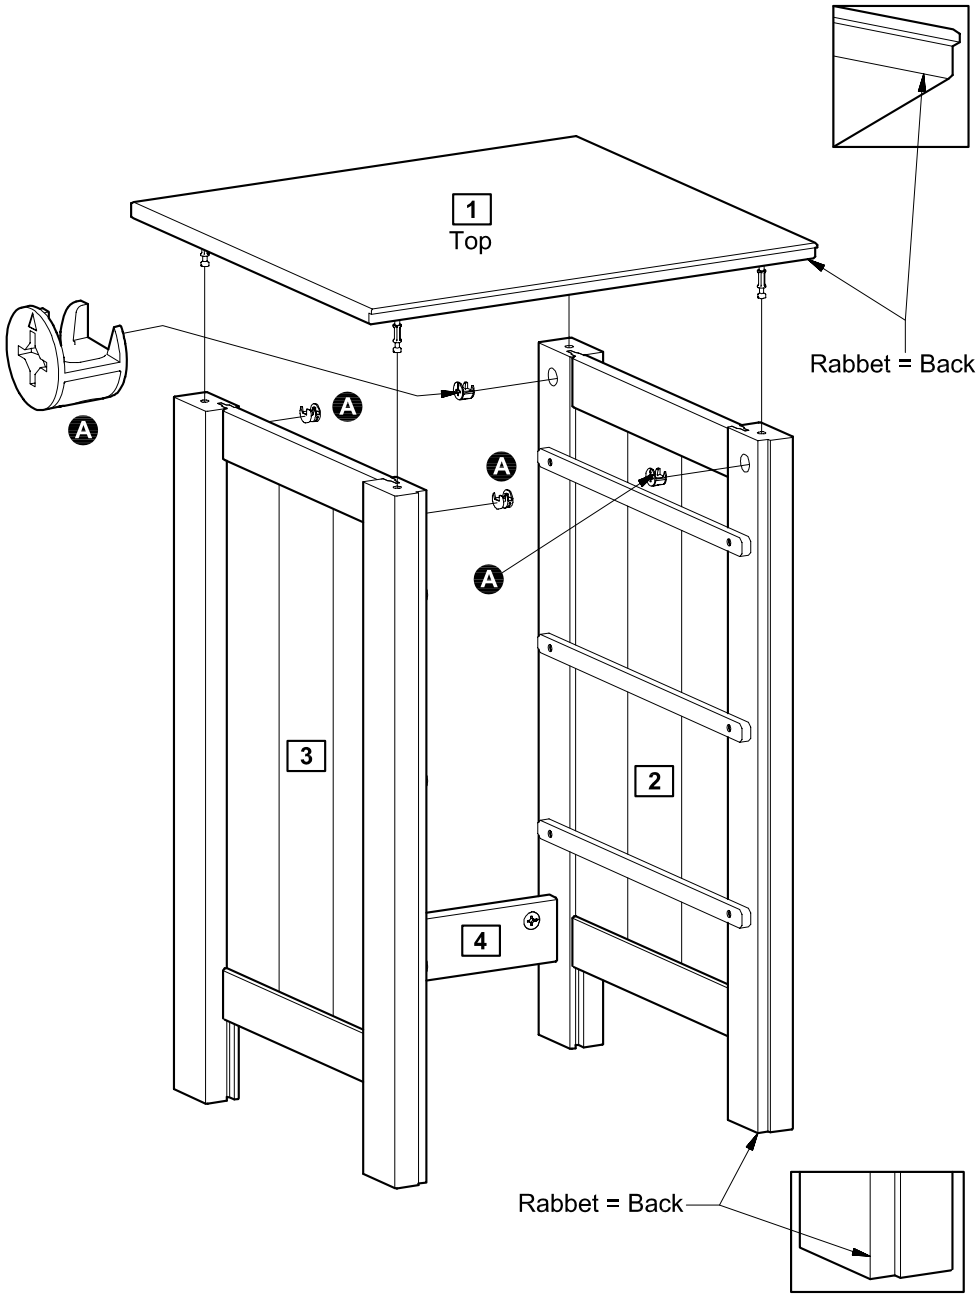

Step 8

Nailing the back to the top and sides.

Place the back [5] into the rabbet of the top [1] and the side [3].


Ensure that there is no gap between the right hand side [3] and the back [5] , nor between the top and the back.


Fasten the back with nails Ⓓ along the top.

The angle between the top and the side must be 90 degrees.

To accomplish this, ensure that there is no gap between the right hand side [3] and the back [5].

Fasten the back with nails Ⓓ along the sides.

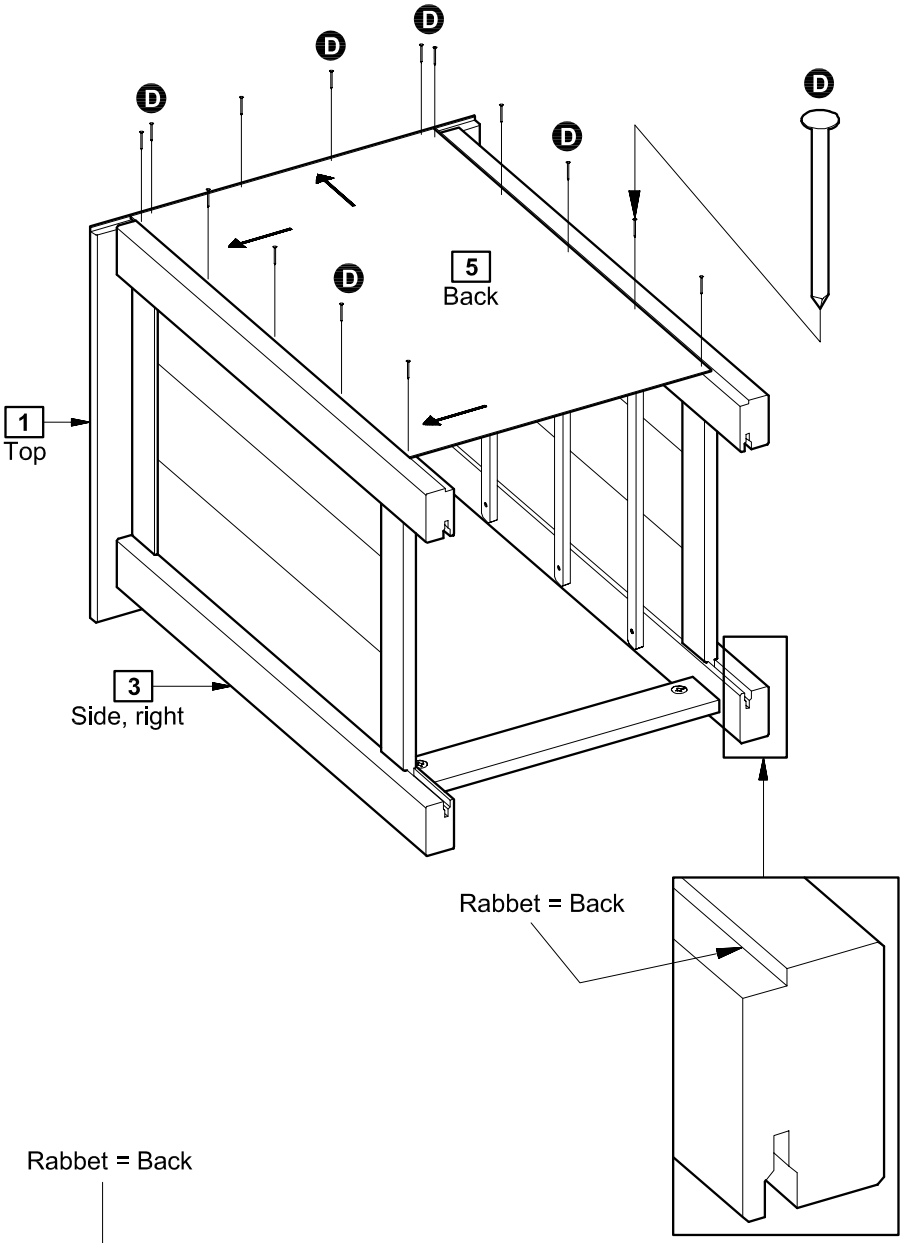

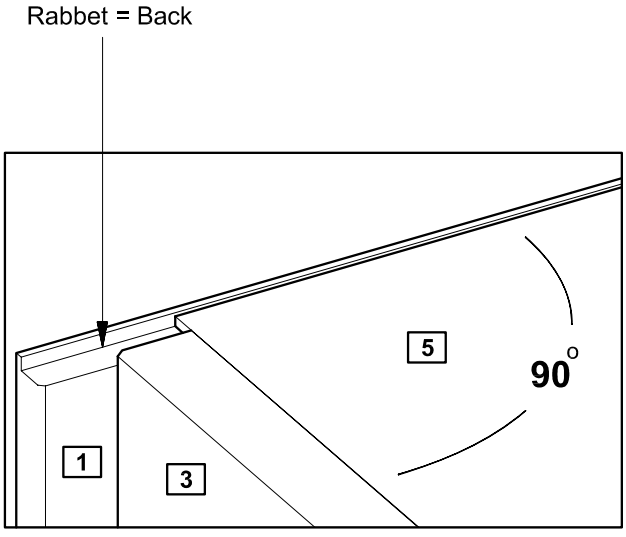


Step 9

Drawer assembly.


a: Fix the drawer sides [8] and [9] to the drawer back [7] using screws Ⓔ .

a:

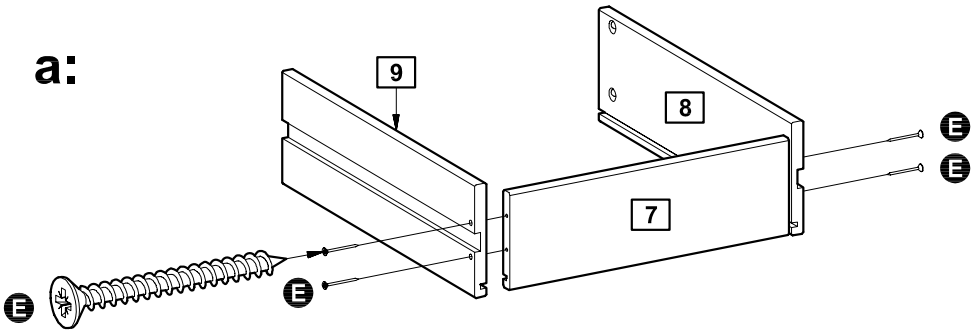

b: Slide the drawer bottom [10] into the grooves of the drawer frame.


b:

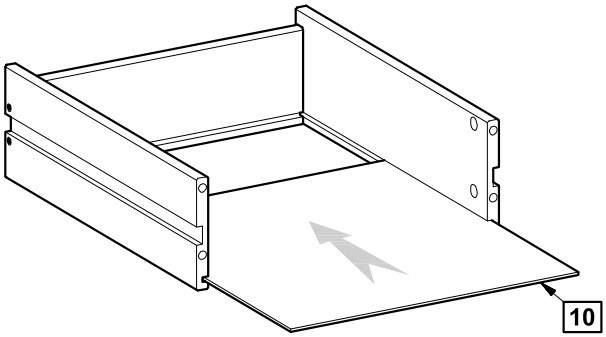

c: Screw the locking pins Ⓒ into the holes indicated on the drawer front [6].


Note: Insert locking pins Ⓒ as far as shown. **Do not over tighten.**

c:

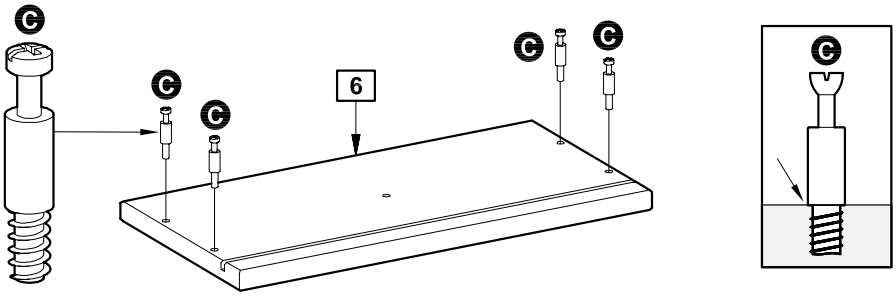


d: Press the drawer front [6] onto the drawer sides [8] and [9].
Place the small cams Ⓑ into the holes indicated, arrows pointing towards the drawer front / locking pins.
To tighten cams: Turn to the right using a screwdriver.
"Function of cam and locking pin" see page 4.

d:

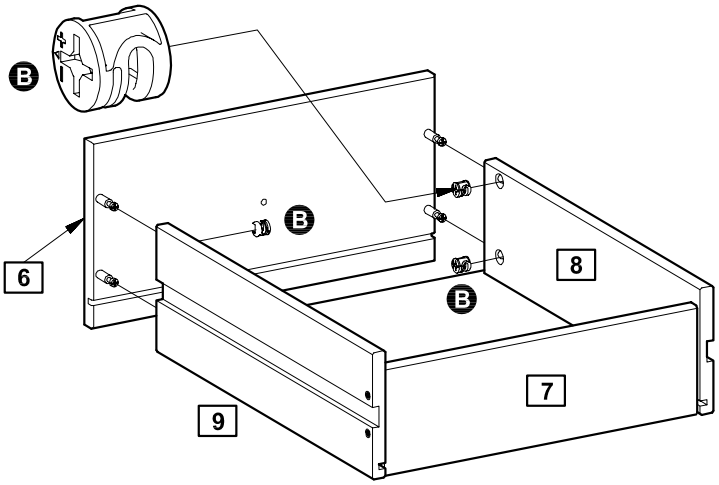

e: Fix the knob Ⓖ to the drawer front using screw Ⓔ.

e:

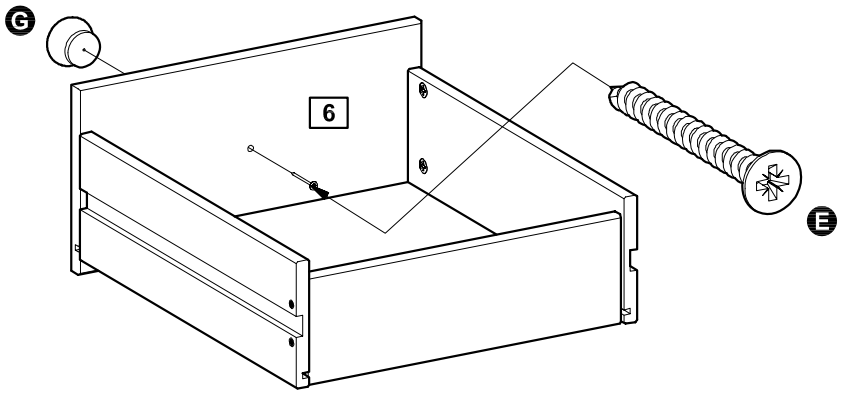


Repeat with remaining drawers.

Step 10

Adding the drawers to the carcass.

Slide the drawers onto the wooden runners.

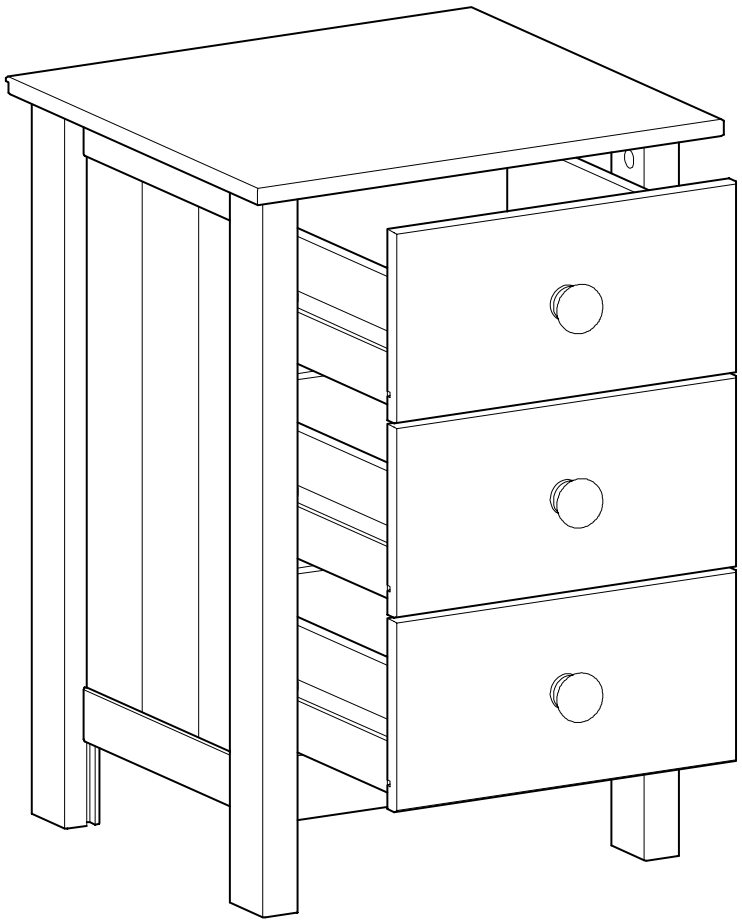

Assembly is complete.

Dear Customer

Please note that the product you have purchased is a natural living timber.

Just like nature itself, wood varies in shape and colour. Knots, vein patterns, resin pockets and colour differences contribute to giving the piece of furniture its beauty and form - a natural part of solid wood.

Although the tree has been cut down and dried, it is still alive and therefore will react to high and low temperatures, light, humidity, drought and time.

In cold and dry periods, the wood contracts which may lead to small cracks in the piece of furniture. The reverse happens in warm and humid periods where the wood expands and this may result in slight unevenness.

The colour of the wood also changes with time, particularly if the furniture is placed in a light place. This is a natural process and part of owning a piece of furniture made of solid wood.

Any flexing that has occurred during transport will re-correct it self once this product is correctly assembled.

Tighten all joints of the furniture after six months.

Please keep these instructions in a safe place for future use.