
Capella - 4 + 4 Drawer Chest

Assembly Instructions - Please keep for future reference

615/8602
615/8592
615/8585

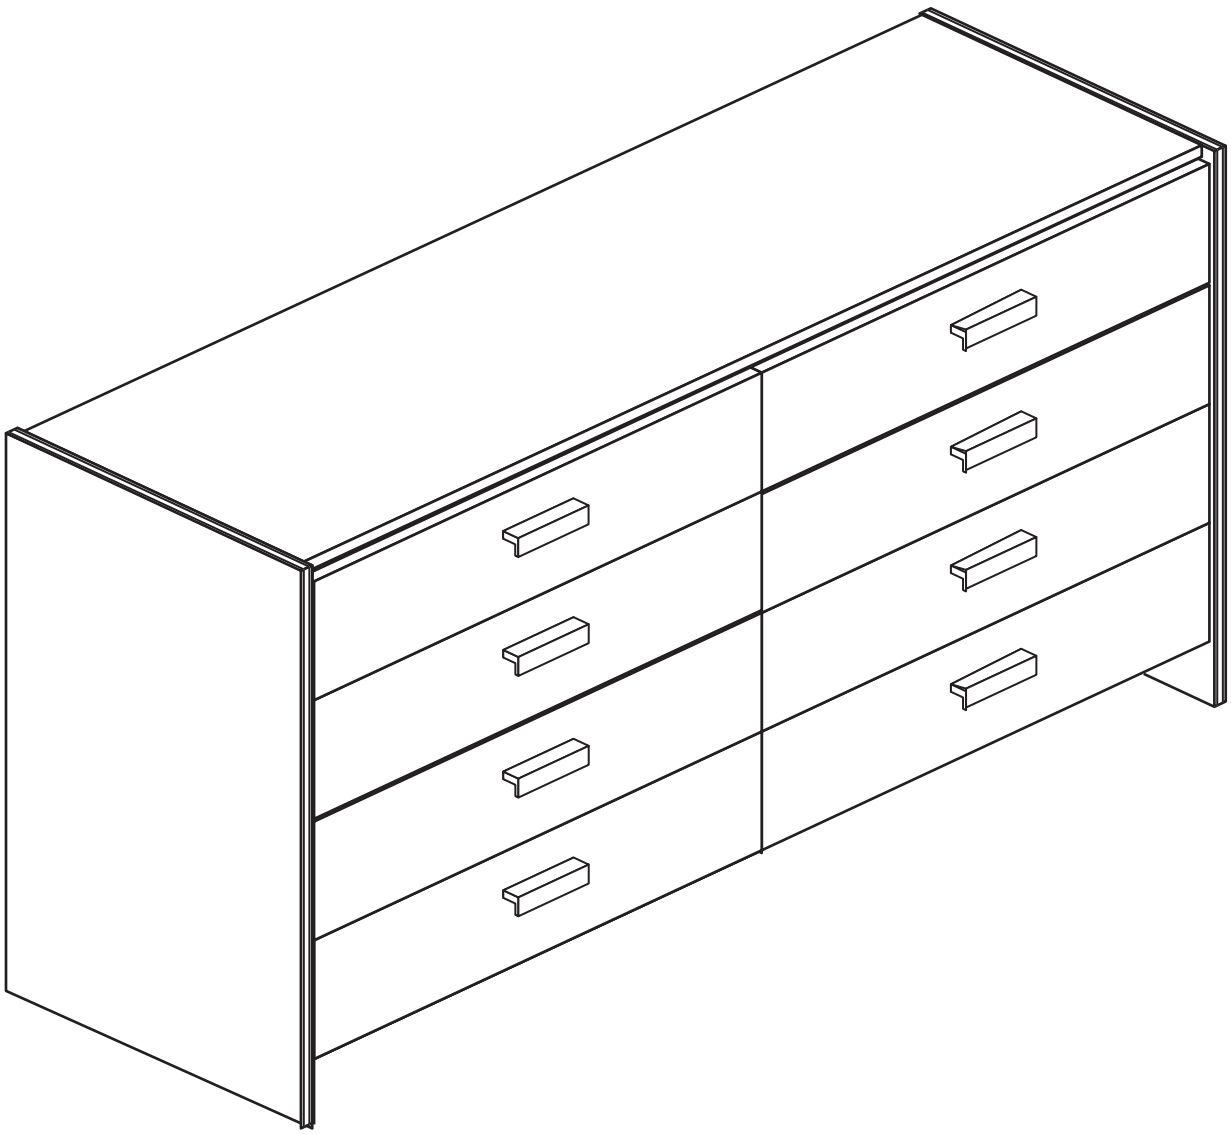

Dimensions

Width -123.5cm

Depth - 39cm

Height - 74.4cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 28/6/11

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 38kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

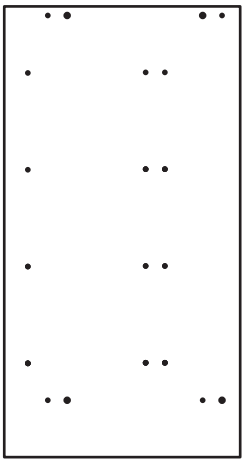


1 Left Side *(D1039A)*
(744 x 390mm)

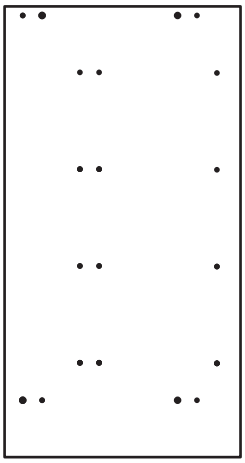

2 Right Side *(D1040A)*
(744 x 390mm)

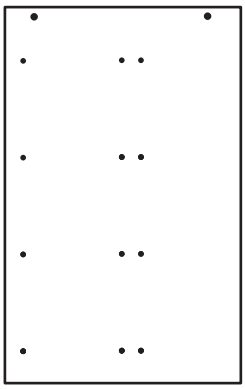

4 Upright *(D1014A)*
(621 x 368mm)

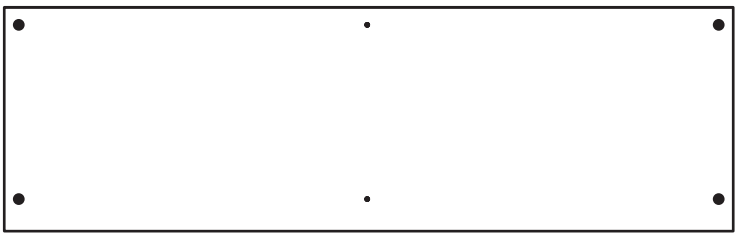


3 Top *(D1042A)*
(1205 x 369mm)




5 Rail *(D1043A)*
(1205 x 103mm) x 2




12 Support *(D1046A)*
(300 x 85mm)

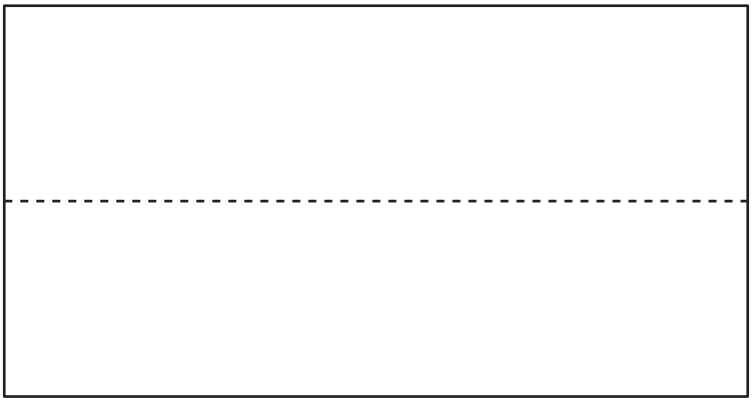


13 Back *(X832A)*
(1229 x 646mm)




6 Left Hand Drawer Front *(D1044A)*
(599 x 157mm) x 4




7 Right Hand Drawer Front *(D1045A)*
(599 x 157mm) x 4



8 Drawer Back *(W433BBCK)*
(564 x 105mm) x 8



9 Left Drawer Side *(W409BLH)*
(320 x 105mm) x 8



10 Right Drawer Side *(W409BRH)*
(320 x 105mm) x 8




11 Drawer Base *(T433)*
(317 x 575mm) x 8

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 8

B 

Metal dowel *(F901)* x 26

C 

Nail *(F51)* x 22

D 

Large locking nut *(F900)* x 10

E 

Small locking nut *(F3)* x 16

F 

45mm Screw *(F65)* x 35

G 

25mm Screw (*F50)* x 16

H 


9mm Screw *(F74)* x 16

I 

9mm Screw (*F73)* x 32


J 

Drawer runner *(F1004)* x 16

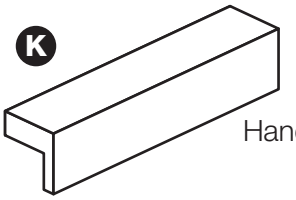K 

Handle *(F930)* x 8

Tools required

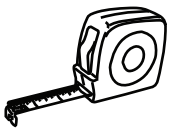

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

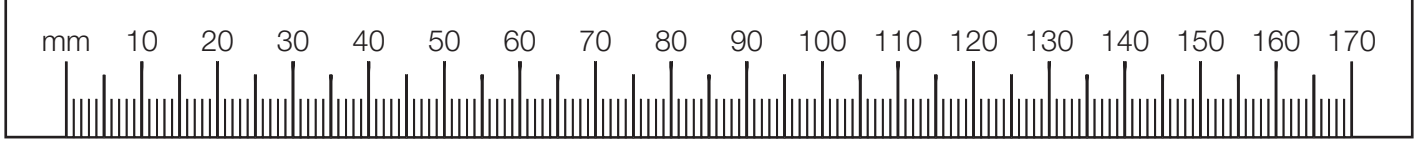

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the left hand-drawer fronts and right hand drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 6 and 7.

Note: Tighten the metal dowels up fully against the panels.

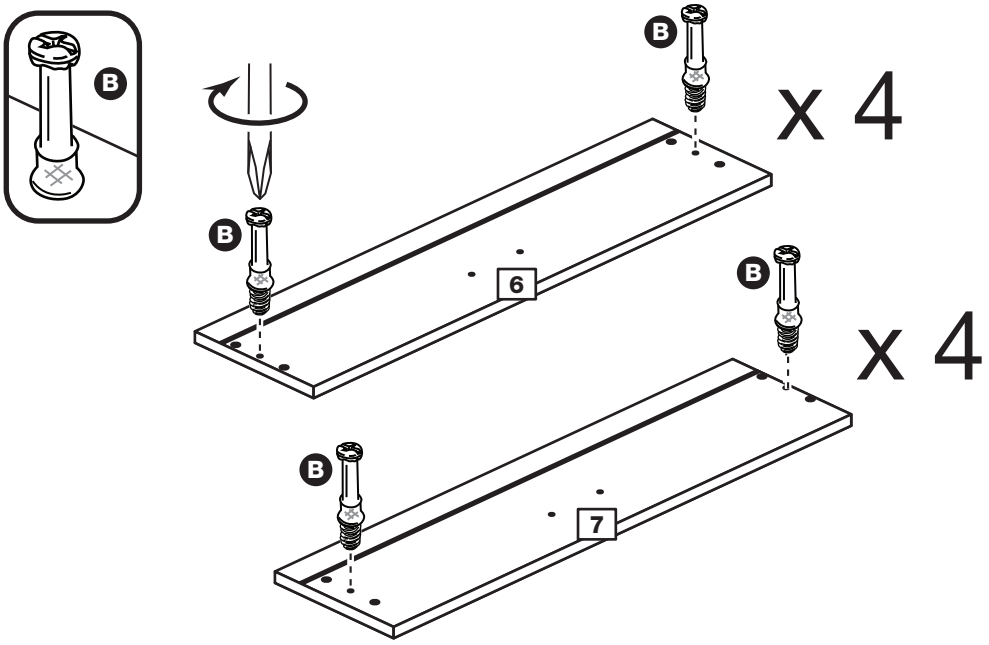


Step 2


Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 9 and right drawer side 10.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

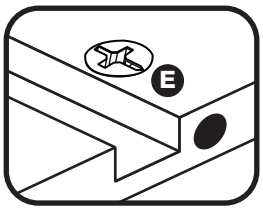


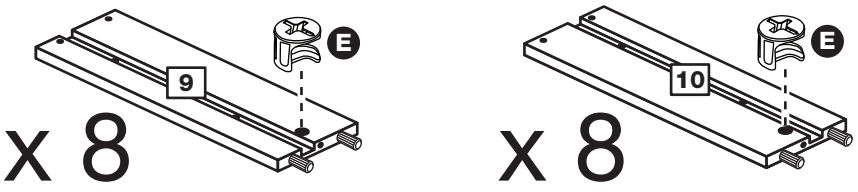

Step 3

Assemble the drawer sides and back

Fit the left drawer side 9 and right drawer side 10 to the drawer back 8 using 4 screws F.

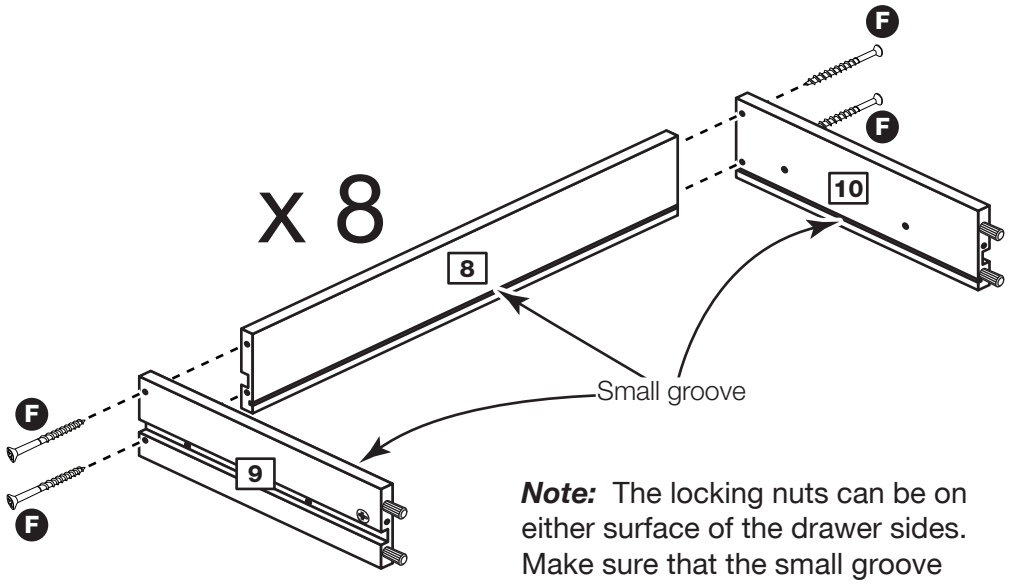


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 11 along the grooves of the drawer sides 9 and 10 into the groove of the drawer back 8.

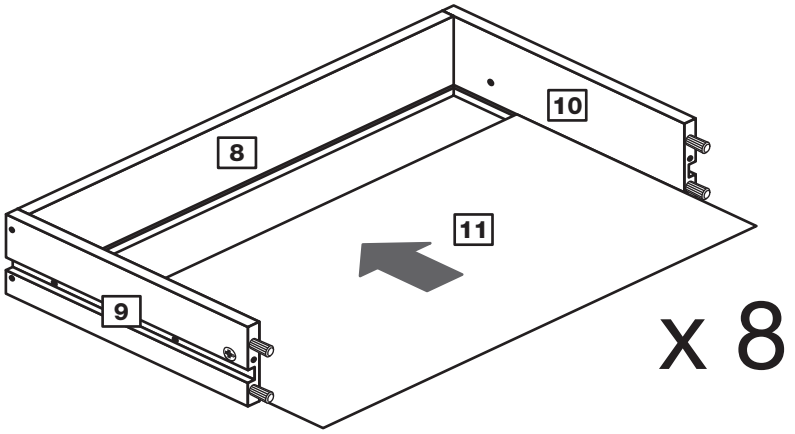


Step 5

Attach the drawer front

Turn the drawer assembly over and push onto the back of the drawer front 6 and 7.

Note: Turn locking nuts E clockwise to secure panels - more than 1/2 a turn.


Note: The locking nuts can be on either surface of the drawer sides.

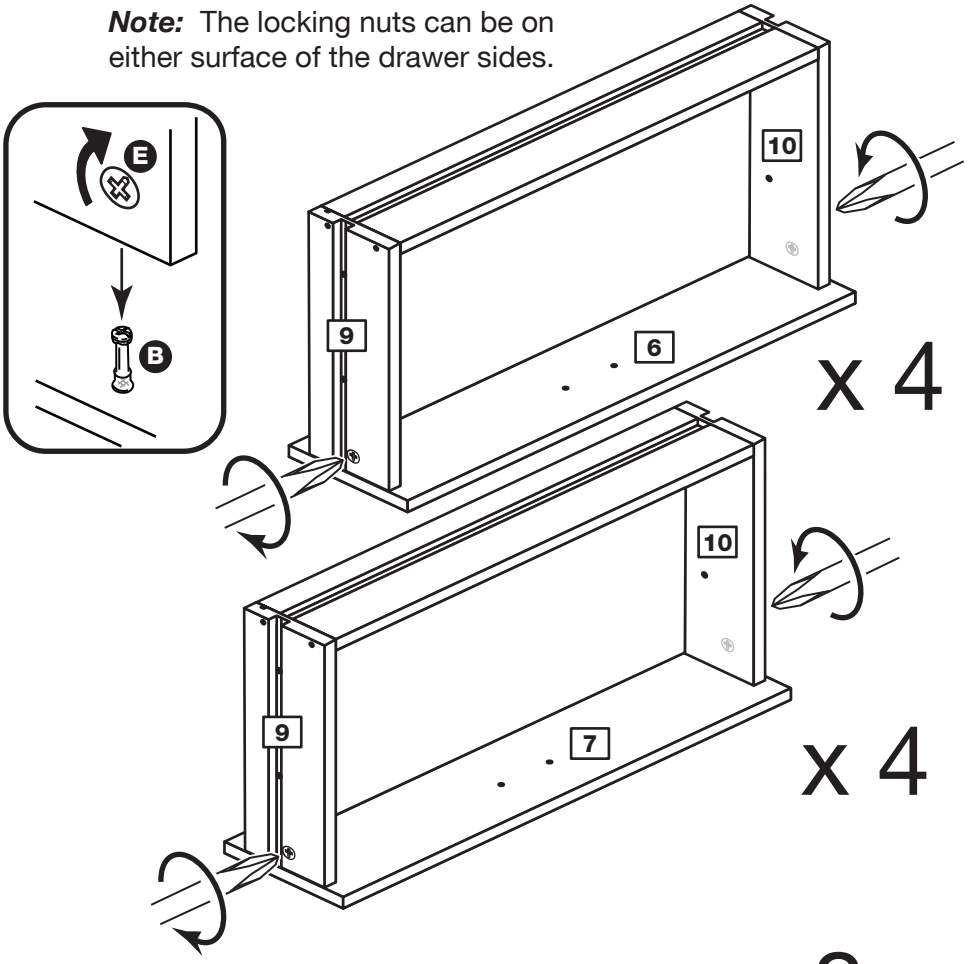

Step 6

Attach the handle


Attach a handle K to each drawer front 6 and 7 using 2 screws G.

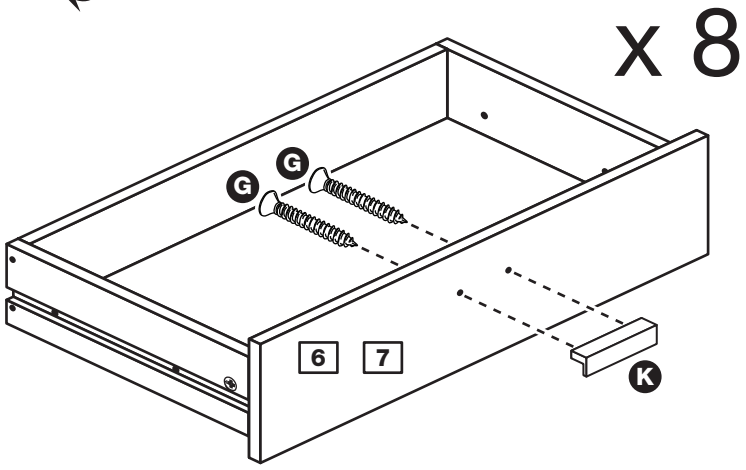


Step 7


Prepare the left side

a: Place 4 runners J on the left side 1 . Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

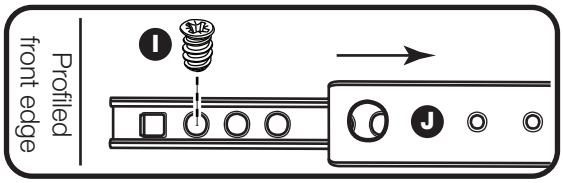


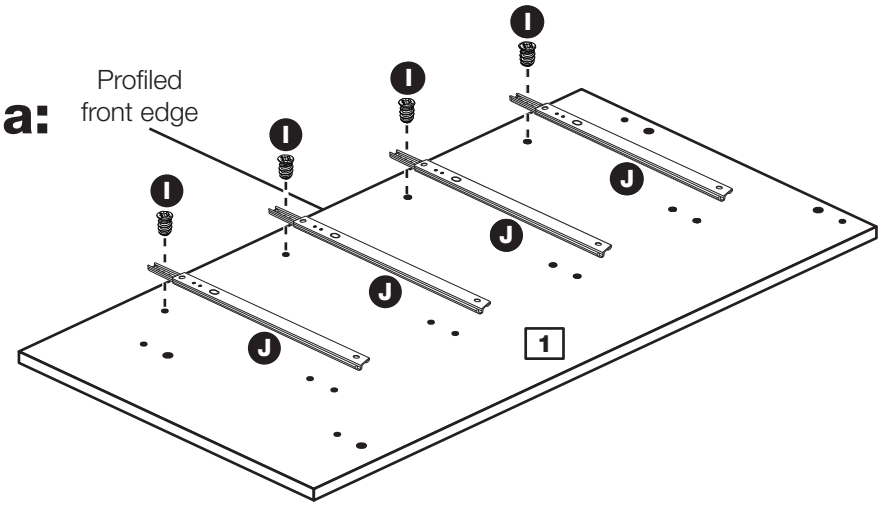

b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

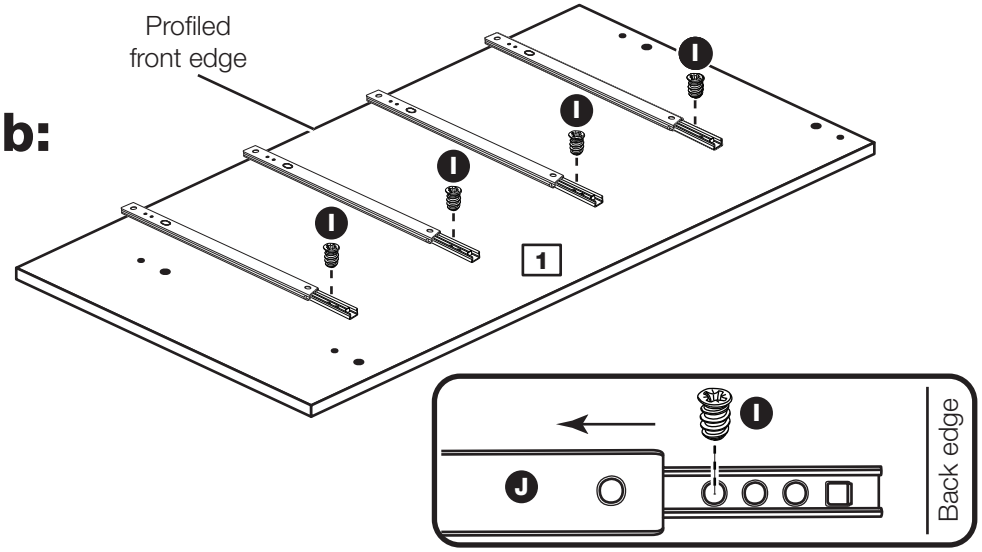


c: Screw 4 metal dowels B into the left side 1.

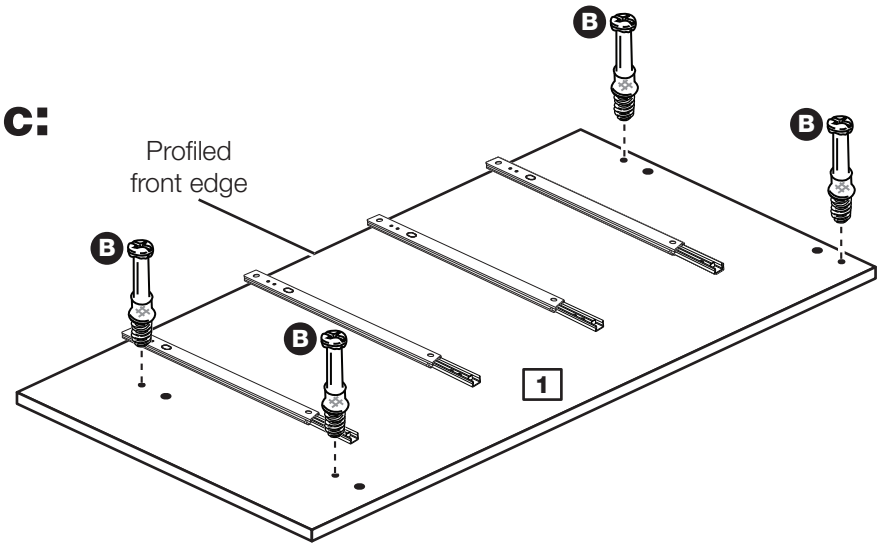


Step 8

Prepare the right side


a: Place 4 runners J on the right side 2. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

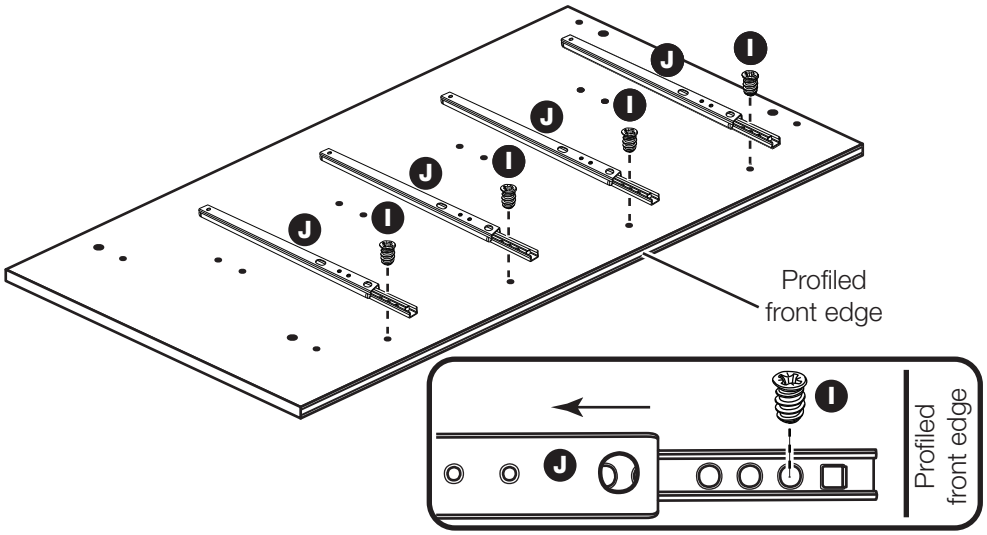

b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

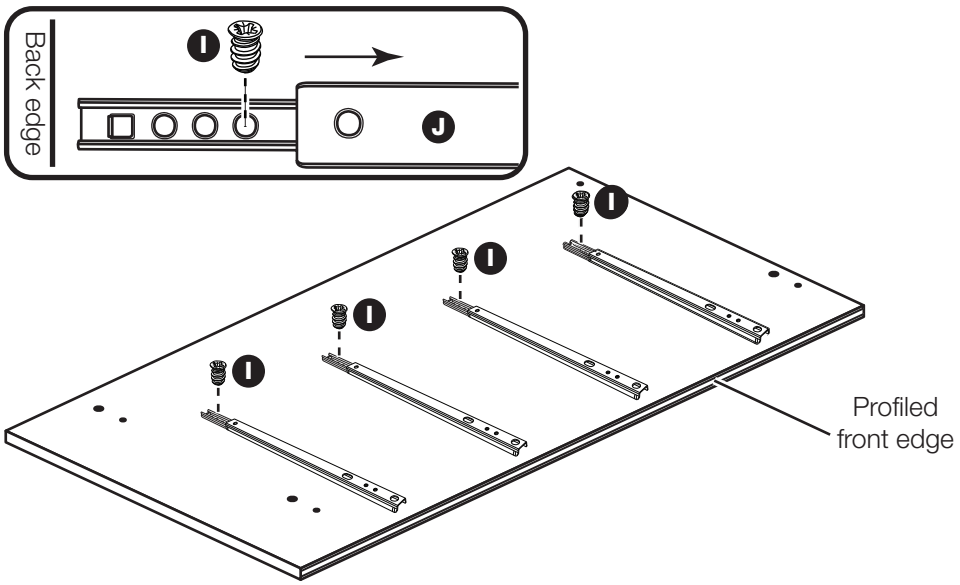

c: Screw 4 metal dowels B into the right side 2.

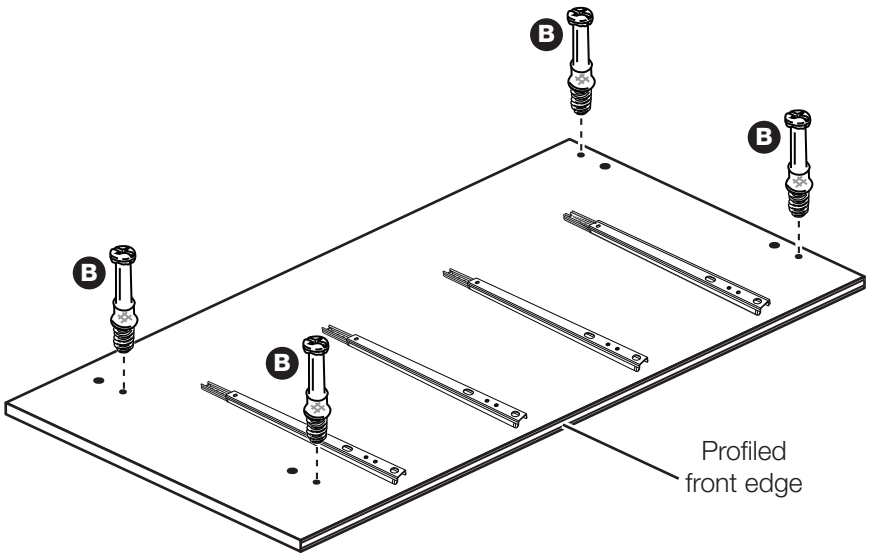

Assembly Instructions

Step 9

Prepare the upright

a: Place 4 runners J on the upright 4. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.


b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

c: Insert large locking nuts D as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Turn panel over.

Repeat above instructions for runners J on other side of upright 4 using screws I.

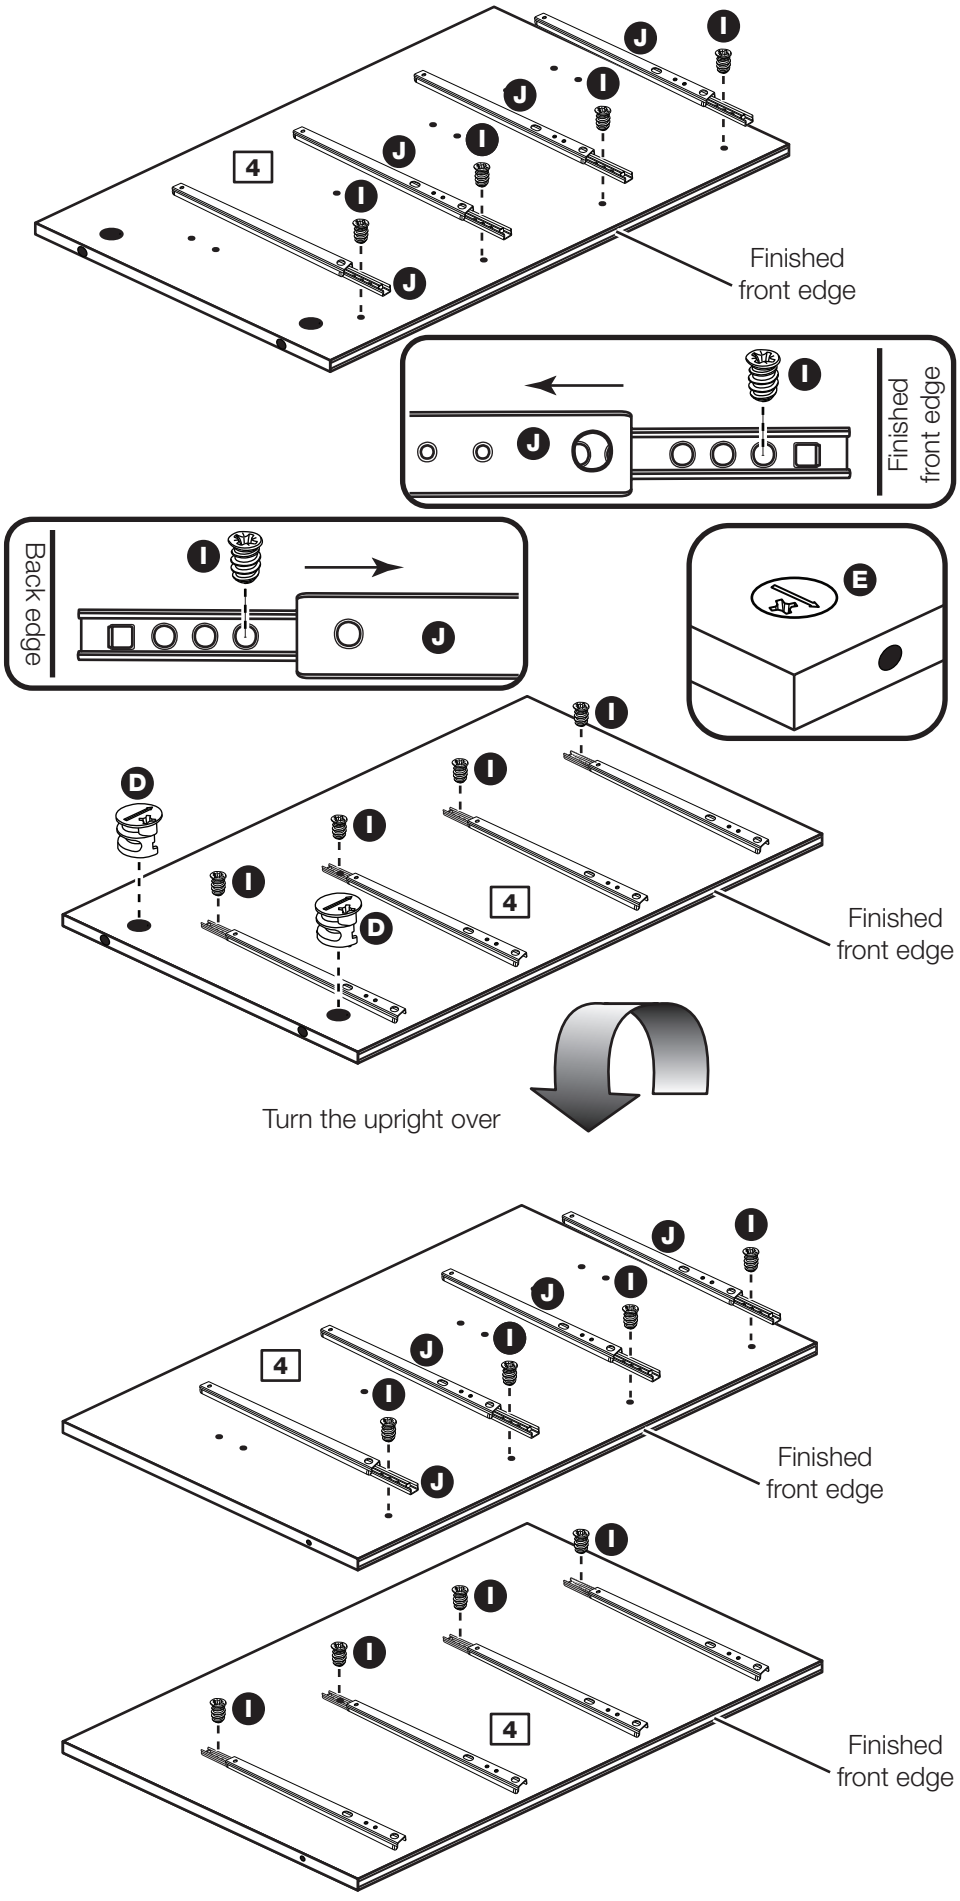

Step 10

Prepare the top


Tap 4 wooden dowels A into the top 3 as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts D into the top 3 as shown.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Screw 2 metal dowels B into the top 3.

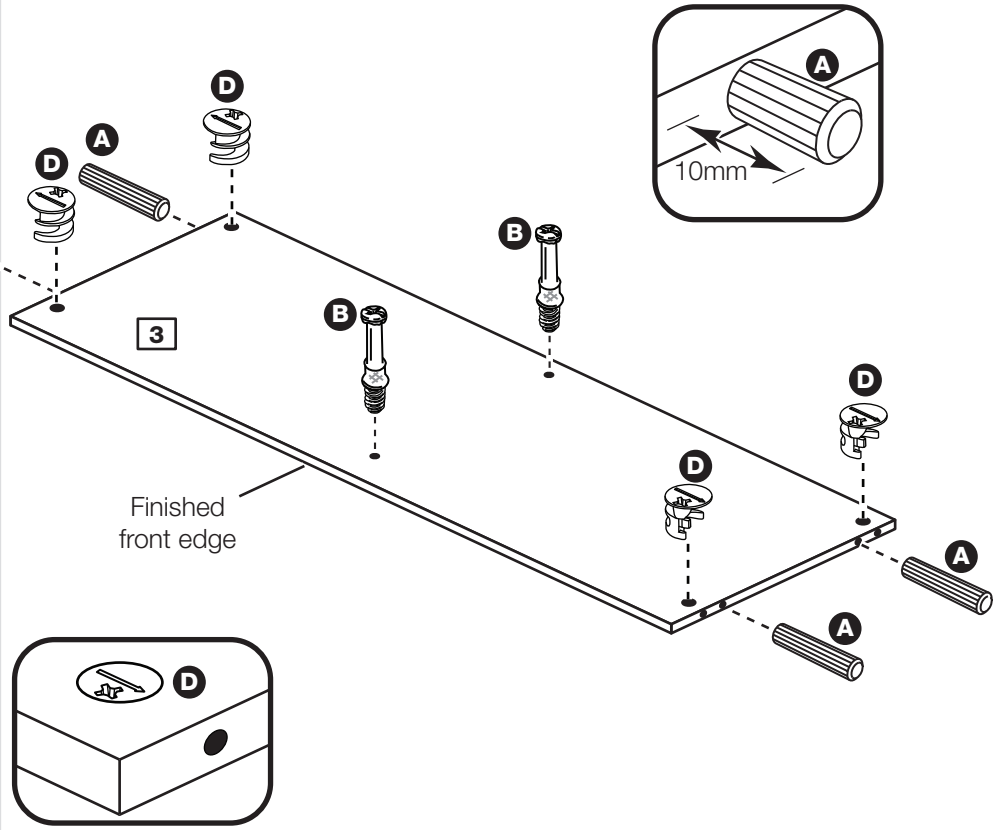


Step 11

Join the Upright and top

Push the top 3 onto the upright 4 as shown.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the upright 4.


Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

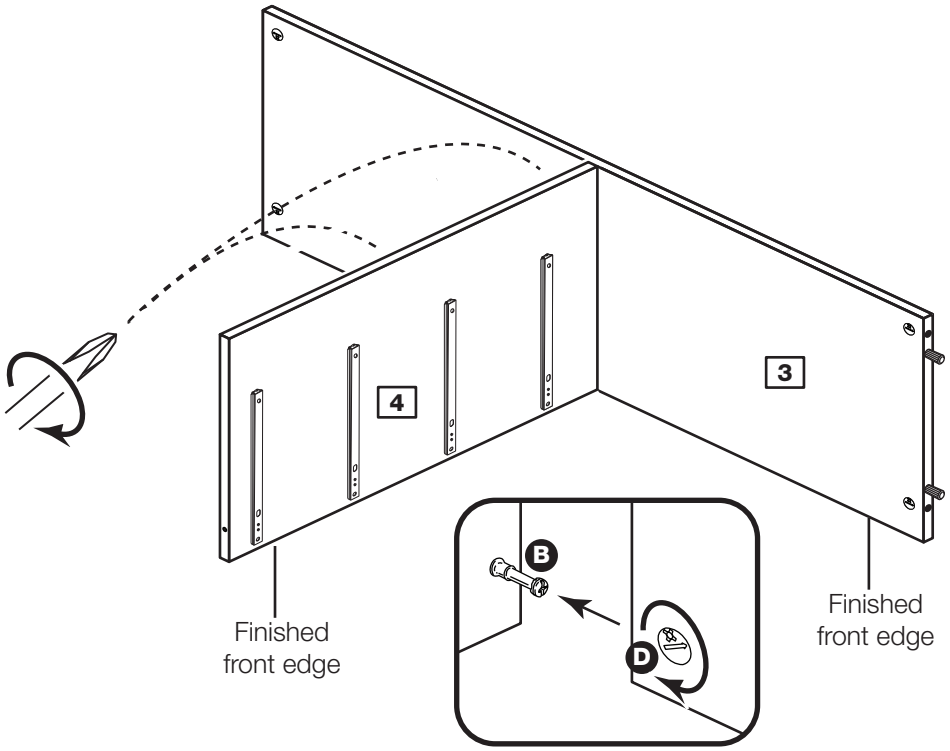

Step 12

Join the right side and top


Push the top [3] onto the right side [2] as shown.

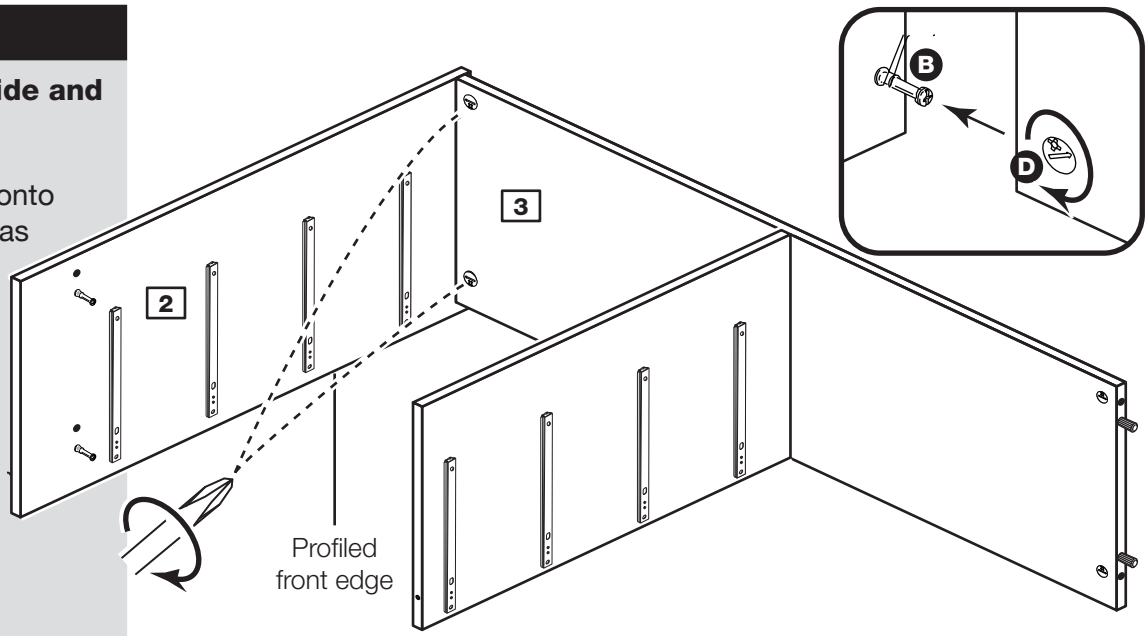

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

Note: To make it easier to fit the side panels, place polystyrene blocks from the packaging underneath the upright and top panels to raise the assembly.

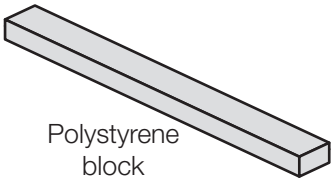


Step 13

Prepare the rails

Tap 2 wooden dowels (A) into each rail [5] as shown.


Insert 2 large locking nuts (D) into each rail [5] as shown.

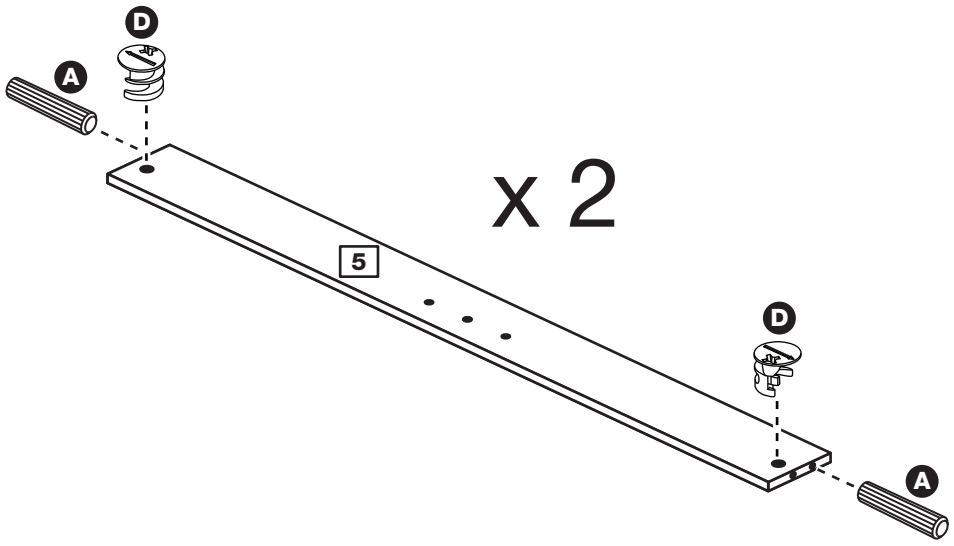

Step 14

Fit the rails

Push the rails 5 onto the right side 1 as shown.

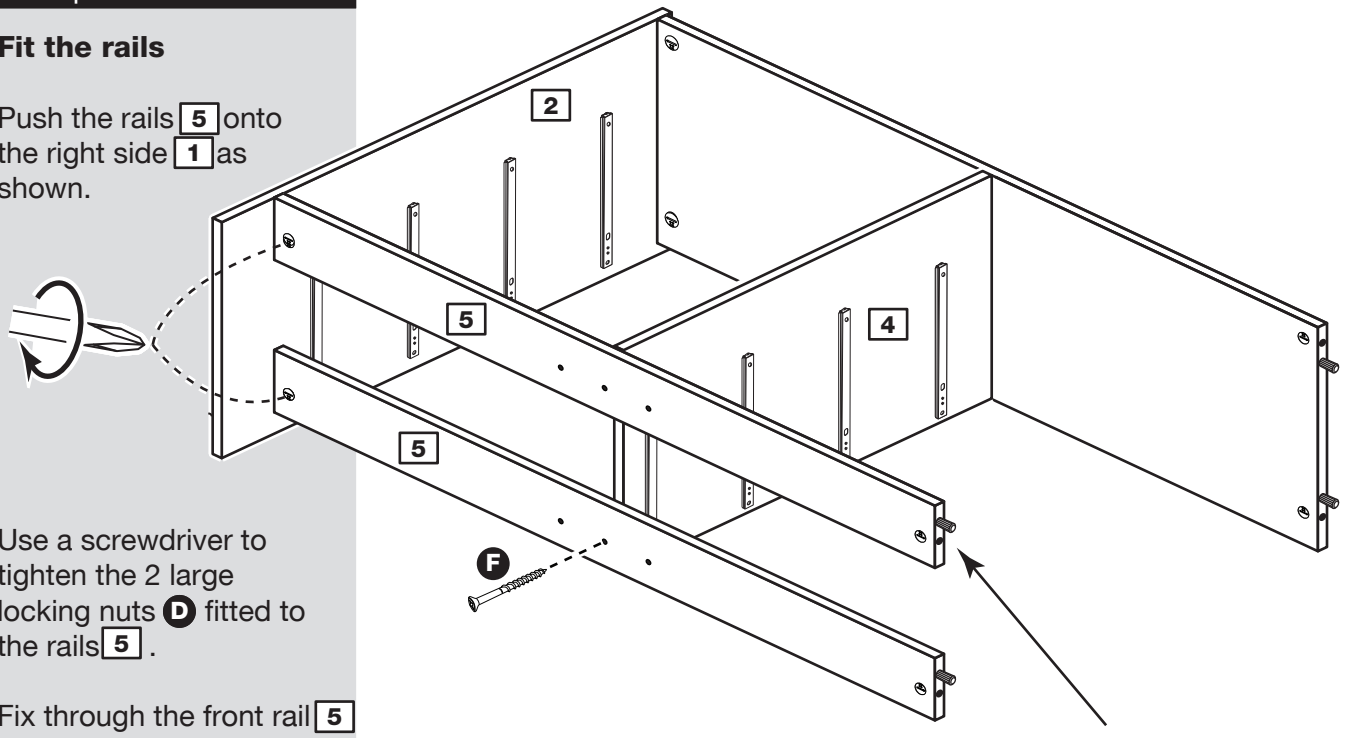

Use a screwdriver to tighten the 2 large locking nuts D fitted to the rails 5 .


Fix through the front rail 5 using the middle hole into the upright 4 using screw F .

Note: Support this rail until the left side has been fitted in the next step.

Step 15

Fit the left side

Push the left side 1 onto the assembly.

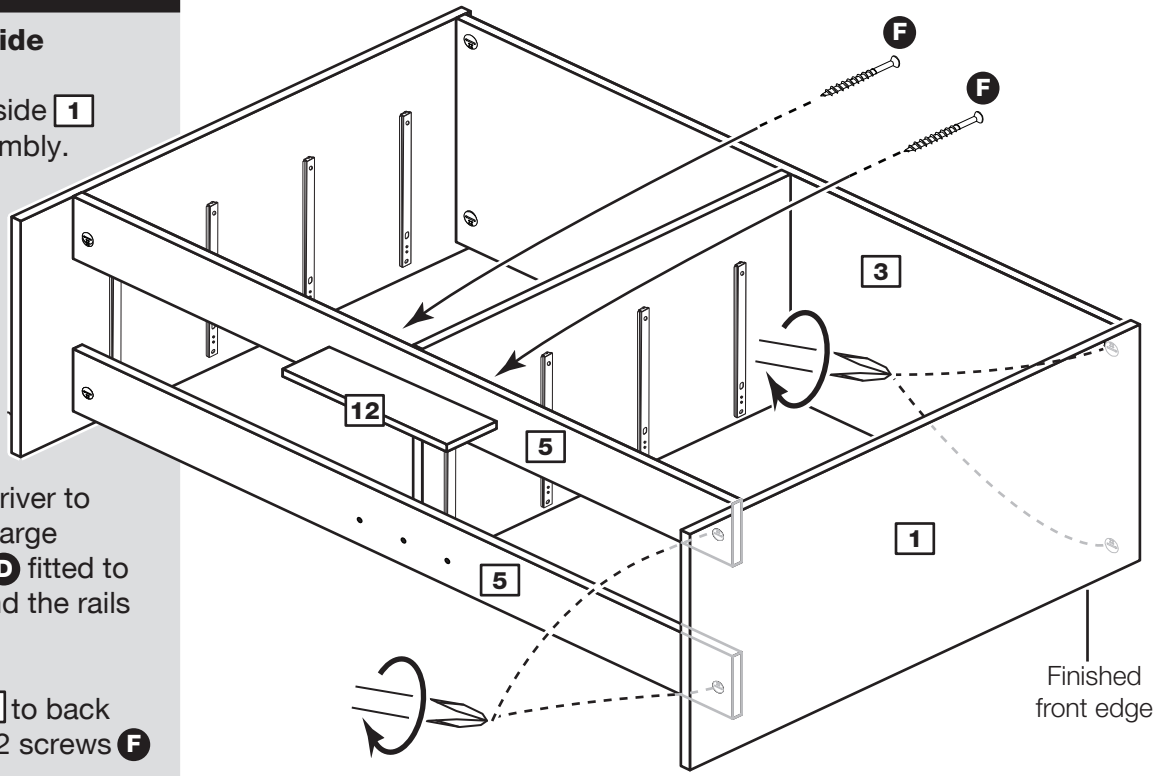

Use a screwdriver to tighten the 4 large locking nuts D fitted to the top 3 and the rails 5 .

Fit support 12 to back rail 5 using 2 screws F as shown

Step 16

Fit the back

a: Square up the unit by making sure that meåsurement **x to x equals y to y.**


b: Place the back 13 onto the unit. Nail C around the outside edges of the back 13.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

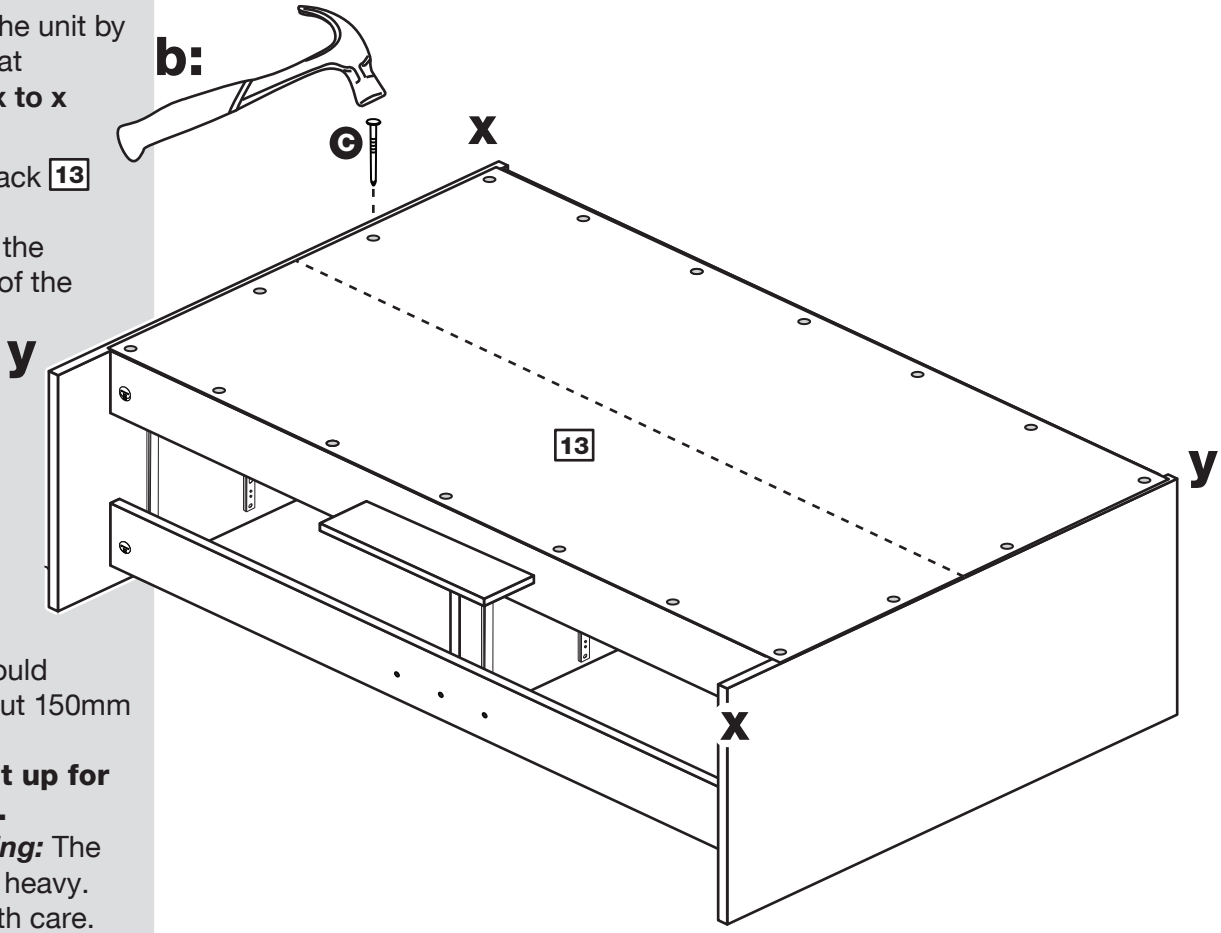

Step 17

Fit the drawers

Fit the drawers with the left drawer boxes 6 and right drawer boxes 7 as shown.


Starting with the bottom drawer, slide both the runners J forward and locate the drawer sides 9 and 10 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Warning: The unit is heavy. Lift with care.

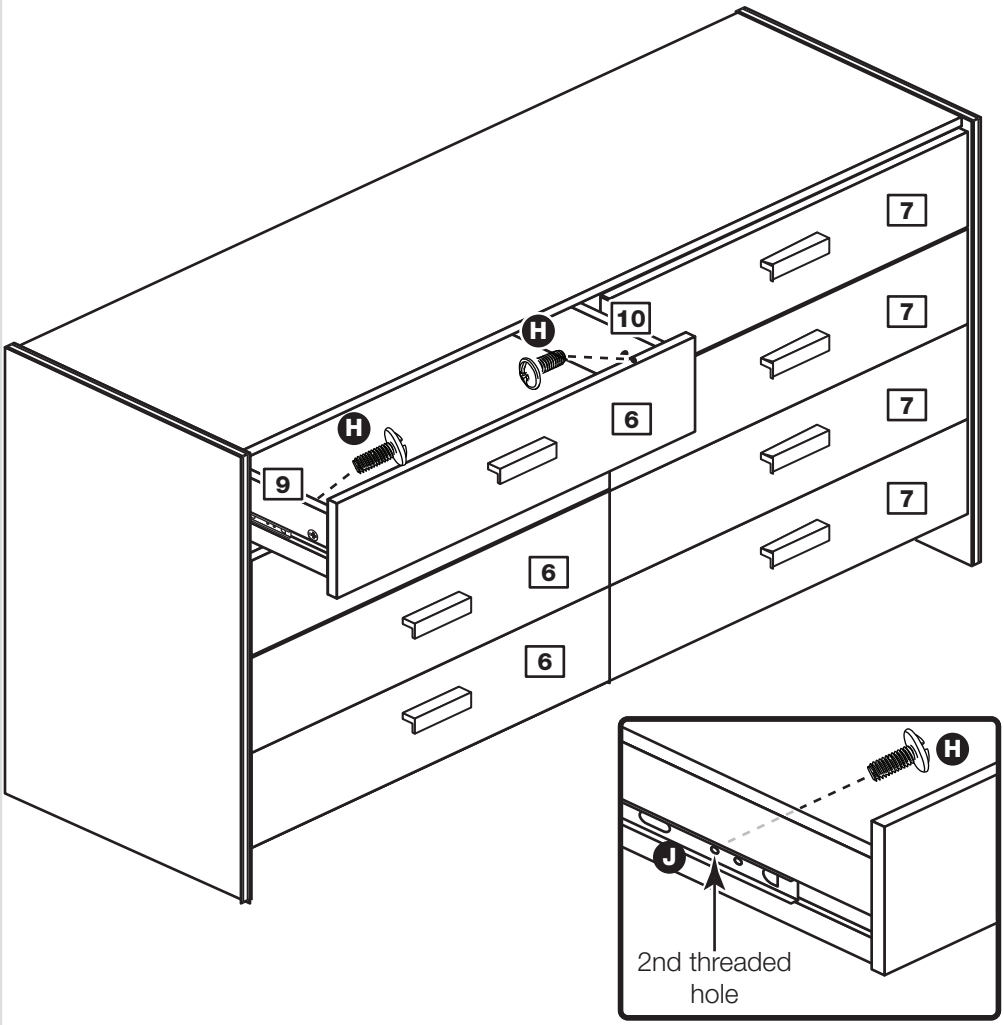


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Capella - 4 + 4 Drawer Chest

Assembly Instructions - Please keep for future reference

615/8602
615/8592
615/8585
615/5571

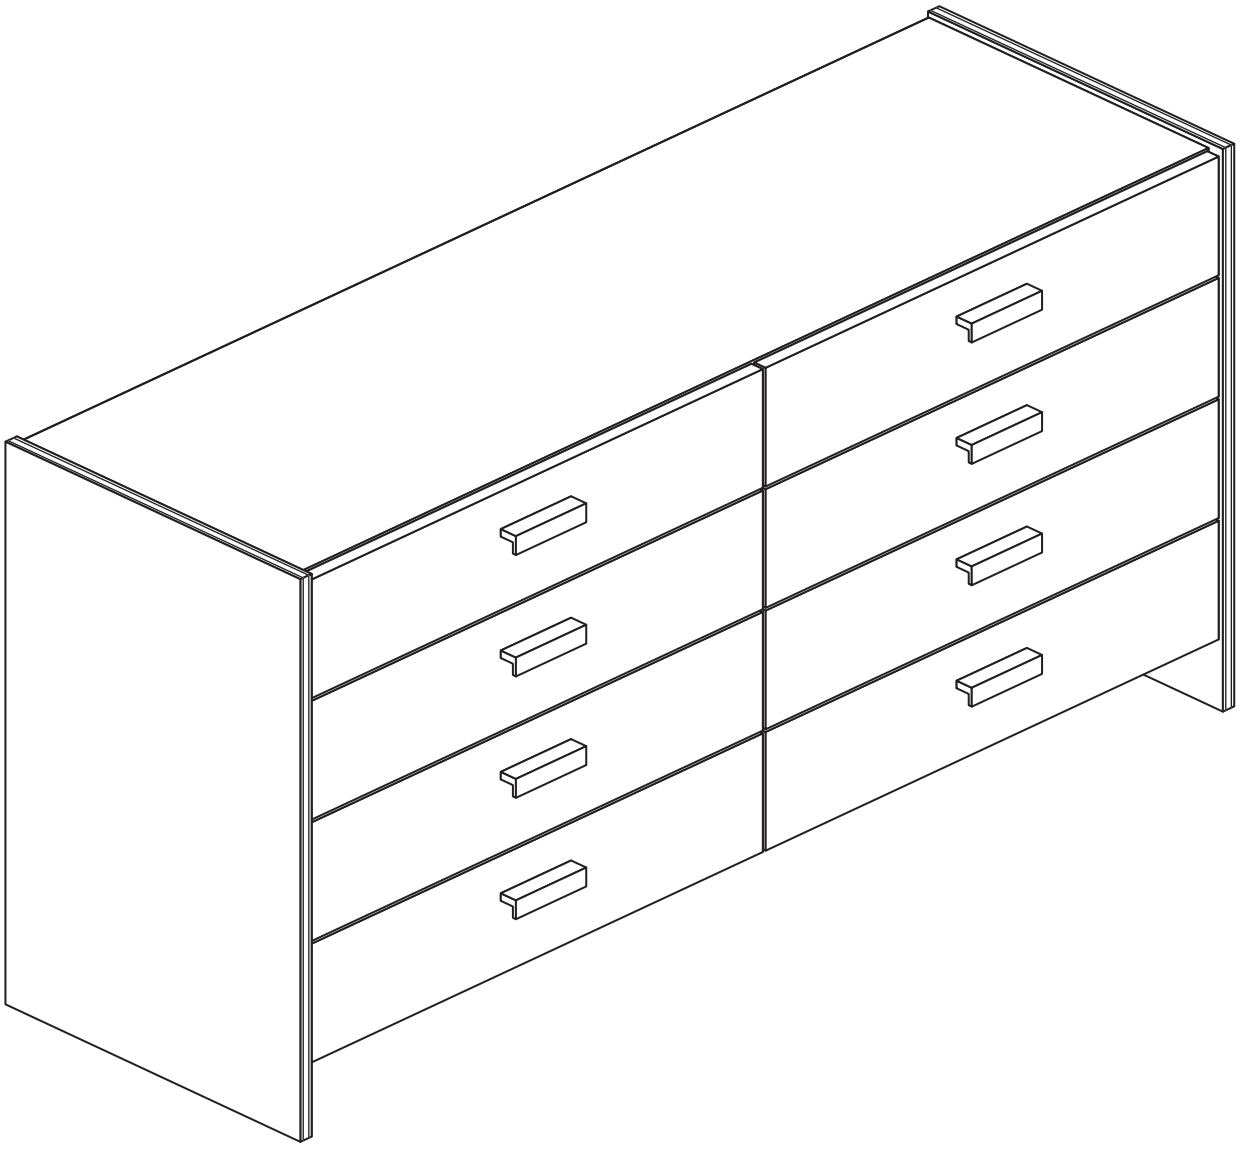

Dimensions

Width -123.5cm

Depth - 39cm

Height - 74.4cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 5 - 16/05/12

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 38kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

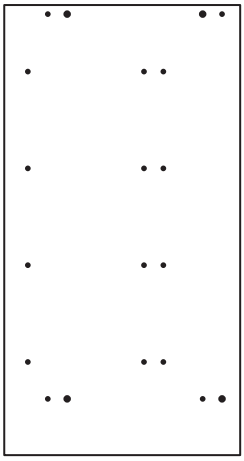


1 Left Side *(D1039A)*
(744 x 390mm)

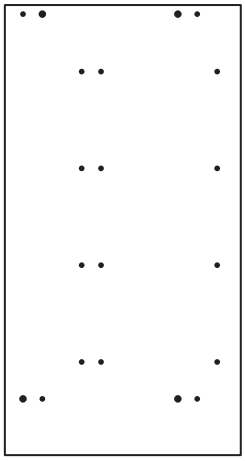


2 Right Side *(D1040A)*
(744 x 390mm)

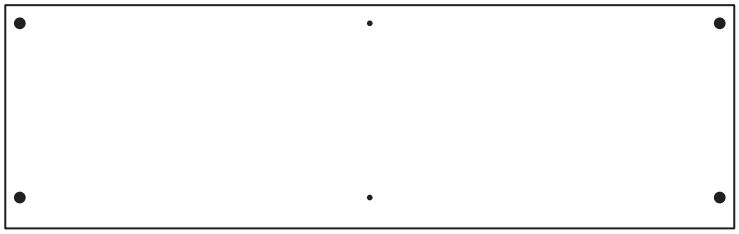


3 Top *(D1042A)*
(1205 x 369mm)

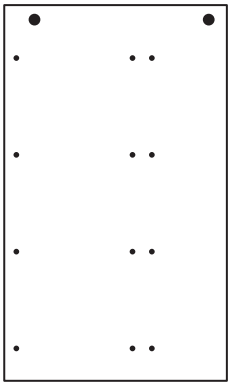


4 Upright *(D1041A)*
(621 x 368mm)




5 Rail *(D1043A)*
(1205 x 103mm) x 2




6 Left Hand Drawer Front *(D1044A)*
(599 x 157mm) x 4




7 Right Hand Drawer Front *(D1045A)*
(599 x 157mm) x 4



8 Drawer Back *(W440BBK)*
(564 x 95mm) x 8




9 Left Drawer Side *(W516BLH)*
(320 x 95mm) x 8




10 Right Drawer Side *(W516BRH)*
(320 x 95mm) x 8



11 Drawer Base *(T440)*
(317 x 575mm) x 8



12 Support *(D1046A)*
(300 x 85mm)

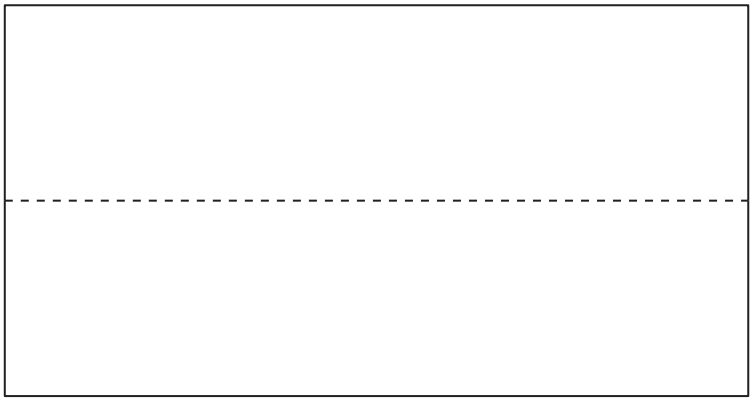


13 Back *(X832A)*
(1229 x 646mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 8

B 

Metal dowel *(F901)* x 26

C 

Nail *(F51)* x 22

D 

Large locking nut *(F900)* x 10

E 

Small locking nut *(F3)* x 16

F 

45mm Screw *(F65)* x 3

G 

25mm Screw (*F50)* x 16

H 


9mm Screw *(F74)* x 16

I 

9mm Screw (*F73)* x 32

J 

Drawer runner *(F1004)* x 16

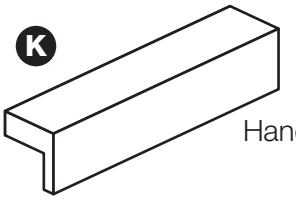
K 

Handle *(F930)* x 8

L 

Knock-in Peg *(F171)* x 32

Tools required

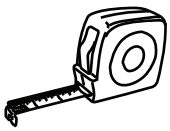

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

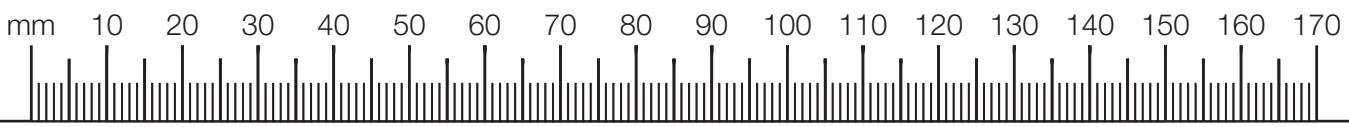

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the 4 left hand drawer fronts and 4 right hand drawer fronts

Screw 2 metal dowels (B) into the holes shown on the back of each drawer front [6] and [7].

Note: Tighten the metal dowels up fully against the panels.

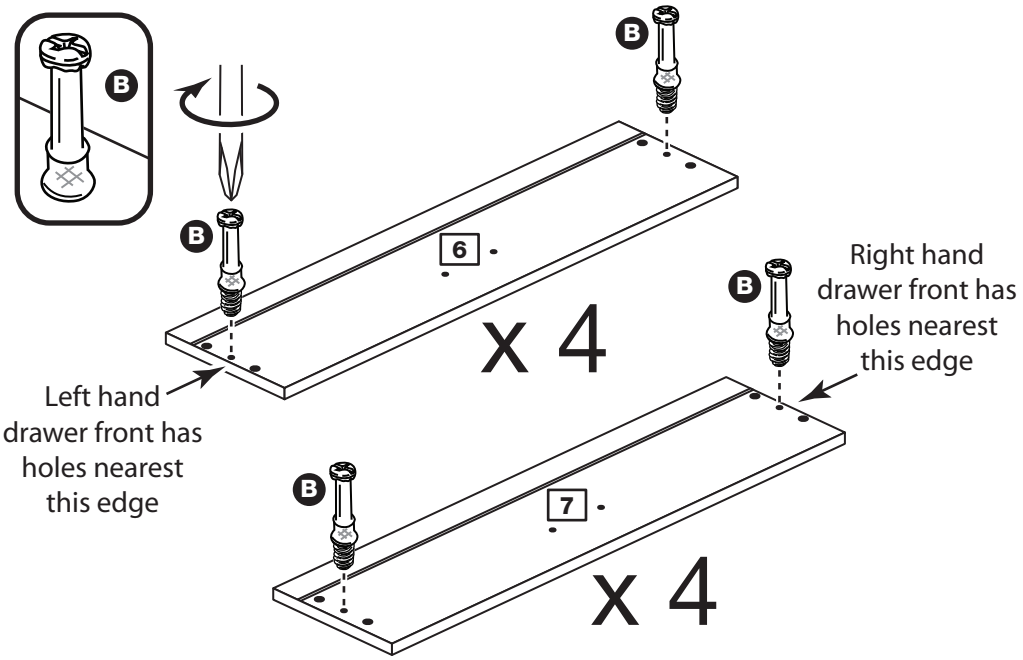


Step 2


Prepare the drawer sides

Insert a small locking nut (E) into the hole shown on the left drawer side [9] and right drawer side [10].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

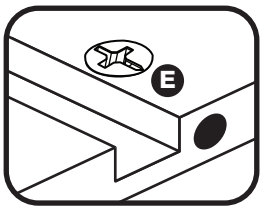


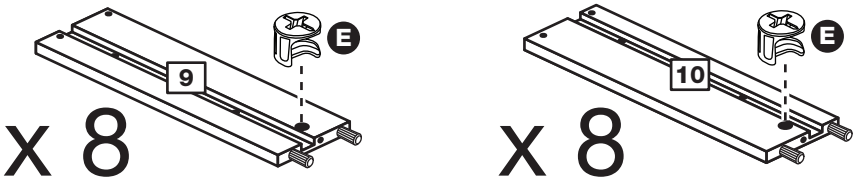

Step 3

Assemble the drawer sides and back

Fit the left drawer side [9] and right drawer side [10] to the drawer back [8] by tapping in 4 knock-in pegs (L).

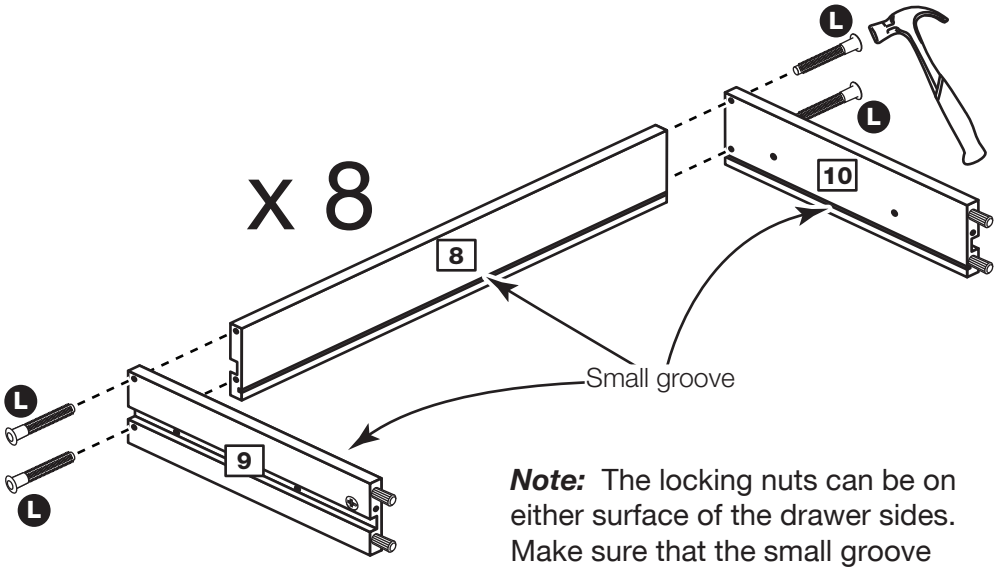


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 11 along the grooves of the drawer sides 9 and 10 into the groove of the drawer back 8.

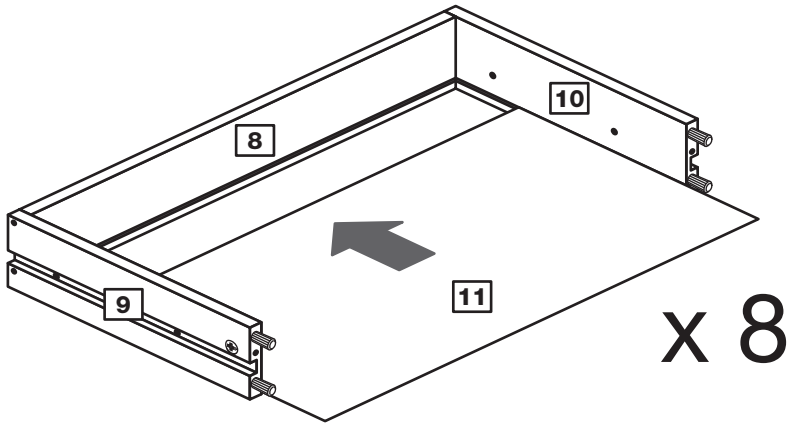


Step 5


Attach the drawer front

Turn the drawer assembly over and push onto the back of the drawer front 6 and 7.

Note: Turn locking nuts E clockwise to secure panels - more than 1/2 a turn.

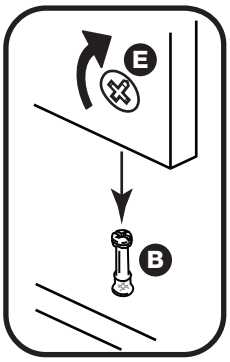


Note: The locking nuts can be on either surface of the drawer sides.

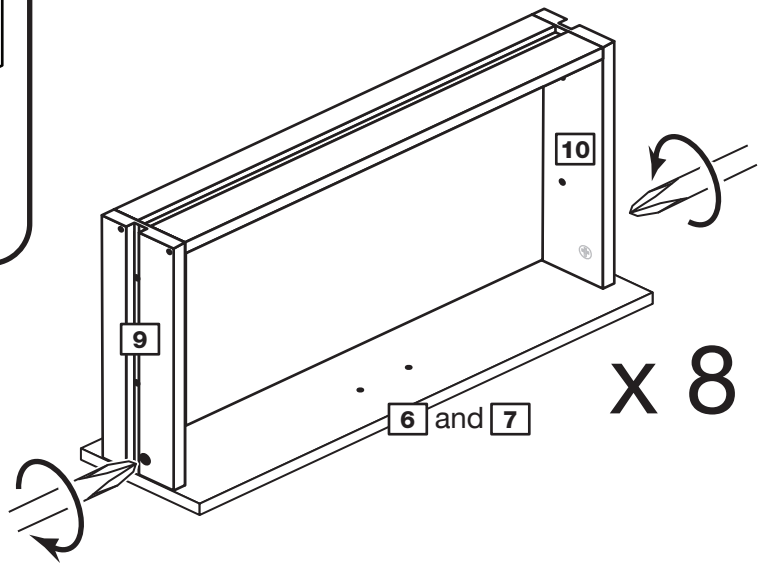

Step 6

Attach the handle


Attach a handle K to each drawer front 6 and 7 using 2 screws G.

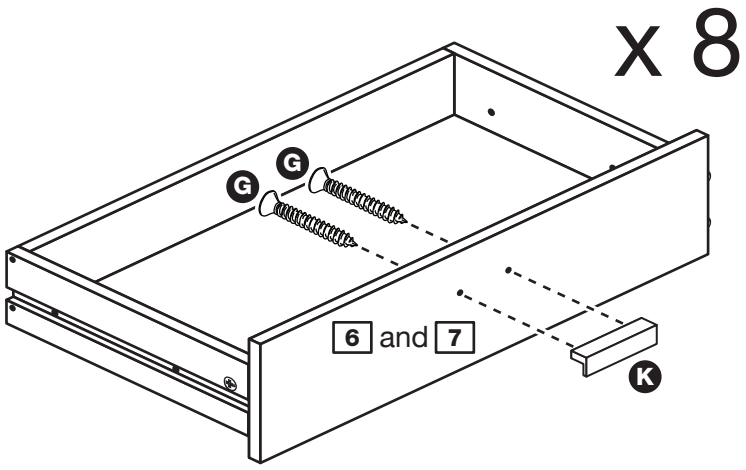


Step 7

Prepare the left side

a: Place 4 runners J on the left side 1 . Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

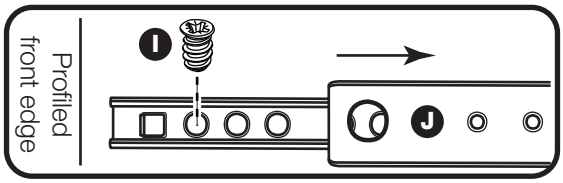


a:

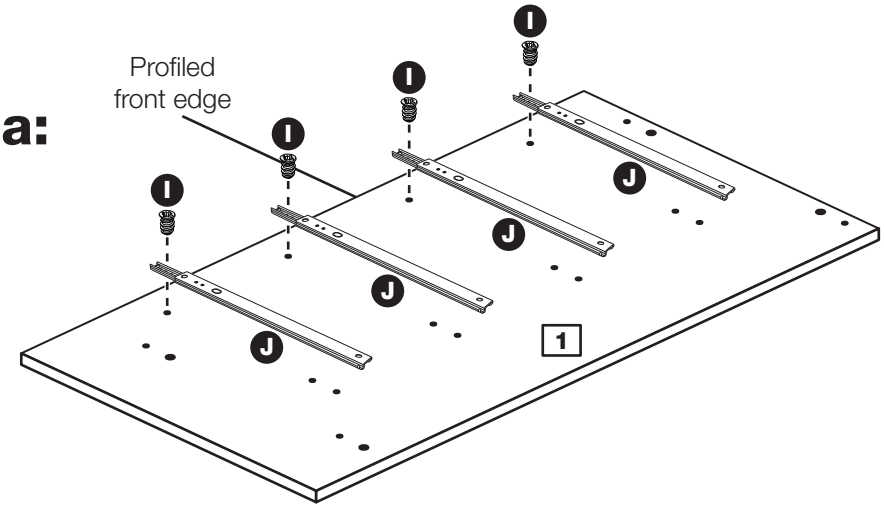


b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

b:

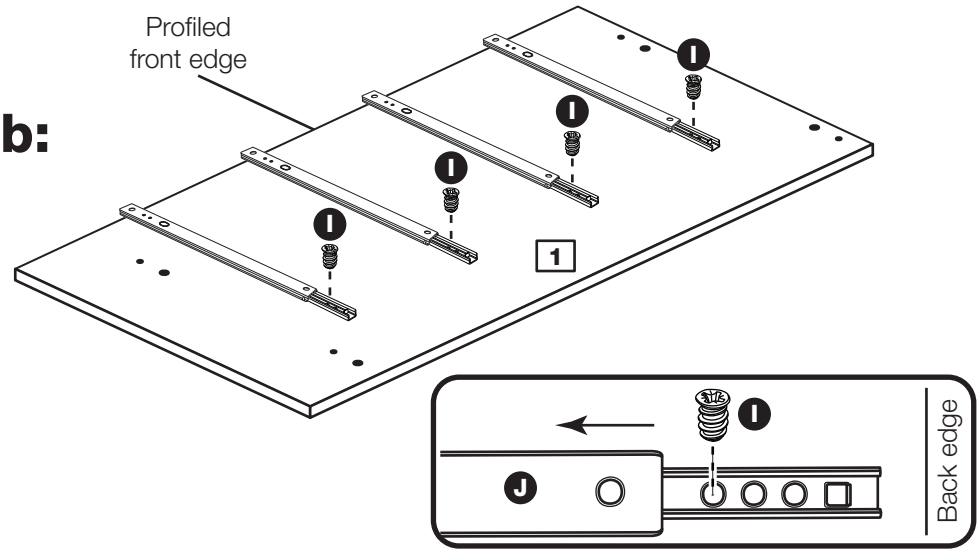

c: Screw 4 metal dowels B into the left side 1.


c:

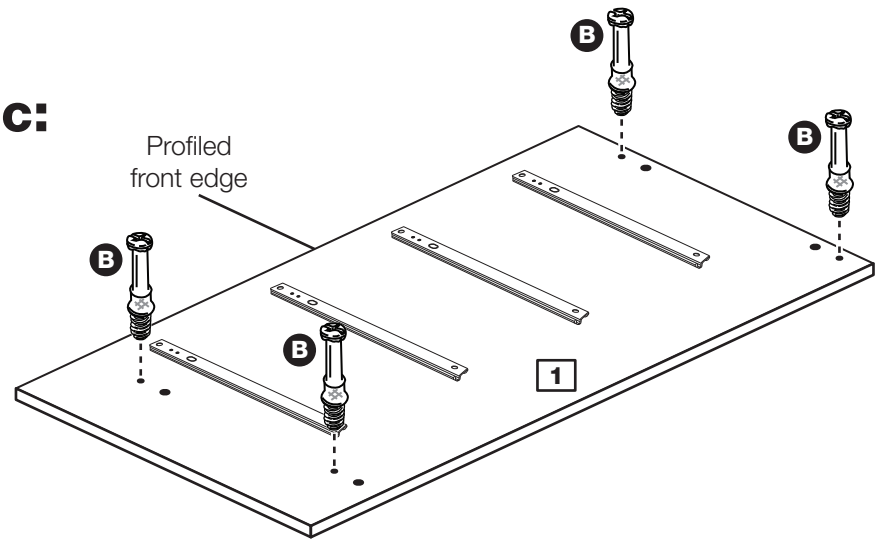


Step 8

Prepare the right side


a: Place 4 runners J on the right side 2. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

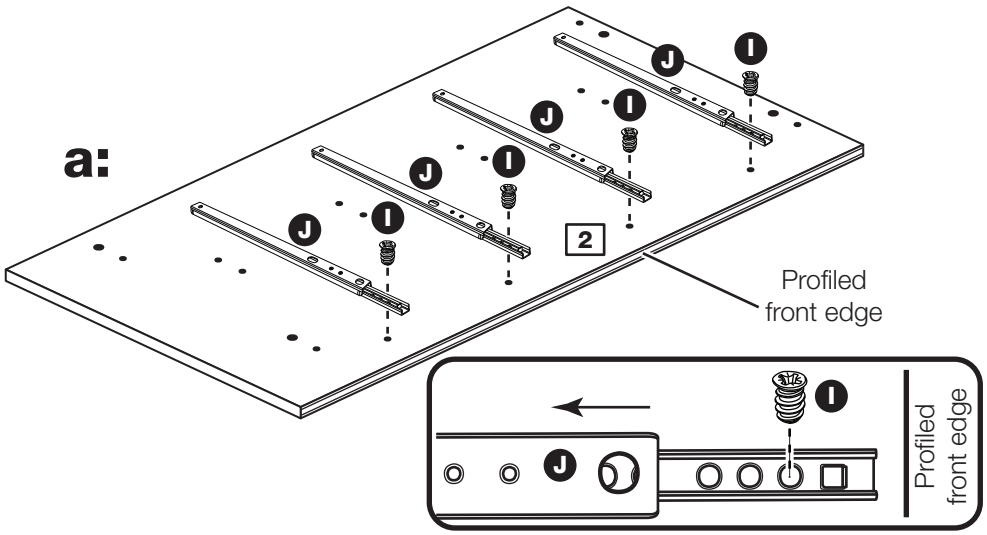

b: Slide the runner back the other way and use the 3rd hole from the back to fit the 2nd screw I.

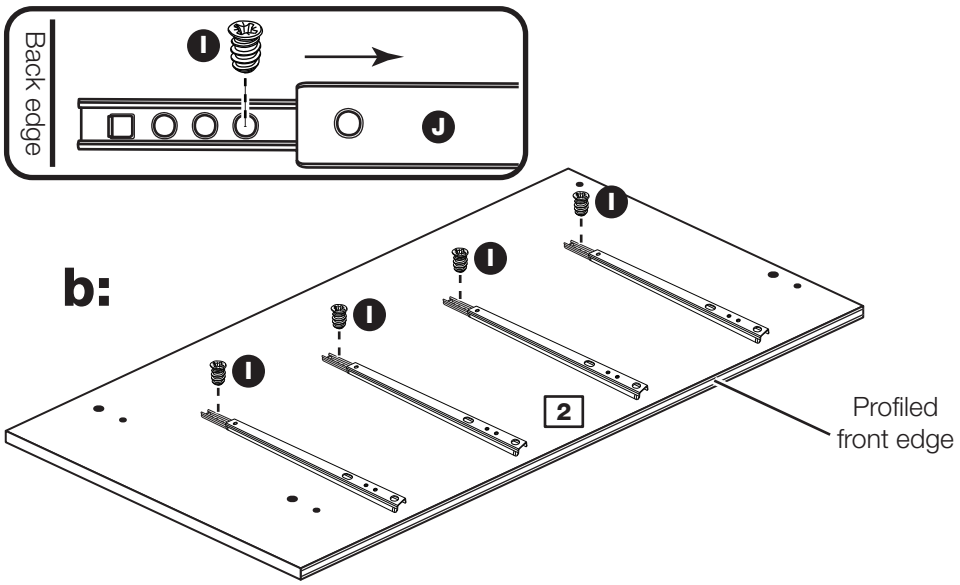

c: Screw 4 metal dowels B into the right side 2.

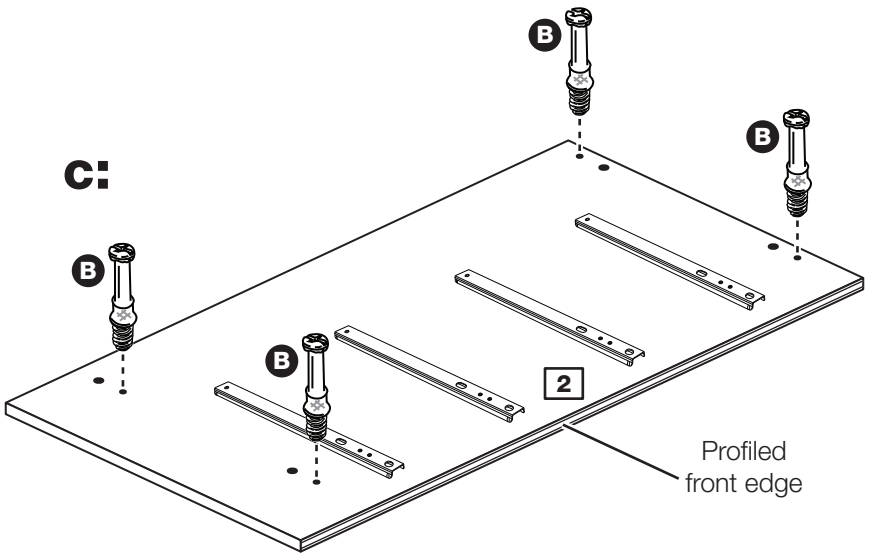


Assembly Instructions

Step 9

Prepare the upright


a: Place 4 runners J on the upright 4. Slide back the top of the runner and use the 1st hole from the front to fit the 1st screw I.

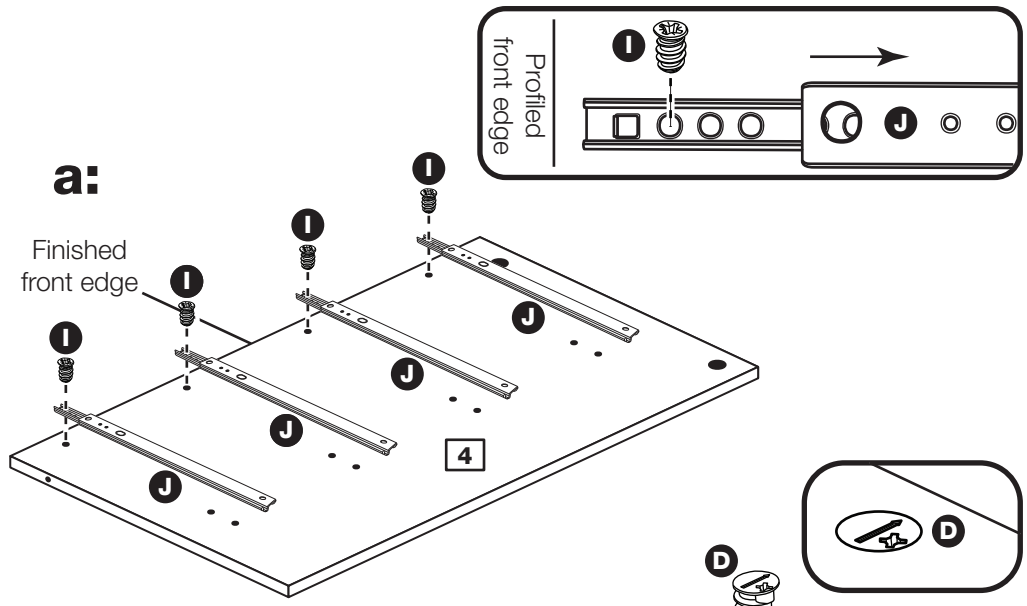

b: Slide the runner back the other way and fit the 2nd screw I into the corresponding hole in the upright 4.

Insert 2 large locking nuts D as shown.


Note: Arrow on locking nut **must** point towards hole in edge of panel.

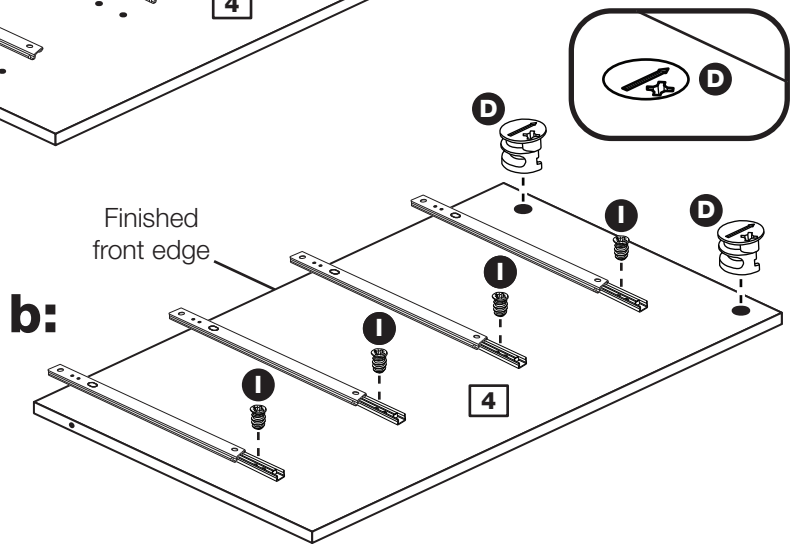

Turn the upright over.



c: Repeat the instructions above to fit 4 runners J onto the other side of the upright 13 using screws I.

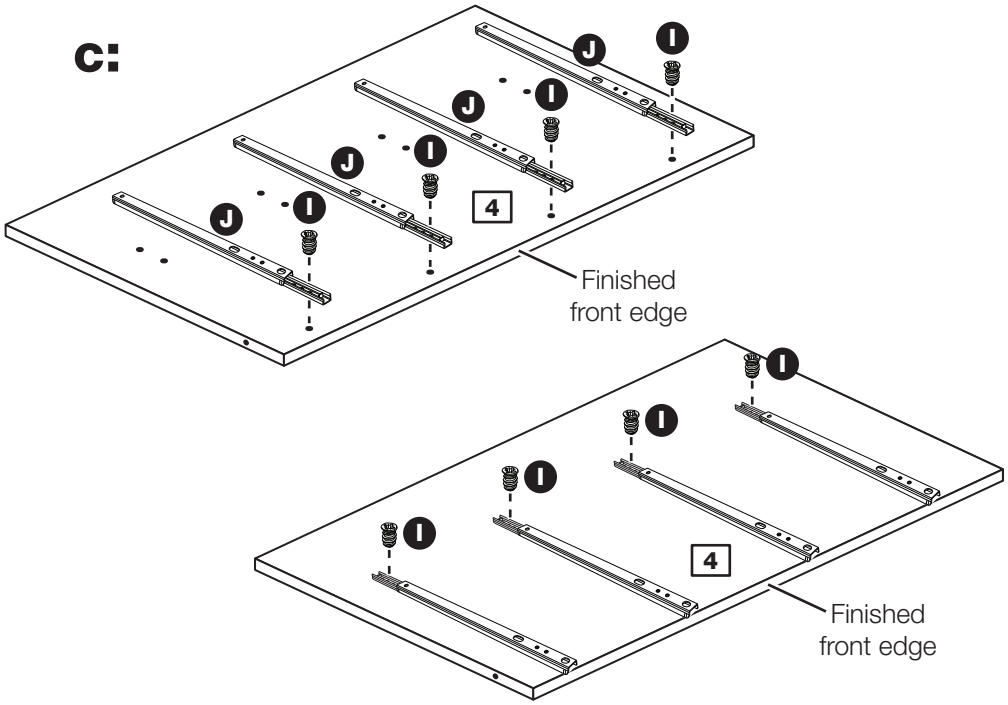

Step 10

Prepare the top


Tap 4 wooden dowels A into the top 3 as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts D into the top 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Screw 2 metal dowels B into the top 3.

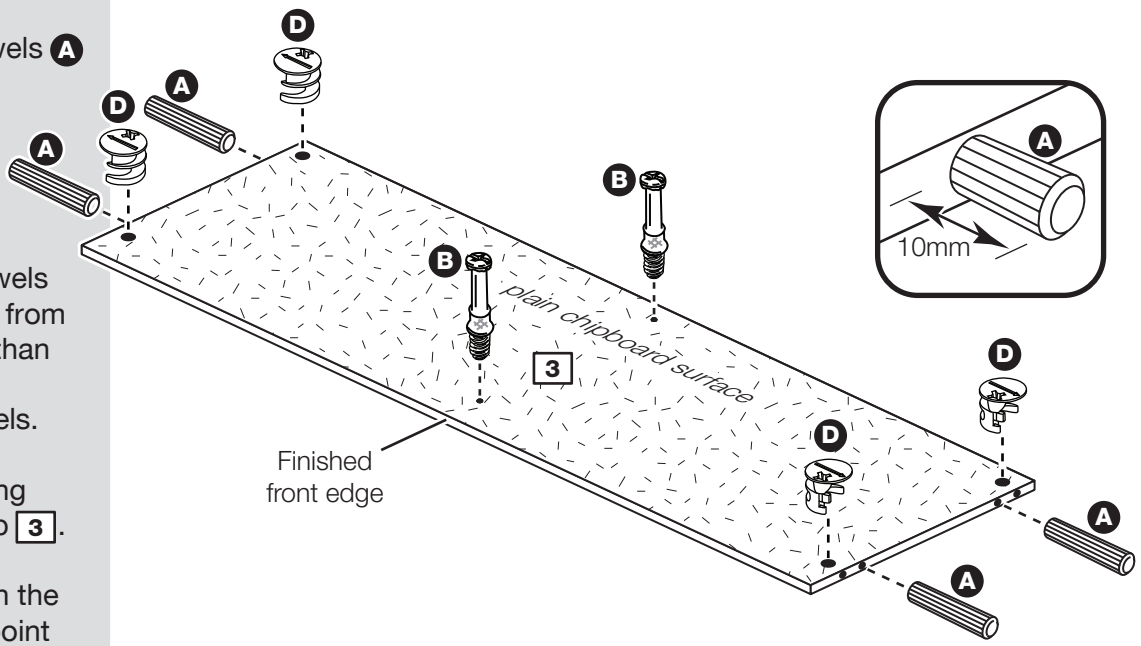


Step 11

Join the upright and top

Push the top 3 onto the upright 4 as shown.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the upright 4.


Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

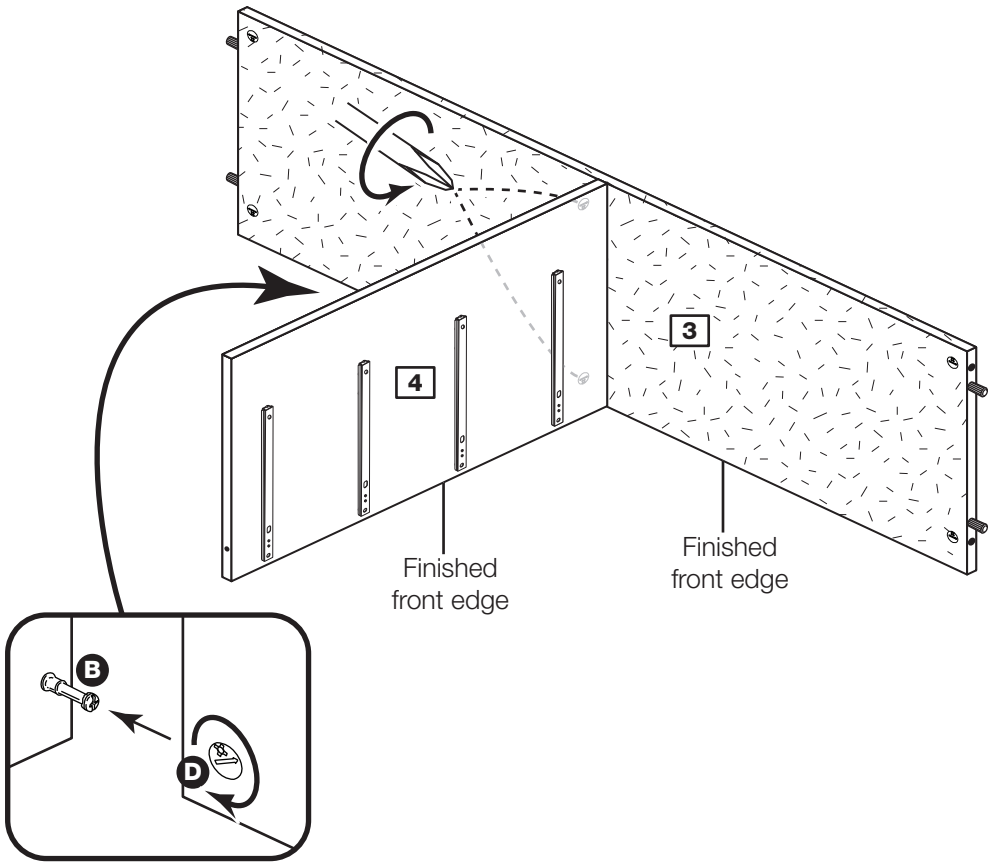

Step 12

Join the right side and top

Push the top [3] onto the right side [2] as shown.

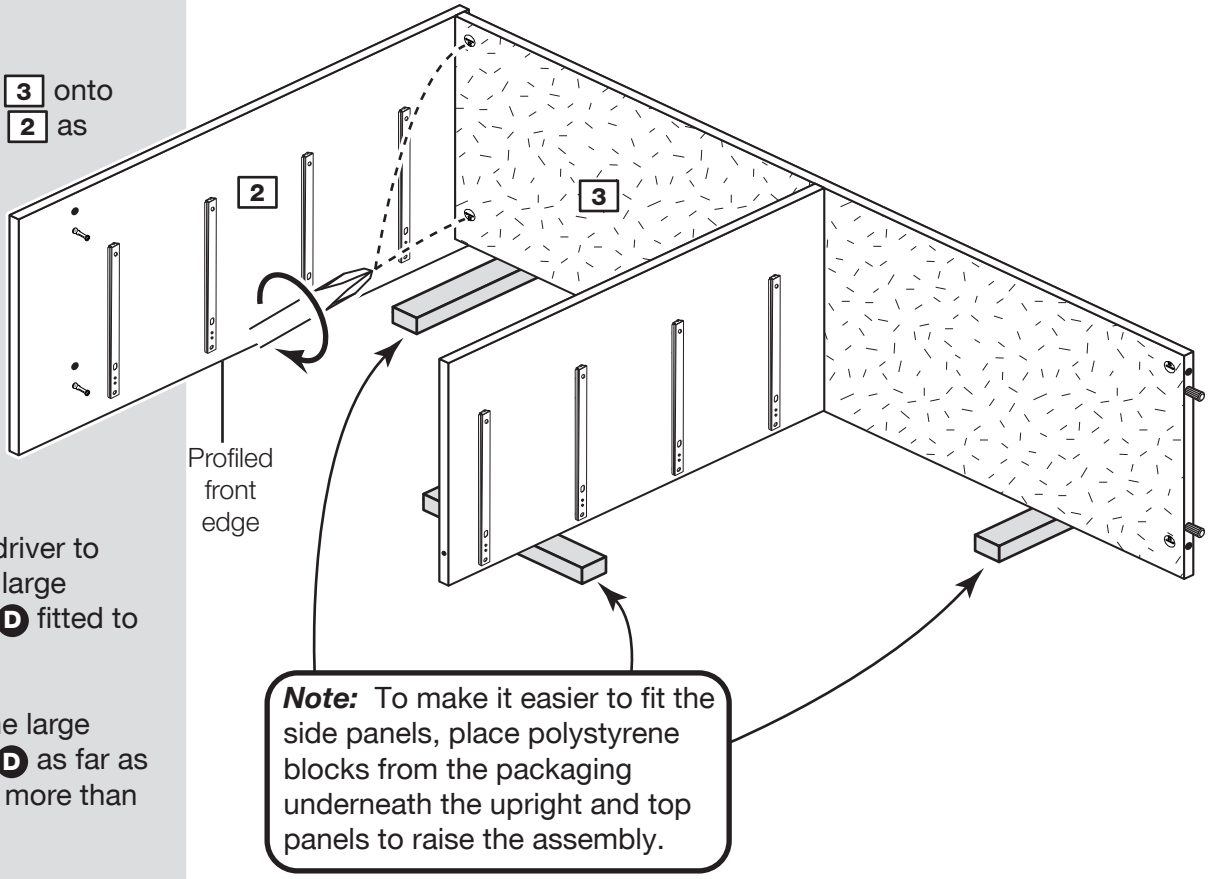

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.


Note: To make it easier to fit the side panels, place polystyrene blocks from the packaging underneath the upright and top panels to raise the assembly.

Step 13

Prepare the 2 rails

Tap 2 wooden dowels (A) into each rail [5].


Insert 2 large locking nuts (D) into each rail [5].

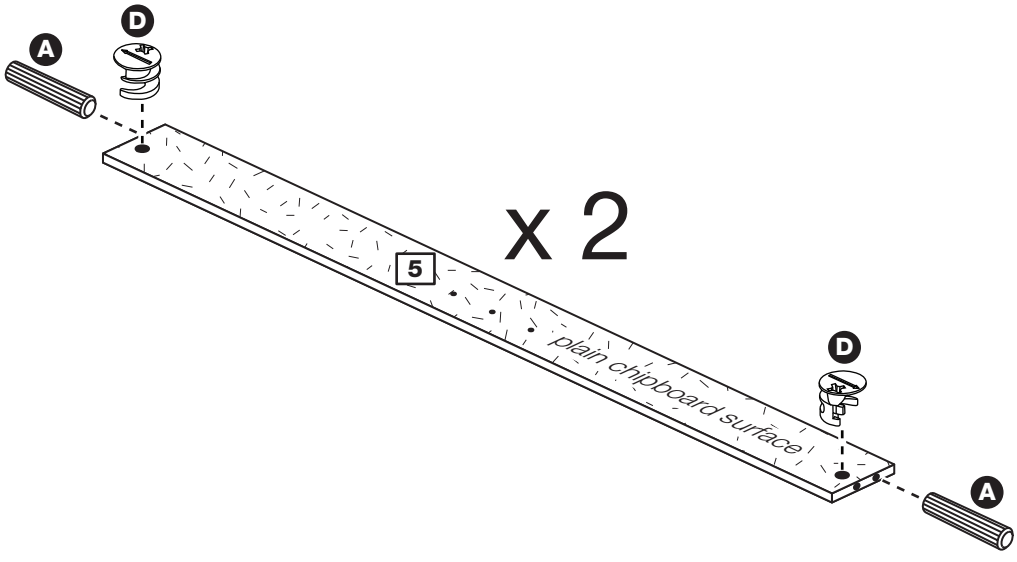

Step 14

Fit a rail

Push one of the rails [5] onto the right side [2].

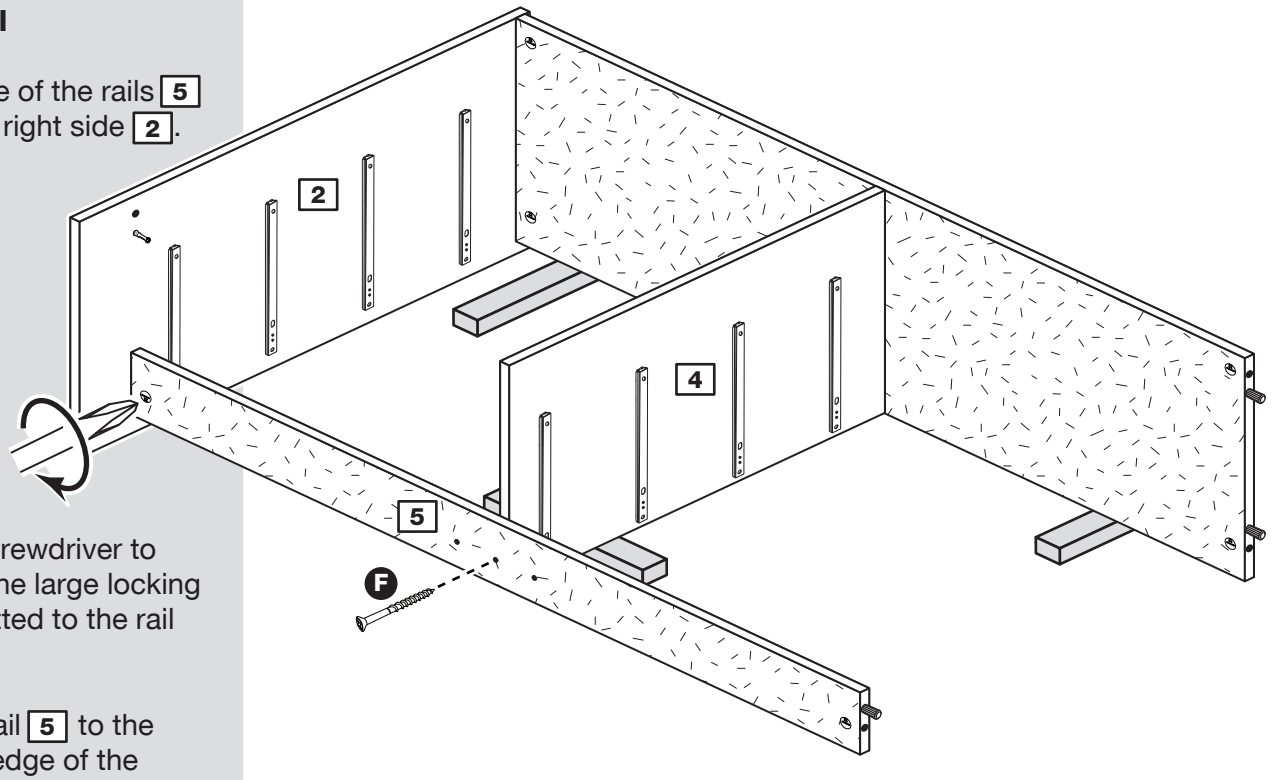


Use a screwdriver to tighten the large locking nut (D) fitted to the rail [5].

Fix the rail [5] to the bottom edge of the upright [4] using screw (F).

Step 15

Fit the other rail

Push the other rail [5] onto the right side [2].

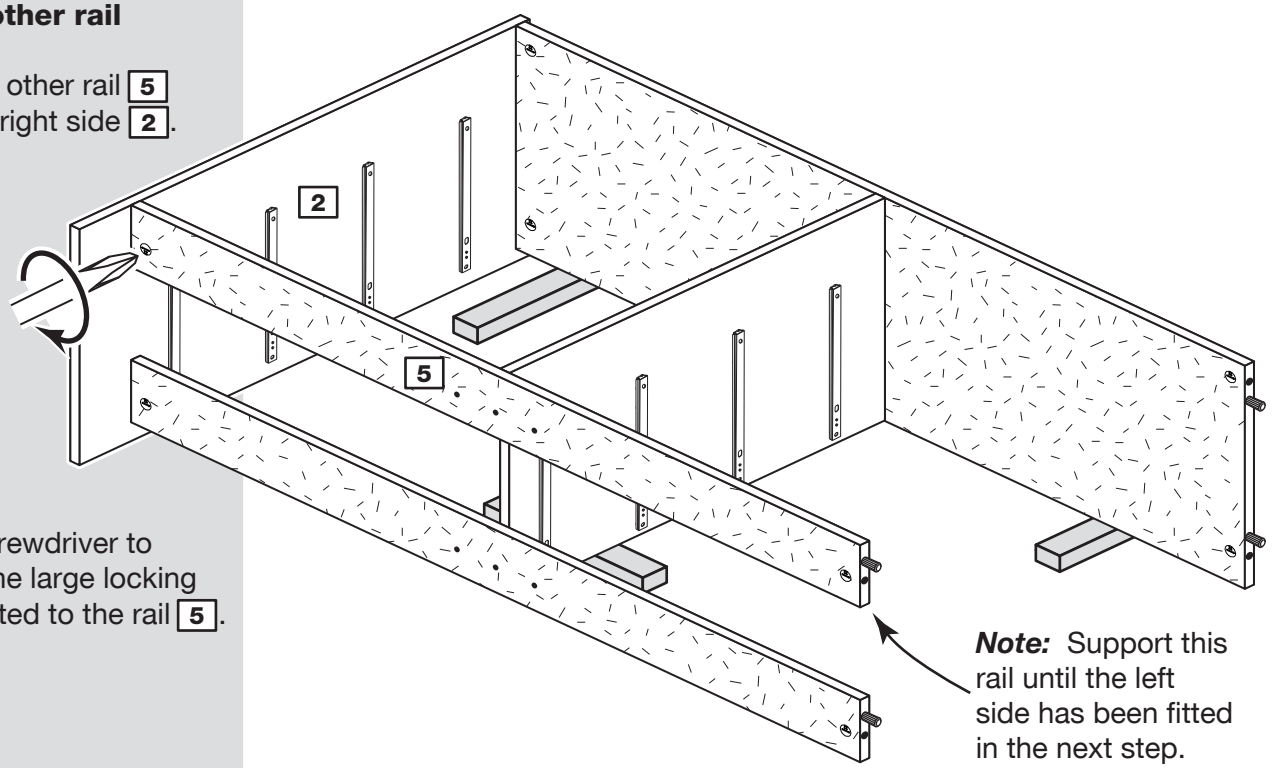


Use a screwdriver to tighten the large locking nut (D) fitted to the rail [5].

Note: Support this rail until the left side has been fitted in the next step.

Step 16

Fit the left side

Push the left side [1] onto the assembly.

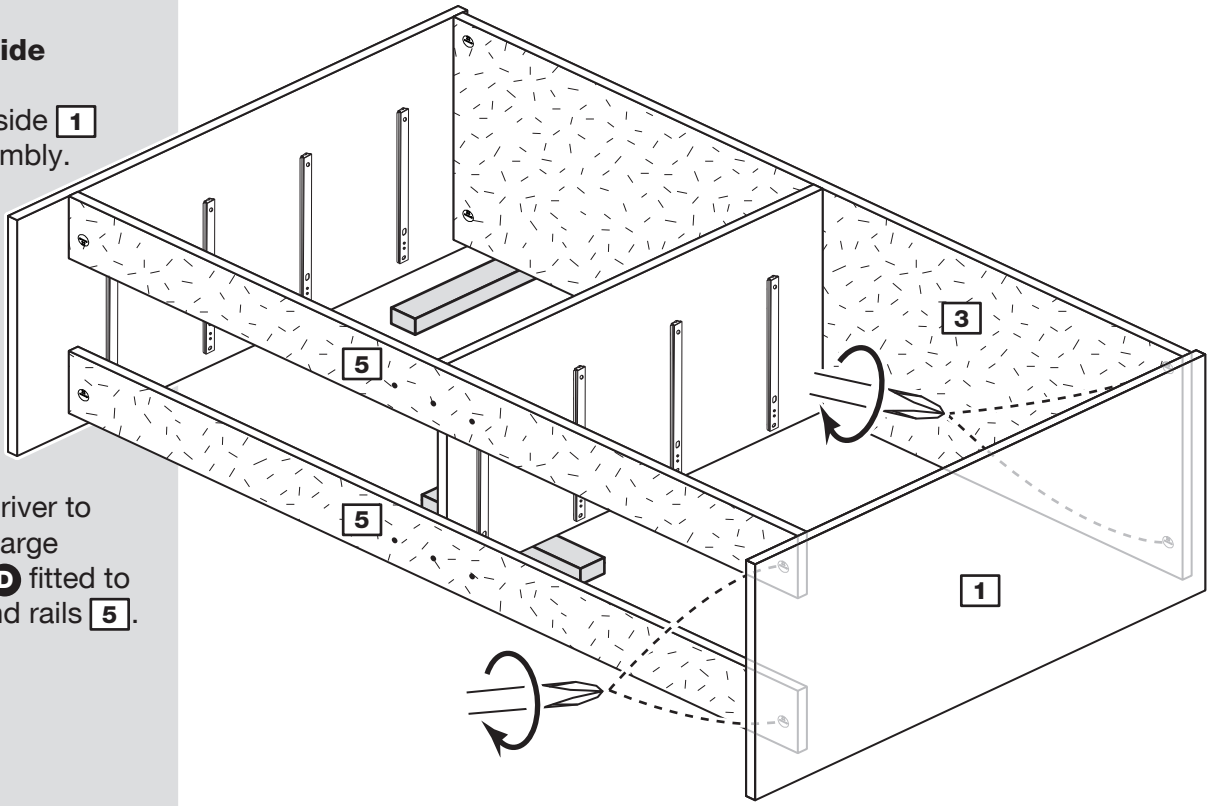


Use a screwdriver to tighten the 4 large locking nuts (D) fitted to the top [3] and rails [5].

Step 17

Fit the support

Fit the support [12] to the rail [5] at the back of the unit using 2 screws (F).

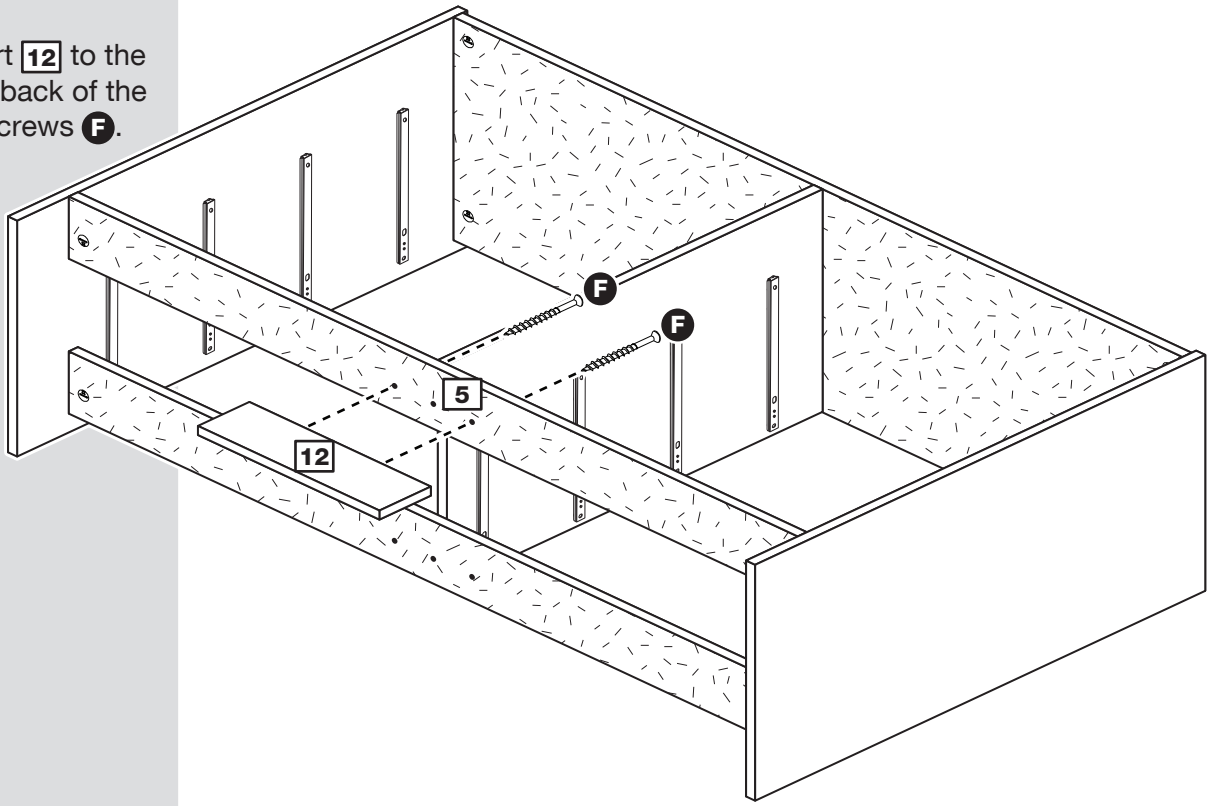


Step 18

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

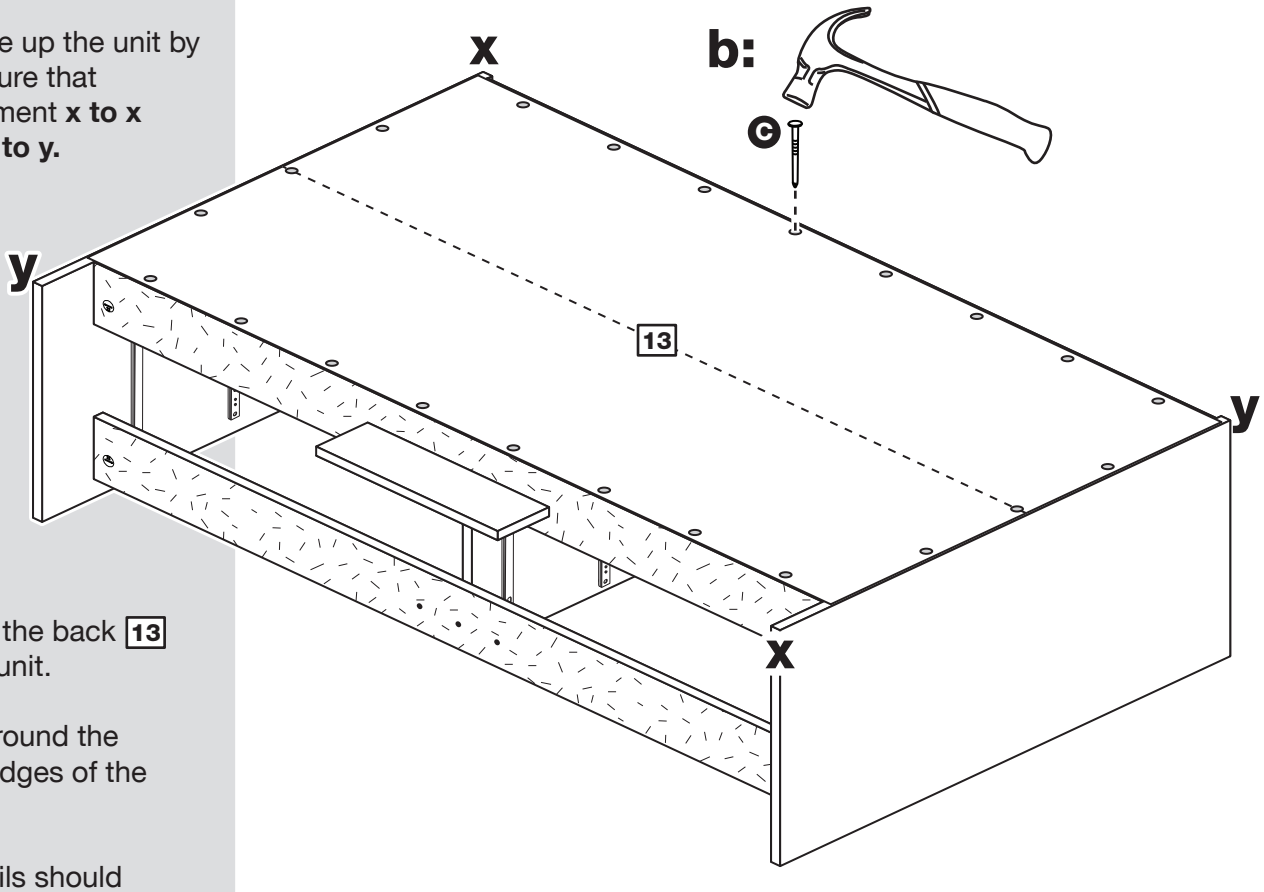

b: Place the back 13 onto the unit.

Nail c around the outside edges of the back 13.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

Step 19

Fit the drawers


Starting with the bottom drawer, slide both the runners J forward and locate the drawer sides 9 and 10 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.


Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

Warning: The unit is heavy. Lift with care.

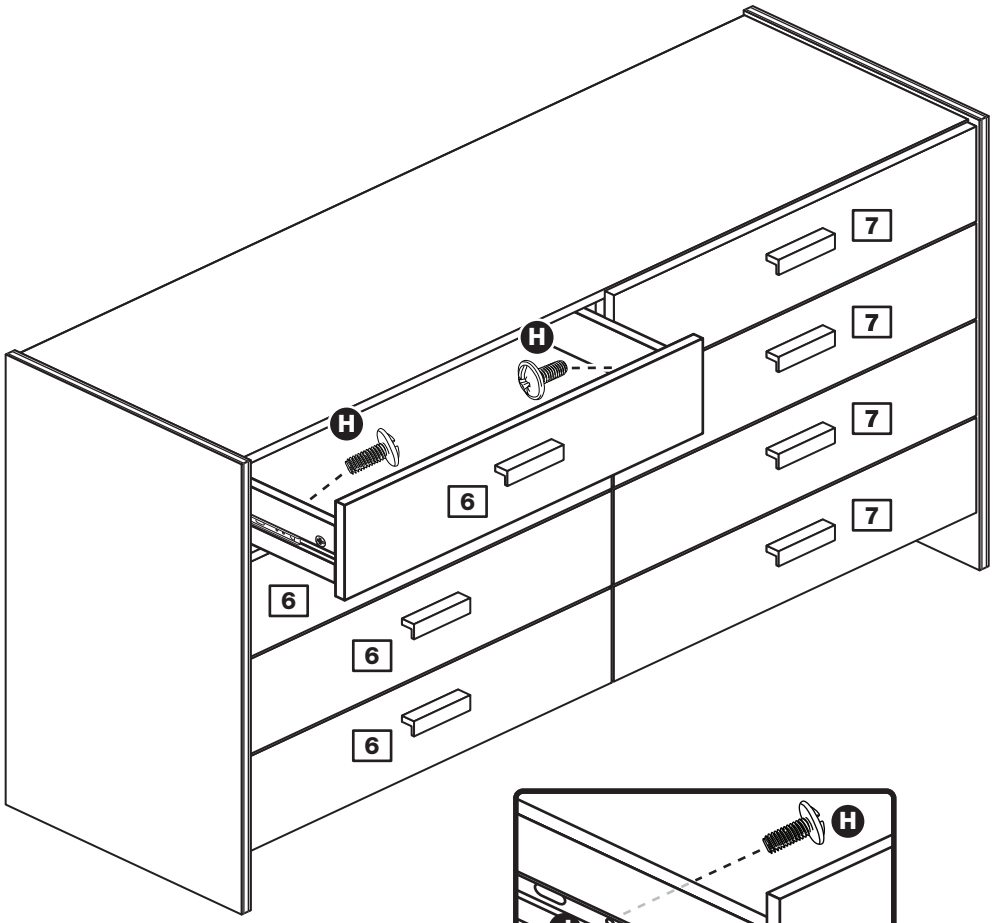

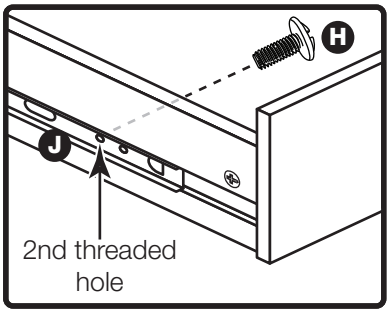

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW