
Westney - Desk

Assembly Instructions - Please keep for future reference

619/1834

131/8564

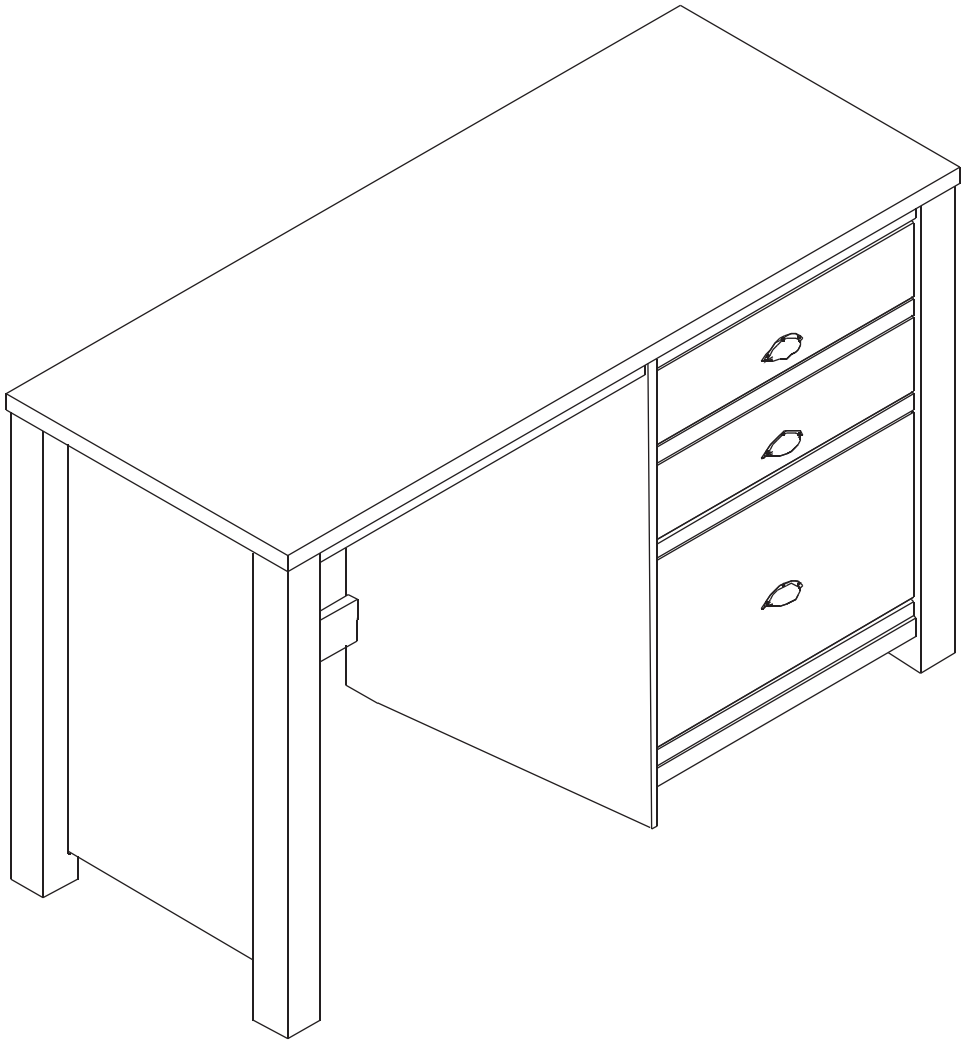

Dimensions

Width - 120.2cm
Depth - 50.2cm
Height - 75cm

Important – Please read these instructions fully before starting assembly

If you need help or have damage or missing parts, call the **Argos Customer Helpline: 08456 400 800** or **Homebase Customer Helpline: 0845 077 8888**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

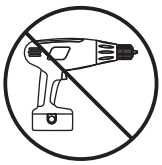

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Top panel (120.2 x 50.2cm)




3 Division panel (72.5 x 49.5cm)




2 Left Side (72.5 x 49.5cm)

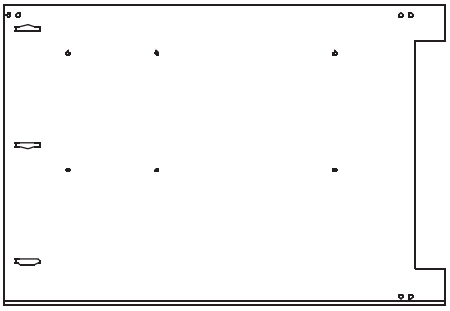

4 Right Side (72.5 x 49.5cm)




10 Small Drawer Left Side x 2
(32 x 12.6cm)




11 Small Drawer Right Side x 2
(32 x 12.6cm)



13 Drawer bottom x 3
(42.7 x 31.8cm)

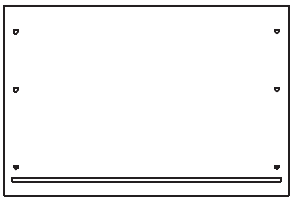


14 Large Drawer Front
(46.6 x 31.5cm)



6 Small rail x 3 (47.2 x 3cm)




9 Small Drawer Front x 2
(46.6 x 14.4cm)

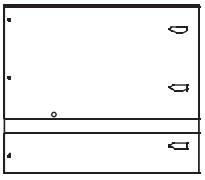


15 Large Drawer Left Side
(32 x 27.9cm)




12 Small Drawer Back x 2
(41.5 x 12cm)




8 Back panel (68.4 x 49cm)

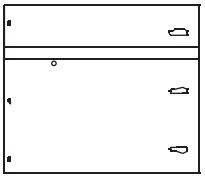


16 Large Drawer Right Side
(32 x 27.9cm)



18 Back rail (58.2 x 8.2cm)



17 Large Drawer Back
(41.5 x 27.5cm)



5 Top front rail (58.2 x 3cm)




7 Drawer Runner x 6
(30 x 2cm)

Components - Fittings

If you have damaged or missing components, call the Argos Customer Helpline: 08456 400 800 or Homebase Customer Helpline: 0845 077 8888

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  30mm Screw x 40	**B**  Ø8x25mm Wooden dowel x 51	**C**  35mm Screw x 09
D  Nails x 20	**E**  Handle x 03	**F**  14mm Screw x 09
G  25mm Screw x 12	**H**  Ø6x25mm Wooden dowel x 16	


Tools required




Phillips screwdriver (medium & large)

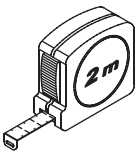

Ruler/tape measure




Small hammer



Eye protection (when using a hammer)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions


Step 1


Fitting wooden dowels:


a: Insert dowels Ⓑ into the indicated parts.


b: Insert dowels Ⓗ on to the parts 5 and 6 only.

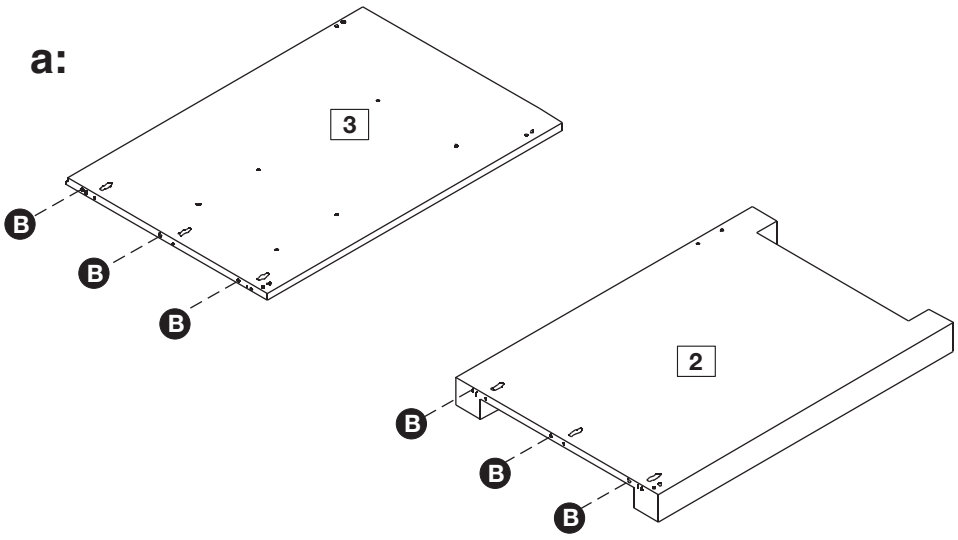


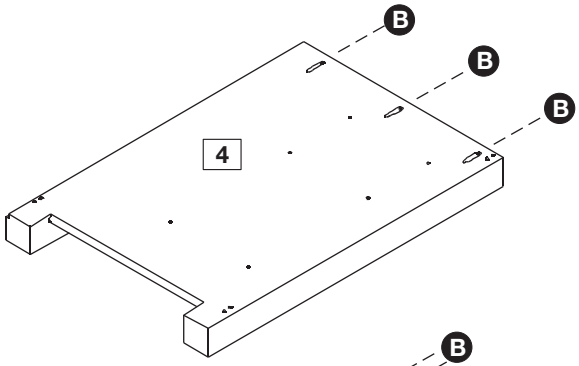


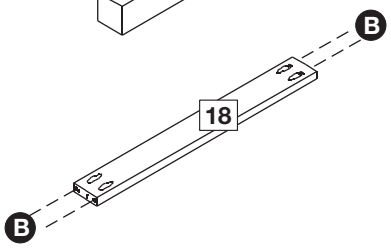

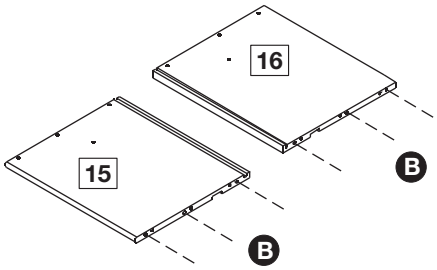

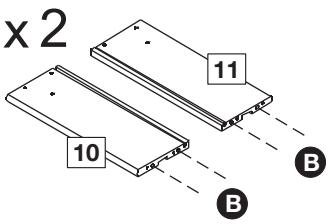

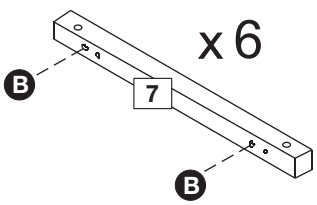

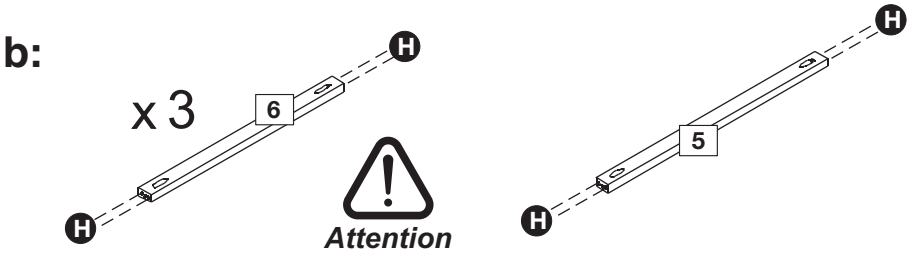


Assembly Instructions

Step 2

Assembling cabinet:

Carefully lay down top panel in a clean and soft surface.


Fix small rail 6 to the right side 4 using screws A.

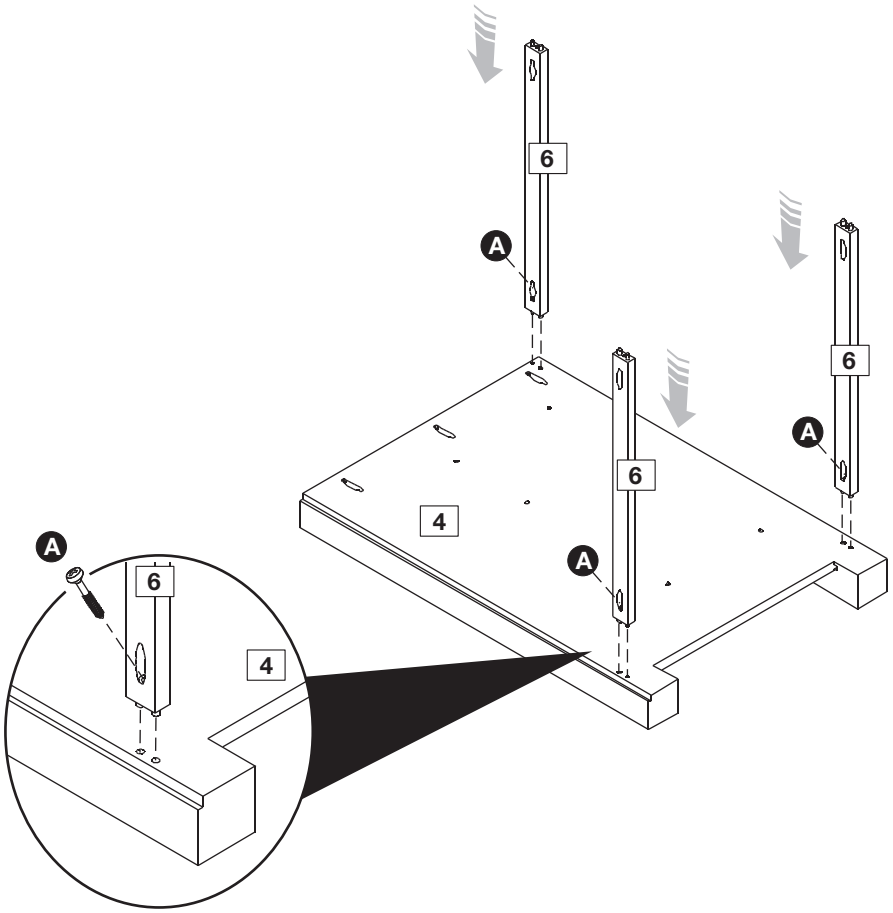

Step 3

Assembling cabinet:

Fix division panel 3 to the small rails 6 using screws A .

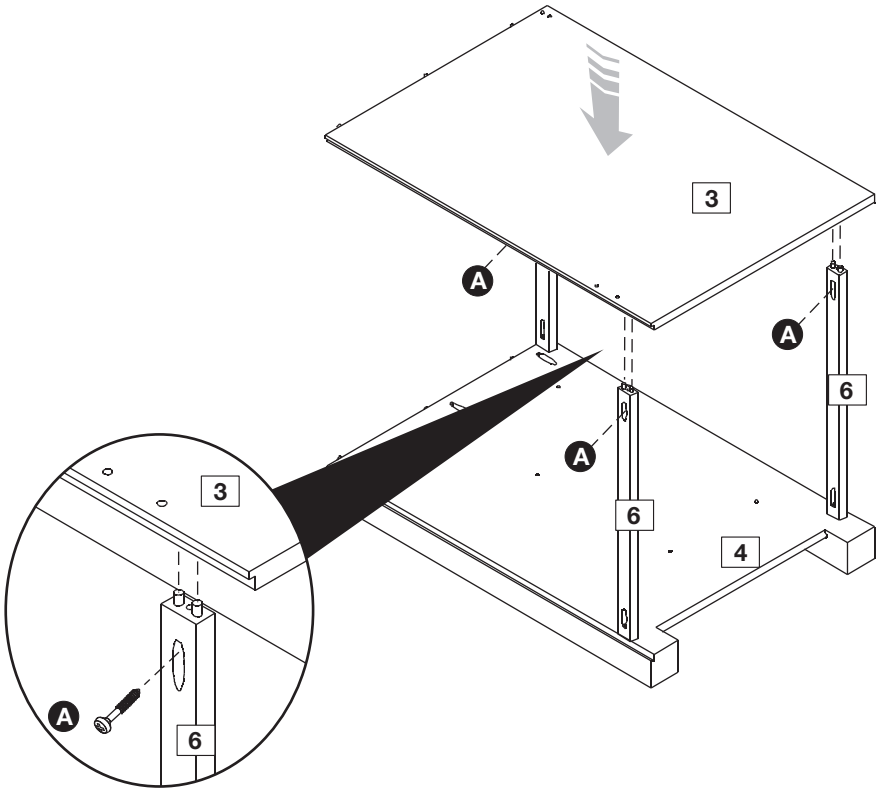


Assembly Instructions

Step **4**

Assembling cabinet:

Fix the top front rail 5 and back rail 18 to the division panel 3 and left side 2 using screws A as shown.

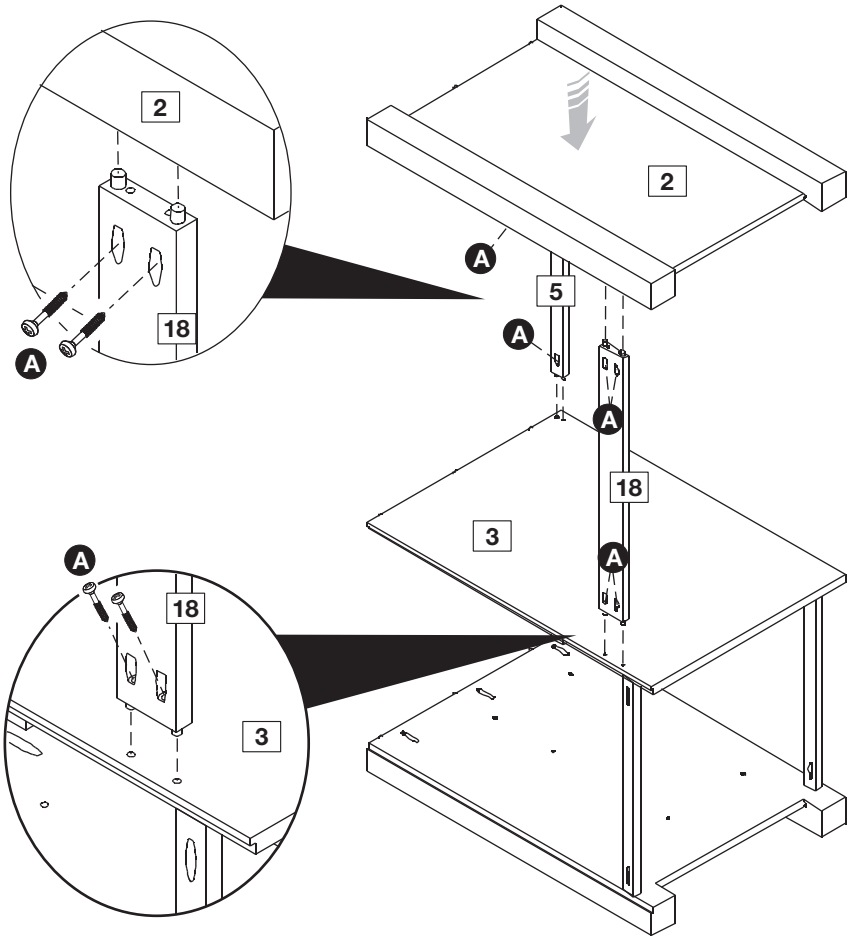


Step **5**

Assembling cabinet:

Carefully stand the product uprigth.

Fix the top panel 1 using screws C.


Note correct position of parts before fixing.

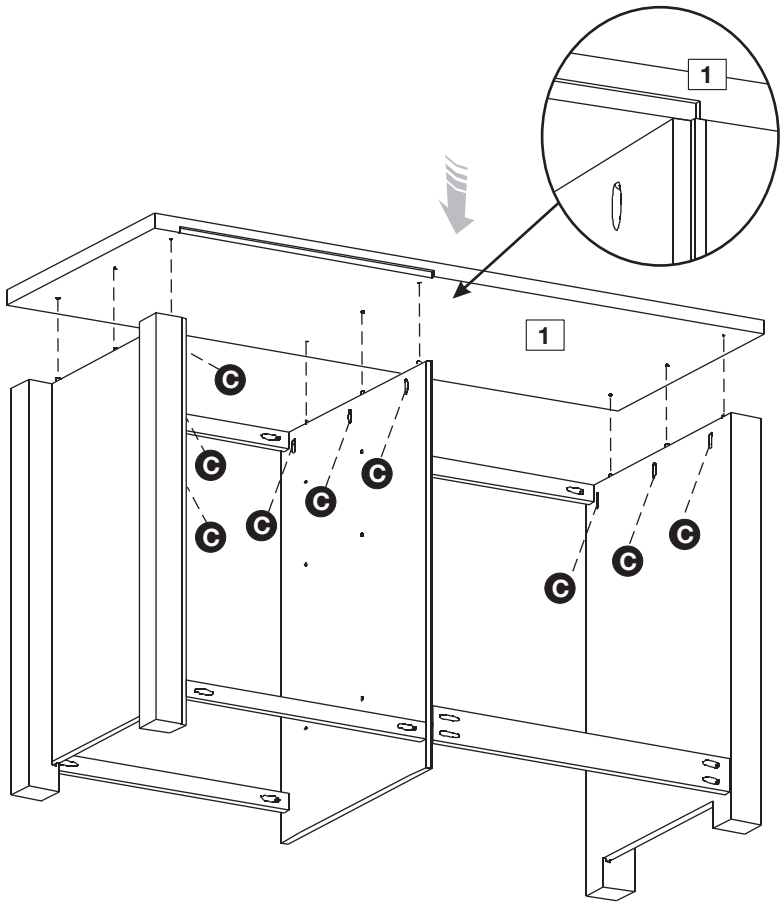

Step **6**

Fixing drawer runners:


Fix drawer runners 7 to the side using screws G as shown.
Make sure holes on runners are facing up before fixing.

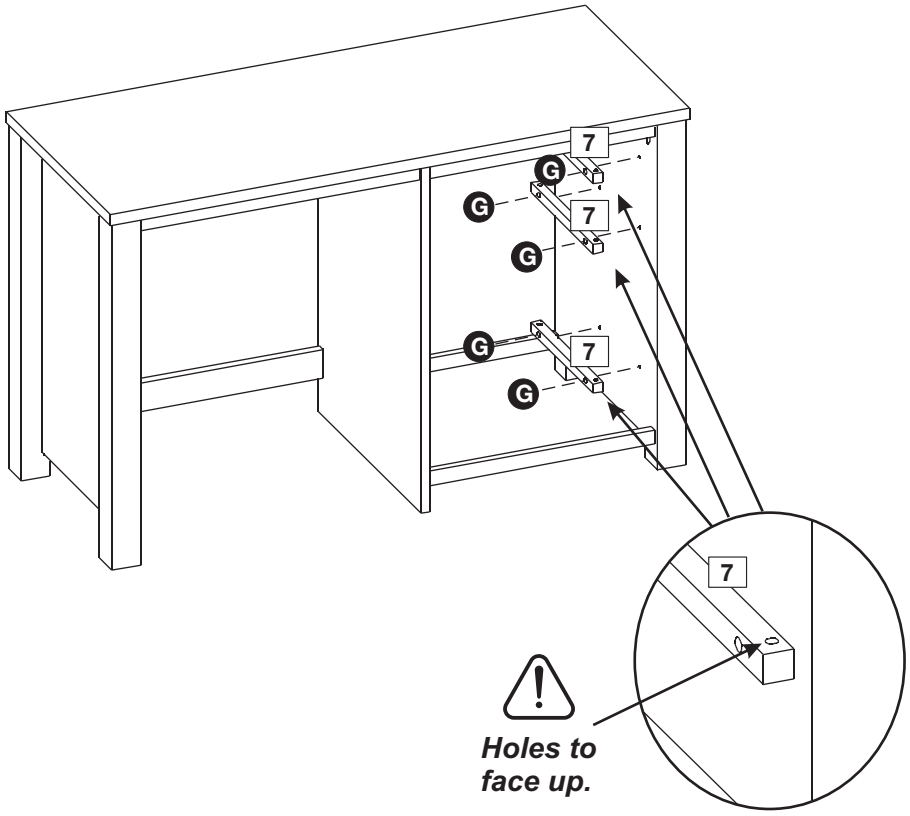

Step **7**

Fixing drawer runners:


Fix drawer runners 7 to the division using screws G as shown.
Make sure holes on runners are facing up before fixing.

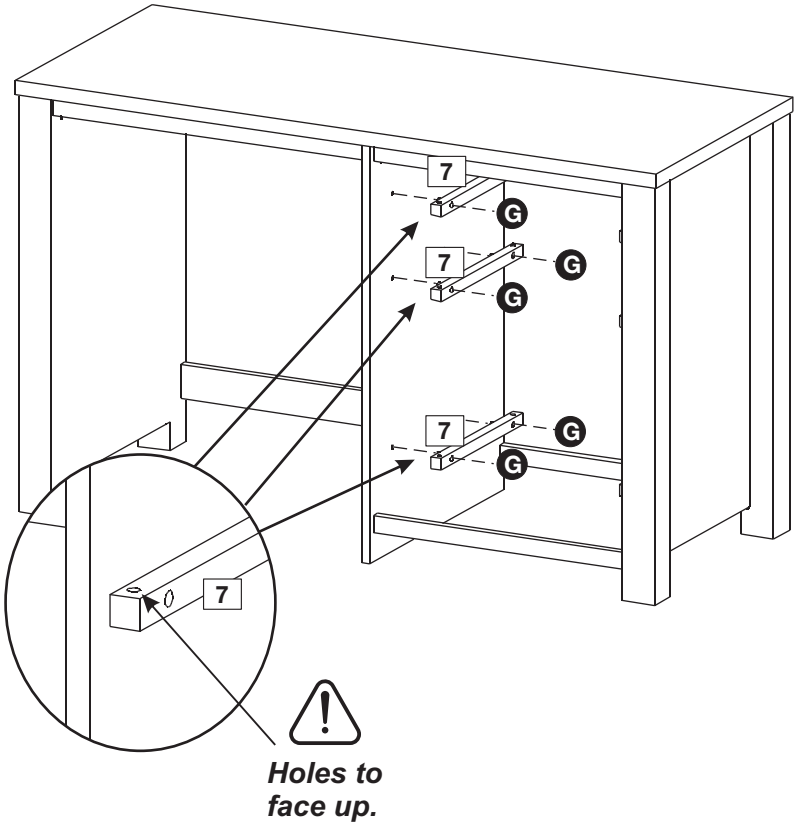

Step **8**

Insert wooden dowels:

Carefully insert wooden dowels (B) fully into the holes on the drawer runners as shown in the diagram.

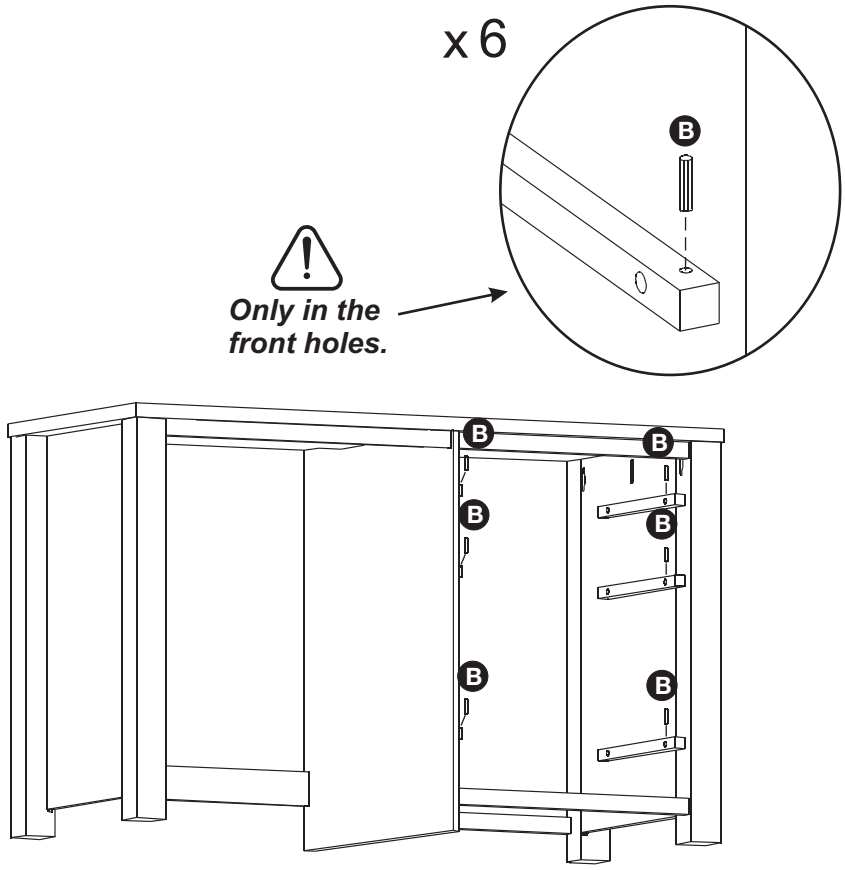


Step **9**

Fixing back panel:

Important: Cabinet MUST be "square" when back is attached.

Nail back panel 8 within rebates using nails (D). Ensure back panel are in place before nailing.

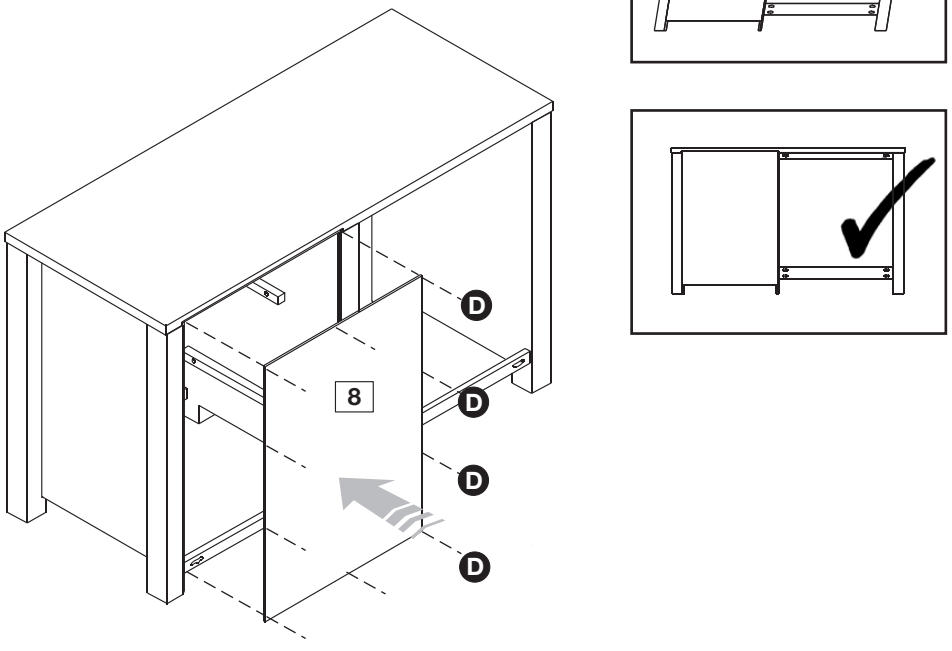

Assembly Instructions

Step **10**

Assembling the drawers:


a: Attach drawer sides 10 and 11 to the drawer front 9 using screws A.

b: Slide drawer bottom 13 into slots on drawer sides.

c: Holding the drawer back 12 in place and flush to the edge of drawer side, fix them to the drawer back using screws A.

d: Attach handles E in the pre marked holes on drawer front 9 using screws F .


Repeat step 10 for the other drawers.

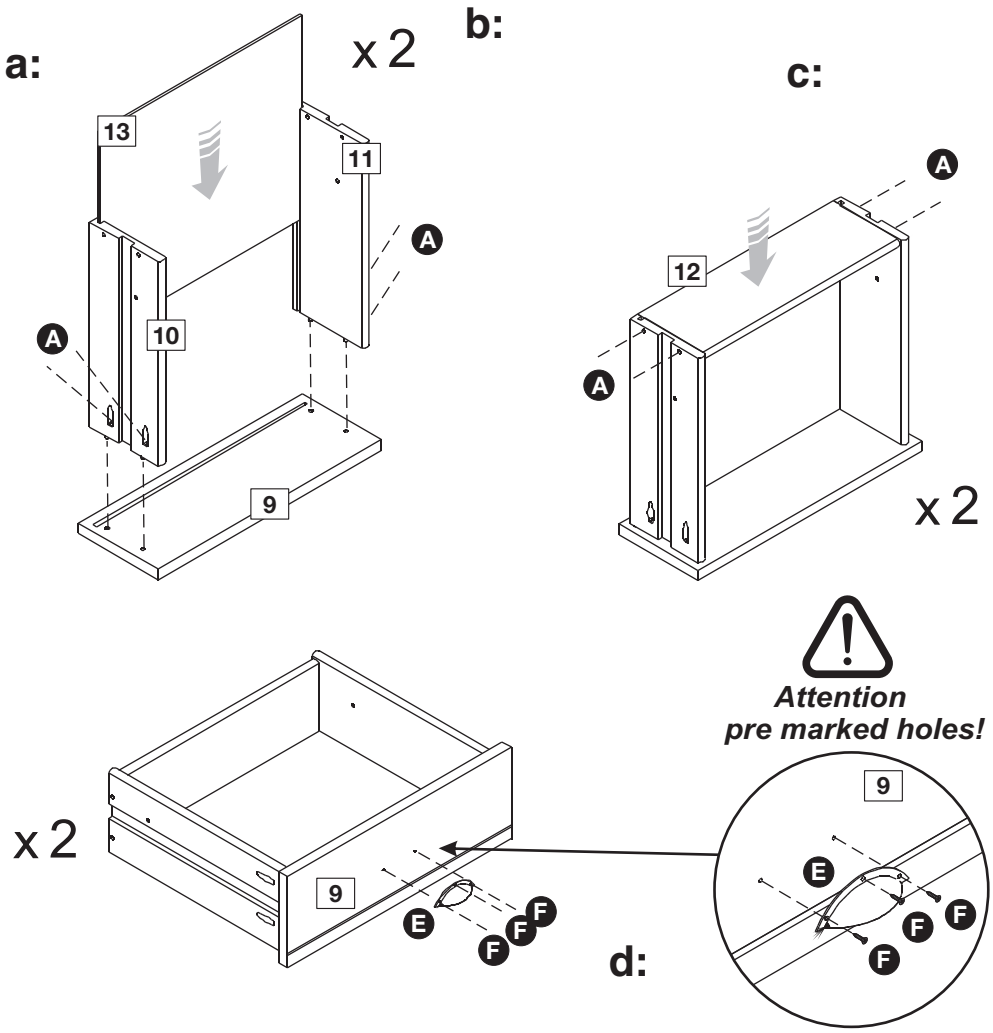

Step **11**

Insert drawers into unit. with the back of the drawers past the front frames, use a hammer to tap the dowels B in flush to the drawer sides. This is a safety catch to stop drawers falling out.

Assembly is complete.

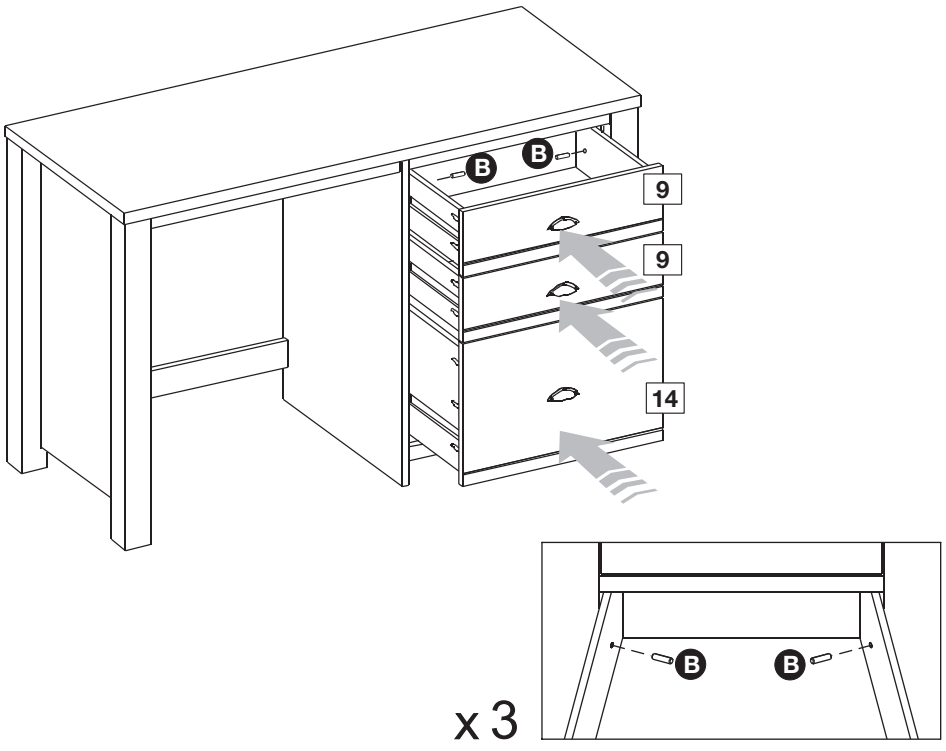

If you need help or have damage or missing parts, call the **Argos Customer Helpline: 08456 400 800** or **Homebase Customer Helpline: 0845 077 8888**